




Bind-N-Fly,™ Ready to fly, redefined.

UMX™ HYPER TAXI™

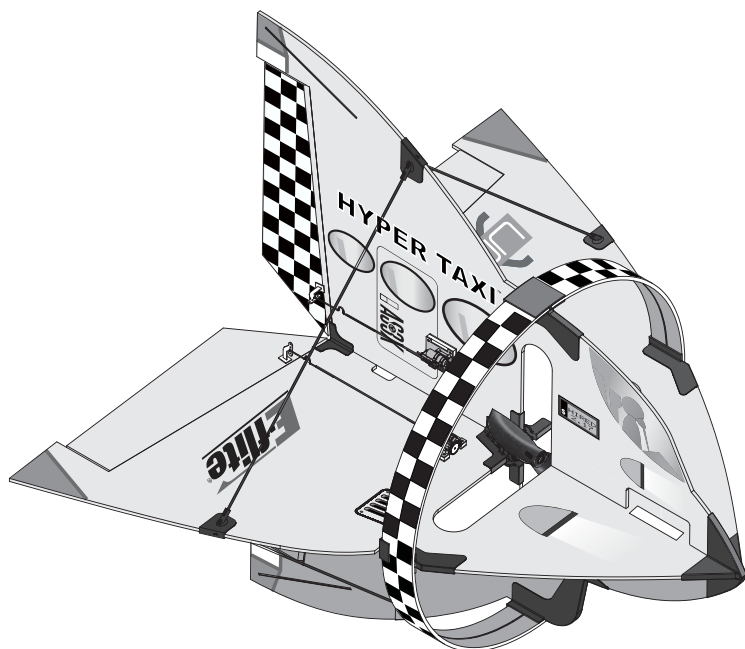

***Instruction Manual
Bedienungsanleitung
Manuel d'utilisation
Manuale di Istruzioni***

AS3X

E-flite
ADVANCING ELECTRIC FLIGHT

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, Inc. For up-to-date product literature, visit www.horizonhobby.com and click on the support tab for this product.

Meaning of Special Language:

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND little or no possibility of injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.



WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.


This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not attempt disassembly, use with incompatible components or augment product in any way without the approval of Horizon Hobby, Inc. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

Age Recommendation: Not for children under 14 years. This is not a toy.

The E-flite® Ultra Micro eXtreme (UMX™) Hyper Taxi™ BNF is a totally new 3D thrill ride. Combined in one symmetrical design, you get the most fun airplane and helicopter capabilities in one convenient package, including hyper-agility and super-solid stability for vertical takeoff and landings. Although it looks complicated, its breakthrough AS3X™ System helps make flying this clever machine enjoyable in any attitude from stand-still hovers to forward flight. And it happens so naturally smooth you'll find yourself performing 3D unlike any aircraft at the flying field. High-contrast trim colors also make visual orientation easy. And even though your new model is fully assembled, please read and follow this manual completely to be sure you're ready to take full advantage of what this awesome RC aircraft has to offer.

Table of Contents

Preflight Checklist.....	4	and Deactivation.....	10
AS3X Stabilization.....	4	Flying Tips and Repairs.....	11
Low Voltage Cutoff (LVC).....	4	Additional Safety Precautions and Warnings.....	12
Charging the Battery.....	5	Service of Power Components.....	13
Battery Warnings.....	6	Troubleshooting Guide.....	14
Transmitter and Receiver Binding.....	6	Troubleshooting Guide (Continued).....	15
Installing the Flight Battery.....	7	Limited Warranty.....	16
Arming the ESC.....	7	Warranty and Service Information.....	17
Adjusting Center of Gravity (CG).....	8	Compliance Information for the European Union..	17
Control Centering.....	8	Replacement Parts.....	65
Settings for Control Horns.....	8	Optional Parts and Accessories.....	66
Control Direction Test.....	9	Parts Contact Information.....	67
Dual Rates and Expos.....	10		
DX4e and DX5e Expo Activation			

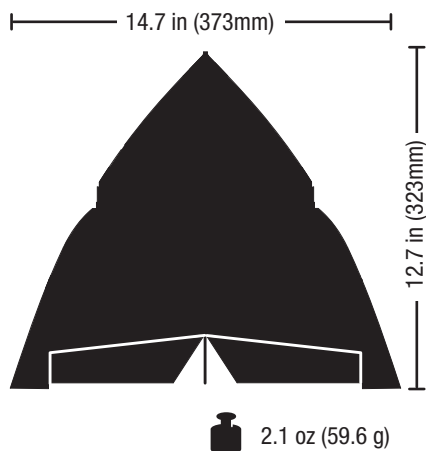

Installed



BL180 (Brushless) Outrunner Motor,
2500Kv (EFLUM180BL2)



DSM2 6Ch Ultra Micro AS3X™
Receiver BL-ESC HT (EFLU4751)



(4) 2.3 g Performance Linear Long
Throw Servos (SPMSA2030L)



Battery: 180mAh 2S 20C Li-Po
(EFLB1802S20)

Battery Charger: 2S 7.4V Li-Po
(EFLUC1007)

Needed to Complete



Recommended Transmitter:
Spektrum™ DSM2™/DSMX® with
dual-rates and Expo (DX4e and up)

Preflight Checklist

✓	
	1. Charge flight battery.
	2. Install flight battery in aircraft (once it has been fully charged).
	3. Bind aircraft to transmitter.
	4. Make sure linkages move freely.
	5. Perform Control Direction Test with transmitter.

✓	
	6. Set dual rates and exponential.
	7. Adjust center of gravity
	8. Perform a radio system Range Check.
	9. Find a safe and open area.
	10. Plan flight for flying field conditions.

AS3X Stabilization

DELIVERS BREAKTHROUGH PERFORMANCE

The AS3X System for airplanes is an electronic enhancement system that makes it possible for you to experience super-smooth flight performance, yet still have full control authority for sport, scale or 3D flight.

Turbulence, torque and tip stalls are just some of the many complications to assess when trying to achieve smooth flight. The Horizon Hobby world-class team of RC pilots developed the AS3X System for airplanes based on the successful use of AS3X with ultra micro flybarless helicopters. Specially

tuned for airplanes, the AS3X System invisibly helps with complicated corrections, allowing you to experience ultra-smooth flight performance that feels so natural that you'll quickly build confidence in the capability of the airplane.

AS3X System setup is simple. Just bind your DSM2™/DSMX® transmitter to the model using a basic airplane program and AS3X will assure that the locked-in feel and control authority you want is instantly at your command to help show off your RC pilot skills.

AS3X will innovate the way you'll want to fly now and in the future. To see what we mean, go to www.E-fliteRC.com/AS3X.

Low Voltage Cutoff (LVC)

When a Li-Po battery is discharged below 3V per cell, it will not hold a charge. The Hyper Taxi ESC protects the flight battery from over-discharge using Low Voltage Cutoff (LVC). Before the battery charge decreases too much, LVC removes power supplied to the motor. Power to the motor quickly decreases and increases, showing that some battery power is reserved for flight control and safe landing.

When the motor power pulses, land the aircraft immediately and recharge the flight battery.

Disconnect and remove the Li-Po battery from the aircraft after use to prevent trickle discharge. Before storage, charge the Li-Po battery to full capacity.

During storage, make sure the battery charge does not fall below 3V per cell.

Tip: Due to the quiet nature of the aircraft, you may not hear the pulsing of the motor.

For your first flights, set your transmitter timer or a stopwatch to 5 minutes. Adjust your timer for longer or shorter flights once you have flown the model.


NOTICE: Repeated flying to LVC will damage the battery.

Charging the Battery

Your E-flite® Hyper Taxi™ comes with a 2-Cell 7.4V 180mAh 20C Li-Po battery and a Celectra™ 2S 7.4V DC Li-Po Charger which requires a 12V (11V-14V) DC power source.

Refer to battery warnings. It is recommended to charge the battery pack while you are inspecting the aircraft. The flight battery will be required to confirm proper aircraft operation in future steps.

Please visit www.horizonhobby.com for optional battery adapters or AC power supplies.

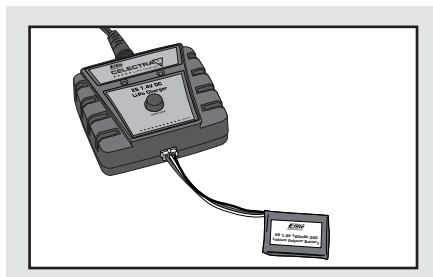

The Battery Charging Process

1. Charge only batteries that are cool to the touch and are not damaged. Look at the battery to make sure it is not damaged e.g., swollen, bent, broken or punctured.
 2. The connector of the battery is specifically designed to allow it to fit into the charge port one way to prevent reverse polarity connection. However, check for proper alignment and polarity before proceeding to the next step.
 3. Gently press the battery connector into the charge port located on the front of the charger.
 4. When you make the connection successfully, the green LED blinking on the charger slows, indicating proper connection.
 5. Press the button on the charger. The red LED will illuminate, indicating charging has begun.
 6. Charging a fully discharged (not over-discharged) 180mAh battery takes approximately 50–60 minutes at the included charger's charge rate of 300mAh. The included battery can be charged at a rate up to 3C (540mAh).
 7. When the battery is fully charged, the green LED will turn solid.
 8. Always unplug the battery from the charger immediately upon completion of charging.
- ⚠ CAUTION:** Overcharging a battery can cause a fire.

⚠ CAUTION: Only use a charger specifically designed to charge a Li-Po battery. Failure to do so could result in fire causing injury or property damage.

⚠ CAUTION: Never exceed the recommended charge rate.

LED Functions under normal operation

- | | |
|--|----------------------|
| 1. Green LED blinking with power connected but without battery | Standby |
| 2. Green LED blinking | Battery is connected |
| 3. Blinking Red LED at varying speeds | Charging |
| 4. Red and Green LED blinking simultaneously | Balancing |
| 5. Solid Green LED | Full Charge |
| 6. Red and Green LED flashing rapidly | Error |

Battery Warnings

The Battery Charger (EFLUC1007) included with the Hyper Taxi has been designed to safely charge the Li-Po battery.

 **CAUTION:** All instructions and warnings must be followed exactly. Mishandling of Li-Po batteries can result in a fire, personal injury, and/or property damage.

- By handling, charging or using the included Li-Po battery you assume all risks associated with lithium batteries.
- If at any time the battery begins to balloon or swell, discontinue use immediately. If charging or discharging, discontinue and disconnect. Continuing to use, charge or discharge a battery that is ballooning or swelling can result in fire.
- Always store the battery at room temperature in a dry area for best results.

- Always transport or temporarily store the battery in a temperature range of 40–120° F. Do not store battery or model in a car or direct sunlight. If stored in a hot car, the battery can be damaged or even catch fire.
- Always charge batteries away from flammable materials.
- NEVER USE AN Ni-Cd OR Ni-MH CHARGER. Failure to charge the battery with a compatible charger may cause fire resulting in personal injury and/or property damage
- Never discharge Li-Po cells to below 3V under load.
- Never cover warning labels with hook and loop strips.
- Never leave charging batteries unattended.
- Never charge batteries outside safe temperature range.
- Never charge damaged batteries.

Transmitter and Receiver Binding

Binding is the process of programming the receiver of the control unit to recognize the GUID (Globally Unique Identifier) code of a single specific transmitter. You need to ‘bind’ your chosen Spektrum™ DSM2™/DSMX® technology equipped aircraft transmitter to the receiver for proper operation.

Any JR® or Spektrum DSM2/DSMX transmitter can bind to the AS3X™ DSM® receiver. Due to the aerobatic capabilities of the UMX™ Hyper Taxi™, it is highly recommended that you use a transmitter with exponential and dual rates. Please visit www.bindnfly.com for a complete list of compatible transmitters.

NOTICE: When using a Futaba® transmitter with a Spektrum DSM module, reversing the throttle channel is required.

✓ Binding Procedure	
	1. Refer to your transmitter’s unique instructions for binding to a receiver.
	2. Make sure the flight battery is disconnected from the aircraft.
	3. Power off the transmitter.
	4. Connect the flight battery in the aircraft. The receiver LED will begin to flash rapidly, (typically after 5 seconds).
	5. Make sure the transmitter controls are at neutral and the throttle and throttle trim are in the low position.
	6. Put your transmitter into bind mode. Refer to your transmitter’s manual for binding button or switch instructions.
	7. After 5 to 10 seconds, the receiver status LED will become solid, indicating that the receiver is bound to the transmitter. If the LED does not turn solid, refer to the Troubleshooting Guide at the back of the manual.


For subsequent flights, power on the transmitter for 5 seconds before connecting the flight battery.

Installing the Flight Battery

1. Attach the flight battery to the hook and loop strip under the cockpit. See the **Adjusting the Center of Gravity** instructions for the battery's position.
2. Place the aircraft on the ground out of the wind and then connect a fully charged flight battery. Ensure the aircraft is immobile for 5 seconds so the AS3X system initializes correctly. See the **Arming the ESC** instructions for correct connection of the battery to the ESC.

NOTICE: If using a different battery than a 2-Cell 7.4V 180mAh 20C Li-Po, you will need to apply a piece of hook and loop fastener to the back of the battery, opposite the side with the label, in order to hold the battery in place.

⚠ CAUTION: Always disconnect the Li-Po battery from the aircraft ESC when not flying to avoid over-discharging the battery. Batteries discharged to a voltage lower than the lowest approved voltage may become damaged, resulting in loss of performance and potential fire when Batteries are charged.

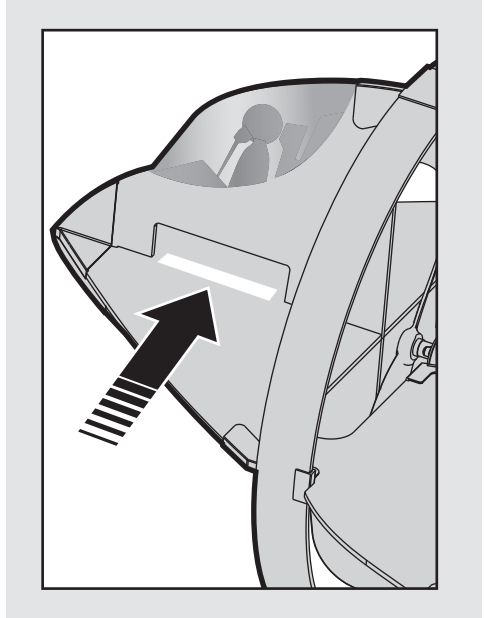

Arming the ESC

Arming the ESC also occurs after binding as previously described, but subsequent connection of a flight battery requires the steps below.

1	2	3
Lower throttle and throttle trim to lowest settings. ⚡ Power on the Transmitter then wait 5 seconds	Install flight battery and connect it to the ESC.	Keep plane immobile and away from wind for 5 seconds. Series of tones Continuous LED

If you accidentally connect the battery while the throttle is fully raised, the ESC will enter programming mode. Disconnect the battery immediately.

The AS3X system will not activate until the throttle stick or trim is increased for the first time. Once the AS3X is active, the control surfaces may move rapidly on the aircraft. This is normal.


AS3X will remain active until the battery is disconnected.

⚠ CAUTION: Always keep hands away from the propeller. When armed, the motor will turn the propeller in response to any throttle movement.

Adjusting Center of Gravity (CG)

The CG location is 2mm from the rear edge of the propeller slot.

The battery slot is oversized to allow for Center of Gravity adjustment. Start by placing the battery at the front edge of the battery slot with the connector plug facing the front of the aircraft. Adjust as needed by sliding the battery back or forward. You may also turn the battery pack 90 degrees, bringing the plug to the side.

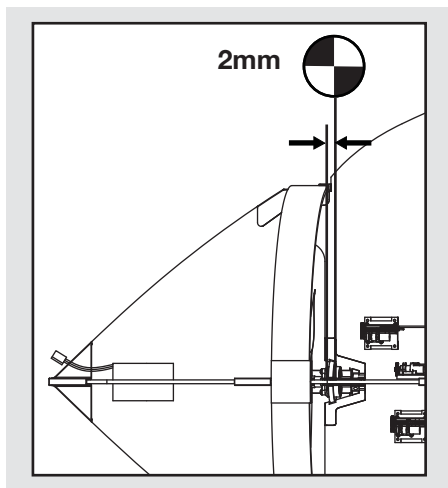


Control Centering

Before the first flights, or in the event of an accident, make sure the flight control surfaces are centered. Adjust the linkages mechanically if the control surfaces are not centered. Use of the transmitter sub-trims may not correctly center the aircraft control surfaces due to the mechanical limits of linear servos.

1. Make sure the control surfaces are neutral when the transmitter controls and trims are centered. The transmitter sub-trim must be always be set to zero.
2. When needed, use a pair of pliers to carefully bend the metal linkage (see illustration).
3. Make the U-shape narrower to make the connector shorter. Make the U-shape wider to make the linkage longer.

Centering Controls After First Flights


For best performance with AS3X, it is important that excessive trim is not used. If the model requires excessive transmitter trim (4 or more clicks of trim per channel), return the transmitter trim to zero and adjust the linkages mechanically so that the control surfaces are in the flight trimmed position.

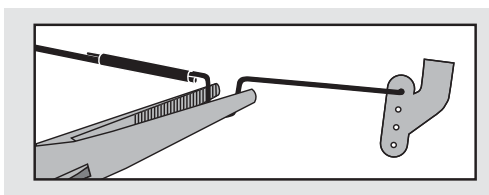

Settings for Control Horns

The following illustration shows the factory settings for linkages on the control horns. After flying, carefully adjust the linkage positions for the desired control response.

CAUTION: Using settings other than the factory settings, without proper experience, could result in loss of control of your aircraft and a crash, causing damage to the aircraft and personal injury.

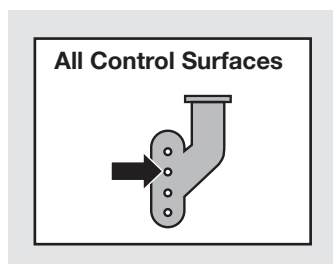


Control Direction Test

Bind your aircraft and transmitter before performing these tests. Move the controls on the transmitter to make sure the aircraft control surfaces move correctly, freely, and in the proper direction.

Tip: Programming for the control surfaces has already been done in the receiver of the Hyper Taxi, so no mixing is required in the transmitter.

To demonstrate modes 1–4, only the axis being tested is shown.

Always keep throttle at low position during testing.

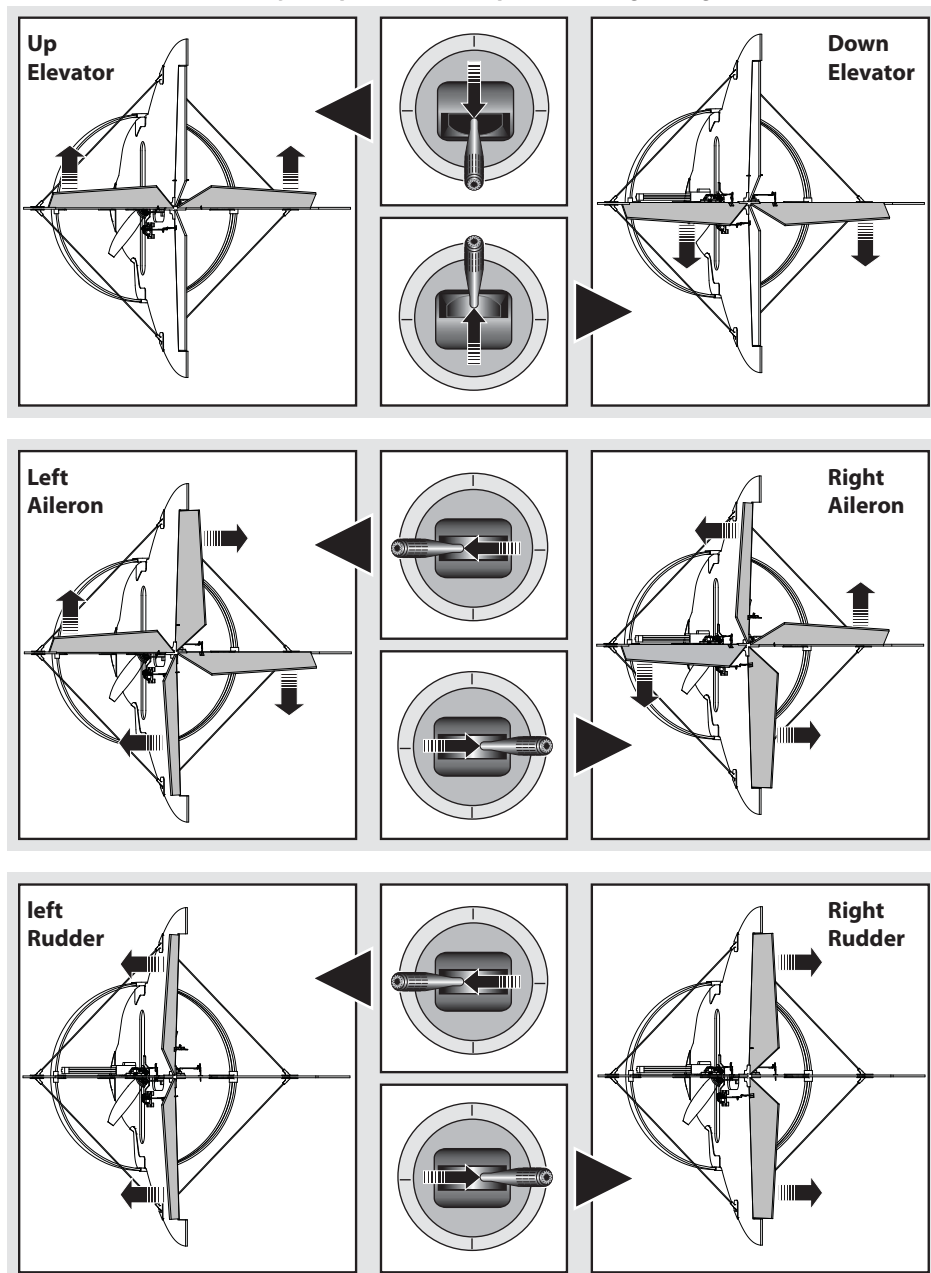

Dual Rates and Expos

We recommend using a DSM radio capable of dual rates and expo due to the aerobatic capabilities of the Hyper Taxi. The settings shown here are recommended starting settings. Adjust according to individual preferences after initial flight.

If using the DX4e or DX5e transmitters, we recommend activating Expo for smoother control. For activation and deactivation of the Expo in the DX4e and DX5e, see below.

NOTICE: Do not set your transmitter travel adjust over 100%. If the TRAVEL ADJUST is set over 100%, it will not result in more control movement, it will override the servo and cause damage.

It is normal for linear servos to make significant noise. The noise is not an indication of a faulty servo.

Dual Rates		High Rate	Low Rate
	Aileron	100%	65%
	Elevator	100%	70%
	Rudder	100%	70%

Expos		High Rate	Low Rate
	Aileron	25%	10%
	Elevator	25%	10%
	Rudder	25%	10%

Tip: For the first few flights, fly the model on low rate.

DX4e and DX5e Expo Activation and Deactivation


If you plan to fly your Hyper Taxi with a DX4e or DX5e, disconnect the battery from the aircraft before activating the Expo feature in your transmitter.

Once Expo is activated, it will remain activated for use through subsequent power cycles of the transmitter. Once Expo is deactivated, it will remain deactivated until it is activated again.

DX4e (Modes 1 and 2)

Activate and Deactivate Expo

- Put the ACT switch in the down position (ON) and the Rate switch in the down position (LO).
- Push and hold the trainer (bind) button and move and hold the two sticks (as shown here for **activation (A)** or **deactivation (B)**), while powering on the transmitter.
- Release the trainer switch and the control sticks only after a series of tones sound (ascending tones for activation, descending tones for deactivation).

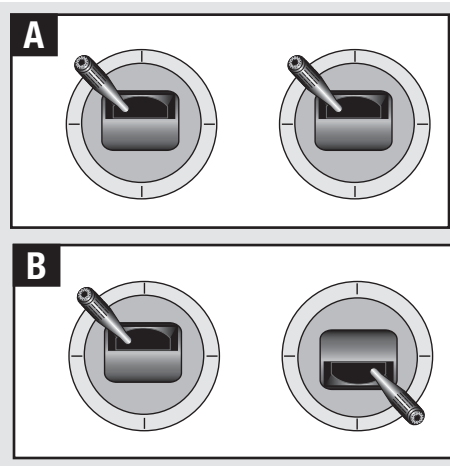

DX5e (Modes 1 and 2)

Activate Expo

- Hold the aileron trim switch to the right when powering on the transmitter.
- Release the aileron trim switch after a series of ascending tones to confirm that Expo is activated.


Deactivate Expo

- Hold the aileron trim switch to the left when powering on the transmitter.
- Release the aileron trim switch after a series of descending tones to confirm that Expo is deactivated.

Flying Tips and Repairs

Flying

We recommend flying your E-flite® Hyper Taxi™ indoors or outside only in 8 mph (13 km) winds or less. Always avoid flying near houses, trees, wires and buildings. You should also be careful to avoid flying in areas where there are many people, such as busy parks, schoolyards or soccer fields. Consult local laws and ordinances before choosing a location to fly your aircraft.

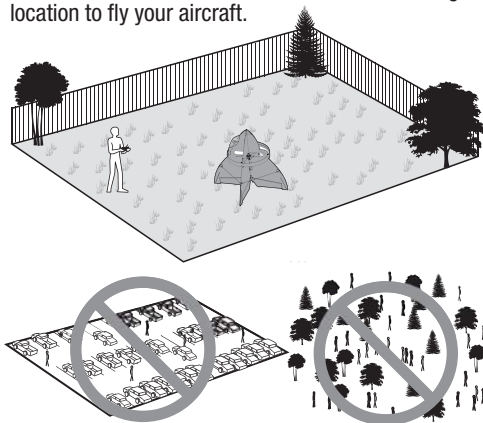

Takeoff

For the first few flights, we recommend hand launching the model, as this can be easier to do than a takeoff from the ground.

Hand Launch

Hold the Hyper Taxi upright by the canopy. Apply 1/2–3/4 throttle, and gently toss the aircraft into the wind with the wings level. After the model leaves your hand, apply more throttle and begin to enjoy your E-flite Hyper Taxi.

Vertical Takeoff

Place the Hyper Taxi in position for takeoff (sitting on the rear tips of the wings) with the grey side of the aircraft facing into the wind. Apply throttle to the Hyper Taxi™ until it begins to leave the ground. Add full power and a small amount of down elevator until the model is flying straight and level.

Turning

This model is much different than any other model you may have flown. Because of its nearly symmetrical shape, it flies very neutral while it is on its side in knife edge flight. Because of this, turning requires the use of rudder. Roll the model to a small bank angle in the direction you would like to turn. Once this angle is established, apply rudder in the same direction that the ailerons were applied while simultaneously beginning to add elevator to maintain altitude. Adjust your turning radius by the amount of initial bank angle and the amount of rudder and elevator applied while making the turn.

Feel free to experiment with flying the Hyper Taxi with the wings at various angles; however, be aware that the model acts very similarly on its side as it does when flying upright.

Landing

Intermediate Vertical Landing

Fly the Hyper Taxi down to approximately one length of the model above the ground. Aggressively flare the model with the elevator. As the model rotates to vertical, the throttle will control your descent speed, rather than the elevator. Add more power to climb or slow your descent. Reduce your throttle input to descend or speed up your descent. Ease off of the power as the model comes to rest on the tips of the wings.

Advanced Vertical Landing

When you become accustomed to flying the Hyper Taxi, you may want to attempt an advanced vertical landing. If you are experienced with 3D flight, you may choose to hover the model like a 3D airplane and bring the model to rest on its wingtips by using throttle to adjust the model's altitude. To hover vertically, use a combination of rudder/elevator.

Failure to lower the throttle stick and trim to the lowest possible positions during a crash could result in damage to the ESC in the receiver unit, which may require replacement.

Over Current Protection (OCP)

The Hyper Taxi is equipped with Over Current Protection (OCP). This feature protects the ESC from overheating. OCP stops the motor when the transmitter throttle is set too high and the propeller cannot turn. The OCP will only activate when the throttle is positioned just above 1/2 throttle. After the ESC stops the motor, fully lower the throttle to re-arm the ESC.

Repairs

Crash damage is not covered under warranty.

Repair the Hyper Taxi using foam-compatible CA glue or clear tape. Only use foam-compatible CA glue as other types of glue can damage the foam. When parts are not repairable, see the Replacement Parts List for ordering by item number.

For a listing of all replacement and optional parts, refer to the list at the back of this manual.

NOTICE: Use of foam-compatible CA accelerant on your model can damage printing. DO NOT handle the model until accelerant fully dries.

Additional Safety Precautions and Warnings

As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or the property of others.

This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe distance in all directions around your model as this space will help avoid collisions or injury.

- Always keep a safe distance in all directions around your model to avoid collisions or injury.
 - Always operate your model in open spaces away from full-size vehicles, traffic and people.
 - Always carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.).
 - Always keep all chemicals, small parts and anything electrical out of the reach of children.
- Always avoid water exposure to all equipment not specifically designed and protected for this purpose. Moisture causes damage to electronics.
 - Never place any portion of the model in your mouth as it could cause serious injury or even death.
 - Never operate your model with low transmitter batteries.

Post Flight Checklist


✓	
	1. Disconnect flight battery from ESC (Required for Safety and battery life).
	2. Power off transmitter.
	3. Remove flight battery from aircraft.
	4. Recharge flight battery.

✓	
	5. Store flight battery apart from aircraft and monitor the battery charge.
	6. Make note of flight conditions and flight plan results, planning for future flights.


Service of Power Components

⚠ CAUTION: DO NOT handle propeller parts while the flight battery is connected. Personal injury could result.

1. Gently hold the nose of the aircraft and remove the prop screw (A), propeller (B) and propeller spacer (C) from the motor shaft (D). Hold the motor so it does not turn when the screw is turned.
2. Disconnect the motor wires from the ESC wires.

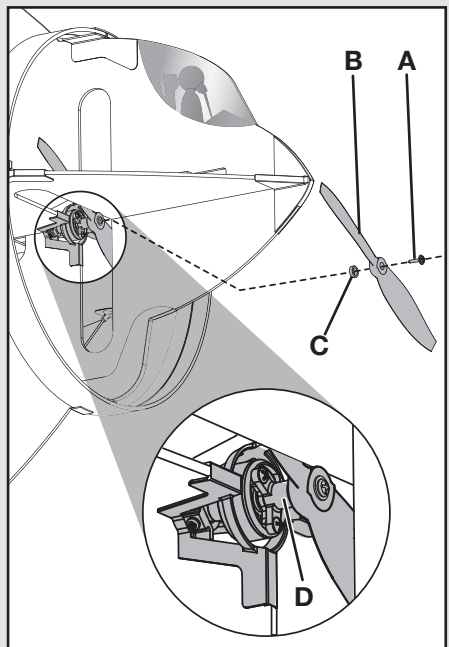

3. Remove the screw (E) and the motor (F) from the motor mount (G) on the fuselage.
4. Assemble in reverse order. Correctly align the wire colors and connect the motor to the ESC. Install the propeller with numbers facing to the front of the aircraft.

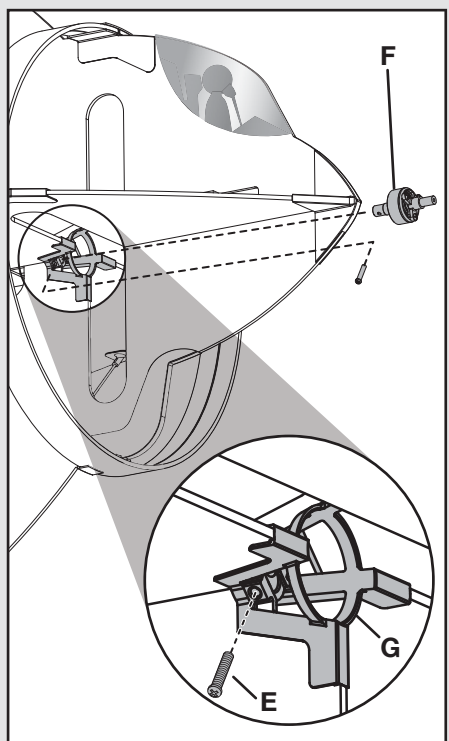

Troubleshooting Guide

AS3X

Problem	Possible Cause	Solution
Control surfaces not at neutral position when transmitter controls are at neutral	Control surfaces may not have been mechanically centered from factory	Center control surfaces mechanically by adjusting the u-bends on control linkages
	Aircraft was moved after the flight battery was connected and before sensors initialized	Disconnect and reconnect the flight battery while keeping the aircraft still for 5 seconds
Model flies inconsistently from flight to flight	Trims are moved too far from neutral position	Neutralize trims and mechanically adjust linkages to center control surfaces
Airplane oscillates in roll, yaw or pitch	Damaged propeller, spinner or motor, causing vibration in the airframe	Replace damaged parts
	Prop screw is too loose, causing vibration	Tighten the prop screw

Problem	Possible Cause	Solution
Aircraft will not respond to throttle but responds to other controls	Throttle stick and/or throttle trim too high	Reset controls with throttle stick and throttle trim at lowest setting
	Throttle channel is reversed	Reverse throttle channel on transmitter
	Motor disconnected from receiver	Make sure motor is connected to the receiver
Extra propeller noise or extra vibration.	Damaged propeller, spinner or motor	Replace damaged parts
	Prop screw is too loose	Tighten the prop screw
Reduced flight time or aircraft underpowered.	Flight battery charge is low	Completely recharge flight battery
	Propeller installed backwards	Install propeller with numbers facing forward
	Flight battery damaged	Replace flight battery and follow flight battery instructions
	Flight conditions may be too cold	Make sure battery is warm before use
	Battery capacity too low for flight conditions	Replace battery or use a larger capacity battery
LED on receiver flashes and aircraft will not bind to transmitter (during binding).	Transmitter too near aircraft during binding process	Power off transmitter, move transmitter a larger distance from aircraft, disconnect and reconnect flight battery to aircraft and follow binding instructions
	Bind switch or button not held long enough during bind process	Power off transmitter and repeat bind process. Hold transmitter bind button or switch until receiver is bound
LED on receiver flashes rapidly and aircraft will not respond to transmitter (after binding).	Less than a 5-second wait between first powering on transmitter and connecting flight battery to aircraft	Leaving transmitter on, disconnect and reconnect flight battery to aircraft
	Aircraft bound to different model memory (ModelMatch™ radios only)	Select correct model memory on transmitter and disconnect and reconnect flight battery to aircraft
	Flight battery/transmitter battery charge is too low	Replace/recharge batteries

Troubleshooting Guide (Continued)

Problem	Possible Cause	Solution
Control surface does not move	Control surface, control horn, linkage or servo damage	Replace or repair damaged parts and adjust controls
	Wire damaged or connections loose	Do a check of wires and connections, connect or replace as needed
	Flight battery charge is low	Fully recharge or replace flight battery
	Control linkage does not move freely	Make sure control linkage moves freely
Controls reversed	Transmitter settings reversed	Do the Control Direction Test and adjust controls on transmitter appropriately
Motor loses power	Damage to motor or power components	Do a check of motor and power components for damage (replace as needed)
Motor power quickly decreases and increases then motor loses power	Battery power is down to the point of receiver/ESC Low Voltage Cutoff (LVC)	Recharge flight battery or replace battery that is no longer performing
Motor/ESC is not armed after landing	Over Current Protection (OCP) stops the motor when the transmitter throttle is set high and the propeller cannot turn	Fully lower throttle and throttle trim to arm ESC
Servo locks or freezes at full travel	Travel adjust value is set above 100% overdriving the servo	Set Travel adjust to 100% or less and/or set sub-trims to Zero and adjust linkages mechanically

Limited Warranty

What this Warranty Covers

Horizon Hobby, Inc. ("Horizon") warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship at the date of purchase.

What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, or (v) Products not purchased from an authorized Horizon dealer.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

Warranty Services

Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide mwarranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please direct your email to productsupport@horizonhobby.com, or call 877.504.0233 toll free to speak to a Product Support representative. You may also find information on our website at www.horizonhobby.com.

Inspection or Services

If this Product needs to be inspected or serviced, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at www.horizonhobby.com under the Support tab. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

Notice: Do not ship LiPo batteries to Horizon. If you have any issue with a LiPo battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service

Should your service not be covered by warranty service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashiers checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website www.horizonhobby.com/Service/Request/.

Warranty and Service Information

Country of Purchase	Horizon Hobby	Address	Phone Number/Email Address
United States of America	Horizon Service Center (Electronics and engines)	4105 Fieldstone Rd Champaign, Illinois 61822 USA	877-504-0233 Online Repair Request visit: www.horizonhobby.com/service
	Horizon Product Support (All other products)	4105 Fieldstone Rd Champaign, Illinois 61822 USA	877-504-0233 productsupport@horizonhobby.com
United Kingdom	Horizon Hobby Limited	Units 1-4 Ployters Rd Staple Tye Harlow, Essex CM18 7NS United Kingdom	+44 (0) 1279 641 097 sales@horizonhobby.co.uk
Germany	Horizon Technischer Service	Christian-Junge-Straße1 25337 Elmshorn, Germany	+49 (0) 4121 2655 100 service@horizonhobby.de
France	Horizon Hobby SAS	14 Rue Gustave Eiffel Zone d'Activité du Réveil Matin 91230 Montgeron	+33 (0) 1 60 47 44 70 infofrance@horizonhobby.com

Compliance Information for the European Union

Declaration of Conformity

(in accordance with ISO/IEC 17050-1)
No. HH2011101301



Product(s):
Item Number(s):
Equipment class:

UMX Hyper Taxi BNF
EFLU4780
1

The object of declaration described above is in conformity with the requirements of the specifications listed below, following the provisions of the European R&TTE directive 1999/5/EC and EMC Directive 2004/108/EC:

EN 301 489-1 V1.7.1: 2006
EN 301 489-17 V1.3.2: 2008

EN55022: 2010
EN55024: 2010

Signed for and on behalf of:
Horizon Hobby, Inc.
Champaign, IL USA
Oct 13, 2011

Steven A. Hall
Vice President
International Operations and Risk Management
Horizon Hobby, Inc.

Instructions for disposal of WEEE by users in the European Union



This product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collections point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

Istruzioni per lo smaltimento di RAEE da parte di utenti dell'Unione Europea



Questo prodotto non deve essere smaltito insieme ai rifiuti domestici. Al contrario, è responsabilità dell'utente lo smaltimento di tali rifiuti, che devono essere portati in un centro di raccolta designato per il riciclaggio di rifiuti elettrici e apparecchiature elettroniche. Al momento dello smaltimento, la raccolta differenziata e il riciclaggio dei rifiuti provenienti da apparecchiature contribuiscono a preservare le risorse naturali e garantiscono un riciclaggio adatto a proteggere la salute e l'ambiente. Per maggiori informazioni sui punti di riciclaggio, contattare il proprio ufficio locale, il servizio di smaltimento rifiuti o il negozio presso il quale è stato acquistato il prodotto.

– Replacement Parts – – Ersatzteile – – Pièces de rechange – – Recapiti per i ricambi –

Part # • Nummer Numéro • Codice	Description	Beschreibung	Description	Descrizione
EFLU4770	Replacement Airframe: UMX Hyper Taxi	Ersatzrumpf : UMX Hyper Taxi	Structure: UMX Hyper Taxi	Telaio di ricambio: UMX Hyper Taxi
EFLU4751	DSM2 6Ch Ultra Micro AS3X Receiver BL-ESC HT	DSM2 6Kanal Ultra Micro AS3X Empfänger BL Regler BL-ESC HT	Ultra micro récepteur 6 voies AS3X avec contrôleur BL intégré.	Ricevitore 6Ch DSM2 Ultra Micro AS3X BL-ESC HT
EFLU4756	Hardware Set: UMX Hyper Taxi	Kleinteile Set: UMX Hyper Taxi	Accessoires: UMX Hyper Taxi	Set viti: UMX Hyper Taxi
EFLU4725	Pushrod Set: UMX Hyper Taxi	Gestänge Set: UMX Hyper Taxi	Tringleries: UMX Hyper Taxi	Set comandi: UMX Hyper Taxi
EFLUP55200	5.5X2.0 Electric Propeller: UMX Hyper Taxi	5.5X2.0 Propeller: UMX Hyper Taxi	Hélice 5.5x2.0: UMX Hyper Taxi	Elica per elettrico 5.5X2.0: UMX Hyper Taxi
EFLUM180BL2	180 Brushless Outrunner Motor 2500Kv	180 Brushless Außenläufer Motor 2500Kv	Moteur brushless 180 à cage tournante 2500KV	Motore brushless a cassa rotante 180 2500Kv
EFLB1802S20	180mAh 2S 7.4V 20C Li-Po, 26AWG	180mAh 2S 7.4V 20C Li-Po Akku, 26AWG	Batterie Li-Po 7.4V 2S 180mA 20C	Batteria 180mAh 2S 7.4V 20C Li-Po, 26AWG
EFLUC1007	Celectra 2S 7.4V DC Li-Po Charger	Celectra 2S 7.4V DC Li-Po Ladegerät	Chargeur Li-Po Celectra DC 7.4V 2S	Caricabatteria Celectra 2S 7.4V DC Li-Po
EFLUC1008	Power Cord for EFLUC1007	Anschlußstecker mit Krokodilklemmen für EFLUC1007	Câble d'alimentation pour EFLUC1007	Cavetto per EFLUC1007
SPMSA2030L	2.3-Gram Performance Linear Long Throw Servo	Spektrum 2.3g Linear Servo, Weg lang	Servo linéaire 2.3g longue course	Servo lineare a corsa lunga 2.3-Gram
SPM6836	Replacement Servo Mechanics: 2.3-Gram 2030L	Austausch Servo Mechanik: 2.3Gram 2030L	Mécanique de remplacement pour servo 2.3g 2030L	Meccanica di ricambio per servo: 2.3- Gram 2030L

Optional Parts and Accessories –
– Optionale Bauteile und Zubehörteile –
– Pièces optionnelles et accessoires –
– Parti opzionali e accessori –

Part # • Nummer Numéro • Codice	Description	Beschreibung	Description	Descrizione
EFLA700UM	Charger Plug Adapter: EFL	Ladekabel Adapter EFL	Prise d'adaptation chargeur: EFL	Adattatore per la carica: EFL
EFLA7001UM	Charger Plug Adapter: TP	Ladekabel Adapter TP	Prise d'adaptation chargeur: TP	Adattatore per la carica: TP
EFLU4068	Harness Adapter: UMX Beast	E-flite UMX Beast Y-Kabel	Adaptateur de câblage: UMX Beast	Cavo adattatore: UMX Beast
EFLB2002S25	200mAh 2S 7.4V 25C Li-Po, 26AWG	200mAh 2S 7.4V 25C Li-Po, 26AWG	Batterie Li-Po 7.4V 2S 200mA 25c	Batteria 200mAh 2S 7.4V 25C Li-Po, 26AWG
SPM6825	AS2000 Servo Reverser	AS2000 Servoreverser	AS2000 Inverseur de servo	Inversore per servo AS2000
ELFC4000	AC to 12V DC, 1.5 Amp Power Supply (US)	AC to 12V DC, 1.5 Amp Power Supply (US)	Alimentation secteur (US)	Alimentatore AC to 12V DC, 1.5 Amp (US)
EFLC4000UK	AC to 12V DC, 1.5 Amp Power Supply (UK)	AC to 12V DC, 1.5 Amp Power Supply (UK)	Alimentation secteur 12V DC 1.5A (UK)	Alimentatore AC to 12V DC, 1.5 Amp (UK)
EFLC4000AU	AC to 12V DC, 1.5 Amp Power Supply (AU)	AC to 12V DC, 1.5 Amp Power Supply (AU)	Alimentation secteur 12V DC 1.5A (AU)	Alimentatore AC to 12V DC, 1.5 Amp (AU)
EFLC4000EU	AC to 12V DC, 1.5 Amp Power Supply (EU)	AC auf 12V DC, 1.5 Amp Netzgerät (EU)	Alimentation secteur 12V DC 1.5Ay (EU)	Alimentatore AC to 12V DC, 1.5 Amp (EU)
SPMR5510	DX5e DSMX 5-Channel Transmitter only Mode 2	DX5e DSMX 5-Kanal Sender ohne Empfänger Mode 2	Emetteur seul DX5e DSMX 5 voies Mode 2	Solo trasmettitore DX5e DSMX 5-Ch Mode 2
SPMR55101	DX5e DSMX 5-Channel Transmitter only Mode 1	DX5e DSMX 5-Kanal Sender ohne Empfänger Mode 1	Emetteur seul DX5e DSMX 5 voies Mode 1	Solo trasmettitore DX5e DSMX 5-Ch Mode 1
SPMR6610	DX6i DSMX 6-Channel Transmitter only Mode 2	DX6i DSMX 6-Kanal Sender ohne Empfänger Mode 2	Emetteur seul DX6i DSMX 6 voies Mode 2	Solo trasmettitore DX6i DSMX 6-Ch Mode 2
SPMR66101	DX6i DSMX 6-Channel Transmitter only Mode 1	DX6i DSMX 6-Kanal Sender ohne Empfänger Mode 1	Emetteur seul DX6i DSMX 6 voies Mode 1	Solo trasmettitore DX6i DSMX 6-Ch Mode 1
SPMR6610E	DX6i DSMX 6-Channel Transmitter only Mode 2 (EU)	Spektrum DX6i DSMX Sender ohne Empfänger MD2	DX6i DSMX 6-Channel Transmitter only Mode 2 (EU)	Solo trasmettitore DX6i DSMX 6-Ch Mode 2 (EU)
SPMR66101E	DX6i DSMX 6-Channel Transmitter only Mode 1 (EU)	Spektrum DX6i DSMX Sender ohne Empfänger MD1	Emetteur seul DX6i DSMX 6 voies Mode 1 (EU)	Solo trasmettitore DX6i DSMX 6-Ch Mode 1 (EU)
SPM7800	DX7s DSMX 7-Channel Transmitter Mode 2	Spektrum DX7s 7 Kanal Sender	Emetteur DX7s DSMX 7 voies Mode 2	Trasmettitore DX7s DSMX 7-Ch Mode 2

Part # • Nummer Numéro • Codice	Description	Beschreibung	Description	Descrizione
SPM7800EU	DX7s DSMX 7-Channel Transmitter Mode 2 (EU)	Spektrum DX7s 7 Kanal Sender	Emetteur DX7s DSMX 7 voies Mode 1(EU)	Trasmettitore DX7s DSMX 7-Ch Mode 2 (EU)
SPM78001AU	DX7s DSMX 7-Channel Transmitter Mode 1 (AU)	DX7s DSMX 7-Channel Transmitter Mode 1 (AU)	Emetteur DX7s DSMX 7 voies Mode 1 (AU)	Trasmettitore DX7s DSMX 7-Ch Mode 1 (AU)
SPM78001EU	DX7s DSMX 7-Channel Transmitter Mode 1 (EU)	DX7s DSMX 7-Channel Transmitter Mode 1 (AU)	Emetteur DX7s DSMX 7 voies Mode 1 (EU)	Trasmettitore DX7s DSMX 7-Ch Mode 1 (EU)
*SPMR8800	DX8 DSMX Transmitter Only Mode 2	Spektrum DX8 nur Sender Mode 1-4	Emetteur seul DX8 DSMX 8 voies Mode 2	Solo trasmettitore DX8 DSMX Mode 2
*SPMR8800EU	DX8 DSMX Transmitter Only Mode 2 (EU)	Spektrum DX8 nur Sender Mode 1-4	Emetteur seul DX8 DSMX 8 voies Mode 2 (EU)	Solo trasmettitore DX8 DSMX Mode 2 (EU)
*SPMR88001AU	DX8 DSMX Transmitter Only Mode 1 (AU)	DX8 DSMX Transmitter Only Mode 1 (AU)	Emetteur seul DX8 DSMX 8 voies Mode 1 (AU)	Solo trasmettitore DX8 DSMX Mode 1 (AU)
*SPMR88001EU	DX8 DSMX Transmitter Only Mode 1 (EU)	DX8 DSMX nur Sender Mode 1 (EU)	Emetteur seul DX8 DSMX 8 voies Mode 1 (EU)	Solo trasmettitore DX8 DSMX Mode 1 (EU)

* All Spektrum DX8 transmitters can be set up for modes 1–4

* Alle Spektrum DX8 Sender können für Mode 1–4 eingestellt werden

* Tous les émetteurs Spektrum DX8 peuvent étre paramétrés dans les 4 modes

* Tutti i trasmettitori Spektrum DX8 possono essere configurati per i modelli 1–4

– Parts Contact Information –
– Intaktinformationen für Ersatzteile –
– Coordonnés pour obtenir de pièces détachées –
– Recapiti per i ricambi –

Country of Purchase	Horizon Hobby	Address	Phone Number/Email Address
United States	Sales	4105 Fieldstone Rd Champaign, Illinois, 61822 USA	800-338-4639 sales@horizonhobby.com
United Kingdom	Horizon Hobby Limited	Units 1-4 Ployters Rd Staple Tye Harlow, Essex CM18 7NS, United Kingdom	+44 (0) 1279 641 097 sales@horizonhobby.co.uk
Germany	Horizon Hobby GmbH	Christian-Junge-Straße 1 25337 Elmshorn, Germany	+49 4121 46199 60 service@horizonhobby.de
France	Horizon Hobby SAS	14 Rue Gustave Eiffel Zone d'Activité du Réveil Matin 91230 Montgeron	+33 (0) 1 60 47 44 70 infofrance@horizonhobby.com
China	Horizon Hobby – China	Room 506, No. 97 Changshou Rd. Shanghai, China, 200060	+86 (021) 5180 9868 info@horizonhobby.com.cn

© 2011 Horizon Hobby, Inc.

UMX, AS3X, E-flite, Hyper Taxi, JR, Celectra, DSM2, DSMX, ModelMatch and Bind-N-Fly are trademarks or registered trademarks of Horizon Hobby, Inc.

The Spektrum trademark is used with permission of Bachmann Industries, Inc.

Futaba is a registered trademark of Futaba Denshi Kogyo Kabushiki Kaisha Corporation of Japan.

US D578,146. PRC ZL 200720069025.2. US 7,898,130 Other patents pending.

www.e-fliterc.com

