Visite la página TRAXXAS.com/manuals para descargar el instructiones en su idioma.

Auf TRAXXAS.com/manuals können Sie anleitung in Ihrer Sprache downloaden.

Wheels and Tires Installation Instructions

Kit contents:

- Wheel and tire assemblies (4)
- 16-T pinion gear (1)
- 3x4mm set screw (1)
- 2.5x10mm cap screws (8)

Tools needed:

- 2.5mm hex wrench
- 2.0mm hex wrench
- 1.5mm hex wrench
- 7mm nut driver
- 17mm wheel wrench

Removing the Traxx™ drive units to install the wheels and tires

1. Remove the two 2.5x12mm cap-head screws from the anti-rotation bracket on the portal gearbox (A).
2. Remove the bracket from the portal gearbox (B).
3. Install two 2.5x10mm cap-head screws (included) into the portal gearbox (B).


Note: If your nut driver will fit in the hole of the drive unit for removal of the wheel nut, then skip step 4 and proceed to step 5.

4. Loosen the stub axle nut on the drive unit using a 17mm wheel wrench (C); remove the stub axle nut.
5. Remove the M4x0.7mm wheel nut from the stub axle and remove the drive unit (D).
6. Repeat for the other three drive units.
7. Install the wheel and tire on the stub axle (E).
8. Install the M4x0.7mm wheel nut on the stub axle and tighten securely. Repeat for the other three wheels and tires.

Installing the 16-T pinion gear (for better vehicle speed with the wheels and tires installed)

1. Remove the three 3x8mm button-head cap screws from the upper gear cover; remove the gear cover (F).
2. Remove the motor/motor plate from the lower gear cover (G).
3. Remove the two screws from the motor/motor plate and reinstall in the "H" position (H).
4. Loosen the 3x4mm set screw on the original 11-T pinion gear and remove the gear from the motor shaft.

   Important! Always use the 11-T pinion gear with the Traxx drive units.
5. Install the included 16-T pinion gear onto the motor shaft; align the set screw hole with the flat side of the shaft. **The pinion gear should be 1-1.5mm from the end of the motor shaft (I).**
6. Thread the new 3x4mm set screw (included) into the pinion gear; tighten the set screw (J).
7. Reinstall the motor/motor plate into the lower gear cover.
8. Reinstall the upper gear cover and three 3x8mm button-head cap screws.

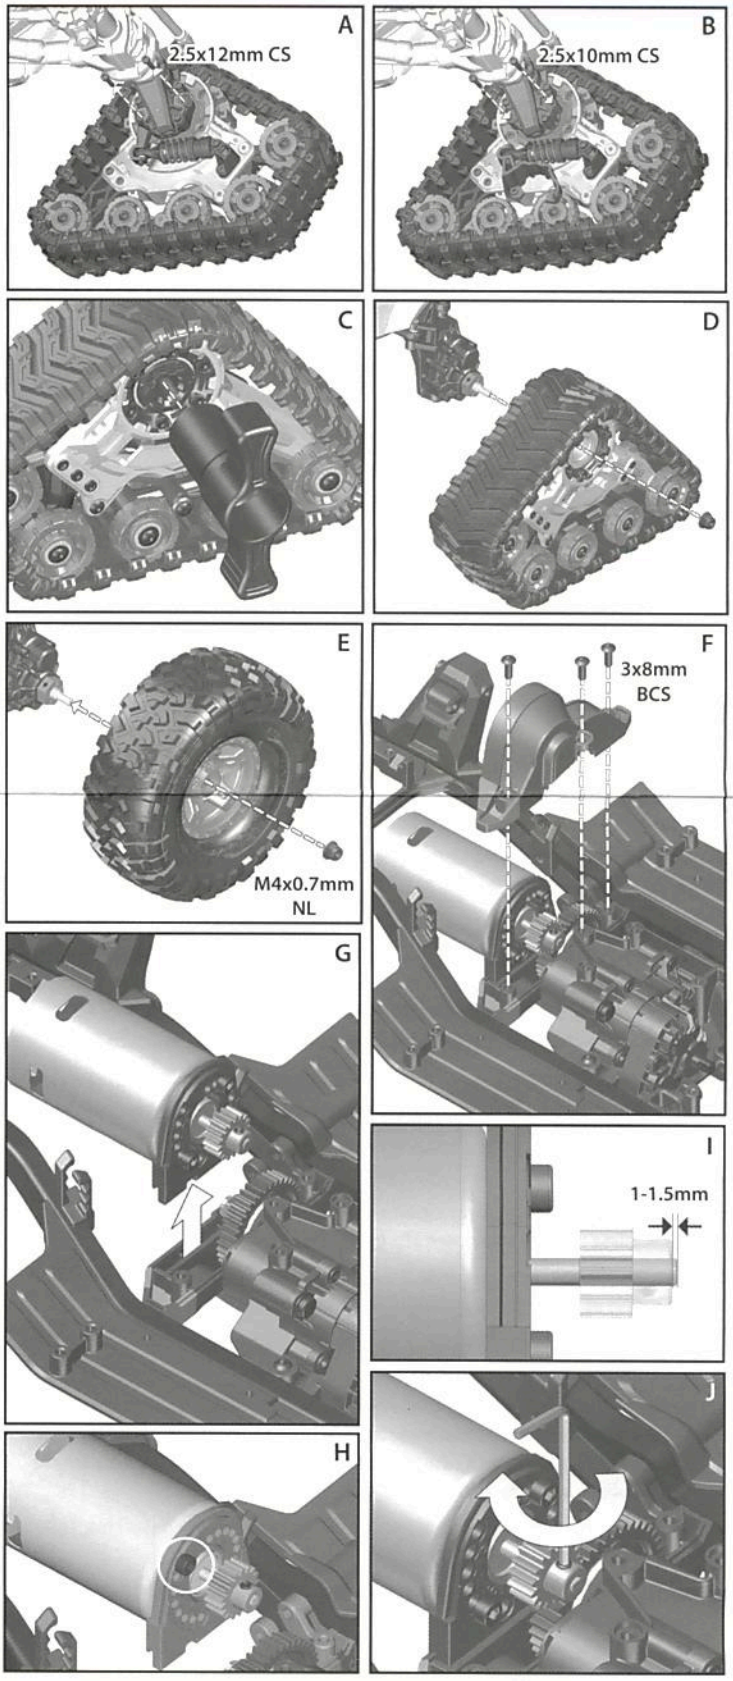

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

Traxxas, 6250 Traxxas Way, McKinney, TX 75070, Phone: 972-549-3000, Fax: 972-549-3011, e-mail: support@Traxxas.com

KC2761-R00 Rev 190923