


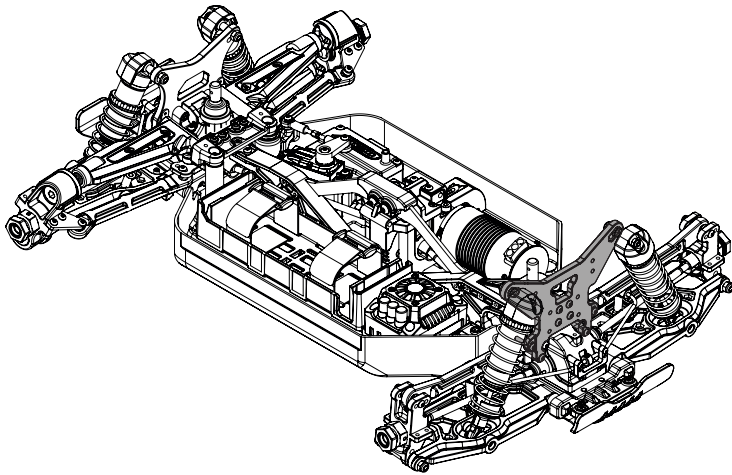

Required Tools:

- 2.0 Hex Driver
- Hex Cross Wrench and optionally 5.5 Nutdriver and 7.0 Nutdriver

Finish Before:

- Rear Wing And Mount


Important Notice:

Do NOT use solvents on rubber gaskets, seals, or O-rings to prevent damage.




VIDEO MANUAL
ON YOUTUBE

STEP 1

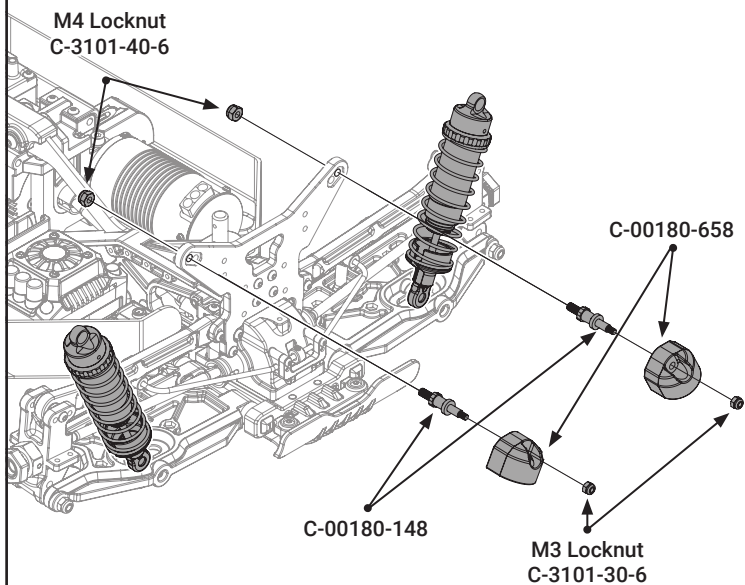

STEP 2

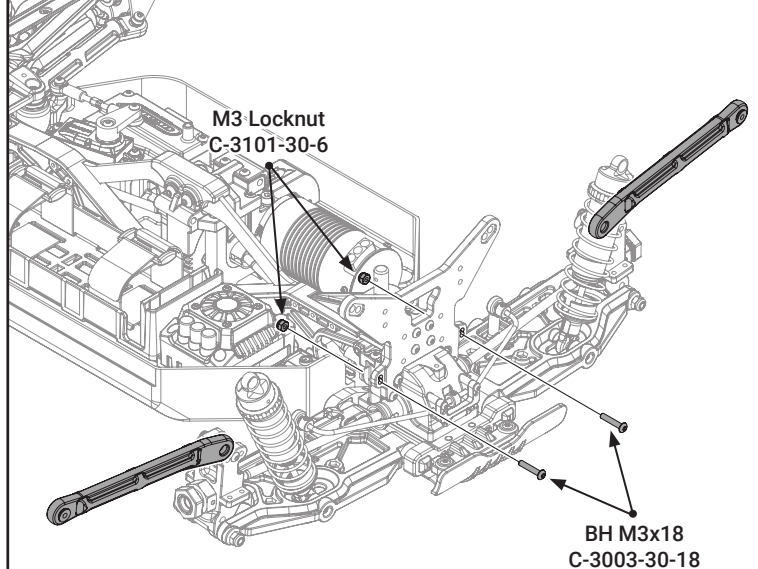

STEP 3

