

MARIE JEANNE



STEP-BY-STEP INSTRUCTIONS
INTRUCCIONES PASO A PASO
NOTICE DE MONTAGE PAS-À-PAS
SCHRITT FÜR SCHRITT ANWEISUNGEN
STAP VOOR STAP INSTRUCTIES
ISTRUZIONI PASSO PER PASSO
ПОШАГОВАЯ ИНСТРУКЦИЯ





HOBBY KNIFE N°1
Cuchilla · Cutter
ref. 27019

+ INFO



TWEEZERS
Pinzas · Pincas
ref. 27020

+ INFO



SET OF 4 MINI PLIERS (90mm)
Minisargentos · Mini Serre Joints
ref. 27201

+ INFO



MINI DIAMOND FILES SET (100mm)
Mini-limas diamante · Mini-limes diamant

ref. 27015-3

+ INFO

NEW!



FILES
Limas · Limes
ref. 27015-1

+ INFO



SANDING BLOCK
Taco lijador · Ponceur en bois
ref. 27014

+ INFO



HAND DRILL + HSS DRILL BITS

Taladro manual + brocas HSS · Outil à percer à main + forets HSS

ref. 27018-1

+ INFO




MICRO SAW SET

Micro herramientas · Micro outils

ref. 27302

+ INFO

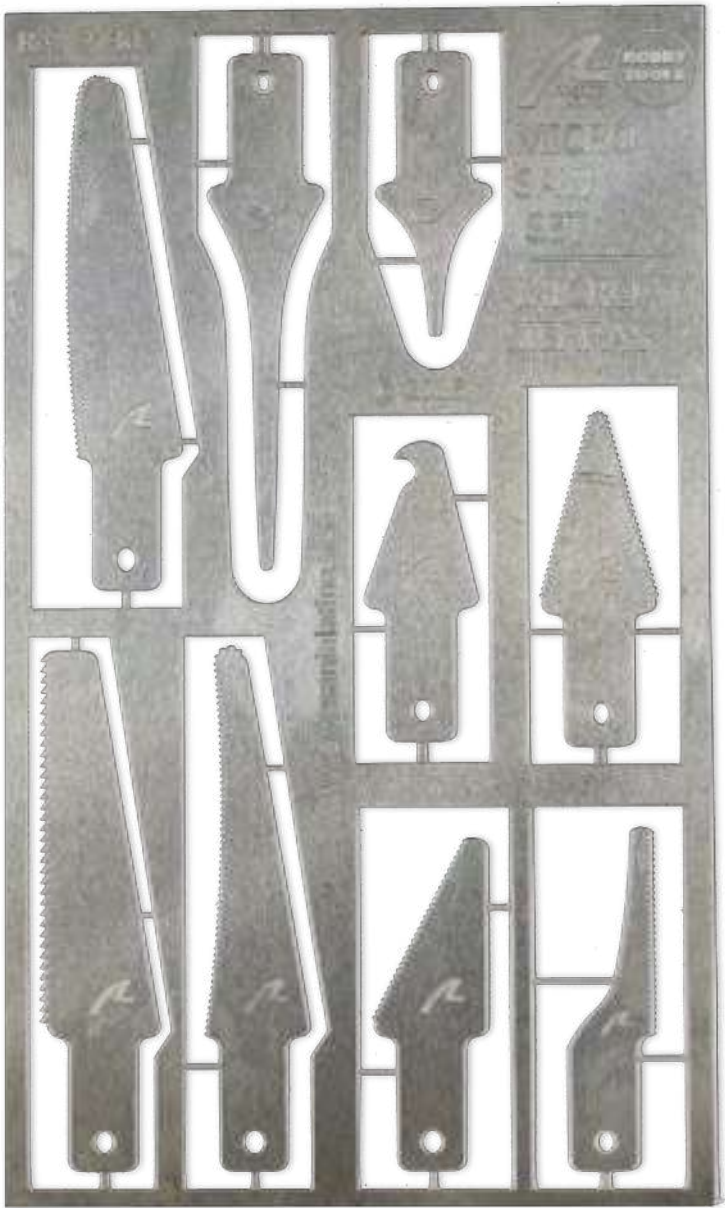


VIDEO

ELECTRIC PLANK BENDER

Plegalstones eléctrico · Fer à cintrer électrique

ref. 27074-1

+ INFO

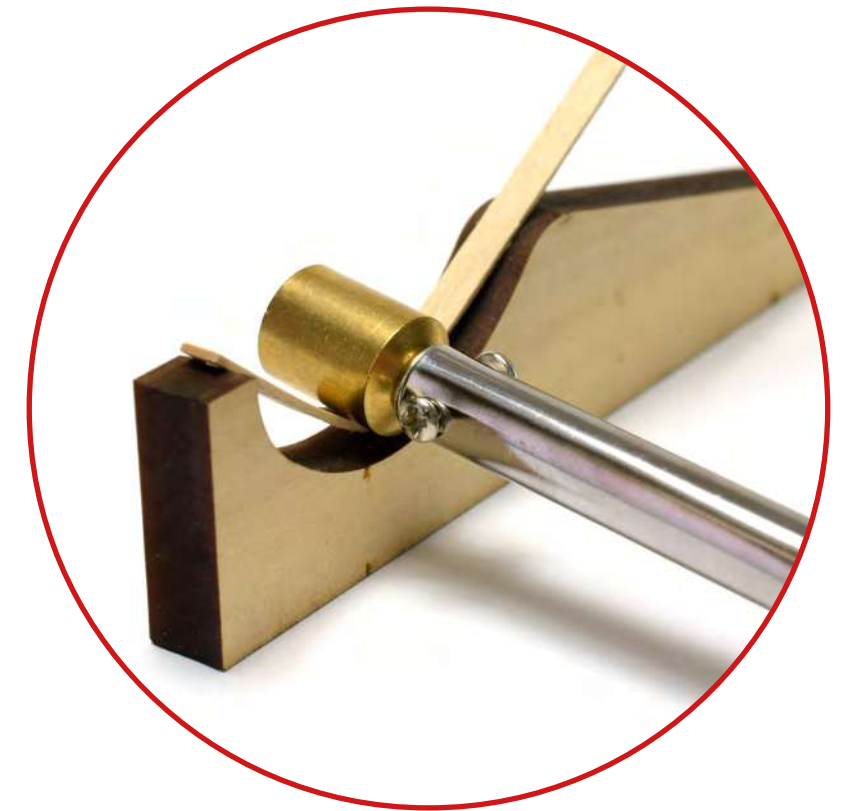

VIDEO


MICRO DRAWING SET
Micro herramienta · Micro outil

ref. 27325

+ INFO



VIDEO

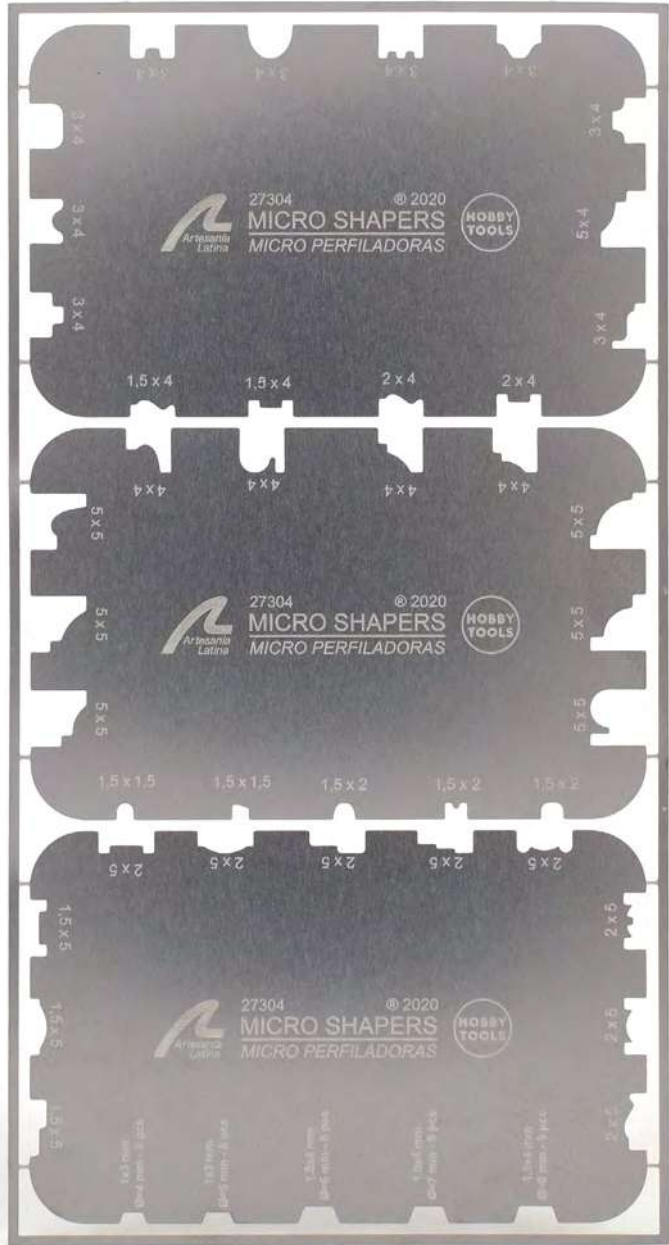





MICROSHAPERS
Micro perfiladoras ·
Micro Profileuses

ref. 27300 - 27301 - 27304

NEW!

+ INFO

VIDEO

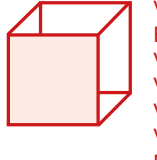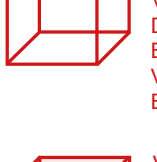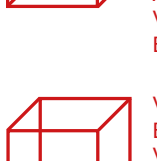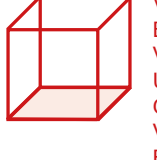	ENCAJAR FIT TOGETHER ASSEMBLER PASSEN PASSEN METTERE INSIEME ПРИГОДНЫЙ		REPETIR REPEAT REPÉTER WIEDERHOLEN HERHALEN RIPETERE ПОВТОРЕНИЕ		REPETIR SIMÉTRICAMENTE REPEAT SYMMETRICALLY RÉPÉTER SYMÉTRIQUEMENT SYMMETRISCH WIEDERHOLEN HERHAAL SYMMETISCH RIPETERE SIMMETRICAMENTE ПОВТОРНЫЙ СИММЕТРИЧЕСКИЙ		ROTAR TURN TOURNER DREHEN DRAAIEN GIRARE ПРЕВРАТИТЬ		SUJETAR CON CINTA ADHESIVA HOLD WITH ADHESIVE TAPE FIXER A L'AIDE DE RUBAN ADHESIF MIT KLEBEBAND BEFESTIGEN MET PLAKBAND VASTZETTEN FISSARE CON NASTRO ADESIVO ИСПРАВИТЬ С ПОМОЩЬЮ КЛЕЙКОЙ ЛЕНТЫ
	CORTAR CUT COUPER SCHNITT SNIJDEN TAGLIARE ПОРЕЗ		TALADRAR DRILL PERCER BOHREN BOREN TRAPANARE ДРЕЛЬ		LIJAR SAND PONCERSAND ZAND SCARTAVETRARE ПЕСОК		DAR FORMA CÓNICA GIVE TAPER DONNER UNE FORME CONIQUE GIB TAPER GEEF HET EEN KEGELVORM DARE FORMA CONICA ЗАУЗИТЬ		DEENMASCARAR UNMASK DÉMASQUER ENTLARVEN ONTMASKEREN SMASCHERARE РАЗОБЛАЧАТЬ
	PEGAR GLUE COLLER KLEBEN LIJM INCOLLARE КЛЕЙ		NO PEGAR DO NOT GLUE EN PAS COLLER NICHT KLEBEN NIET LIJMEN NON INCOLLARE НЕ КЛЕЙ		DOBLAR BEND PLIER BIEGE VOUWEN PIEGARE СОГНУТЬ		DAR FORMA CÓNICA X2 GIVE TAPER X2 DONNER UNE FORME CONIQUE X2 GIB TAPER X2 GEEF HET EEN KEGELVORM X2 DARE FORMA CONICA X2 ЗАУЗИТЬ X2		ENMASCARAR MASK MASQUER MASKE MASKER MASCHERA MASKA
	ENMASILLAR APPLY PUTTY CALFEUTURER PUTTY ANLEGEN VULMIDDEL AANBRENGEN APPLICARE LO STUCCO ЗАЯВКА		MARCAR A LÁPIZ MARK WITH A PENCIL MARQUER AU CRAYON MARK MIT EINEM BLEISTIFT MARKEREN MET EEN POTLOOD SEGNARE CON UNA MATITA МАРК С КАРАНДАРОЙ		MEDIR MEASURE MESURE MESSEN MAATREGEL MISURARE ИЗМЕРЕНИЕ		INICIO DEL CABLE CABLE START DÉMARRAGE DU CÂBLE KABELSTART KABEL START AVVIAMENTO CON CAVO КАБЕЛЬНЫЙ СТАРТ		LIAR HILO ROLL YARN ROULEAU DE FIL GARN ROLLEN ROL GAREN ROTOLO DI FILATO РУЛОННАЯ ПРЯЖА
	ALINEAR ALIGN ALIGNER AUSRICHTEN UITLIJNEN ALLINEARE ВЫРОВНЯТЬ		COLOCAR EN PUNTO MEDIO PLACE IN THE CENTER PLACER AU MILIEU IN DER MITTE PLATZIEREN PLAATS IN HET MIDDEN POSIZIONARE AL CENTRO РАЗМЕСТИТЕ В ЦЕНТРЕ		TENSAR HILO LIGERAMENTE STRETCH THREAD SLIGHTLY TENDRE LEGEREMENT LE FIL STRETCH GEWINDE LEICHT DRAAD LICHT SPANNEN TENDERE IN FILO LEGGERMENTE СЛЕГКА РАСПРЯМИТЬ НИТЬ		FIN DEL CABLE CABLE END FIN DE CABLE KABELEND EINDE VAN DE KABEL FINE DEL CAVO КОНЕЦ КАБЕЛЯ		VISTA FRONTAL FRONT VIEW VUE DE FACE VORDERANSICHT VOORAANZICHT VISTA FRONTALE ВИД СПЕРЕДИ
	BARNIZAR VARNISH VERNIR LACK LAKKEN VERNICIARE ЛАК		TEÑIR DYE TEINDRE FÄRBen VERVEN TINGERE КРАСИТЬ		ANUDAR KNOT FAIRE UN NOEUD KNOTEN MAAK EEN KNOOP FARE UN NODO МОРСКОЙ УЗЕЛ		VER VIDEO WATCH VIDEO VOIR VIDÉO SCHAU VIDEO BEKIJK VIDEO GUARDA UN VIDEO СМОТРЕТЬ ВИДЕО		VISTA SUPERIOR TOP VIEW VUE DE DESSUS DRAUFSICHT BOVENAANZICHT VISTA DALL'ALTO ВИД СВЕРХУ
	PINTAR PAINT PEINDRE FARBE SCHILDEREN DIPINGERE ПОКРАСИТЬ		IMPRIMAR APPLY PRIMER APPLIQUER L'APPRÊT PRIMER AUFTRAGEN BRENG PRIMER AAN APPLICARE IL PRIMER НАНЕСТИ ГРУНТОВКУ		CLAVAR NAIL CLOUER EINSCHLAGEN SPIJKER INCHIODARE ЗАБЕЙТЕ ГВОЗДЬ		SOLDAR WELD SOUDER SCHWEISSEN LASSEN SALDARE СВАРКА		VISTA TRASERA BACK VIEW VUE ARRIERE RÜCKANSICHT ACHTERAANZICHT VISTA POSTERIORE ВИД СЗАДИ
									VISTA INFERIOR BOTTOM VIEW VUE DE DESSOUS UNTERSICHT ONDERAANZICHT VISTA DAL BASSO ВИД ЧИЗУ

COLOR REF.

- 1

BLANCO ROTO
OFF WHITE
27702
- 2

AZUL FRANCÉS
FRENCH BLUE
27723
- 3

NEGRO ROTO
OFF BLACK
27703
- 4

SOMBRA TOSTADA
BURNT UMBER
27743
- 5

AZUL REAL
ROYAL BLUE
27720
- 6

CACAO
COCOA BROWN
27741
- 7

NARANJA
ORANGE
27714
- 8

AMARILLO CAQUI
BUFF
27740
- 9

BERMELLÓN
VERMILLION
27713
- 10

VERDE VIVO
BRIGHT GREEN
27753
- 11

ORO
GOLD
27761
- 00

DILUYENTE AERÓGRAFO
AIRBRUSH THINNER
27700
- 01

IMPRIMACIÓN
PRIMER
27701
- 05





BARNIZ SATINADO TRANSPARENTE
SEMI-GLOSS CLEAR VARNISH
27605
- 90







TINTE SAPELLI
DYE FOR WOOD SAPELE
27690
- 95

LÍQUIDO PAVONAR LATÓN
LIQUID FOR BRASS BLUING
27695


NEW!



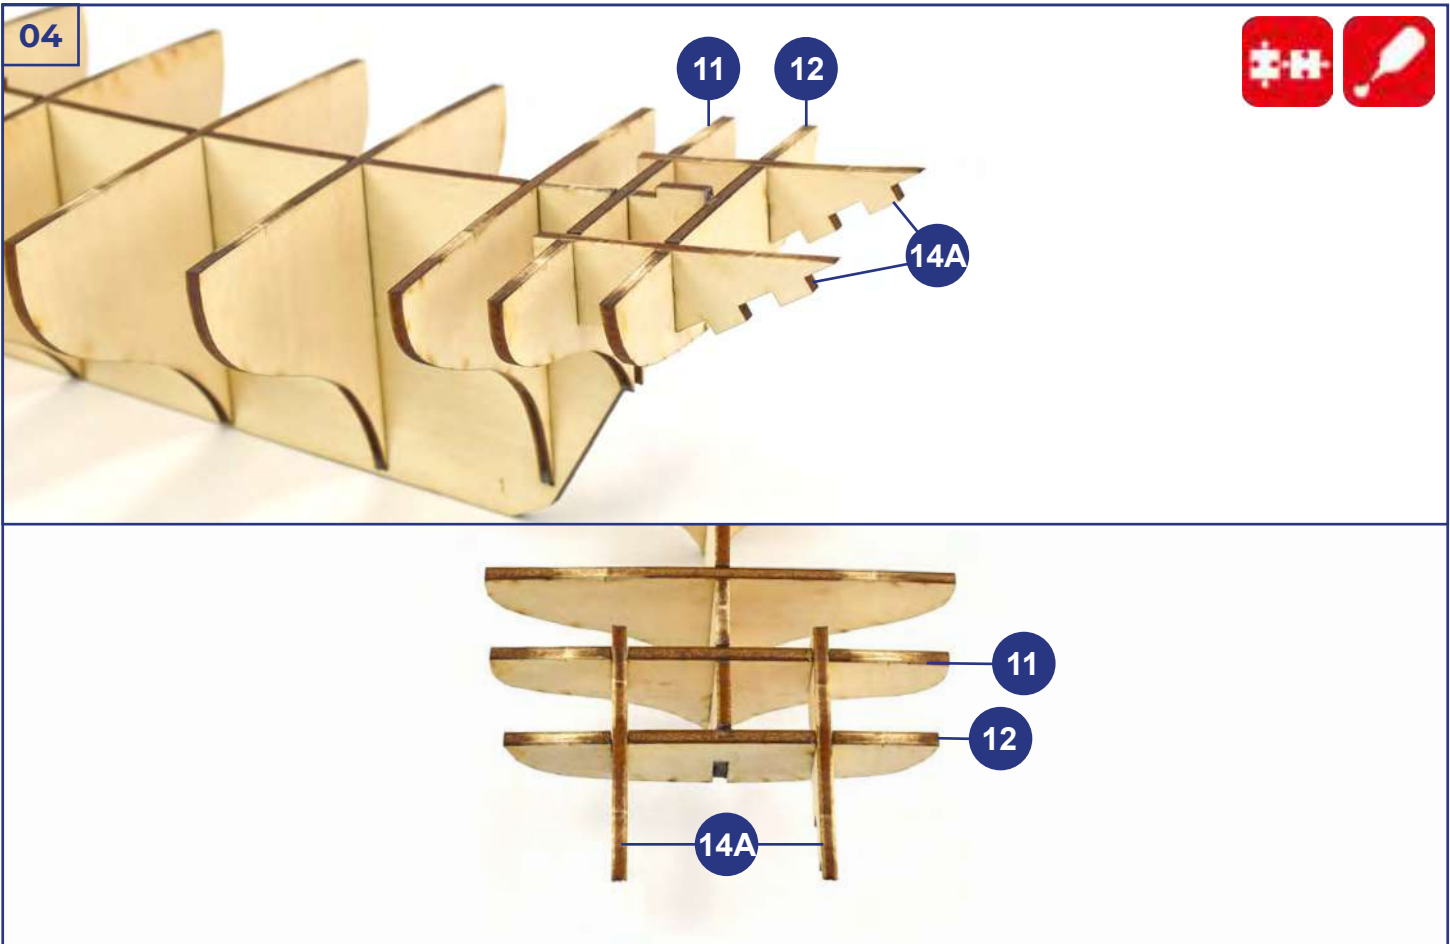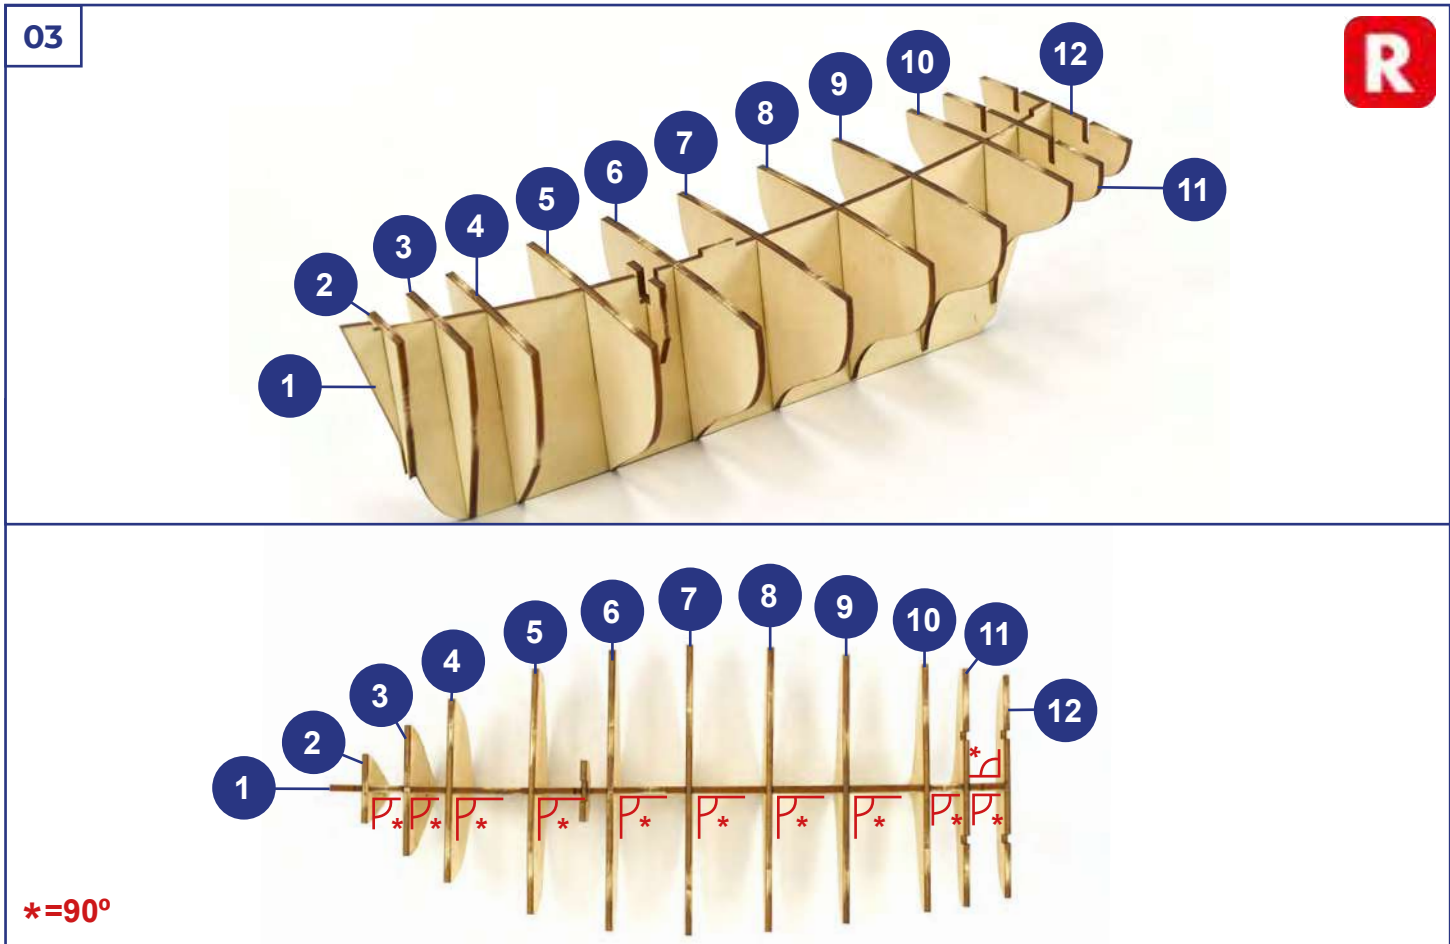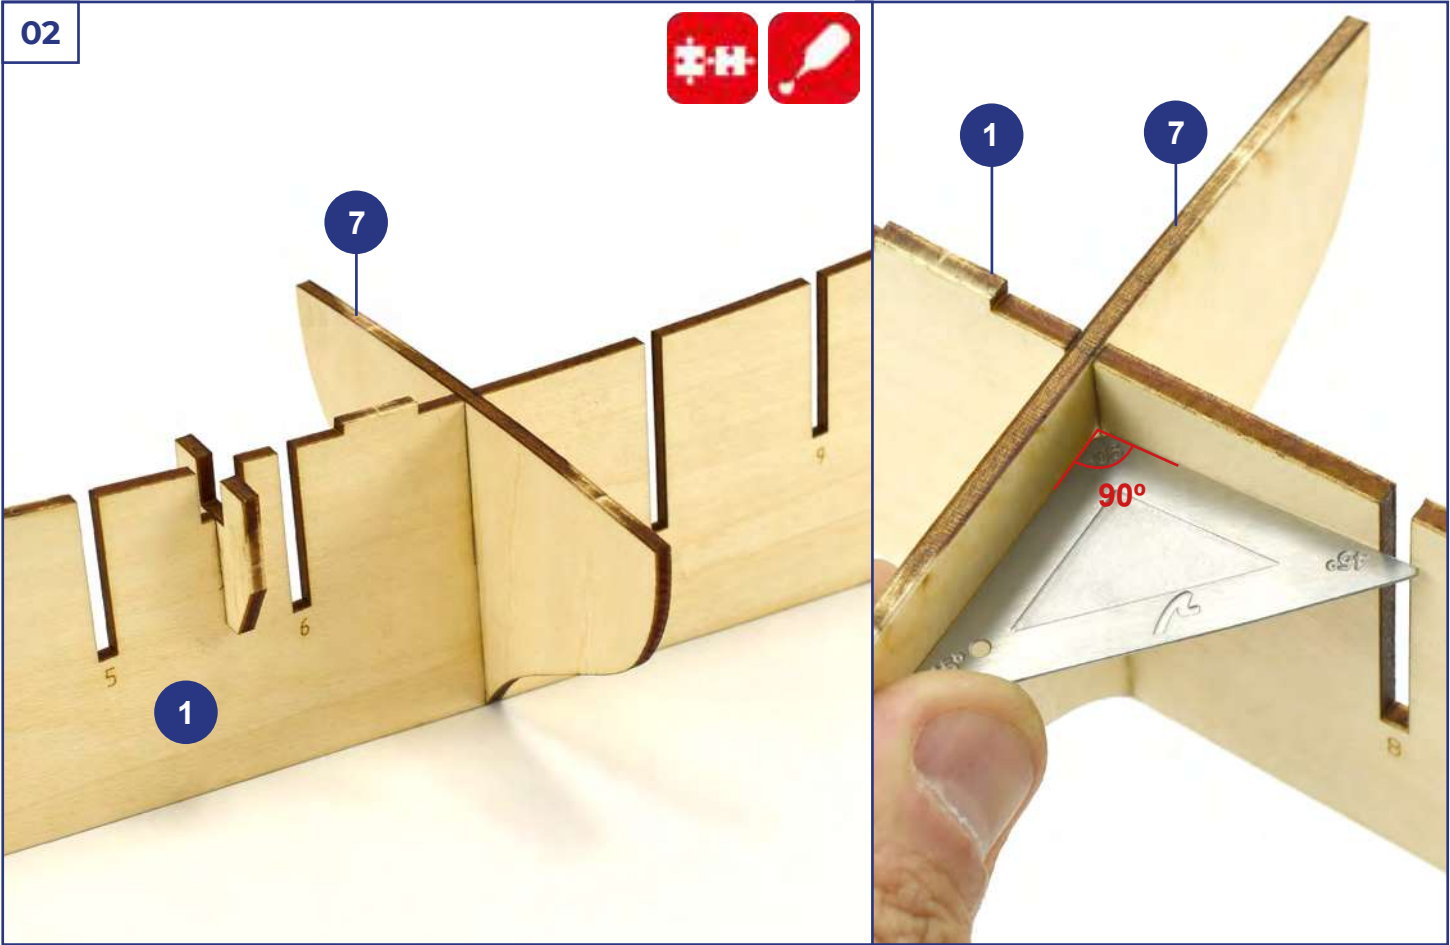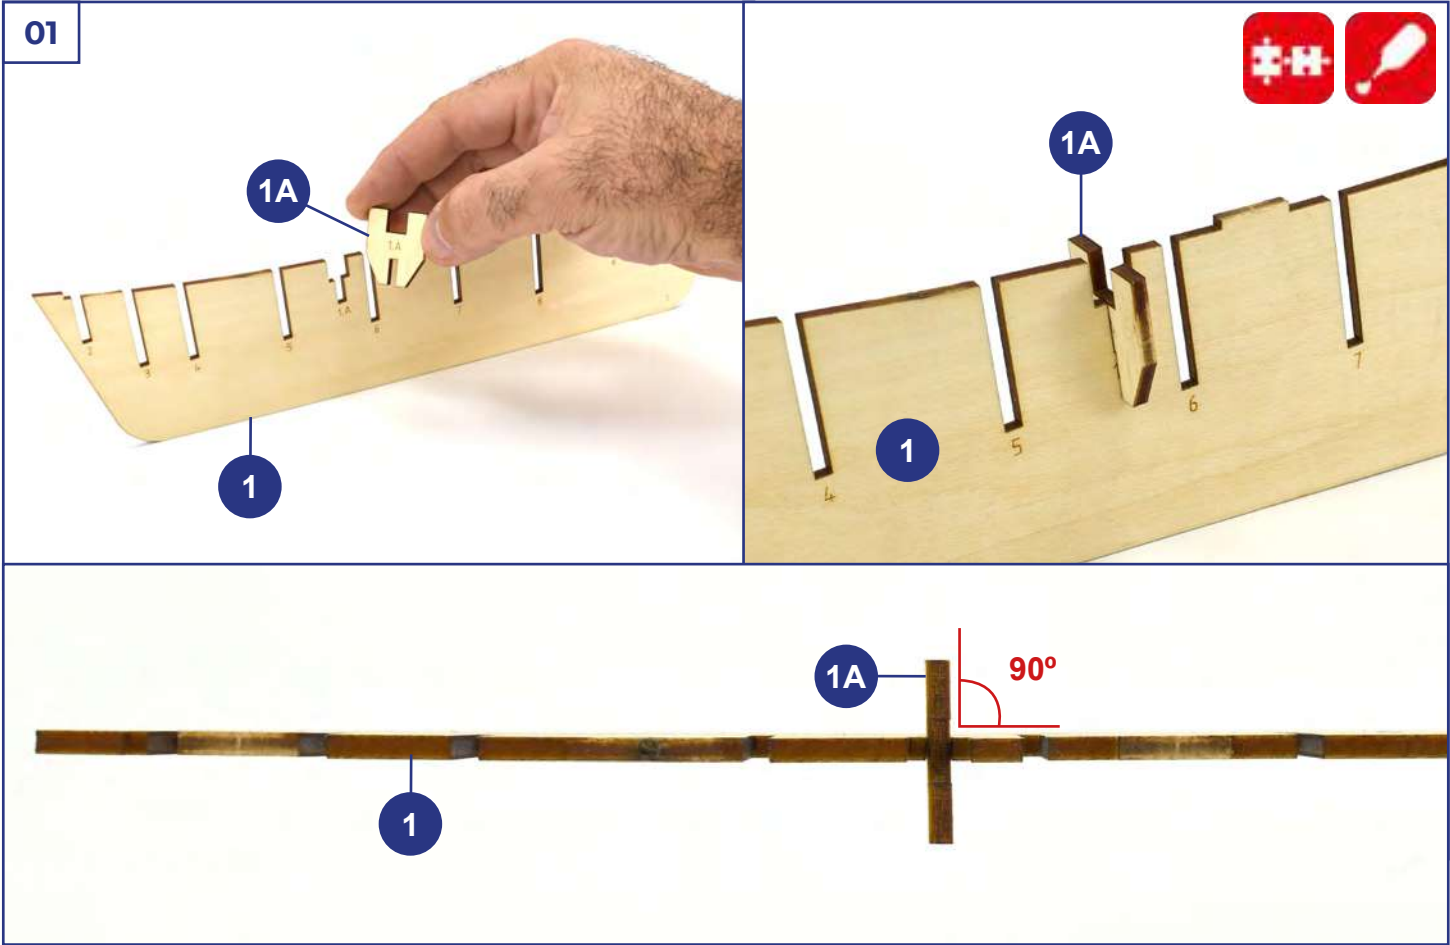

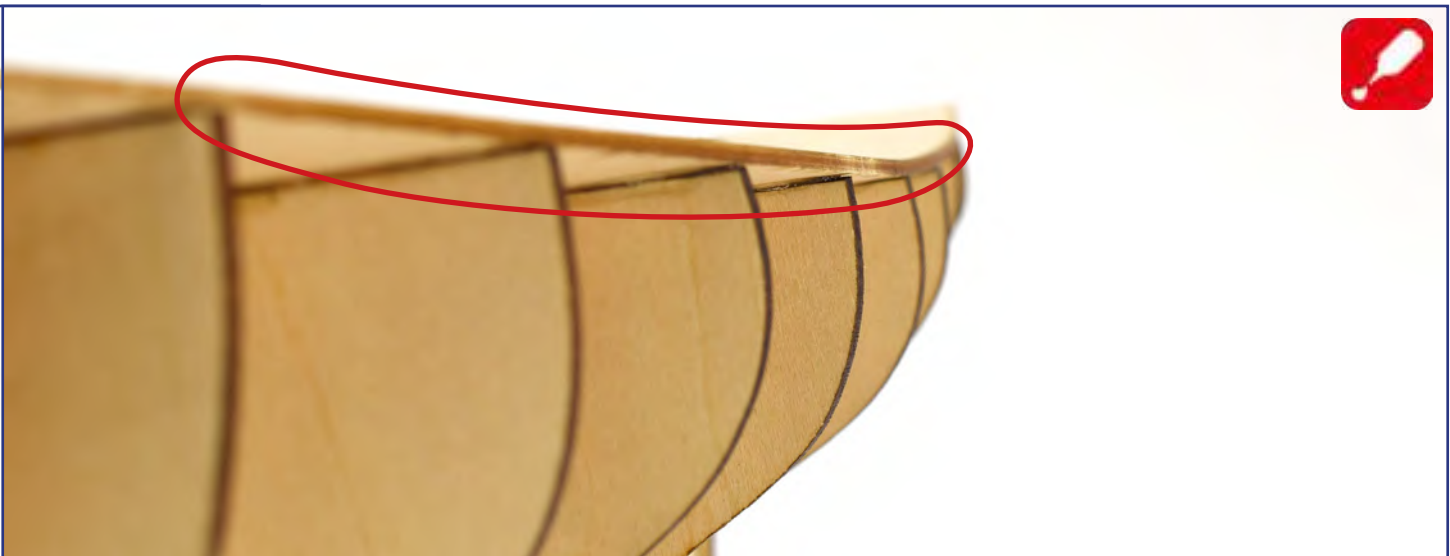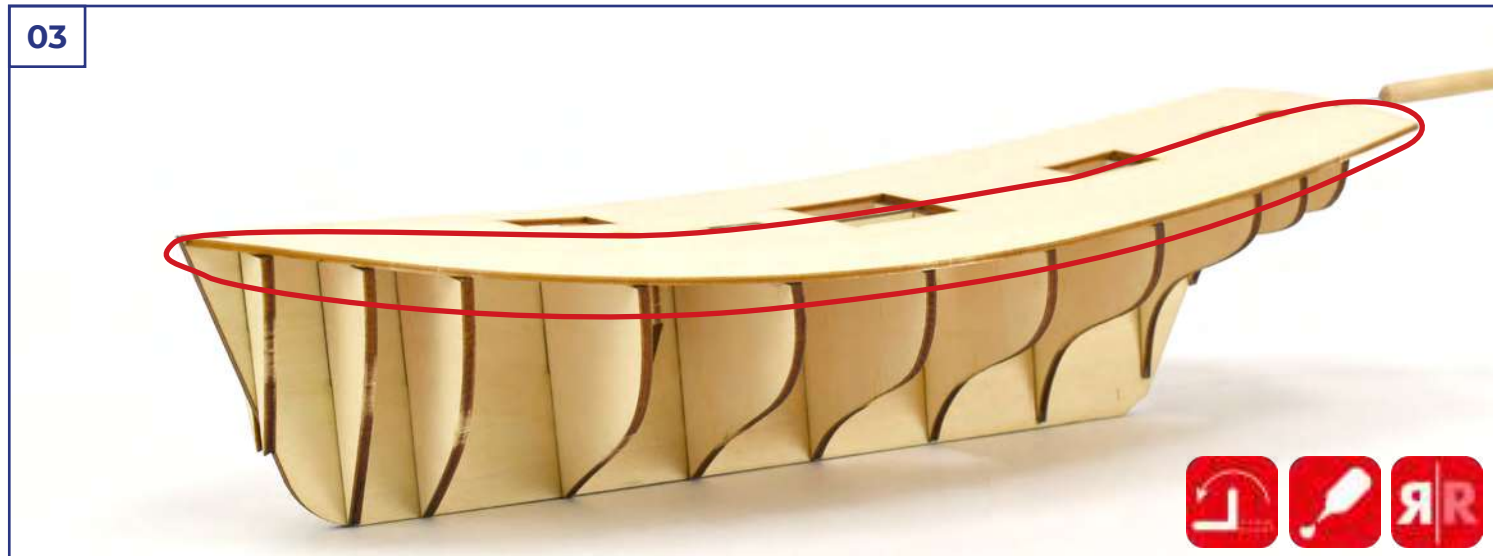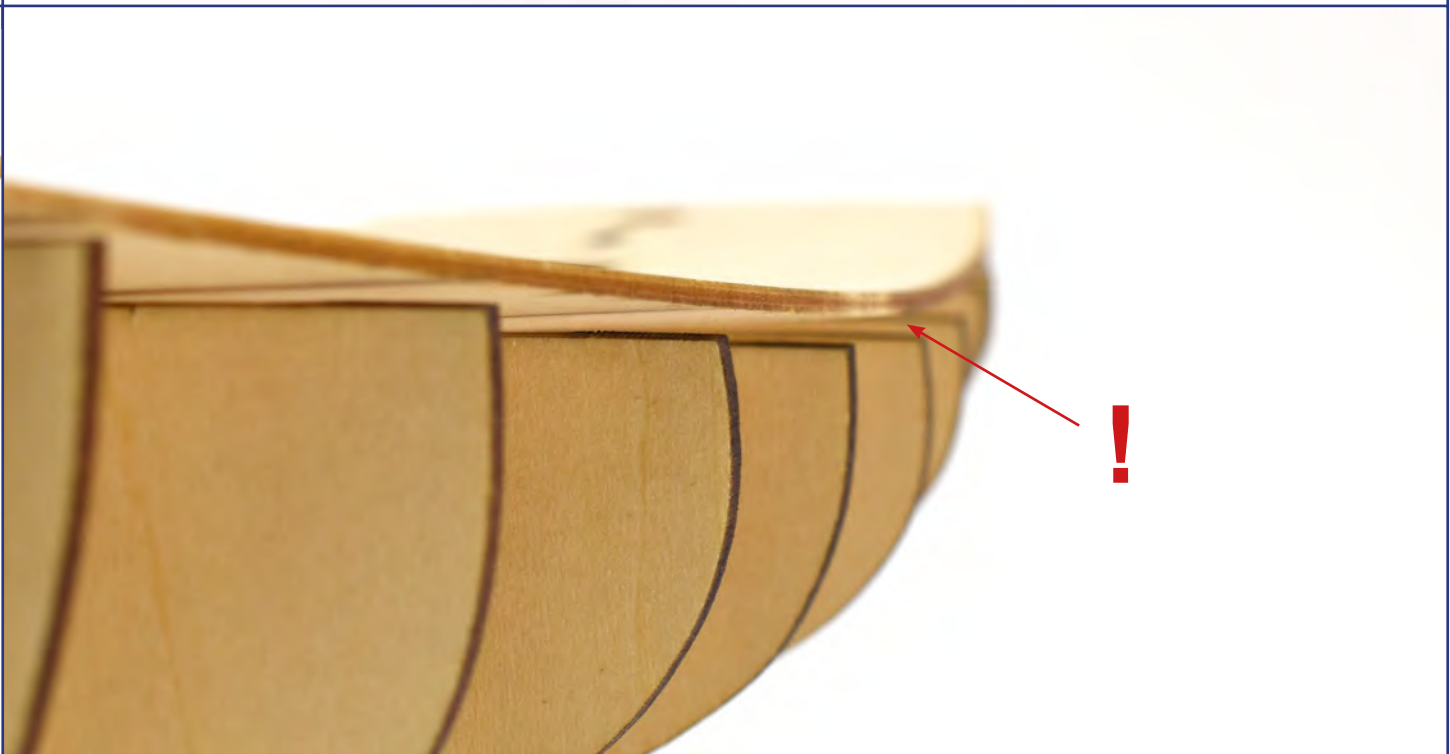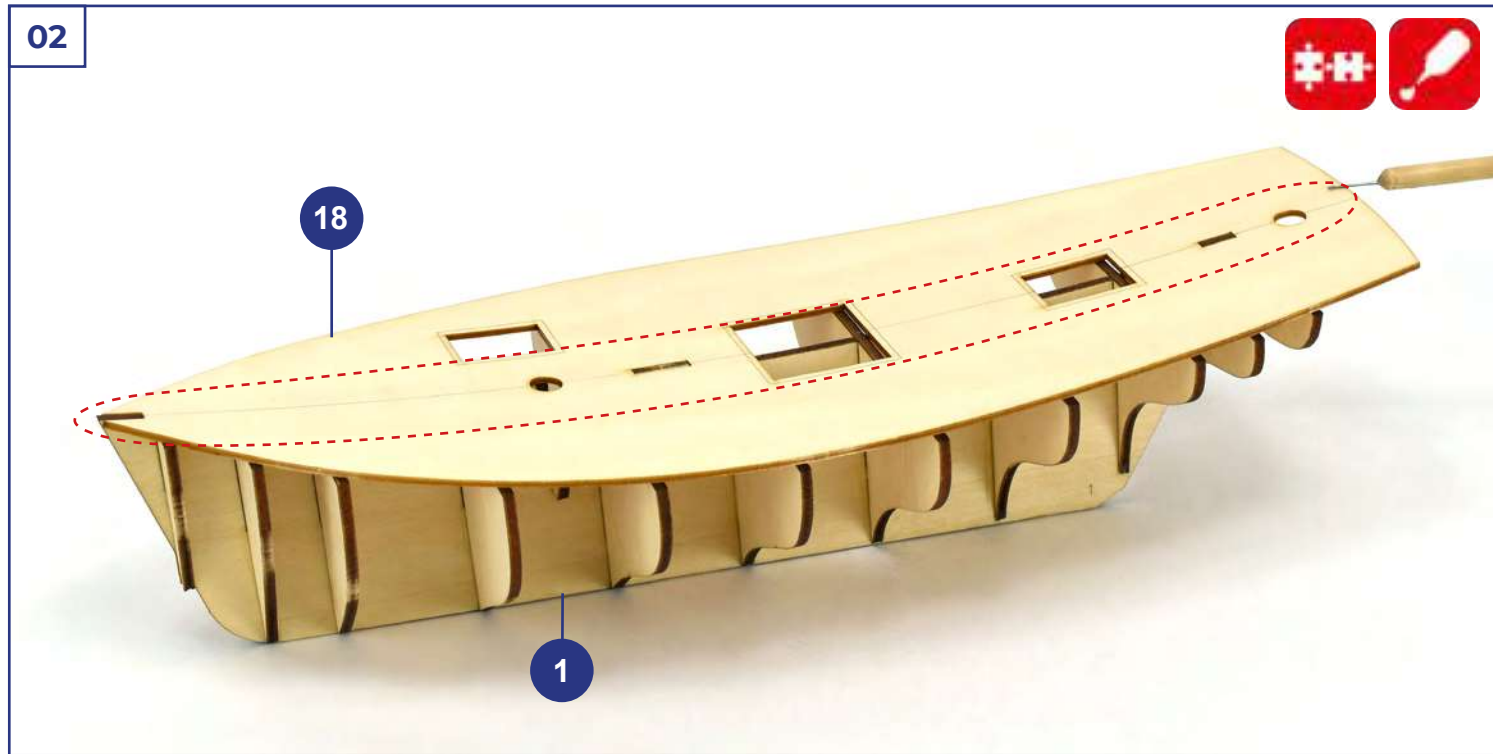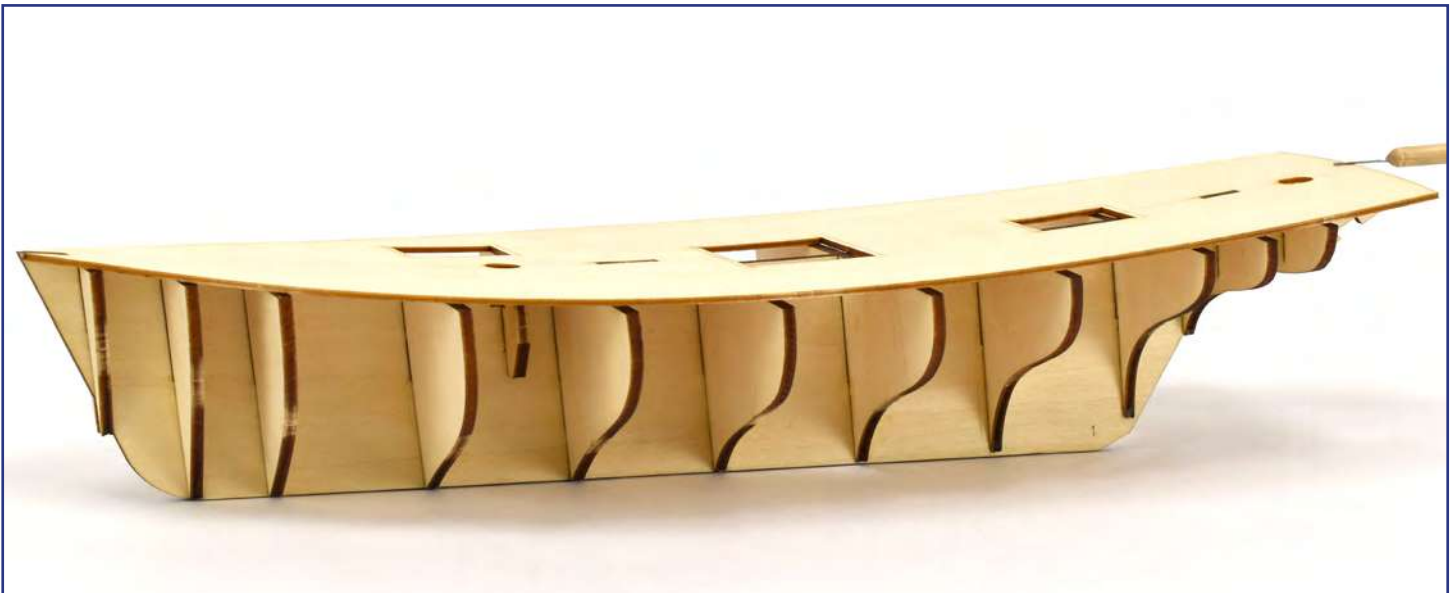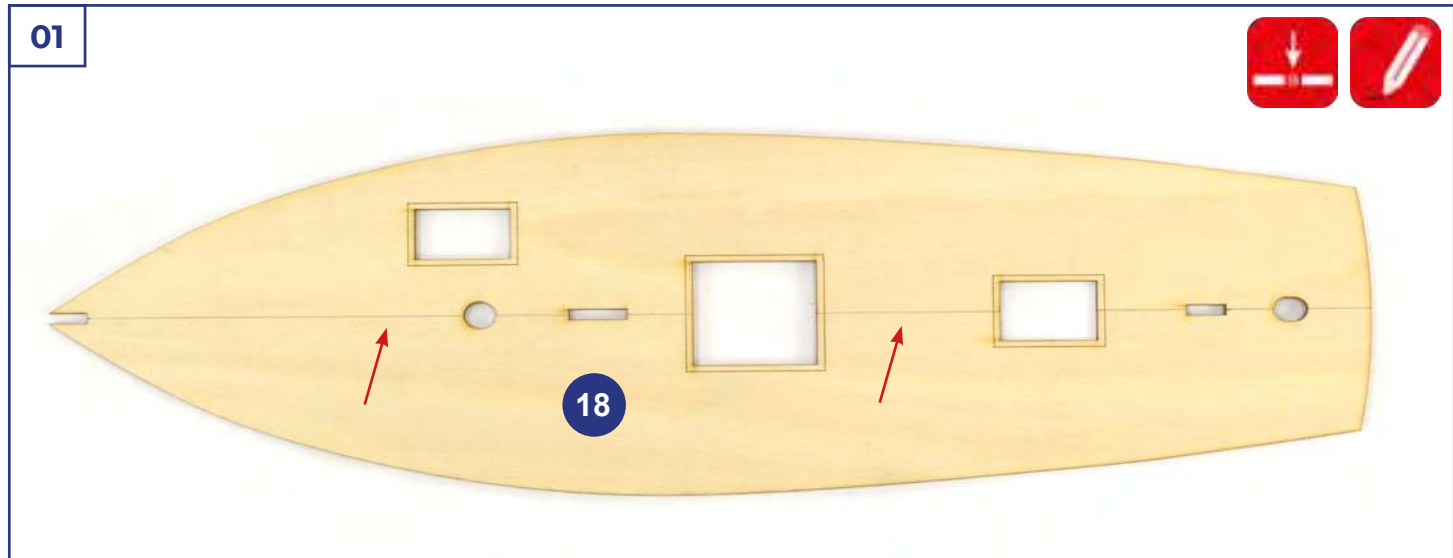


01

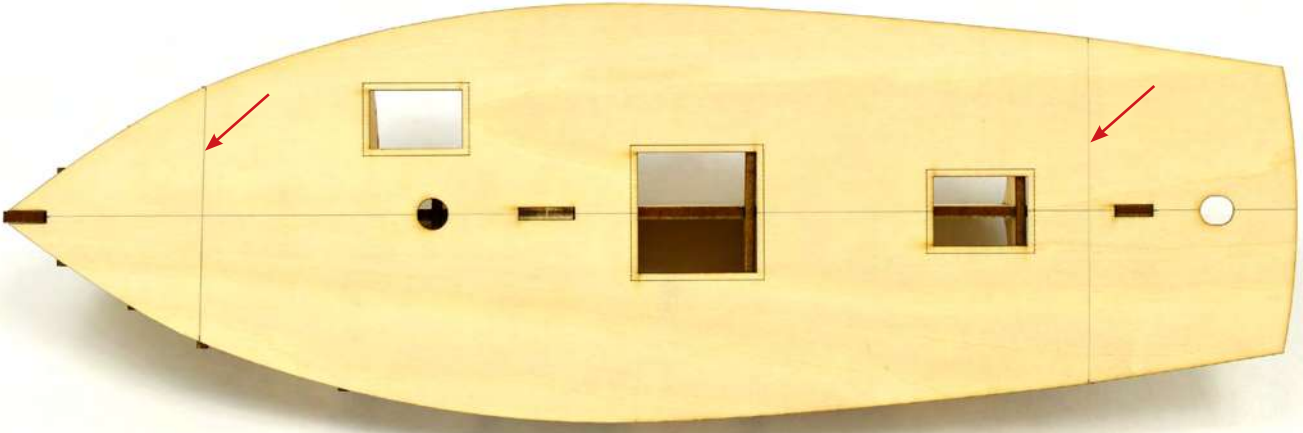




02

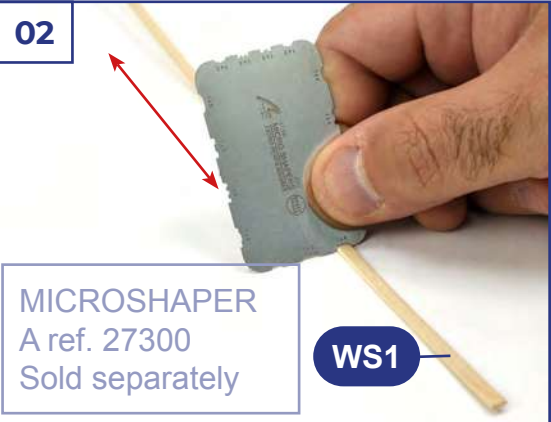

MICROSHAPER
A ref. 27300
Sold separately

WS1

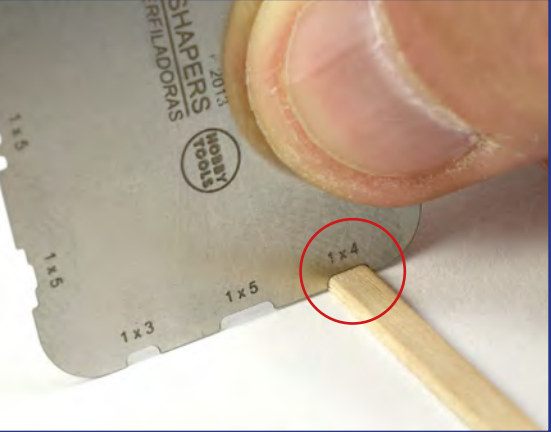


1x3 1x5 1x4



R

03

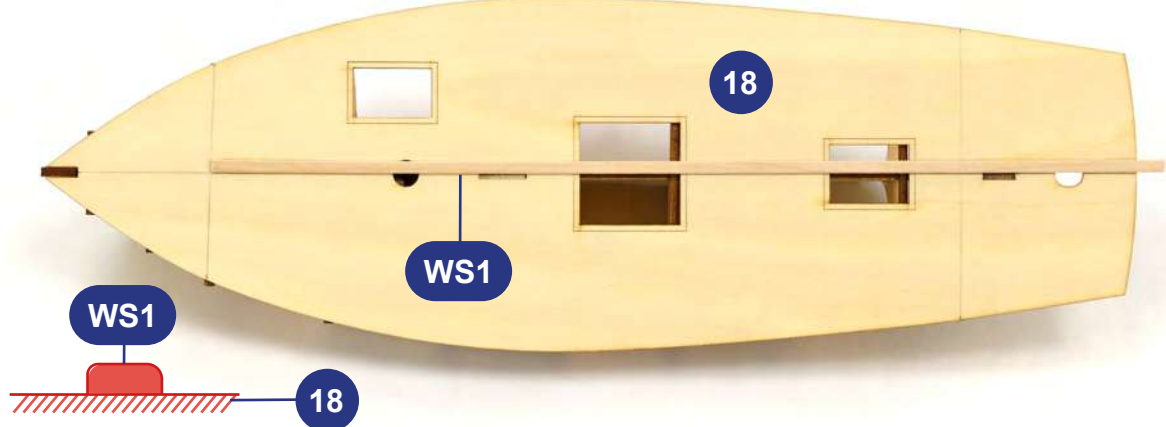


WS1

18




WS1





04

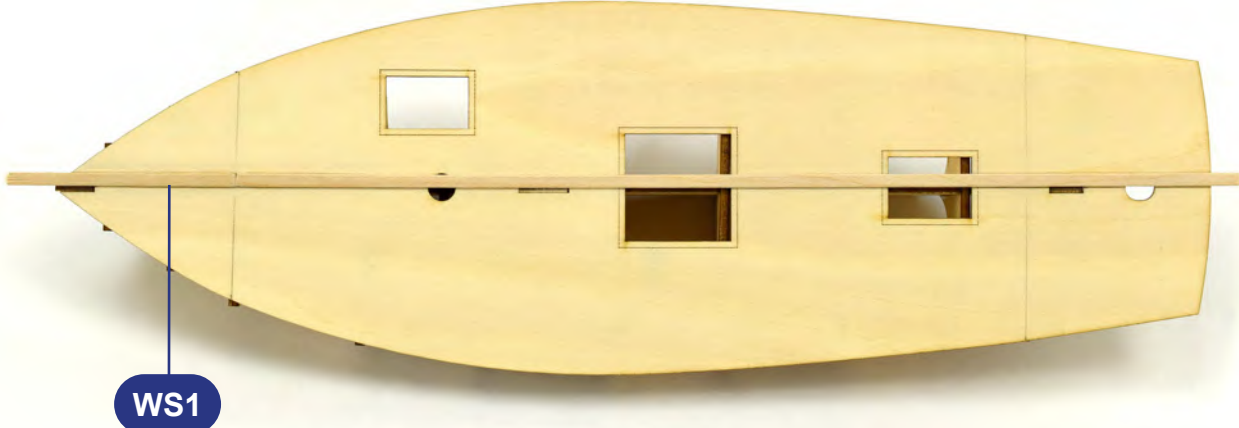

WS1

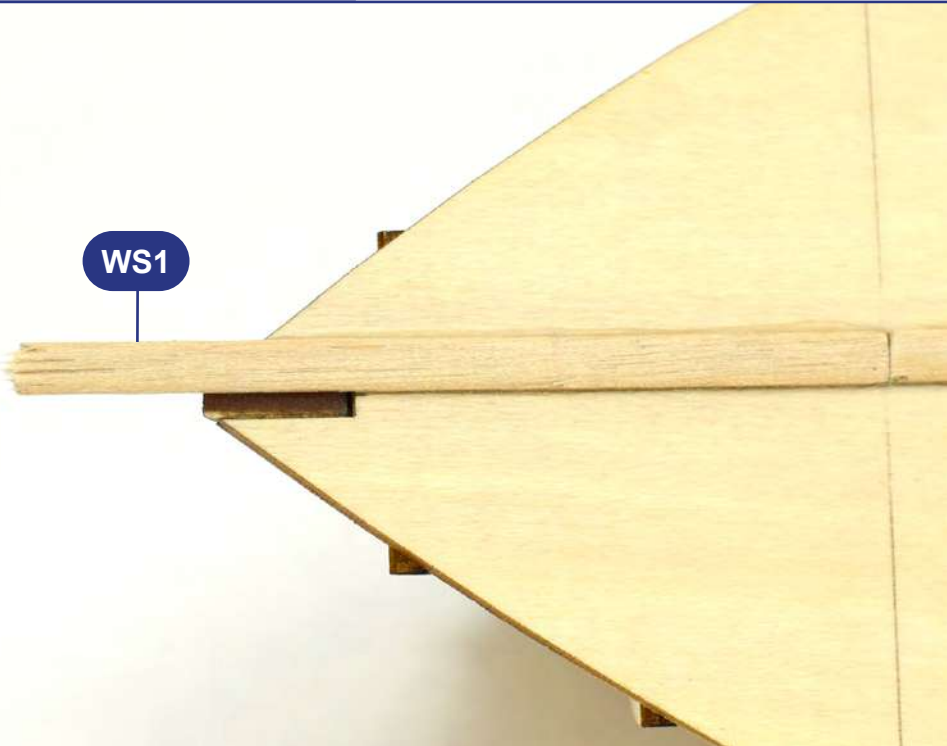

WS1

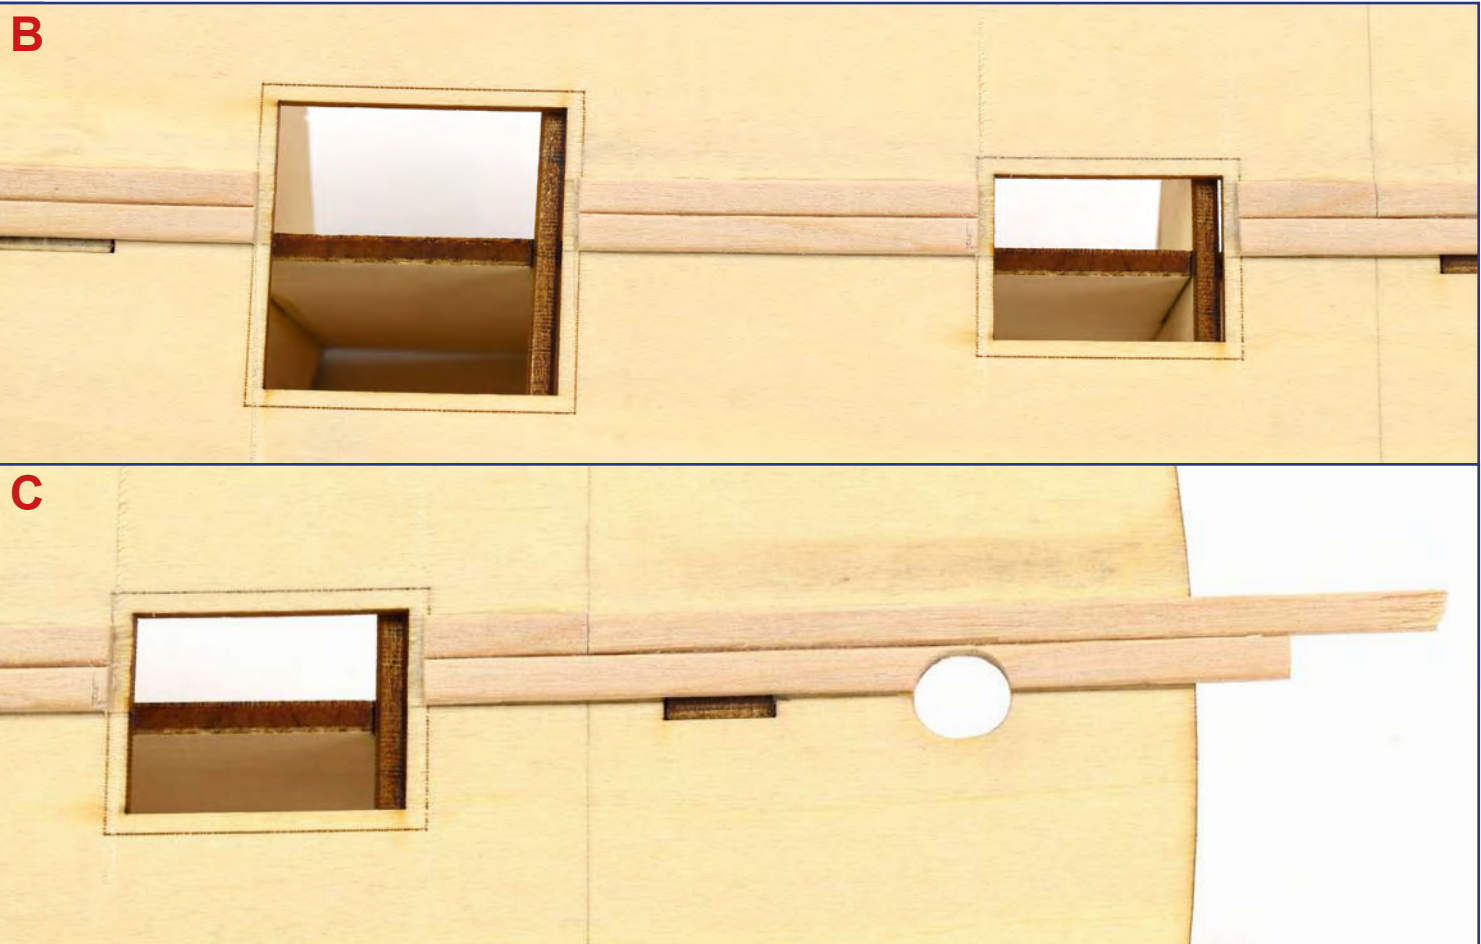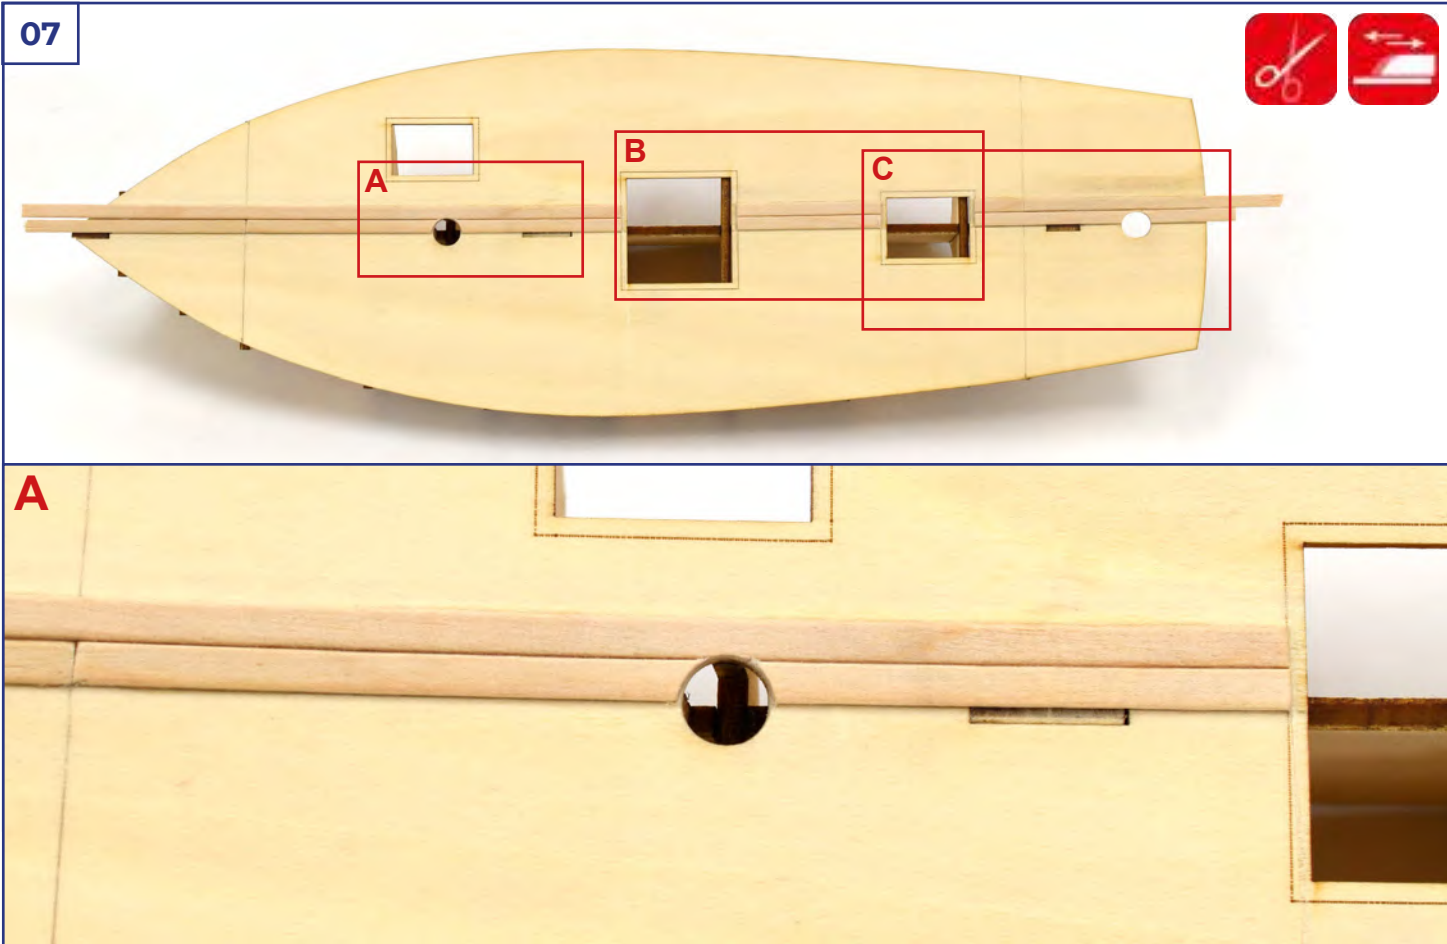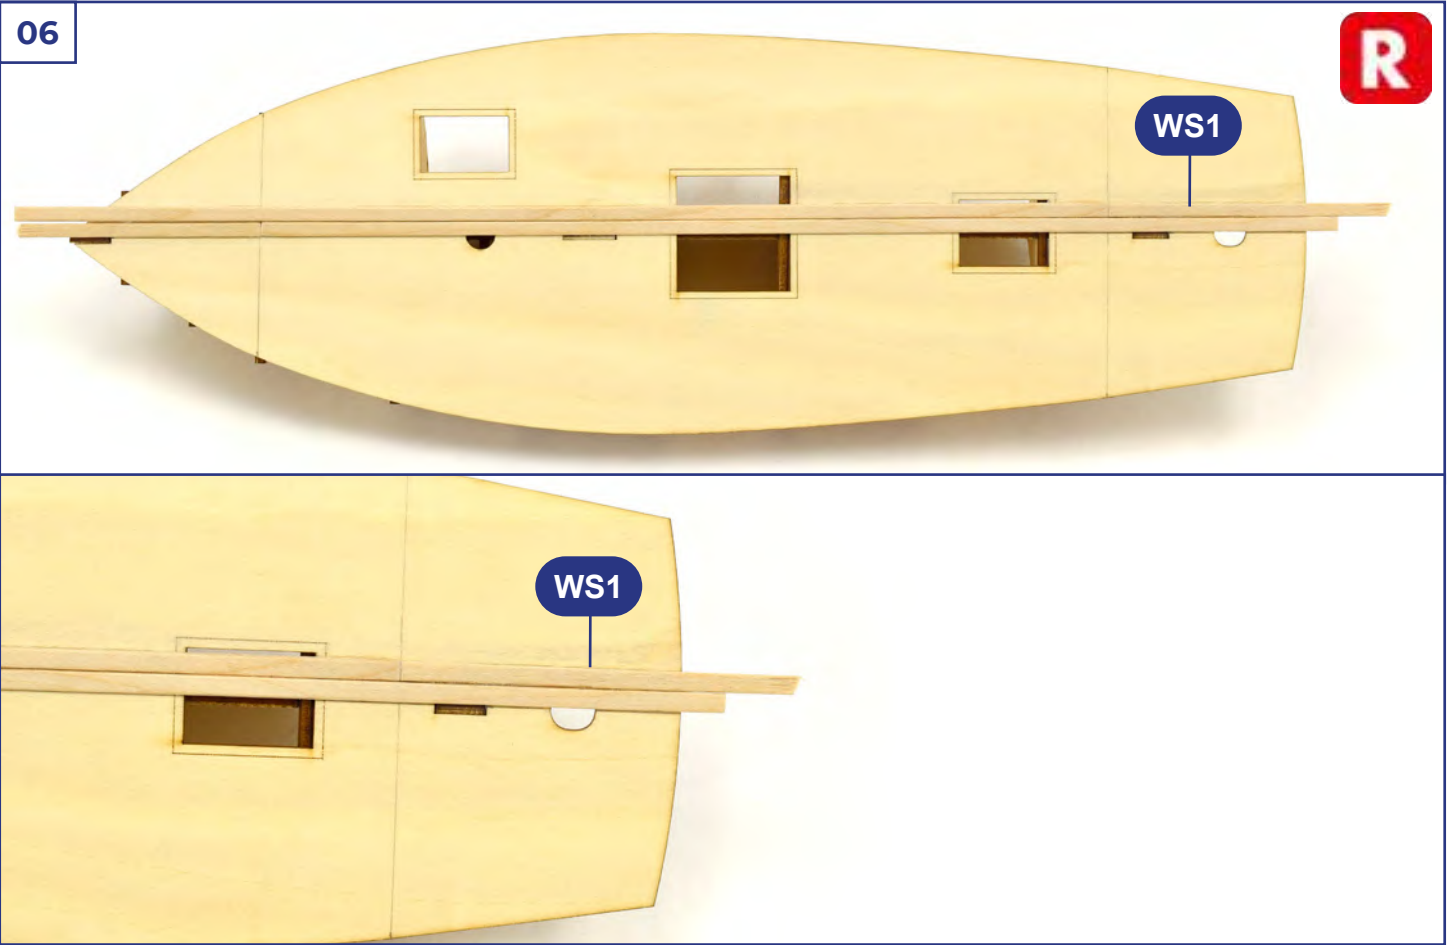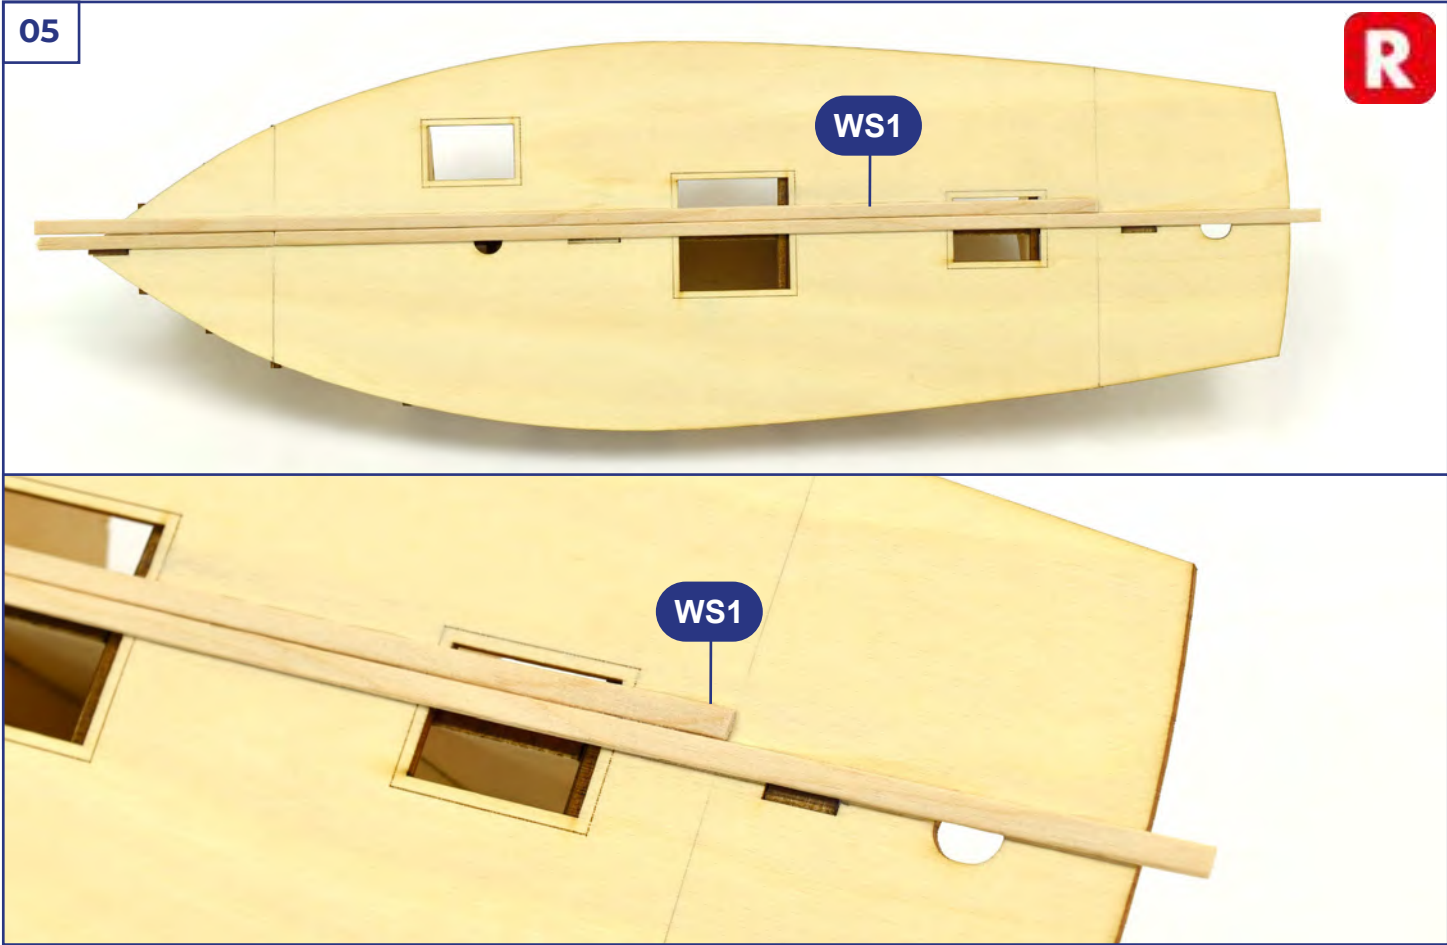









11






05



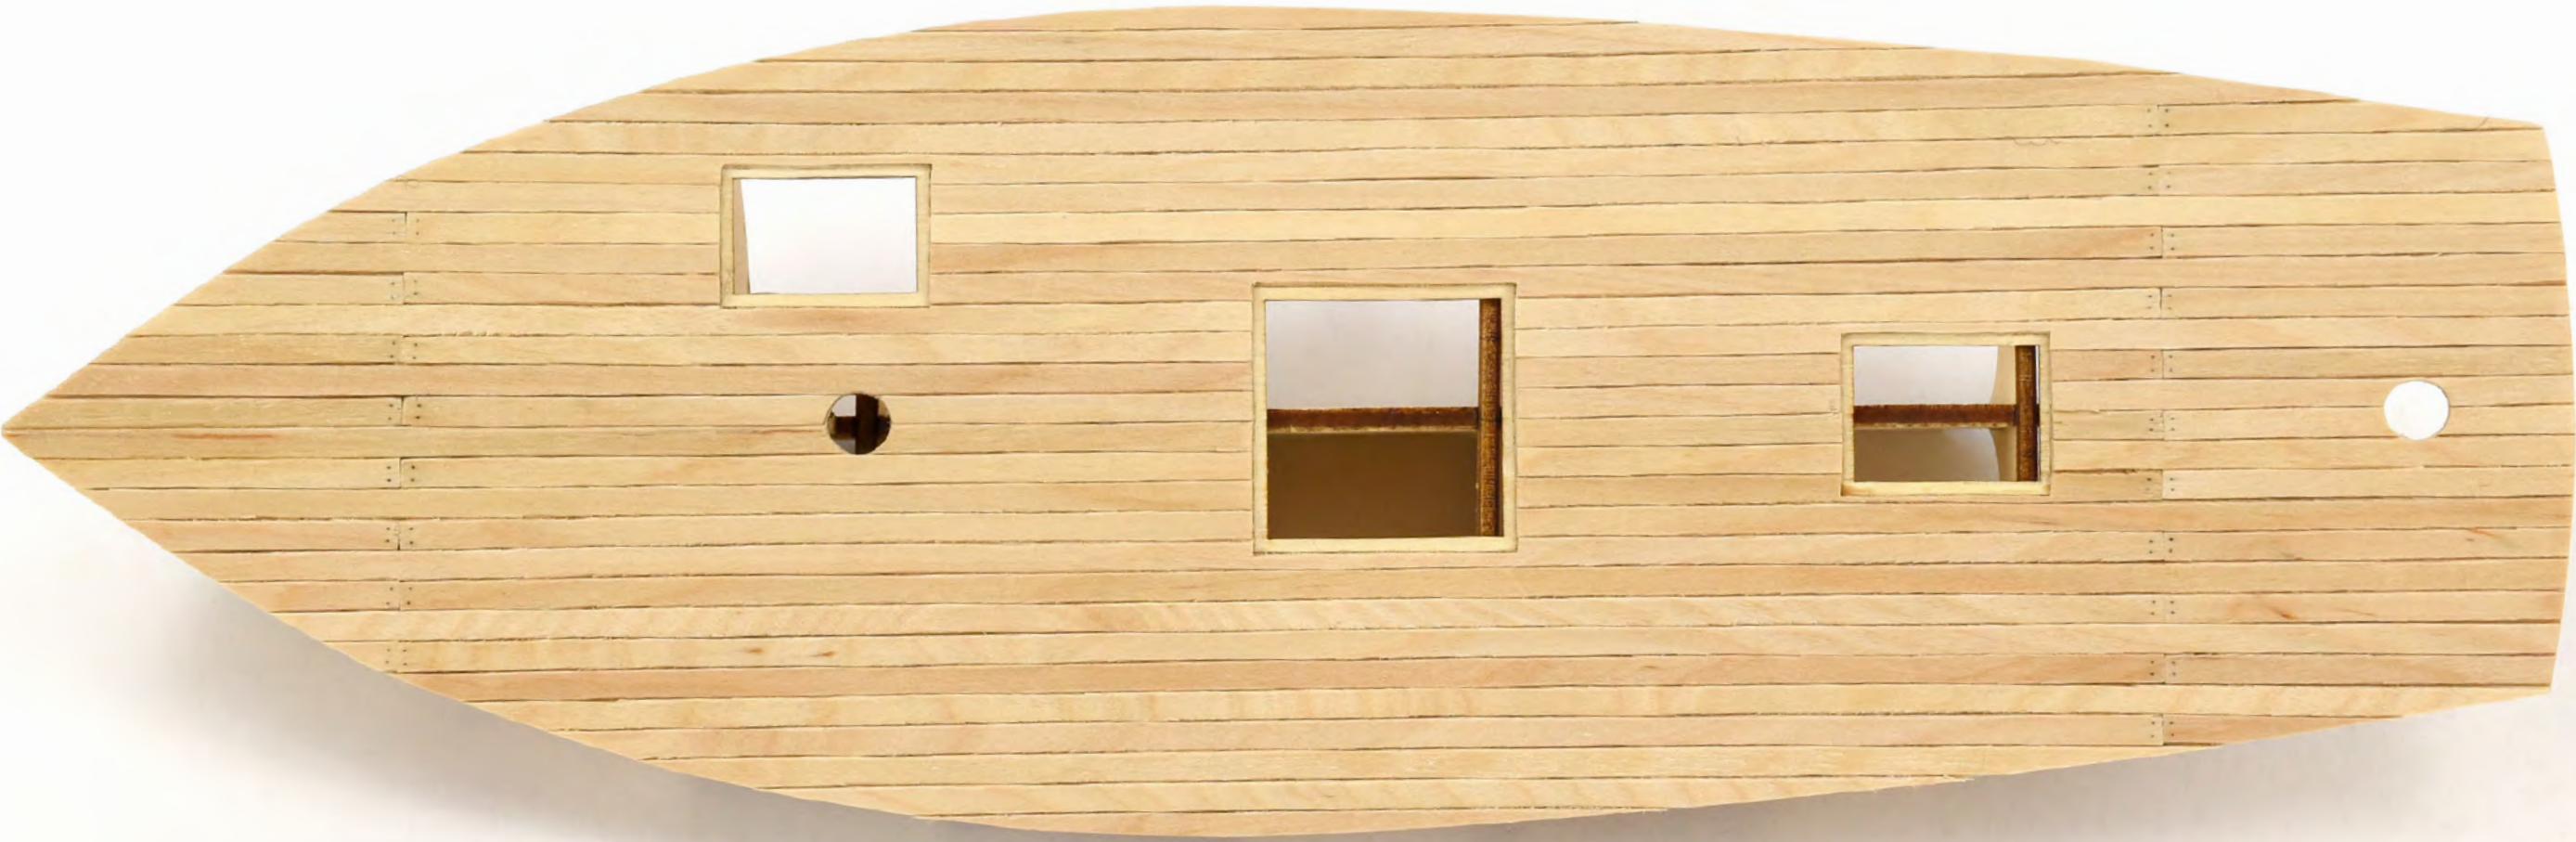



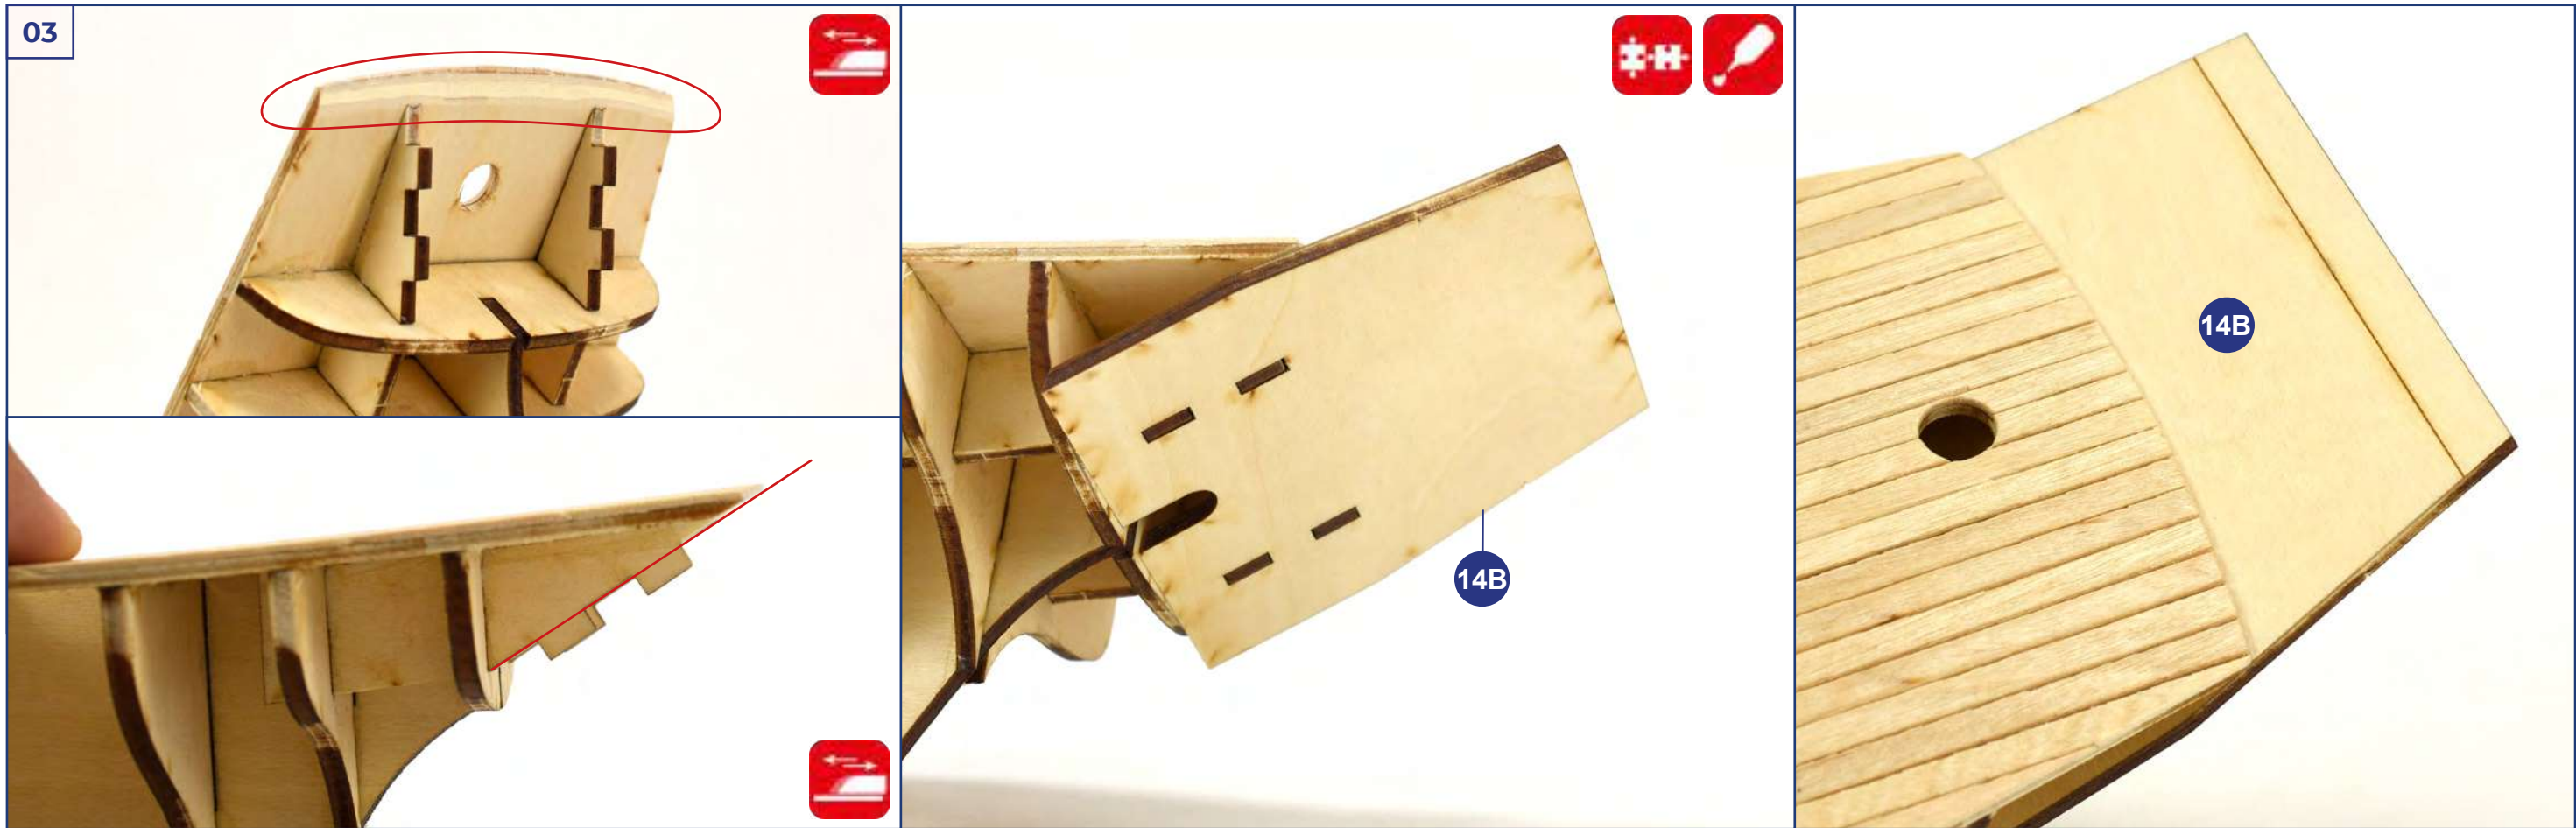
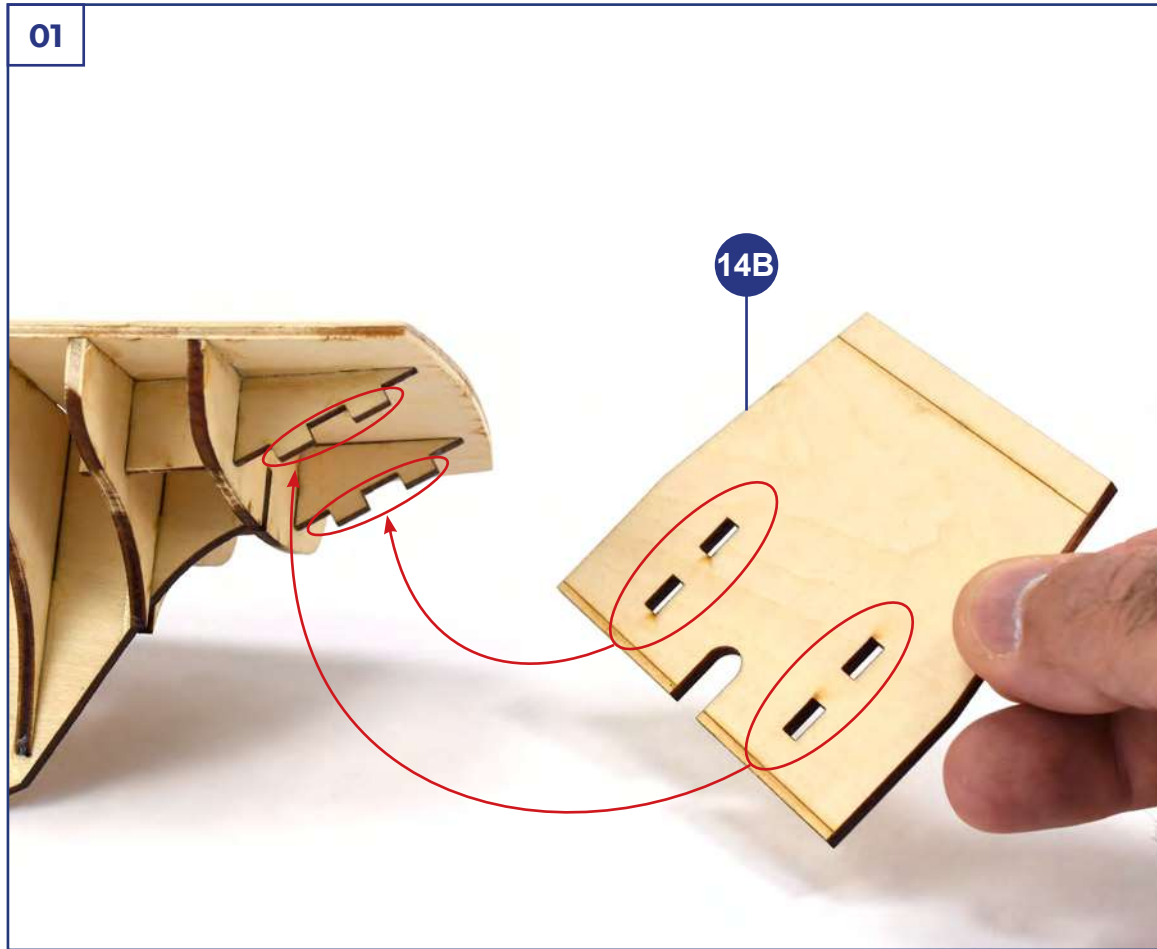


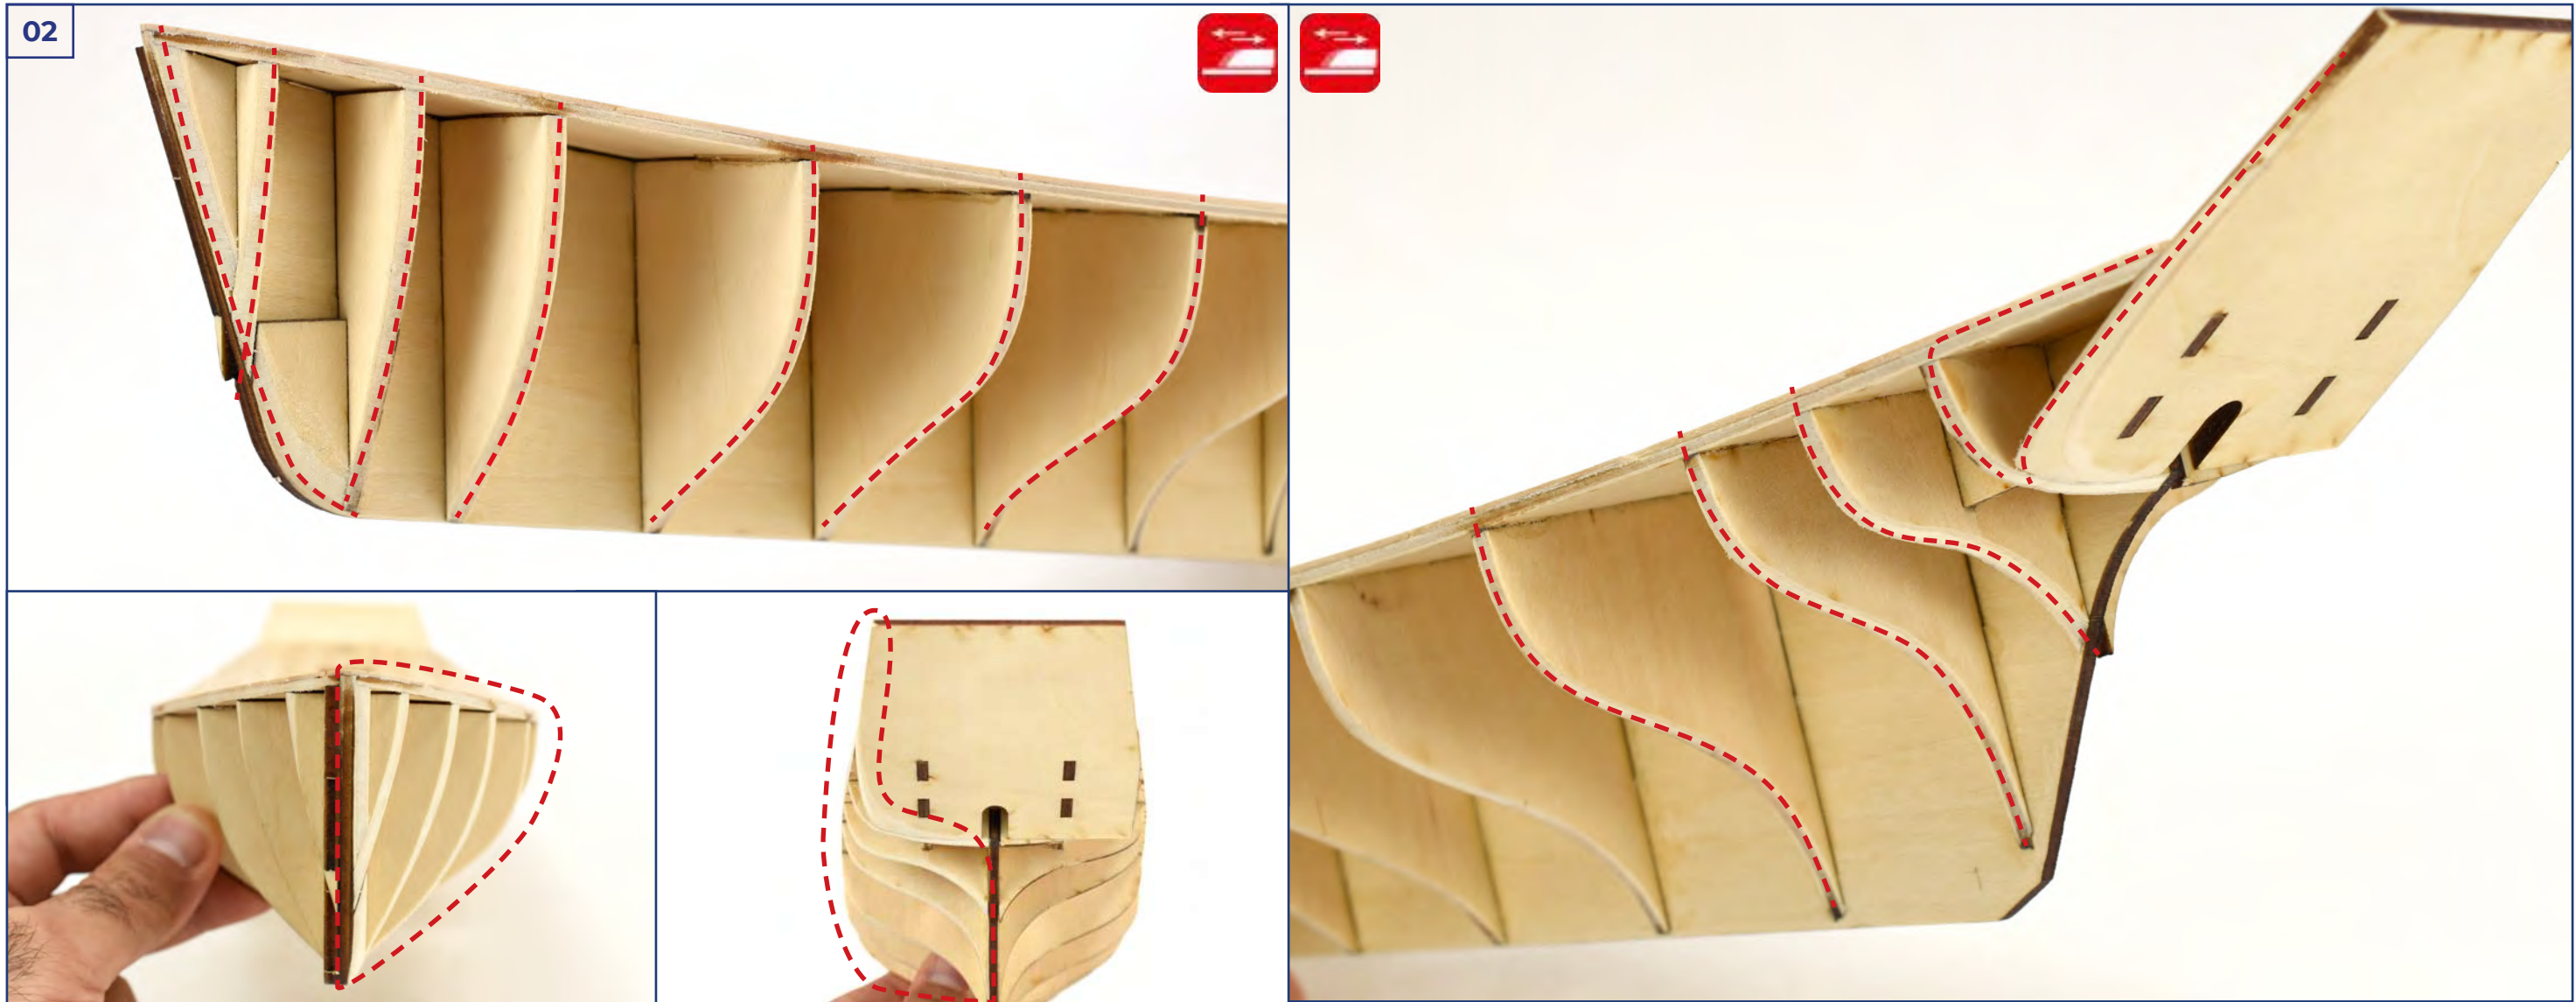


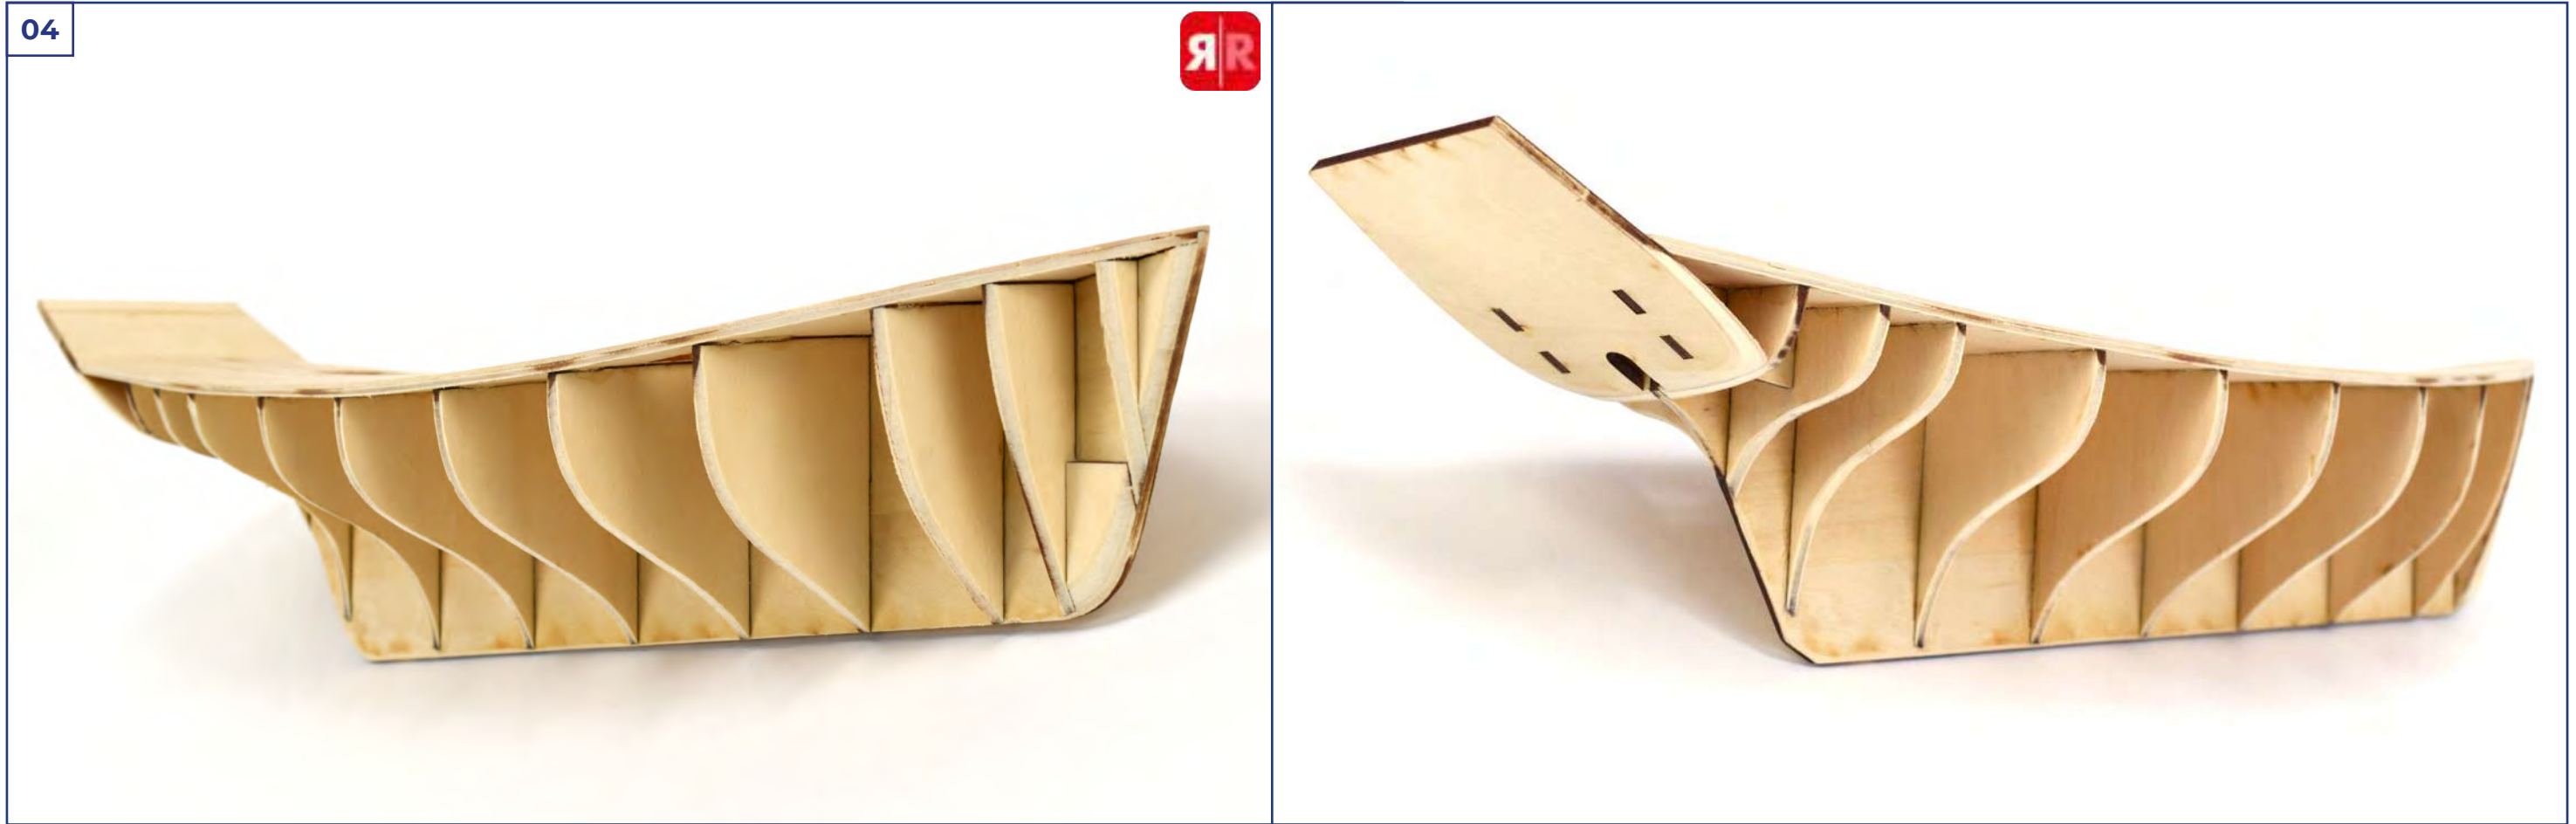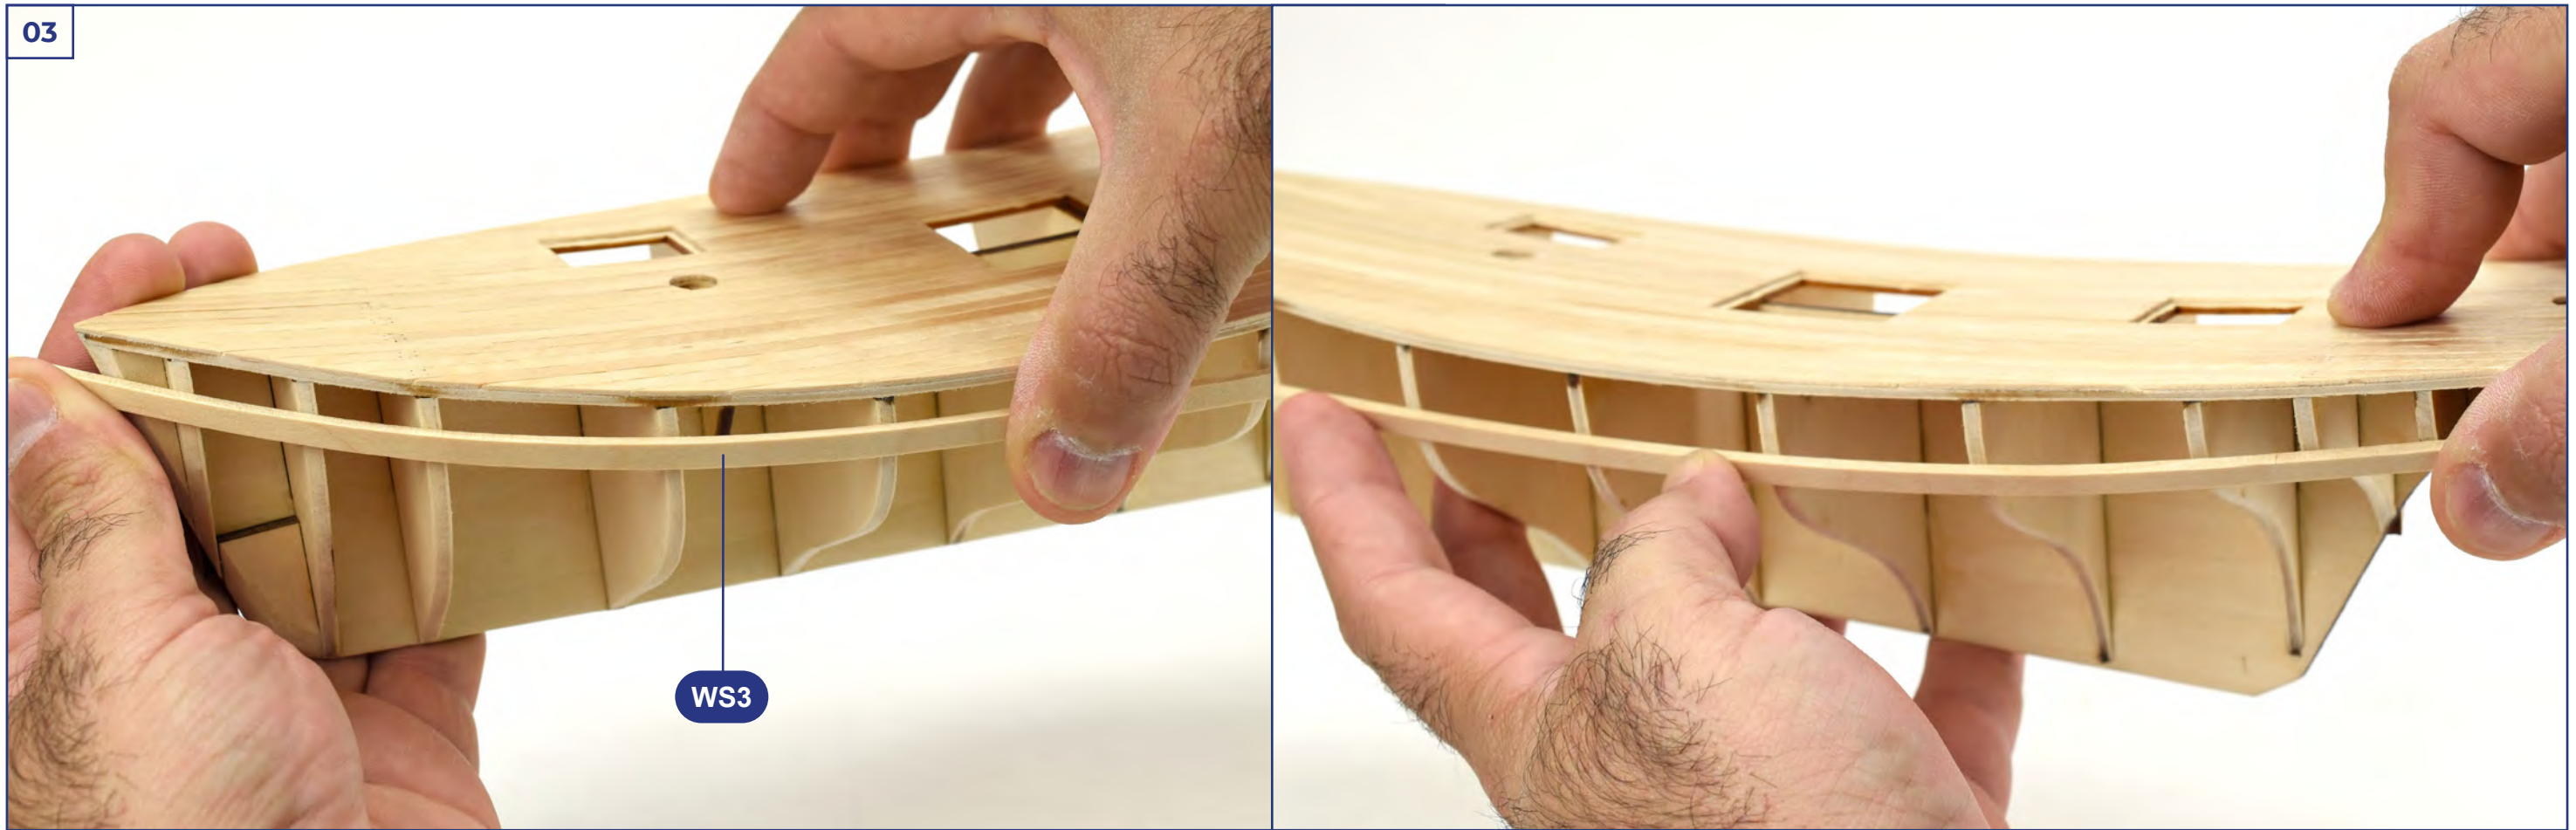

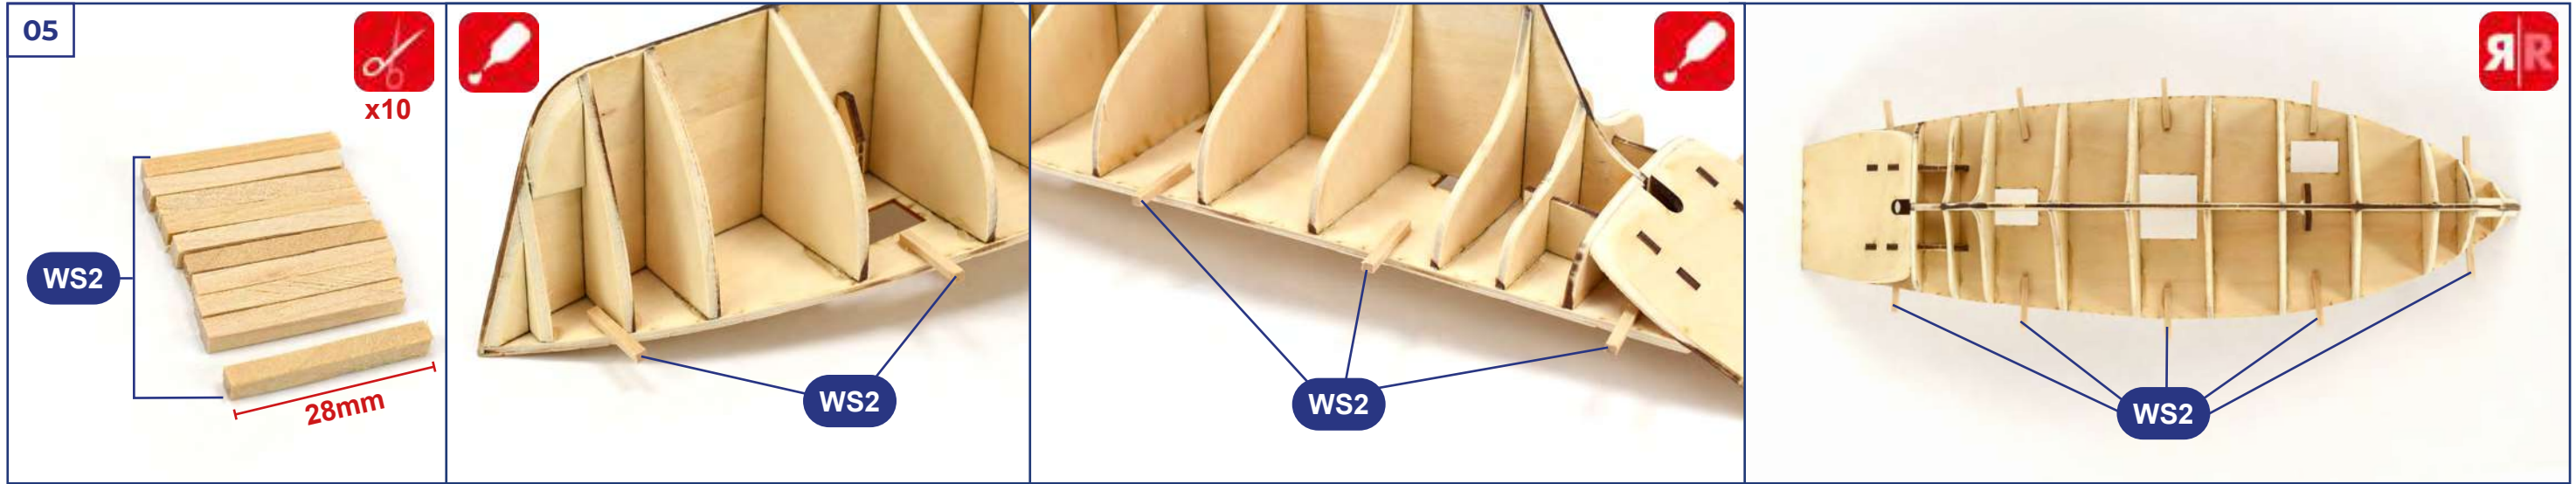

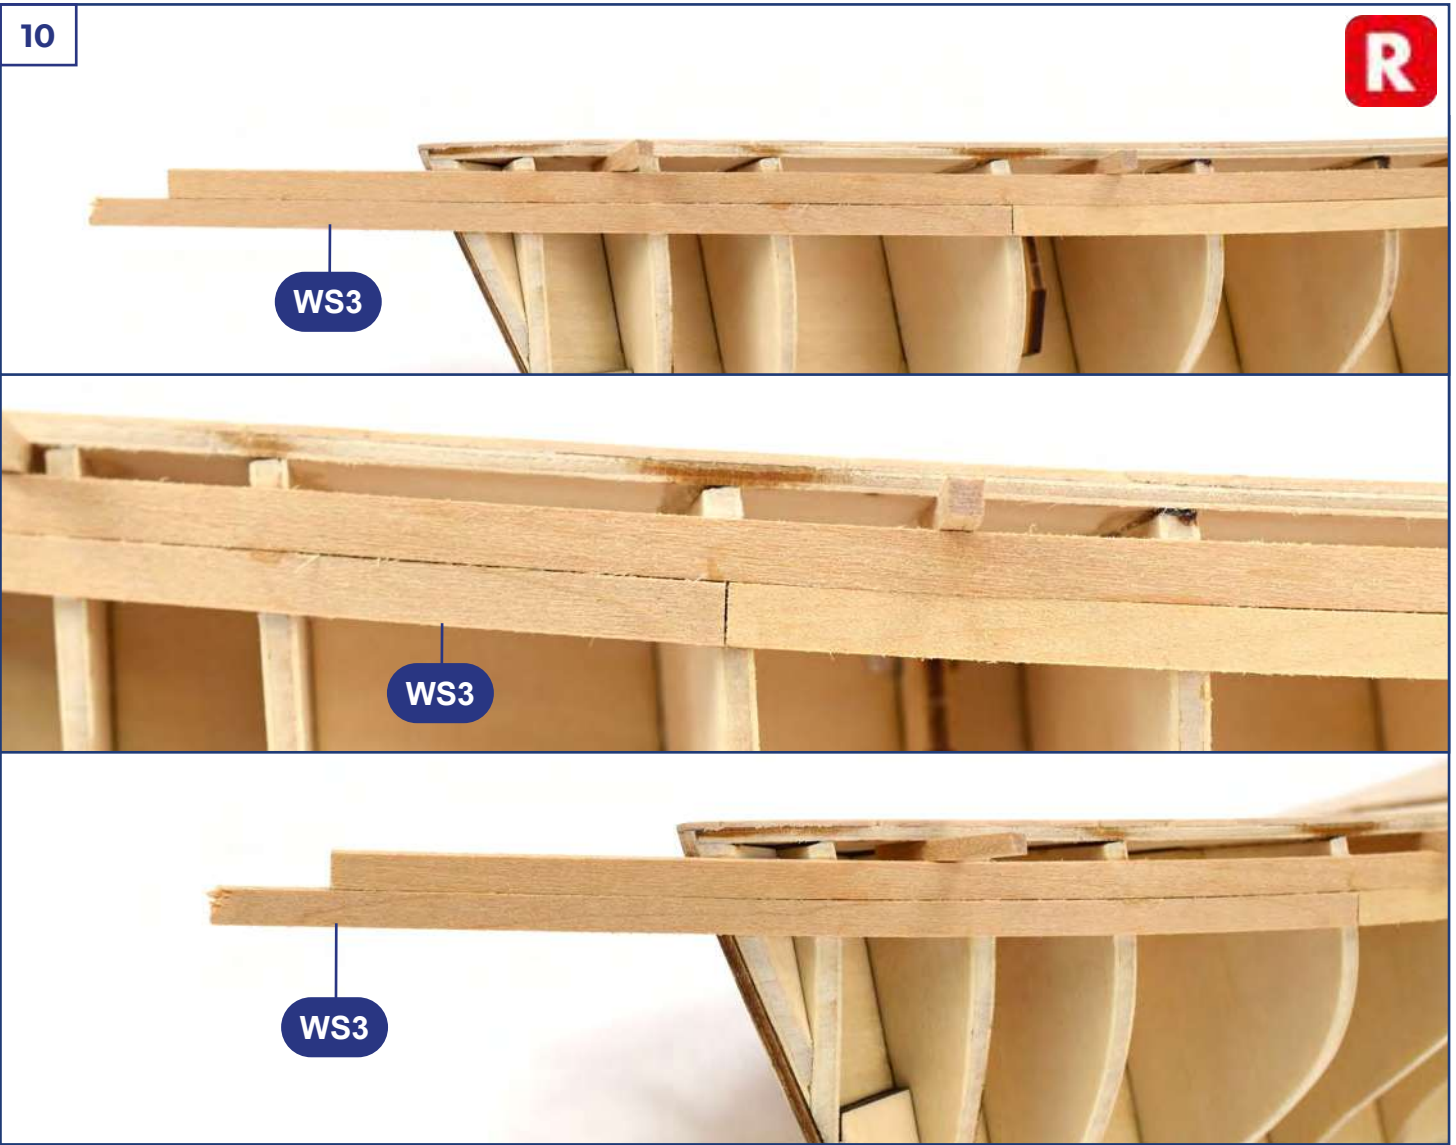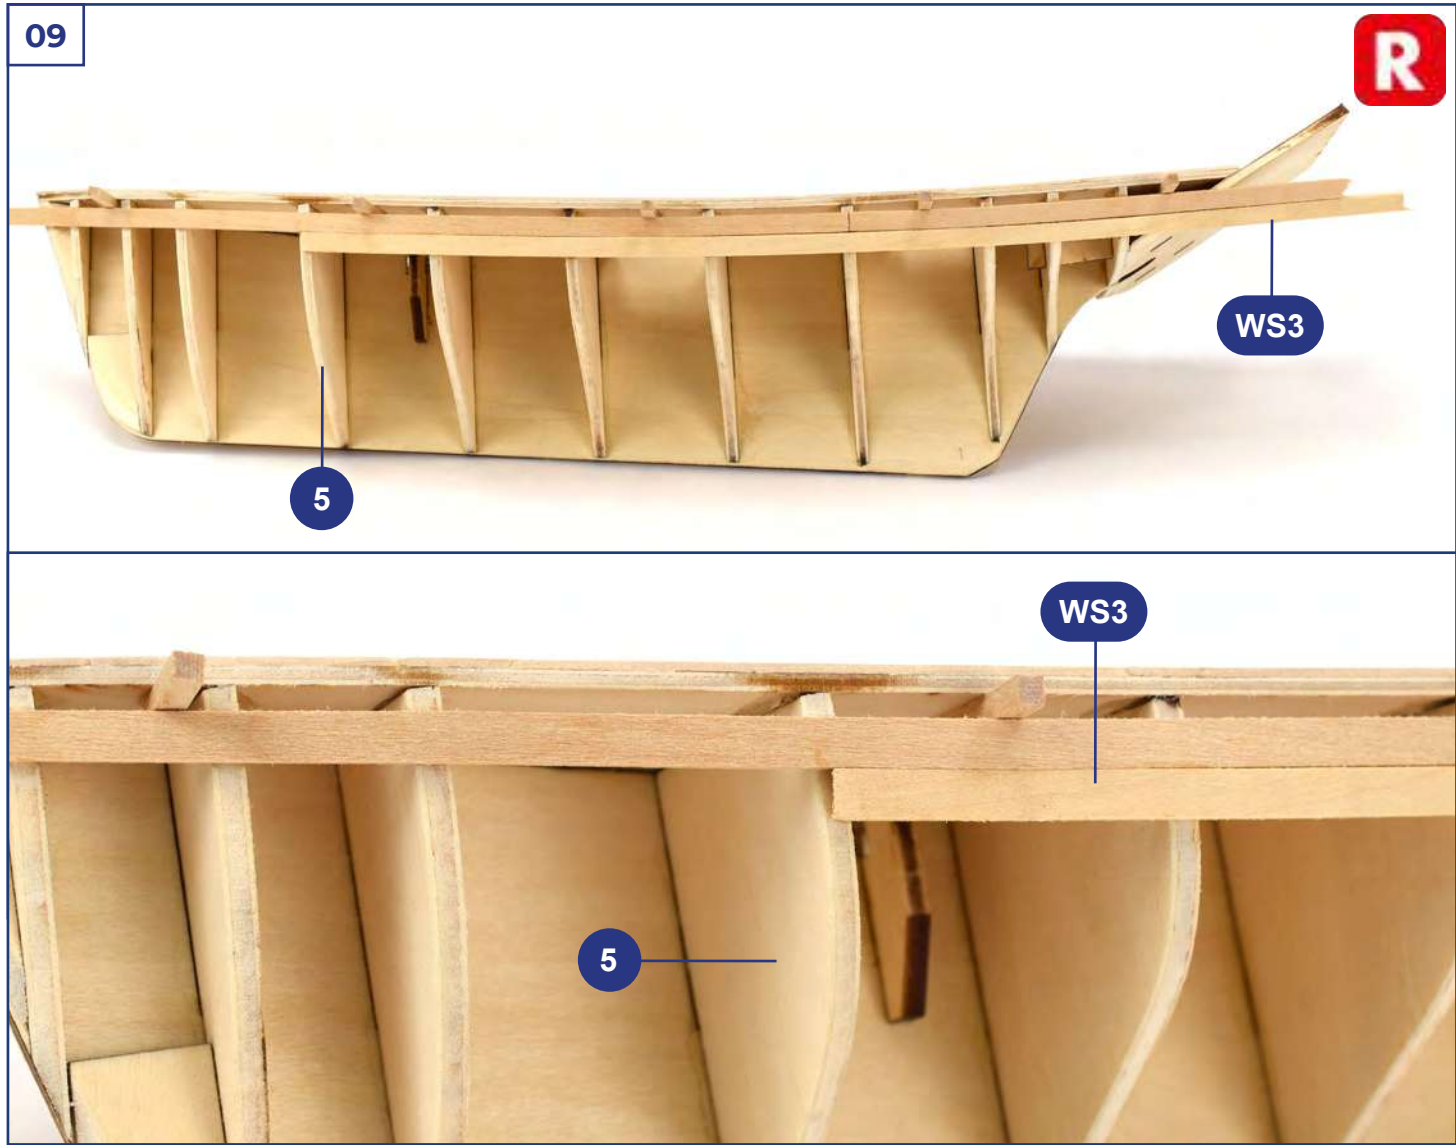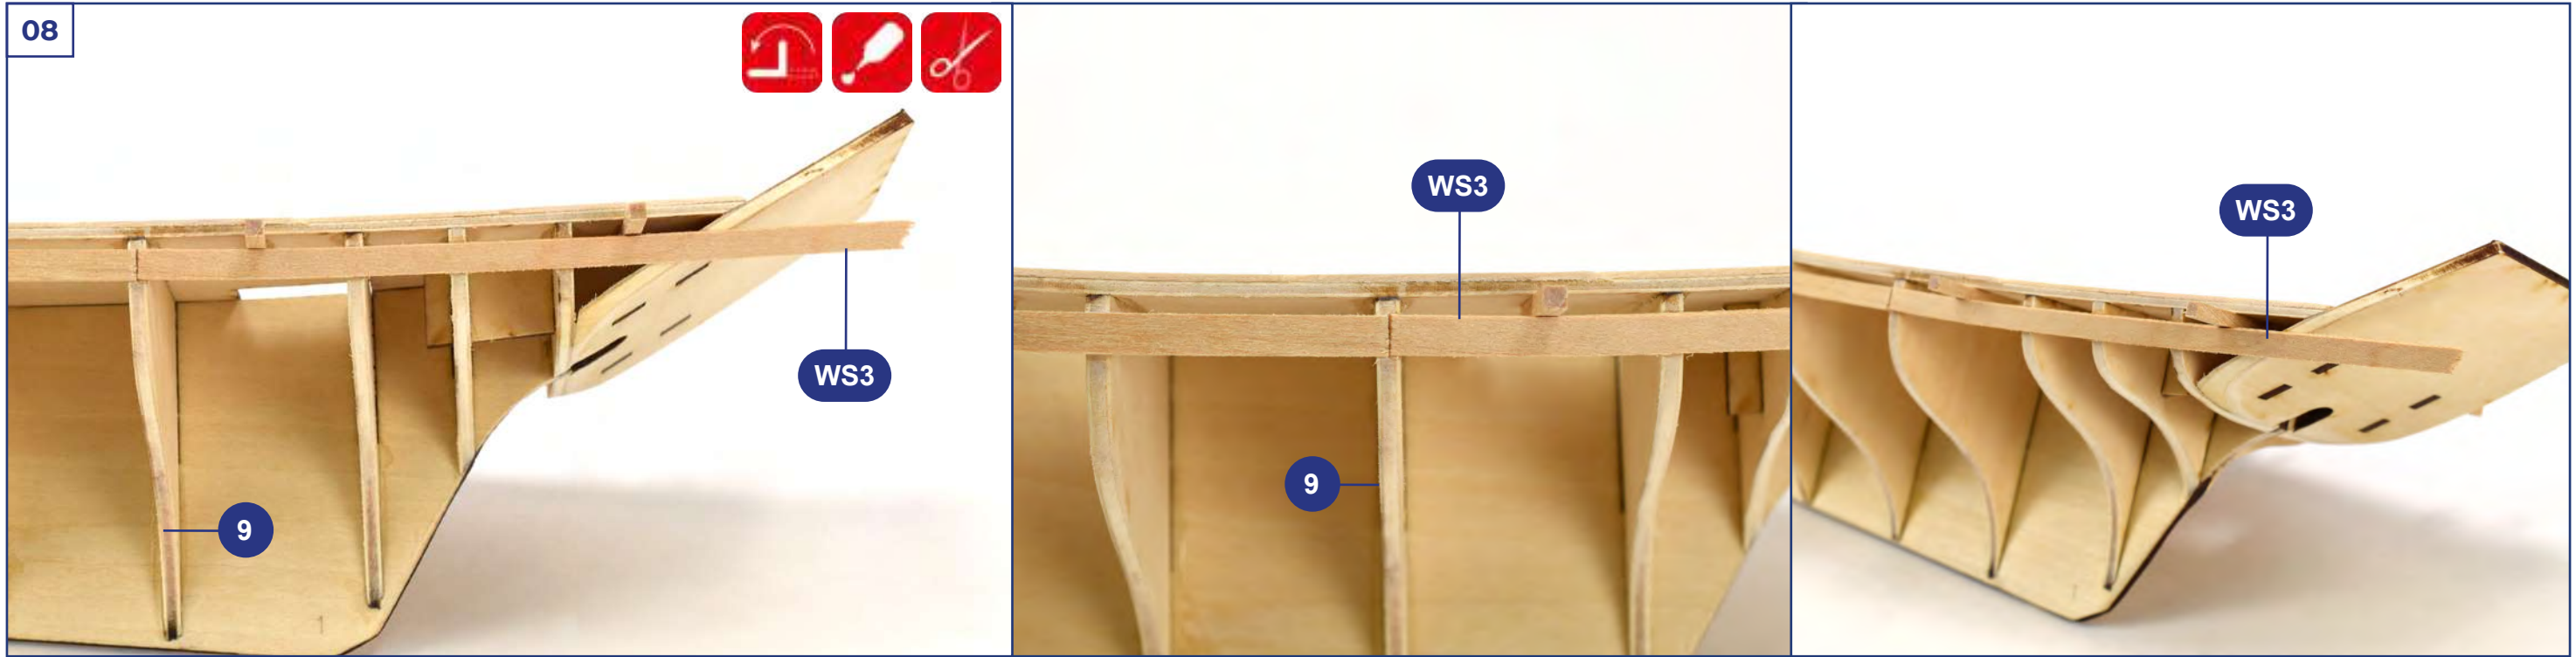

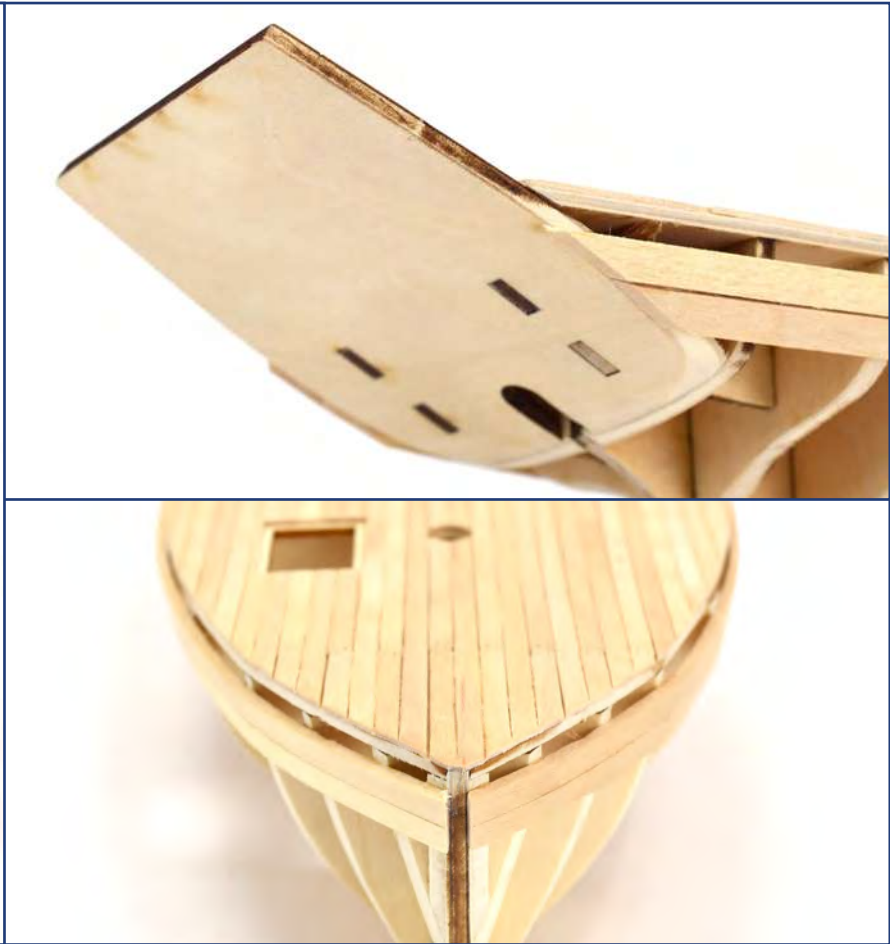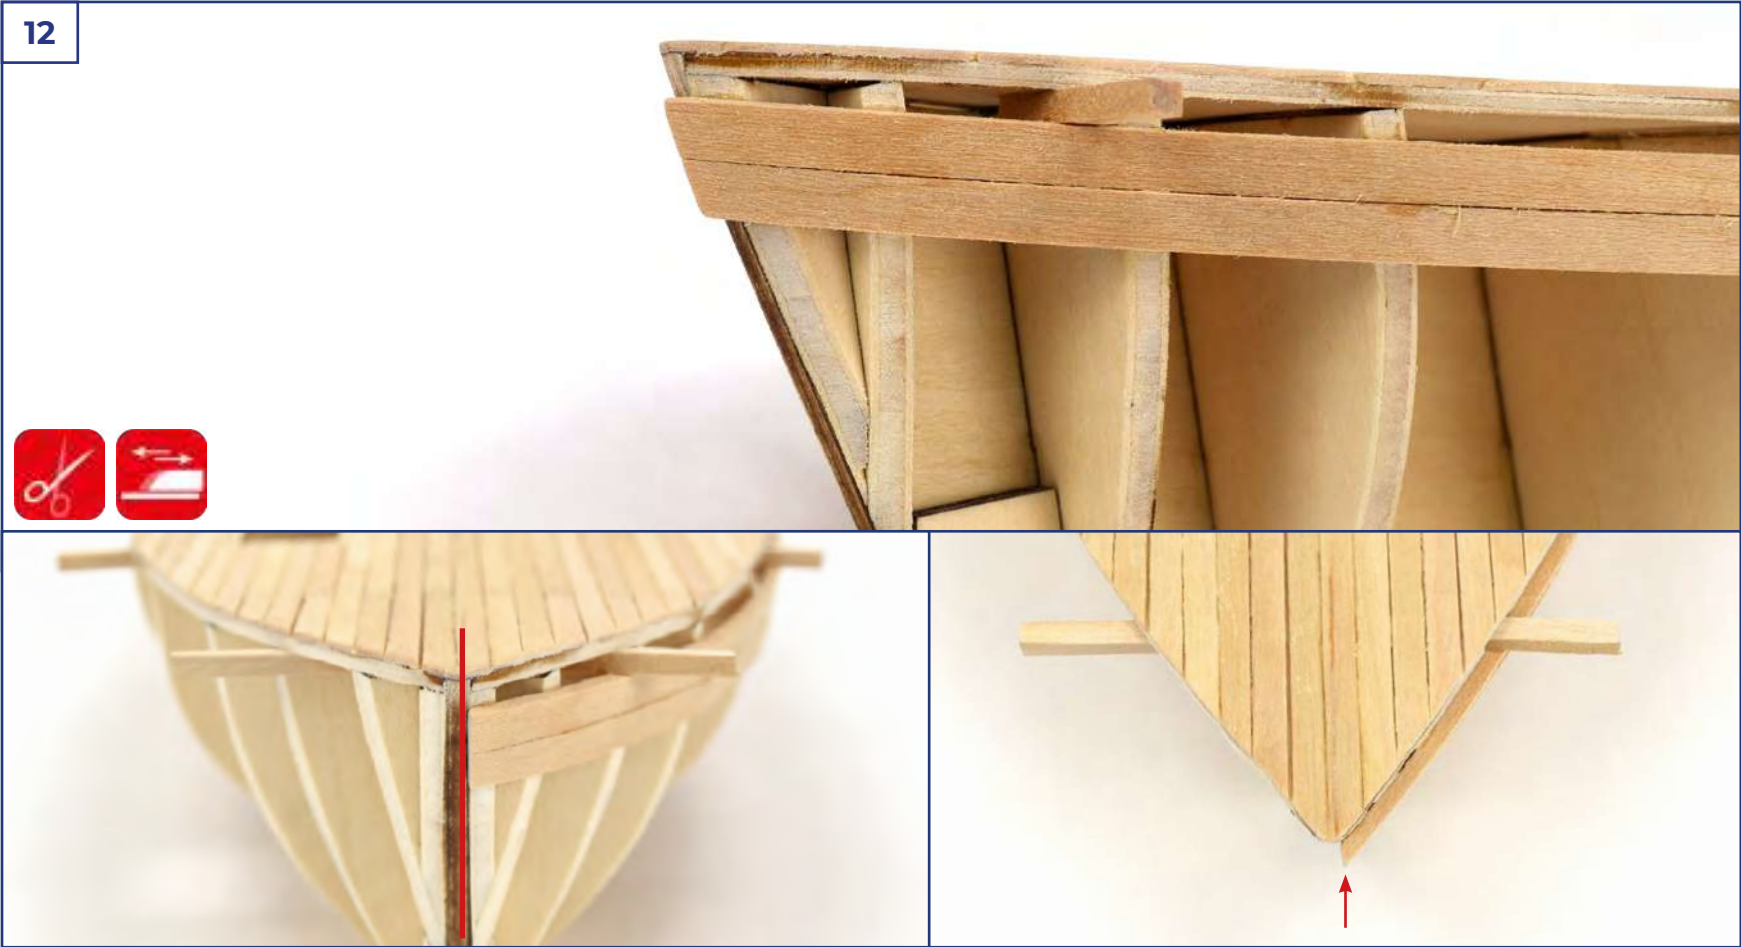
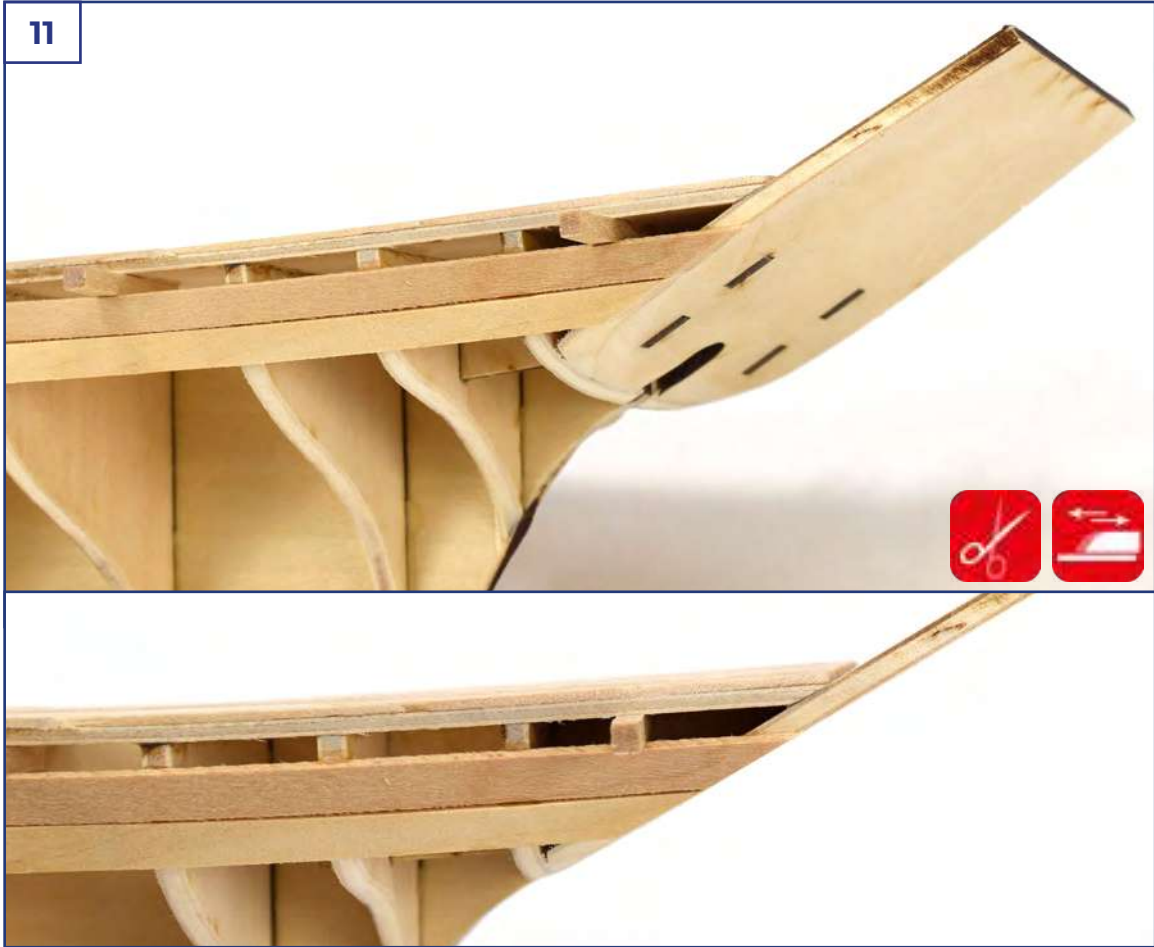


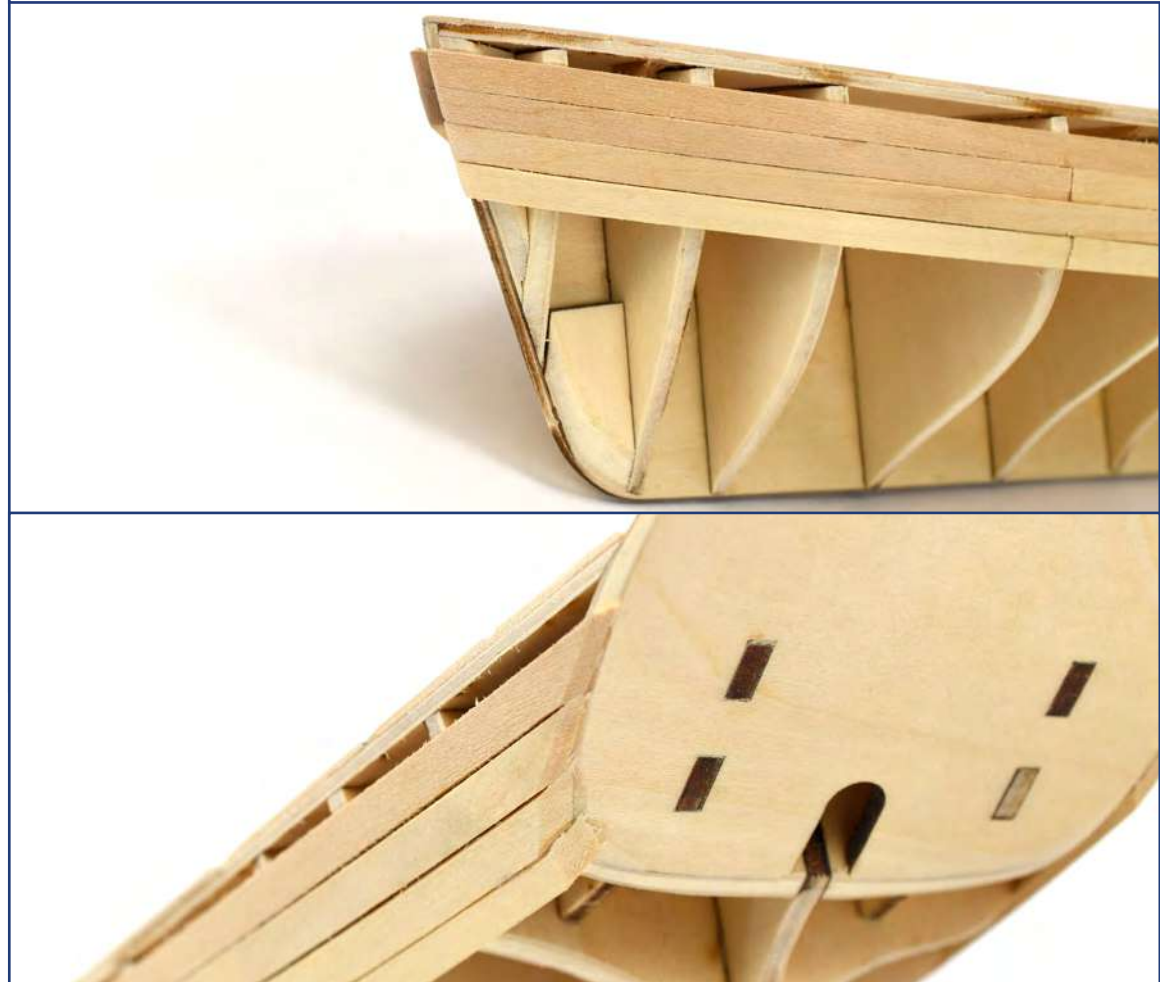


15







16

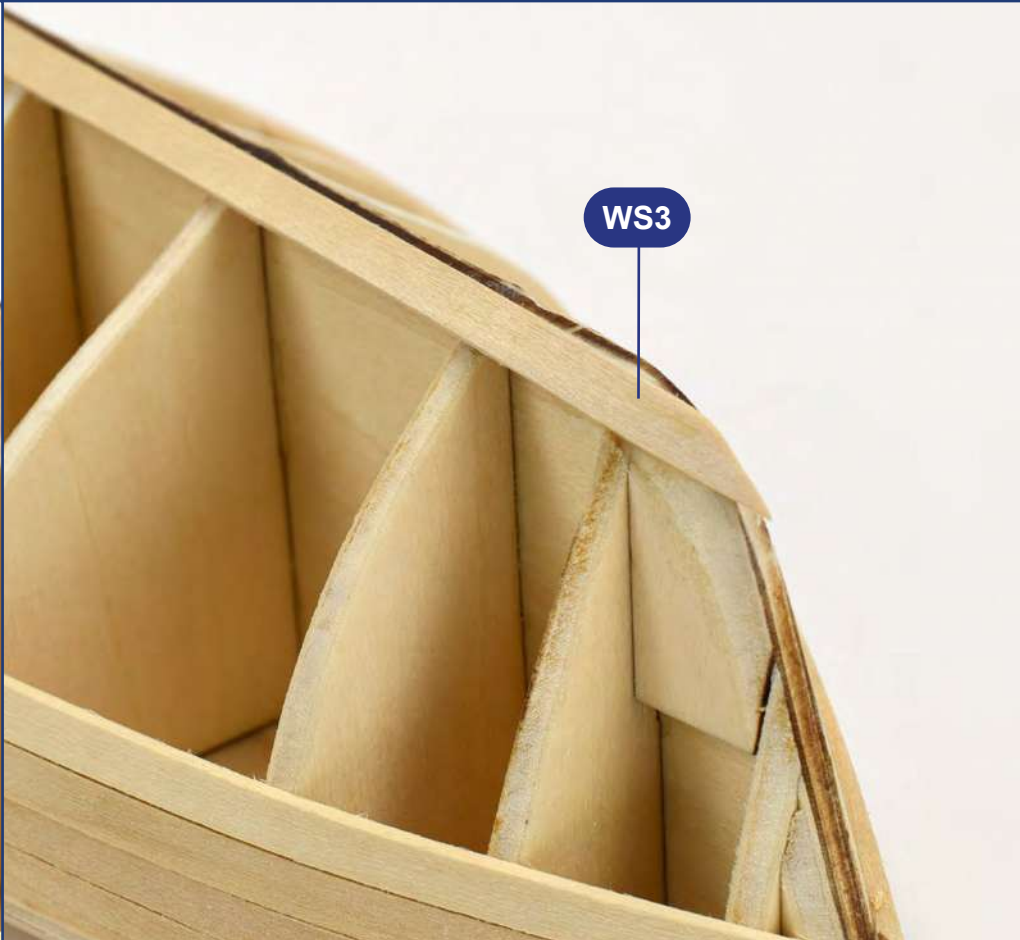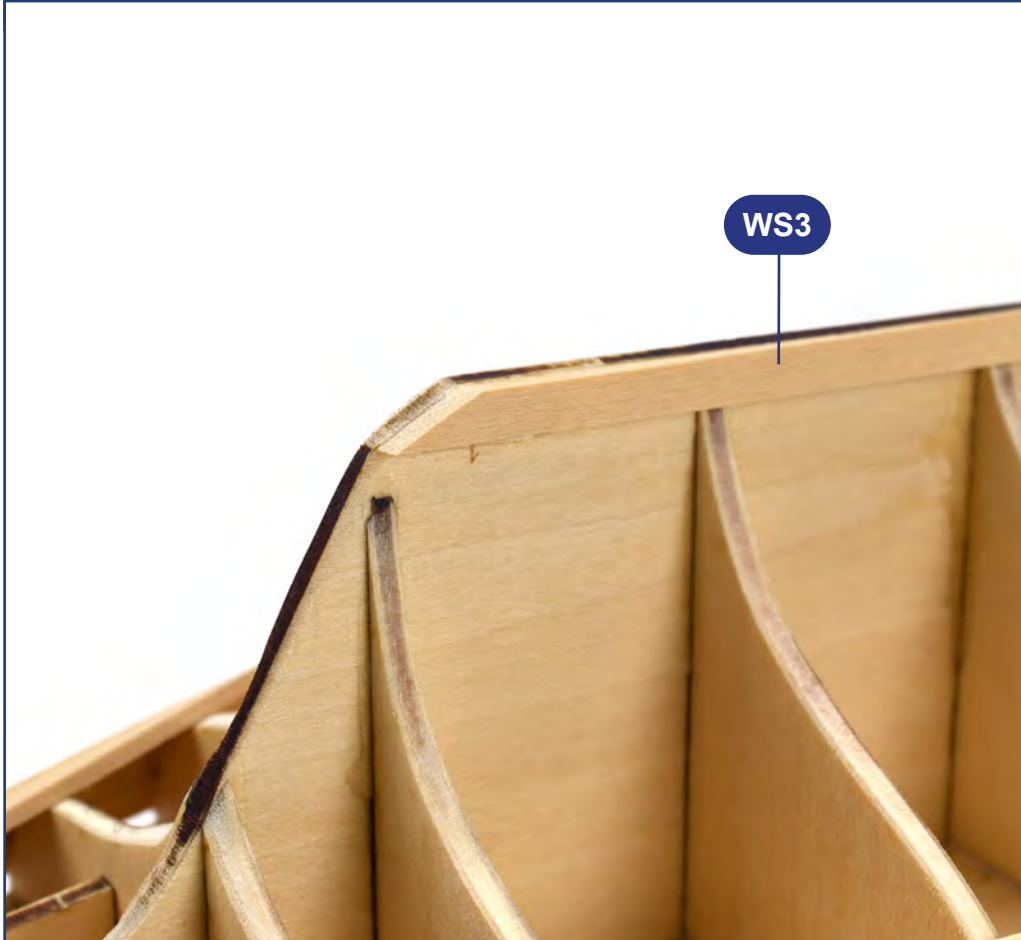




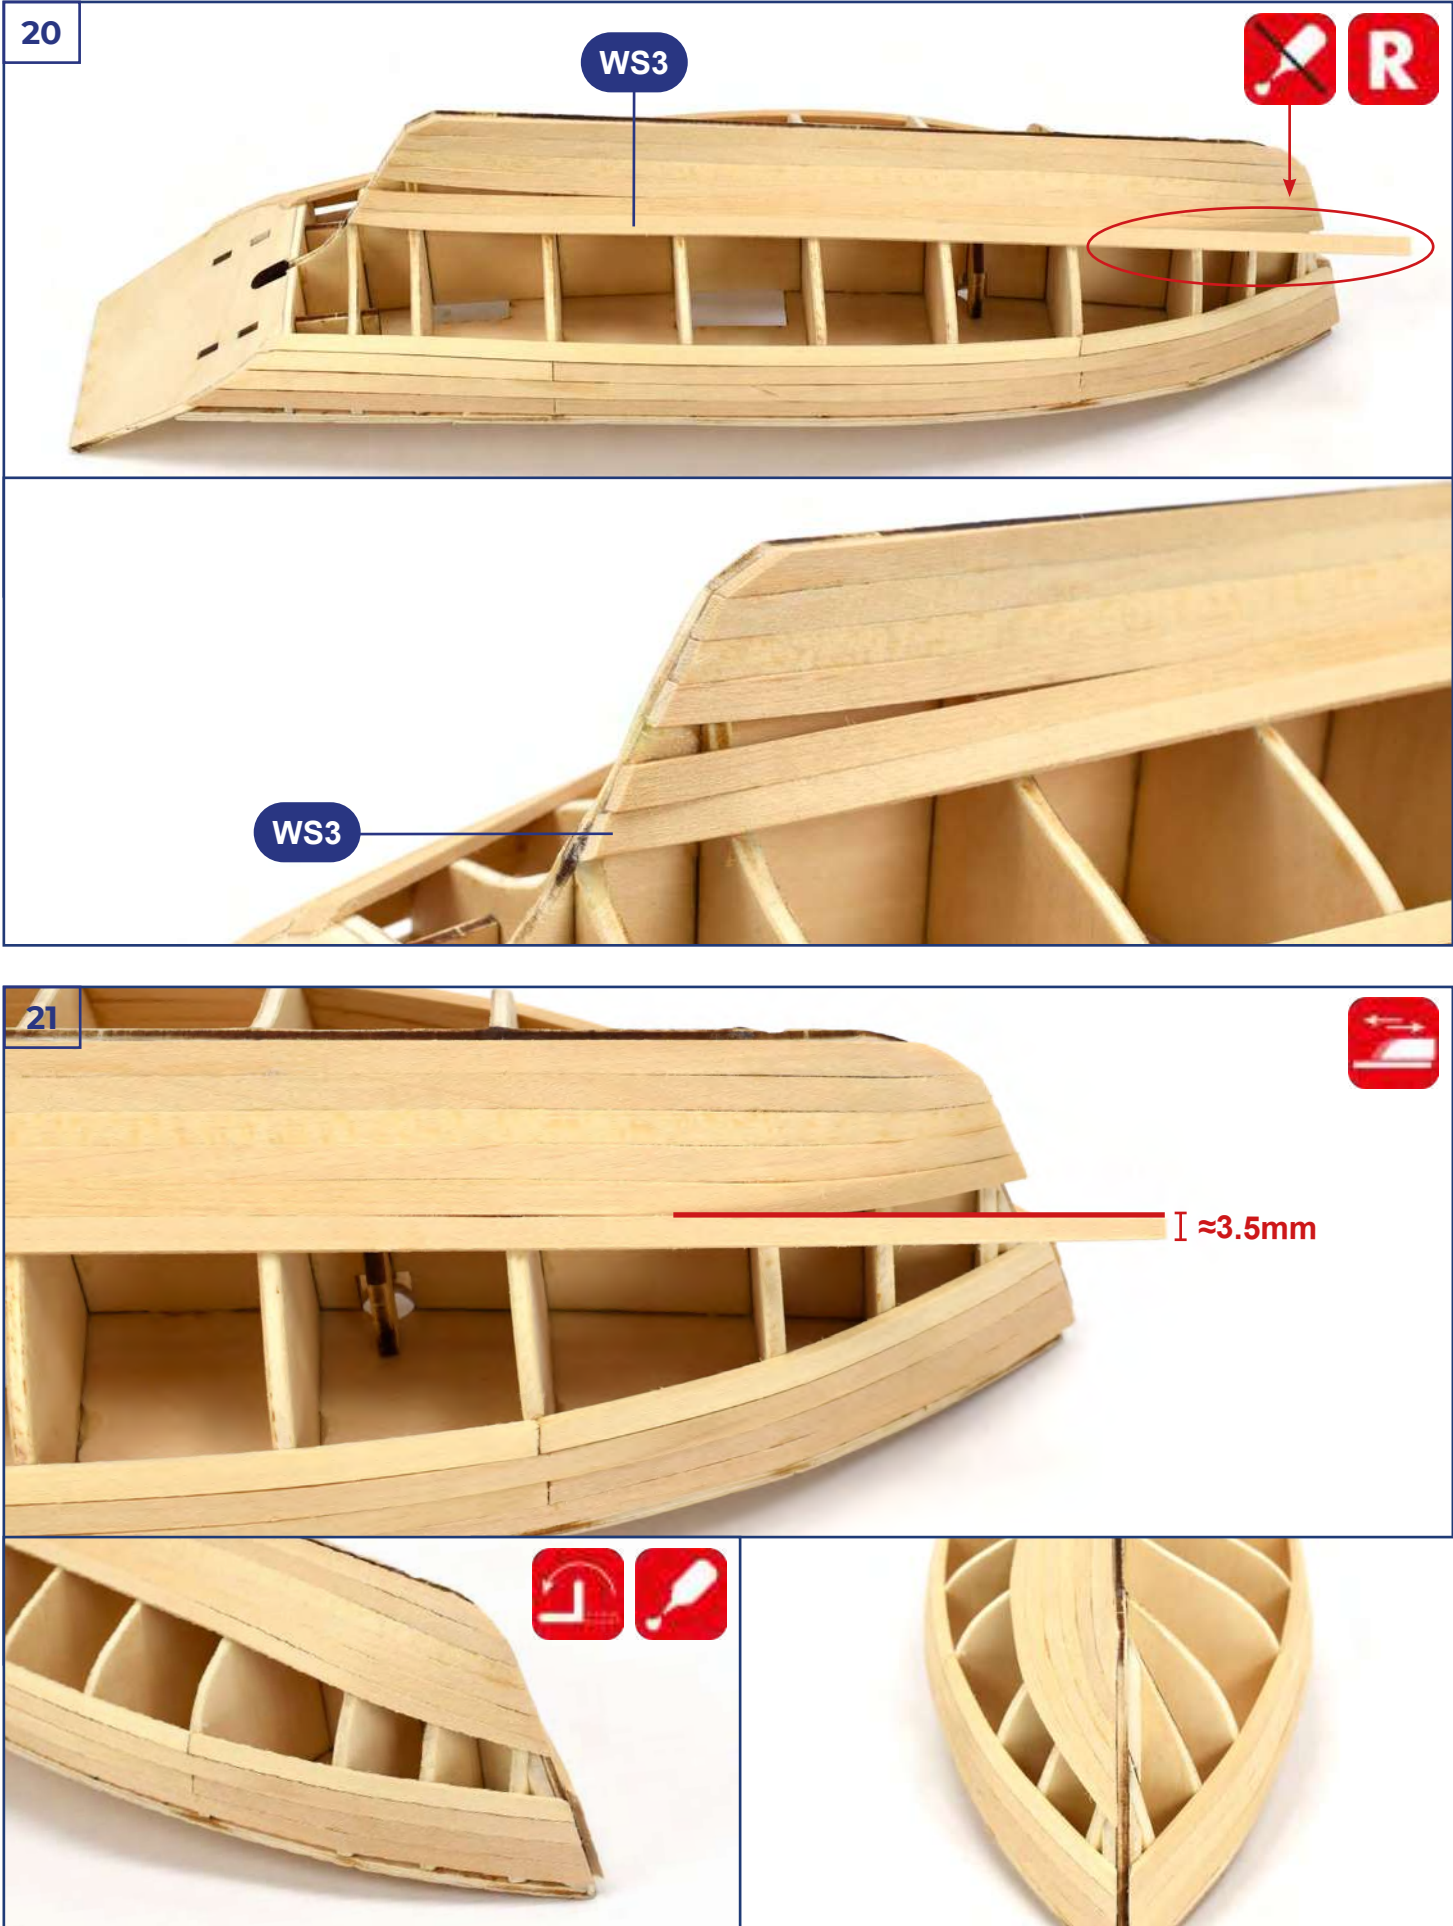


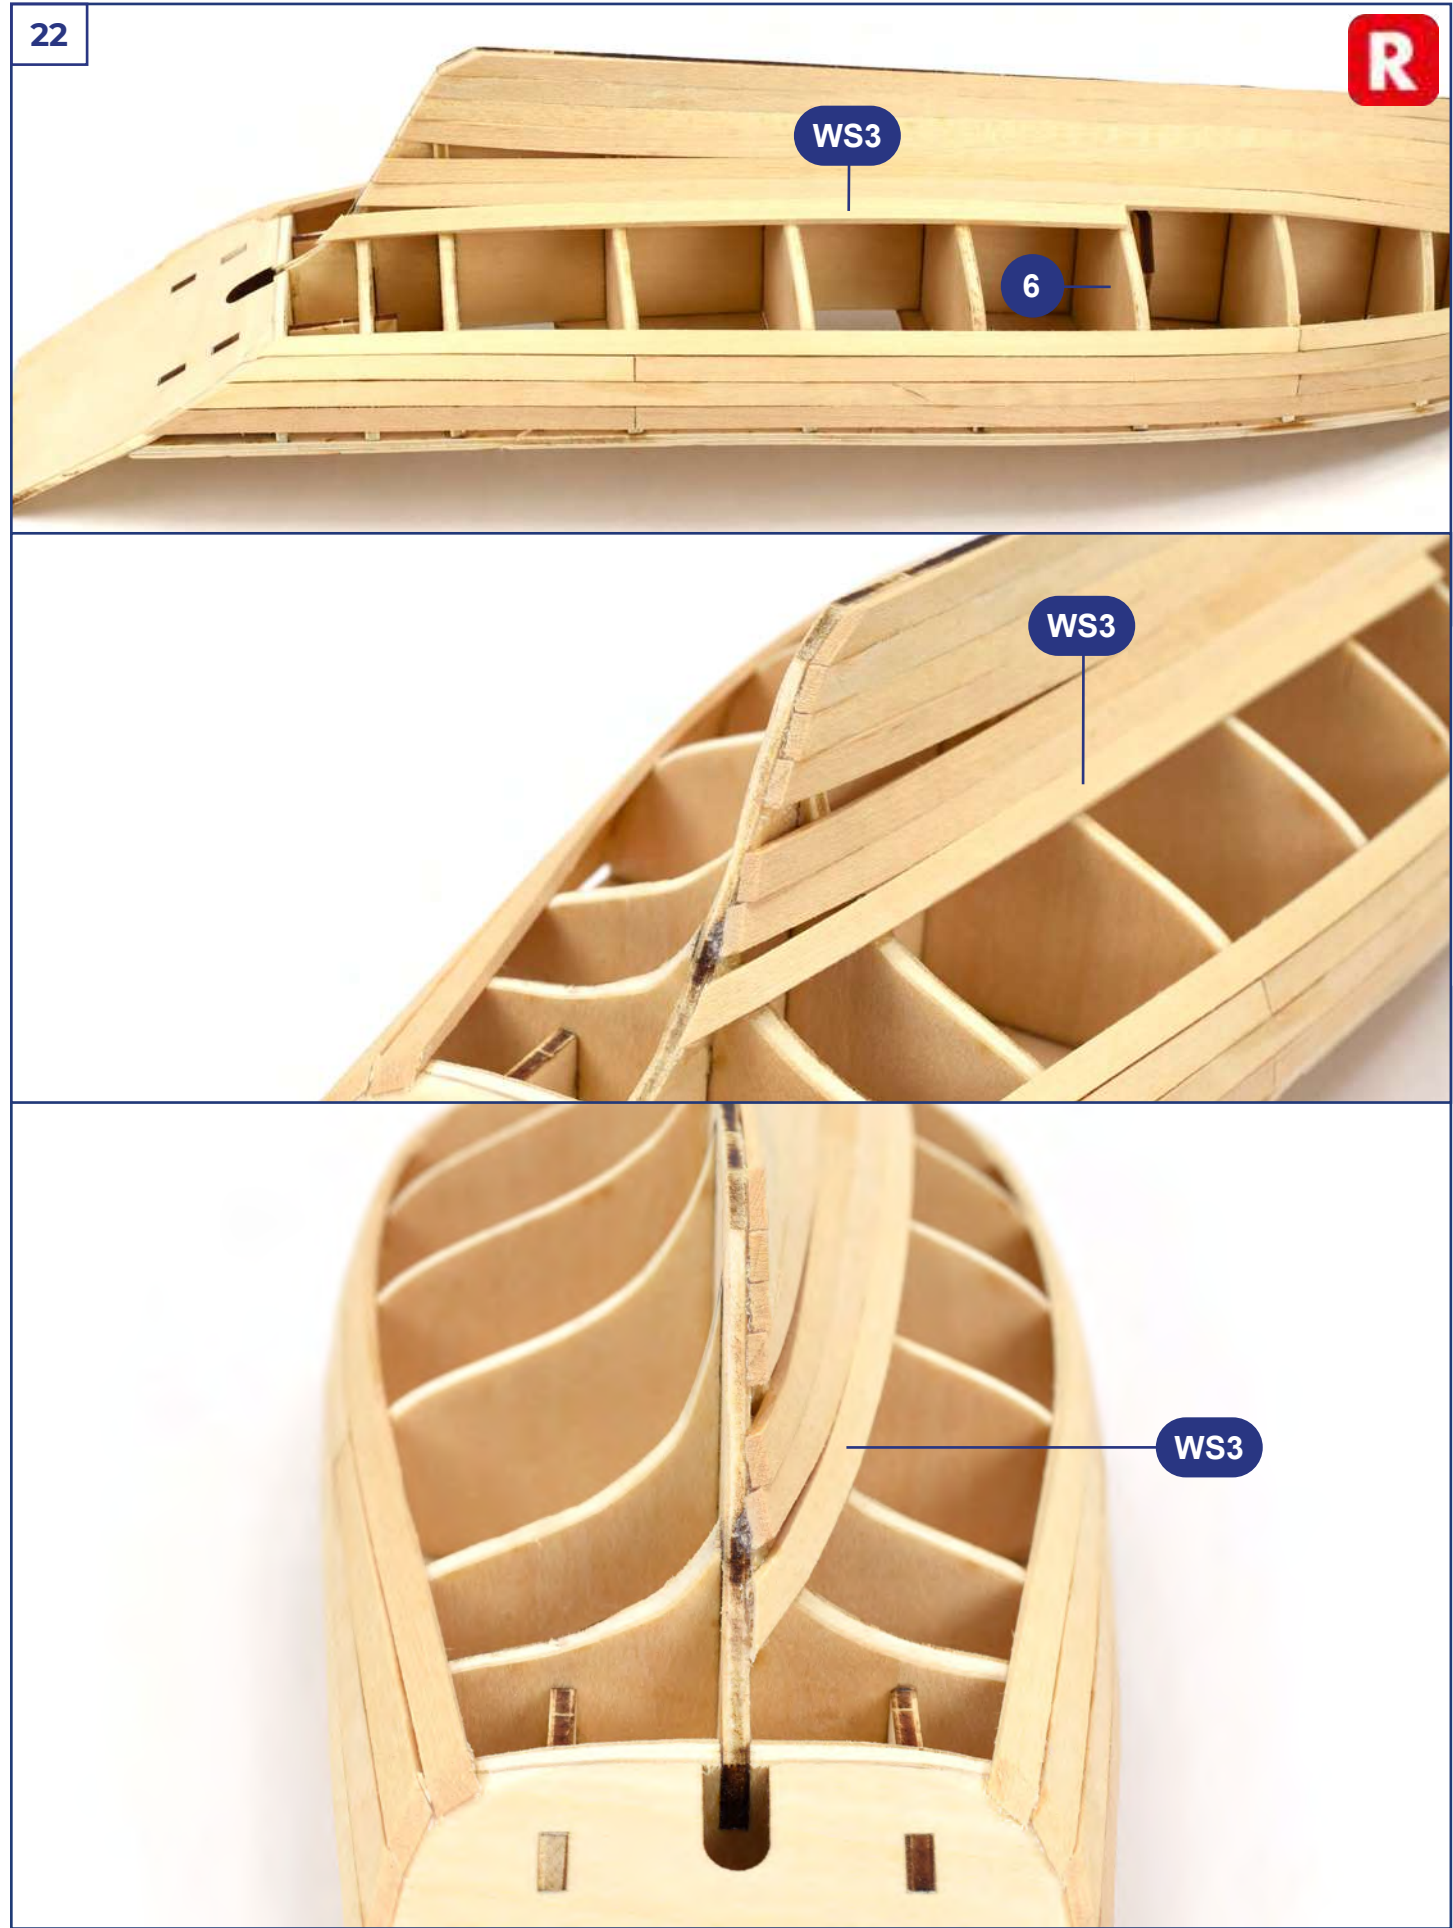

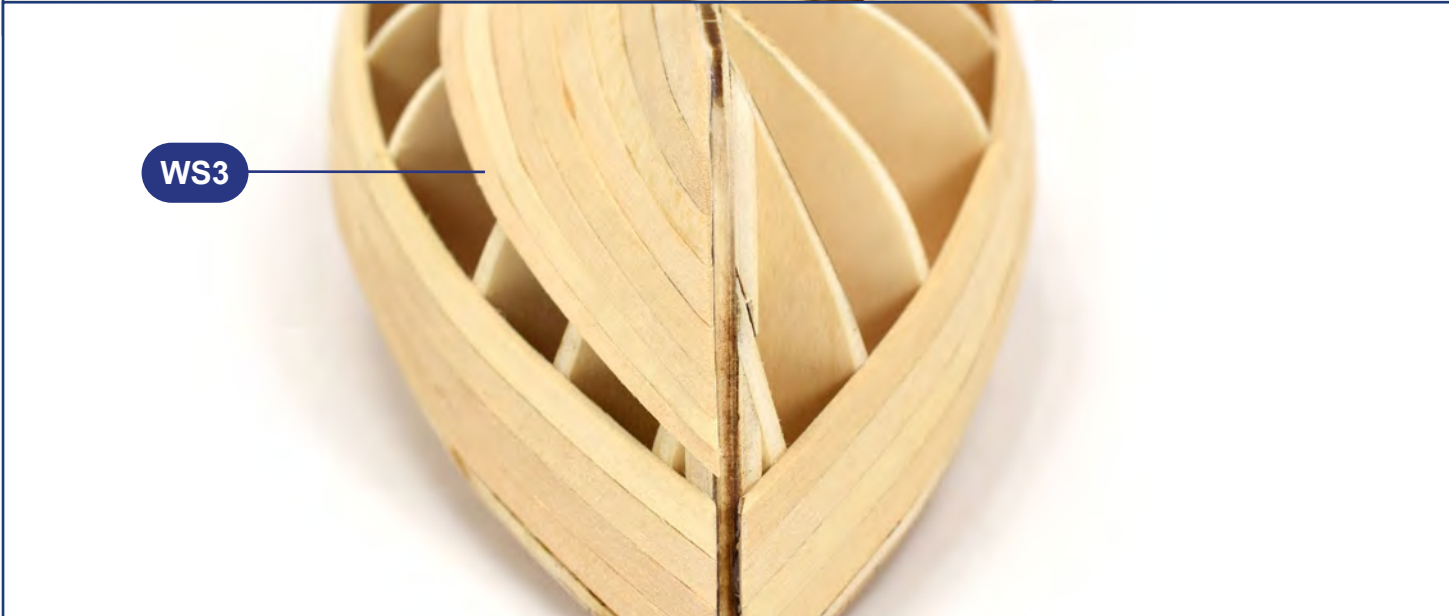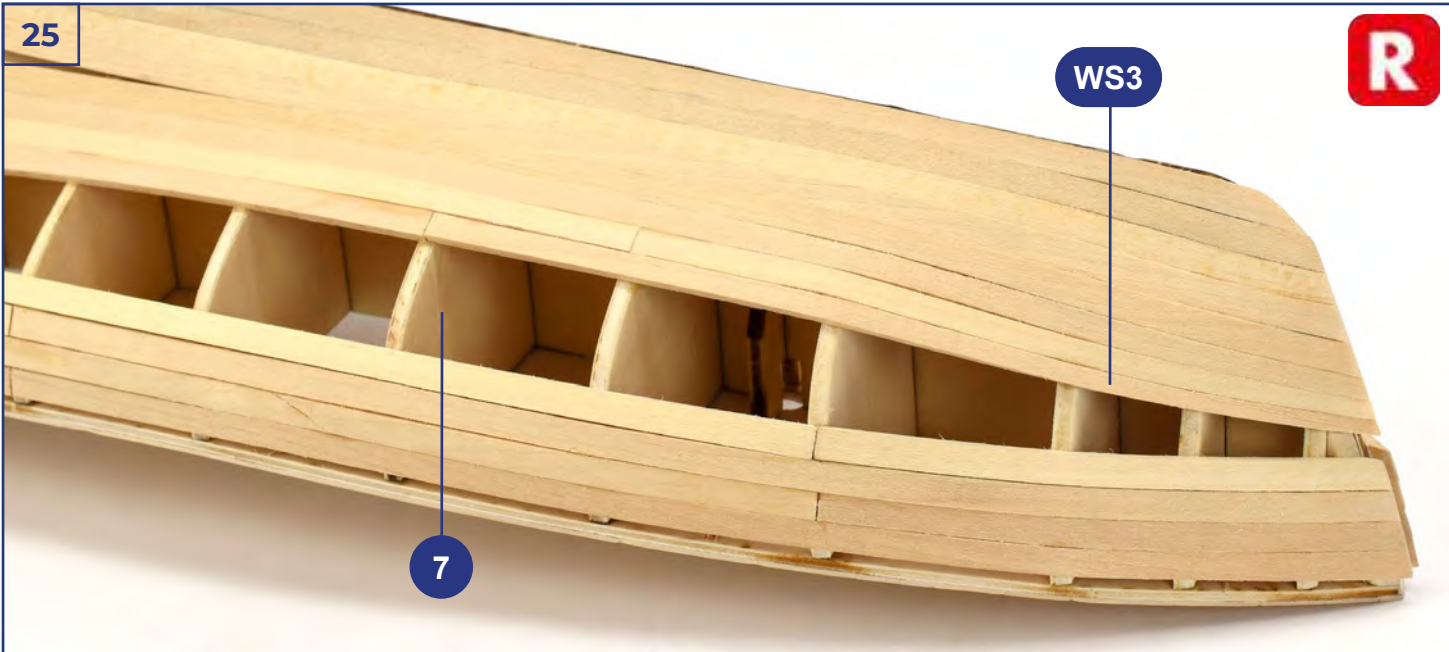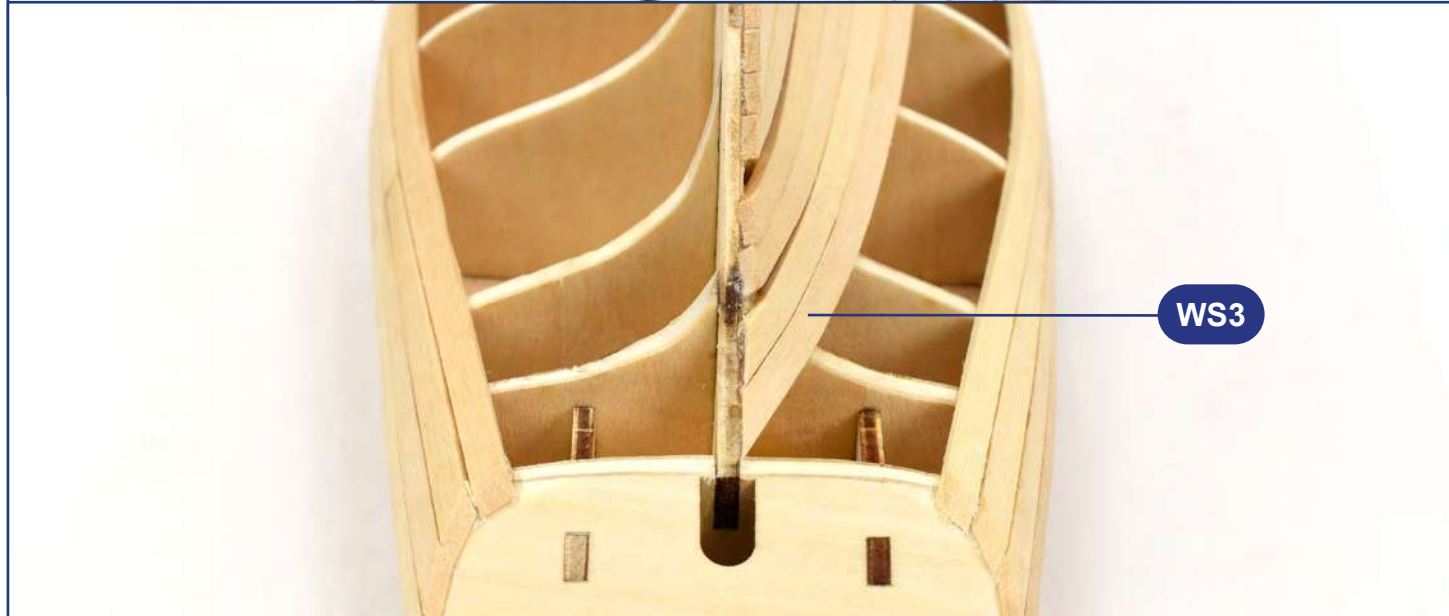

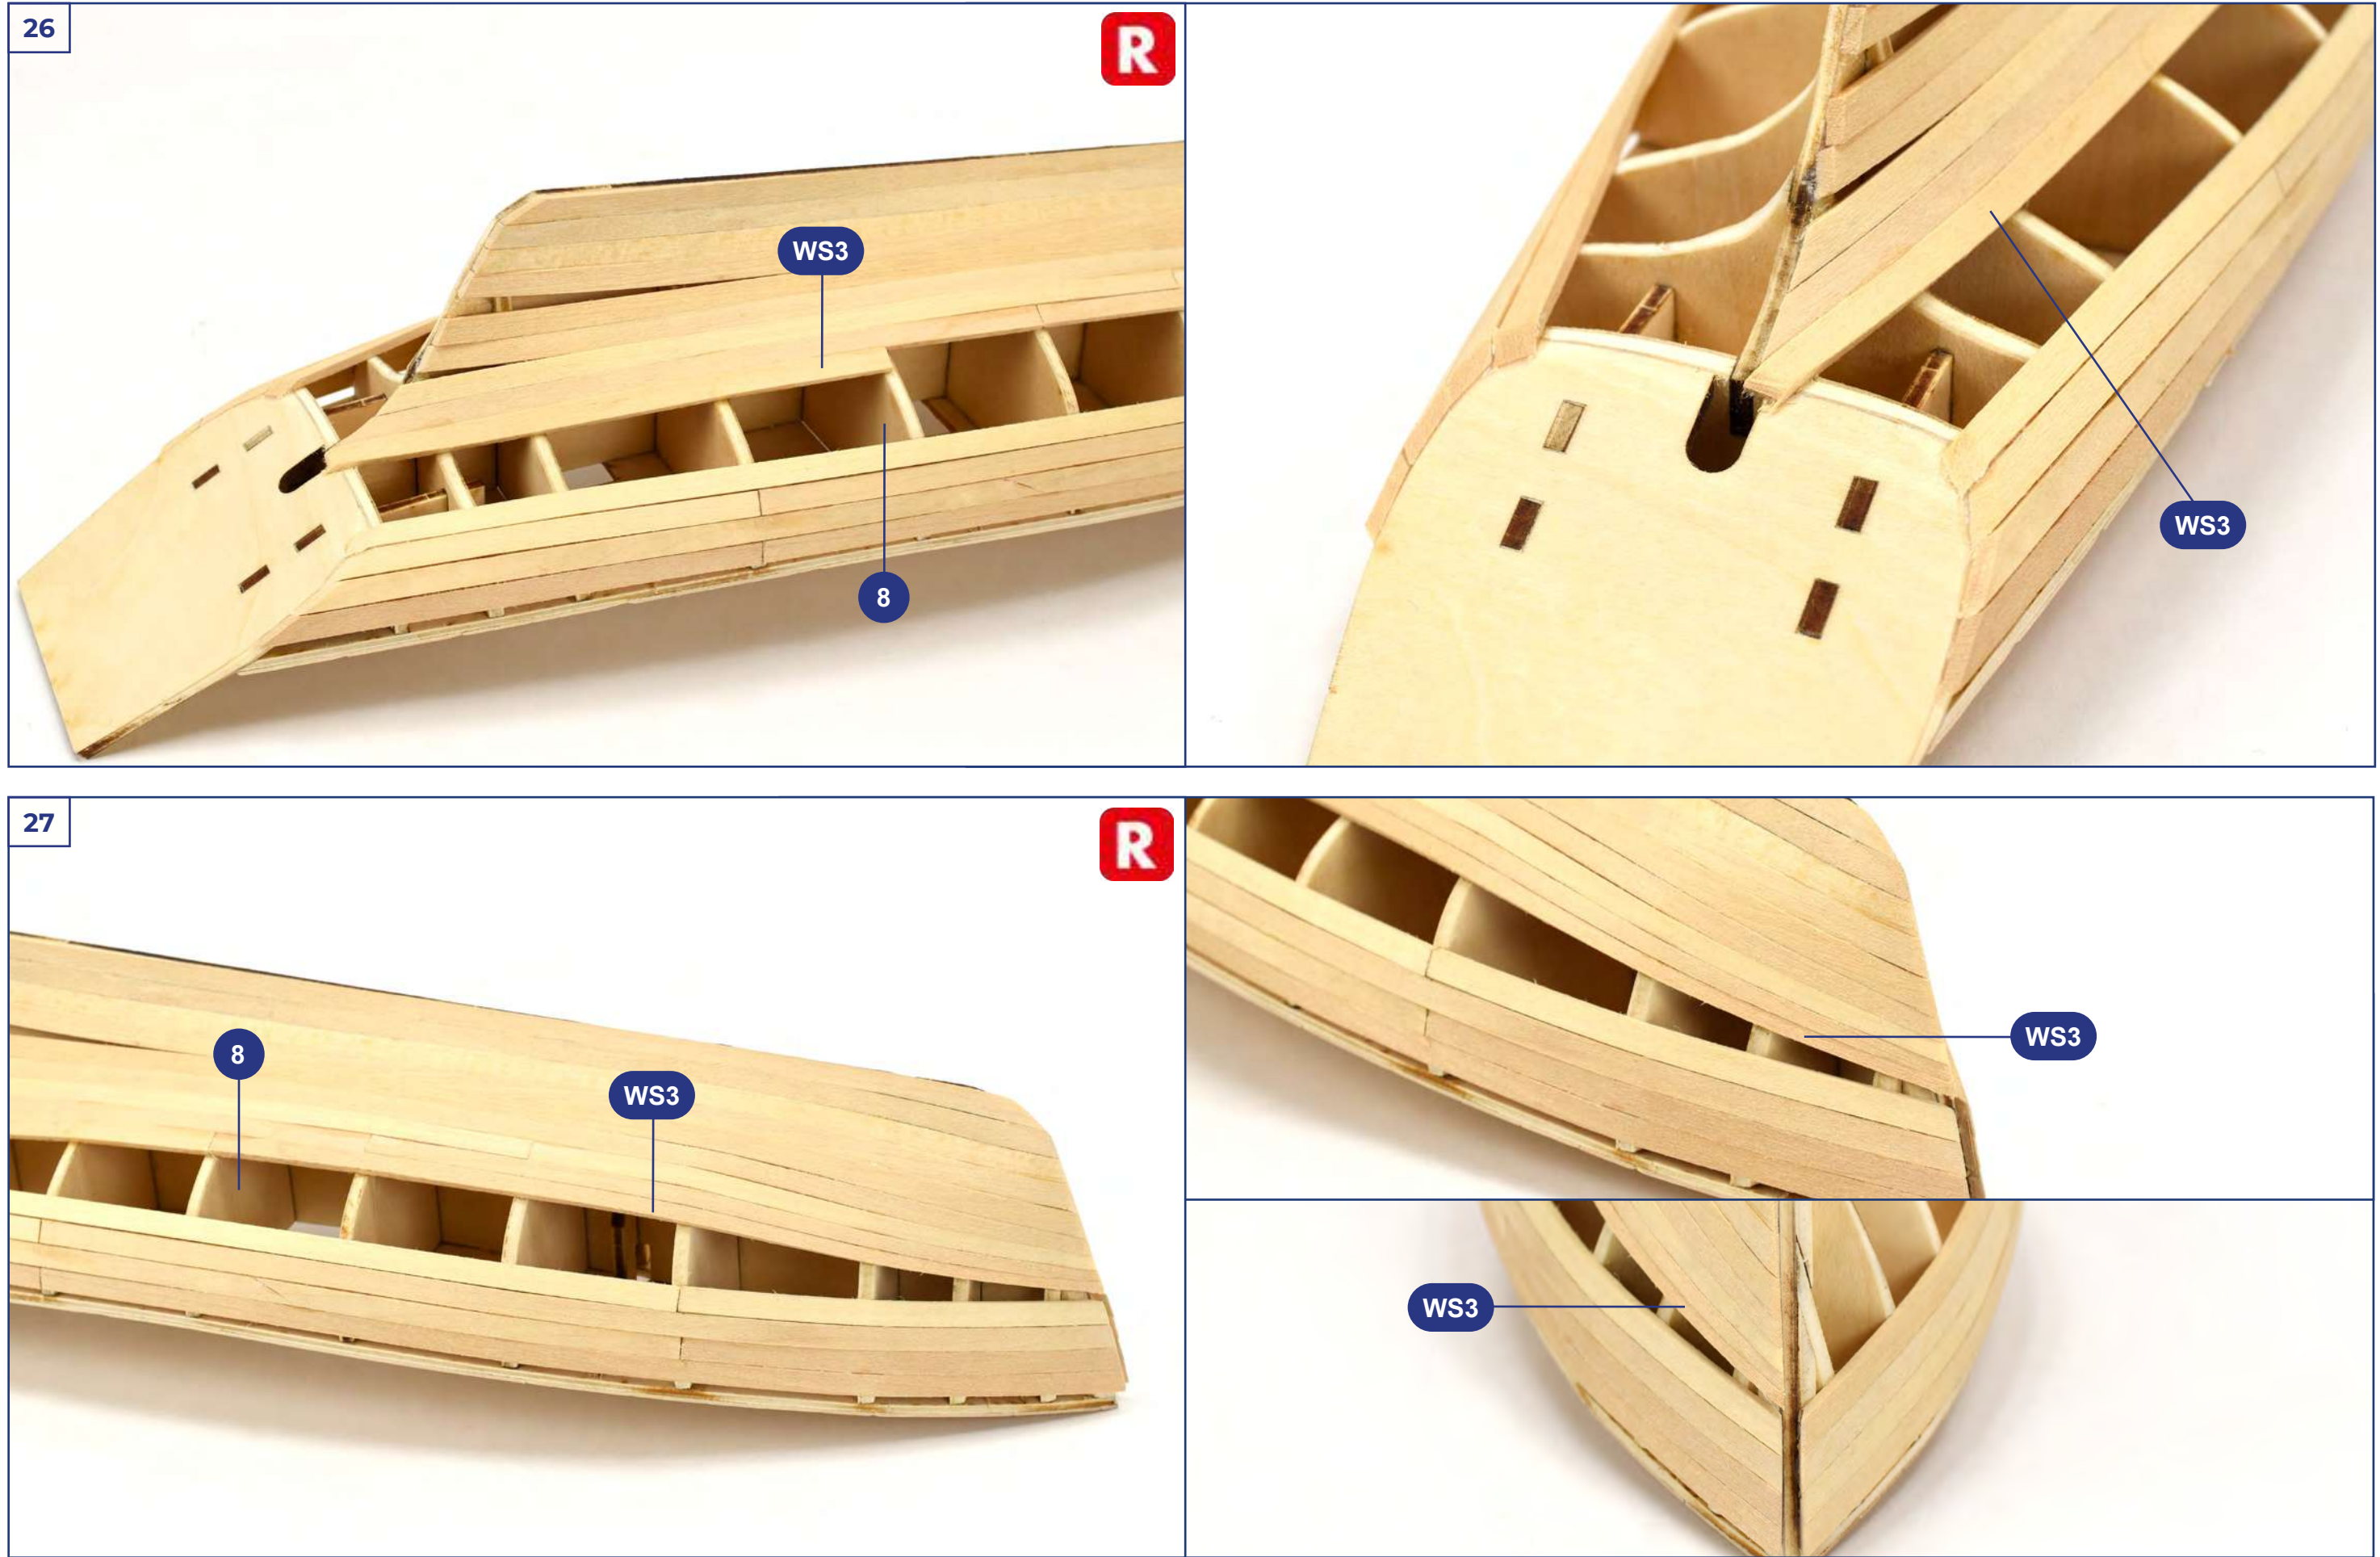






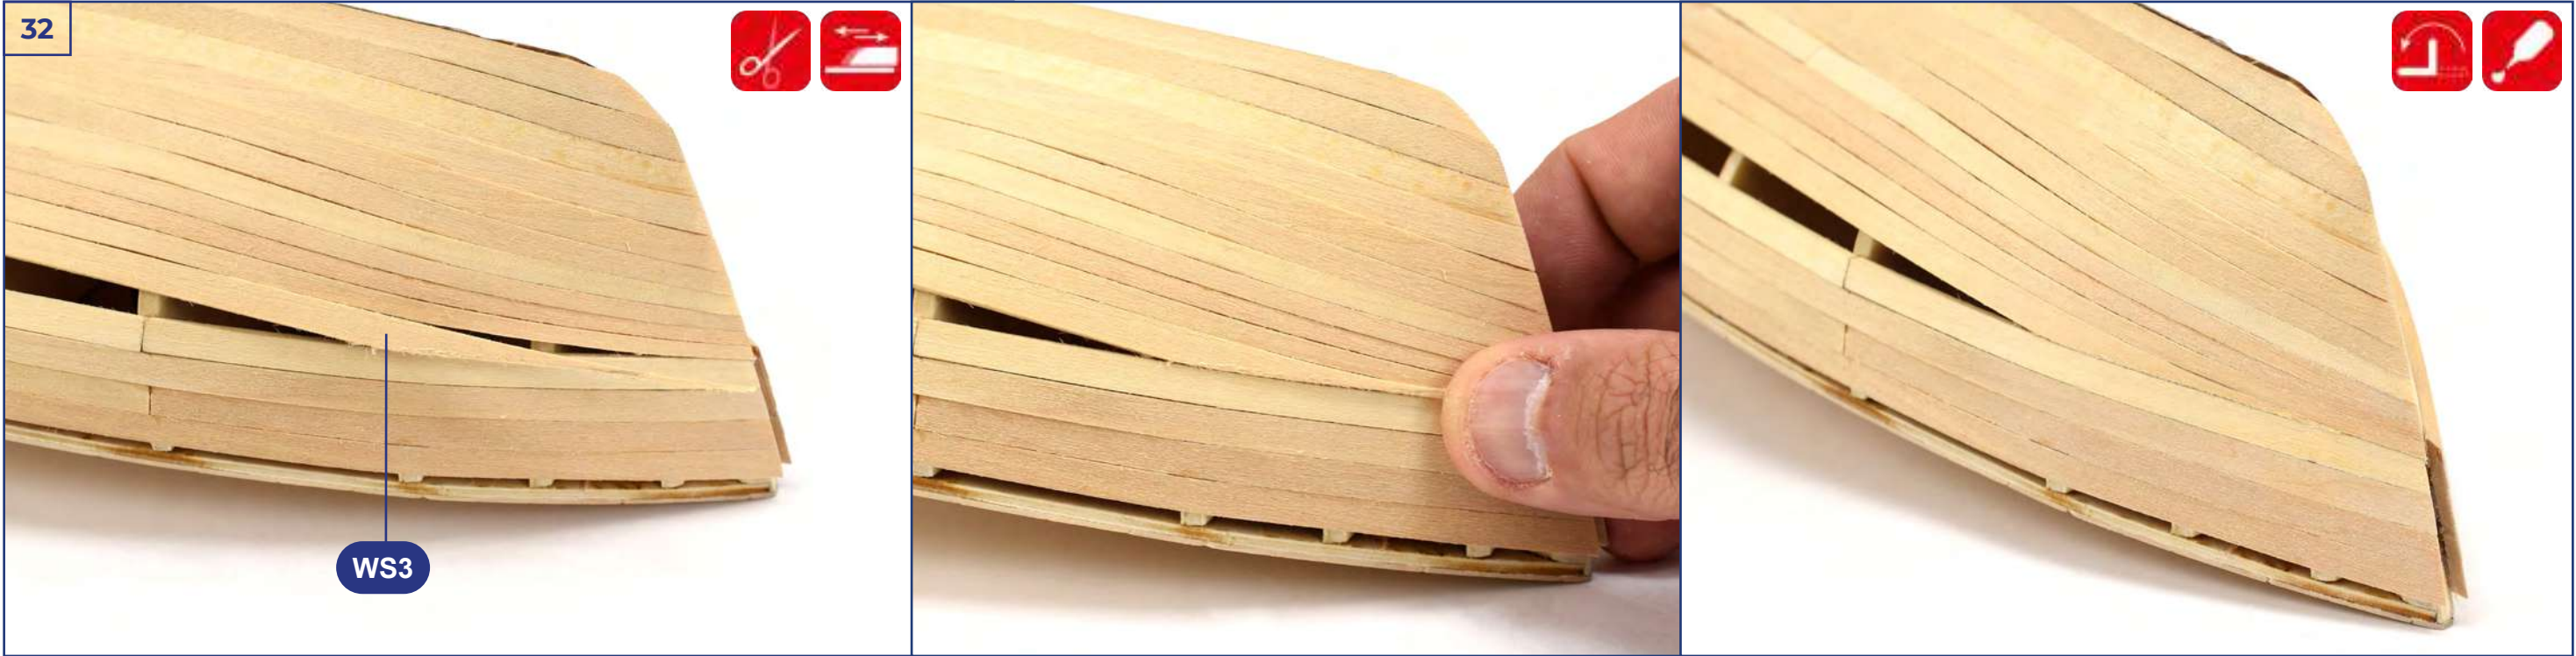




37





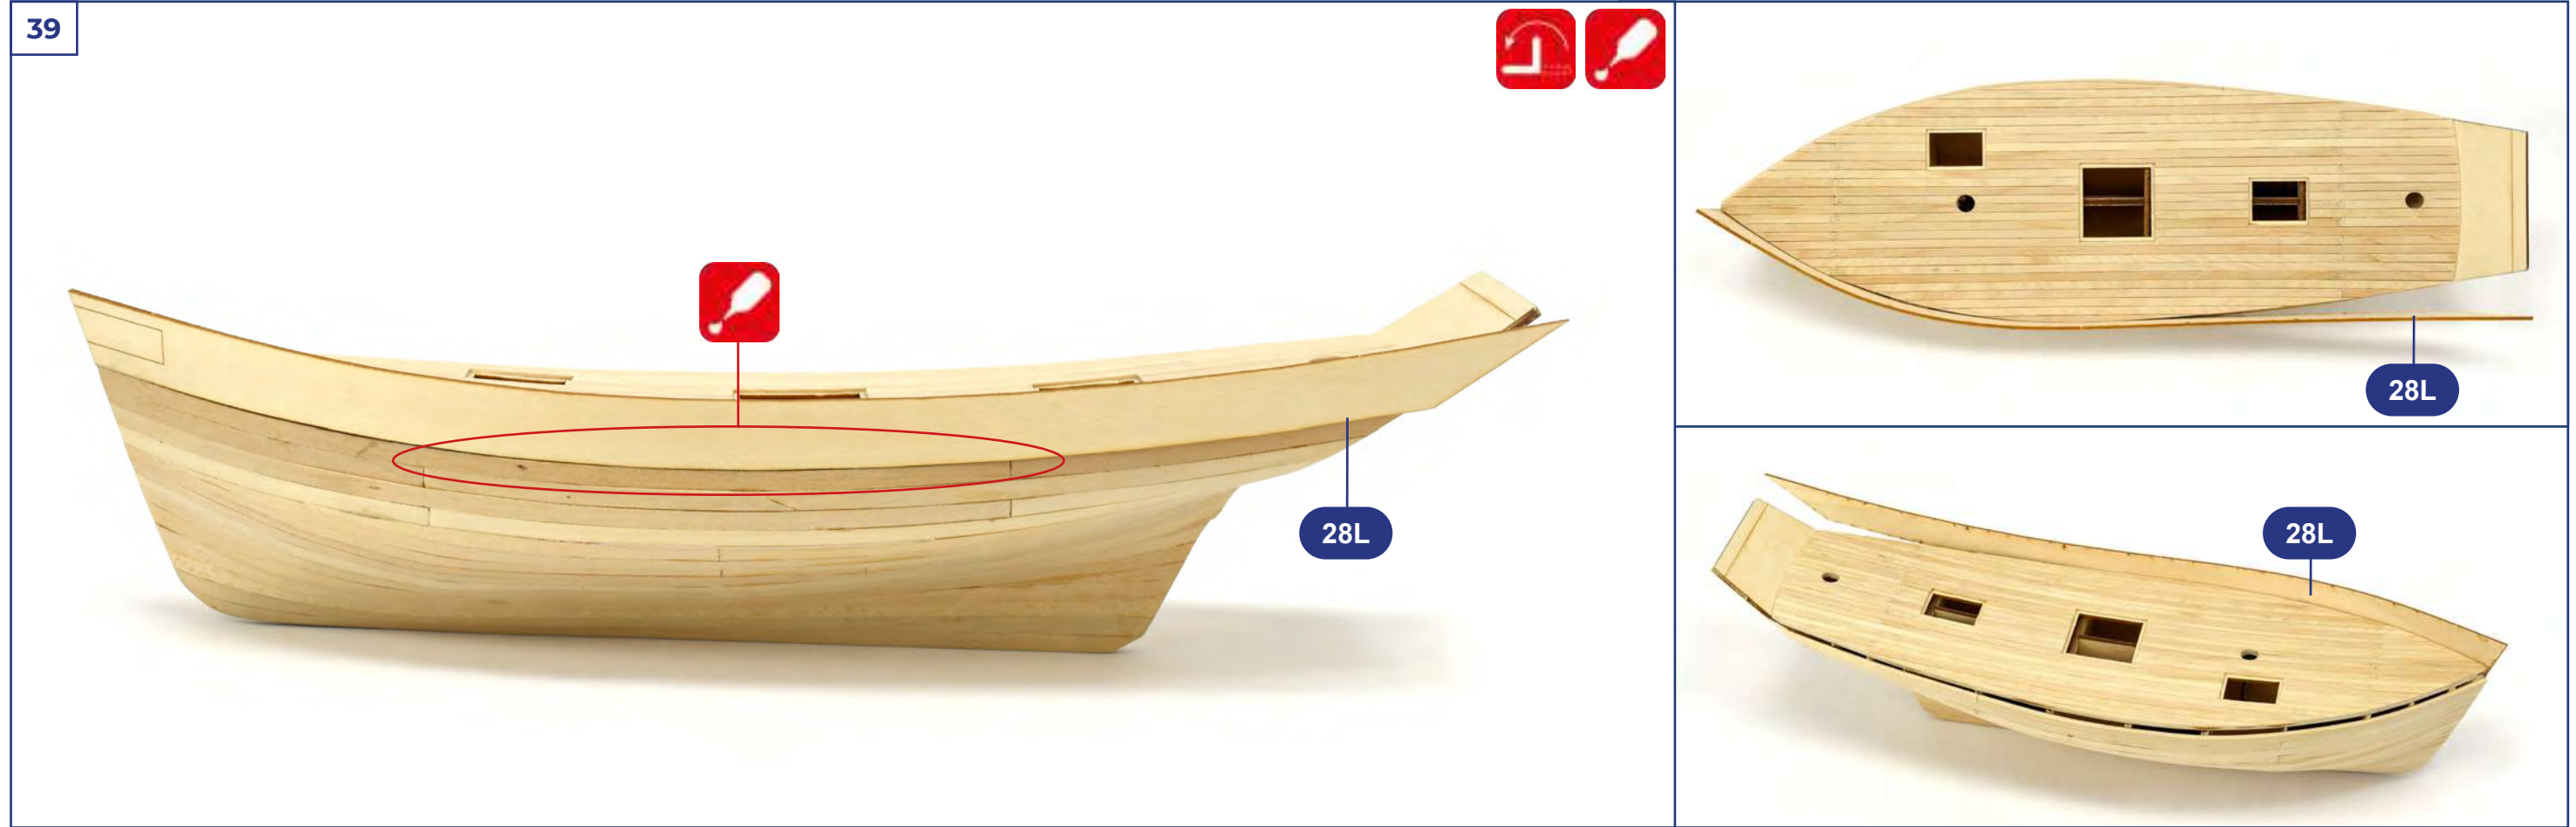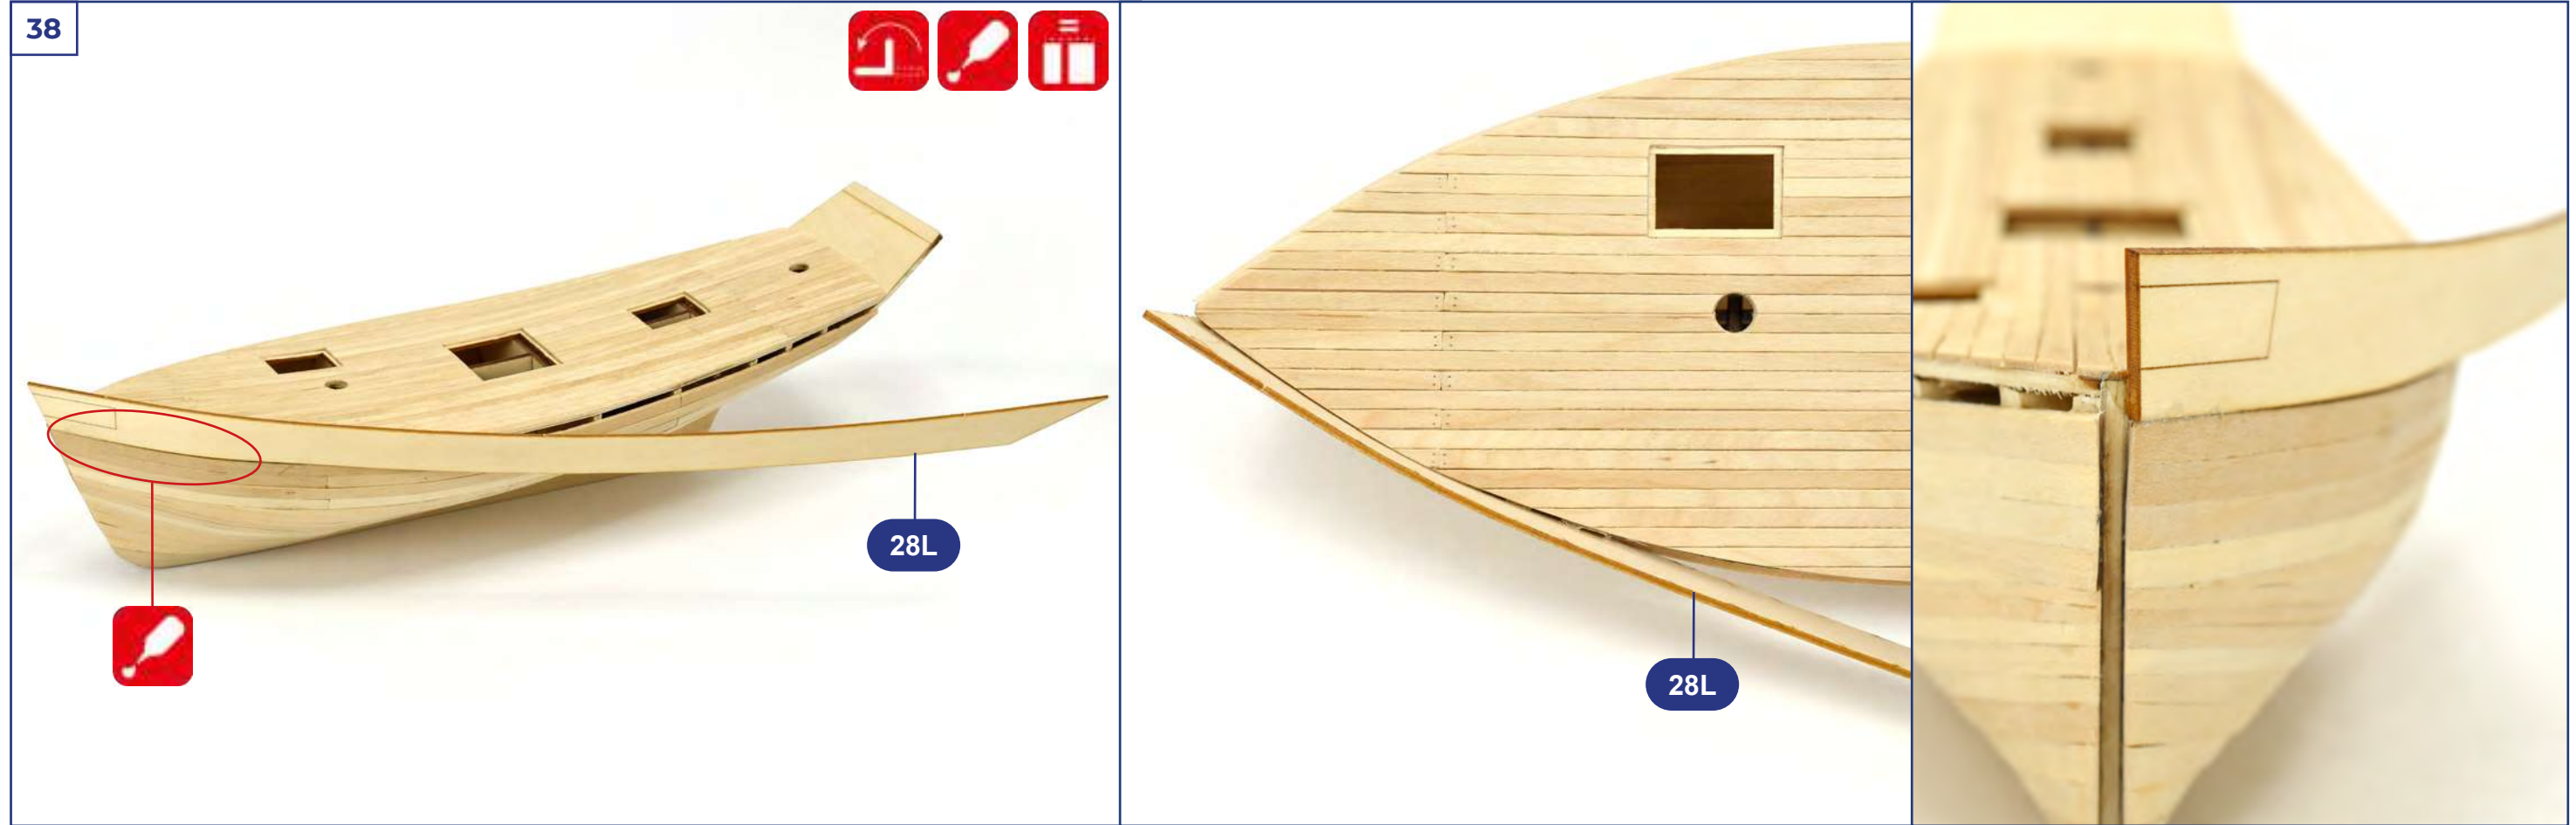

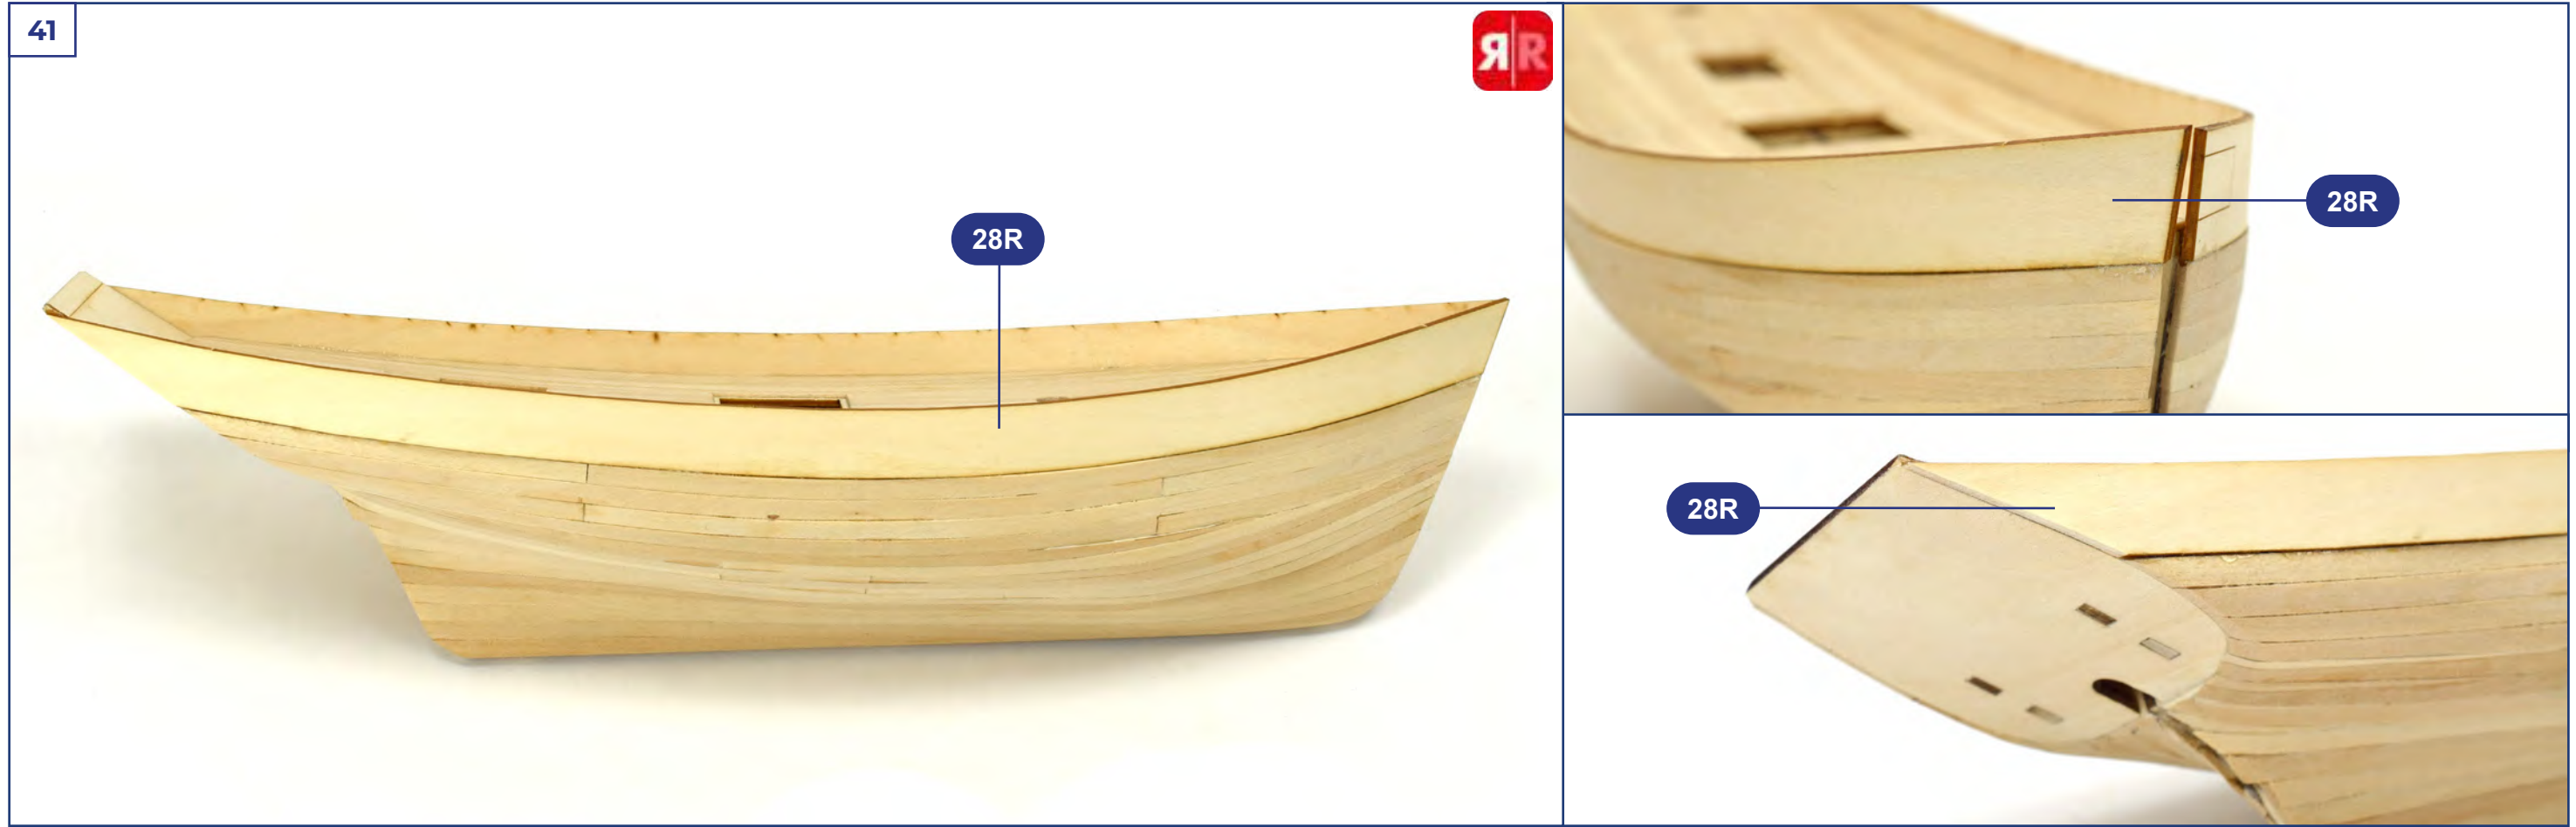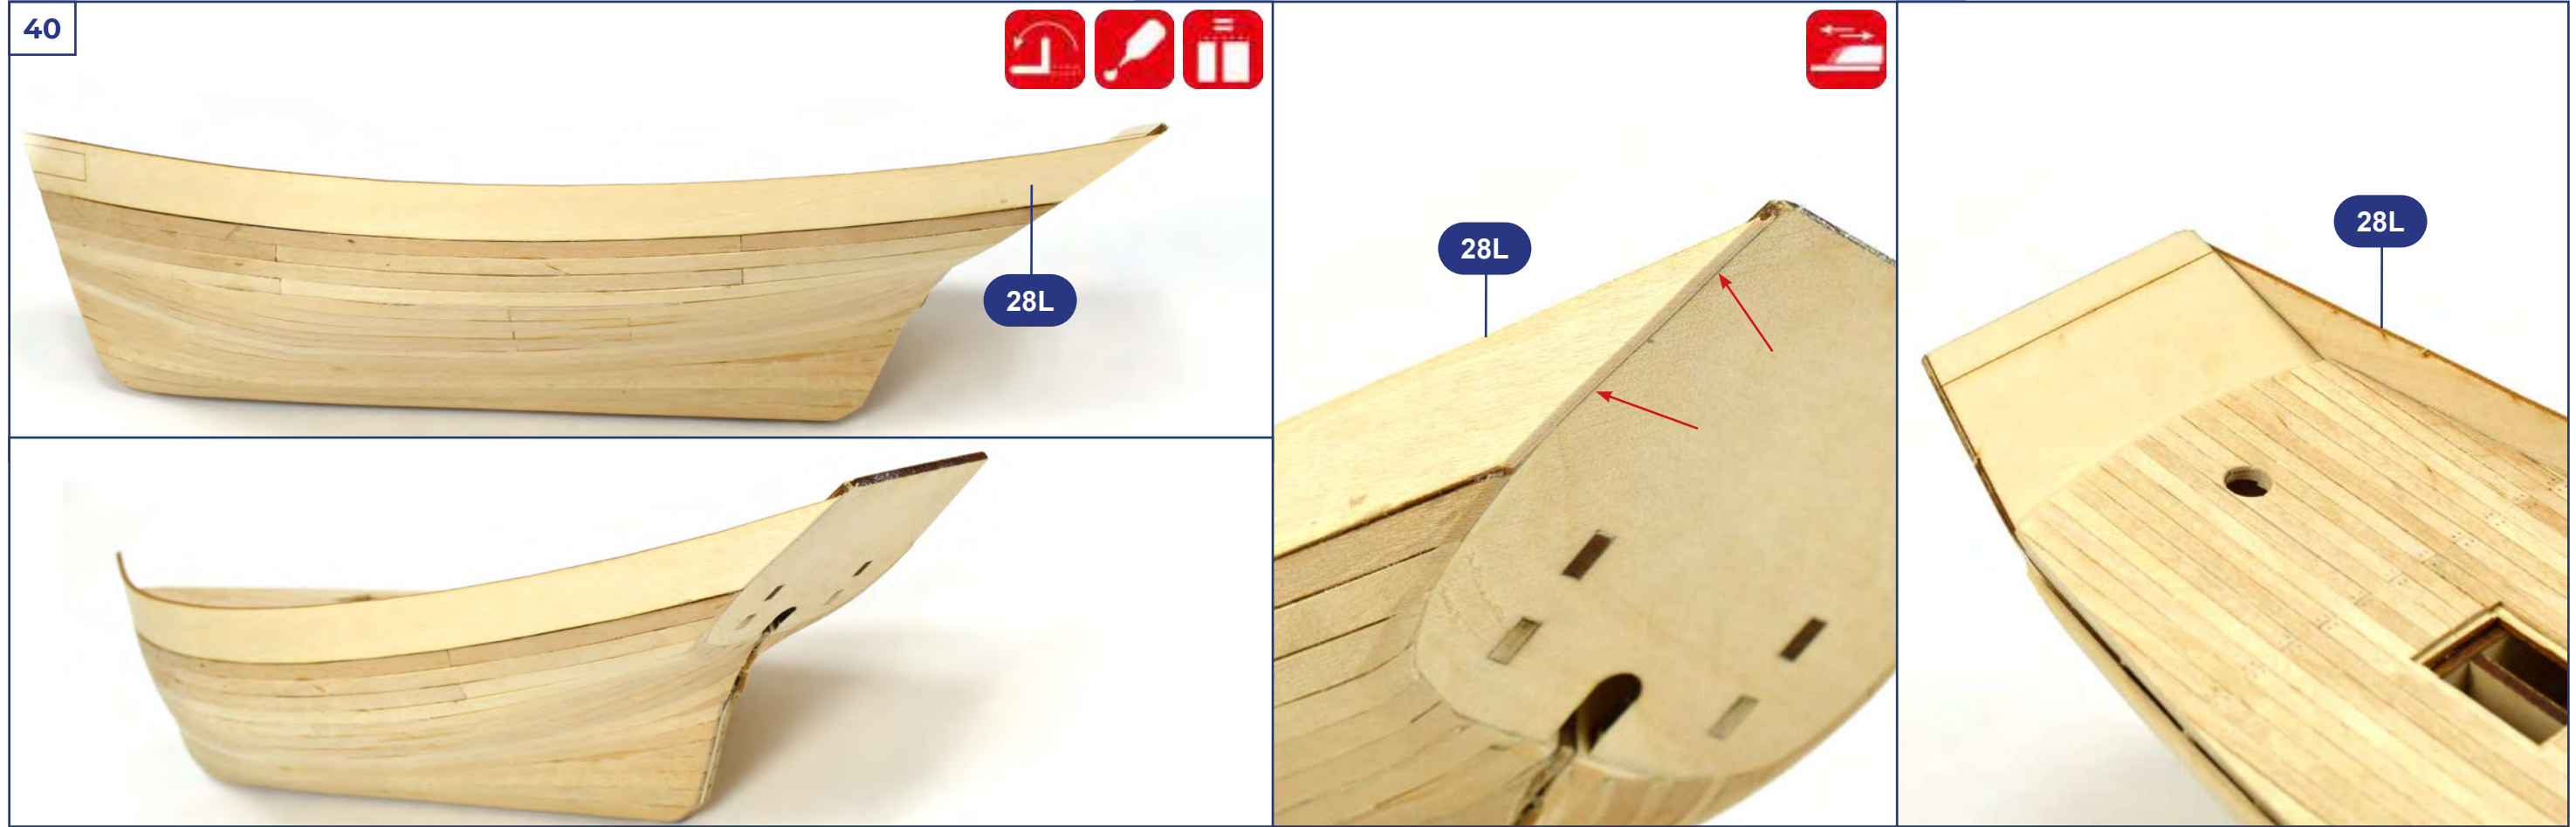







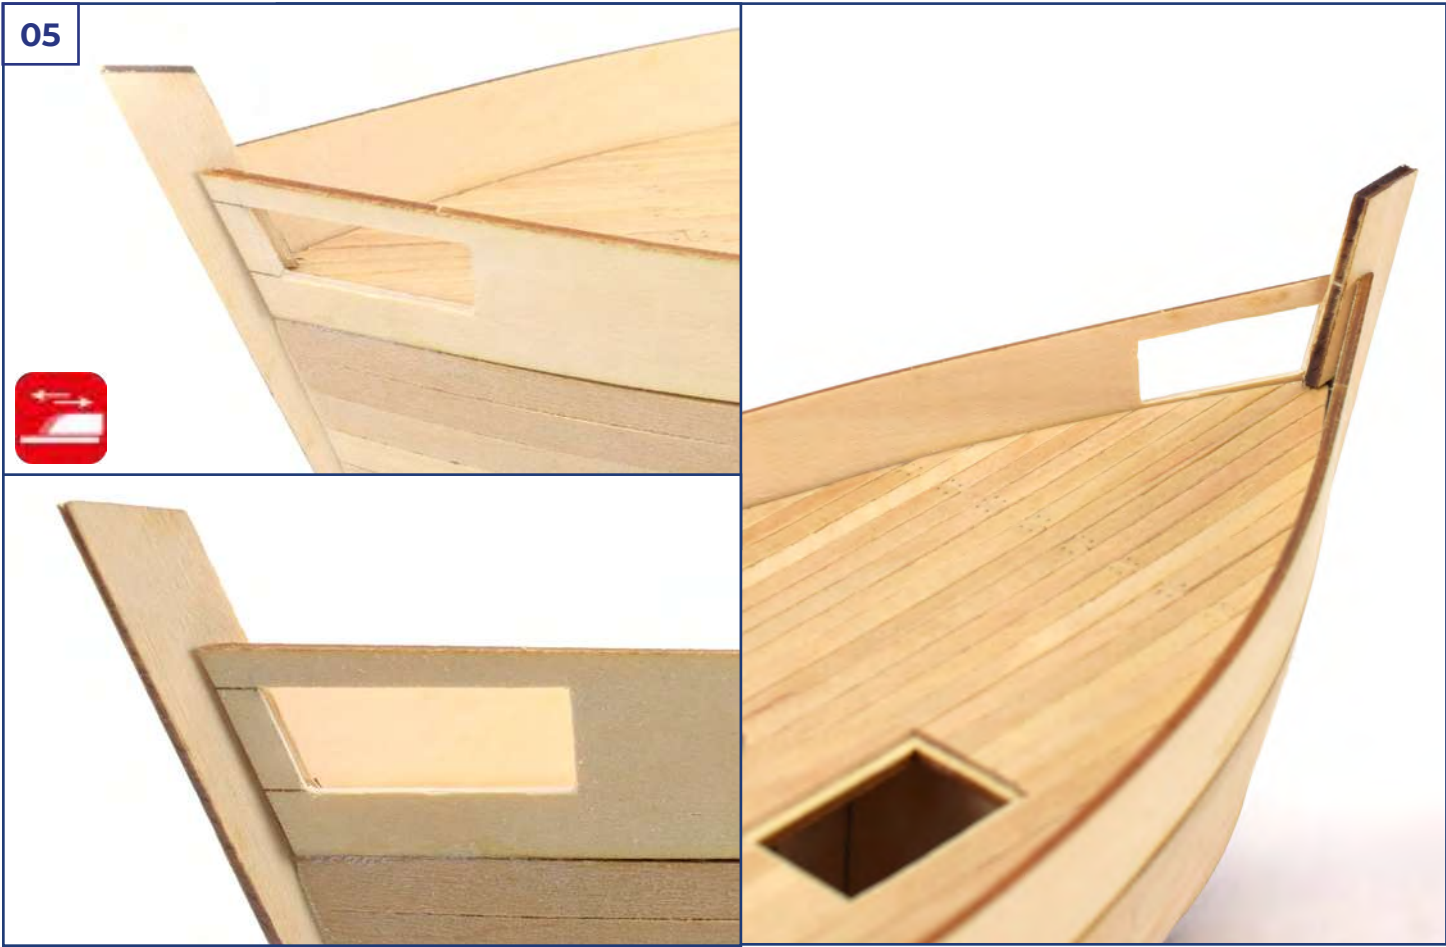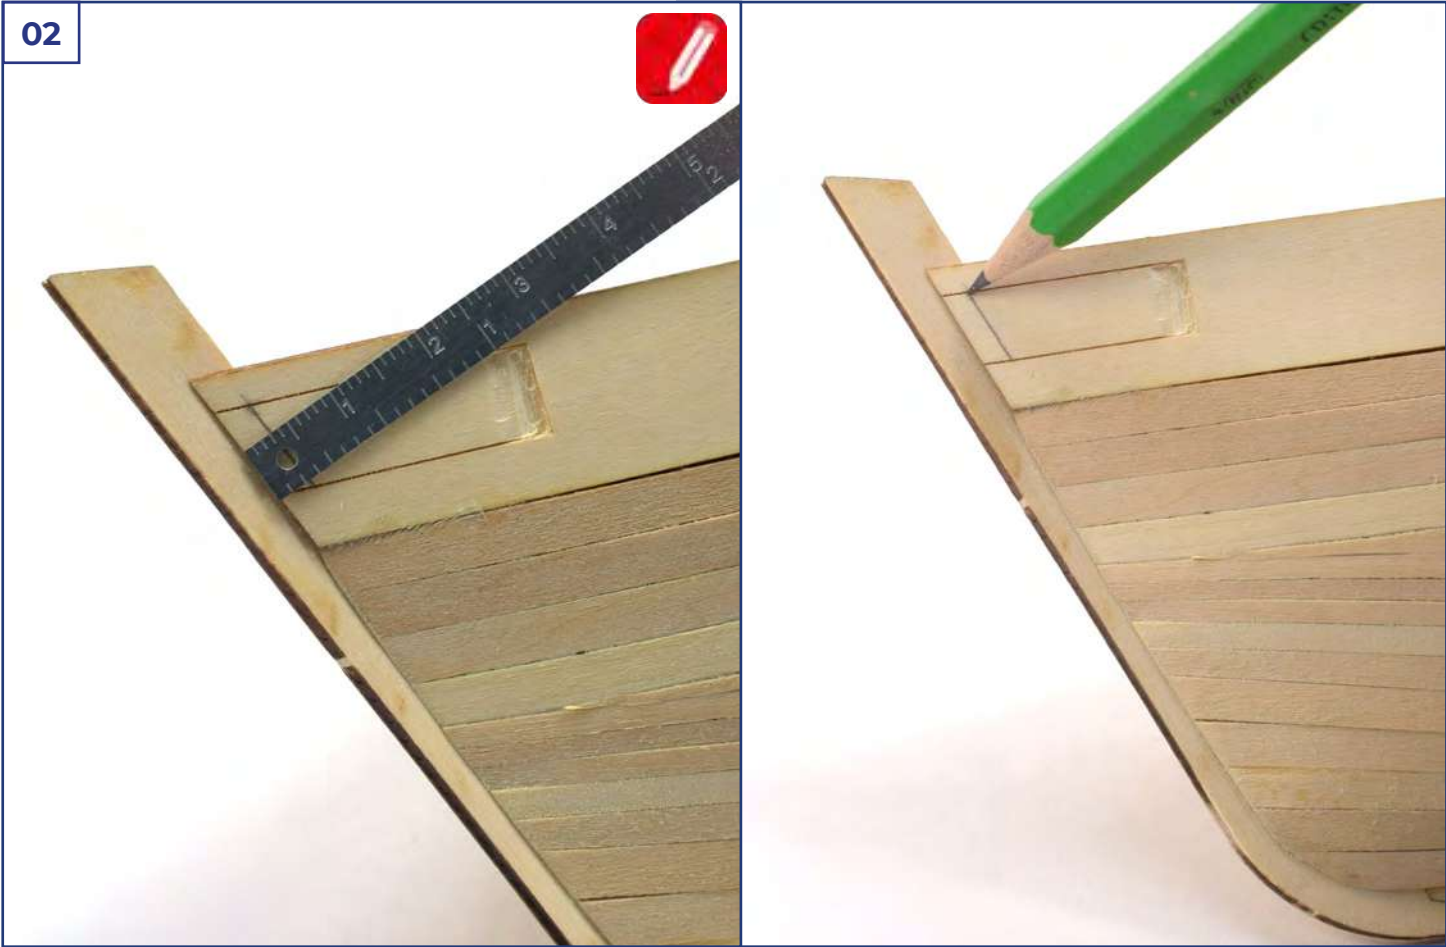






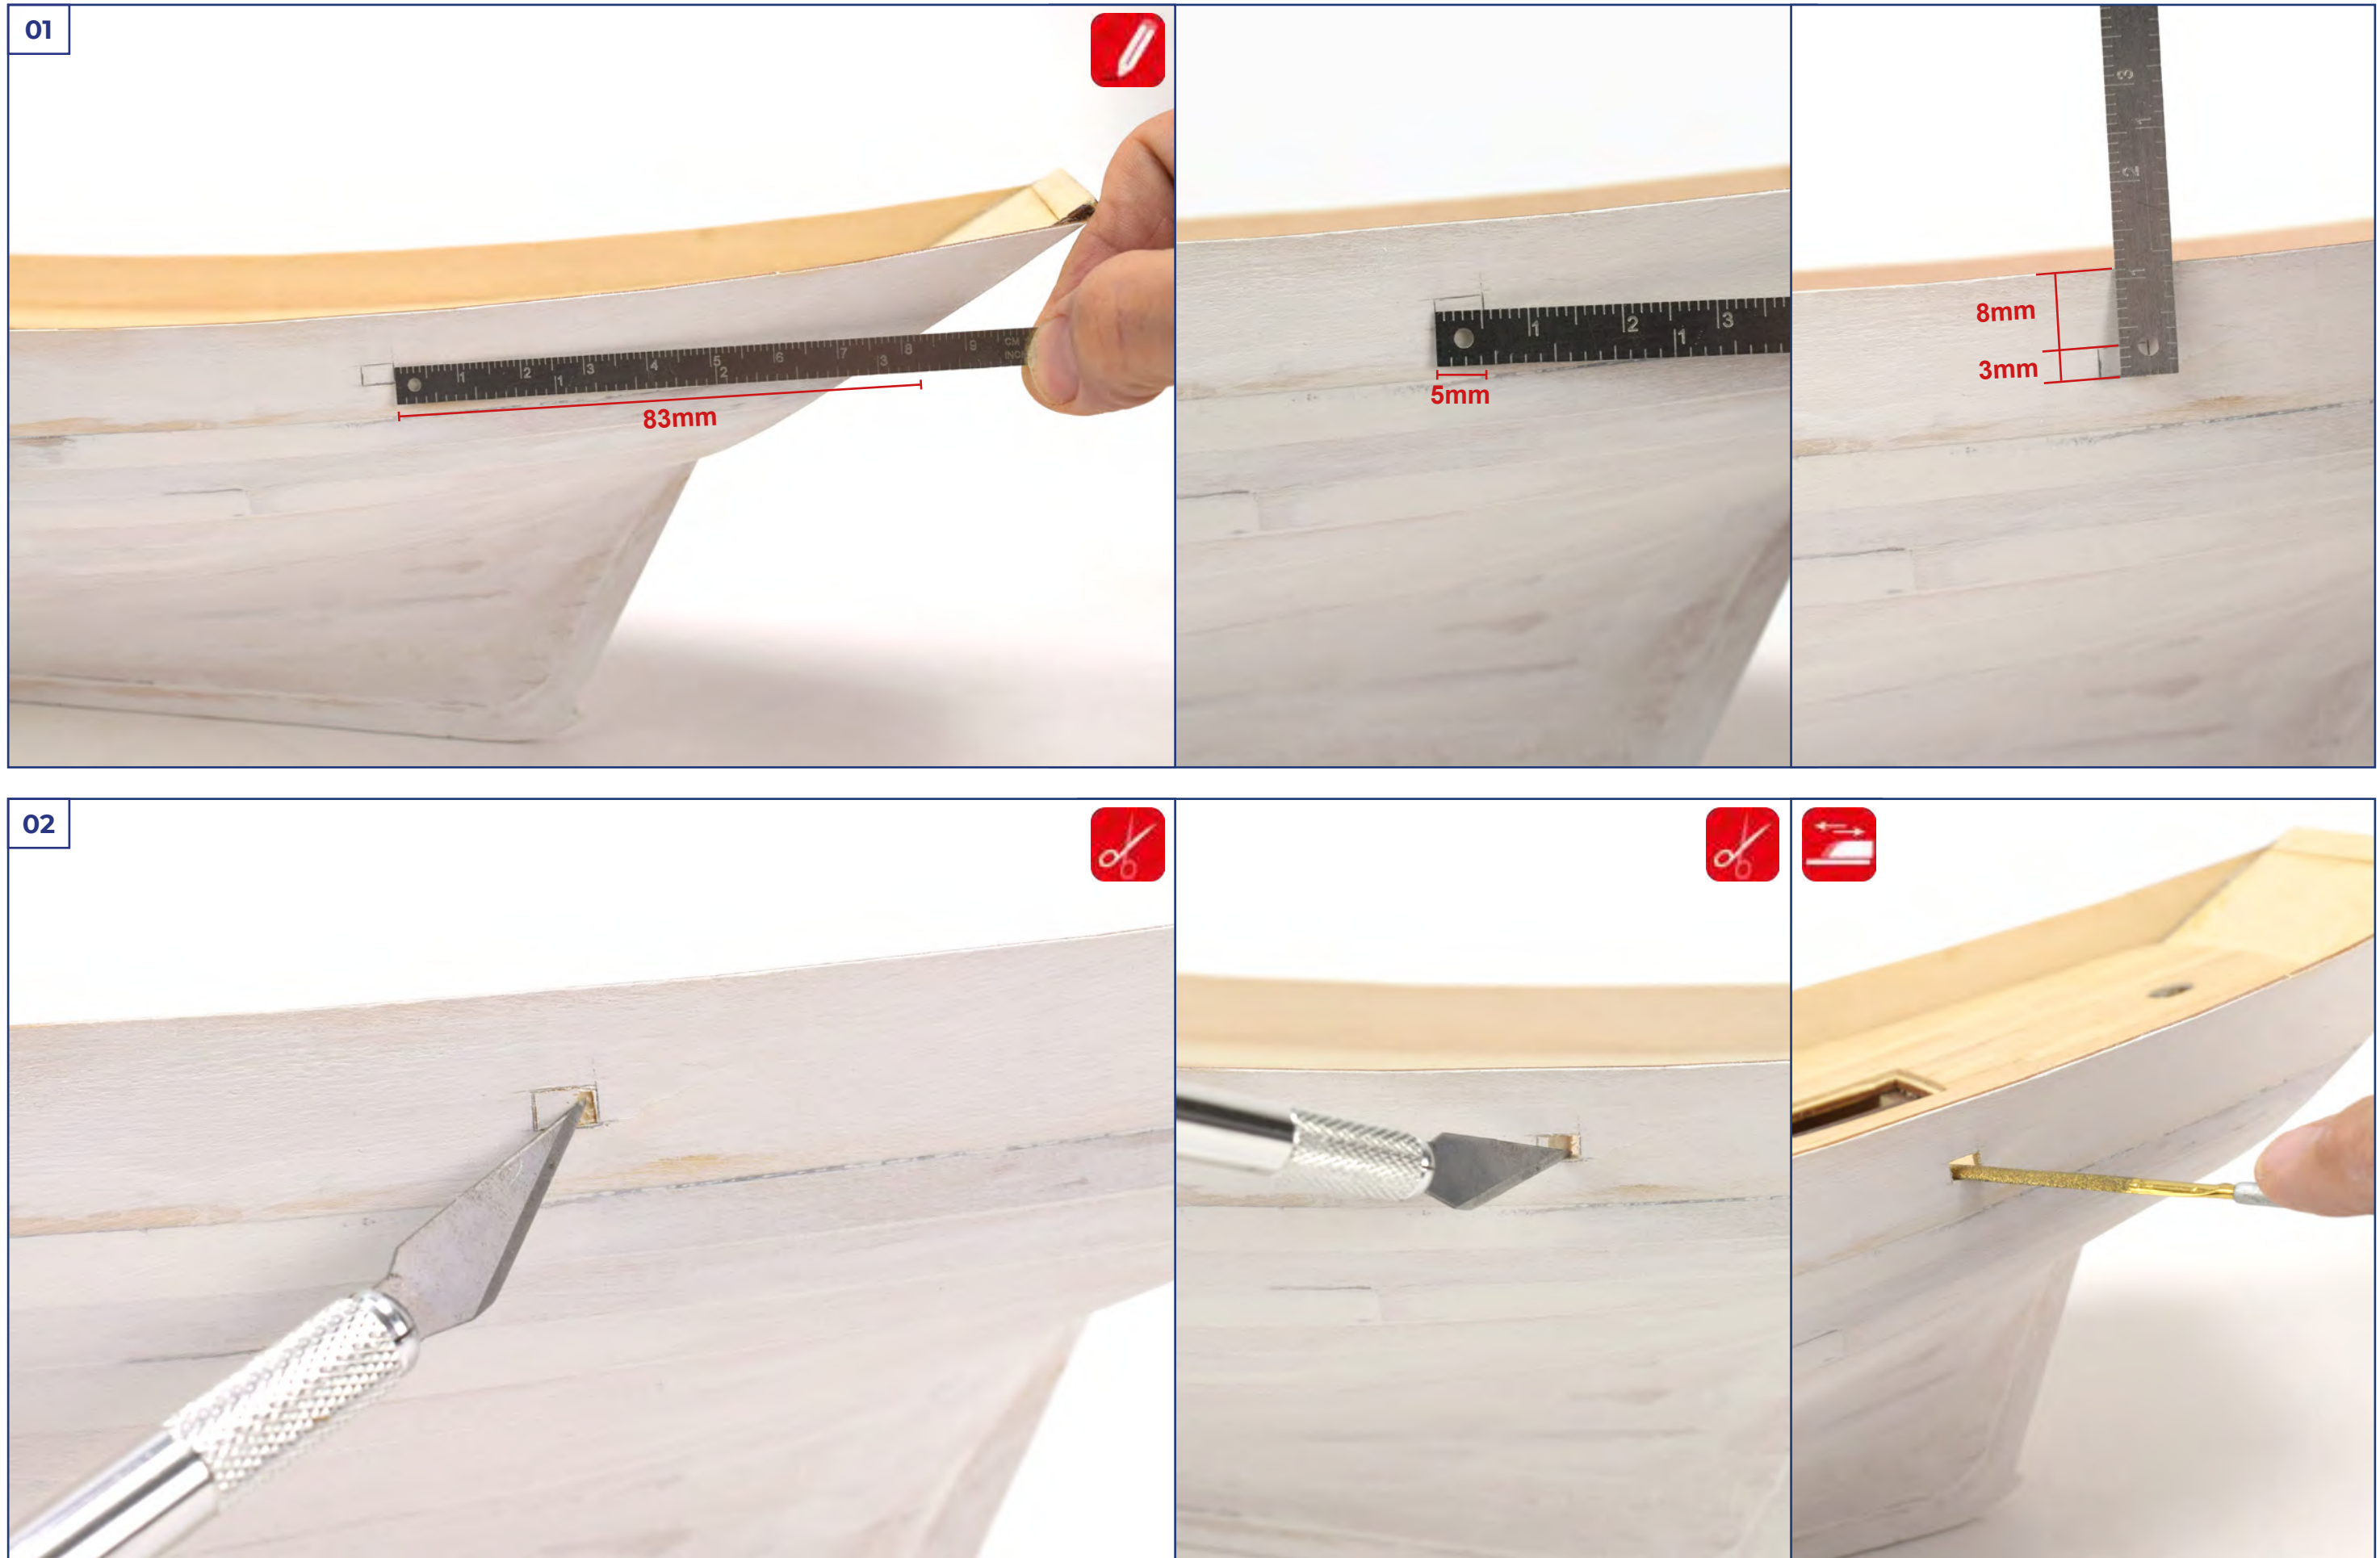




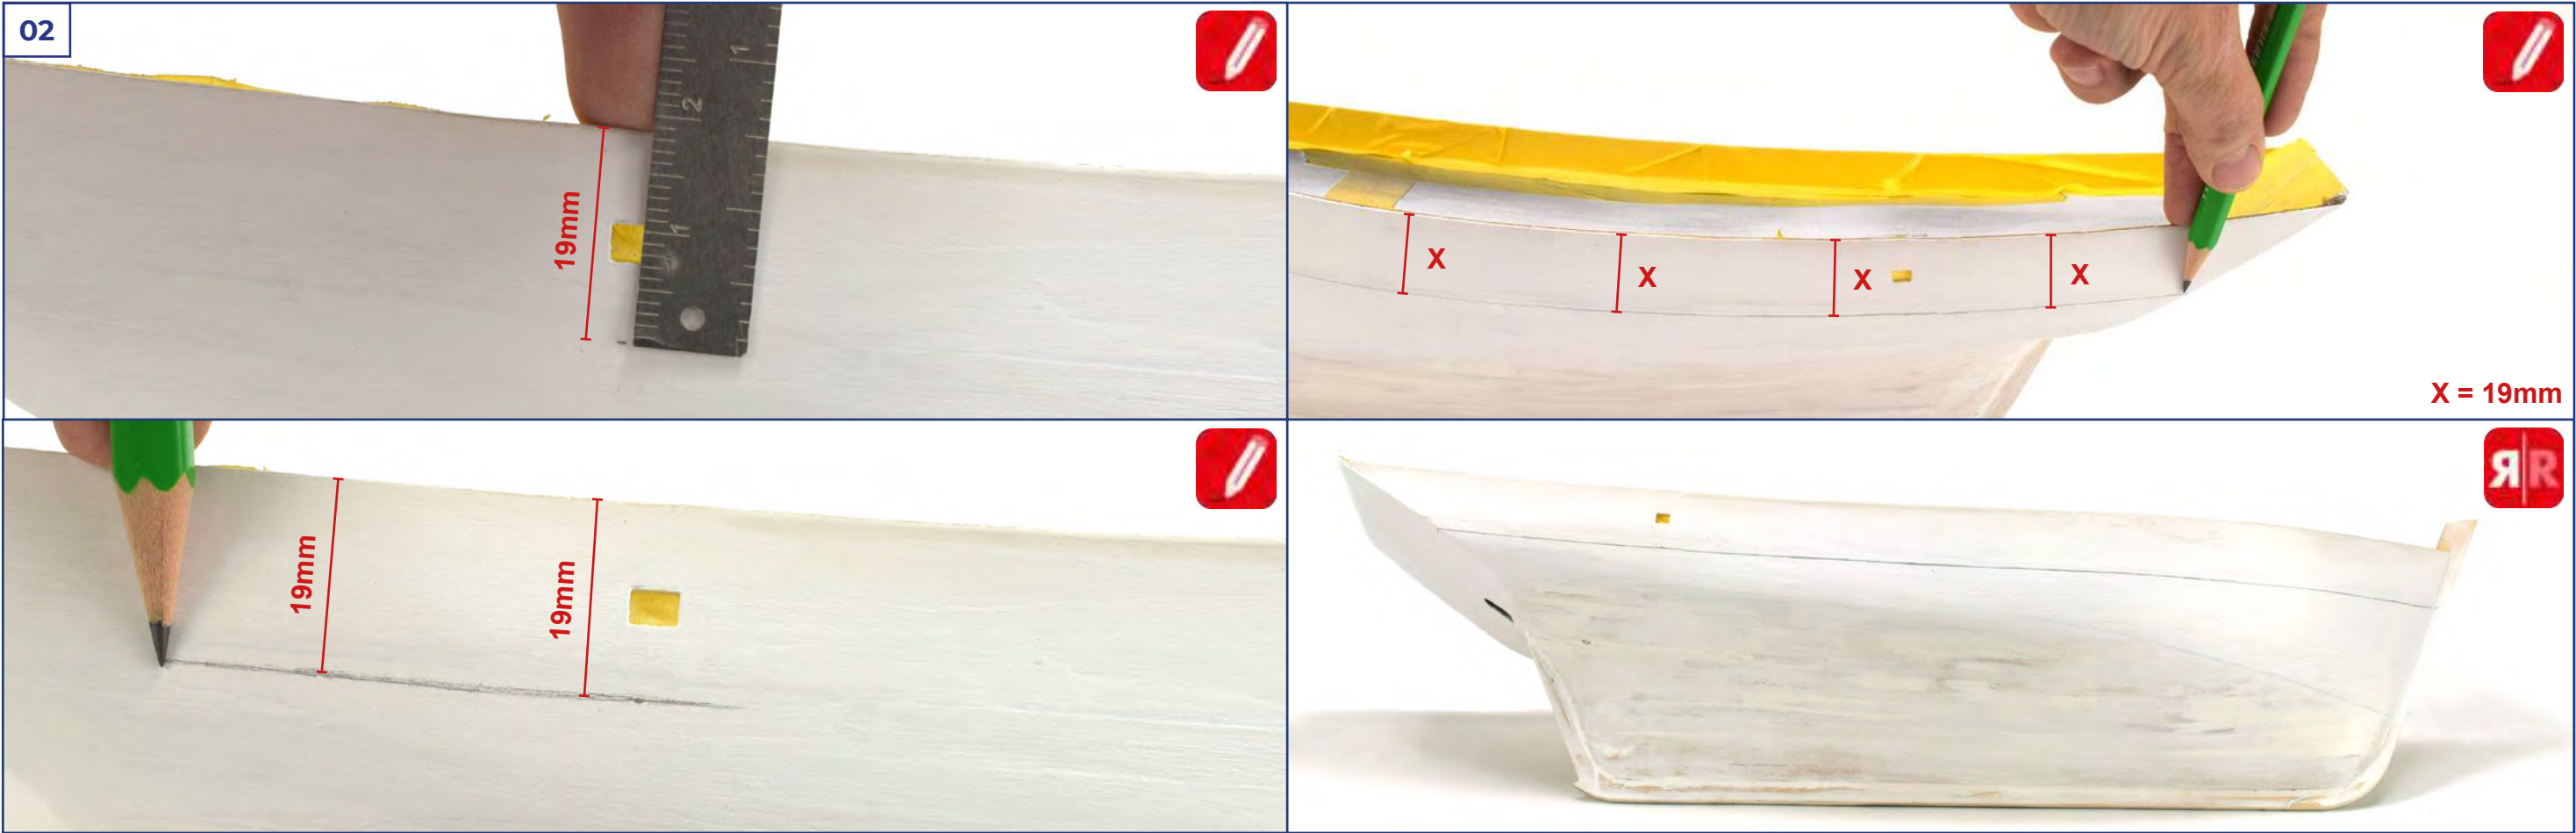

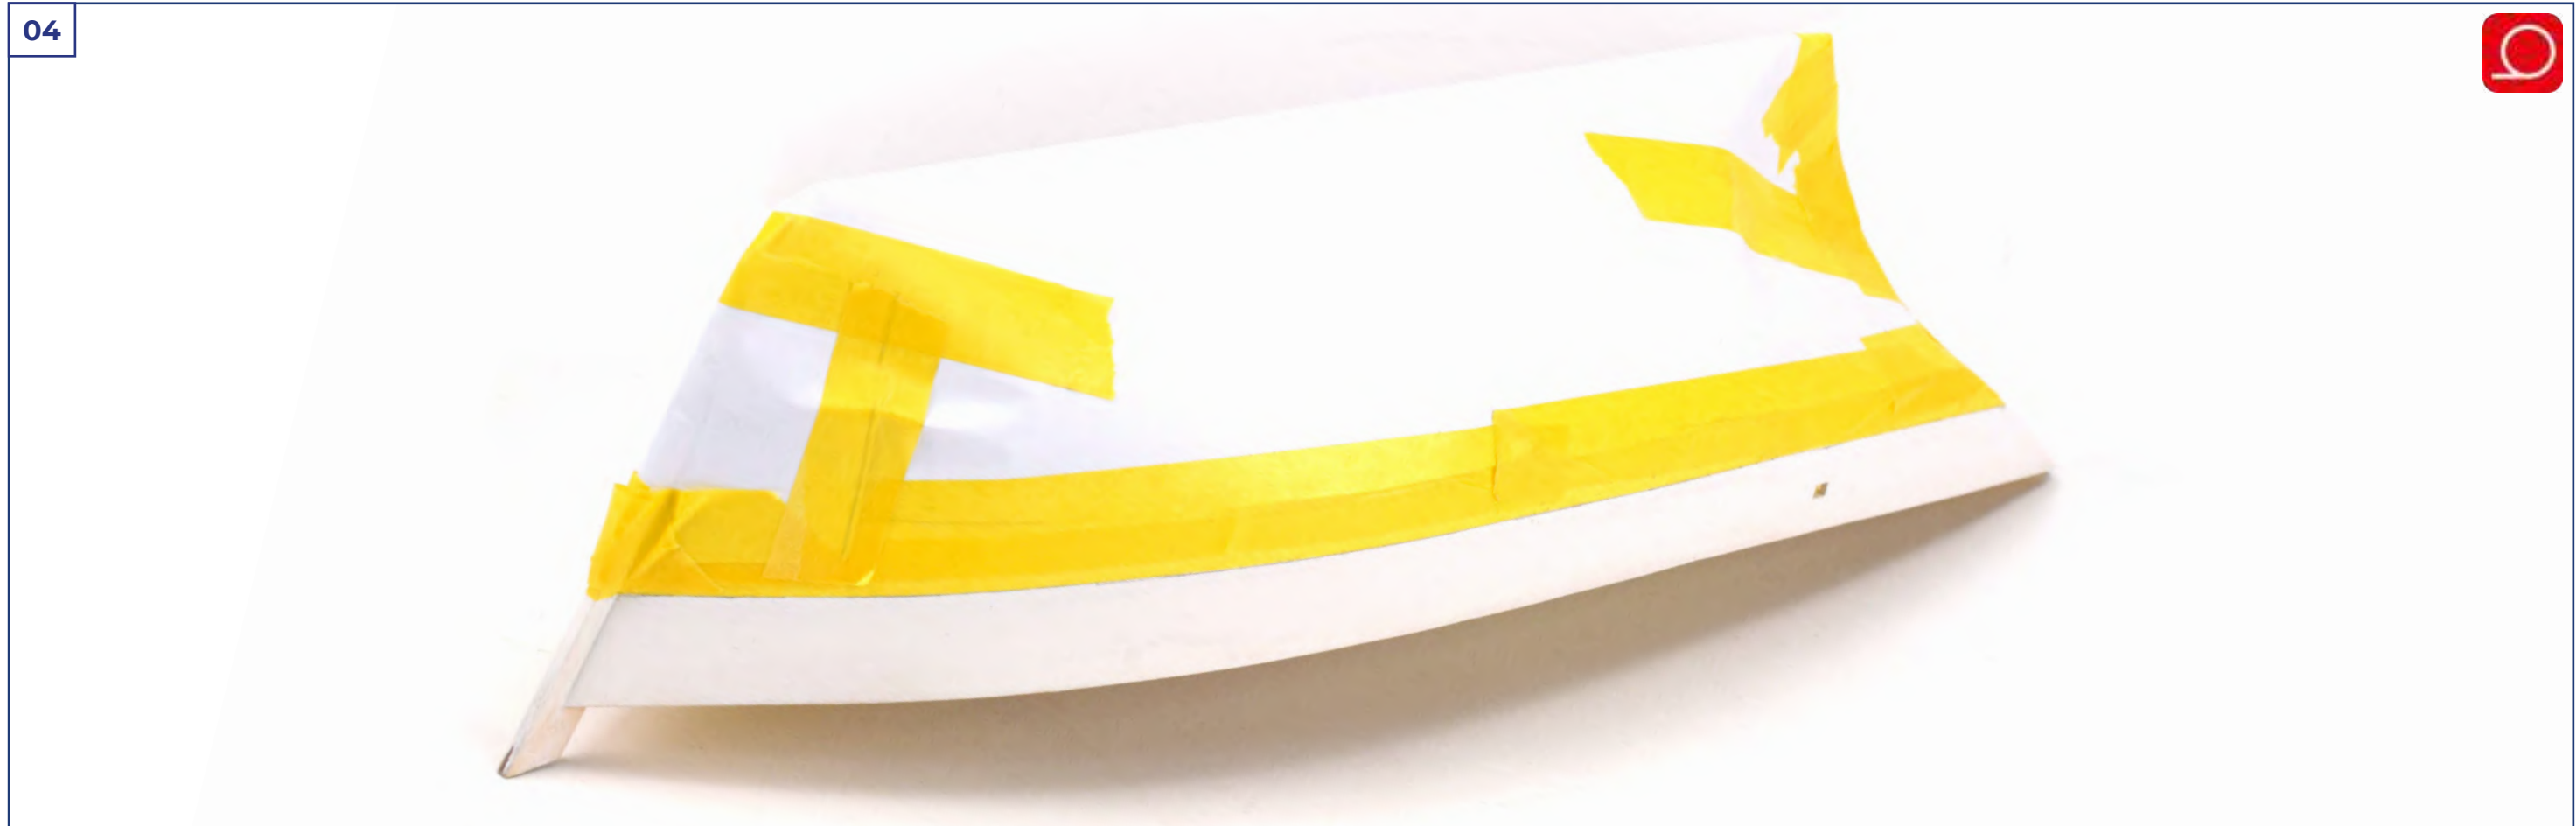

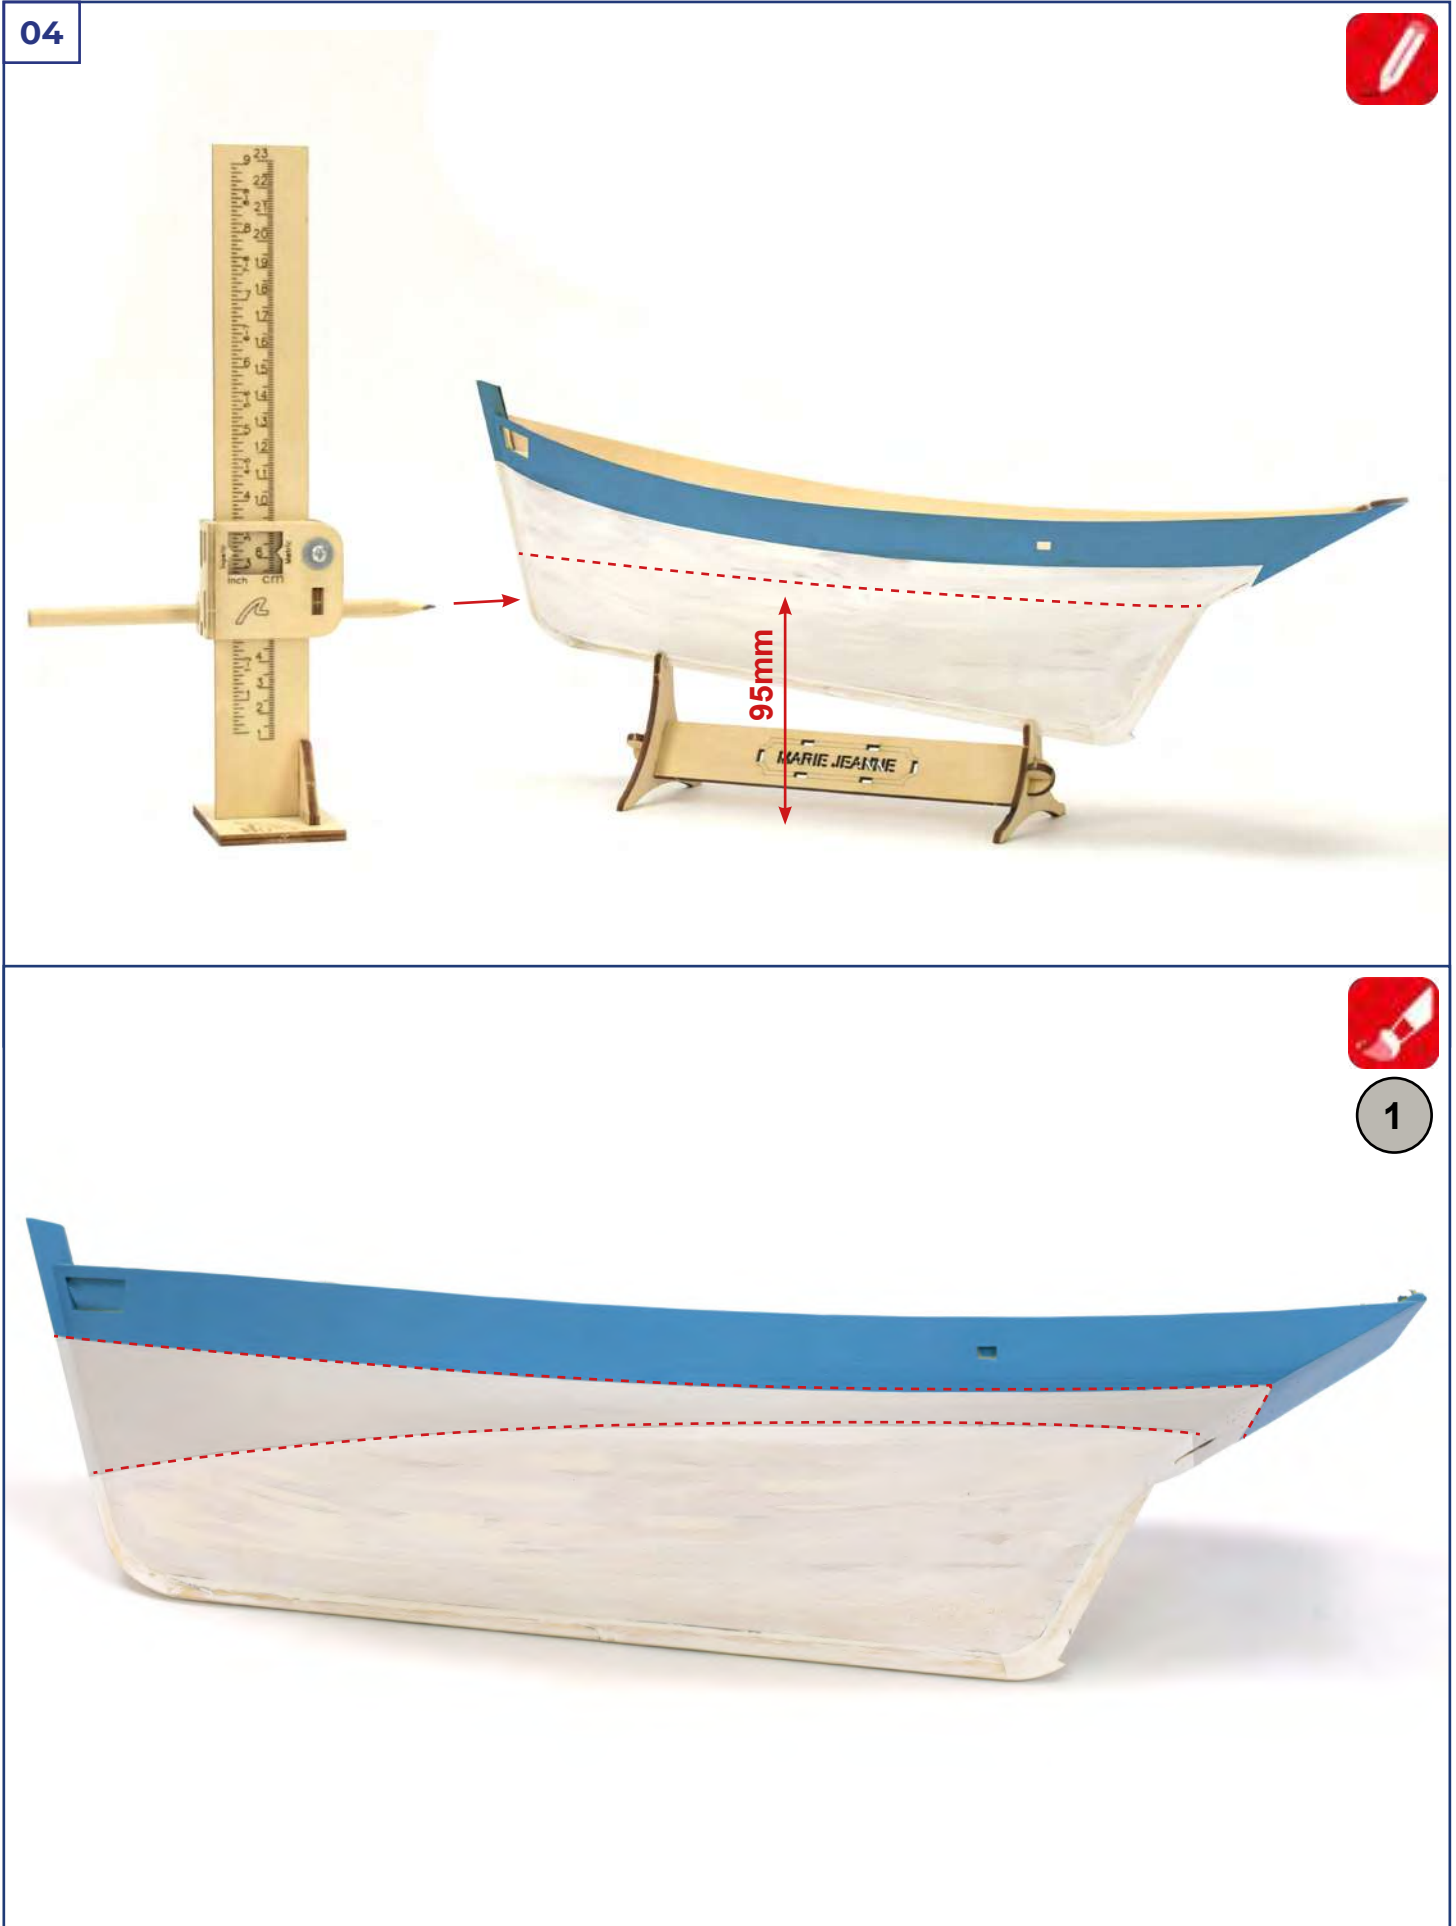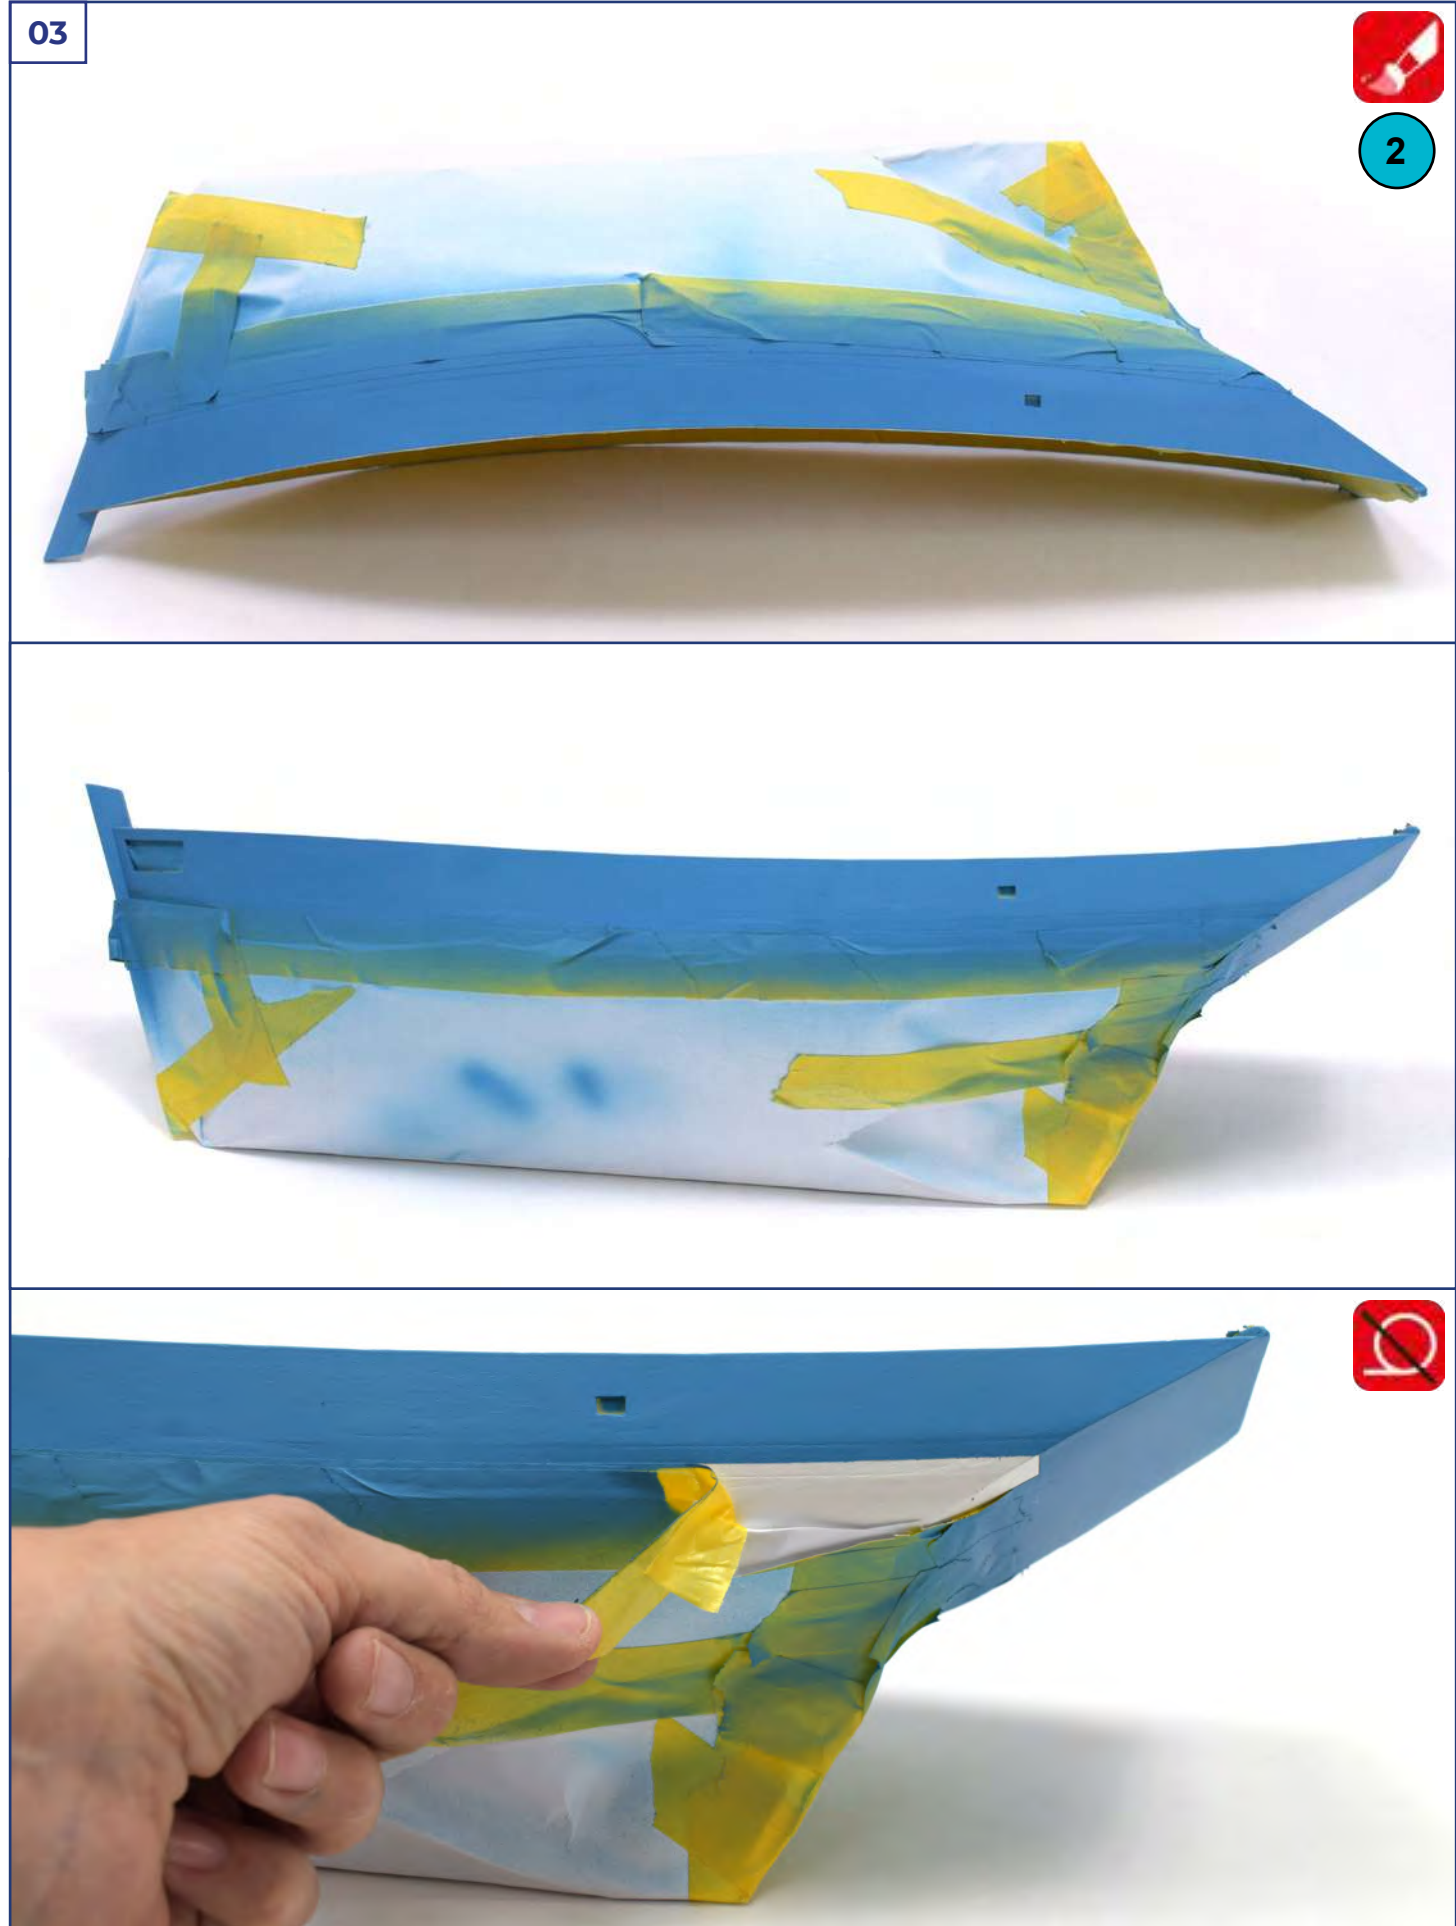



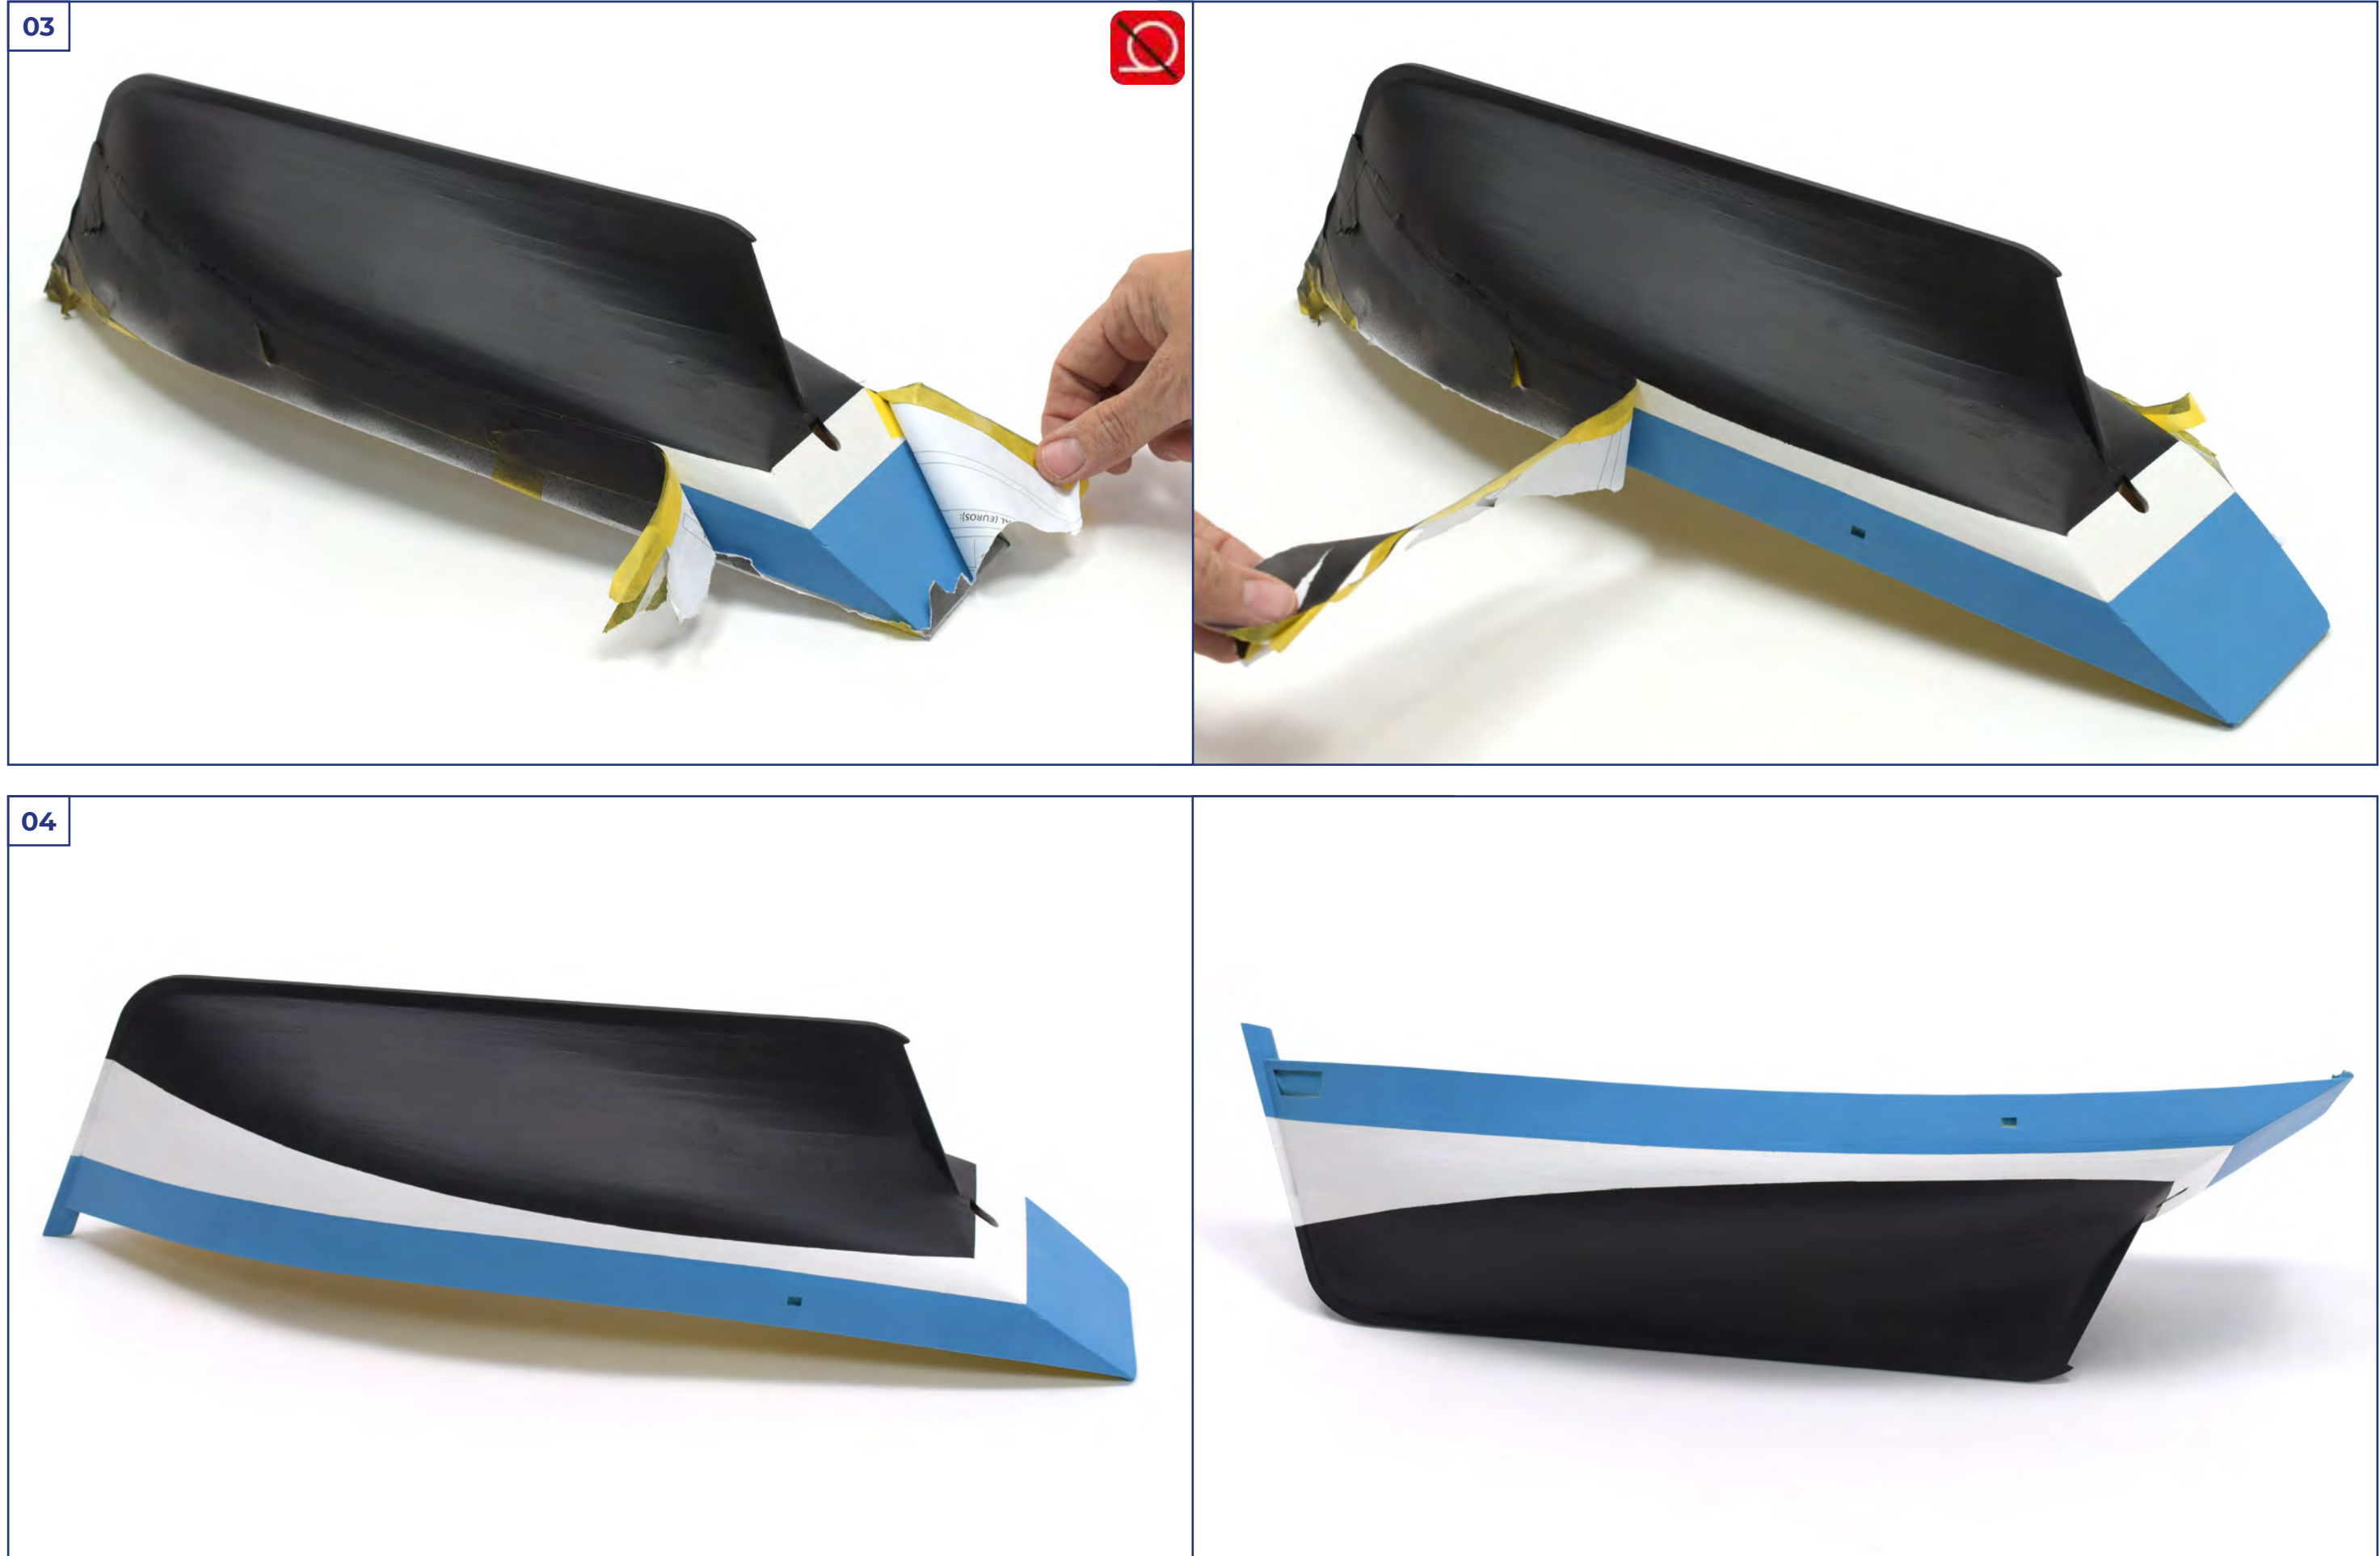


01






02







03

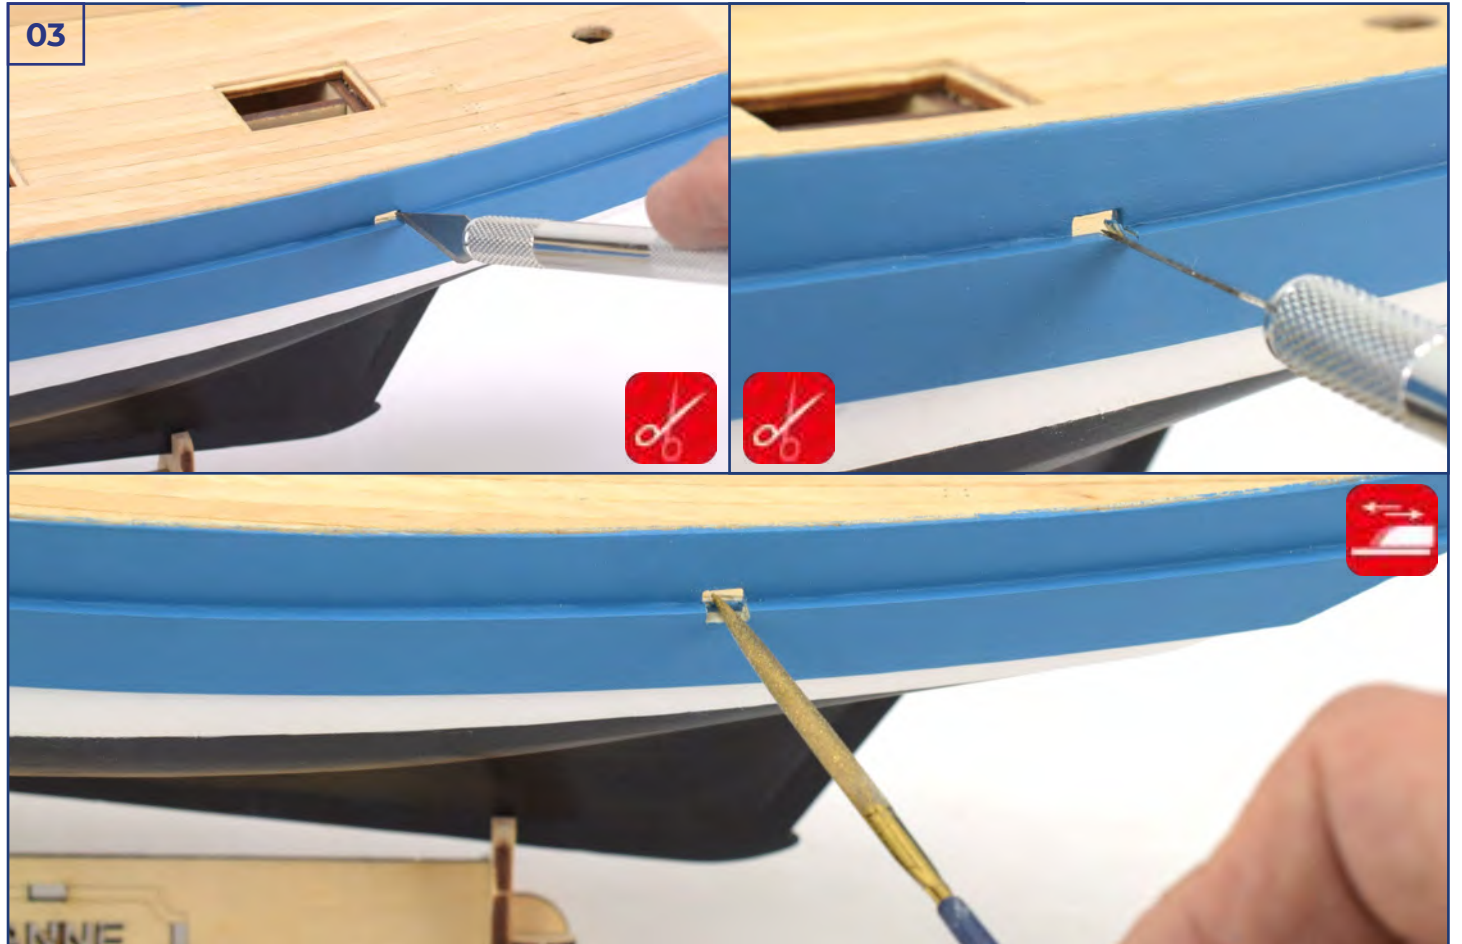

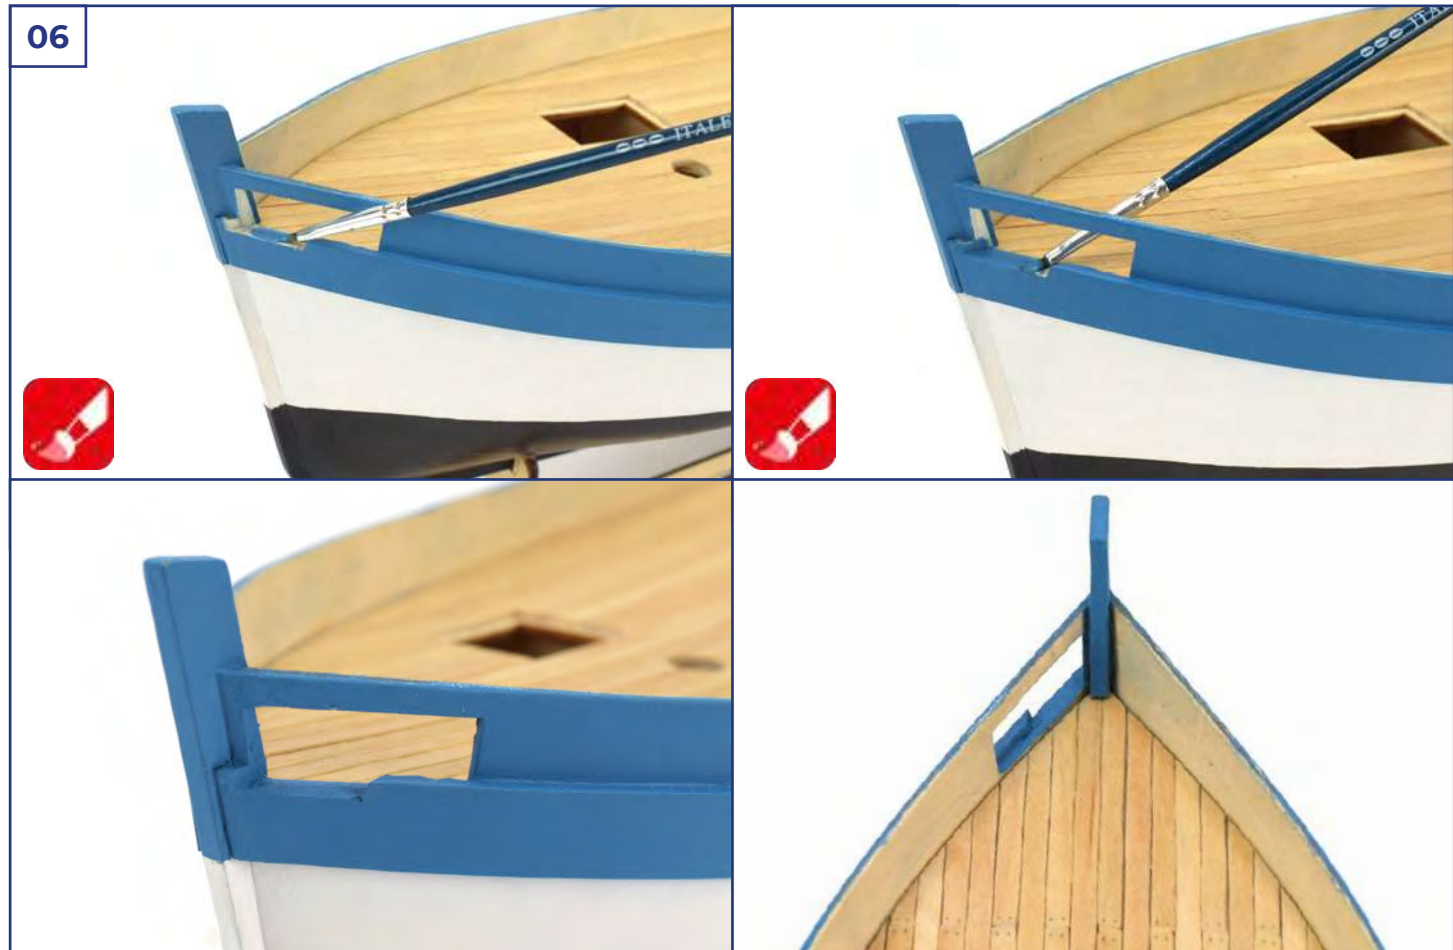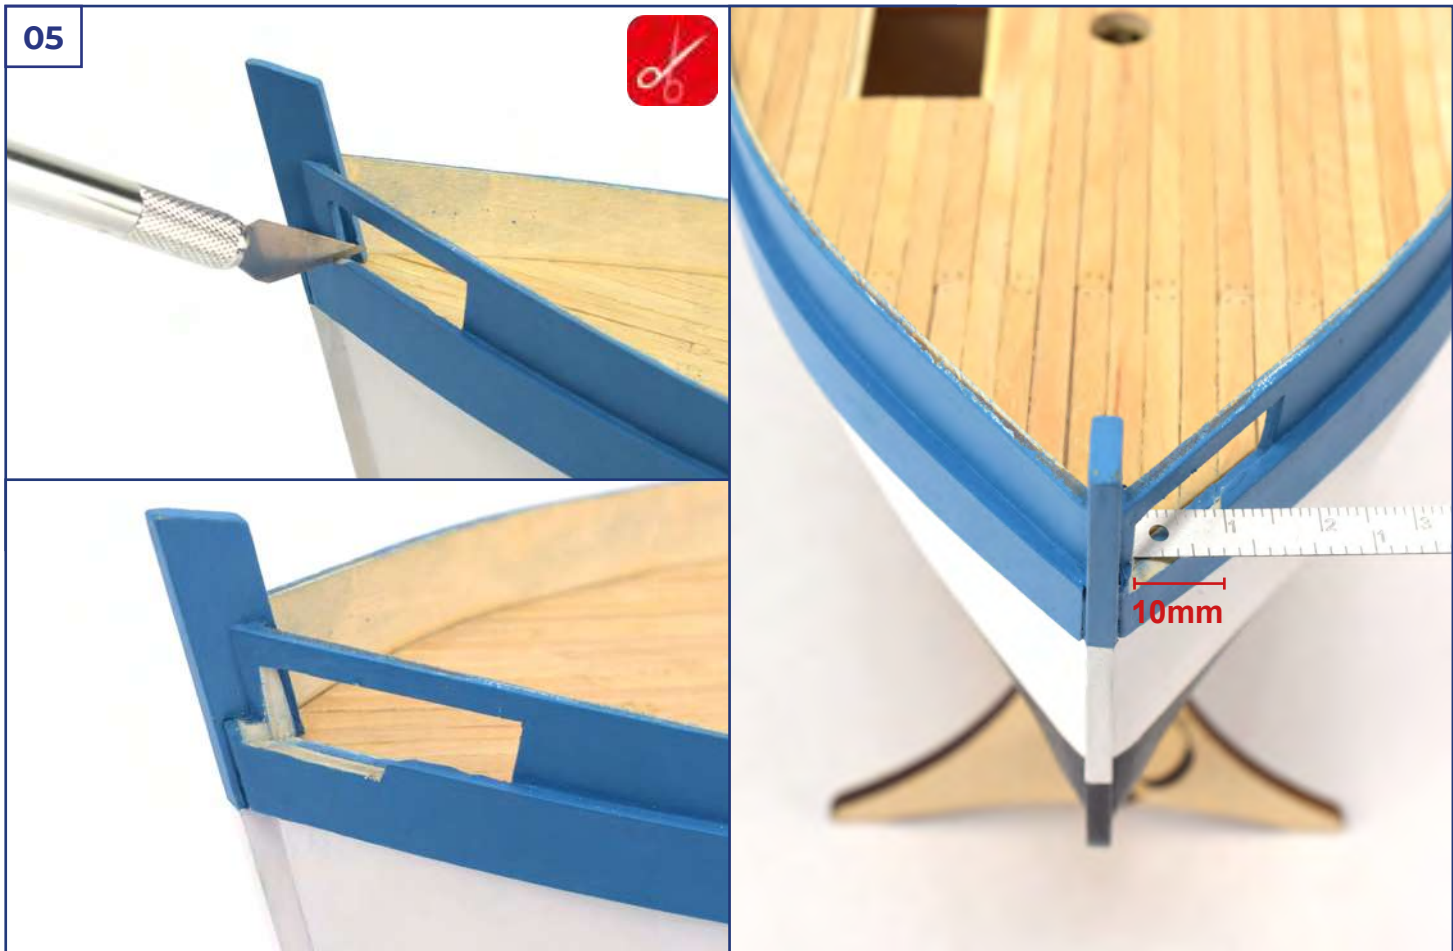





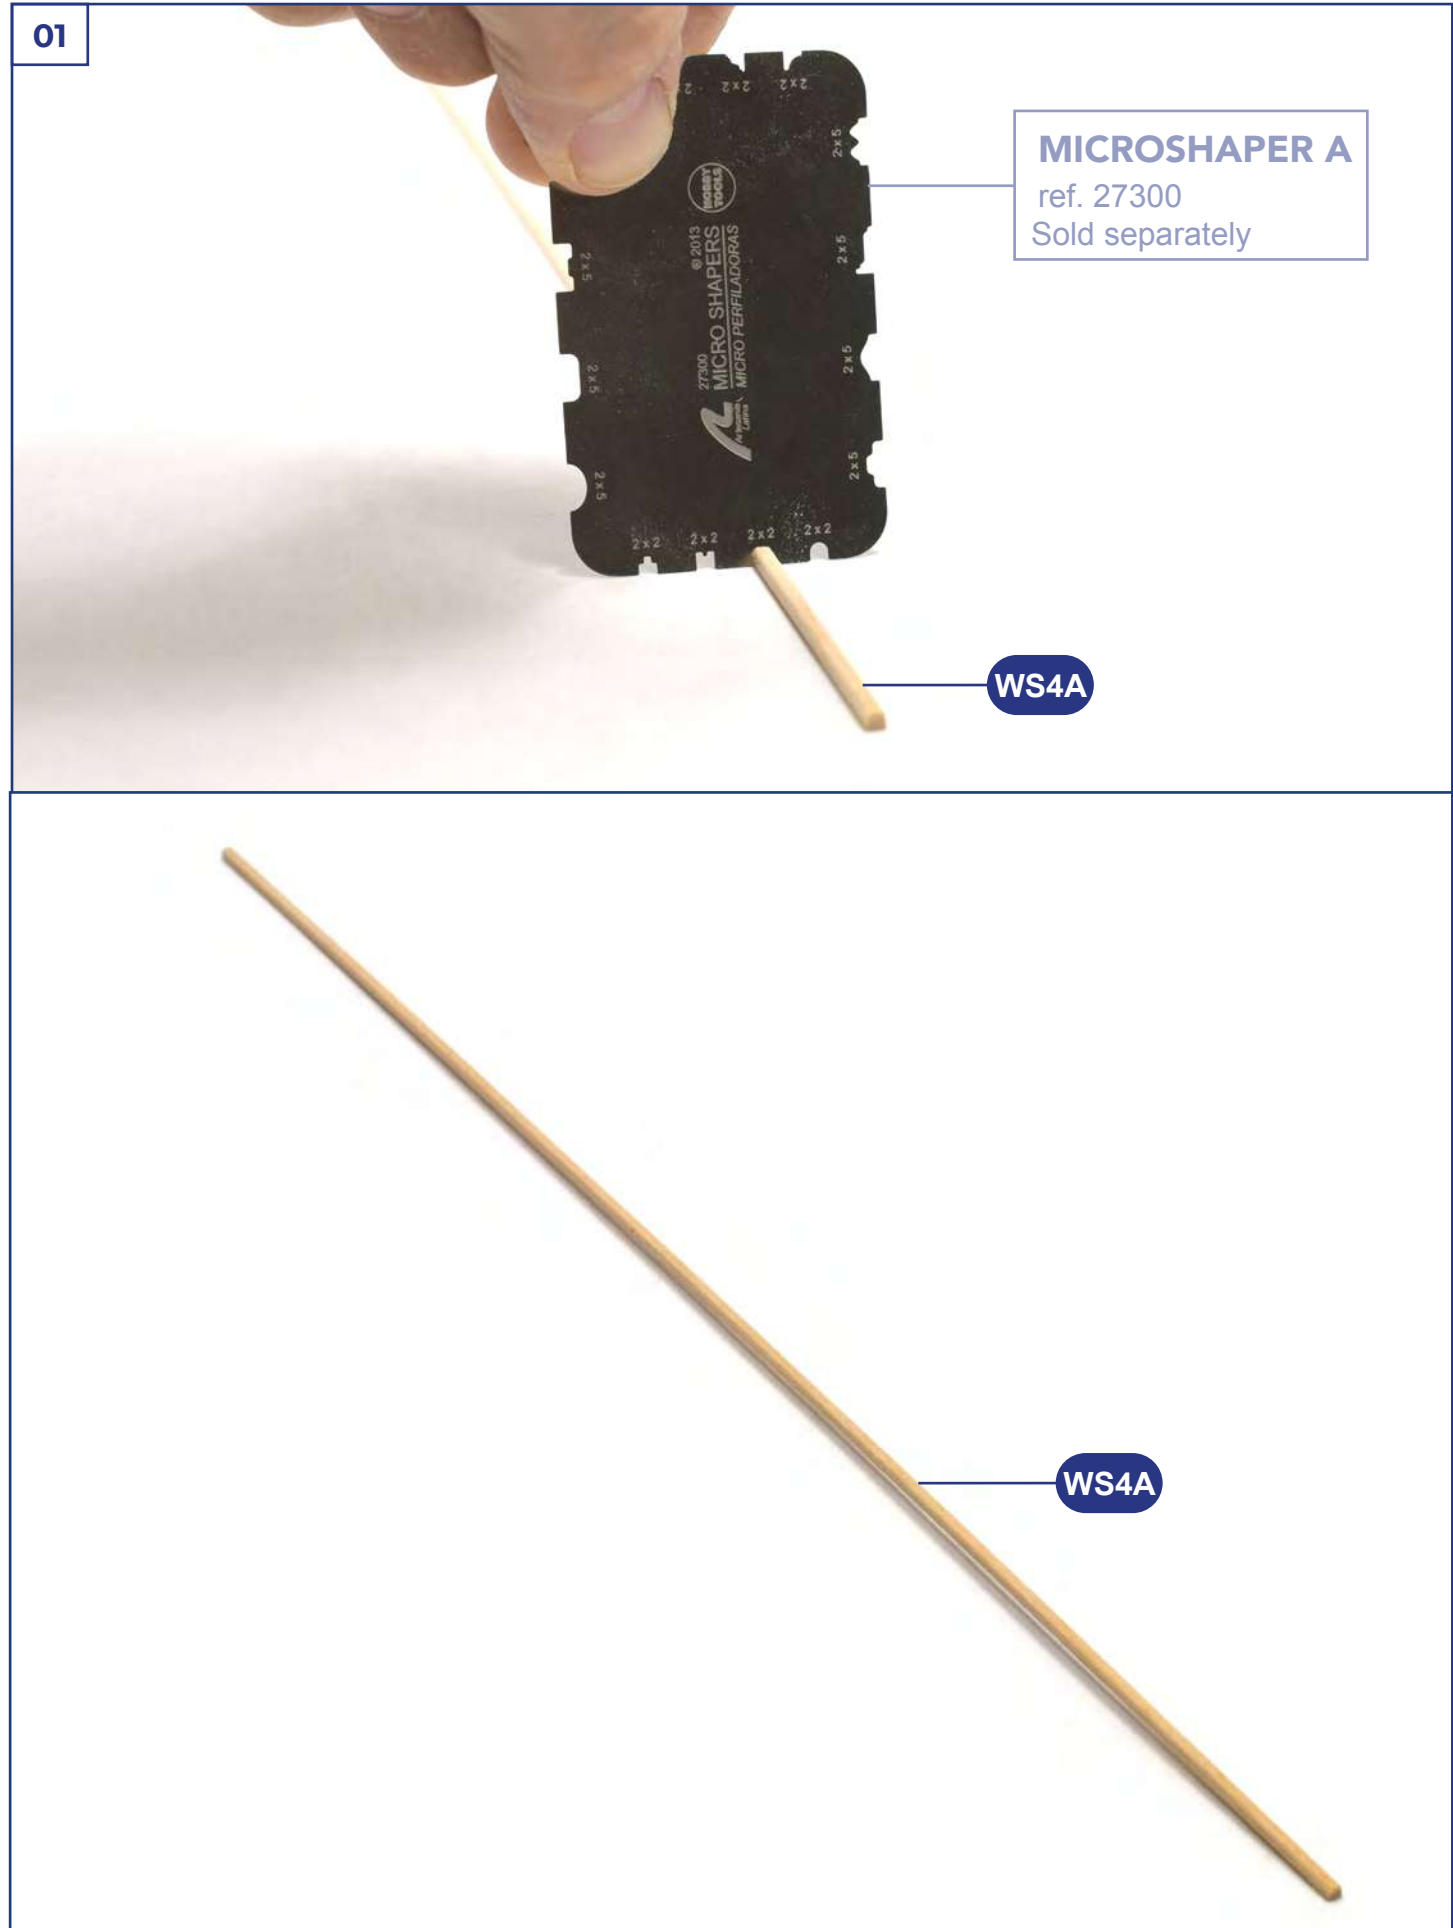







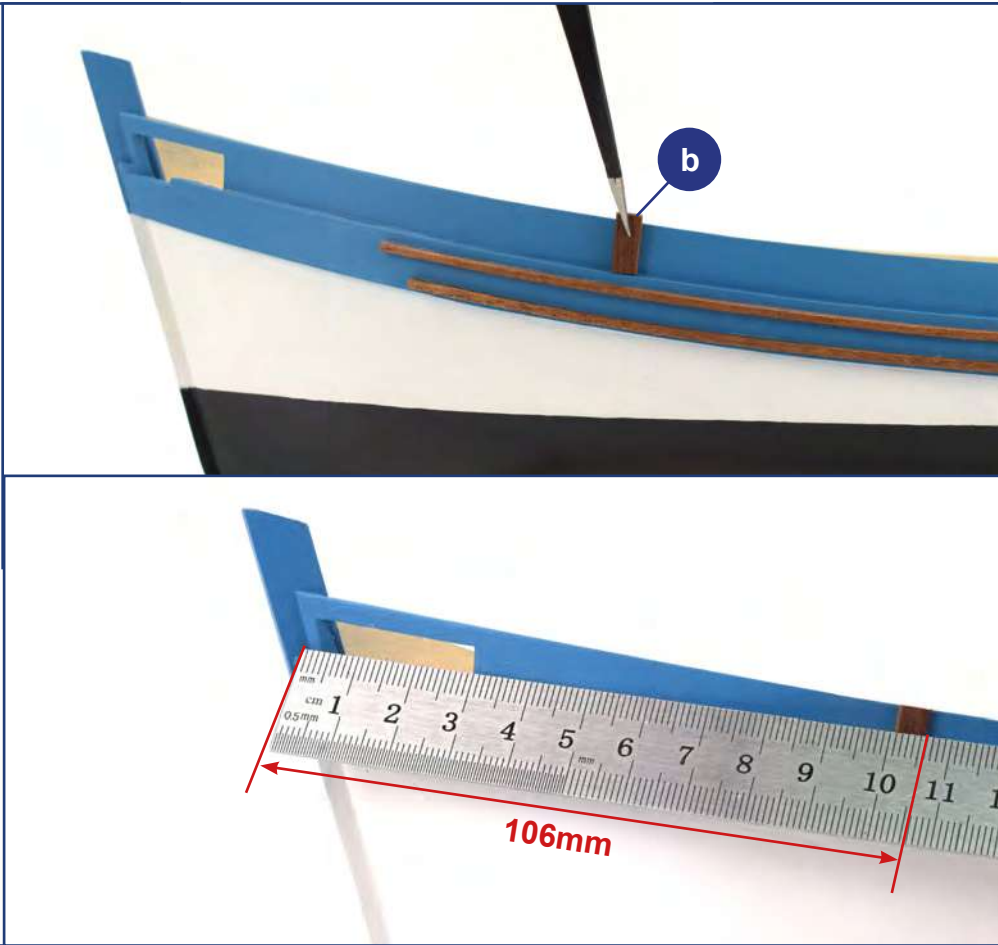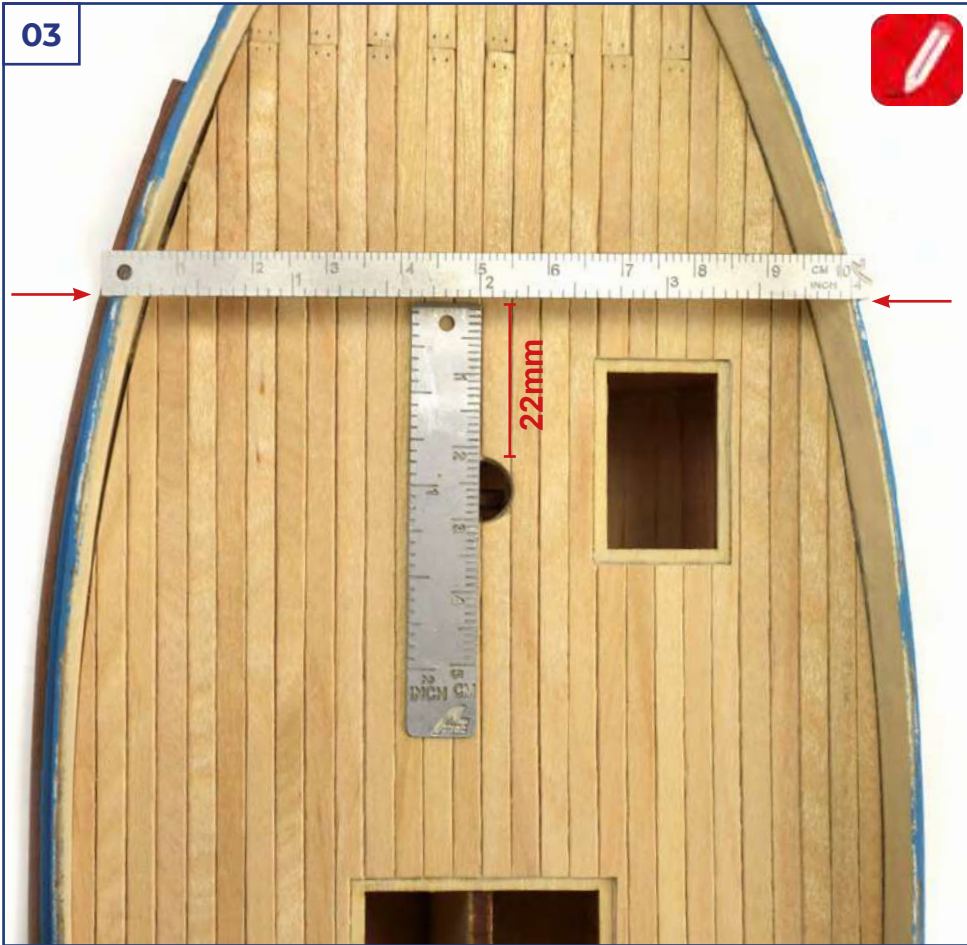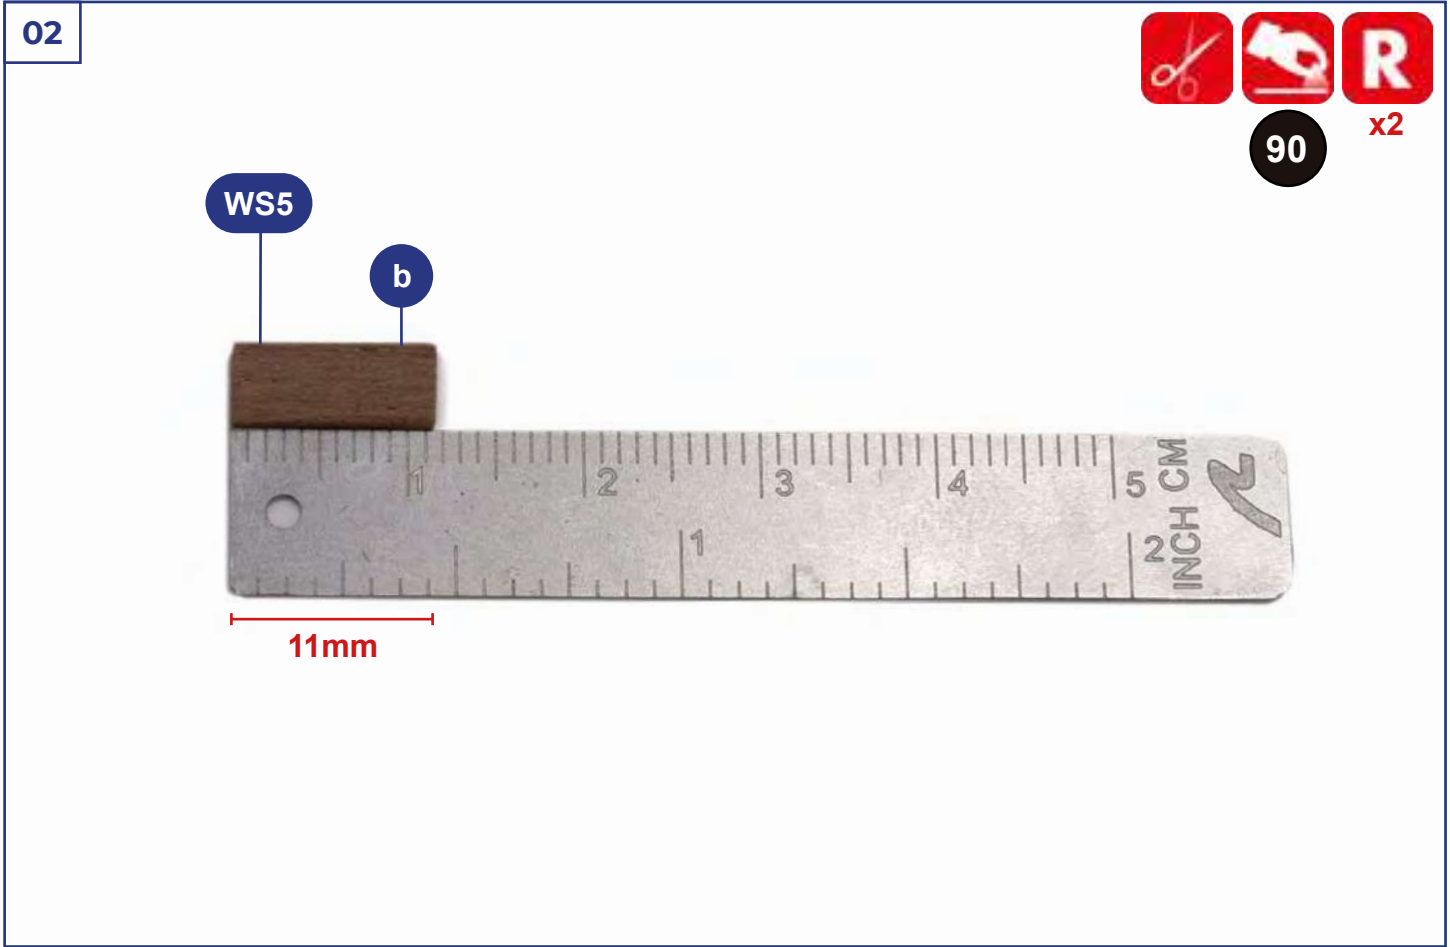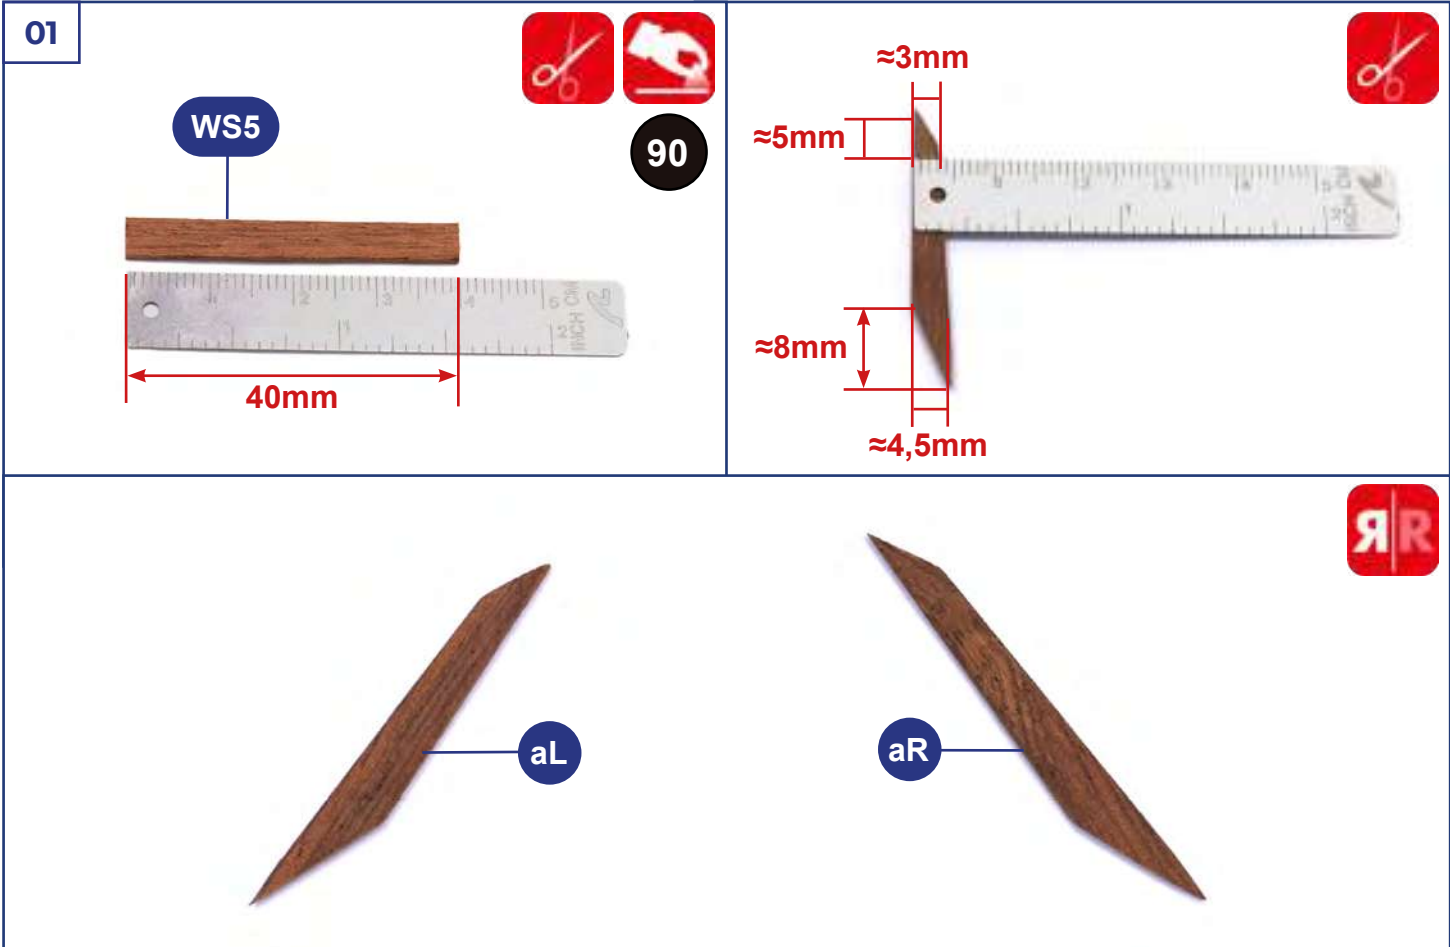



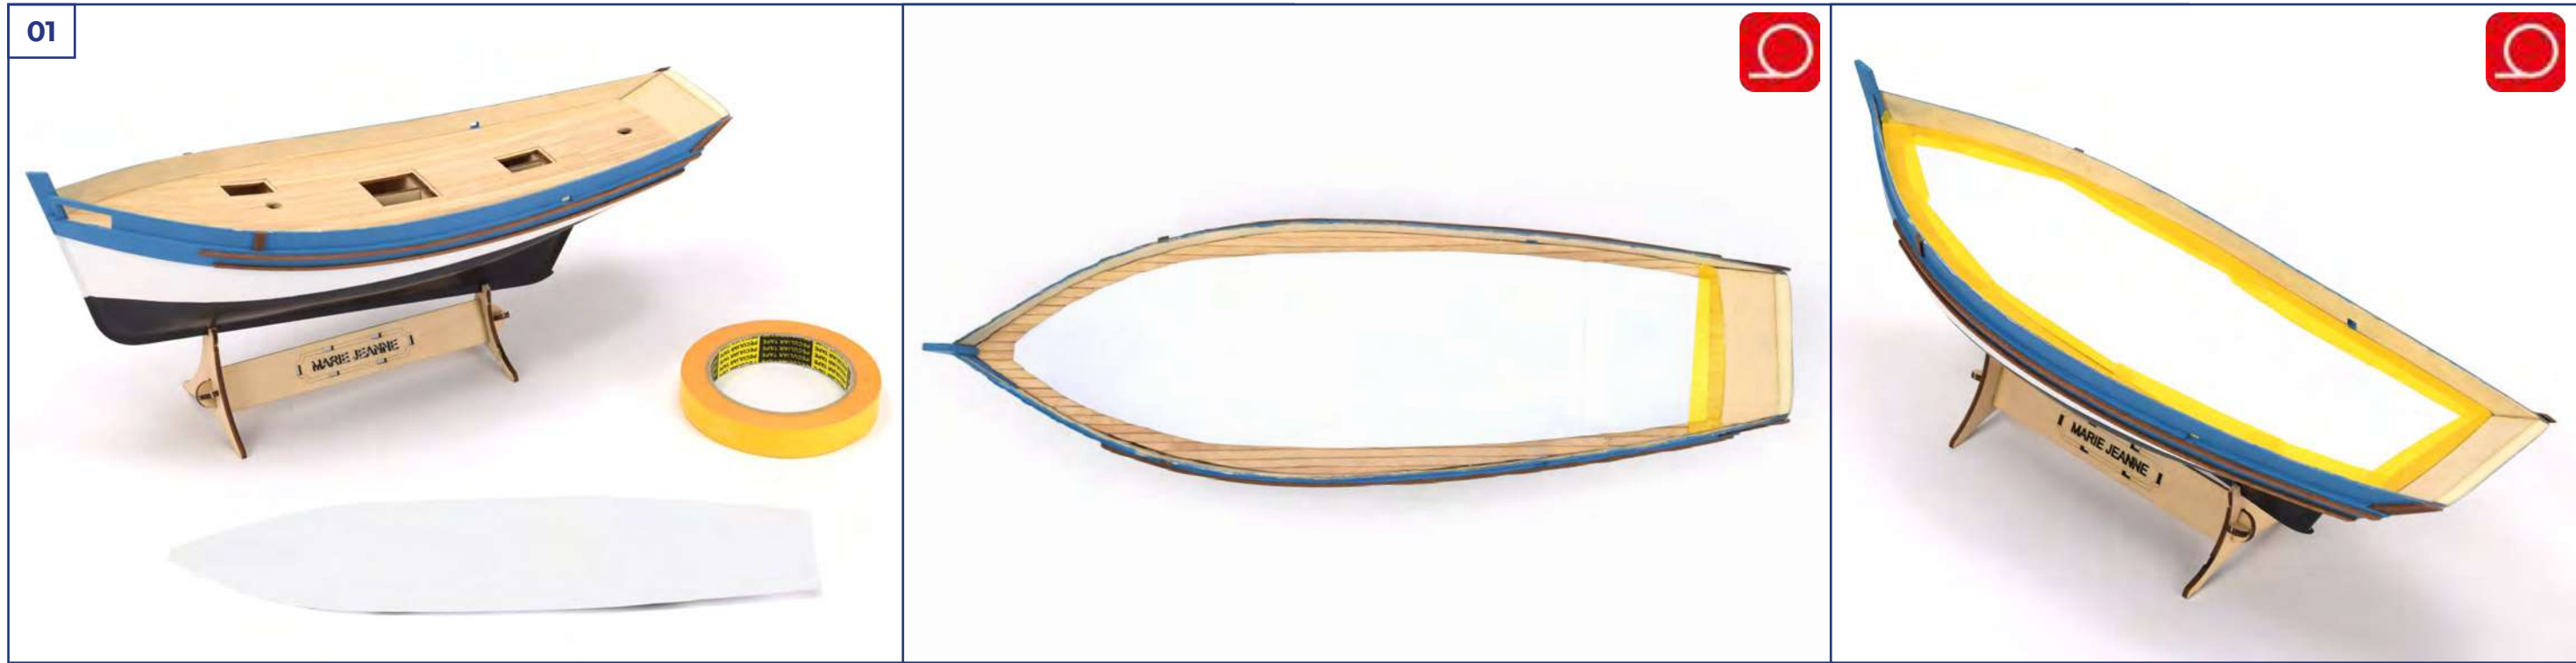

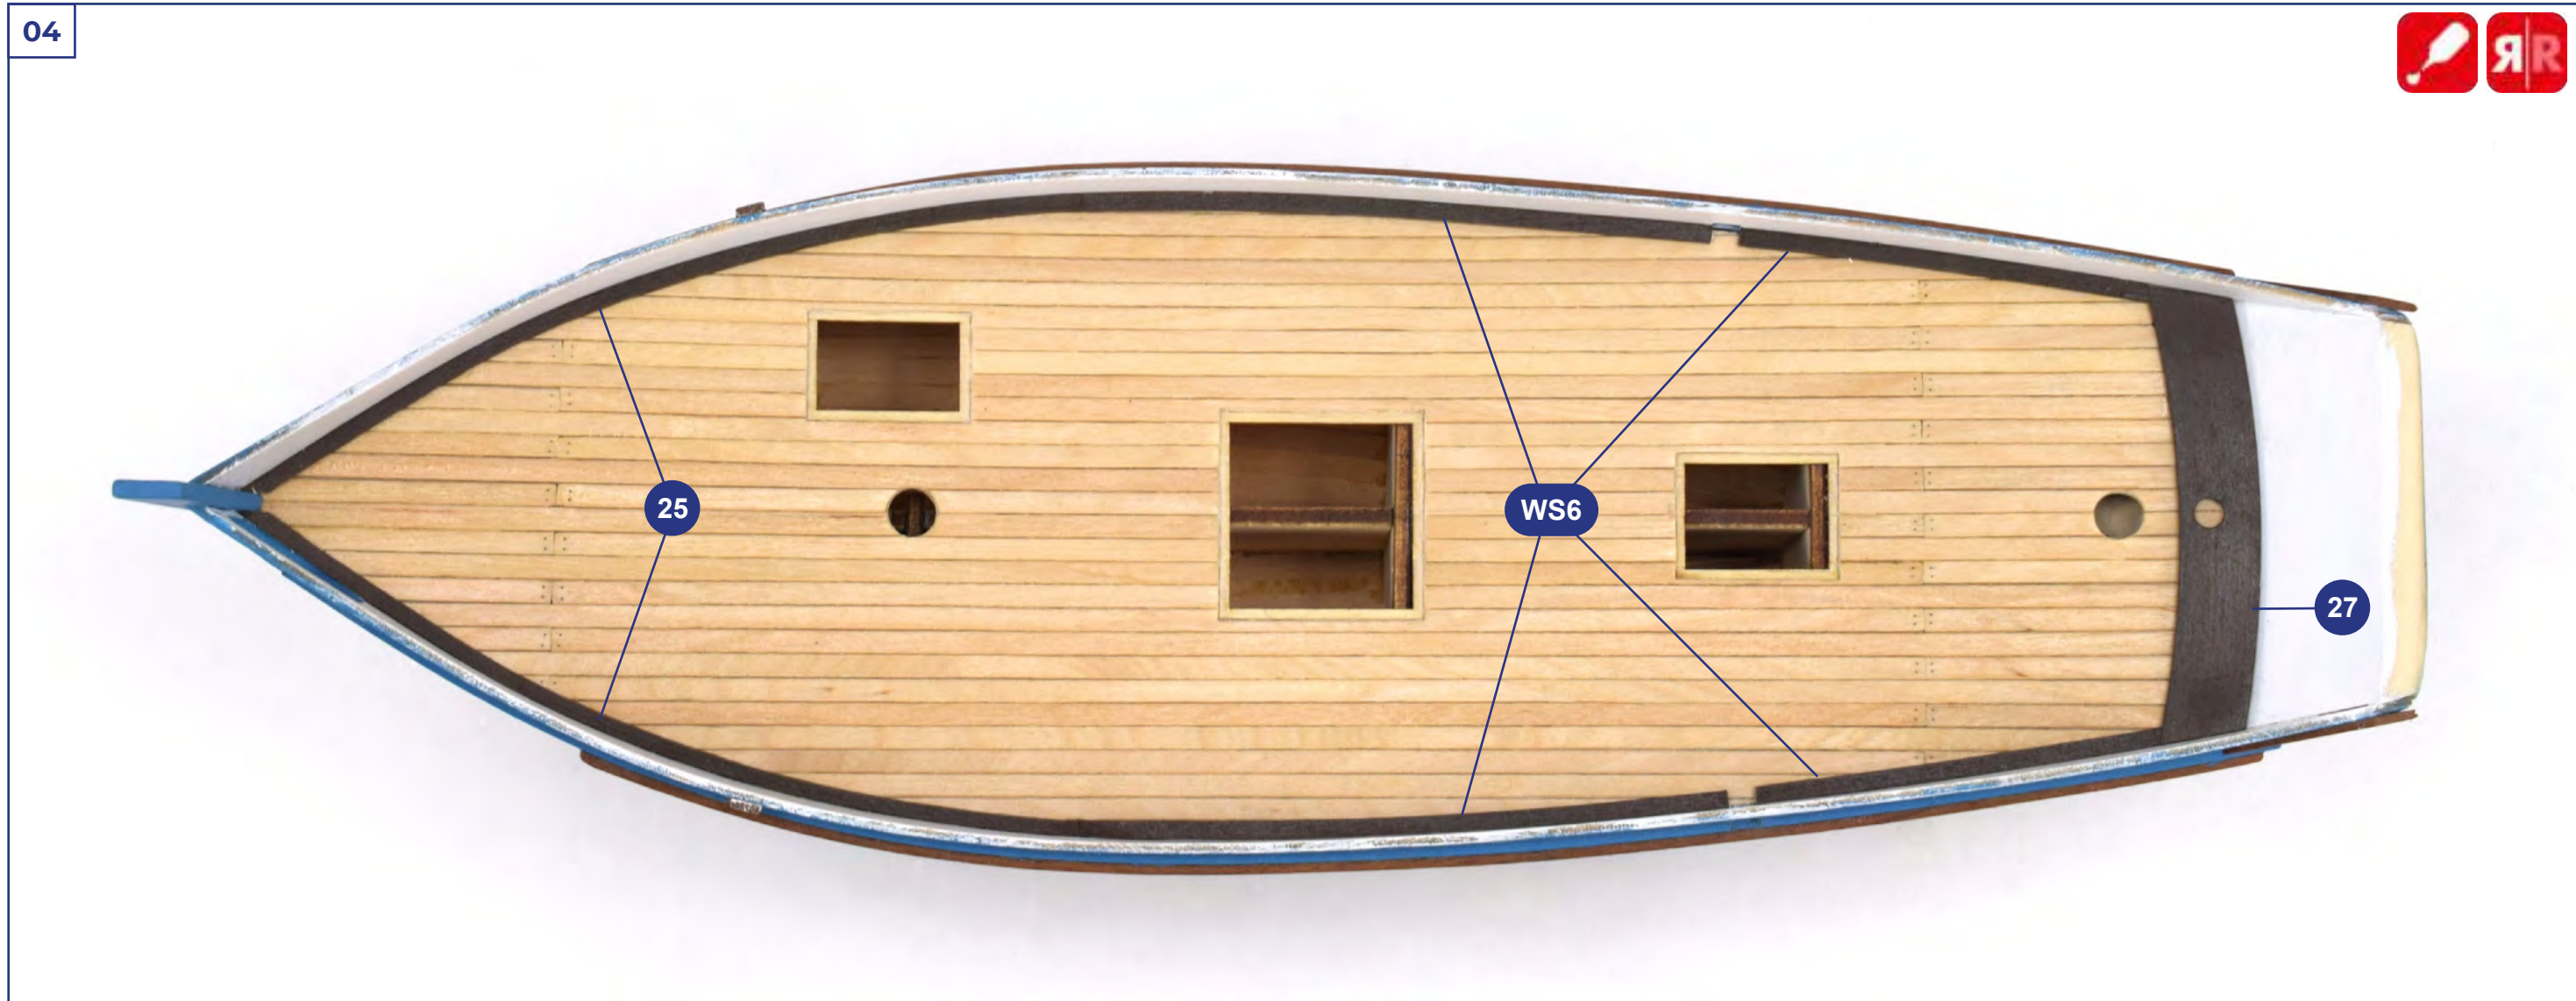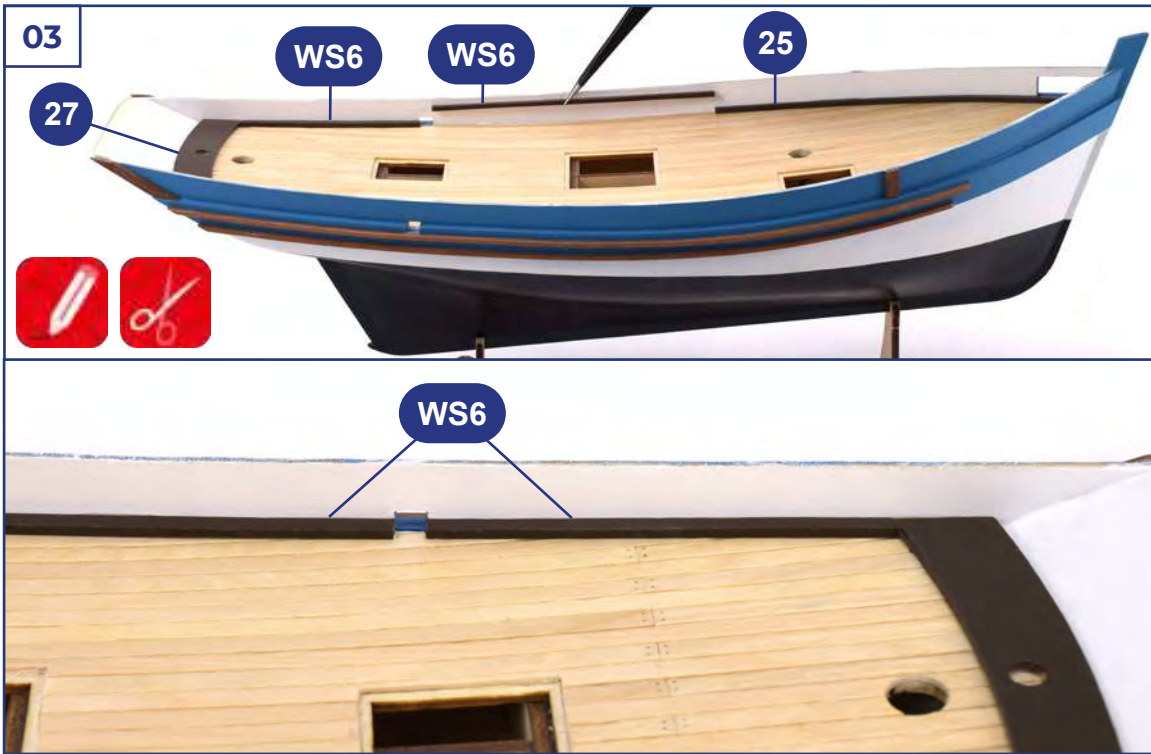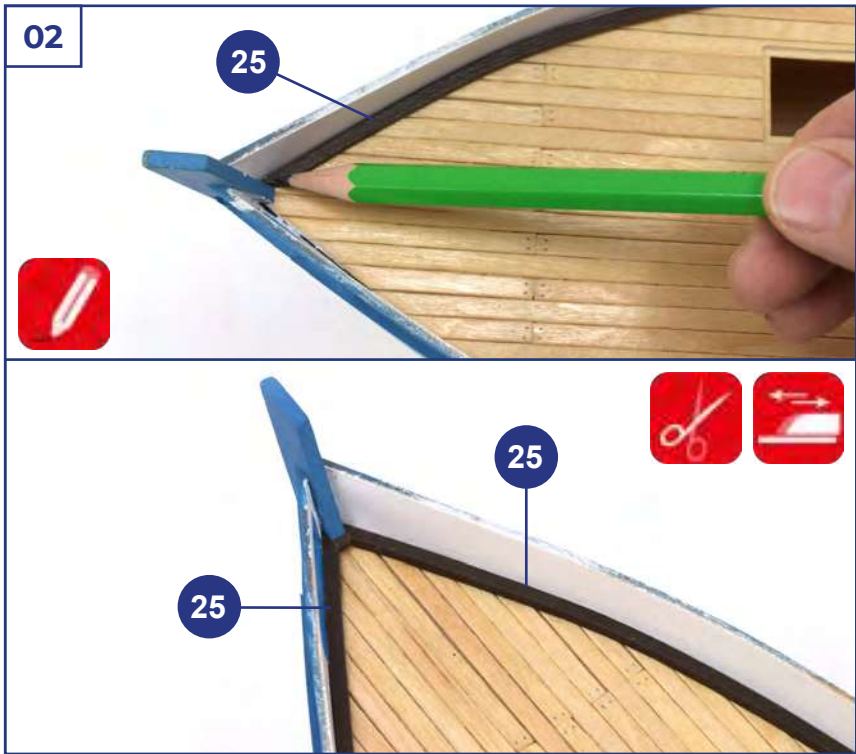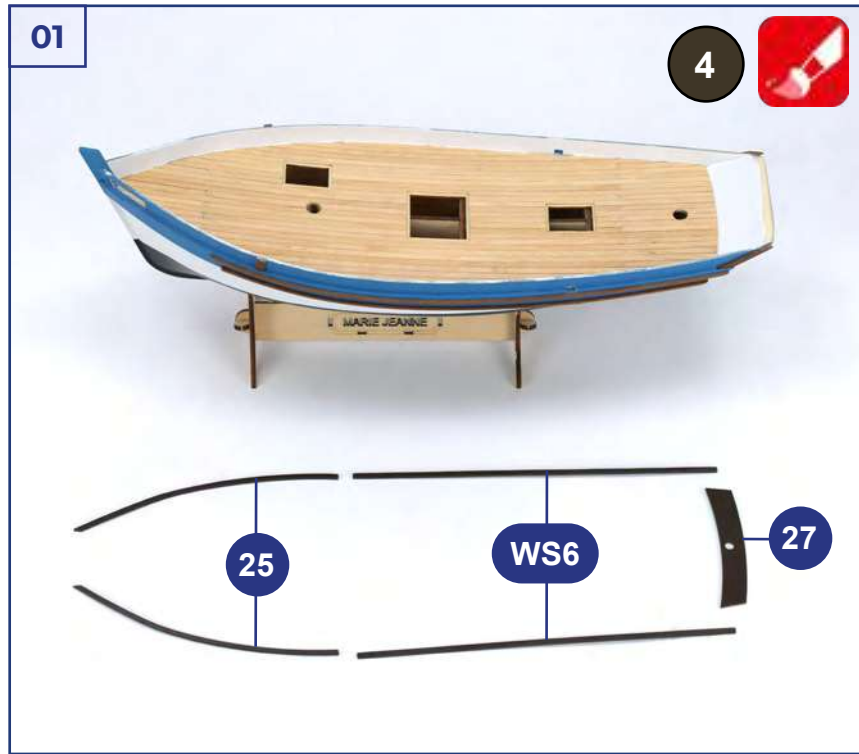


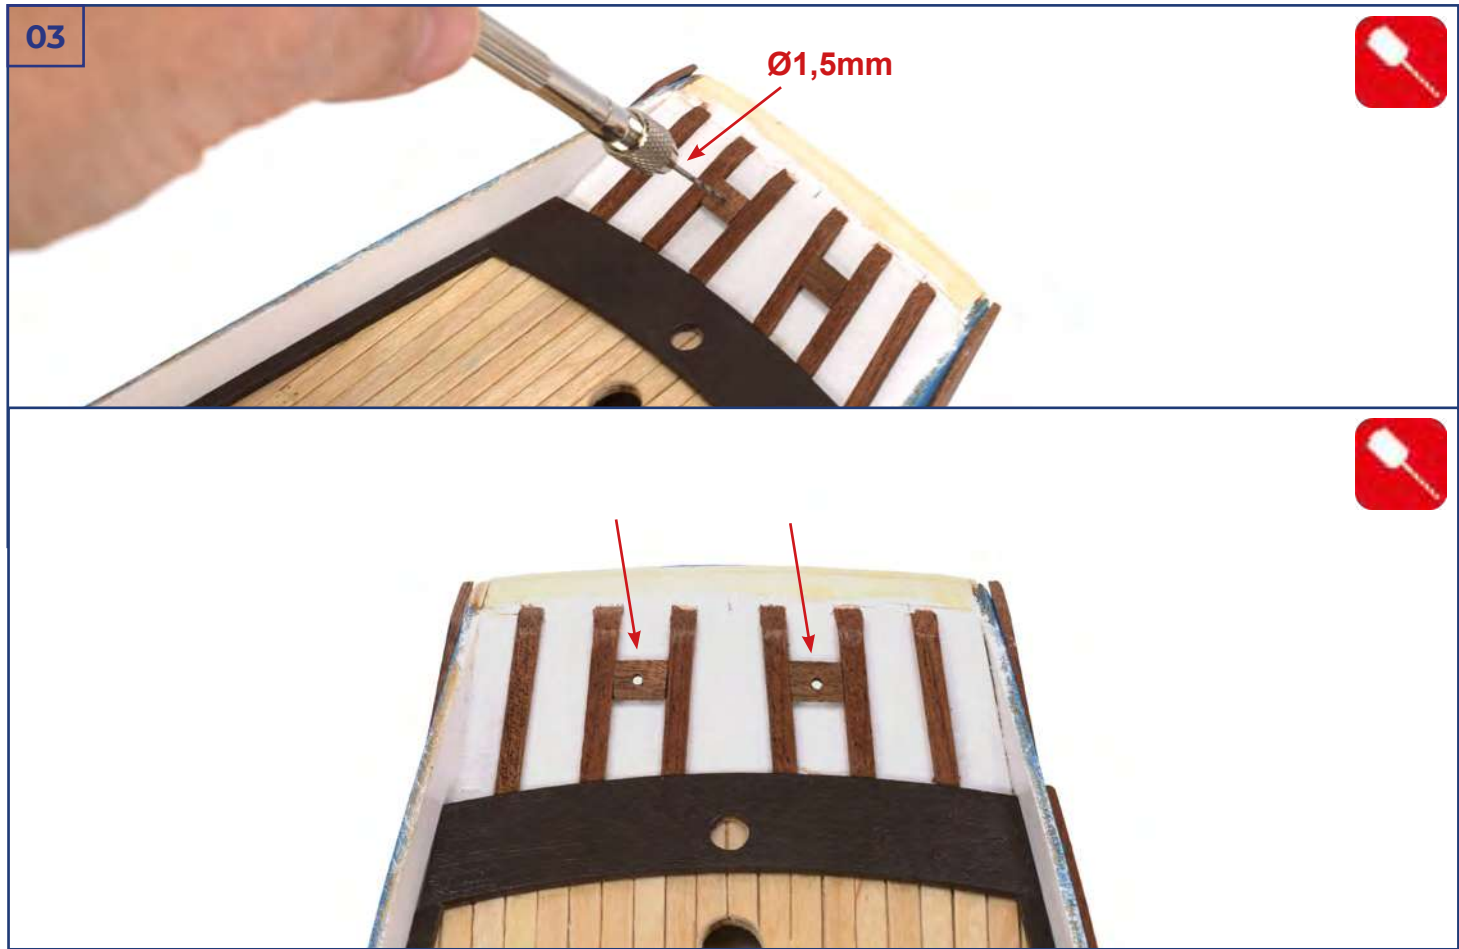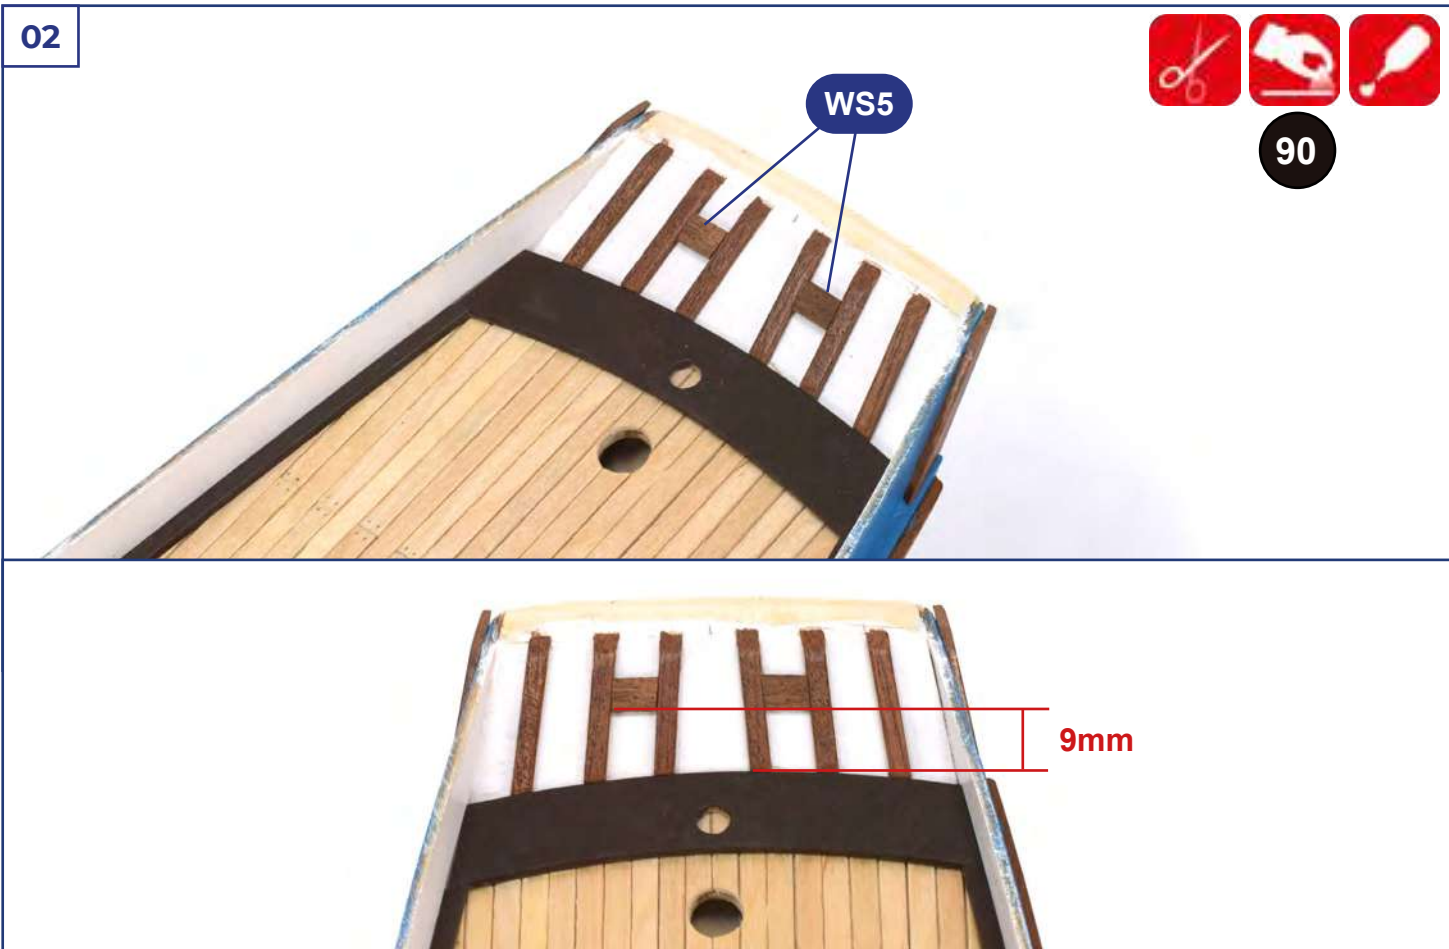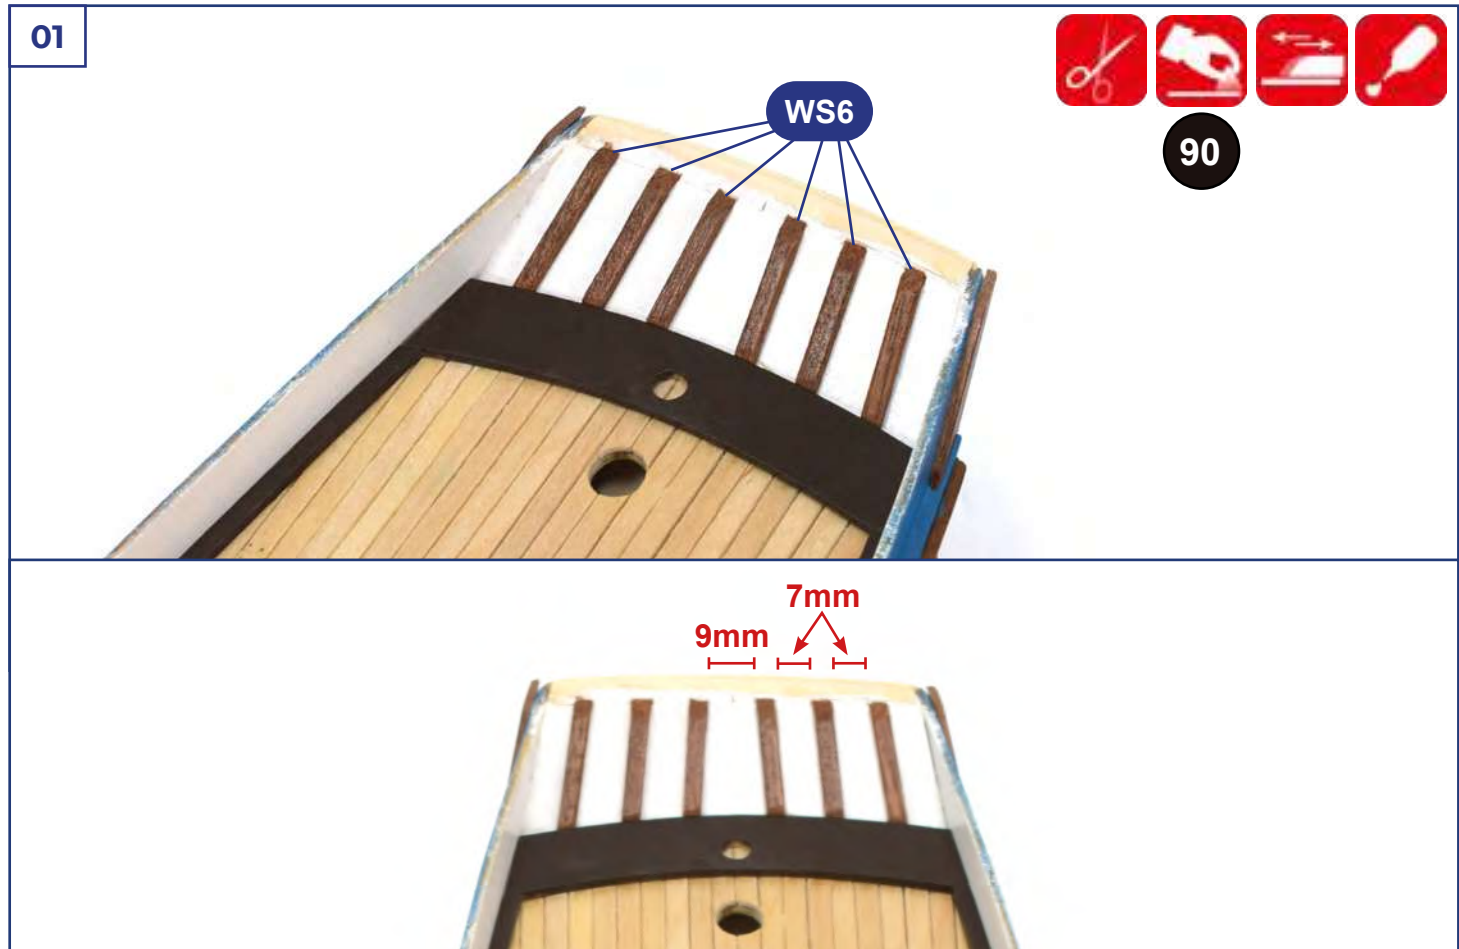





08



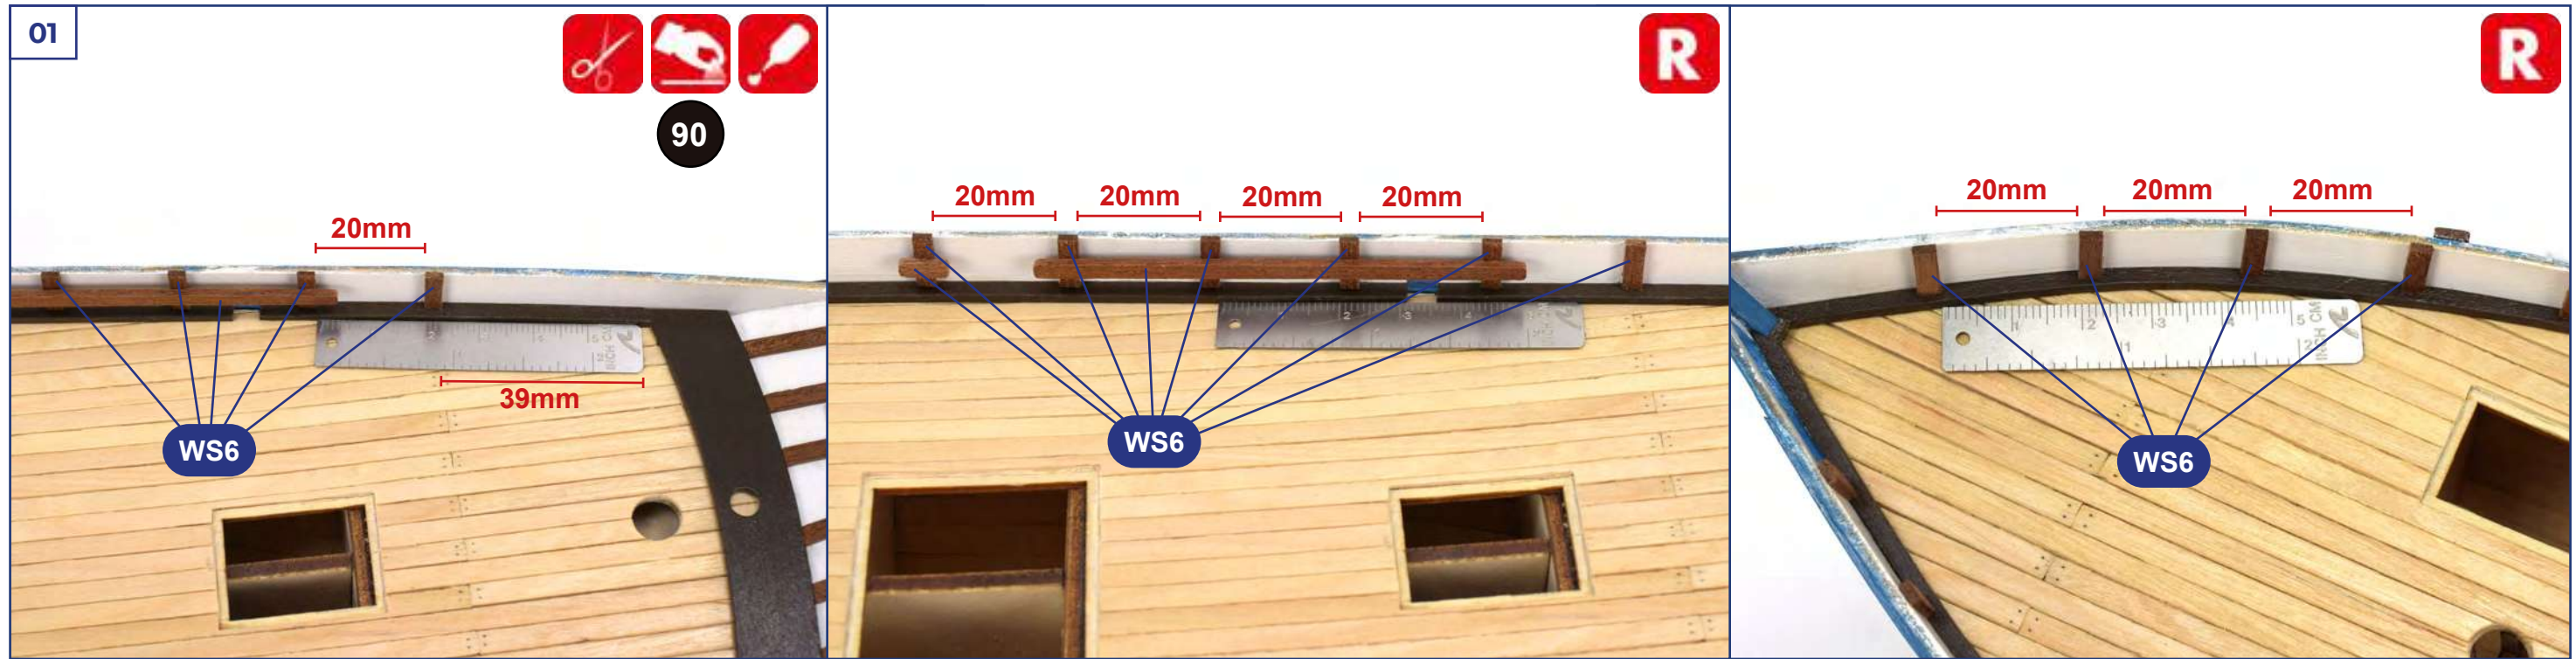

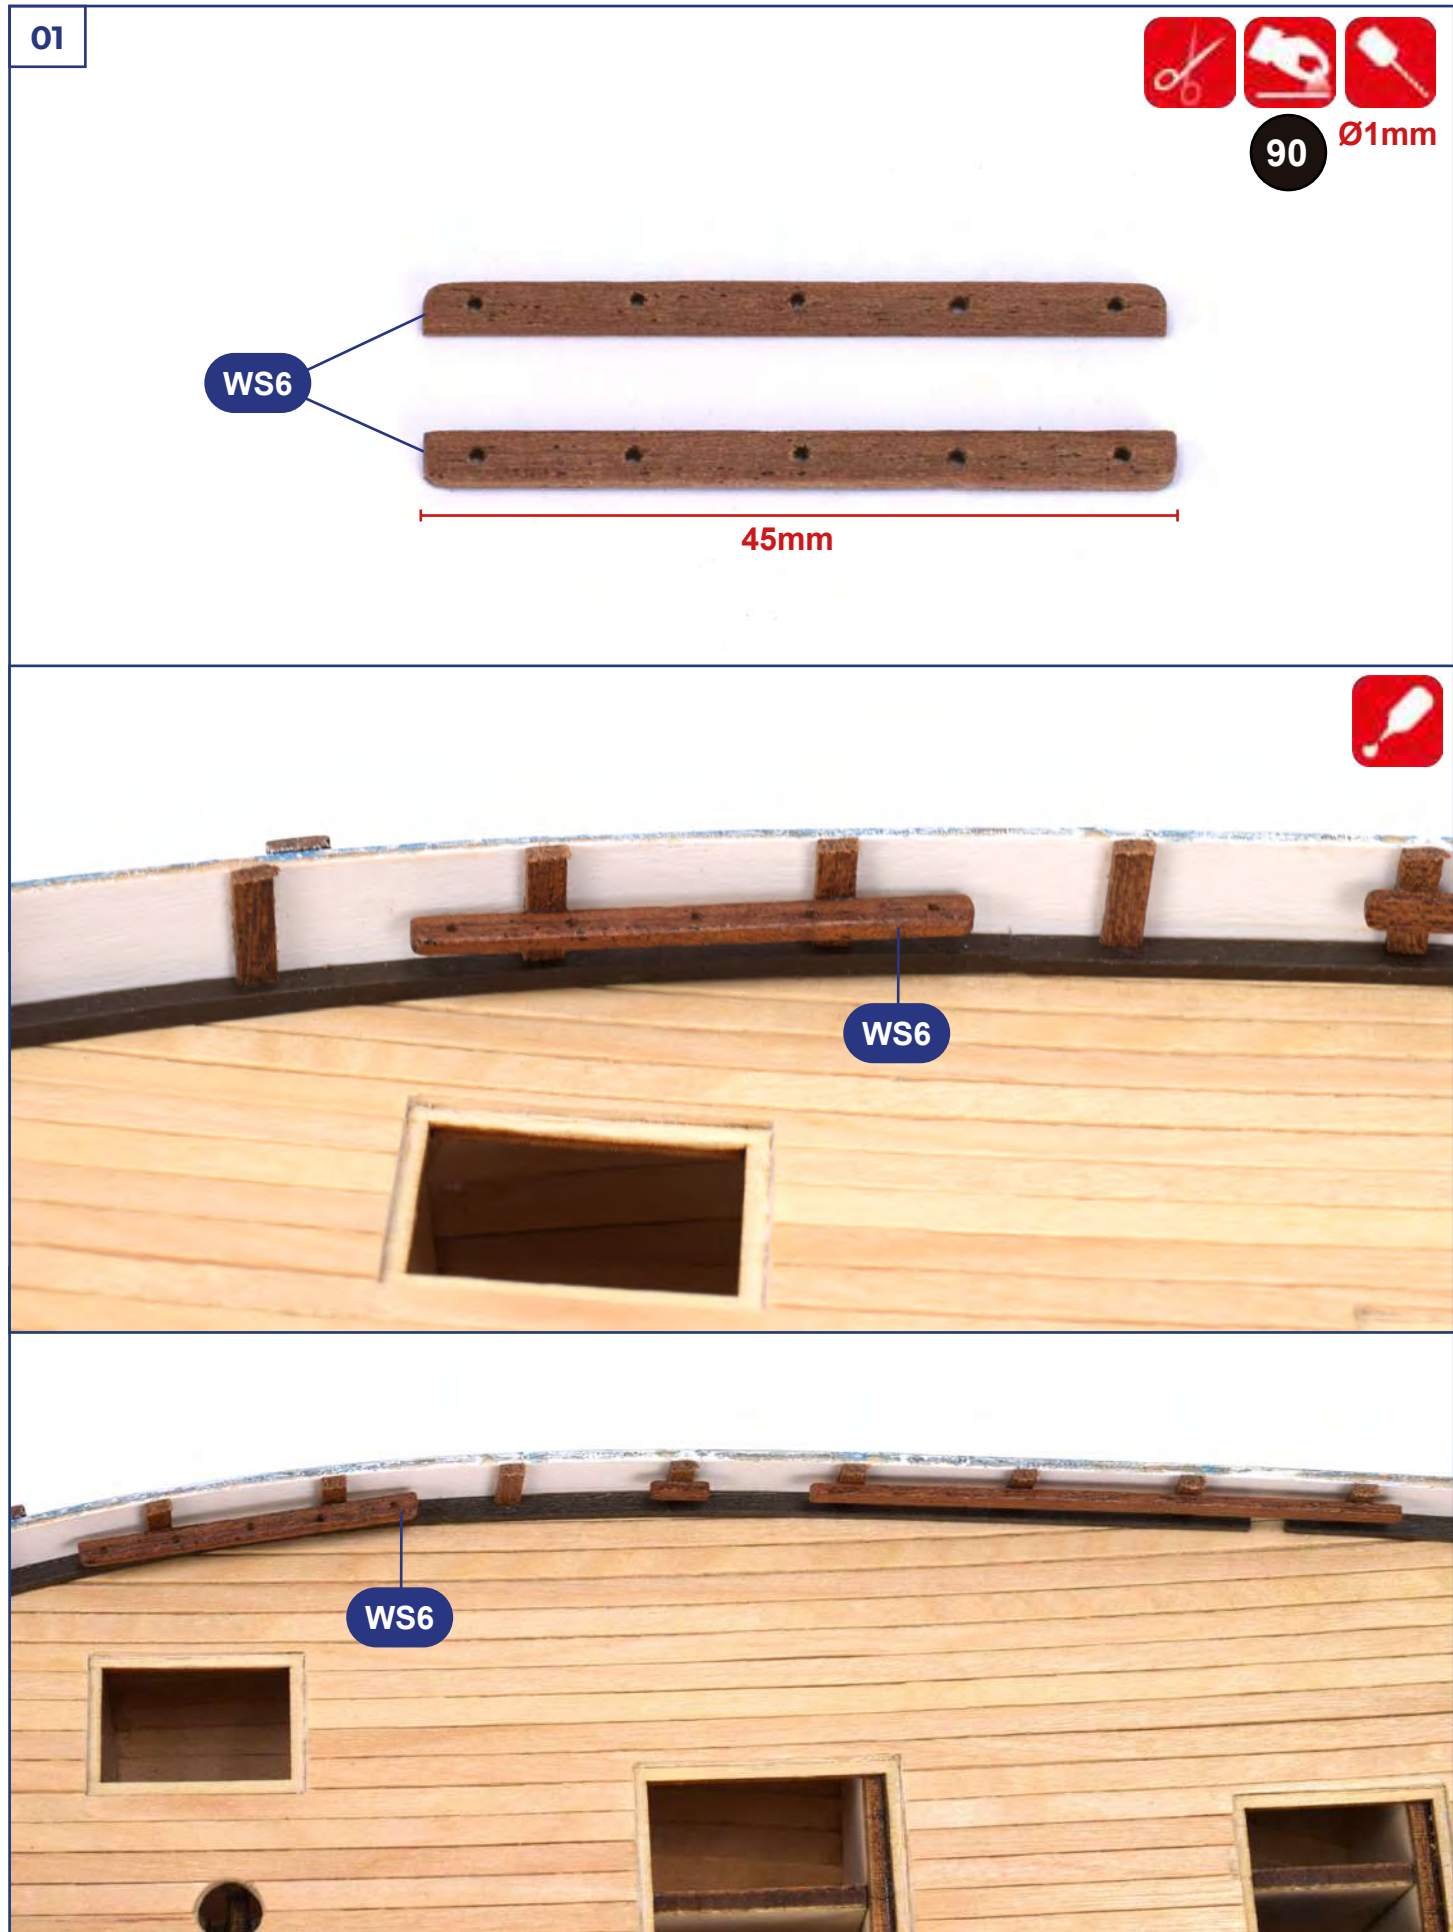

01

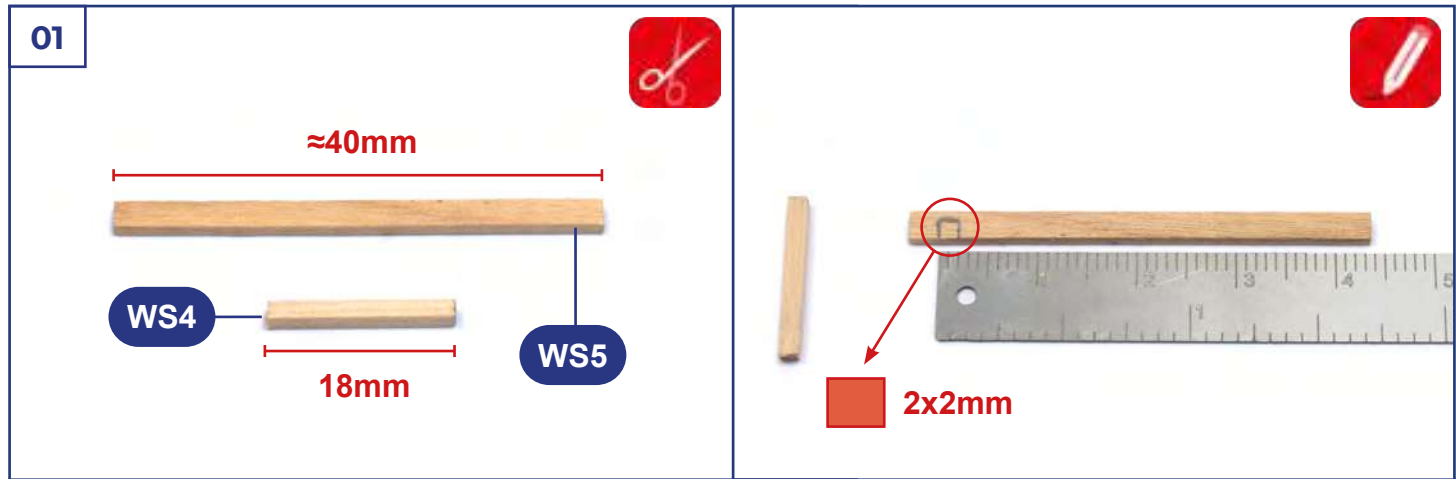

≈40mm


WS4

18mm

WS5

2x2mm

02

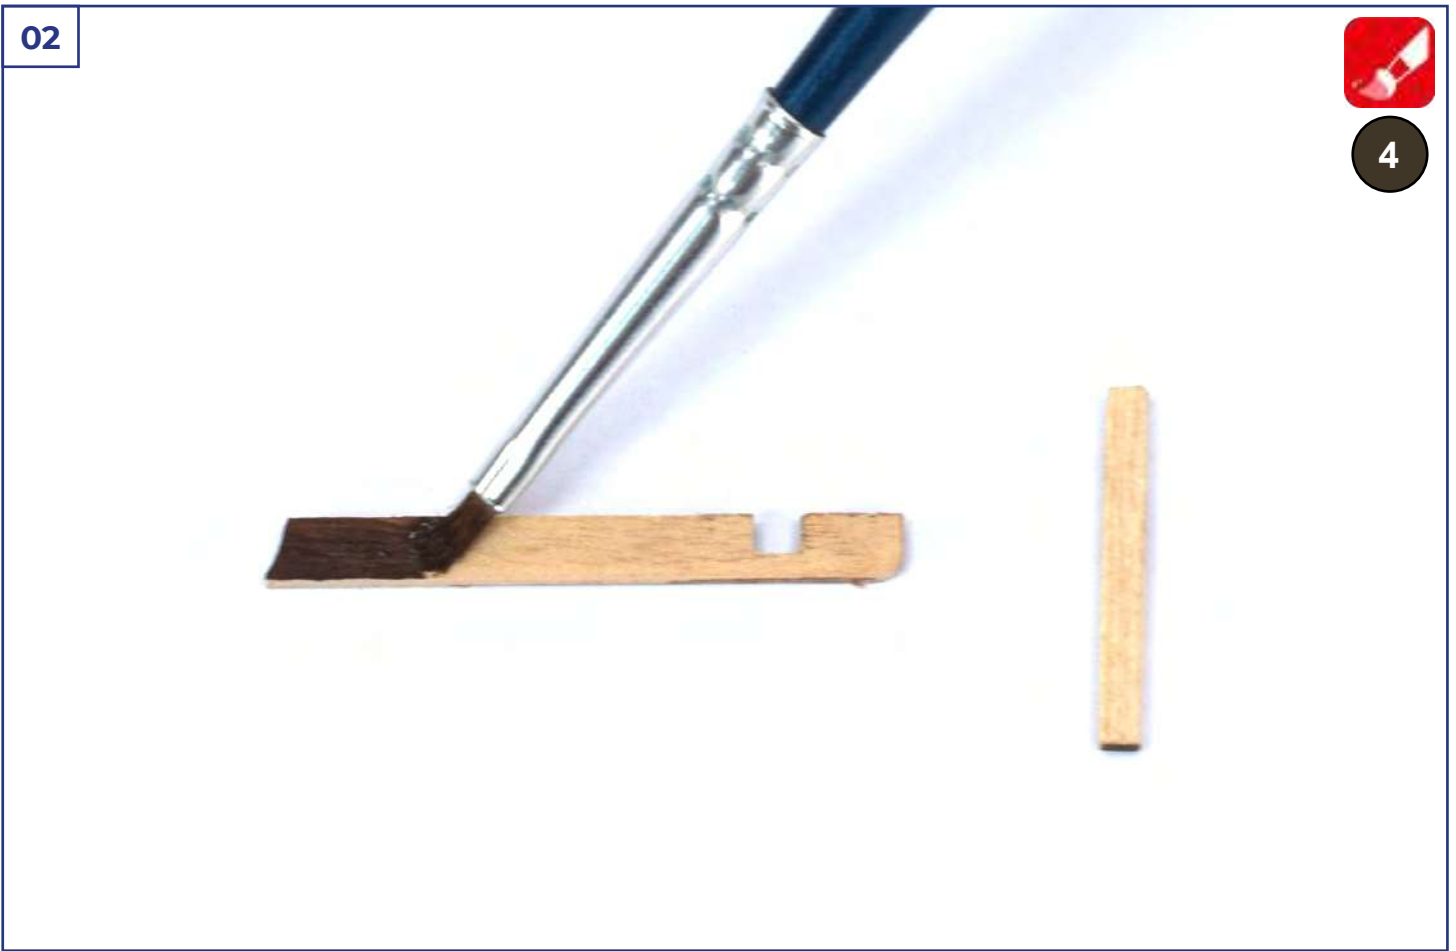

4

03




WS4

WS5



04




MARIE JEANNE

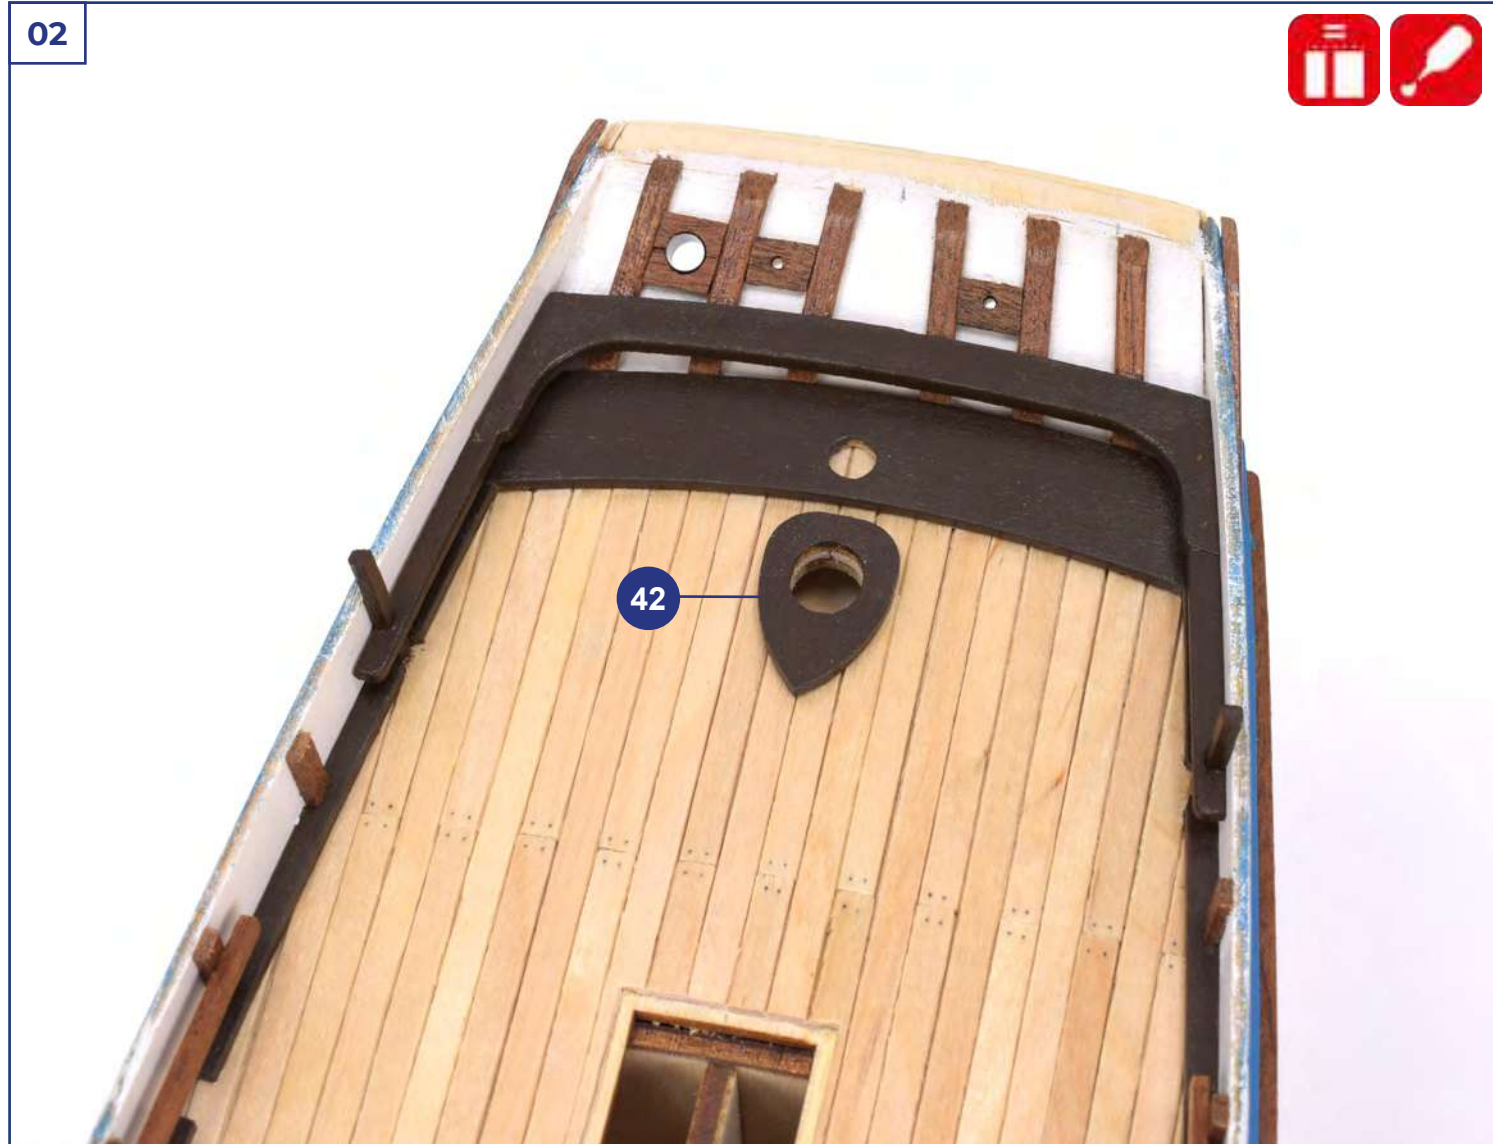

01

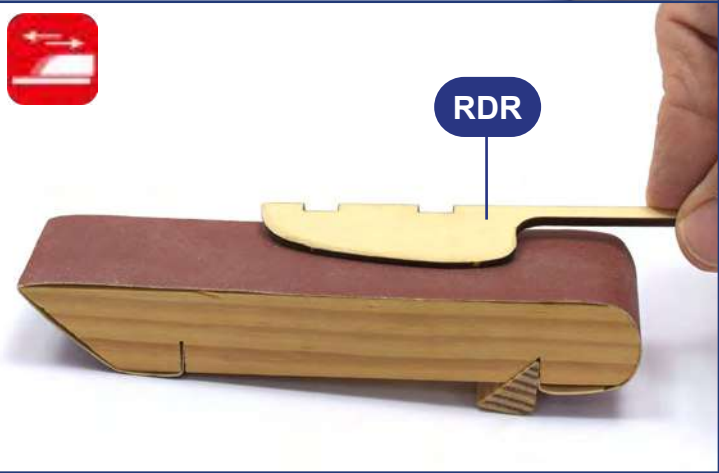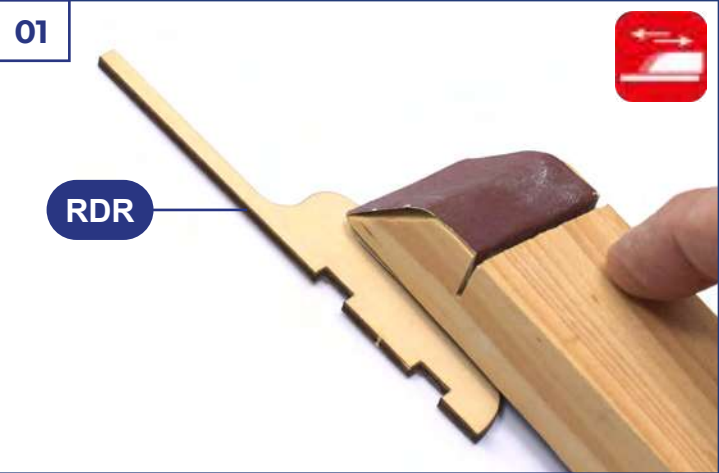

02

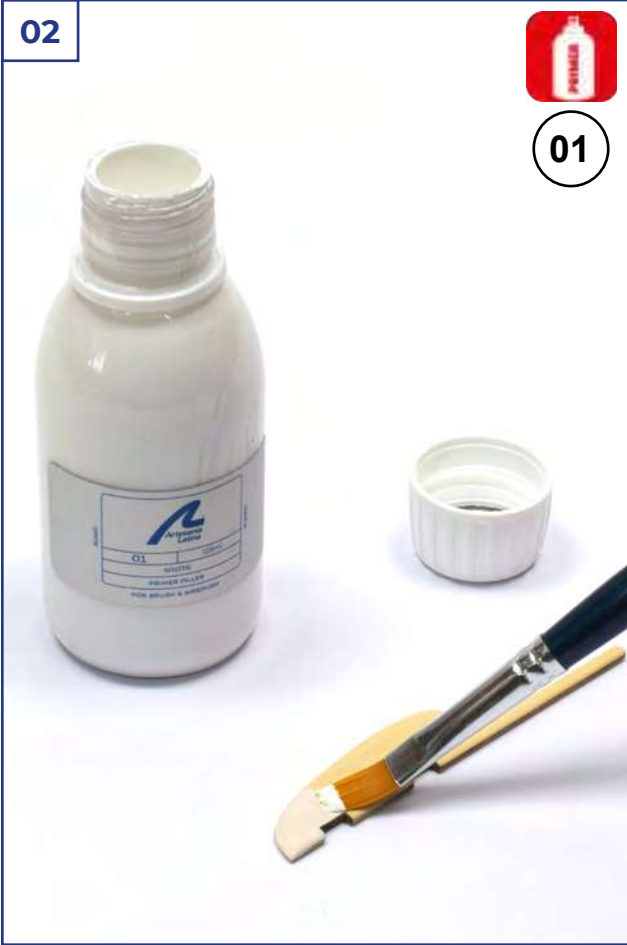


03



04



05

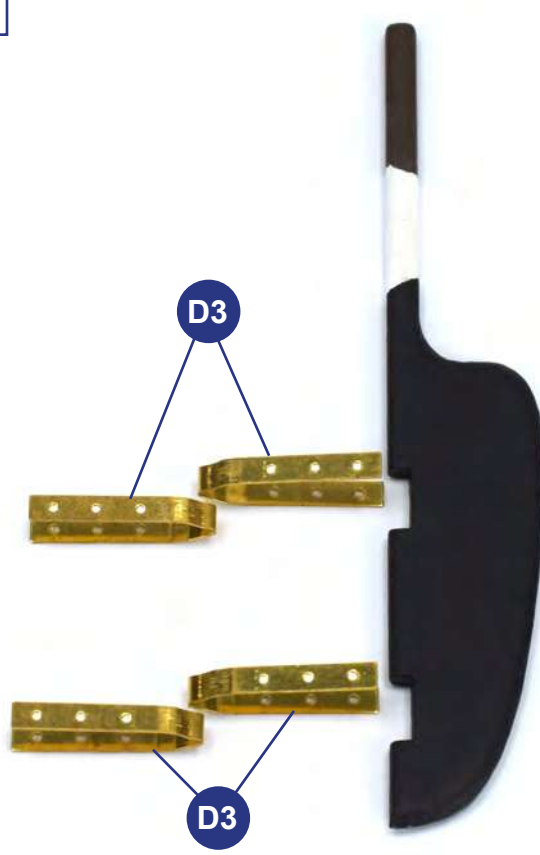




06






Ø0,5mm



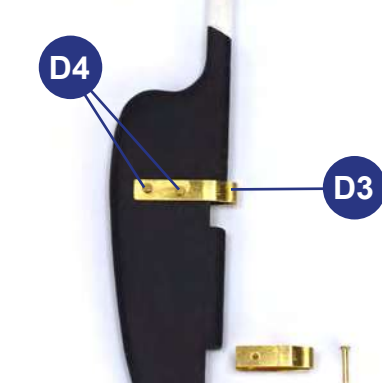

07

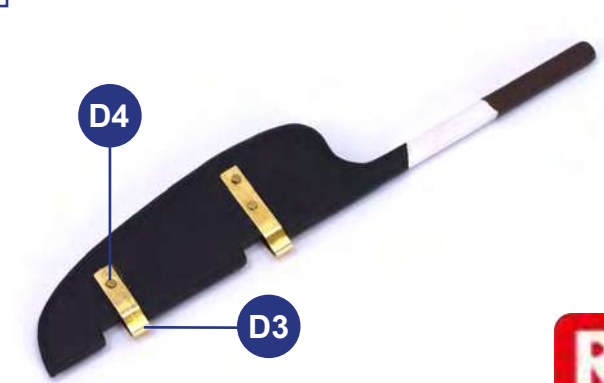



08












Ø1mm











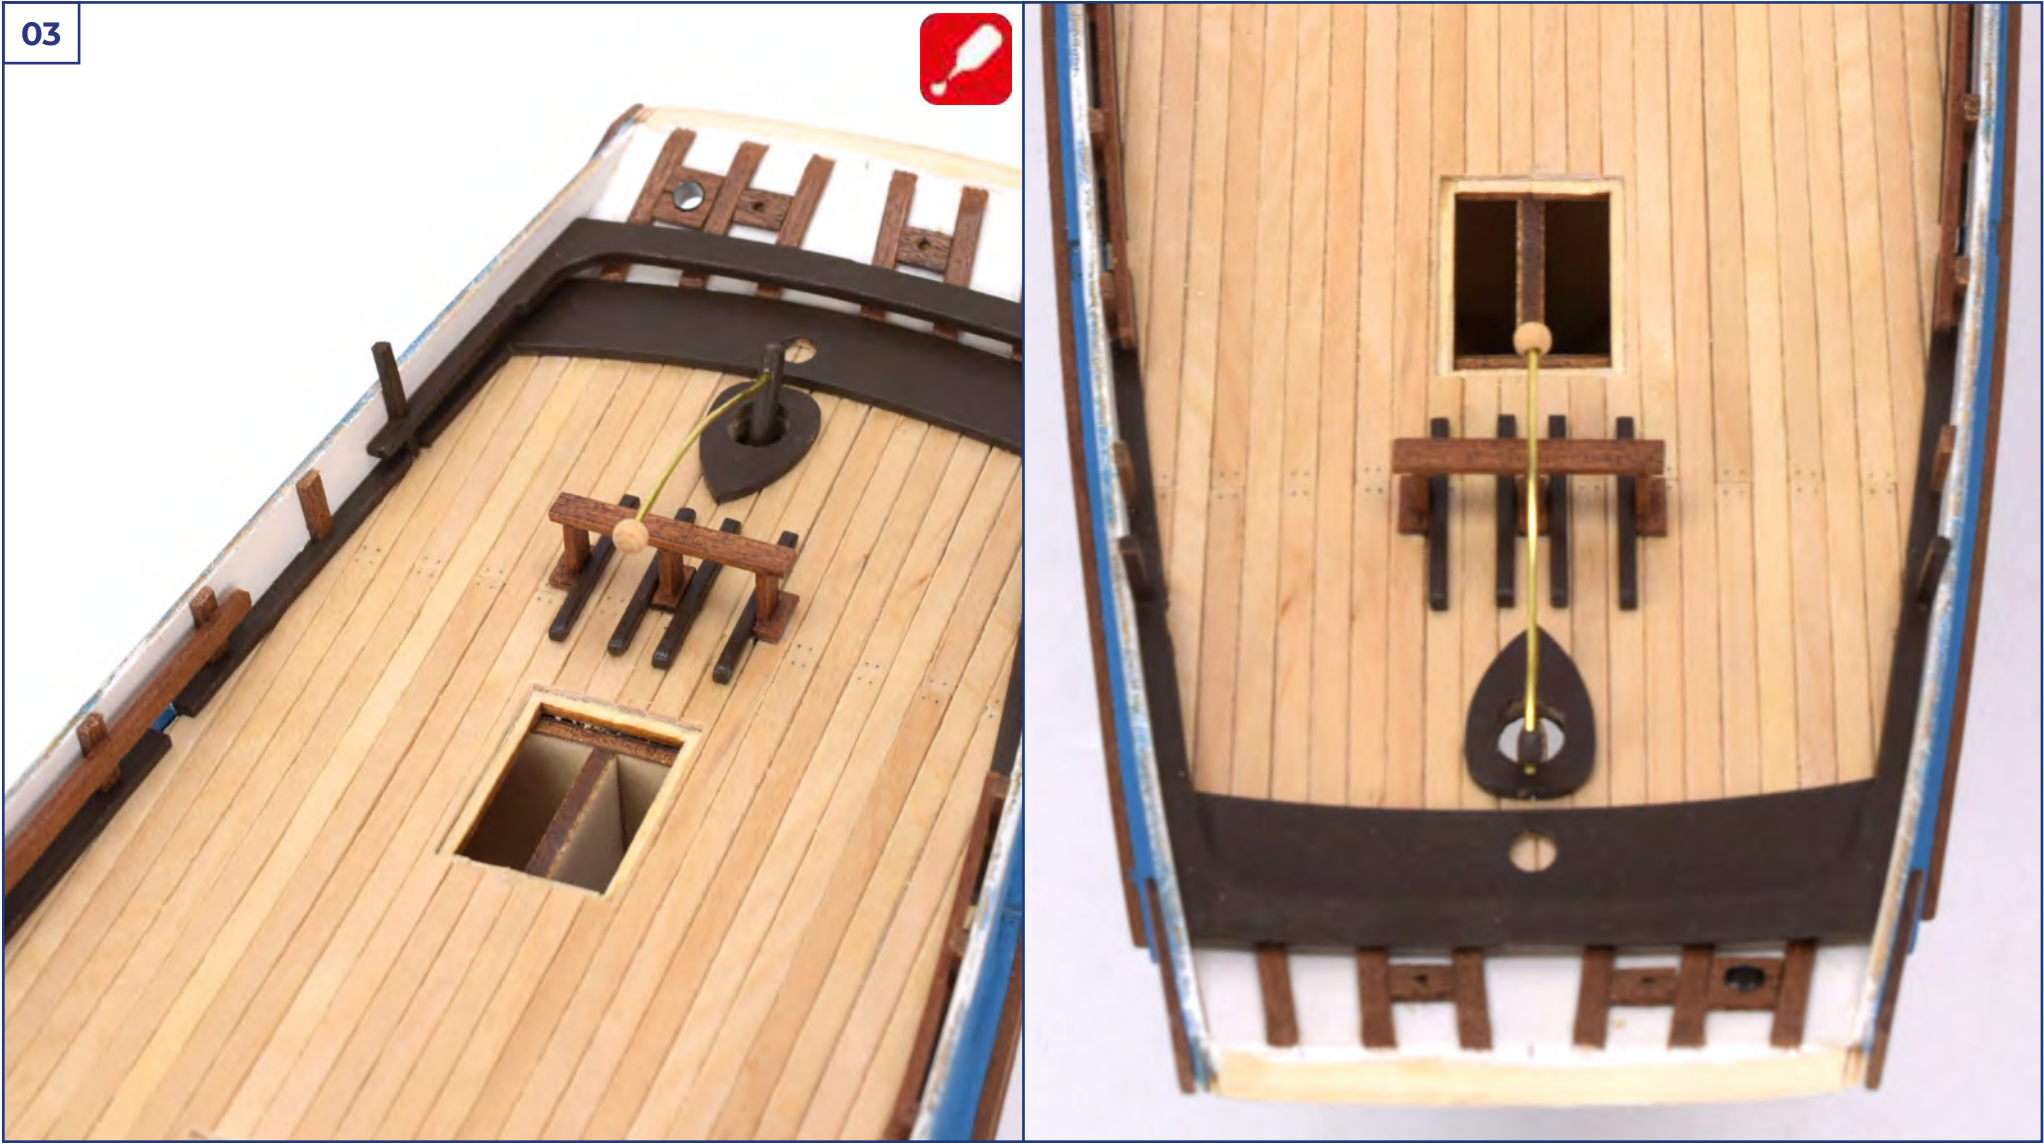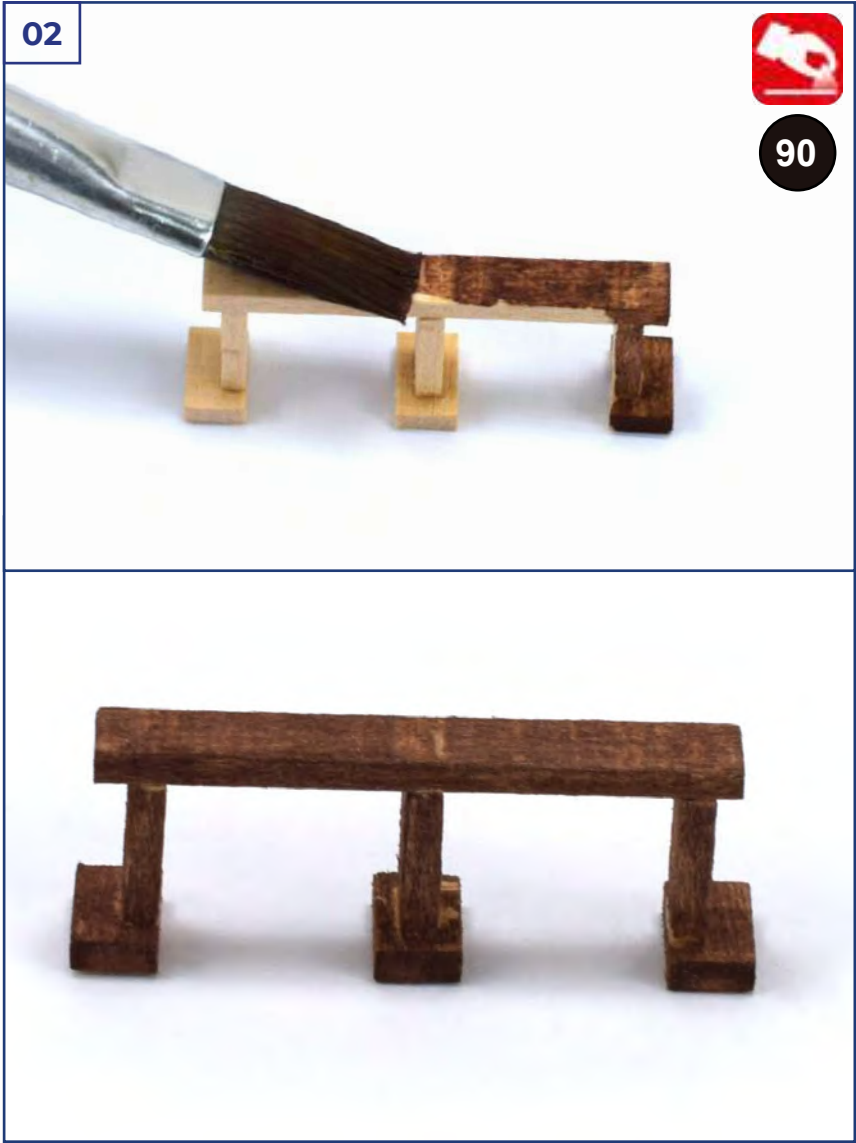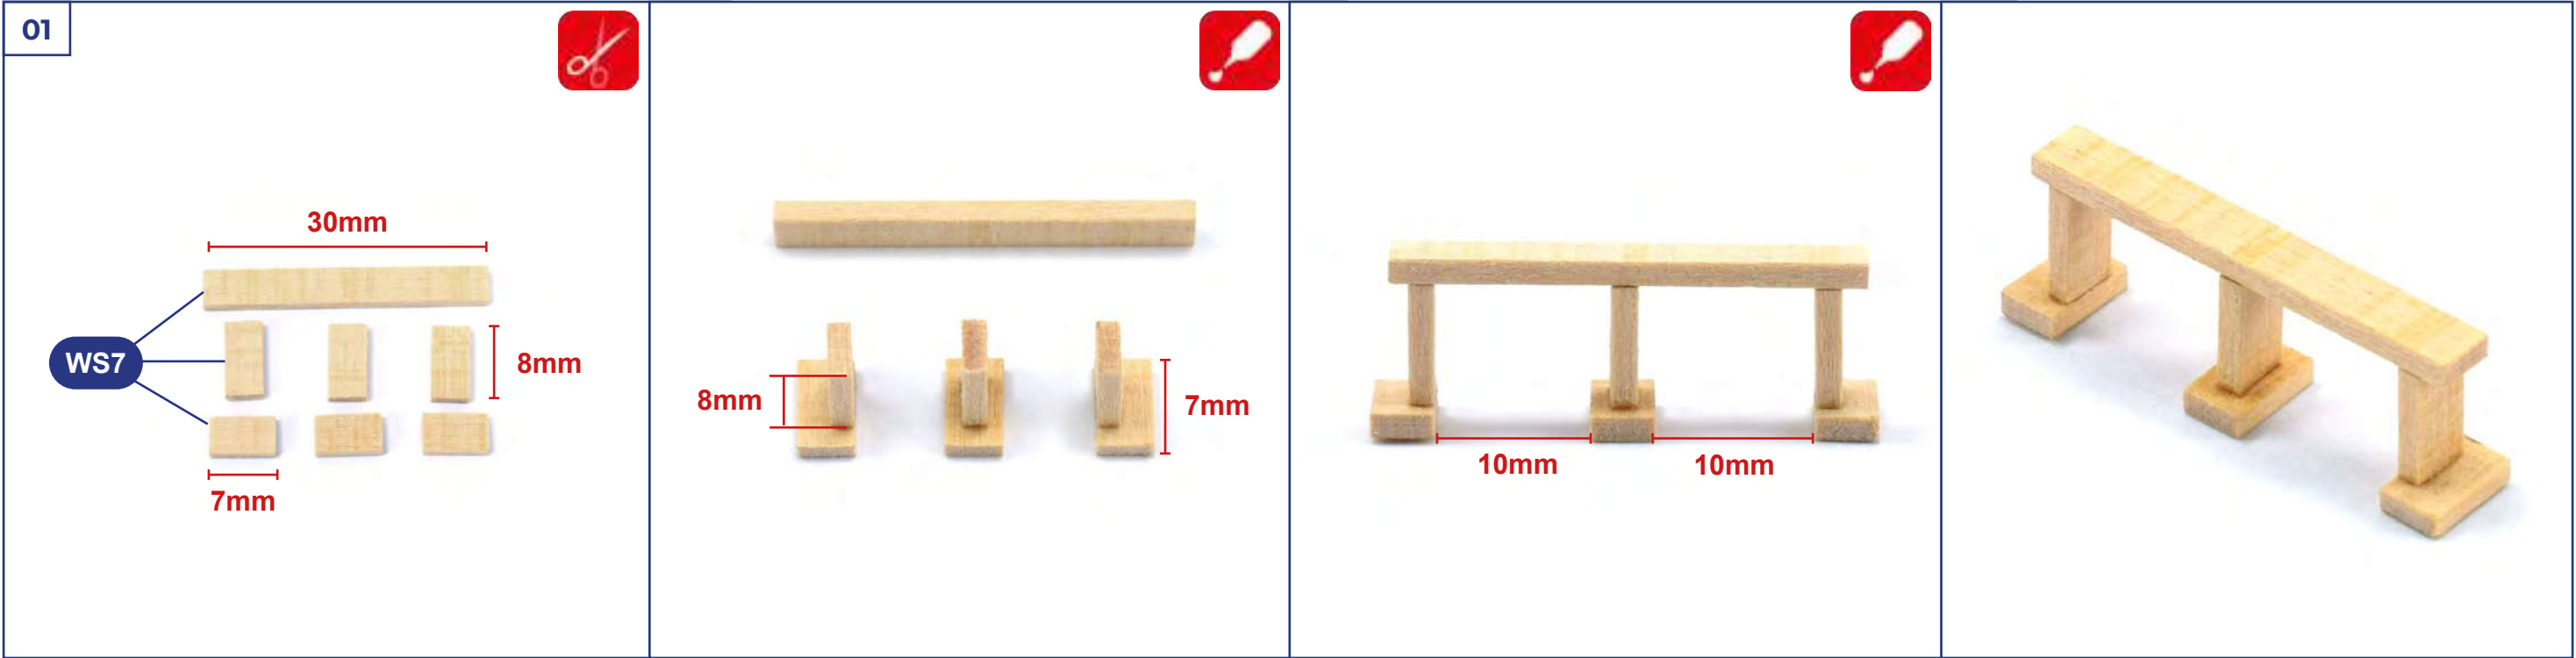

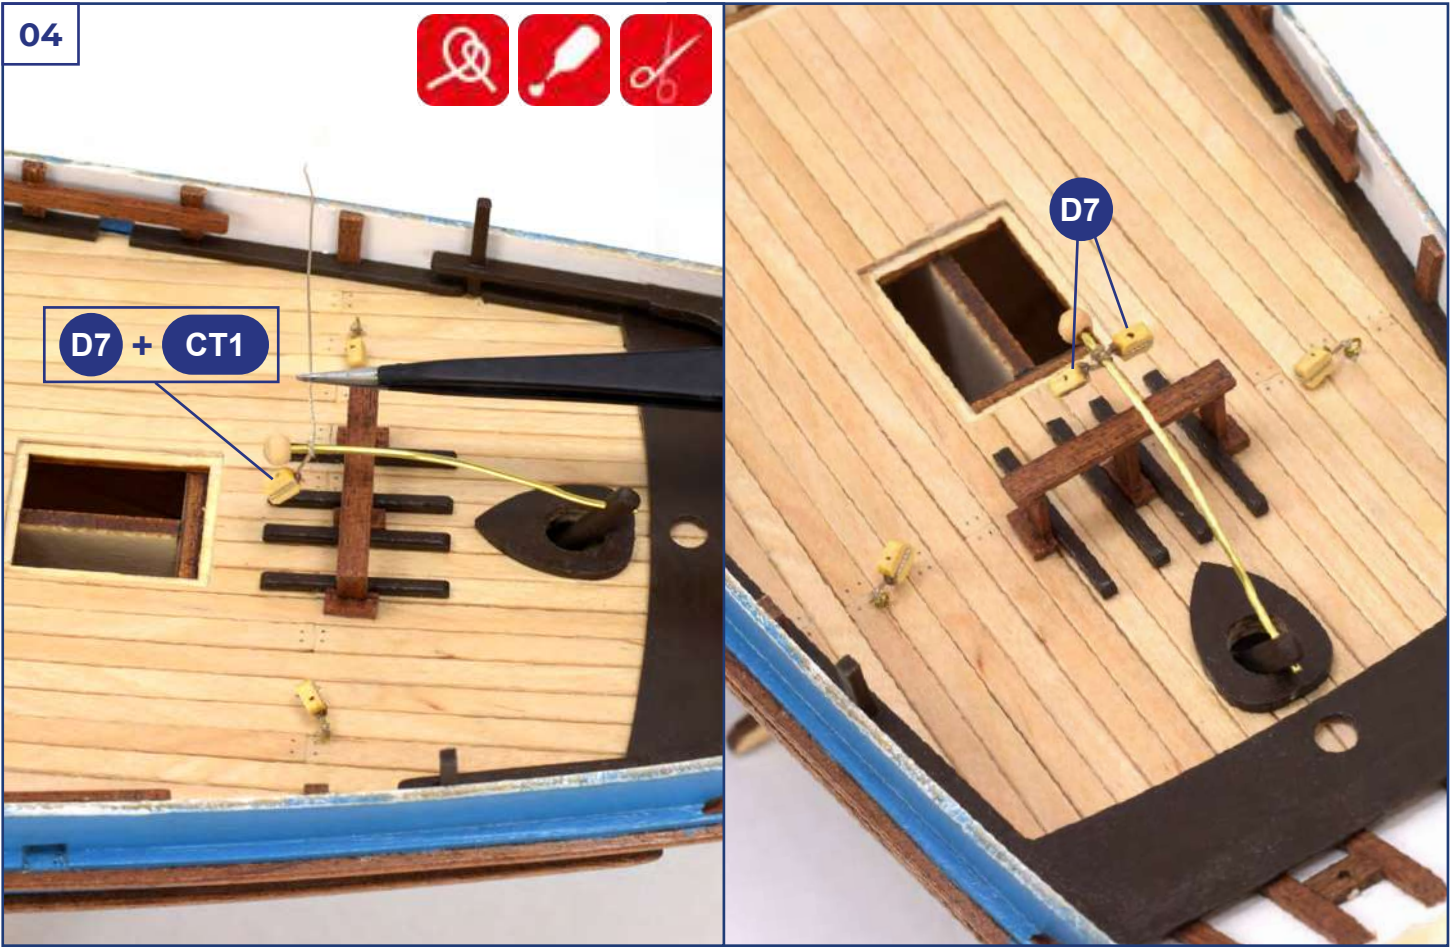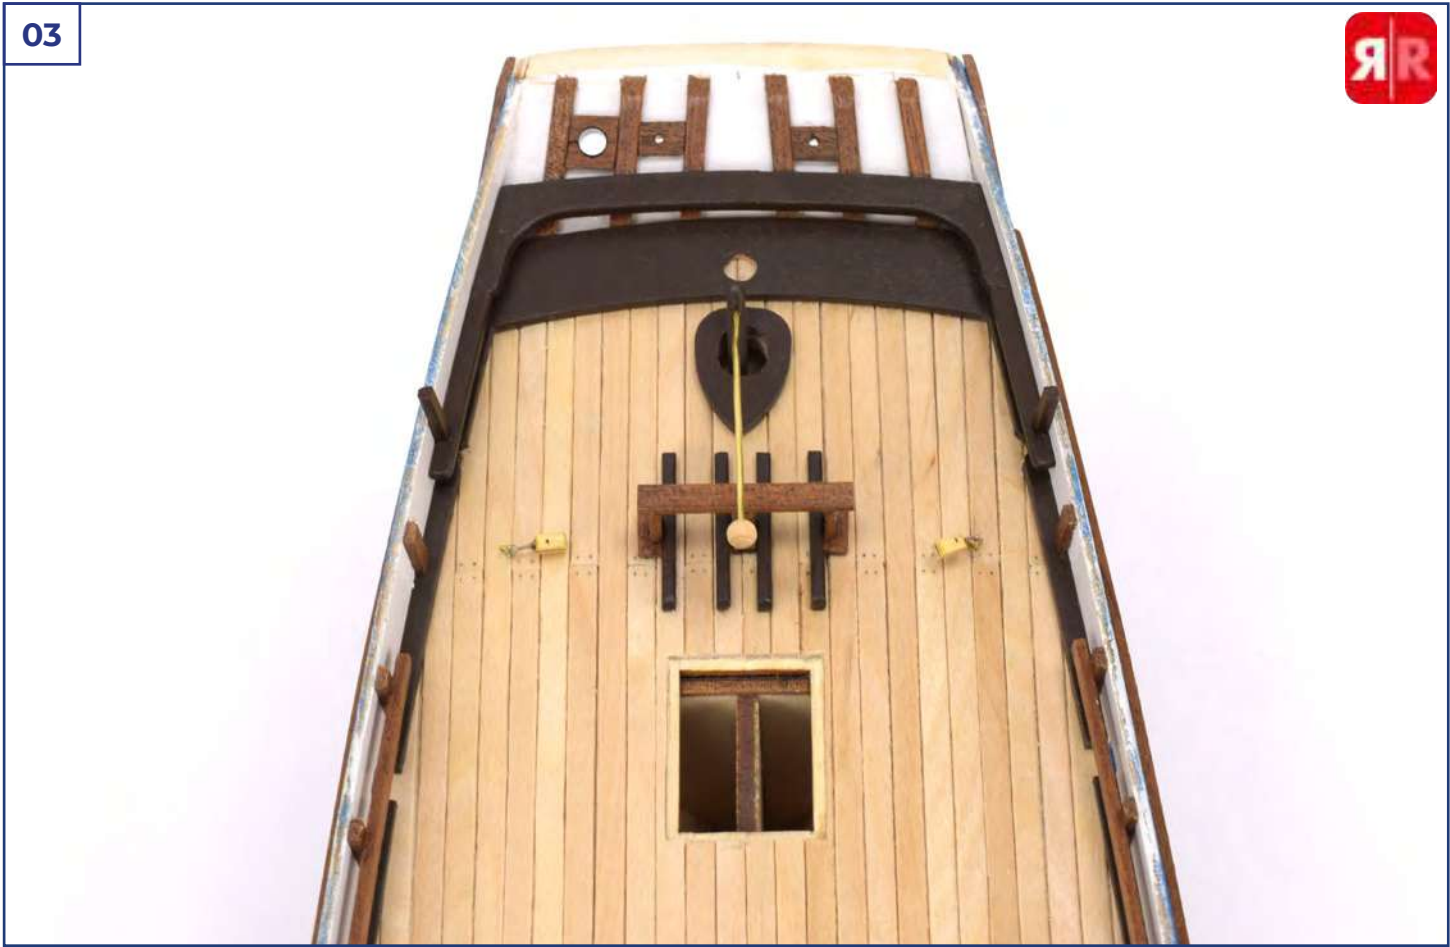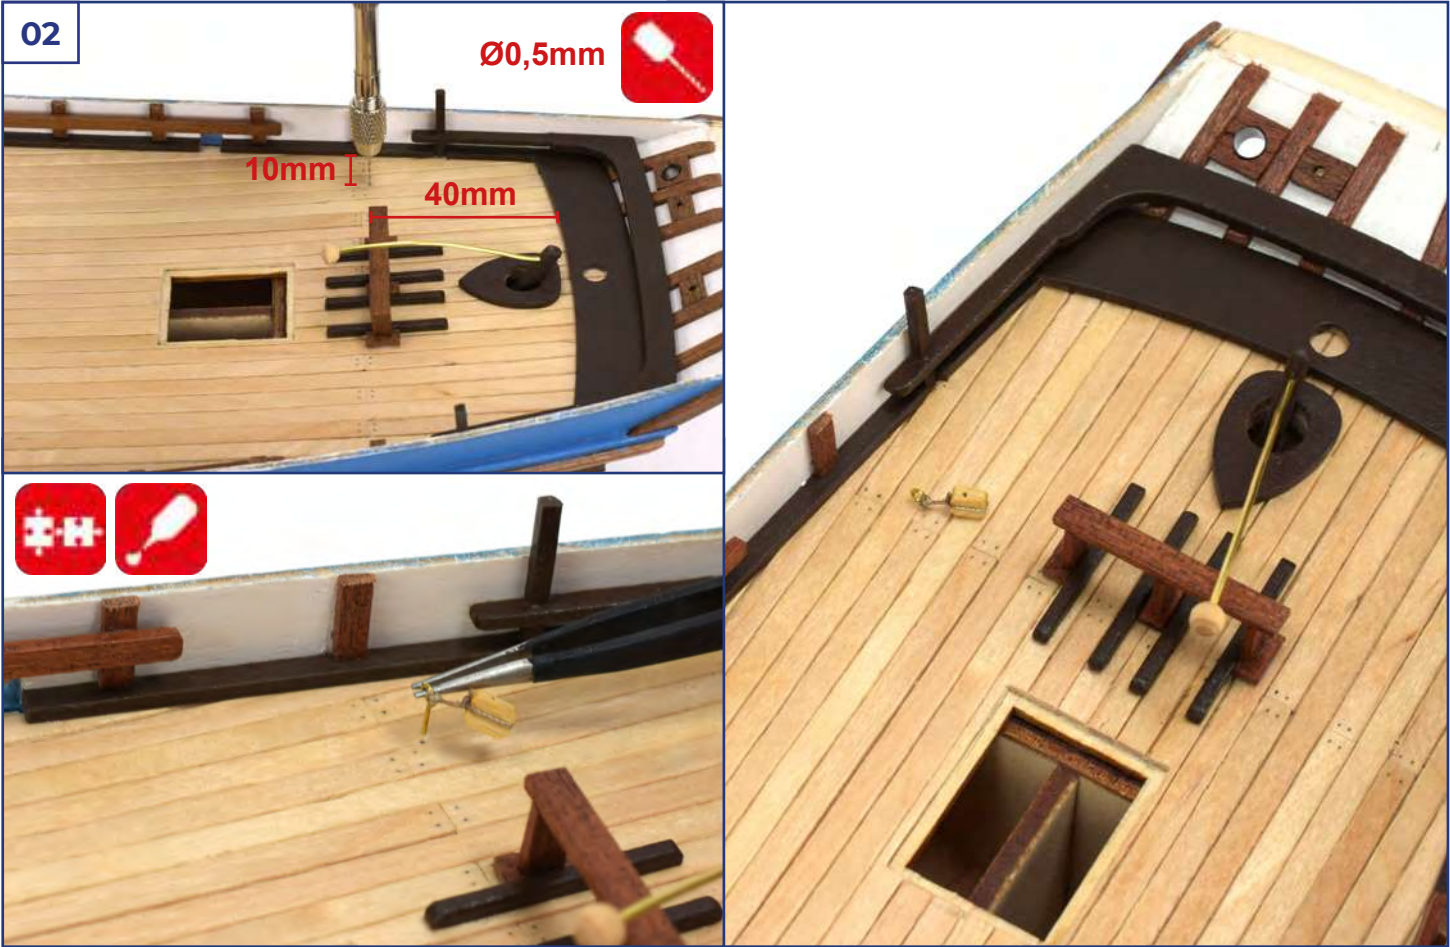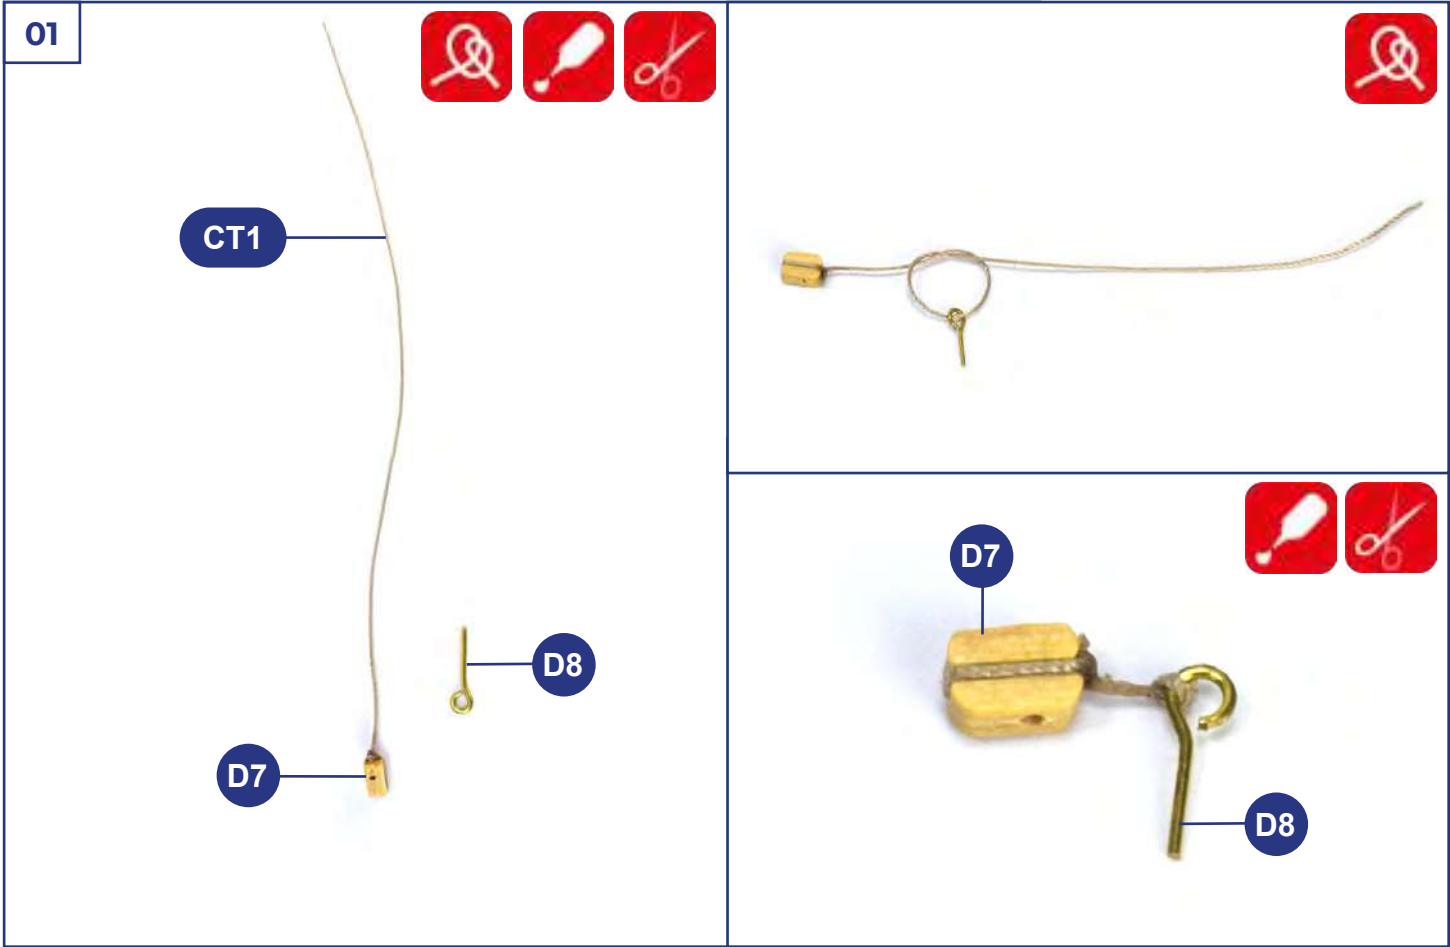

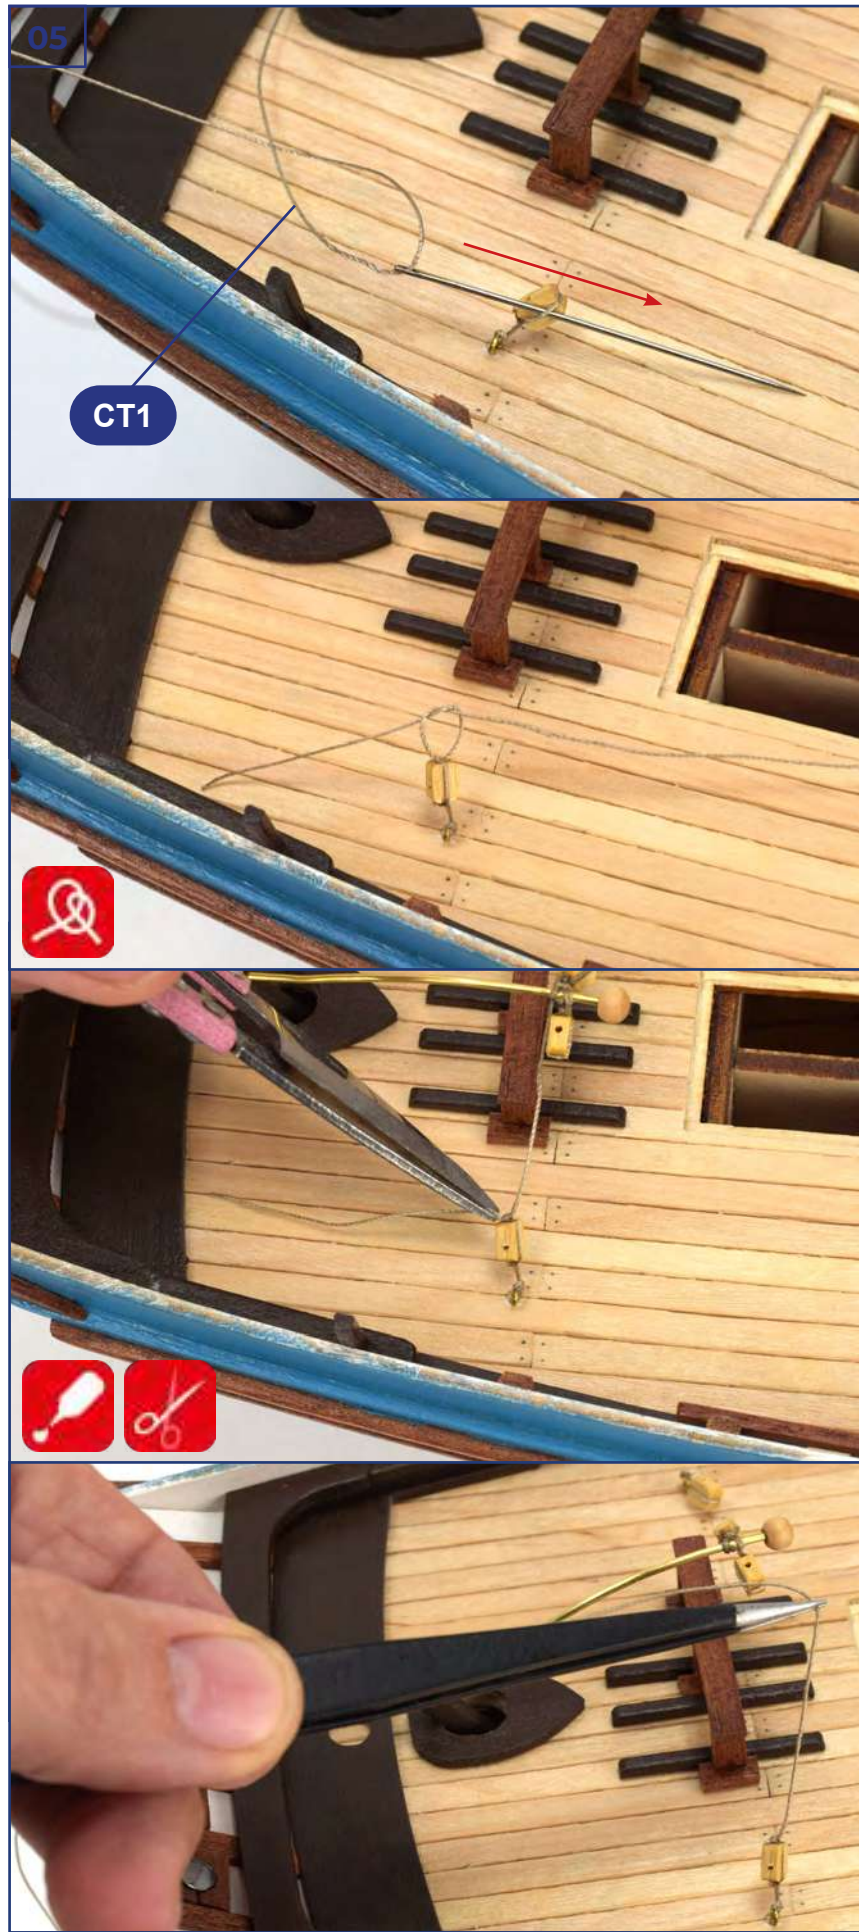

01

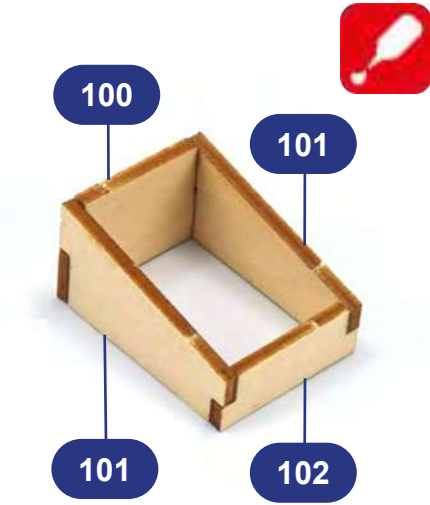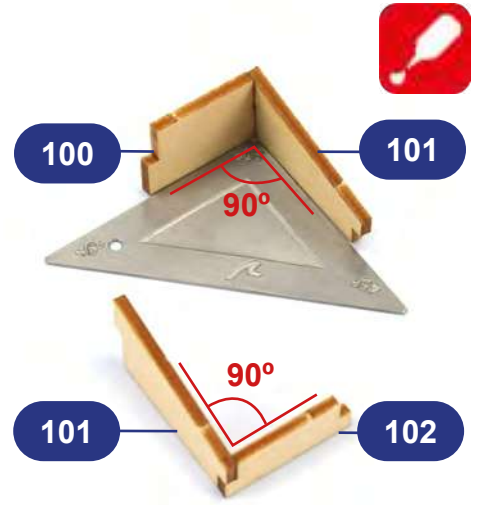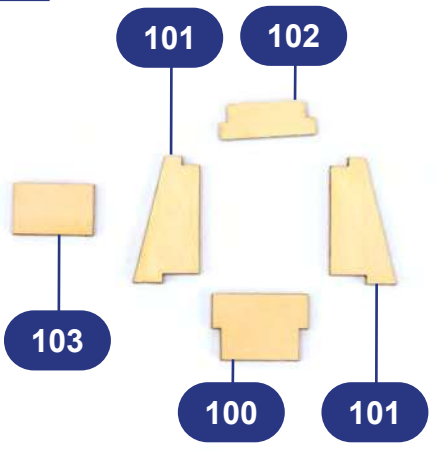


02




03




04

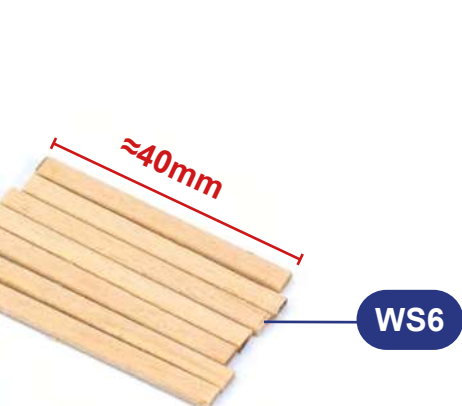



05

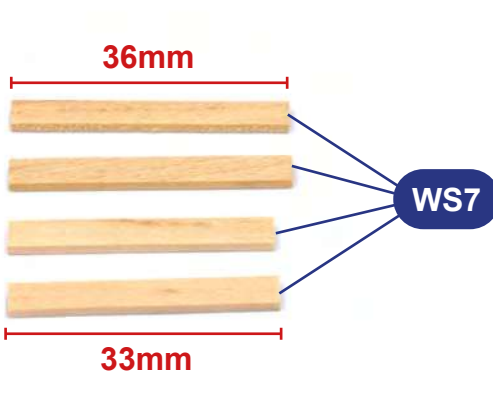



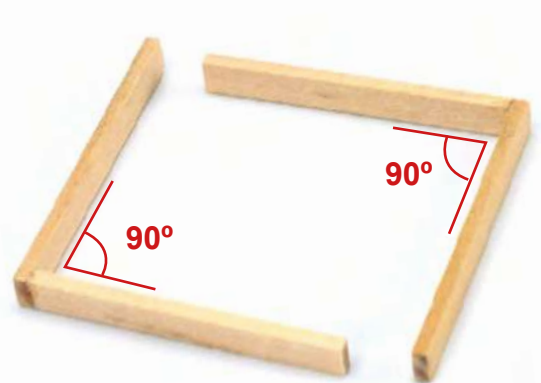

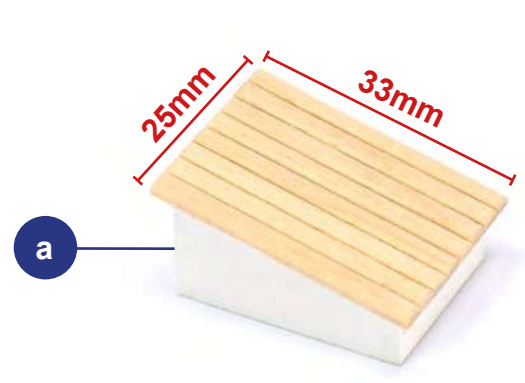

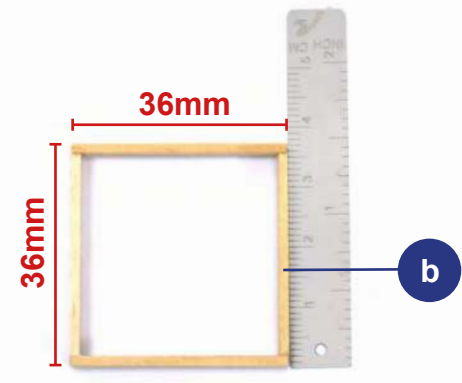

06

R



a




b

41mm

41mm

WS6

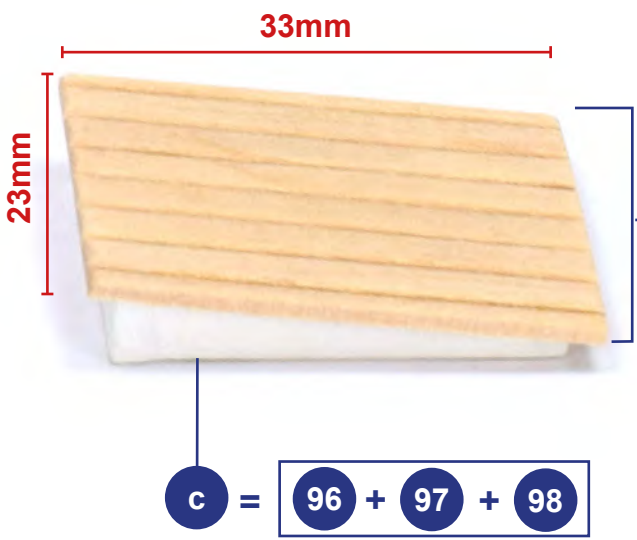

c = 96 + 97 + 98


33mm

23mm

WS6

07



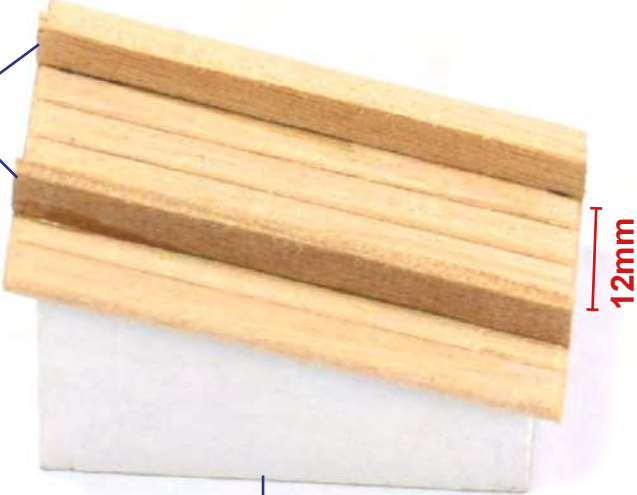

a

WS6

12mm



b

WS6

18mm



c

WS6

12mm

08





4



a




b



c




09

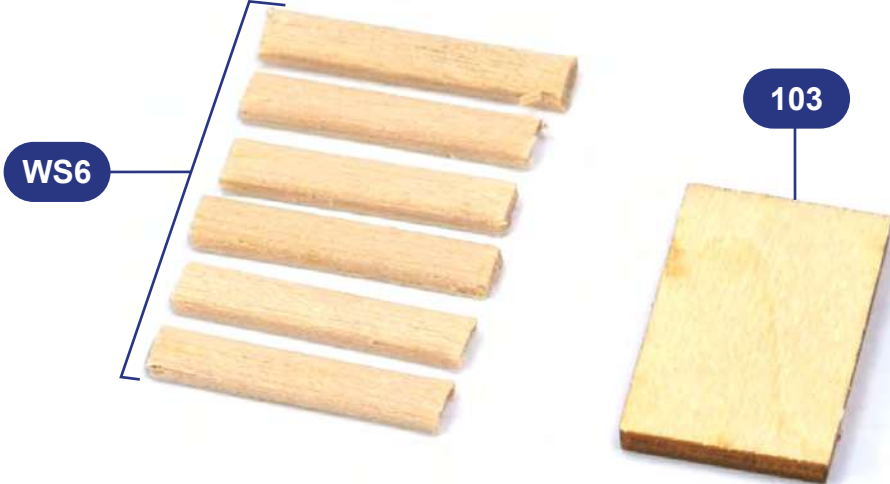

WS6

103

10

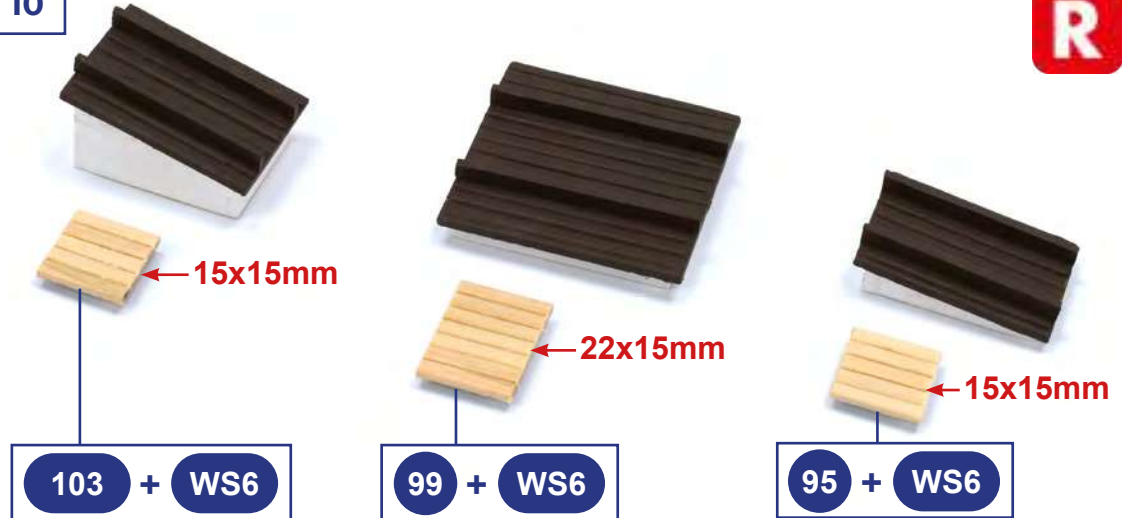



15x15mm


22x15mm

15x15mm

103 + WS6

99 + WS6


95 + WS6

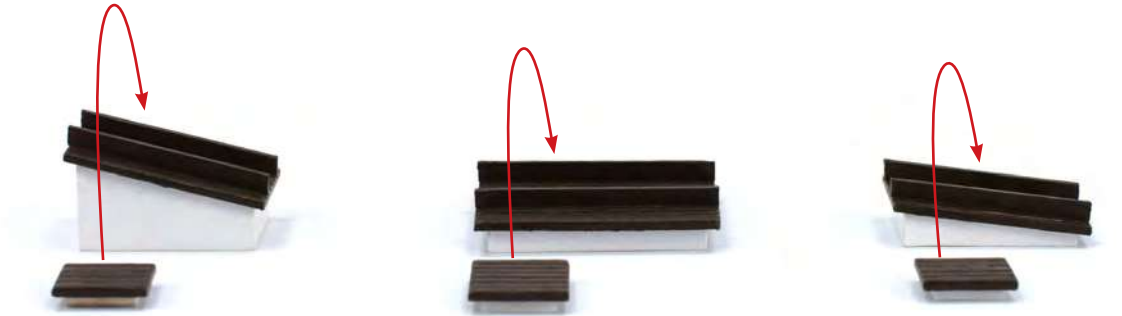

4



11

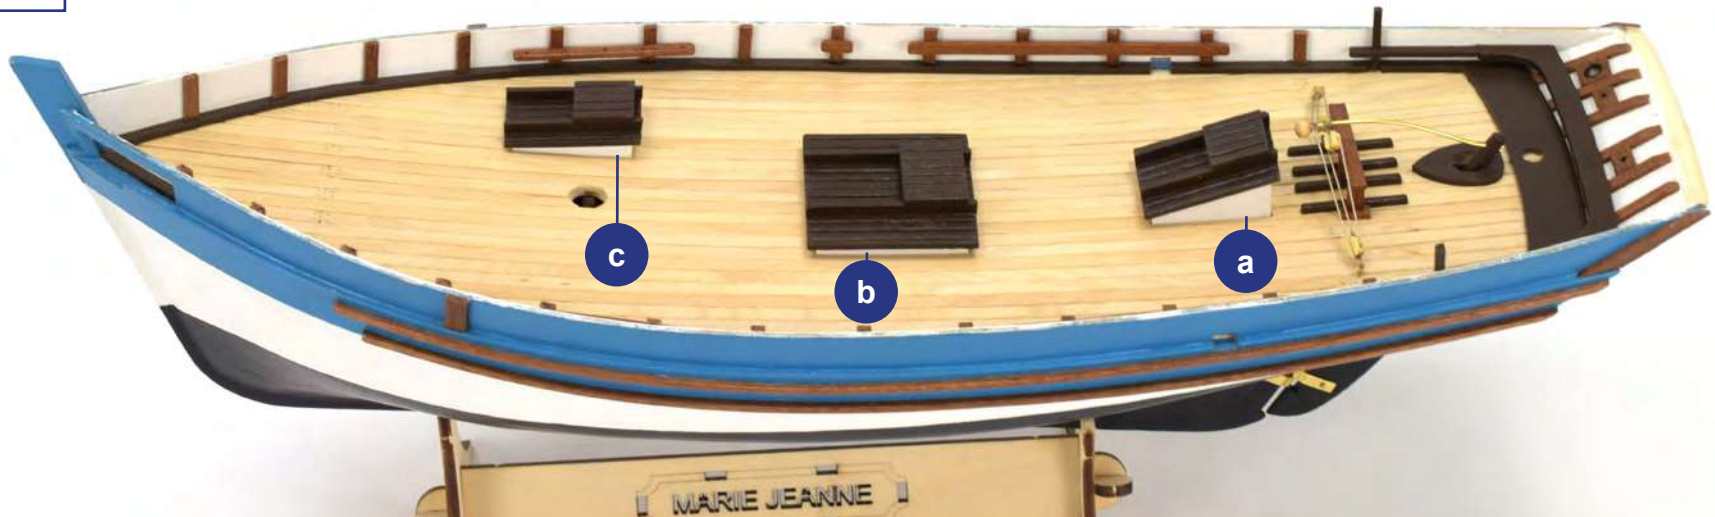

a

b




c



MARIE JEANNE










MARIE JEANNE





12

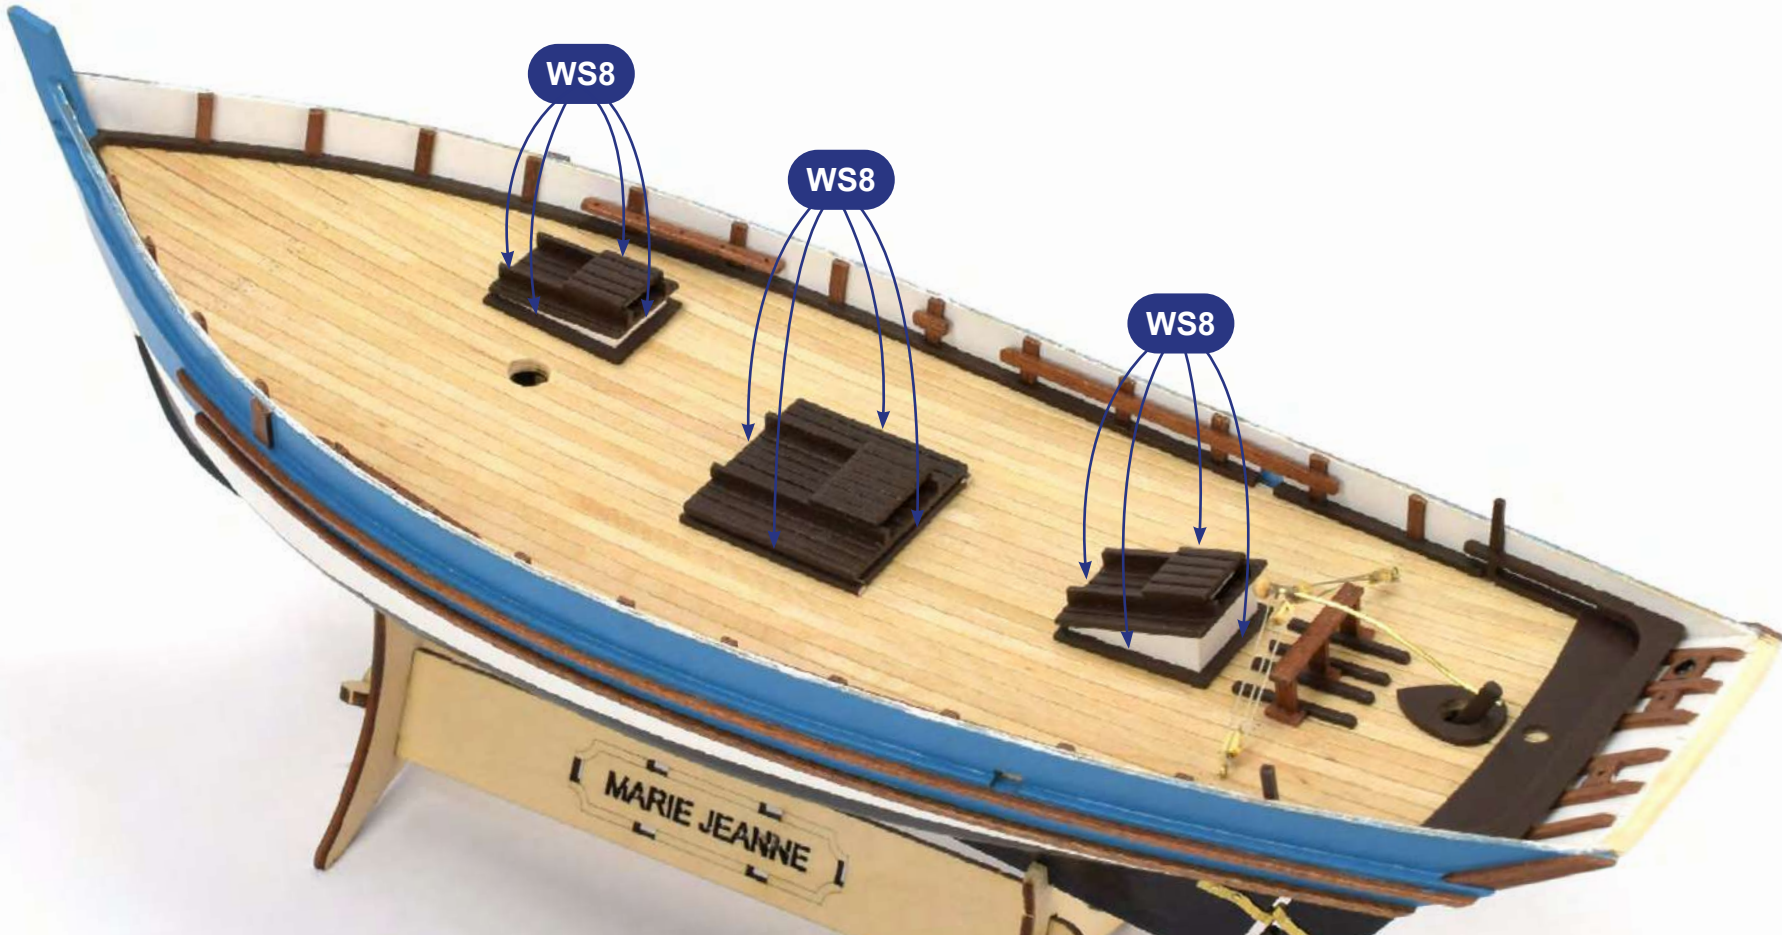
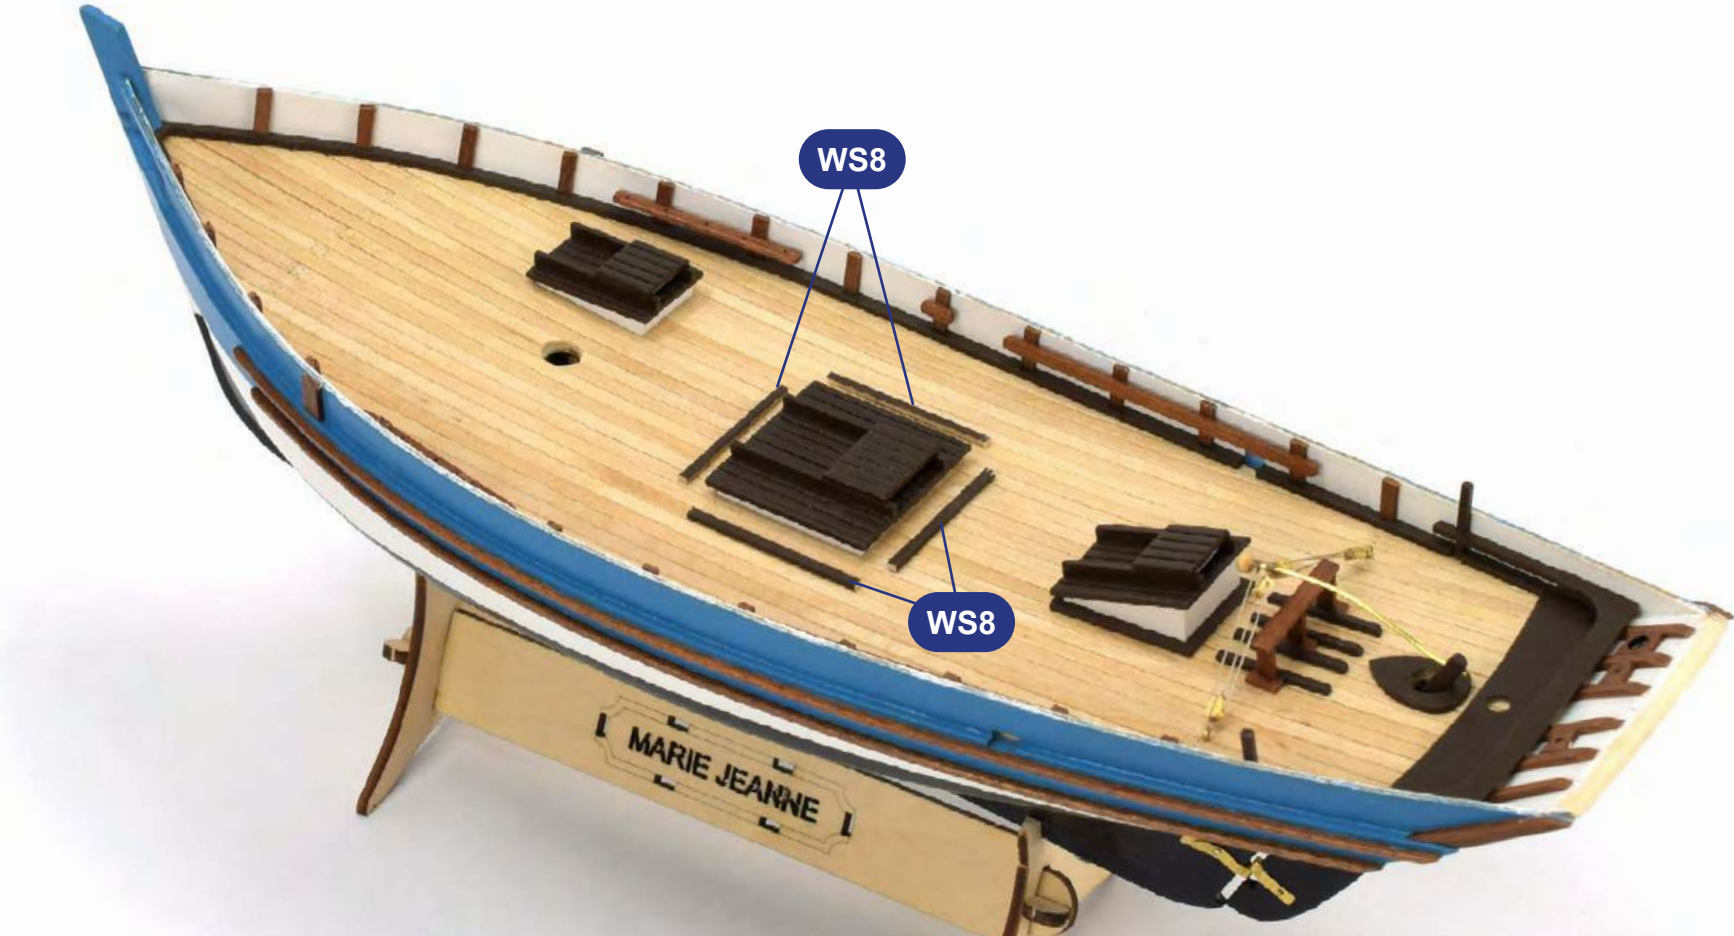
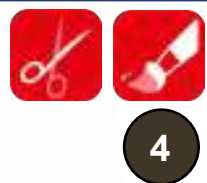




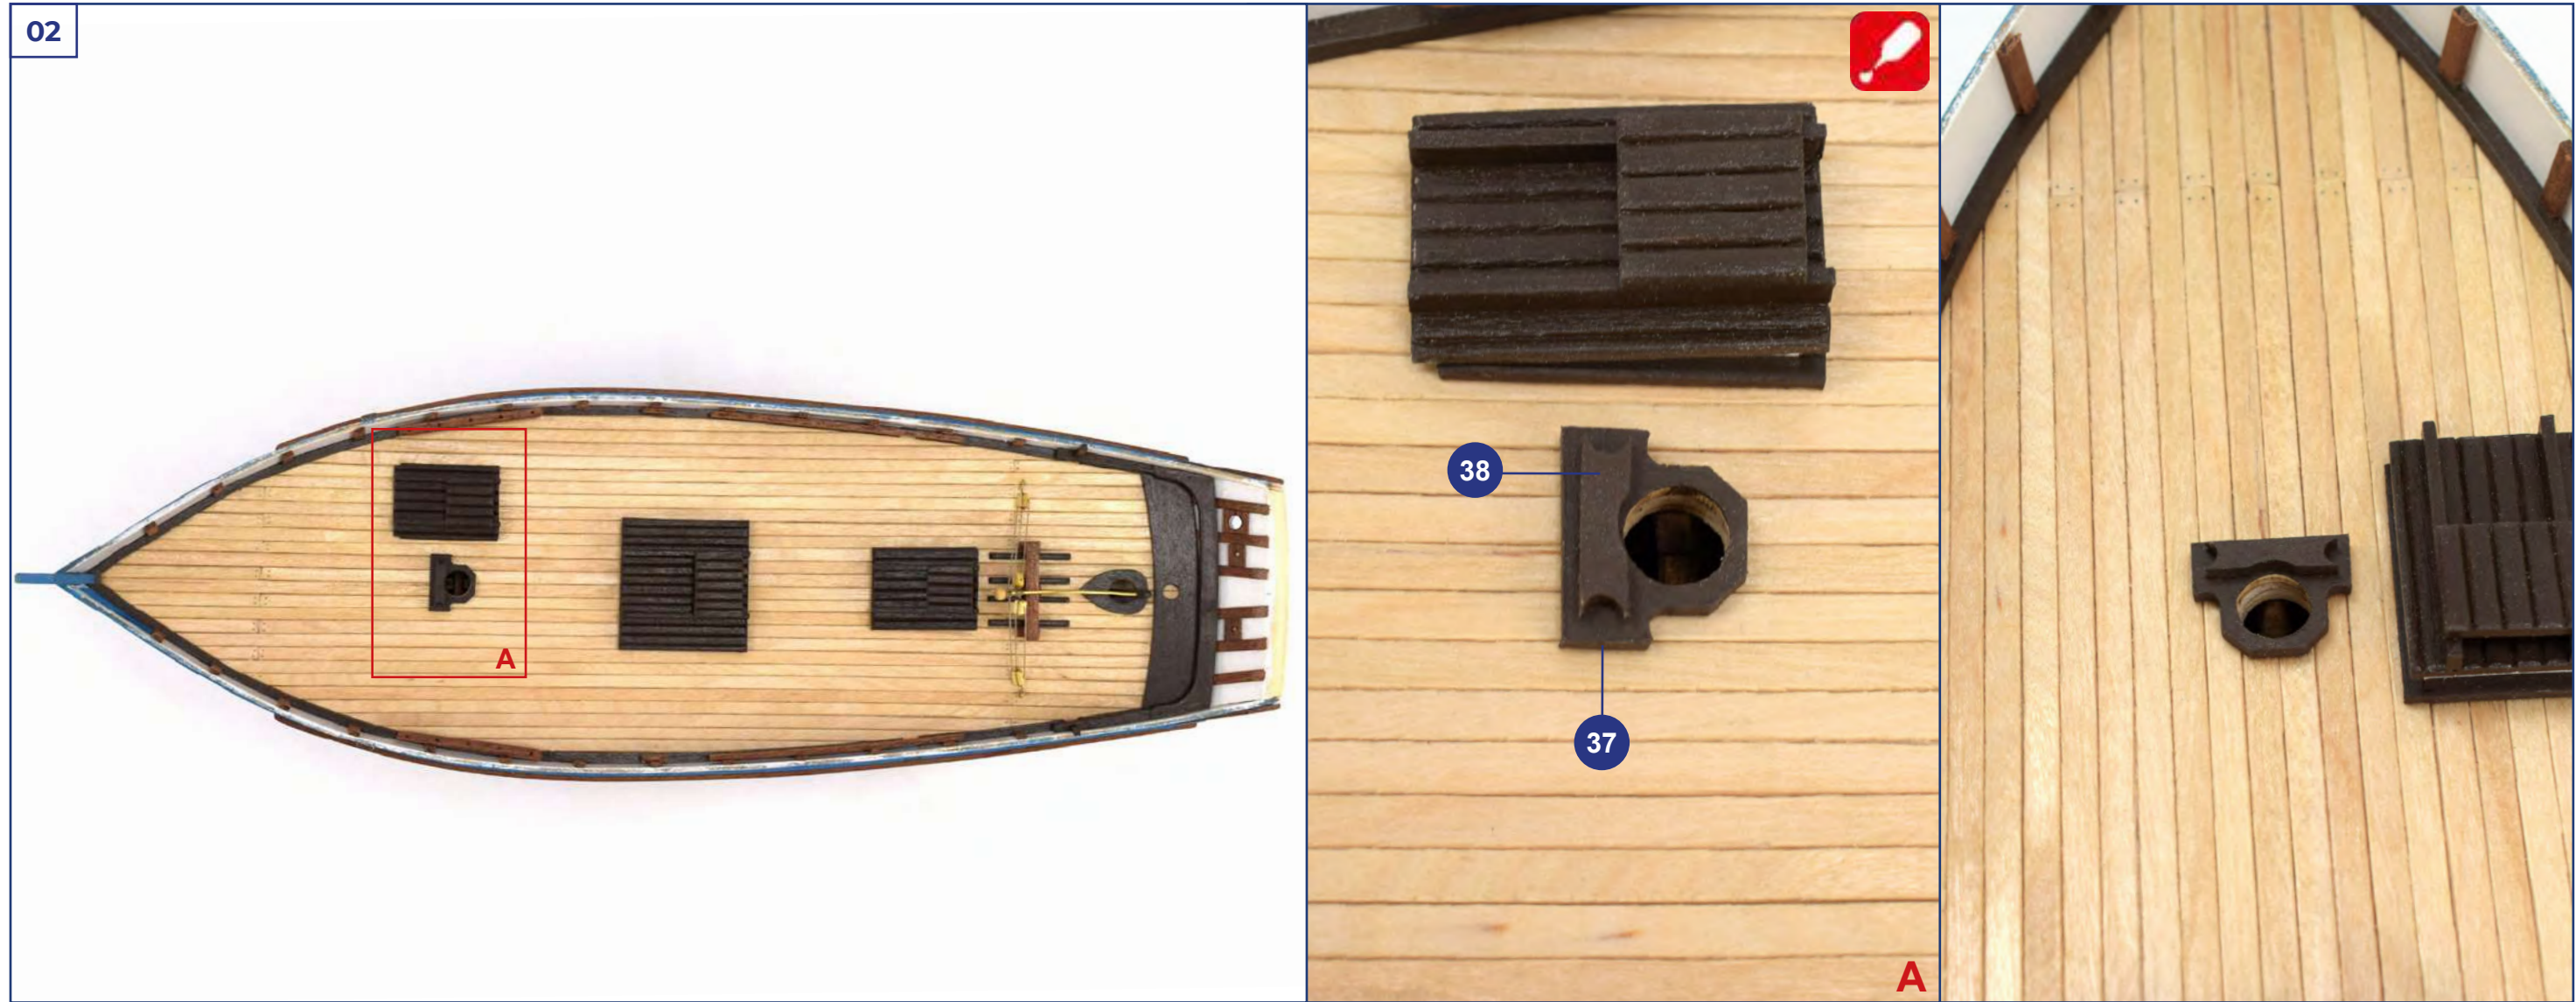
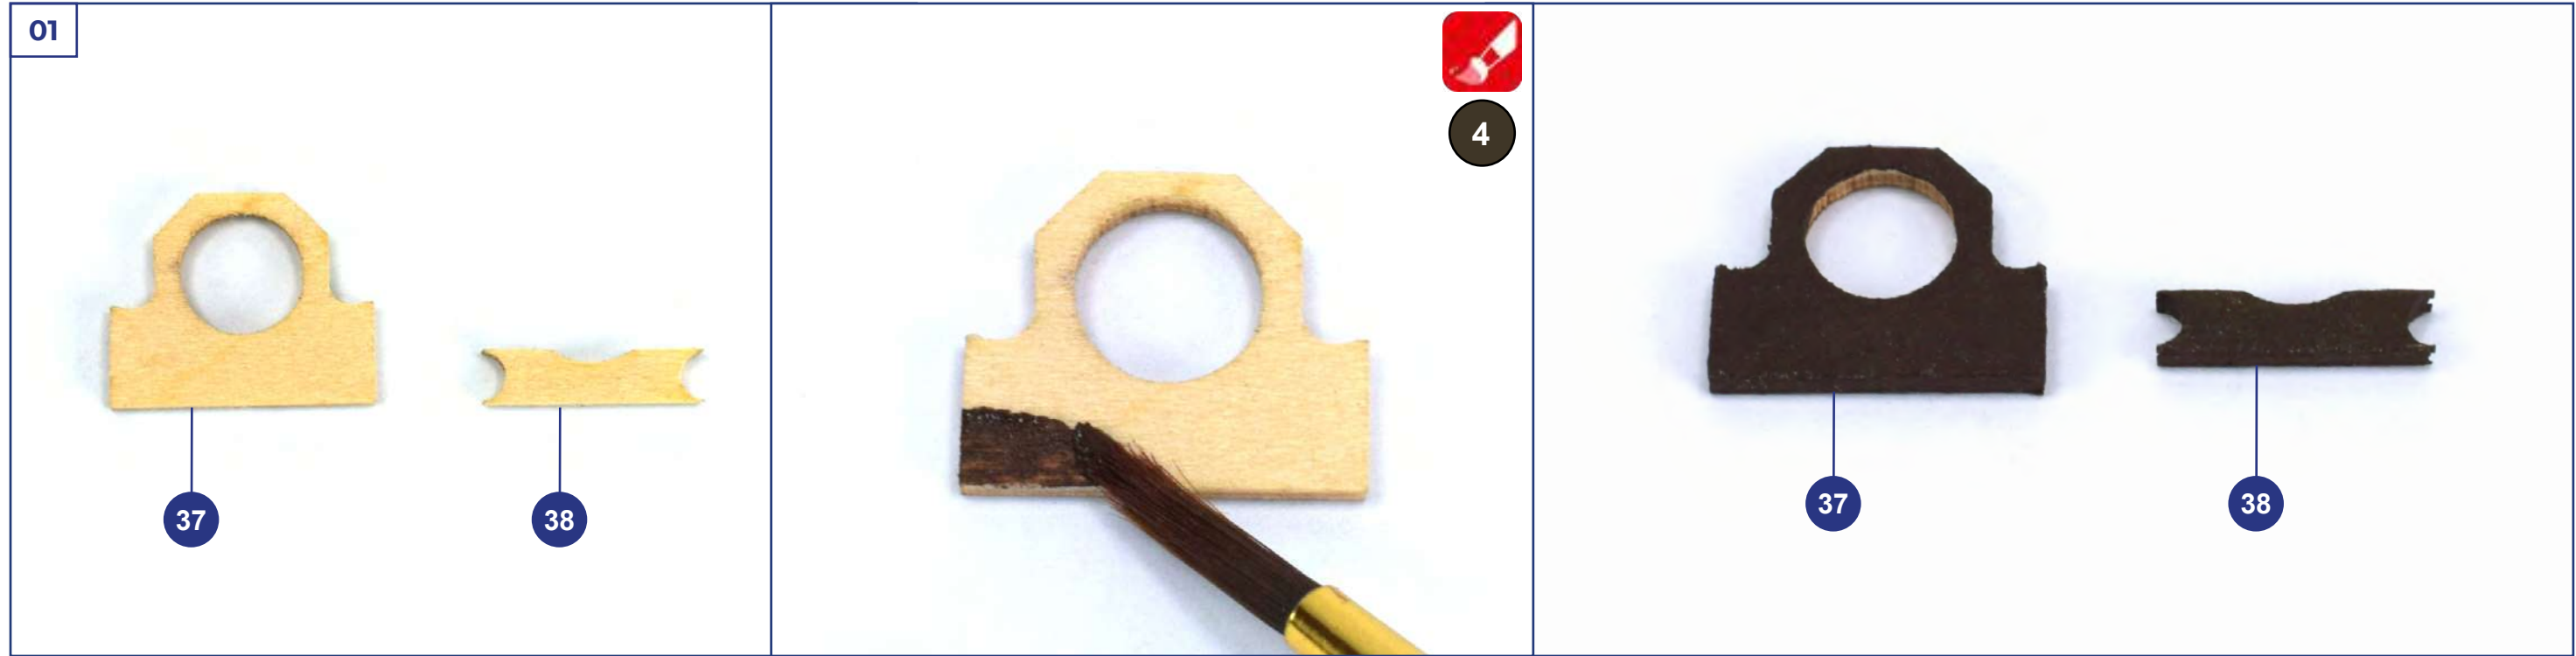


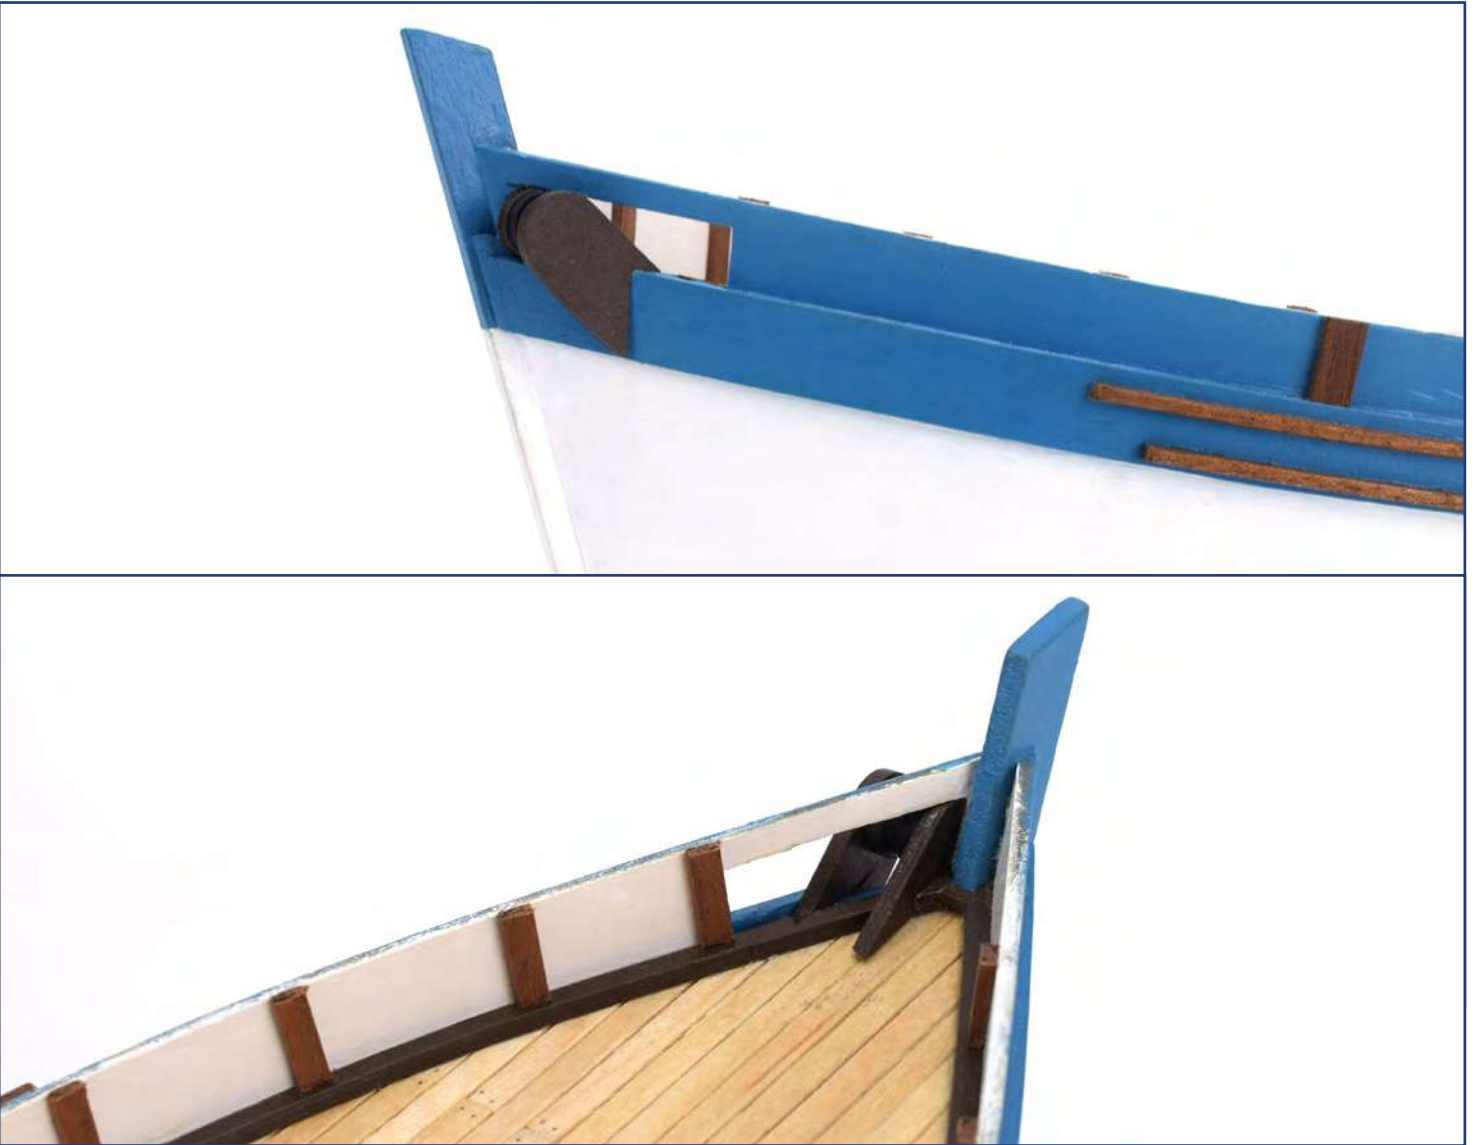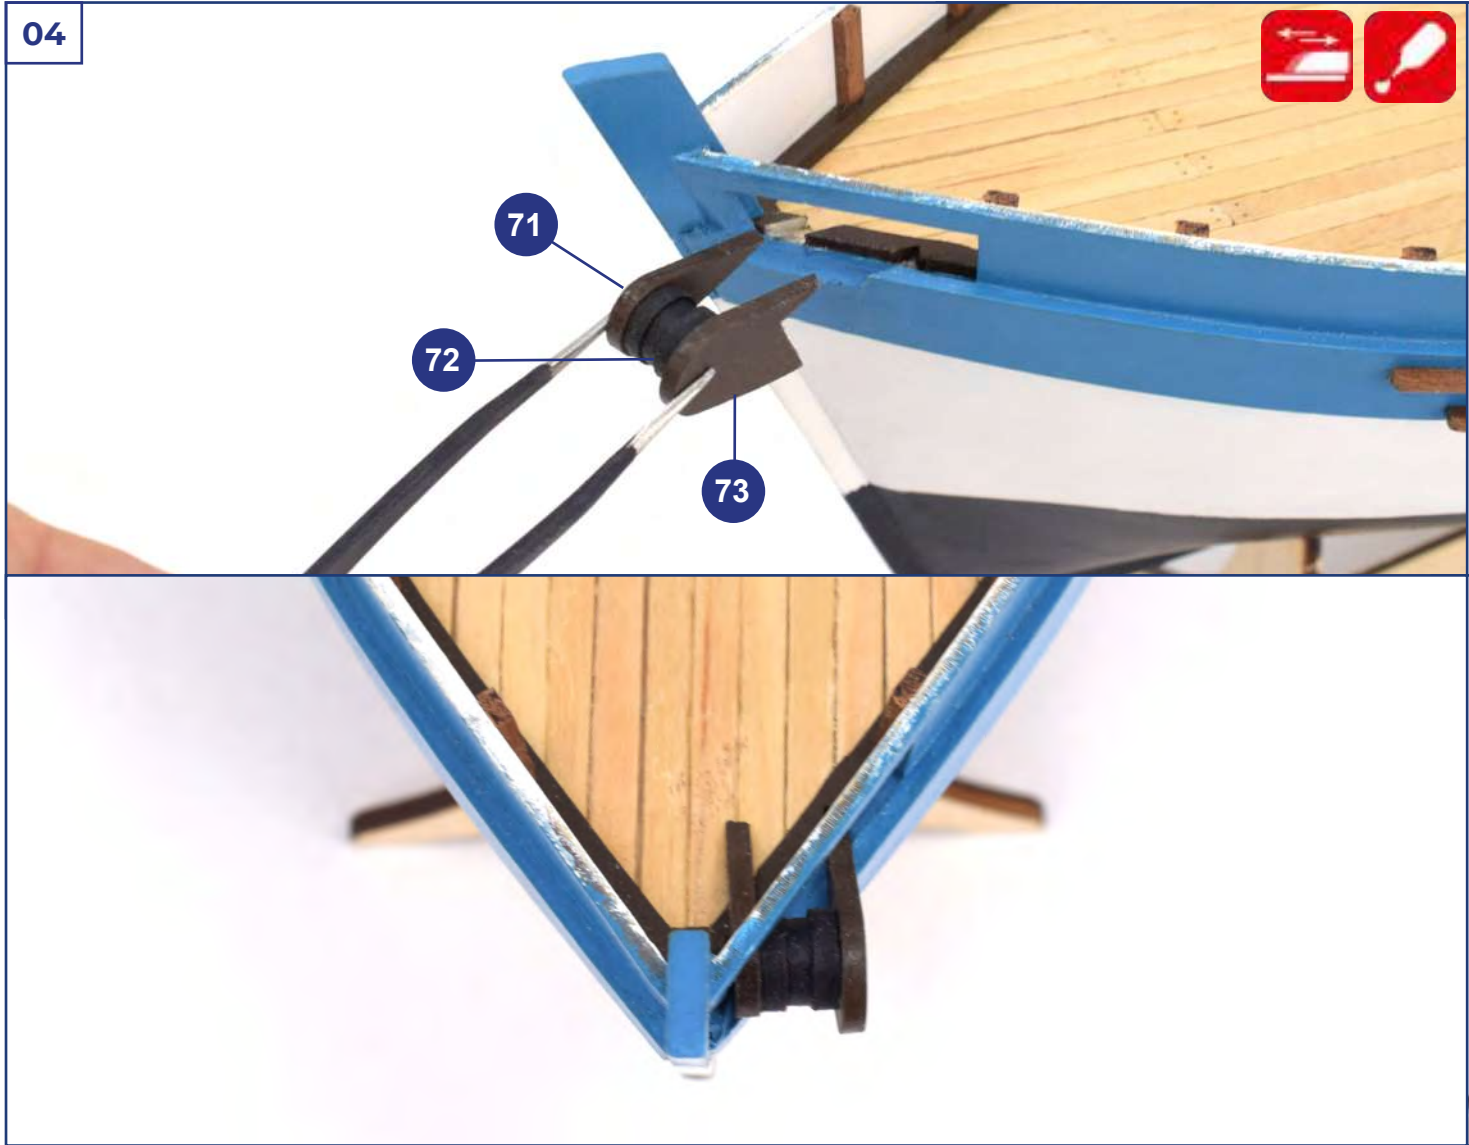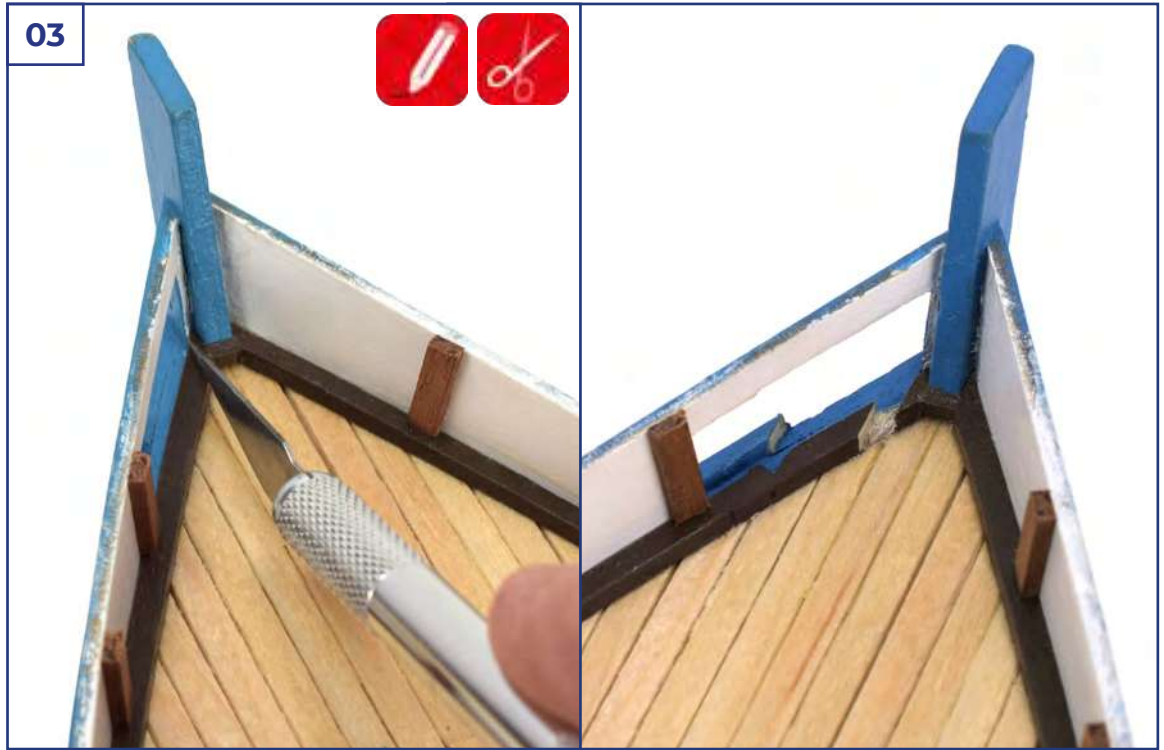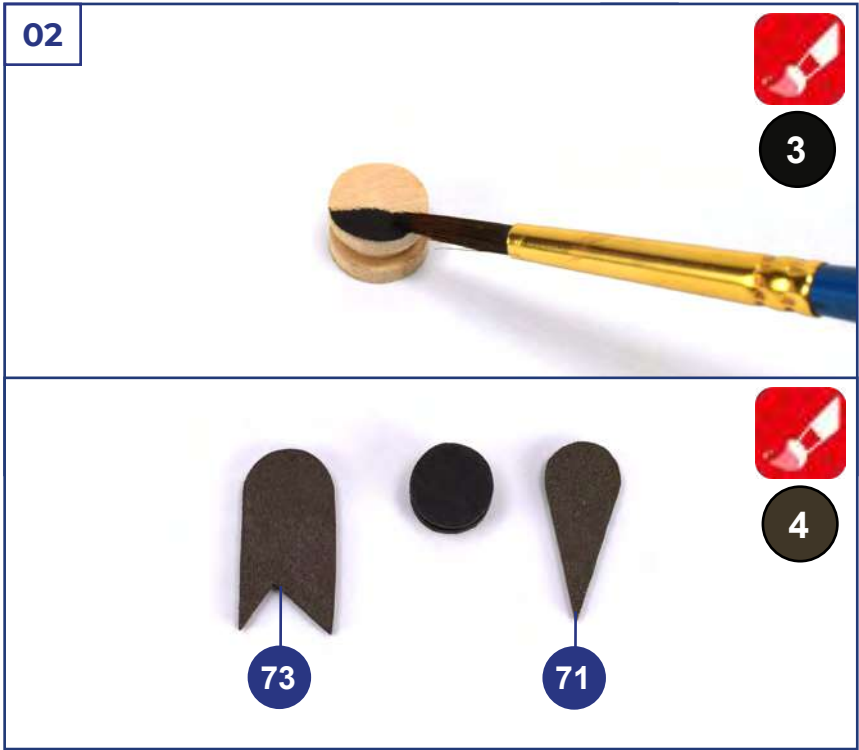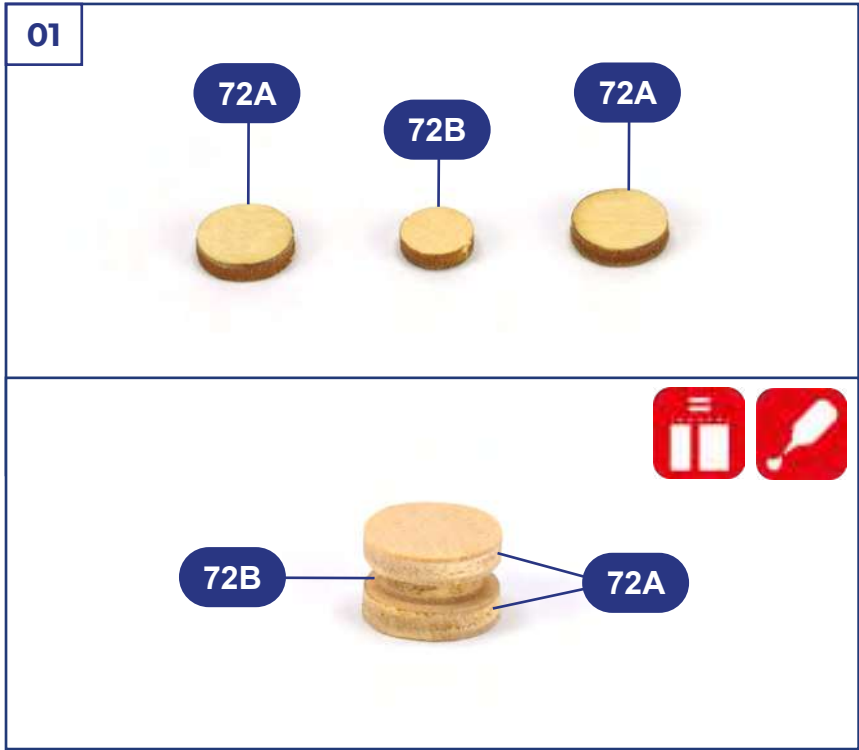

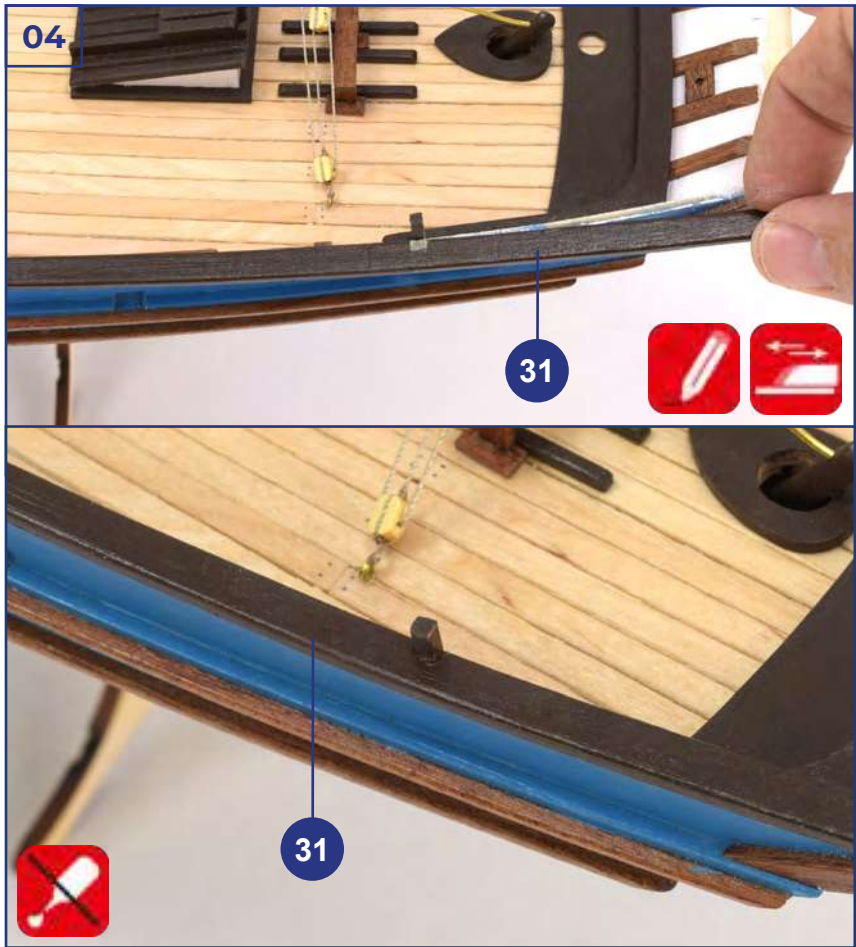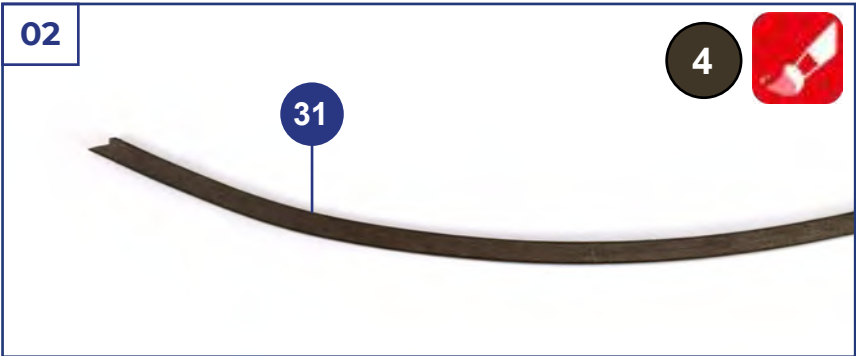

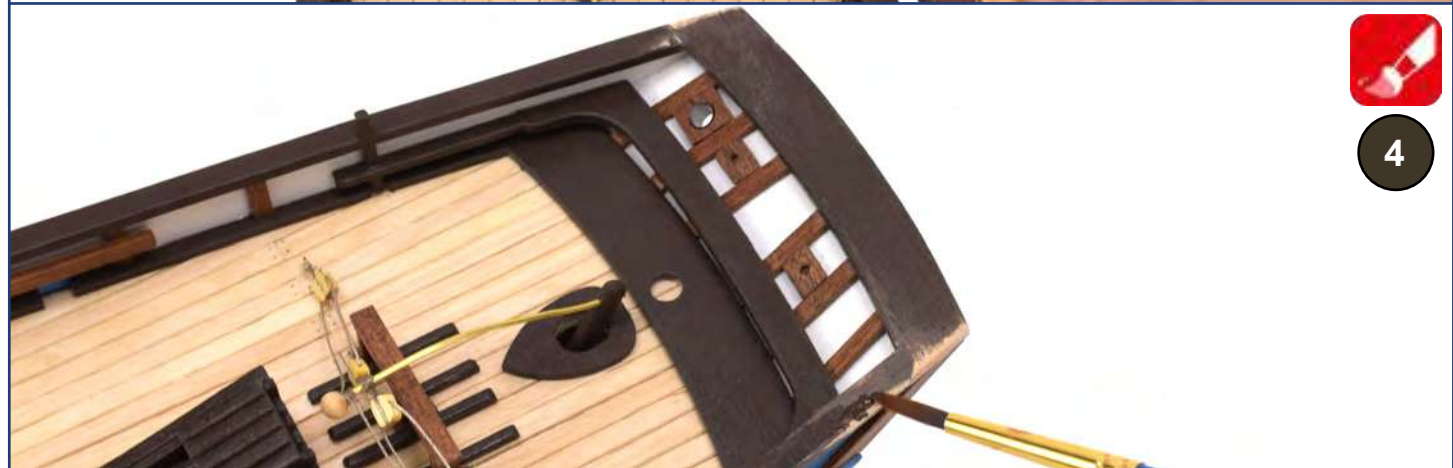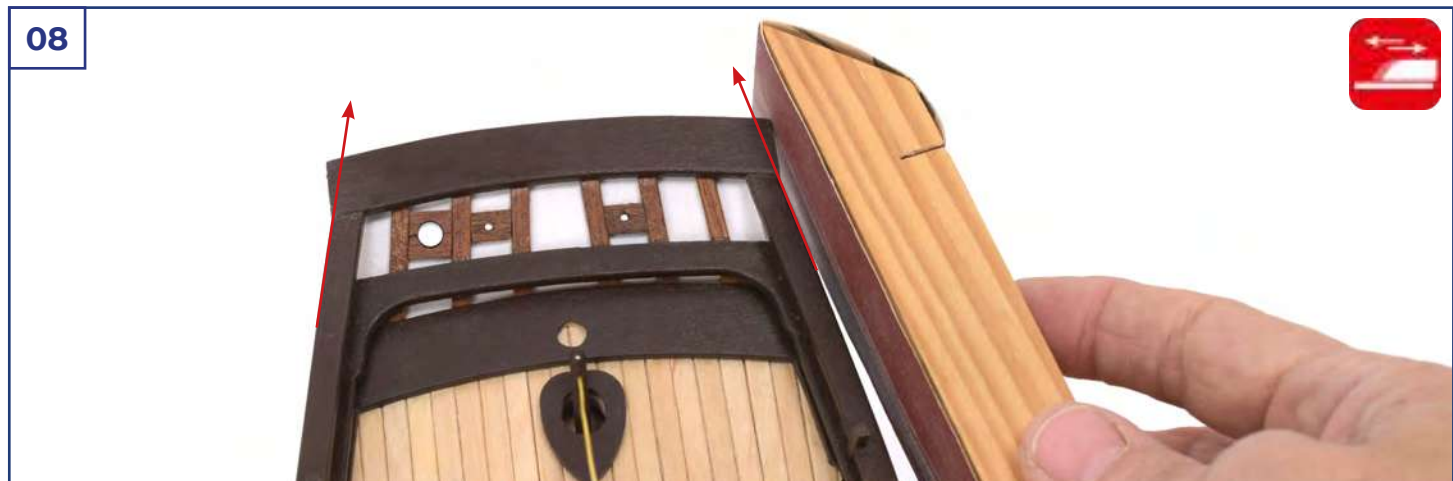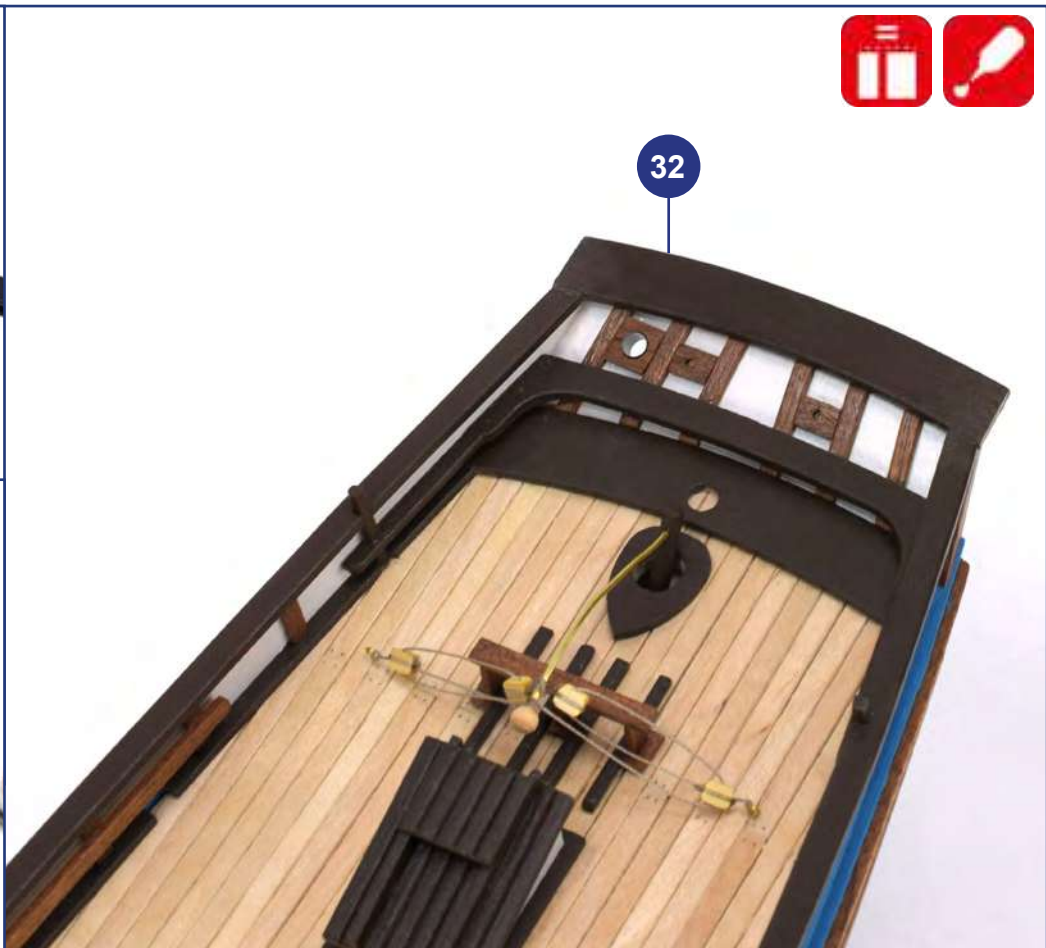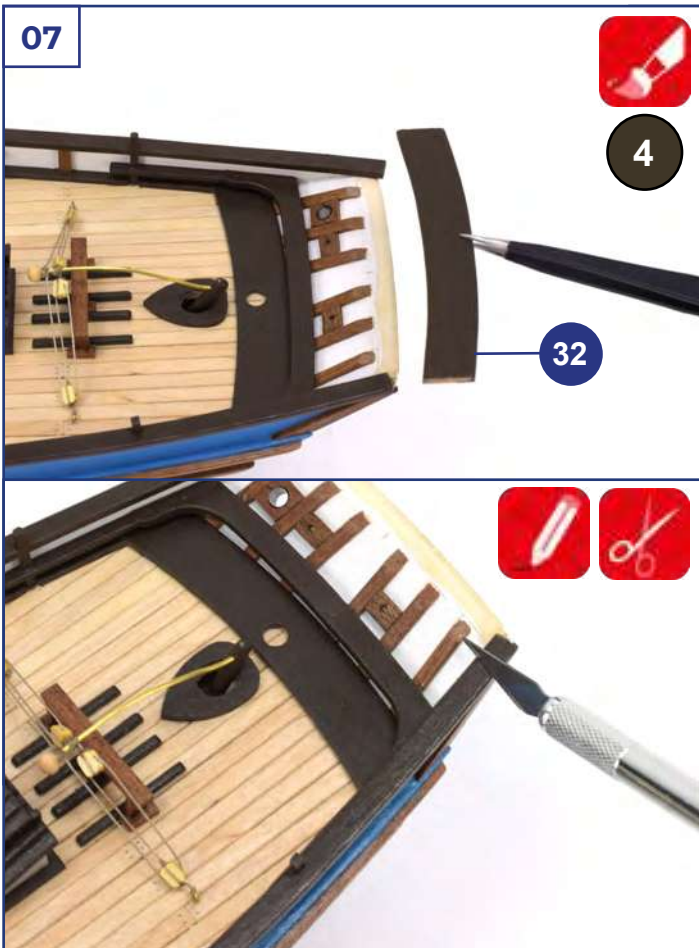


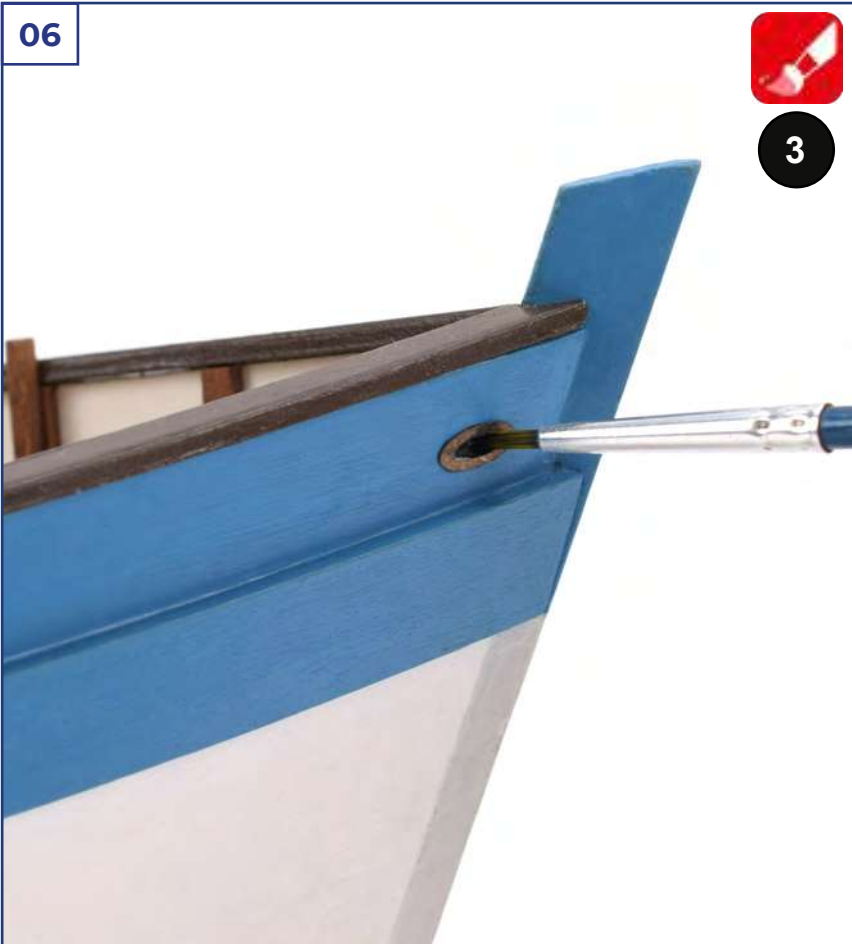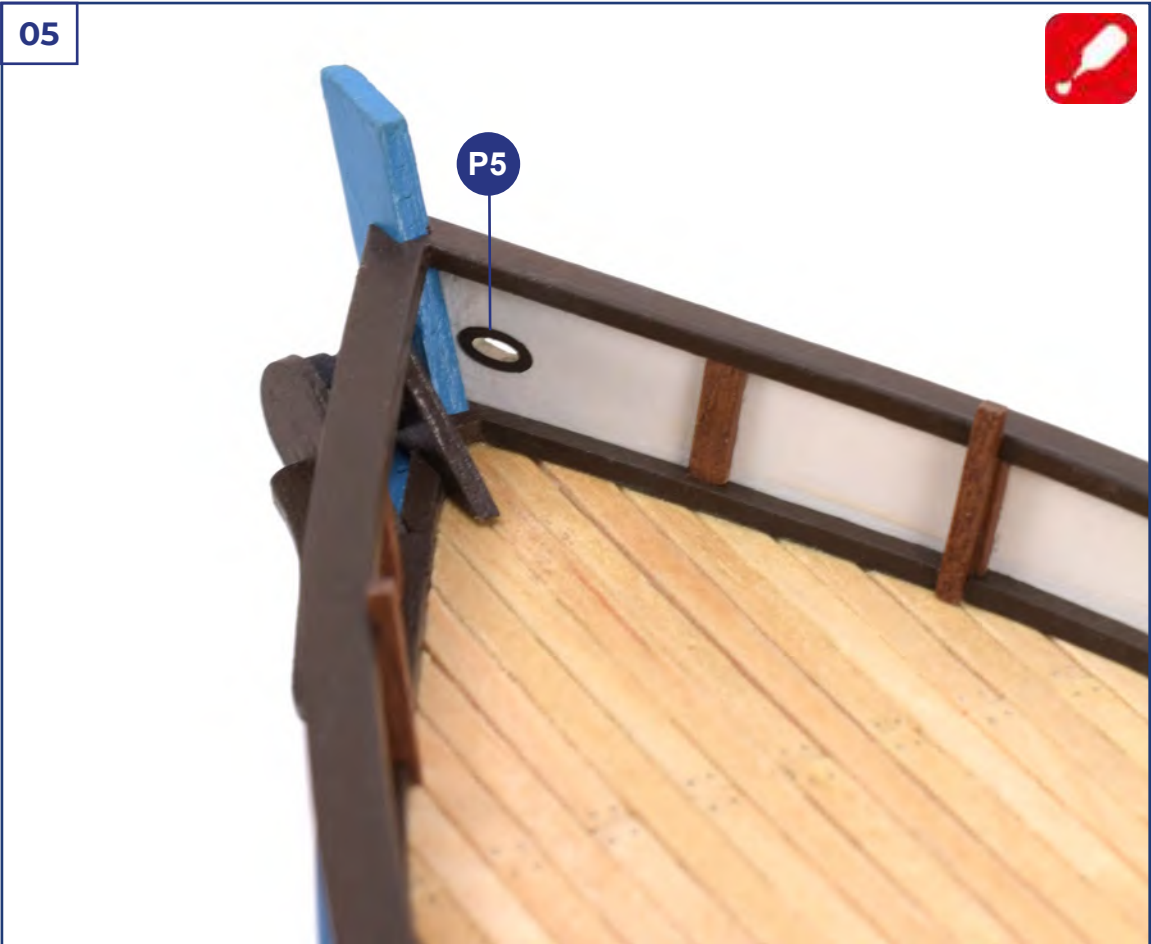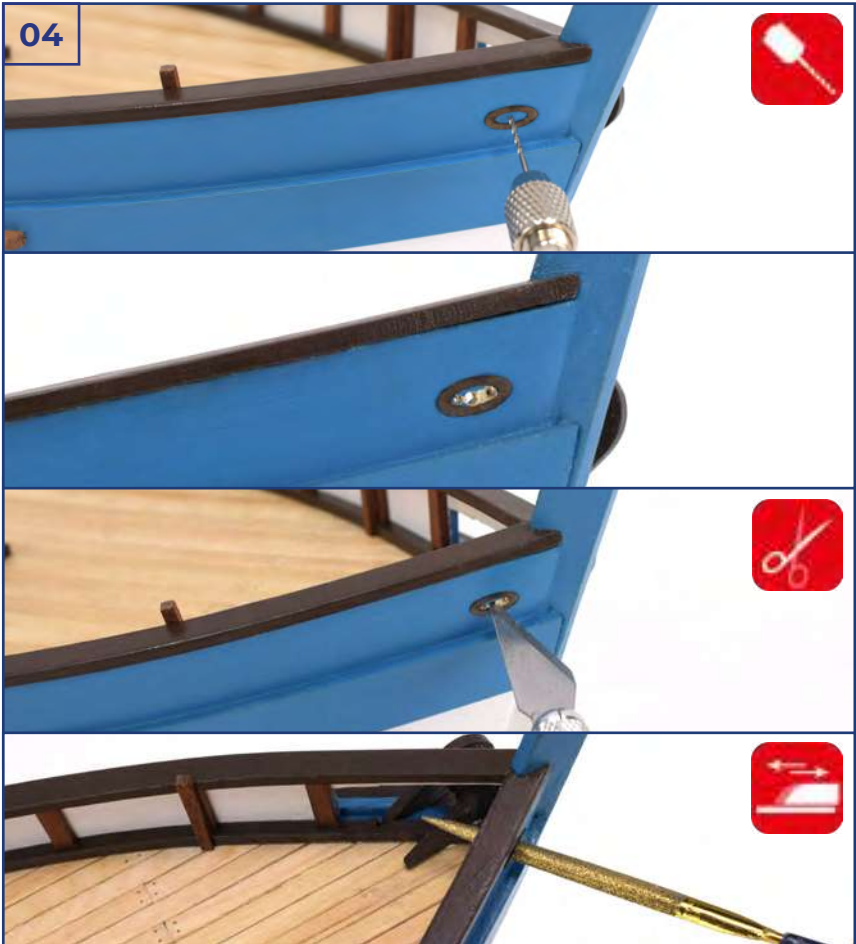

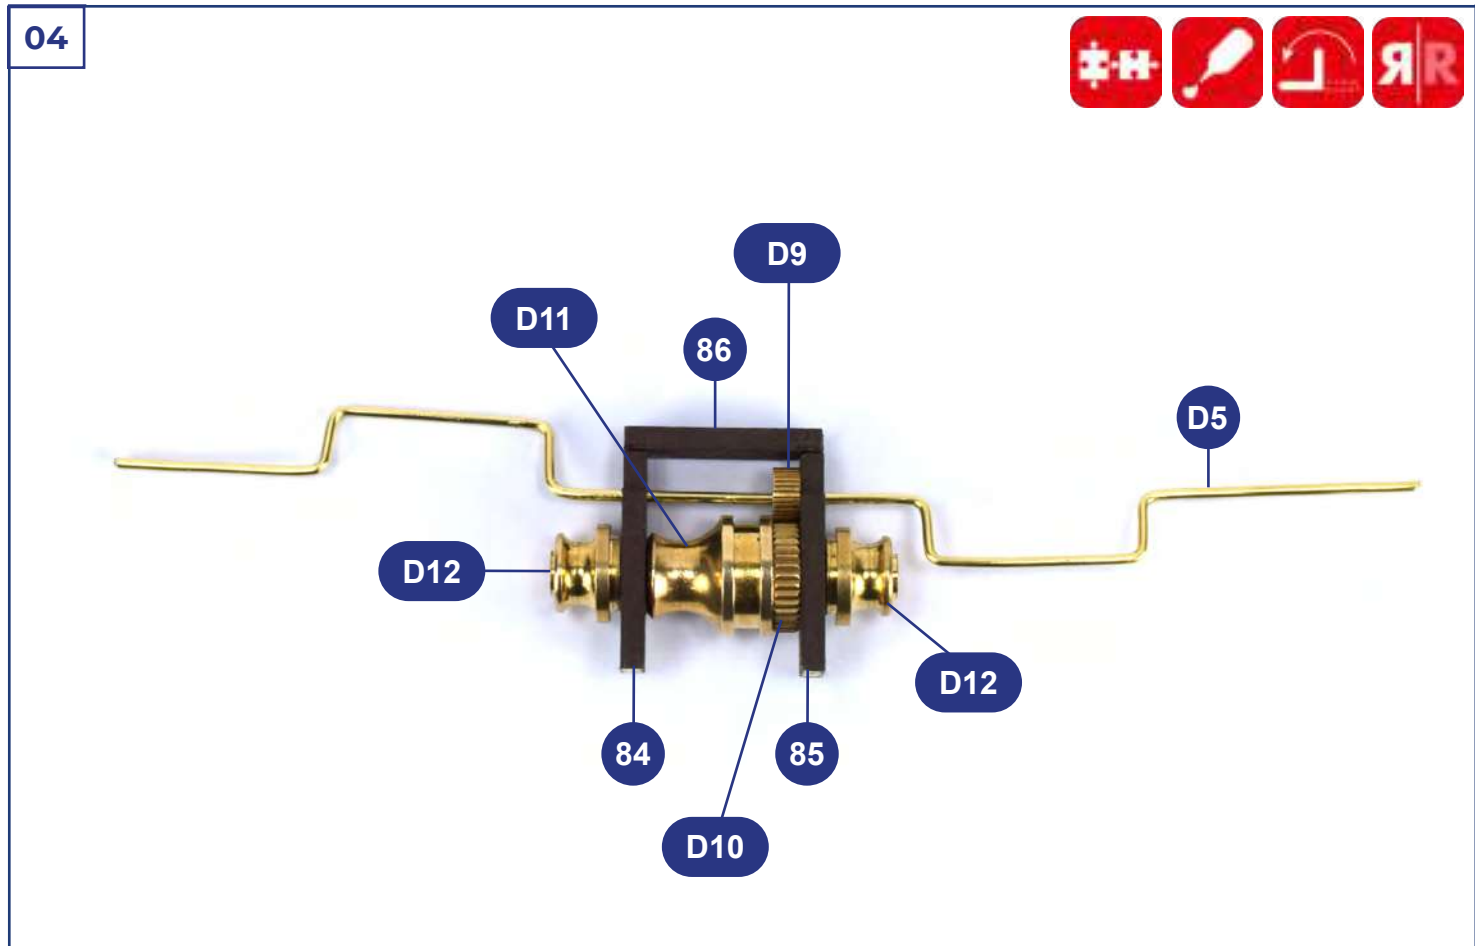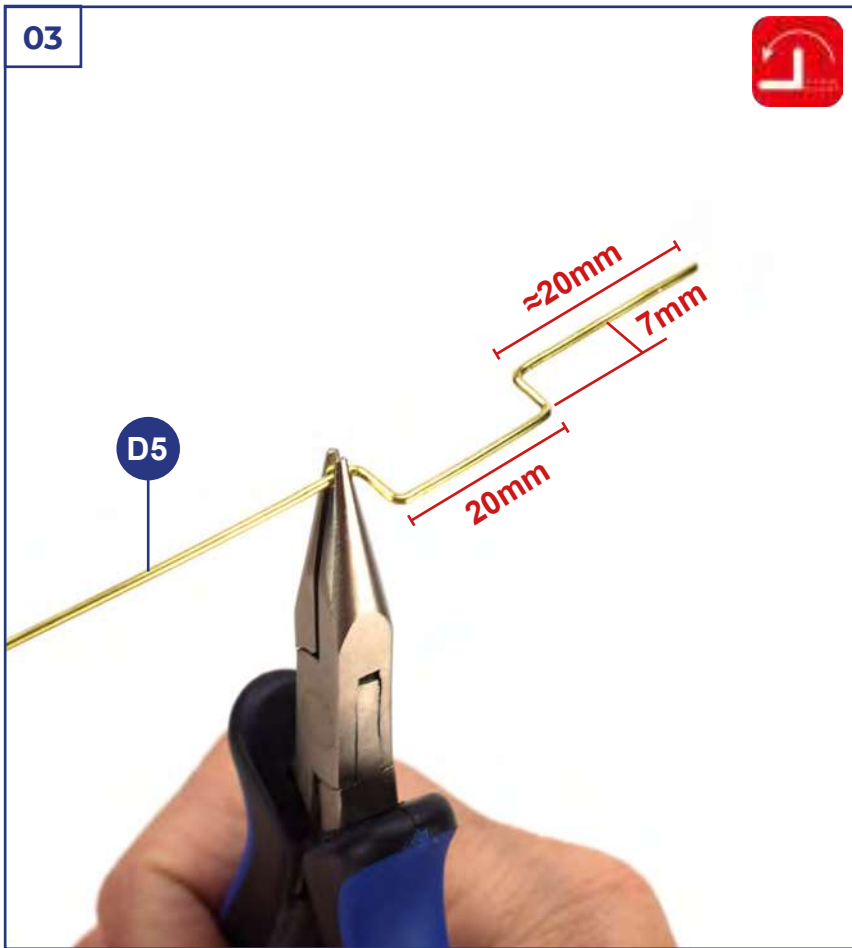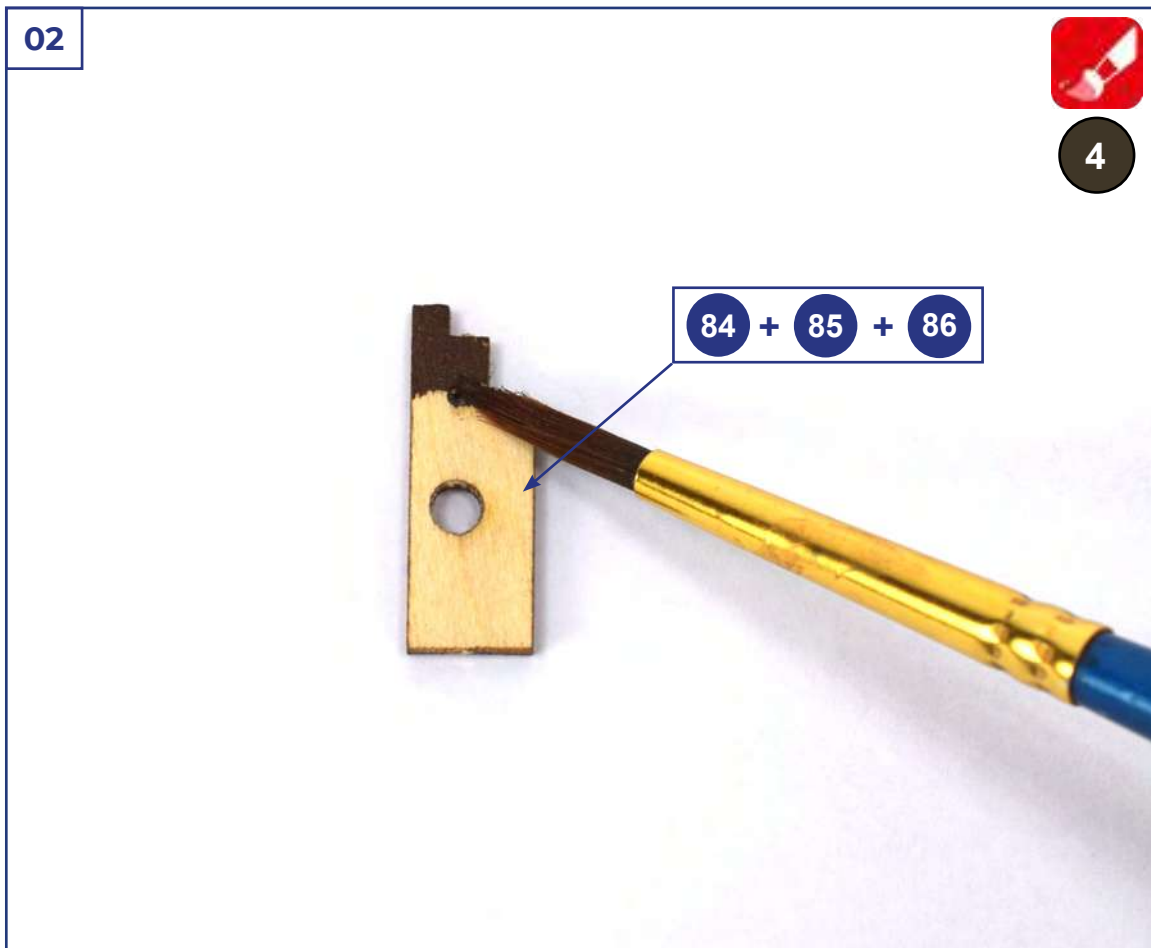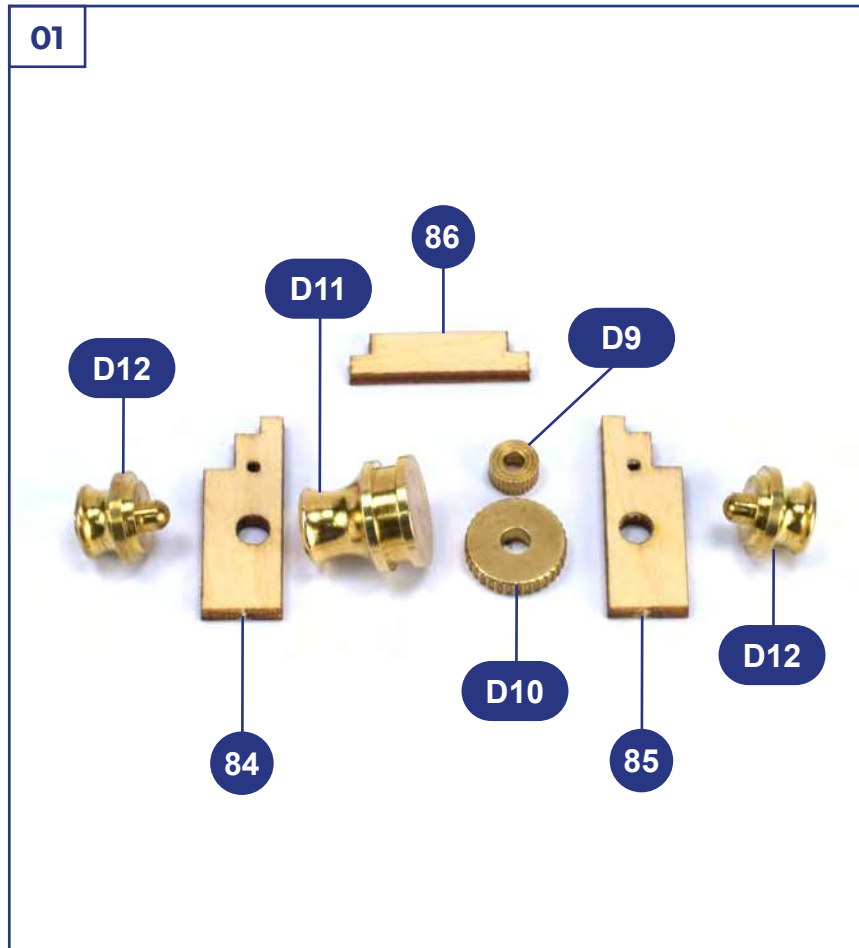


05



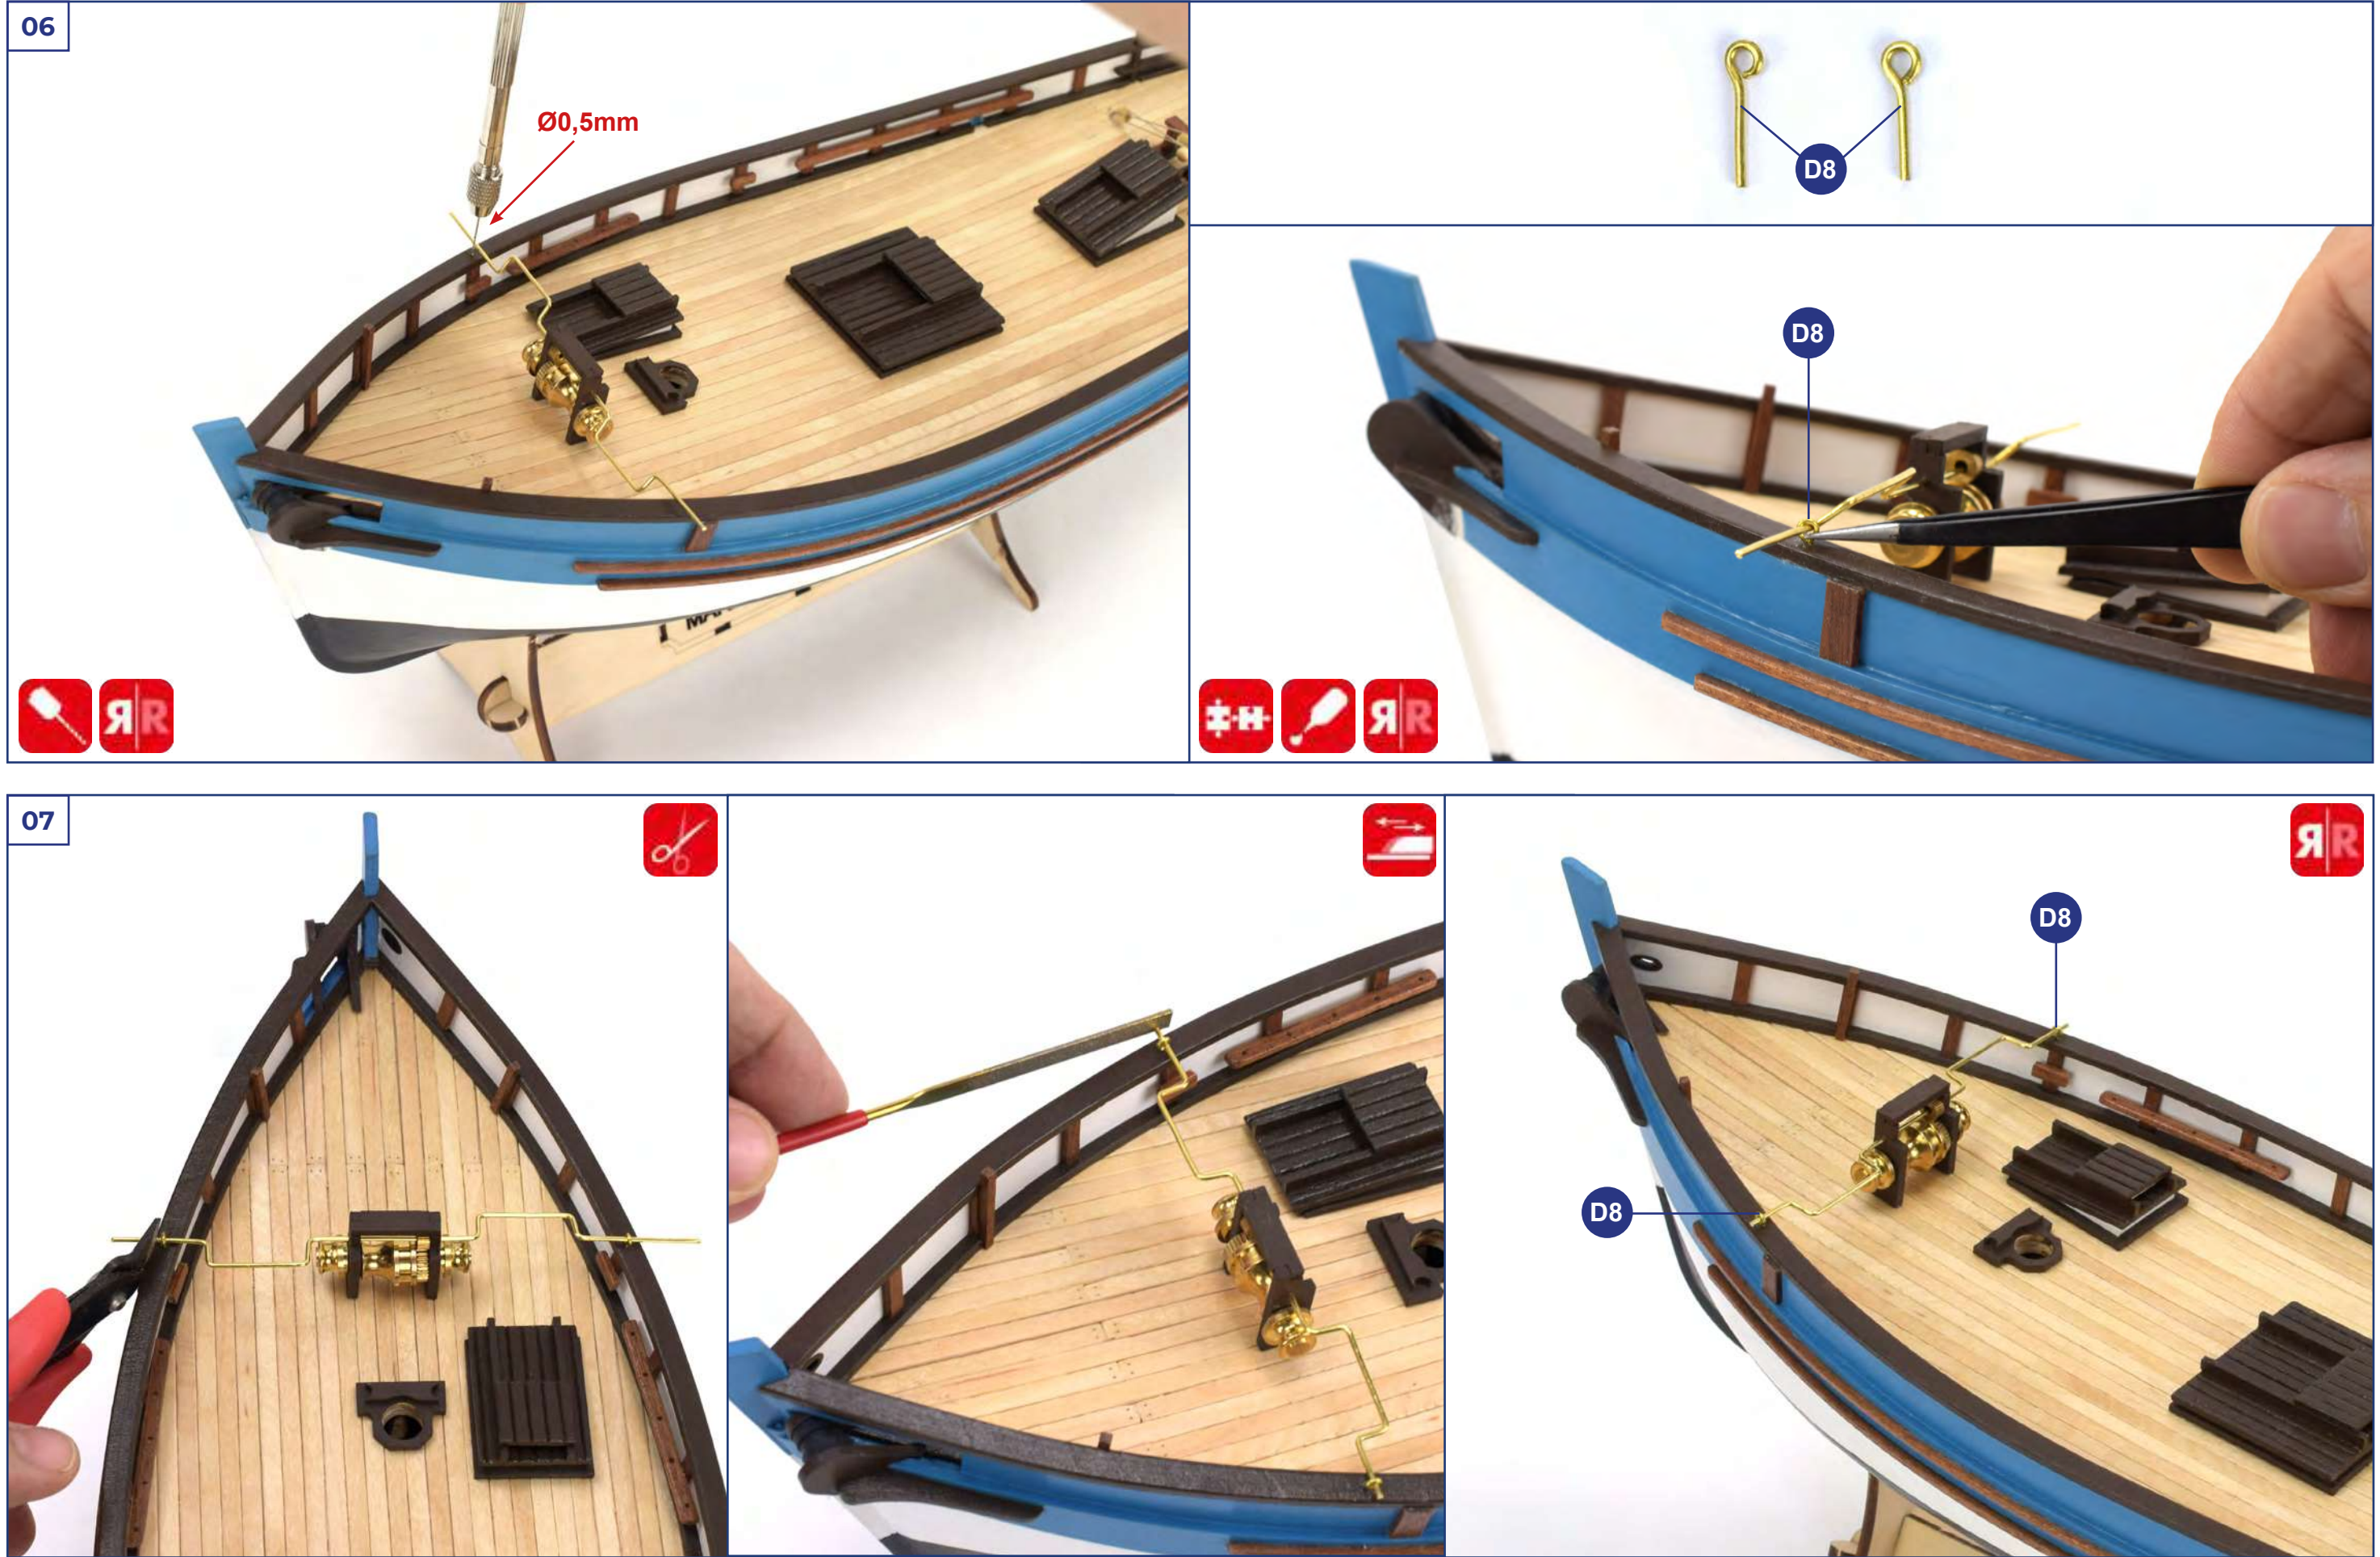

01

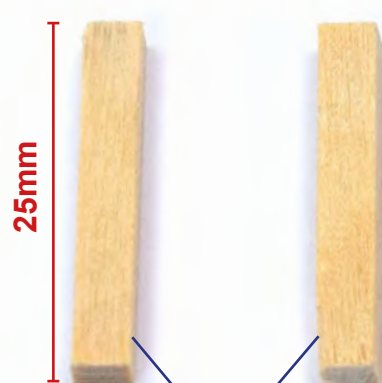

25mm

WS9



02



WS9






03



4mm

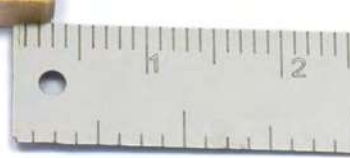












R

x2

04



90

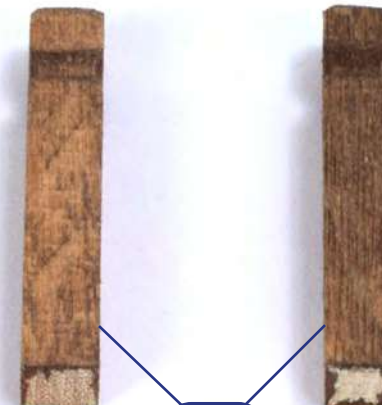

WS9



05

Ø5mm → Ø3mm

90 00



160mm

Ø3mm

WD1 → BS

D5

WS9

Ø5mm




14mm









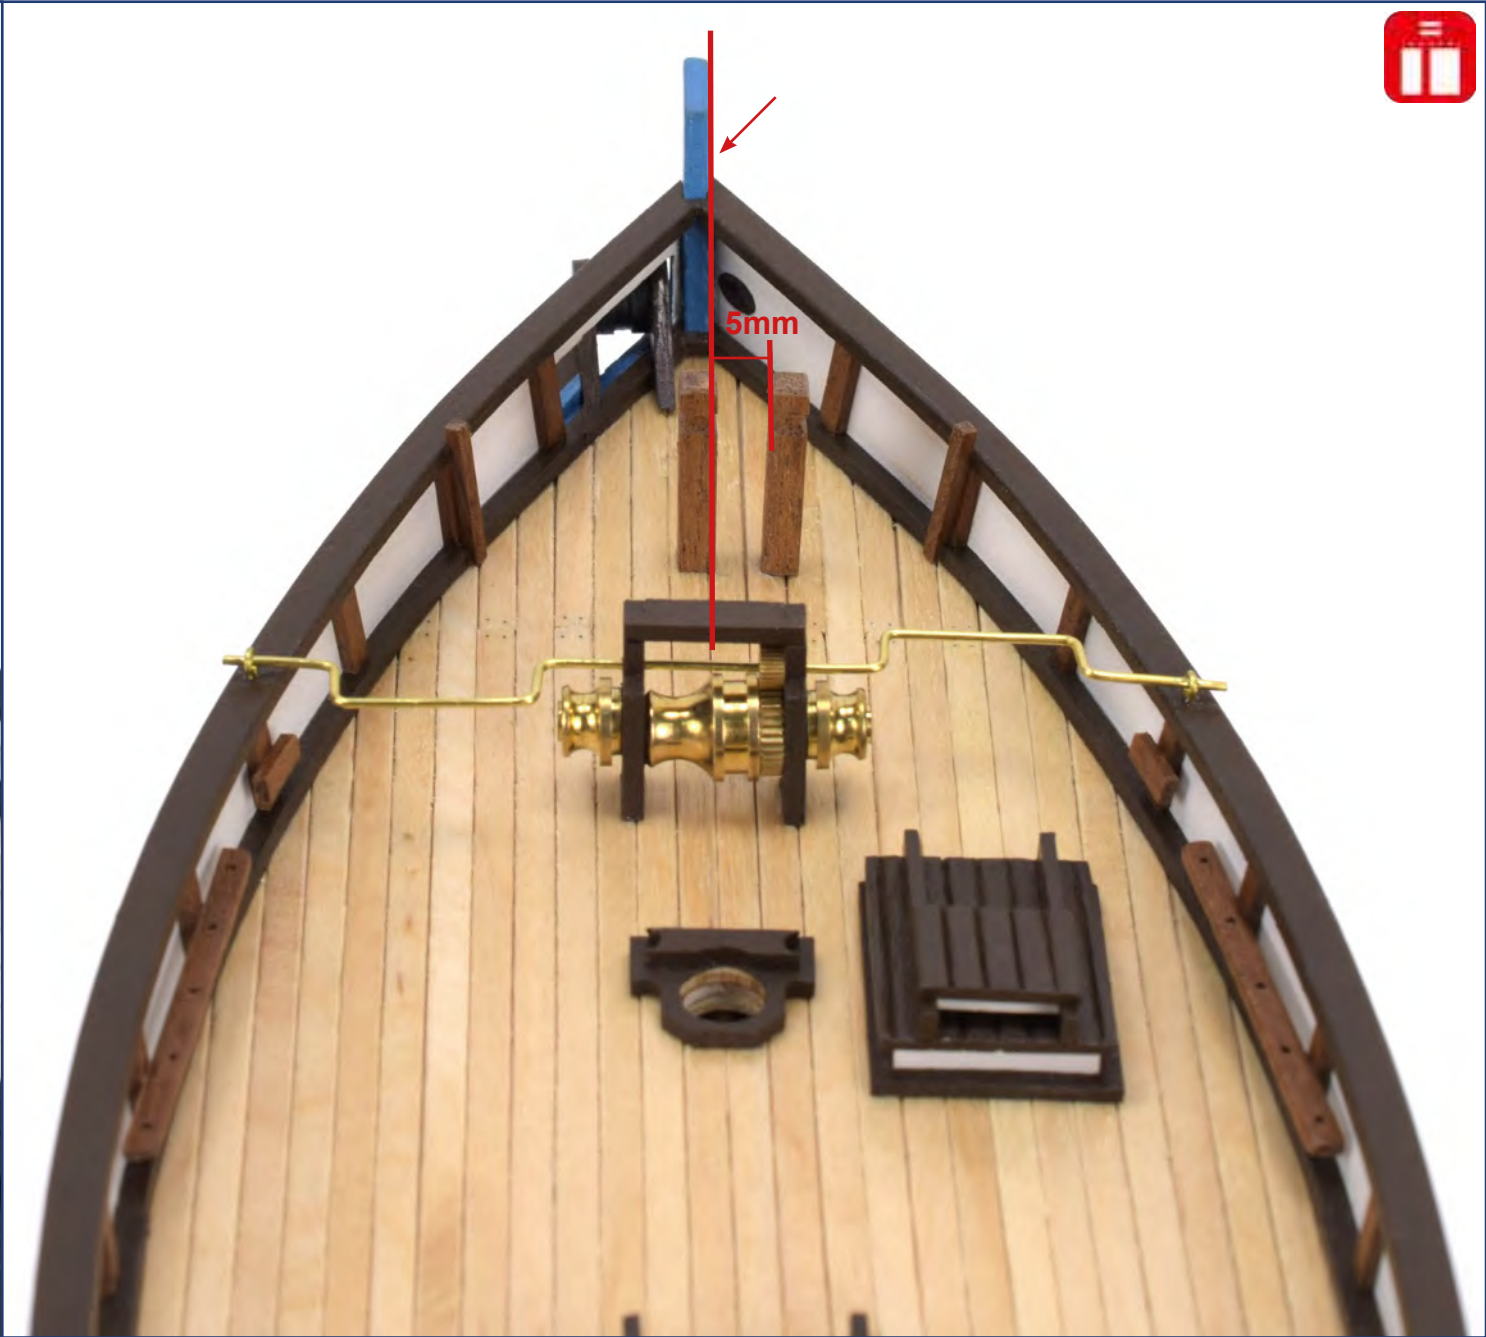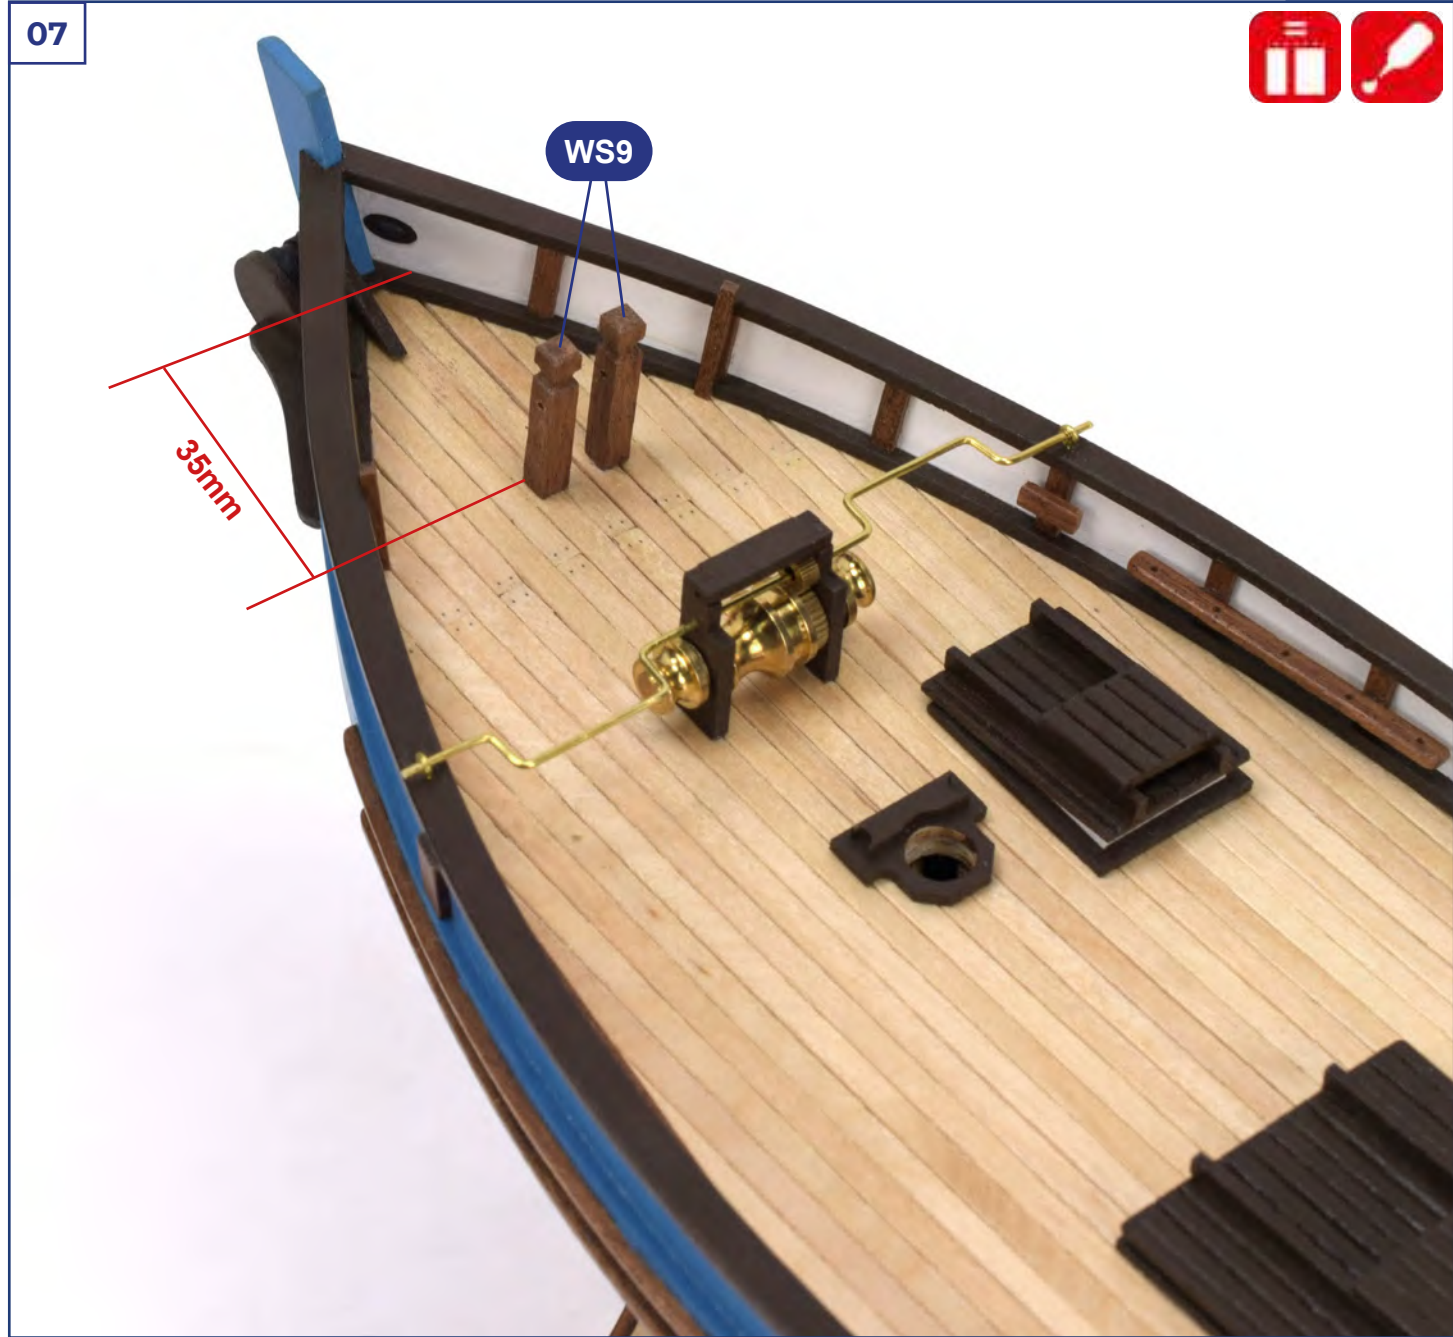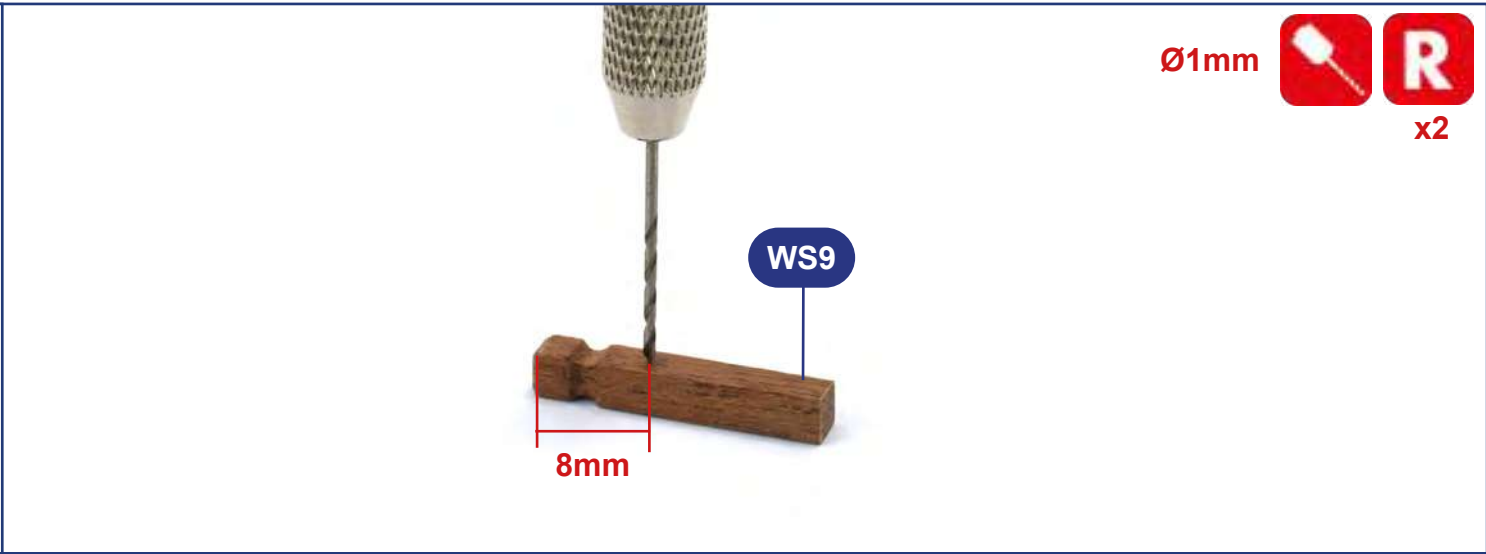

01

WS5

40mm

Ø3mm

WS5

02

90

03

5mm

≈3mm

WS5

R

04

WS5

4

74

WS5


74

05

WS5

5mm

01

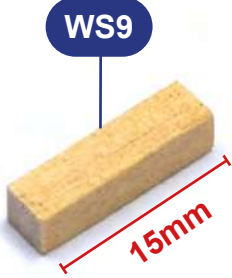



02











03





04

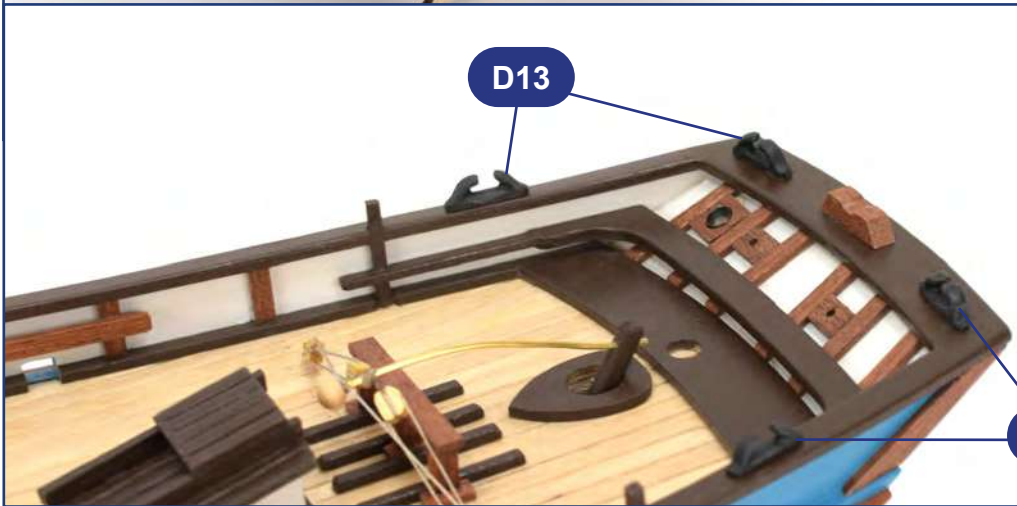


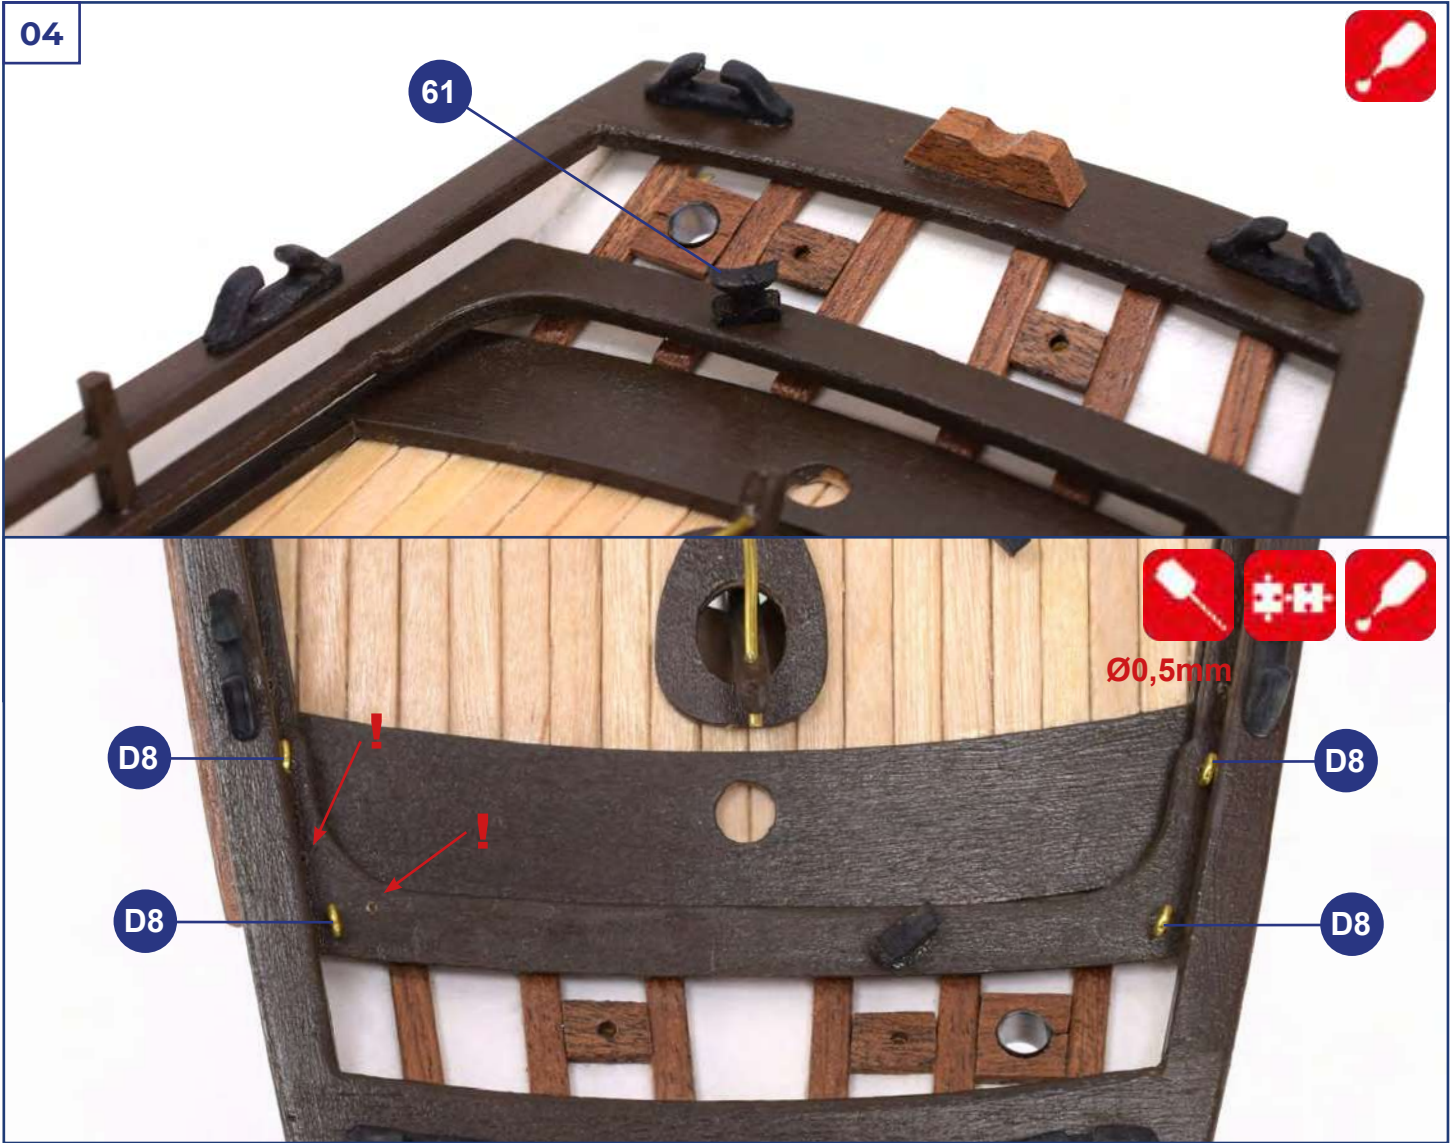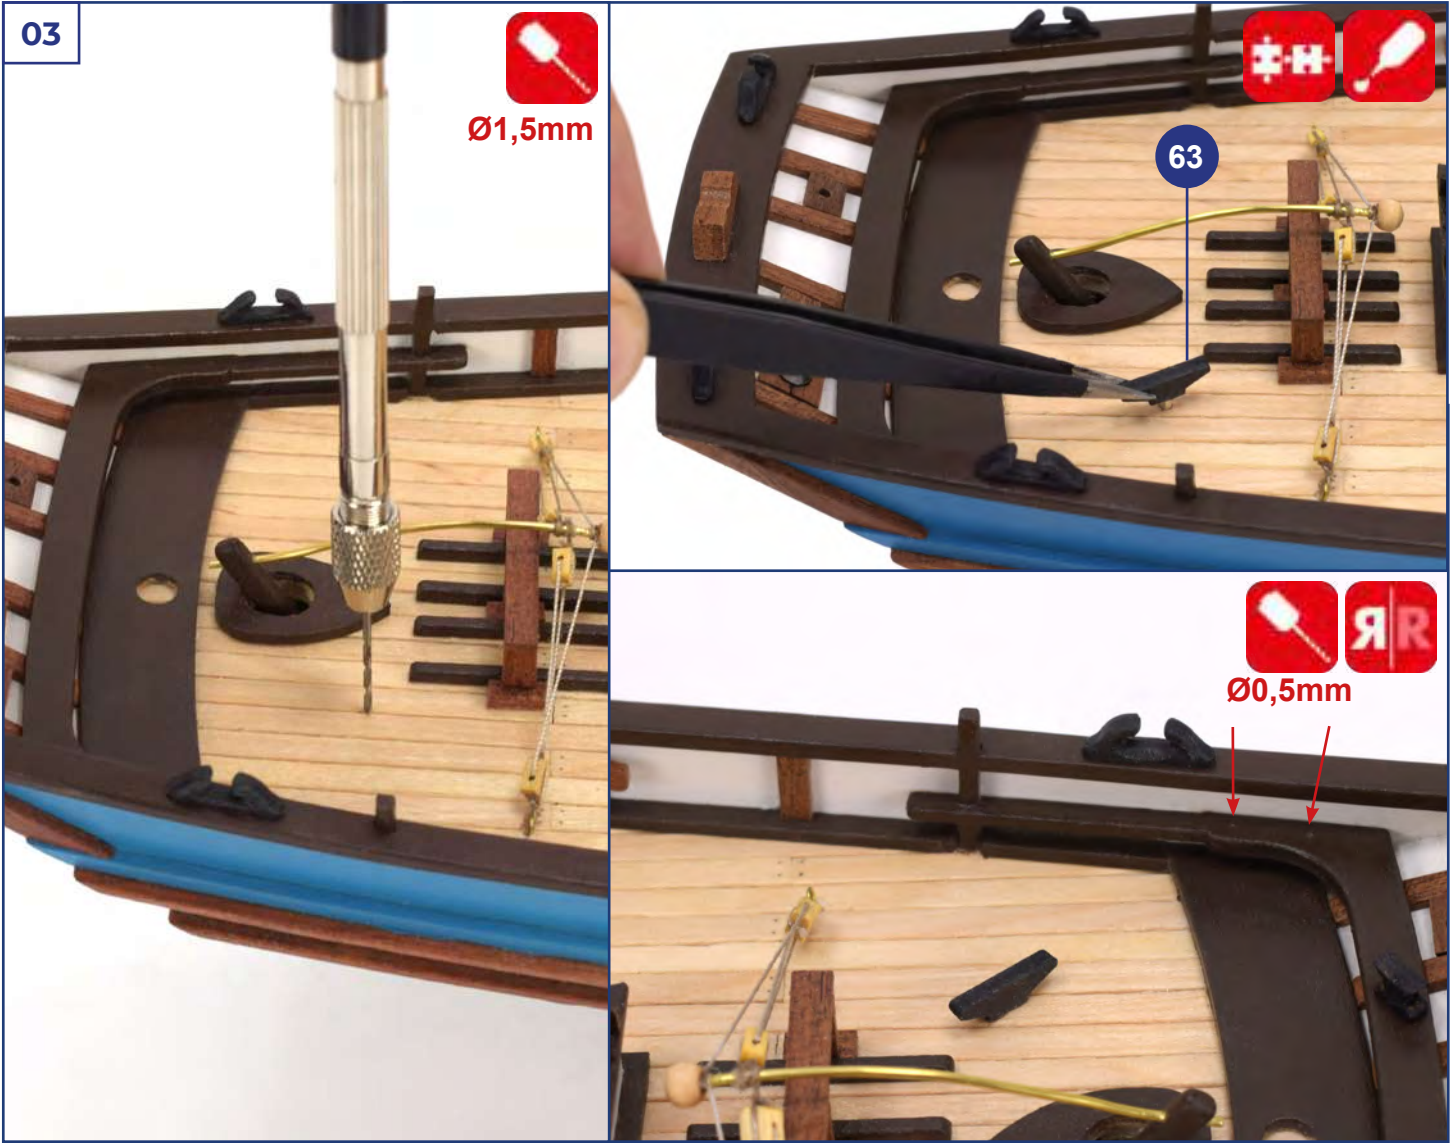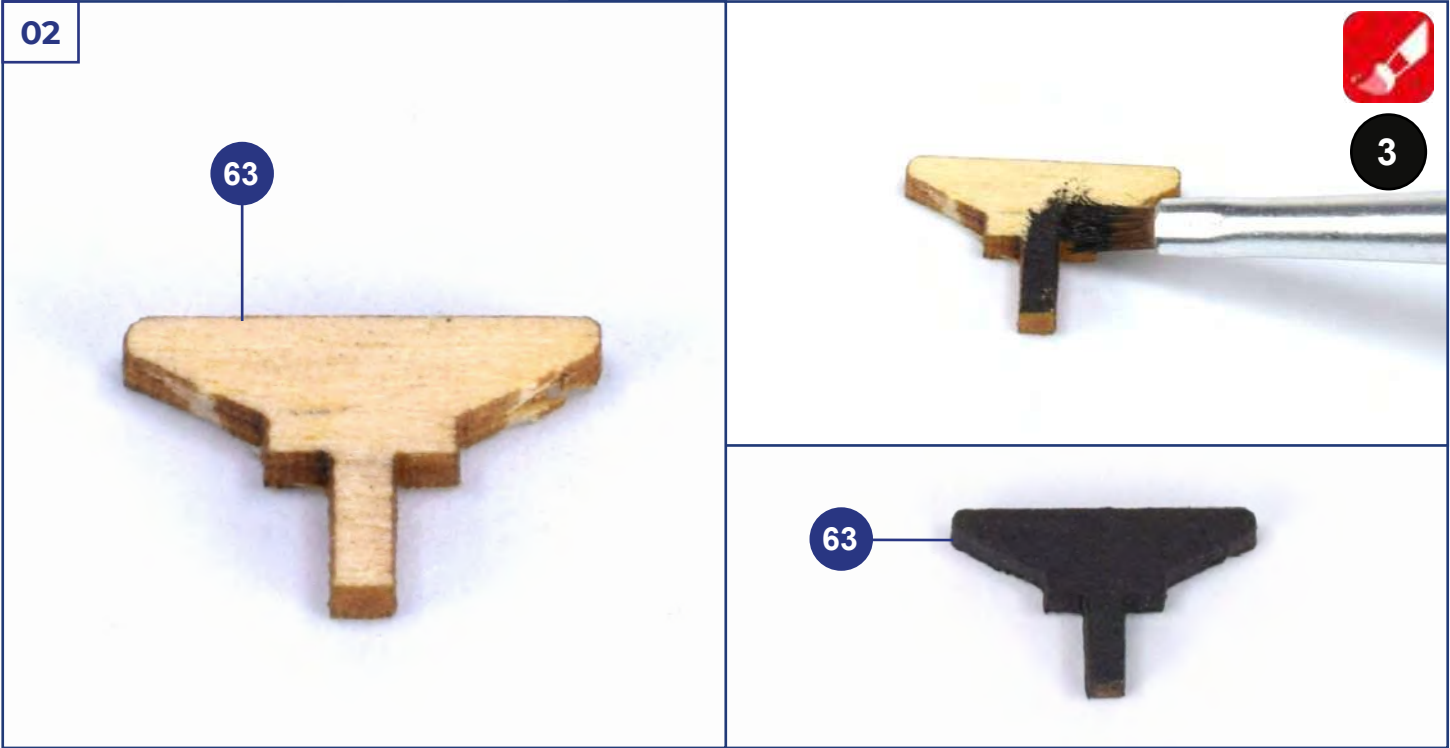
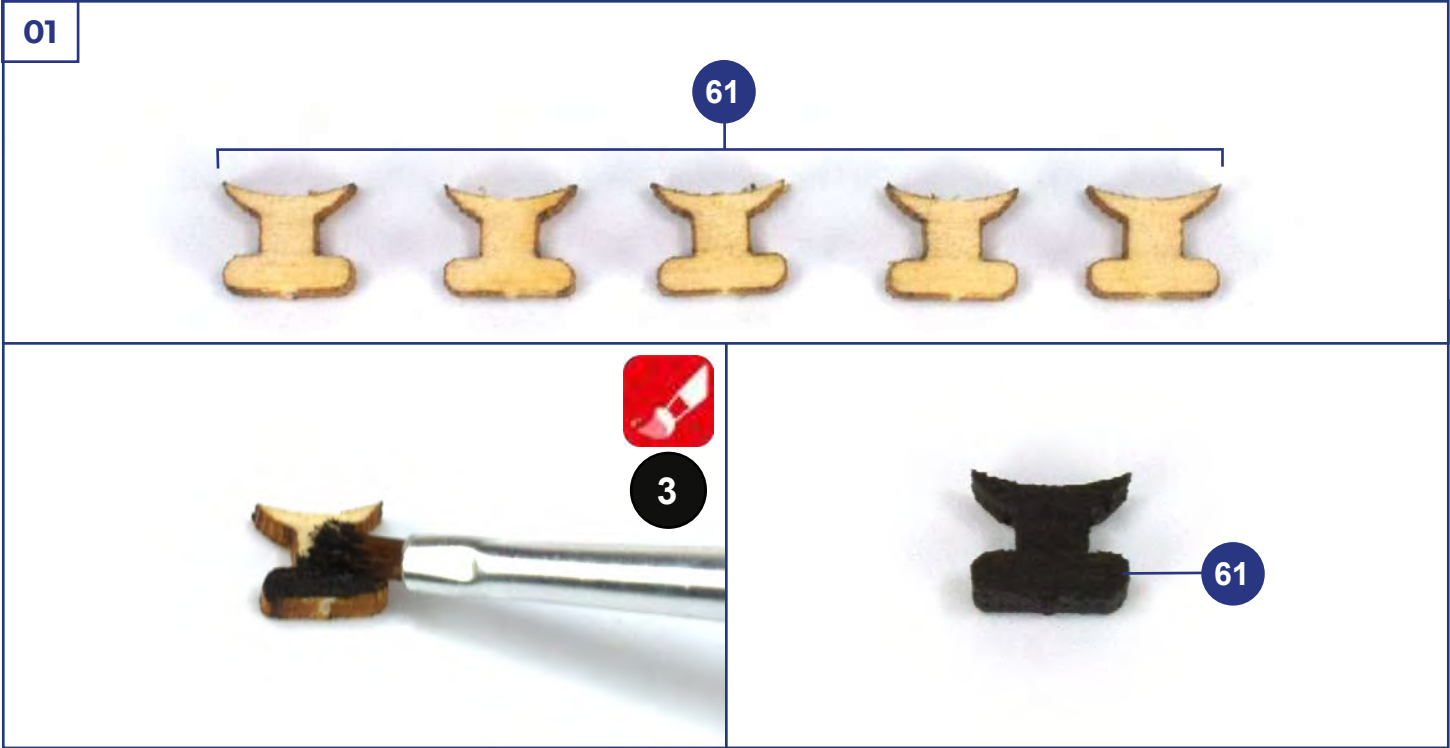



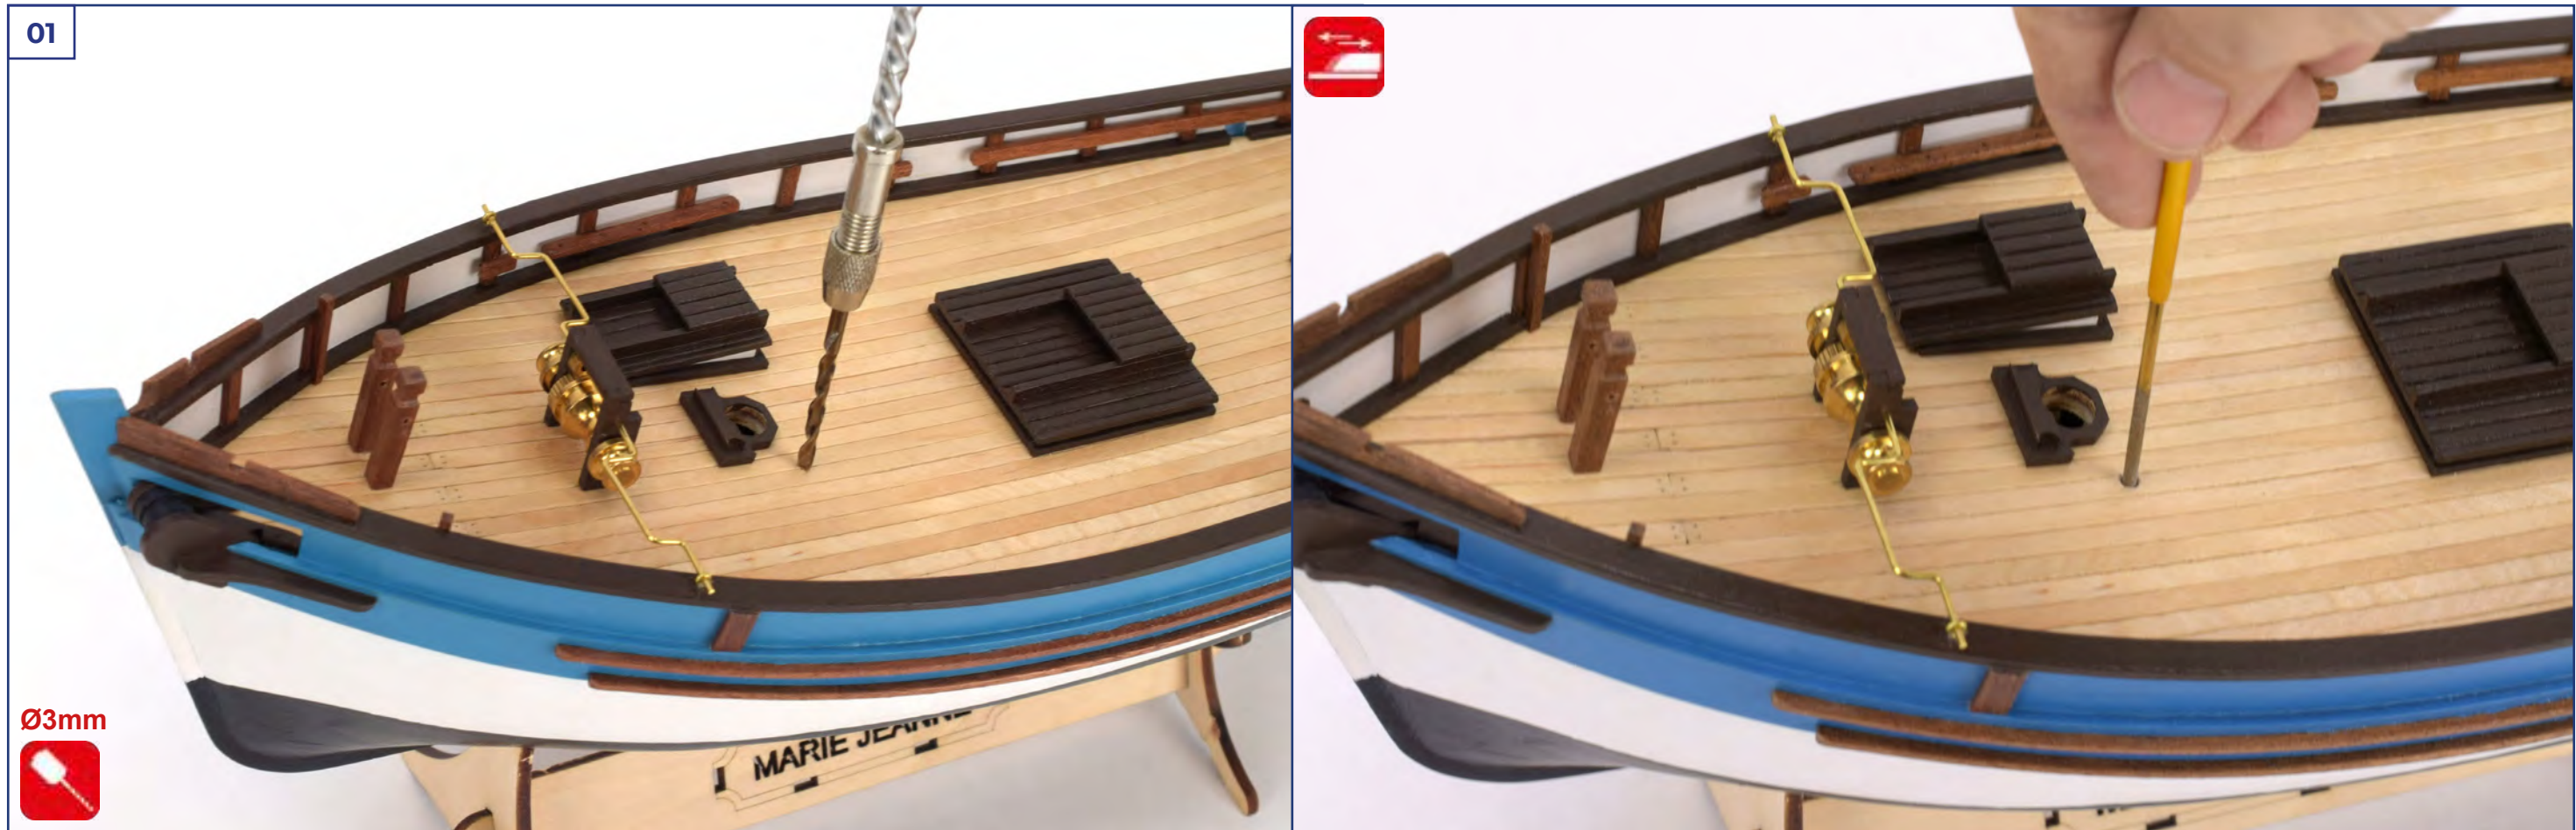


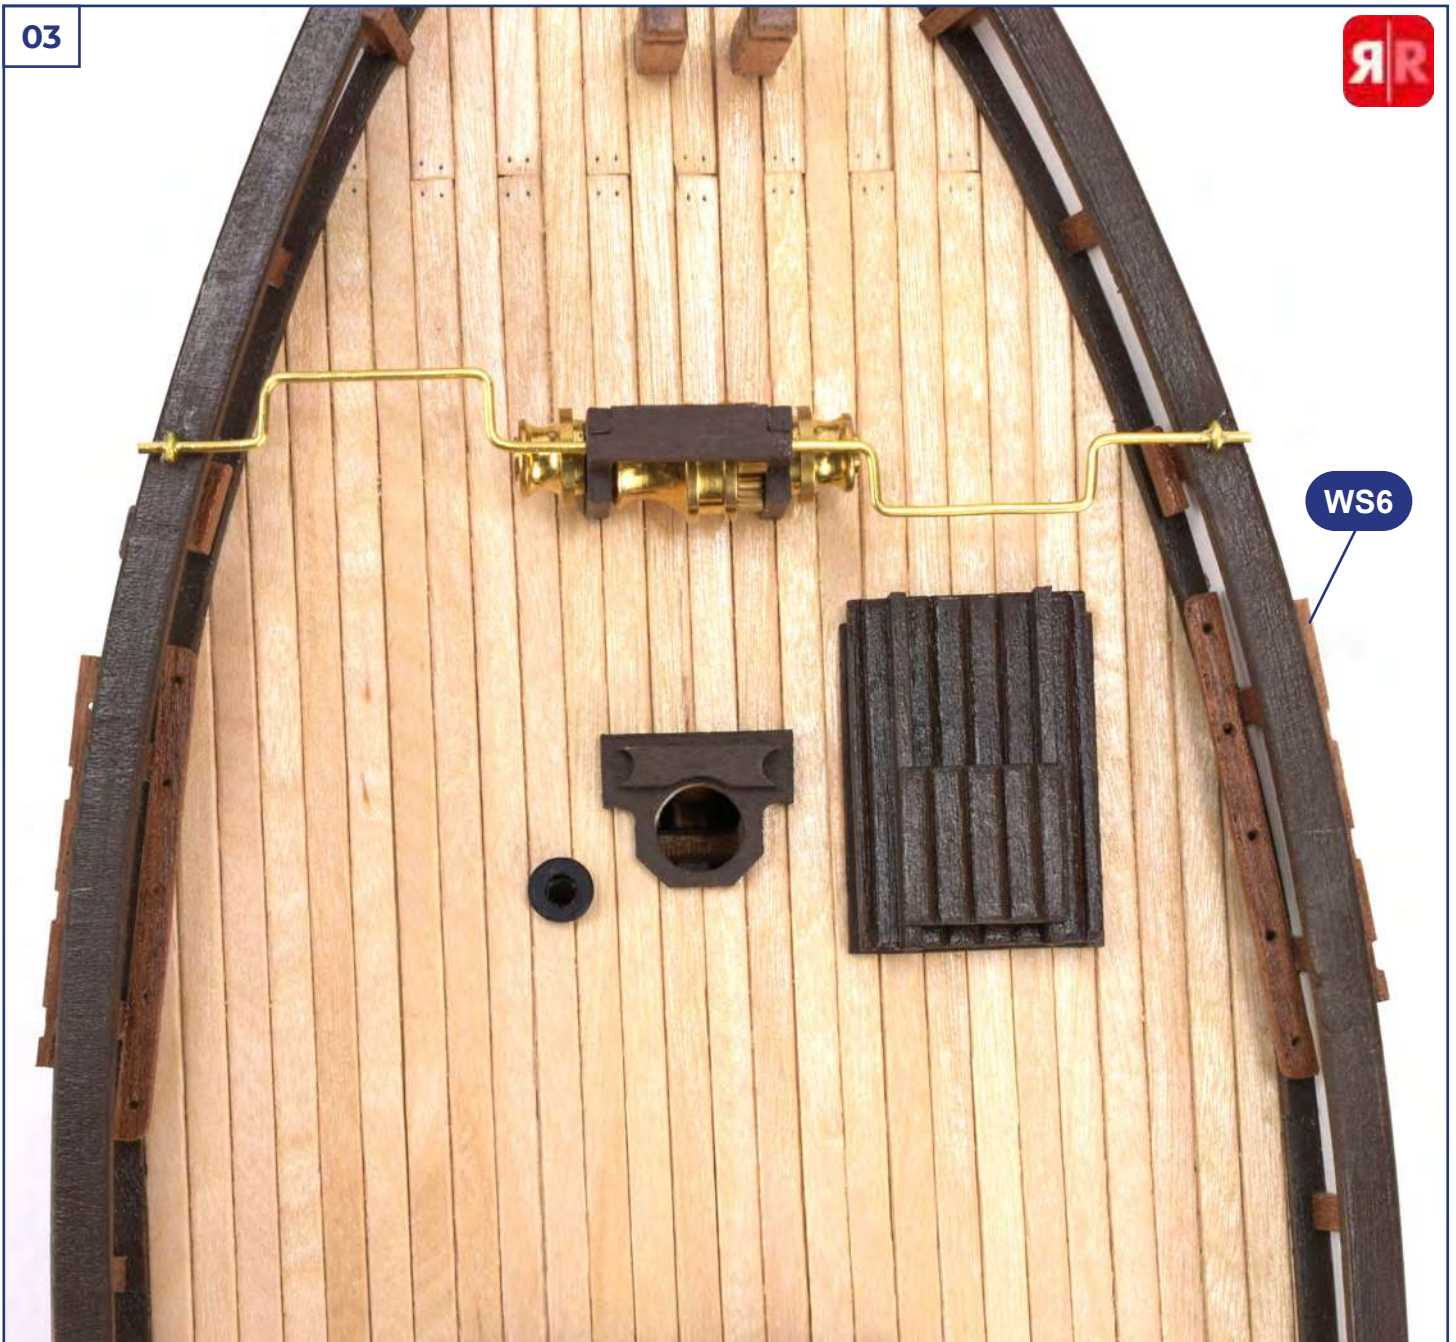


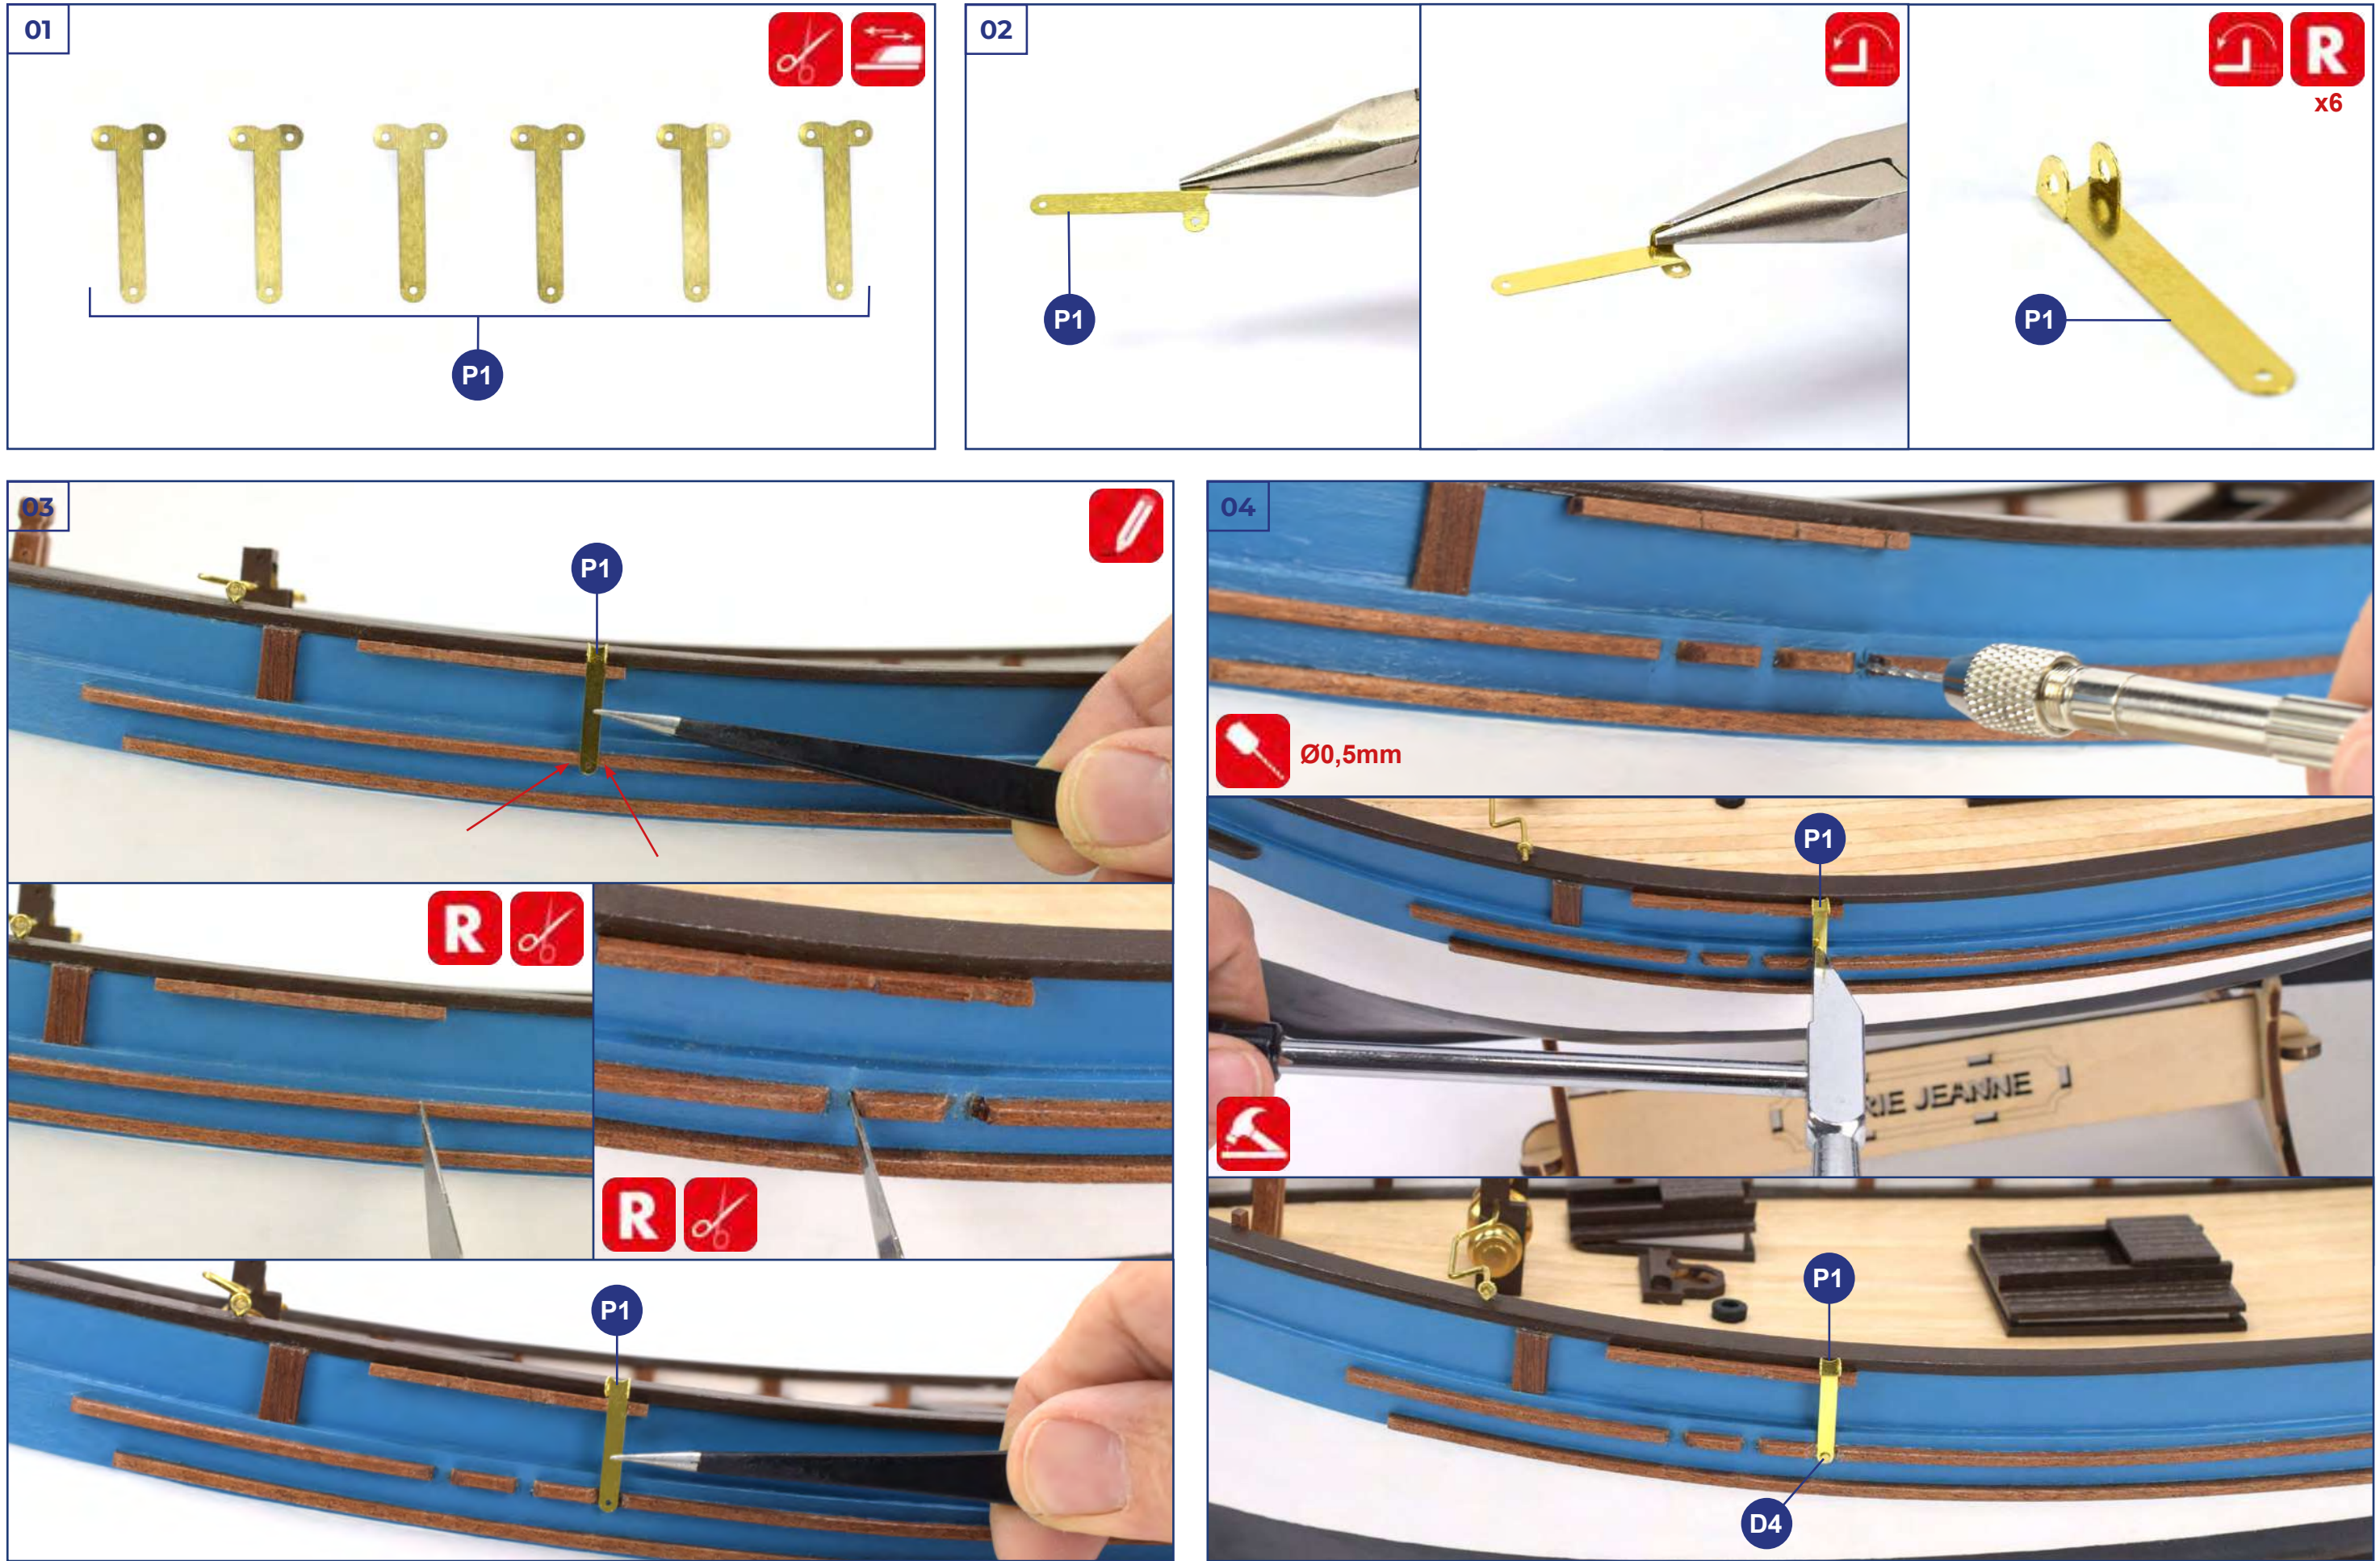


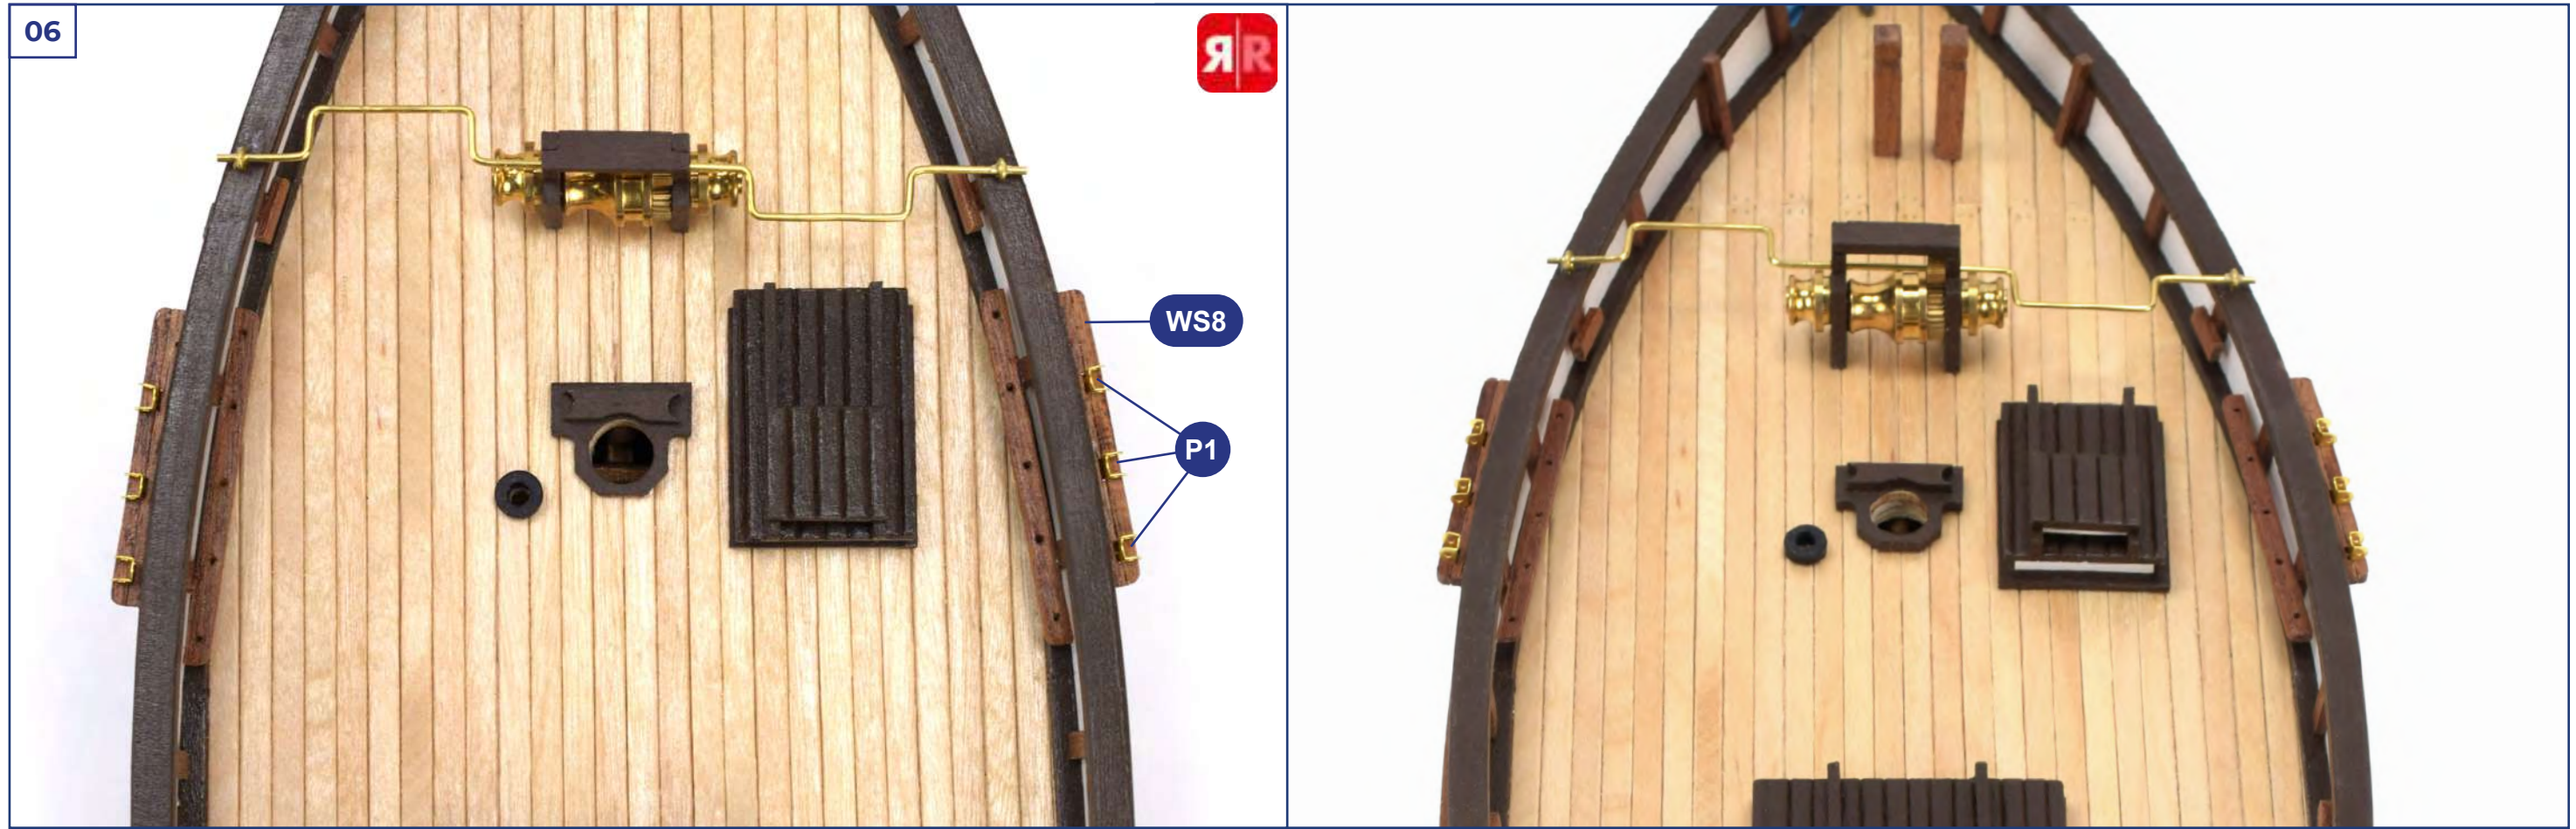


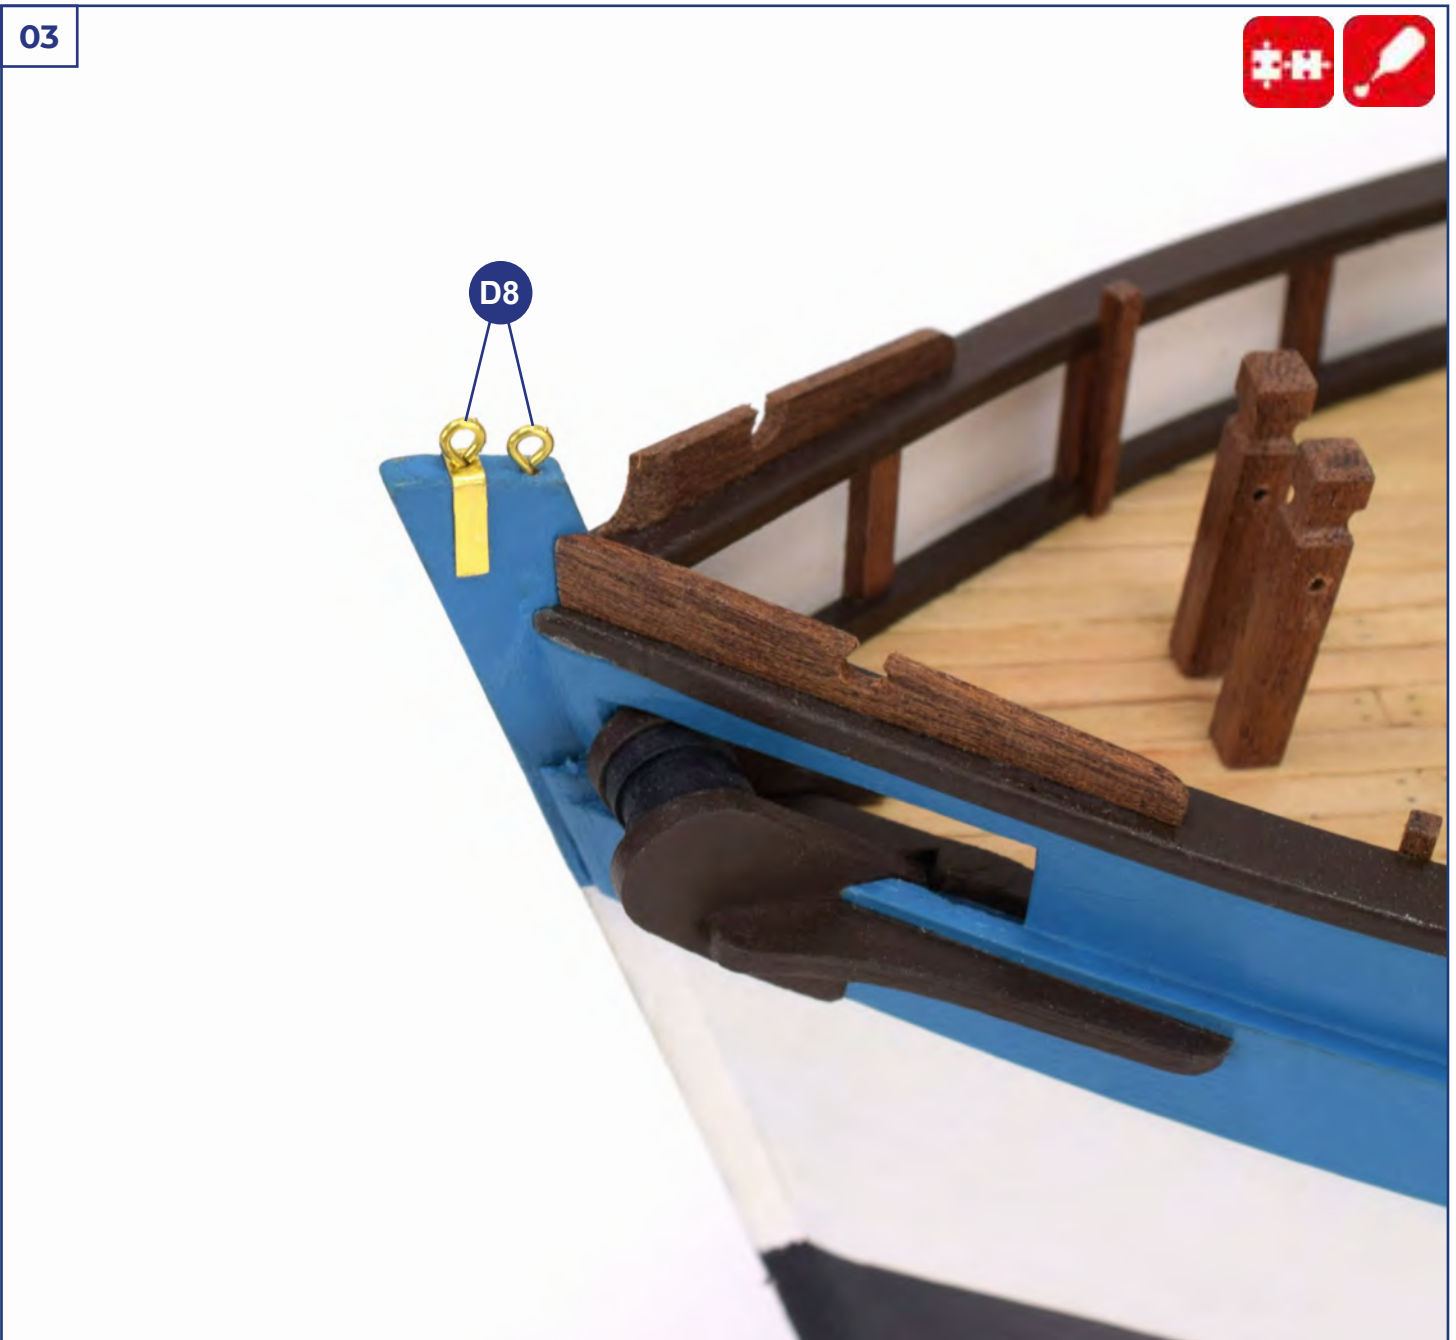
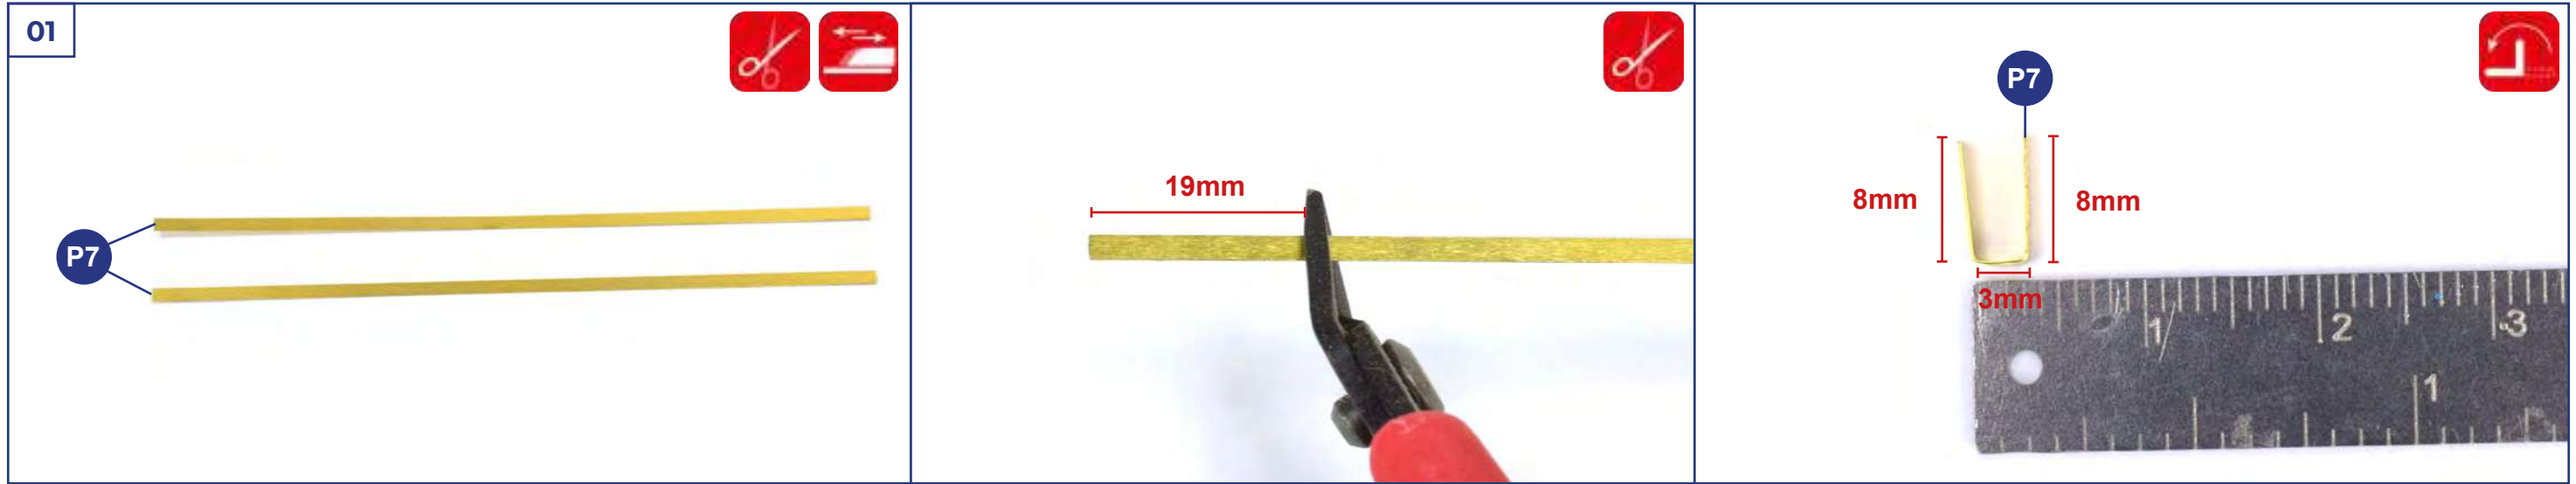


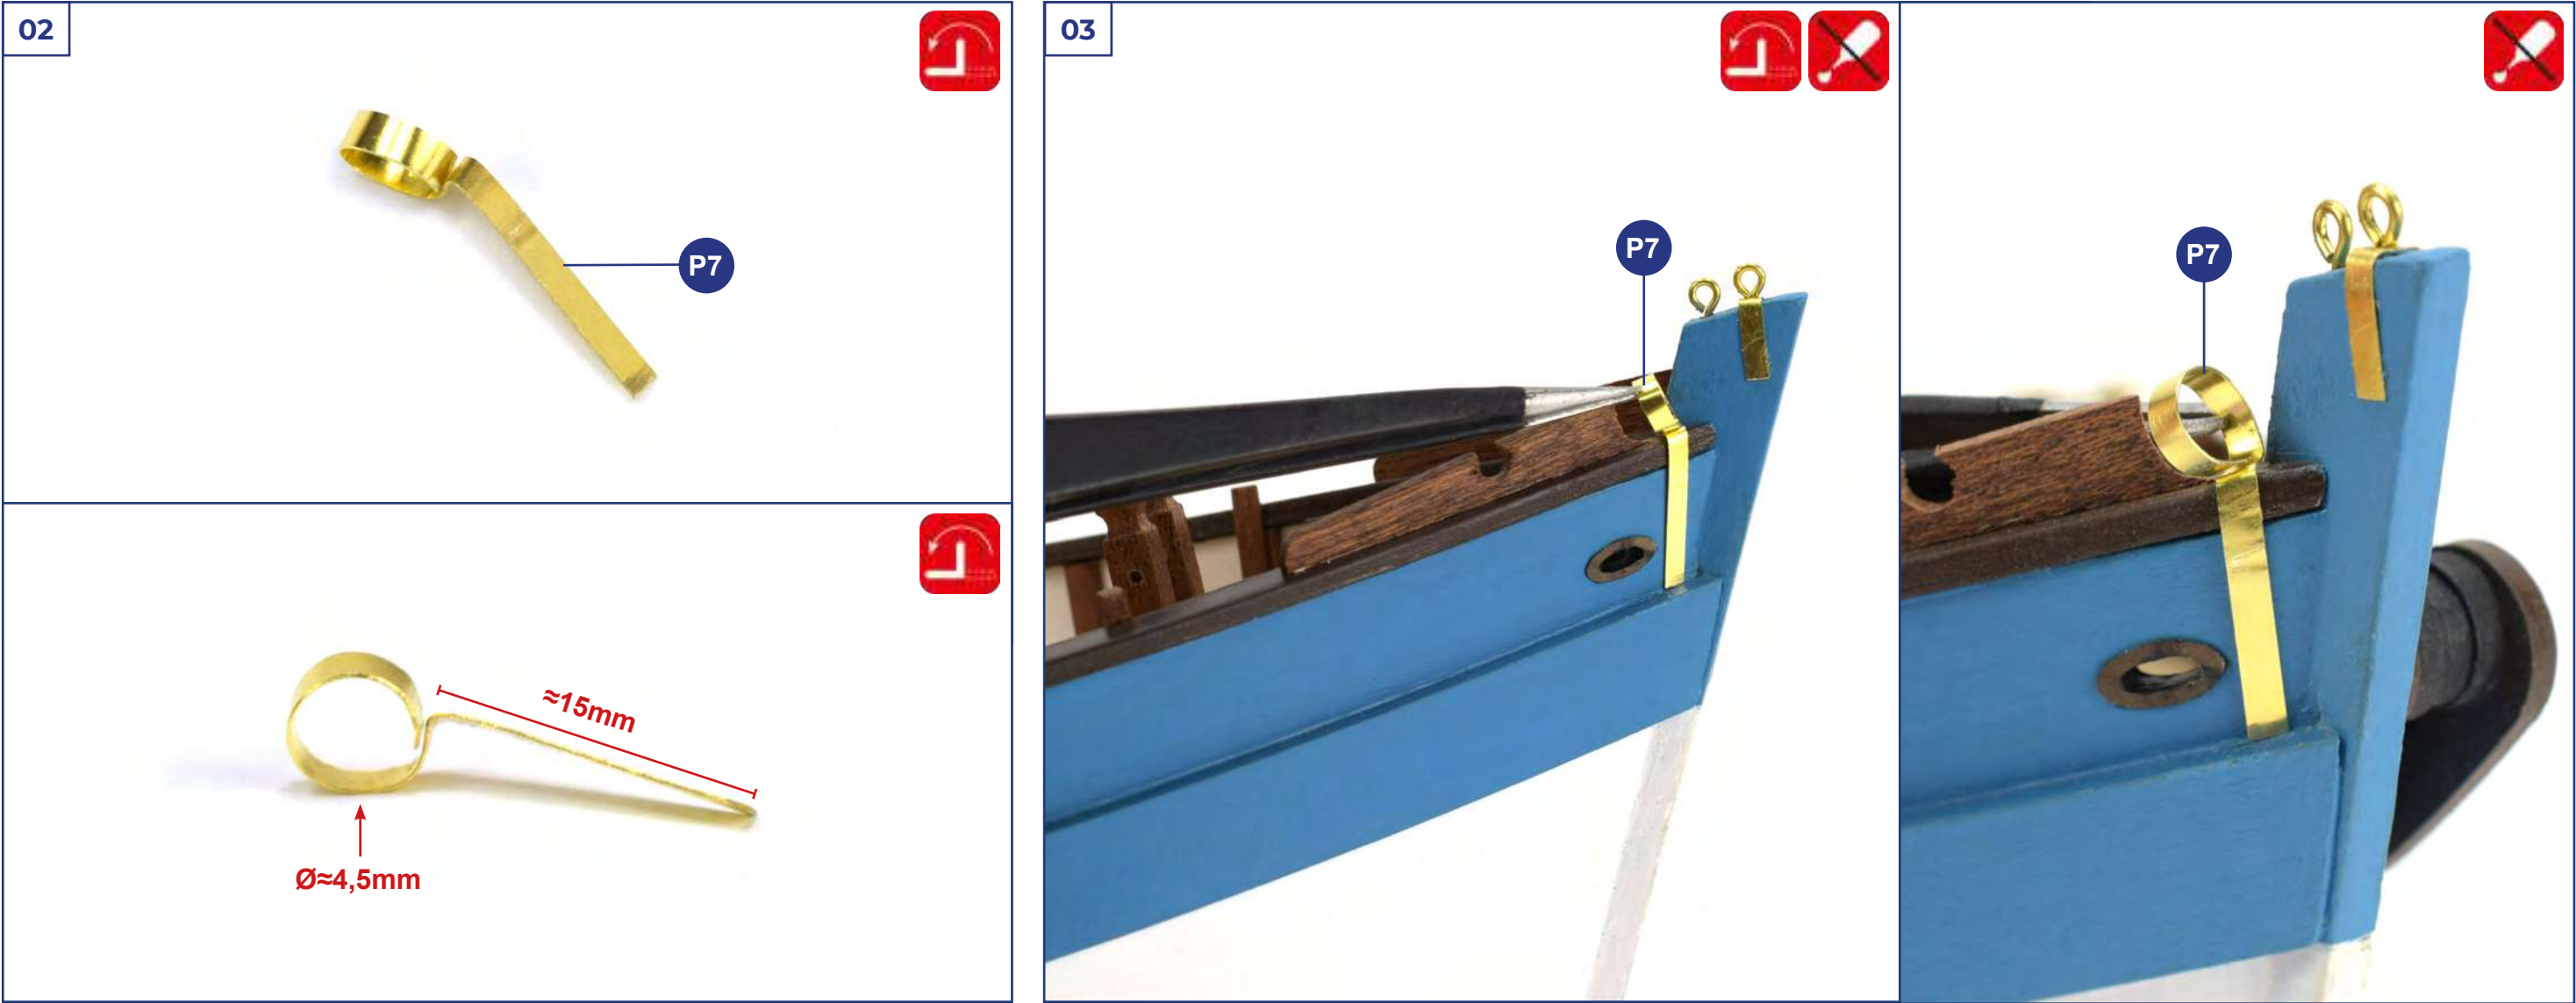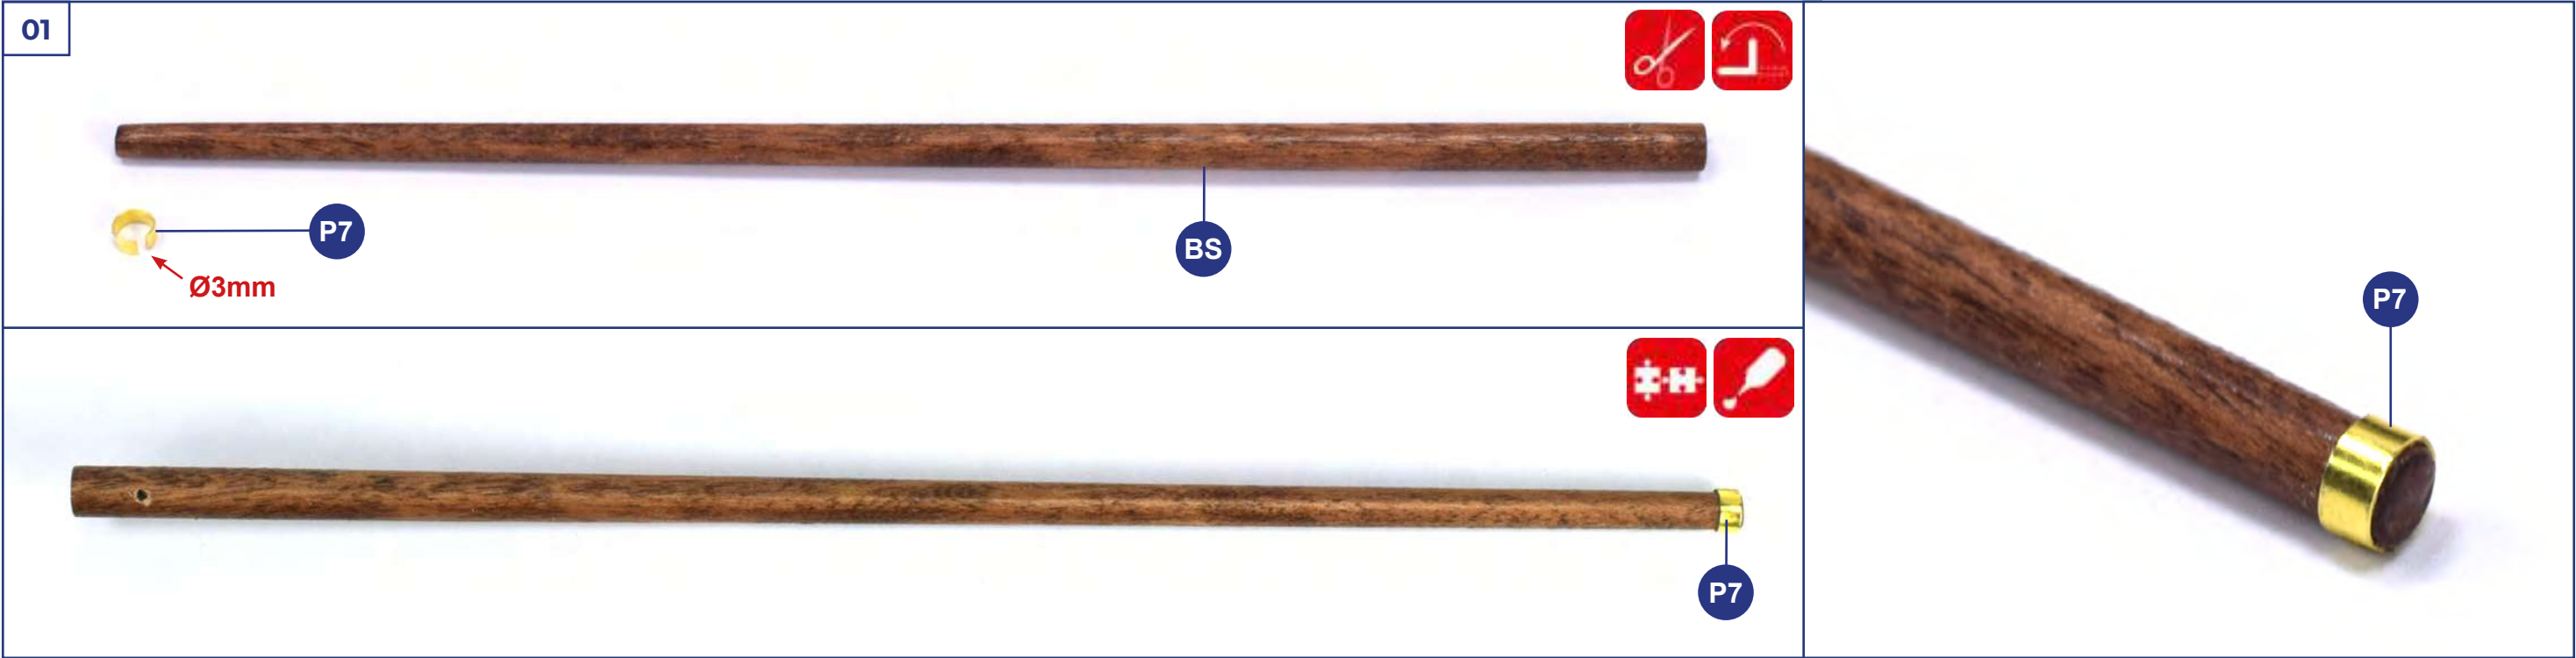

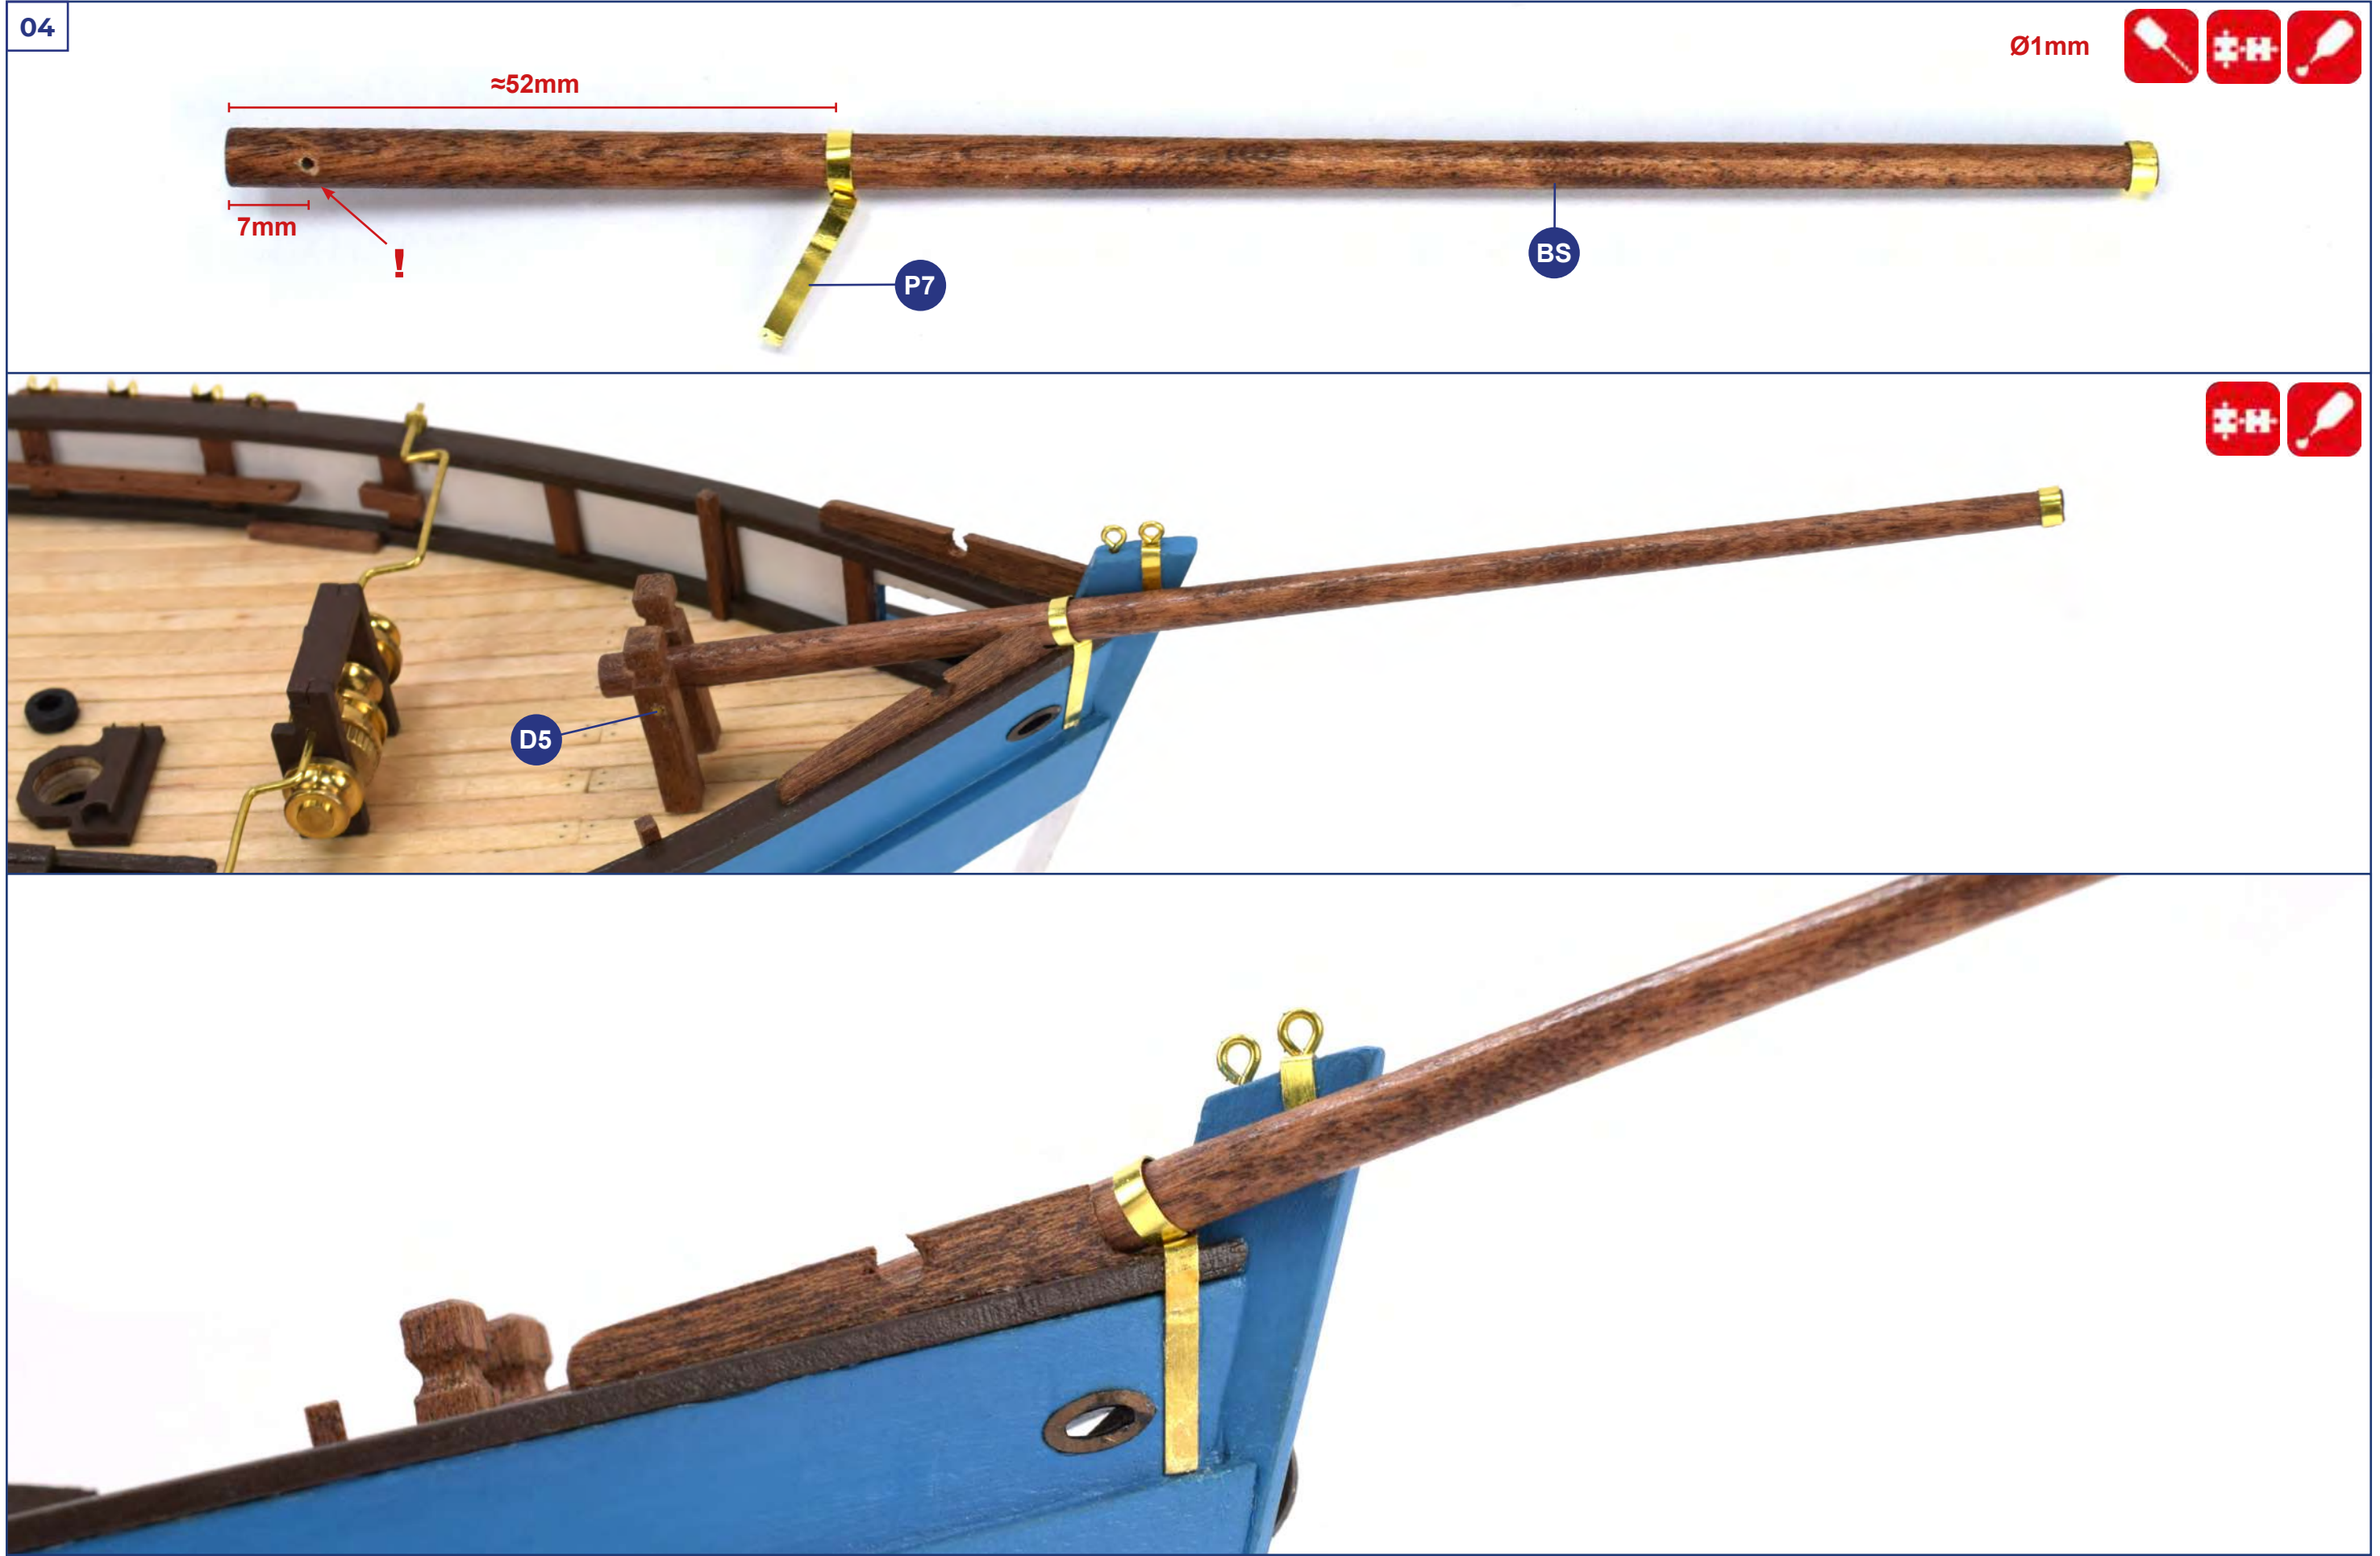

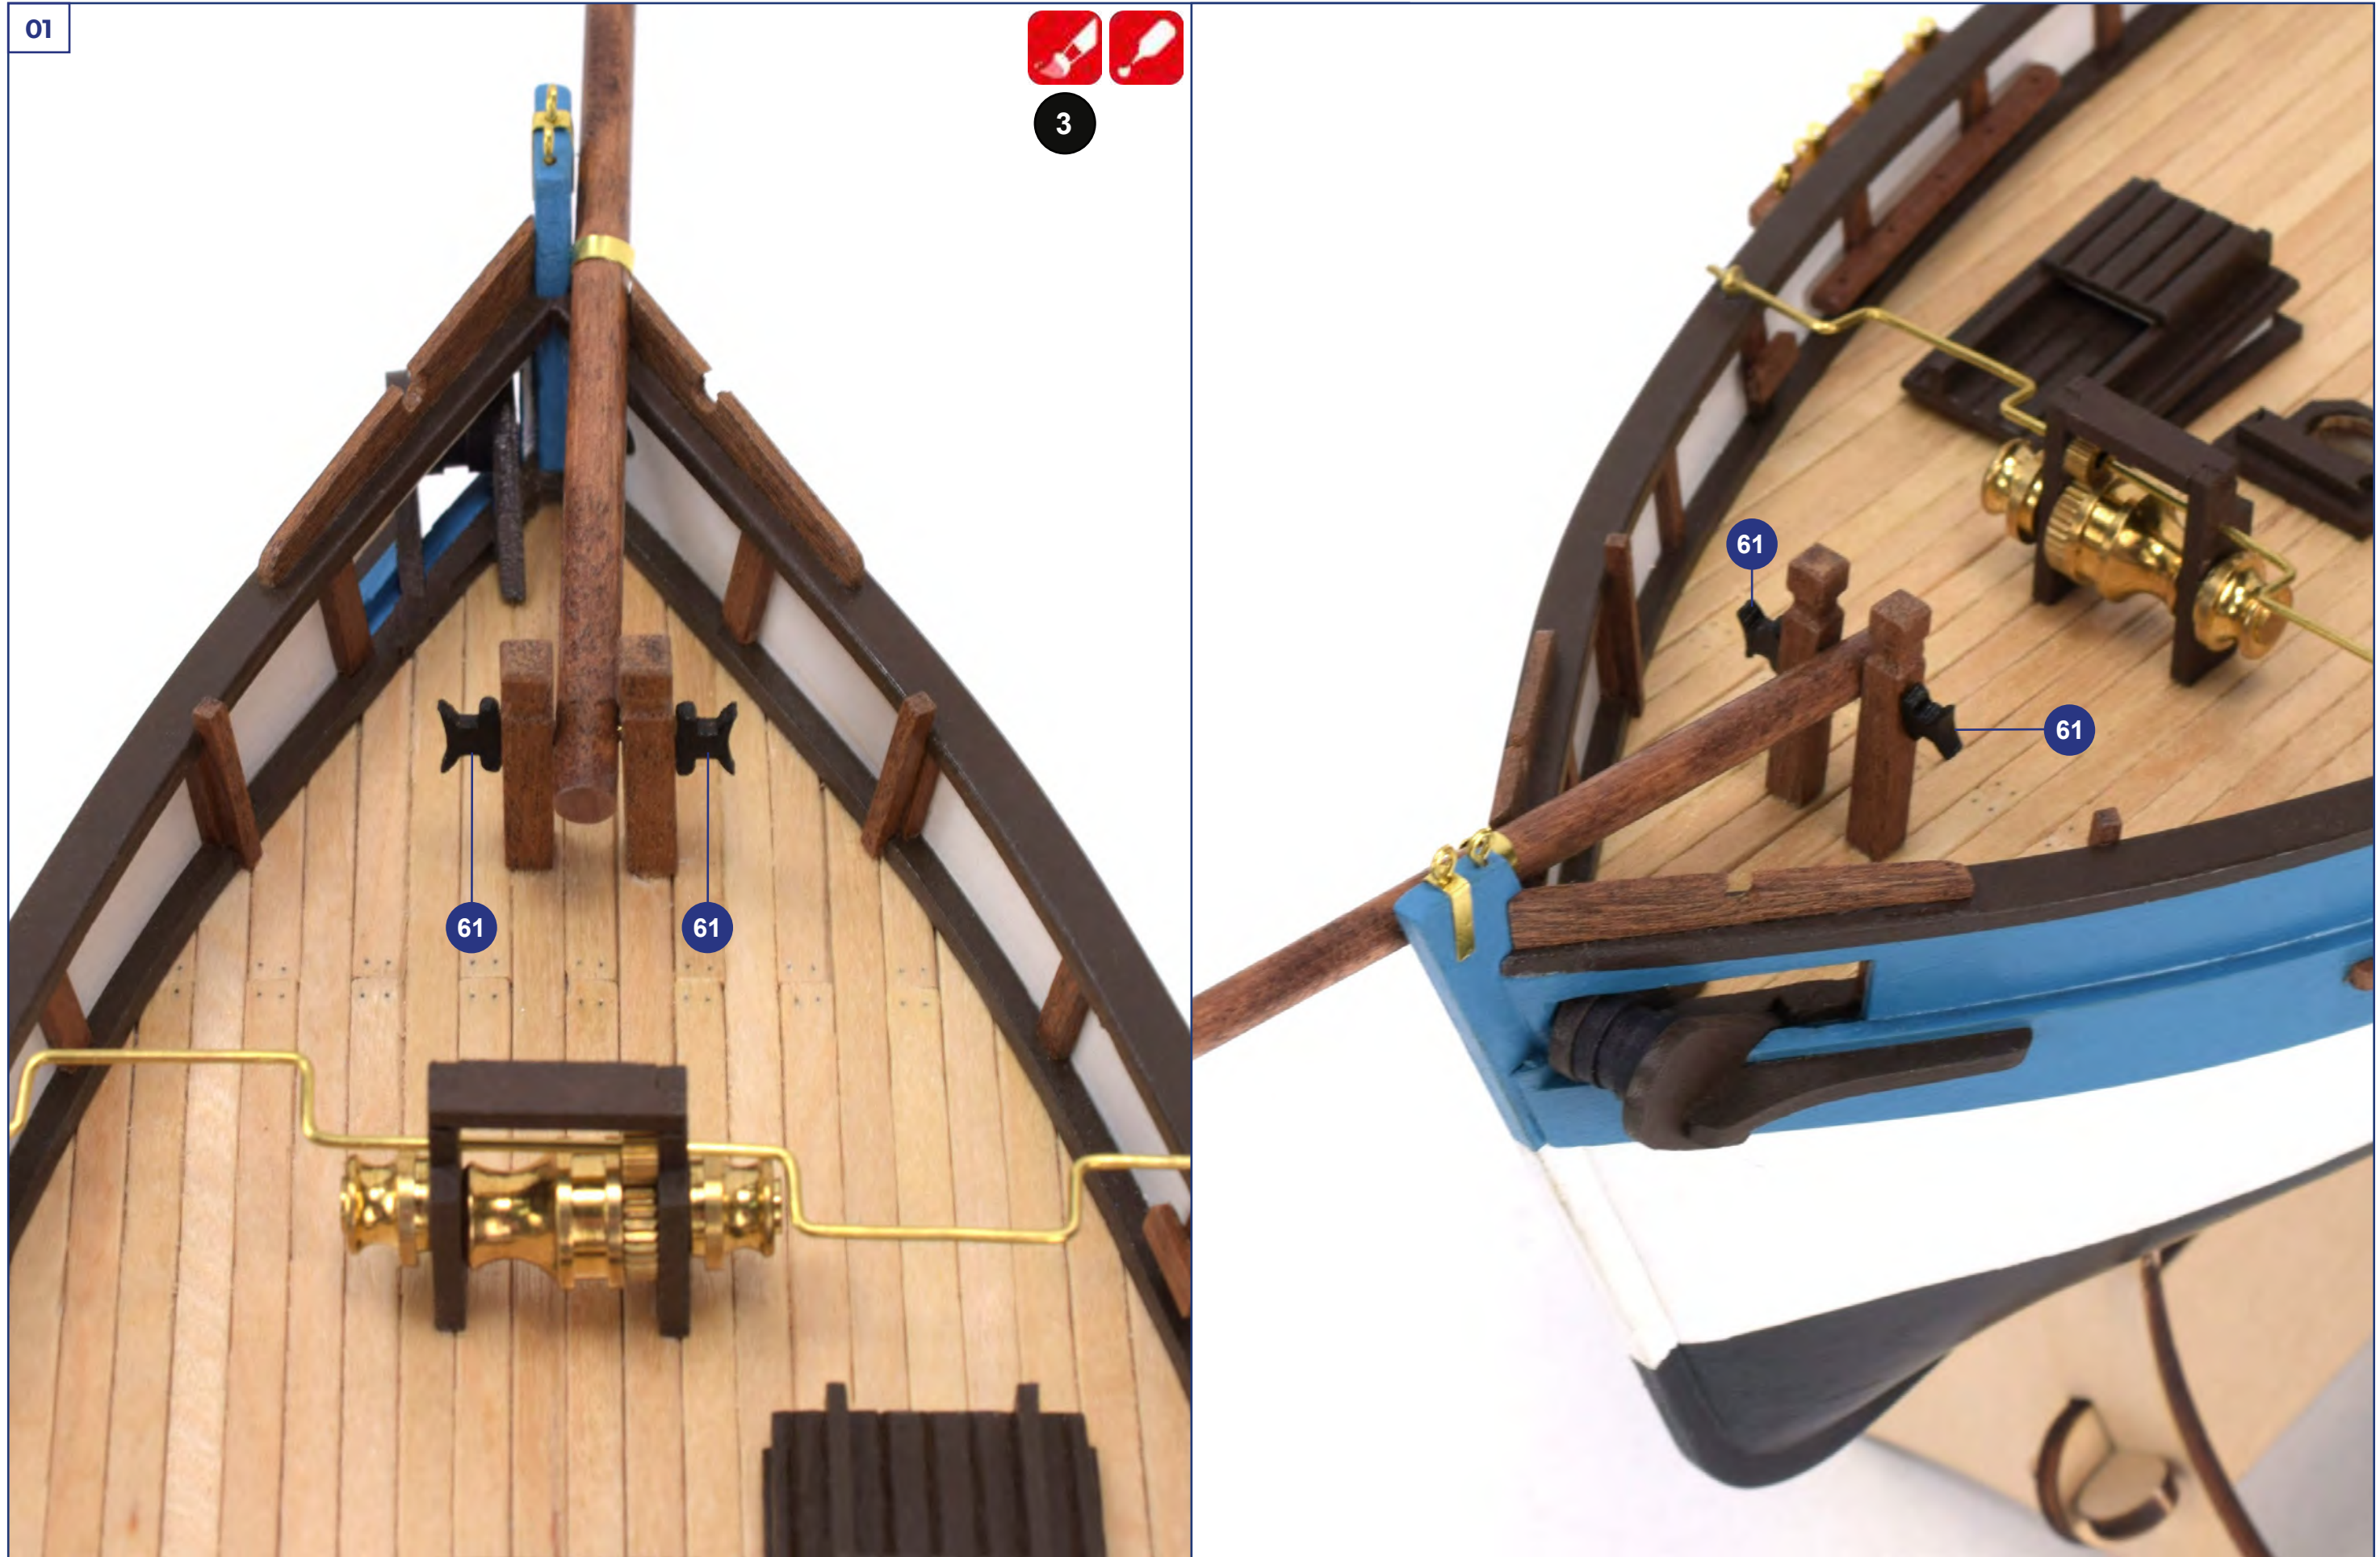

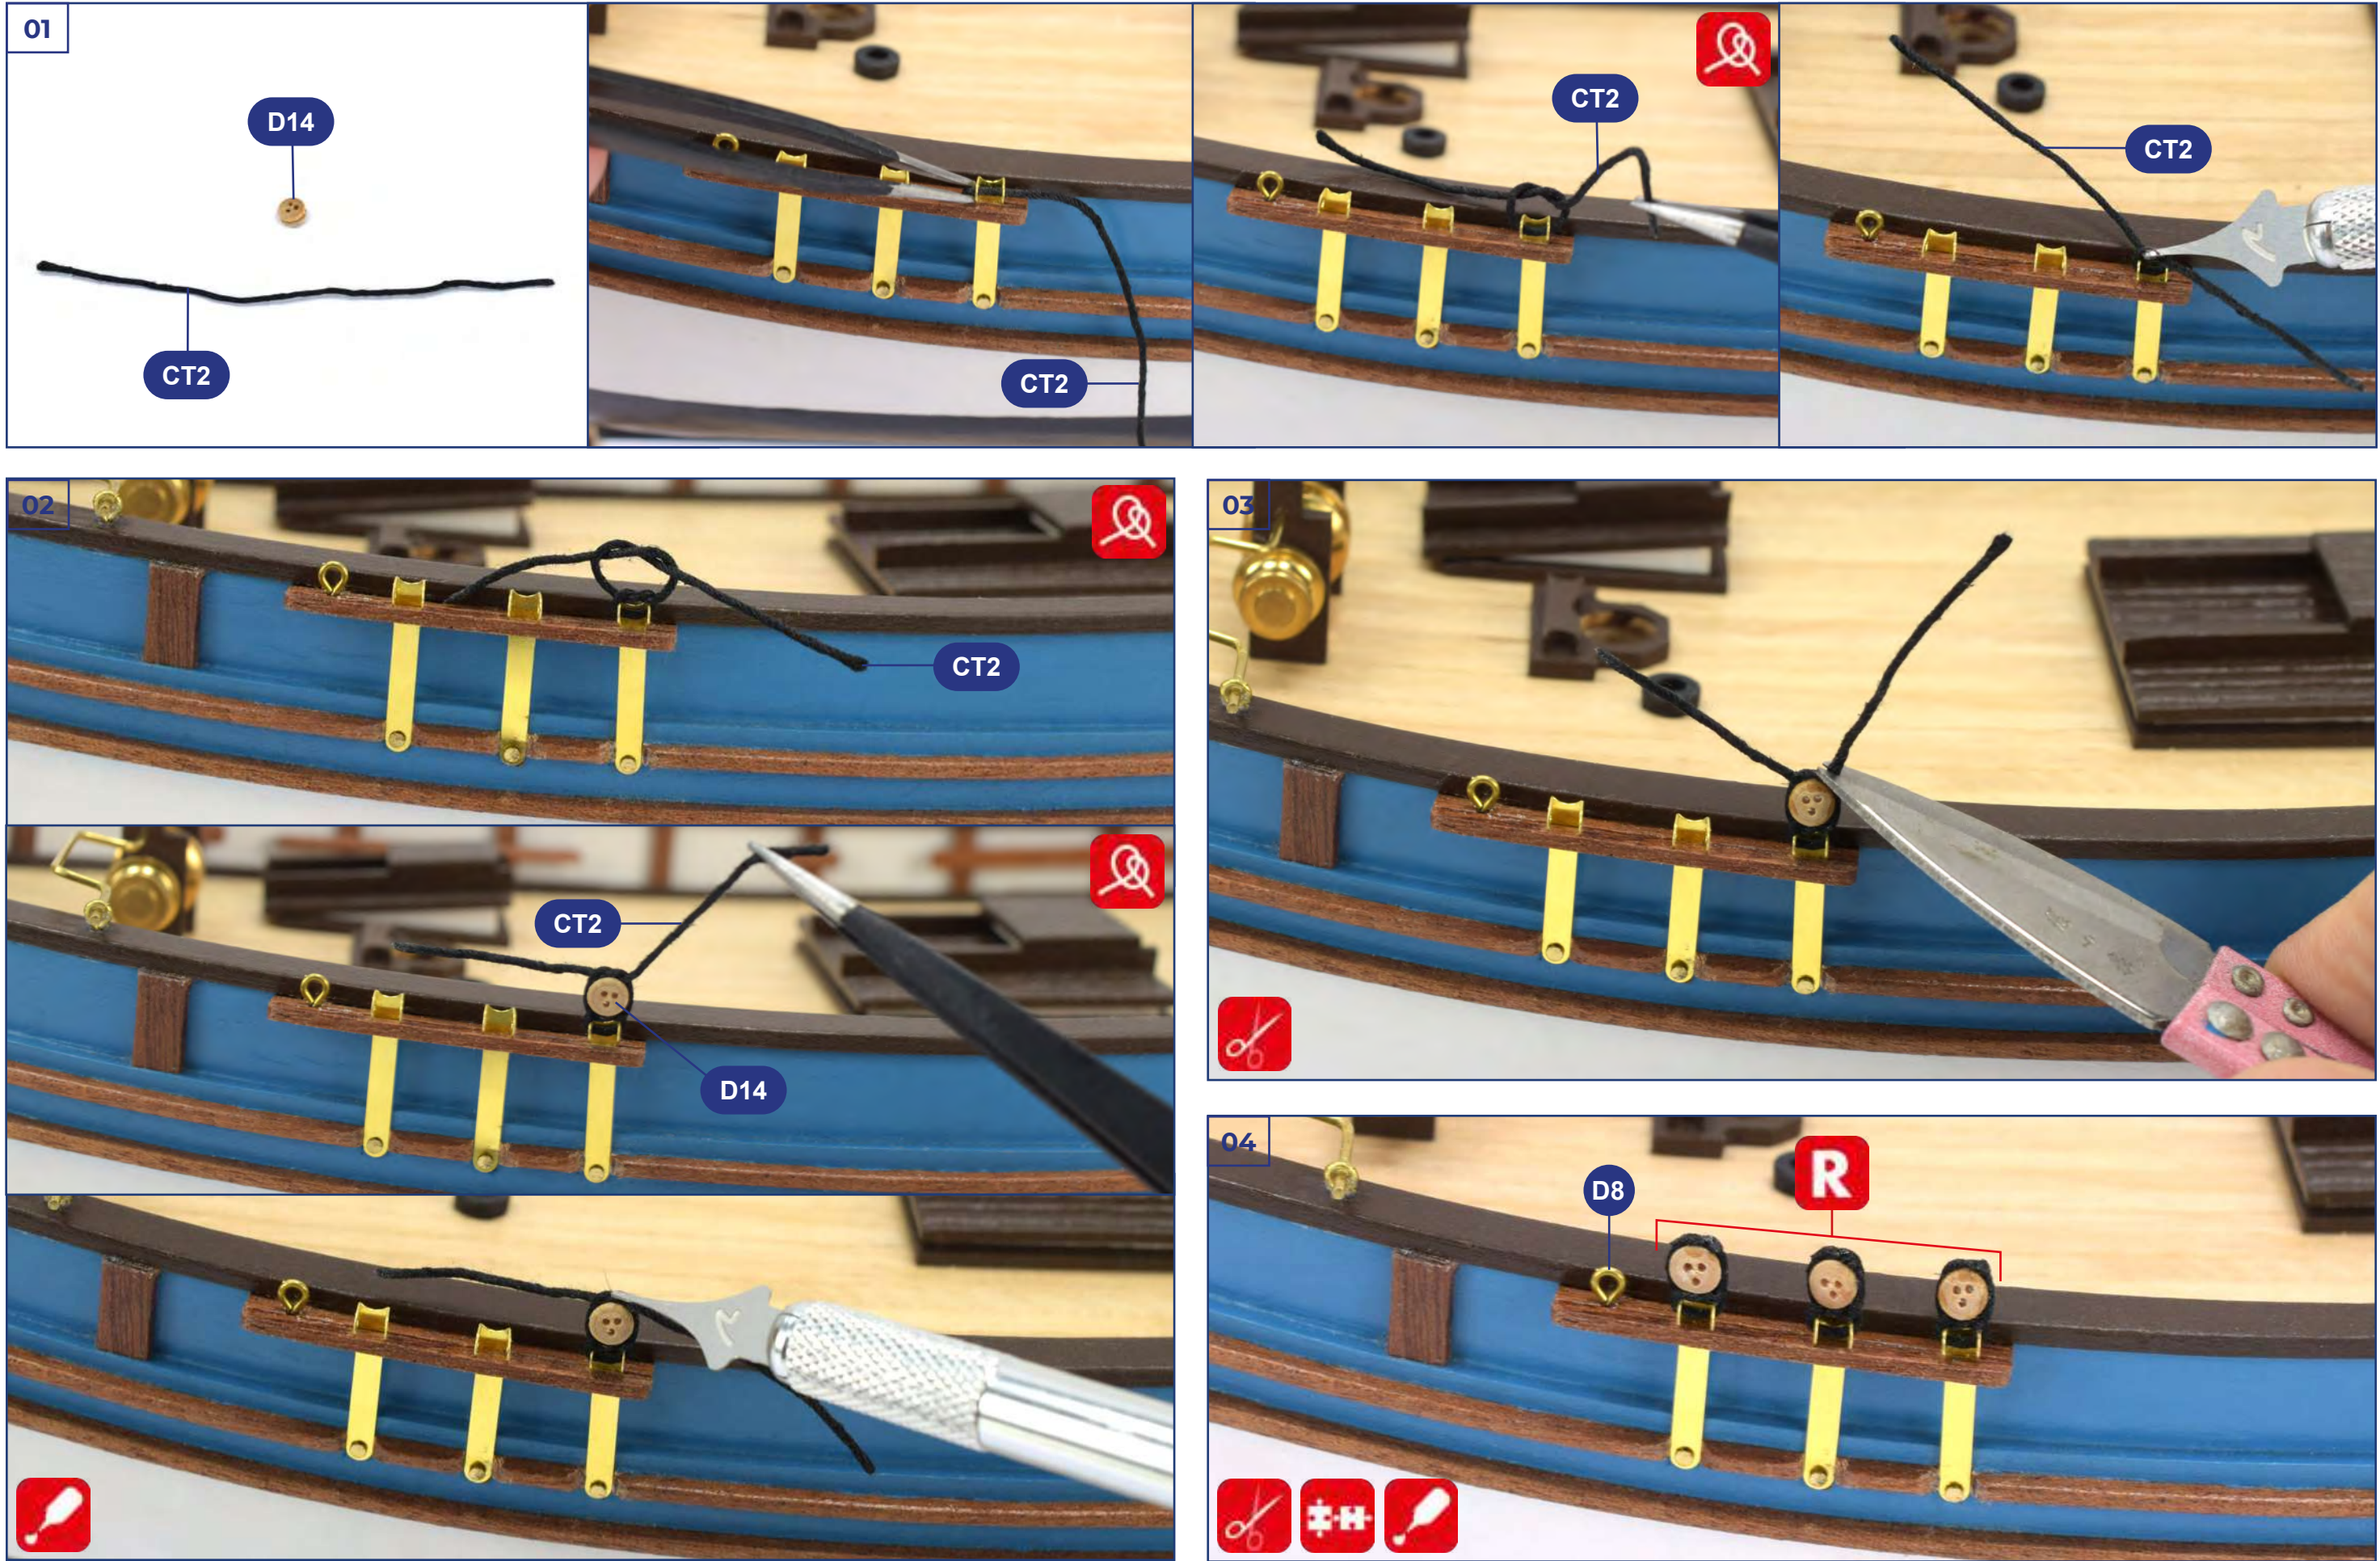

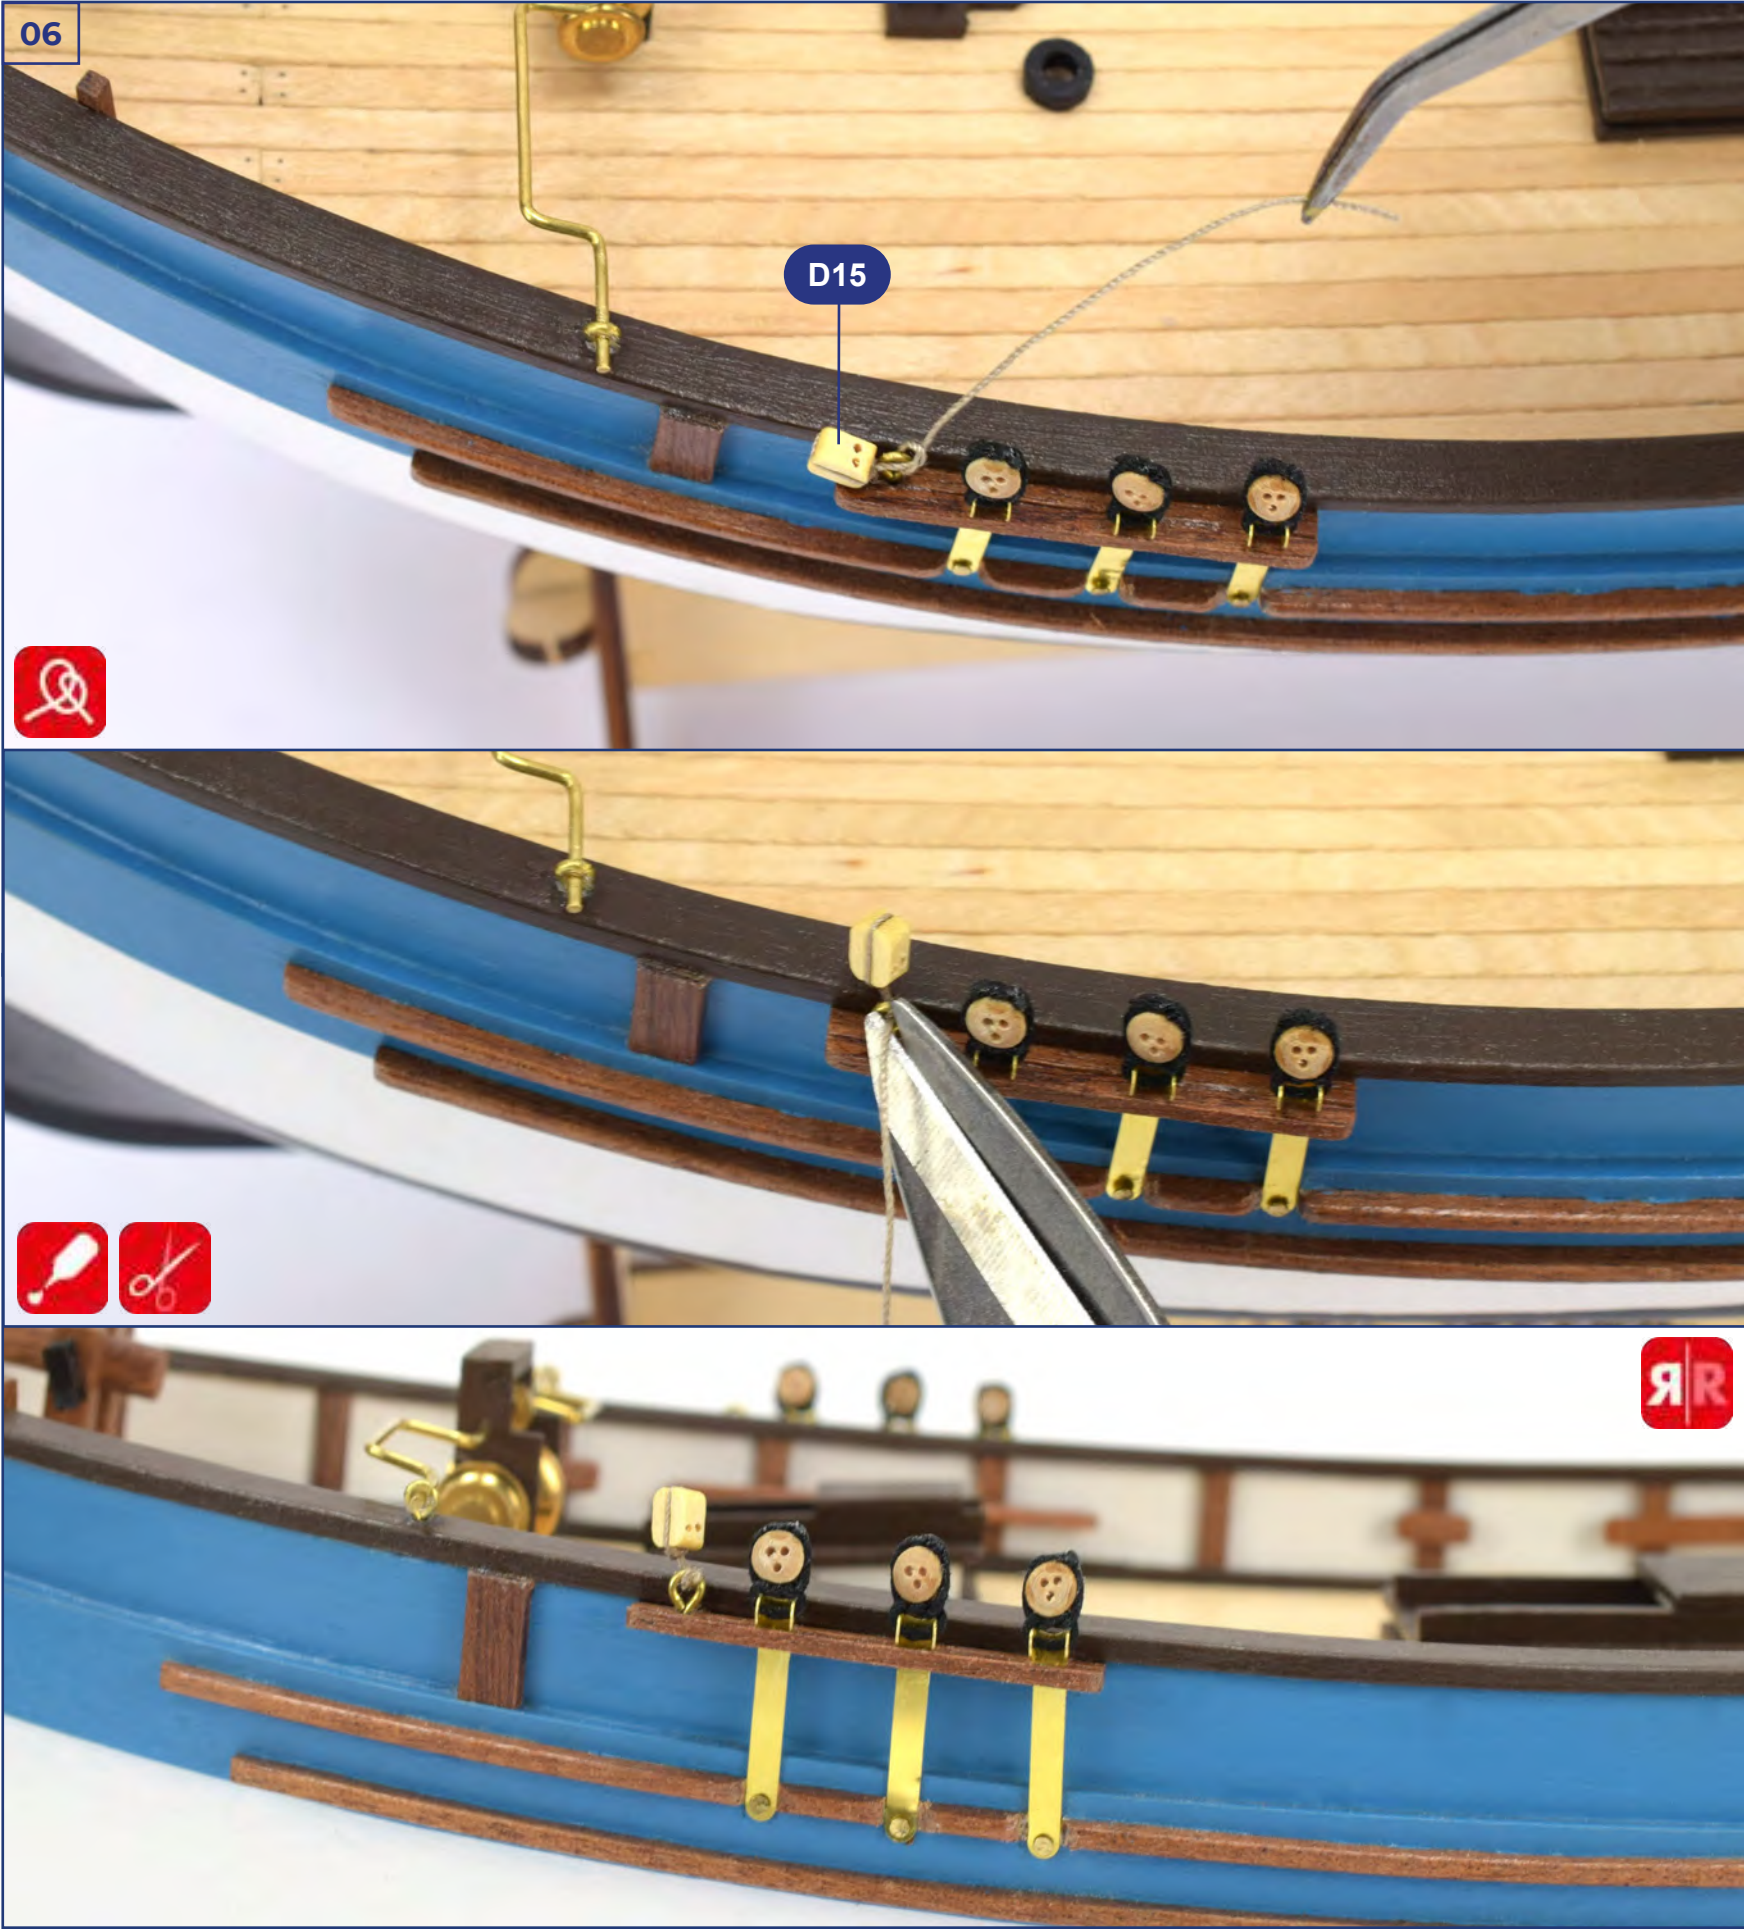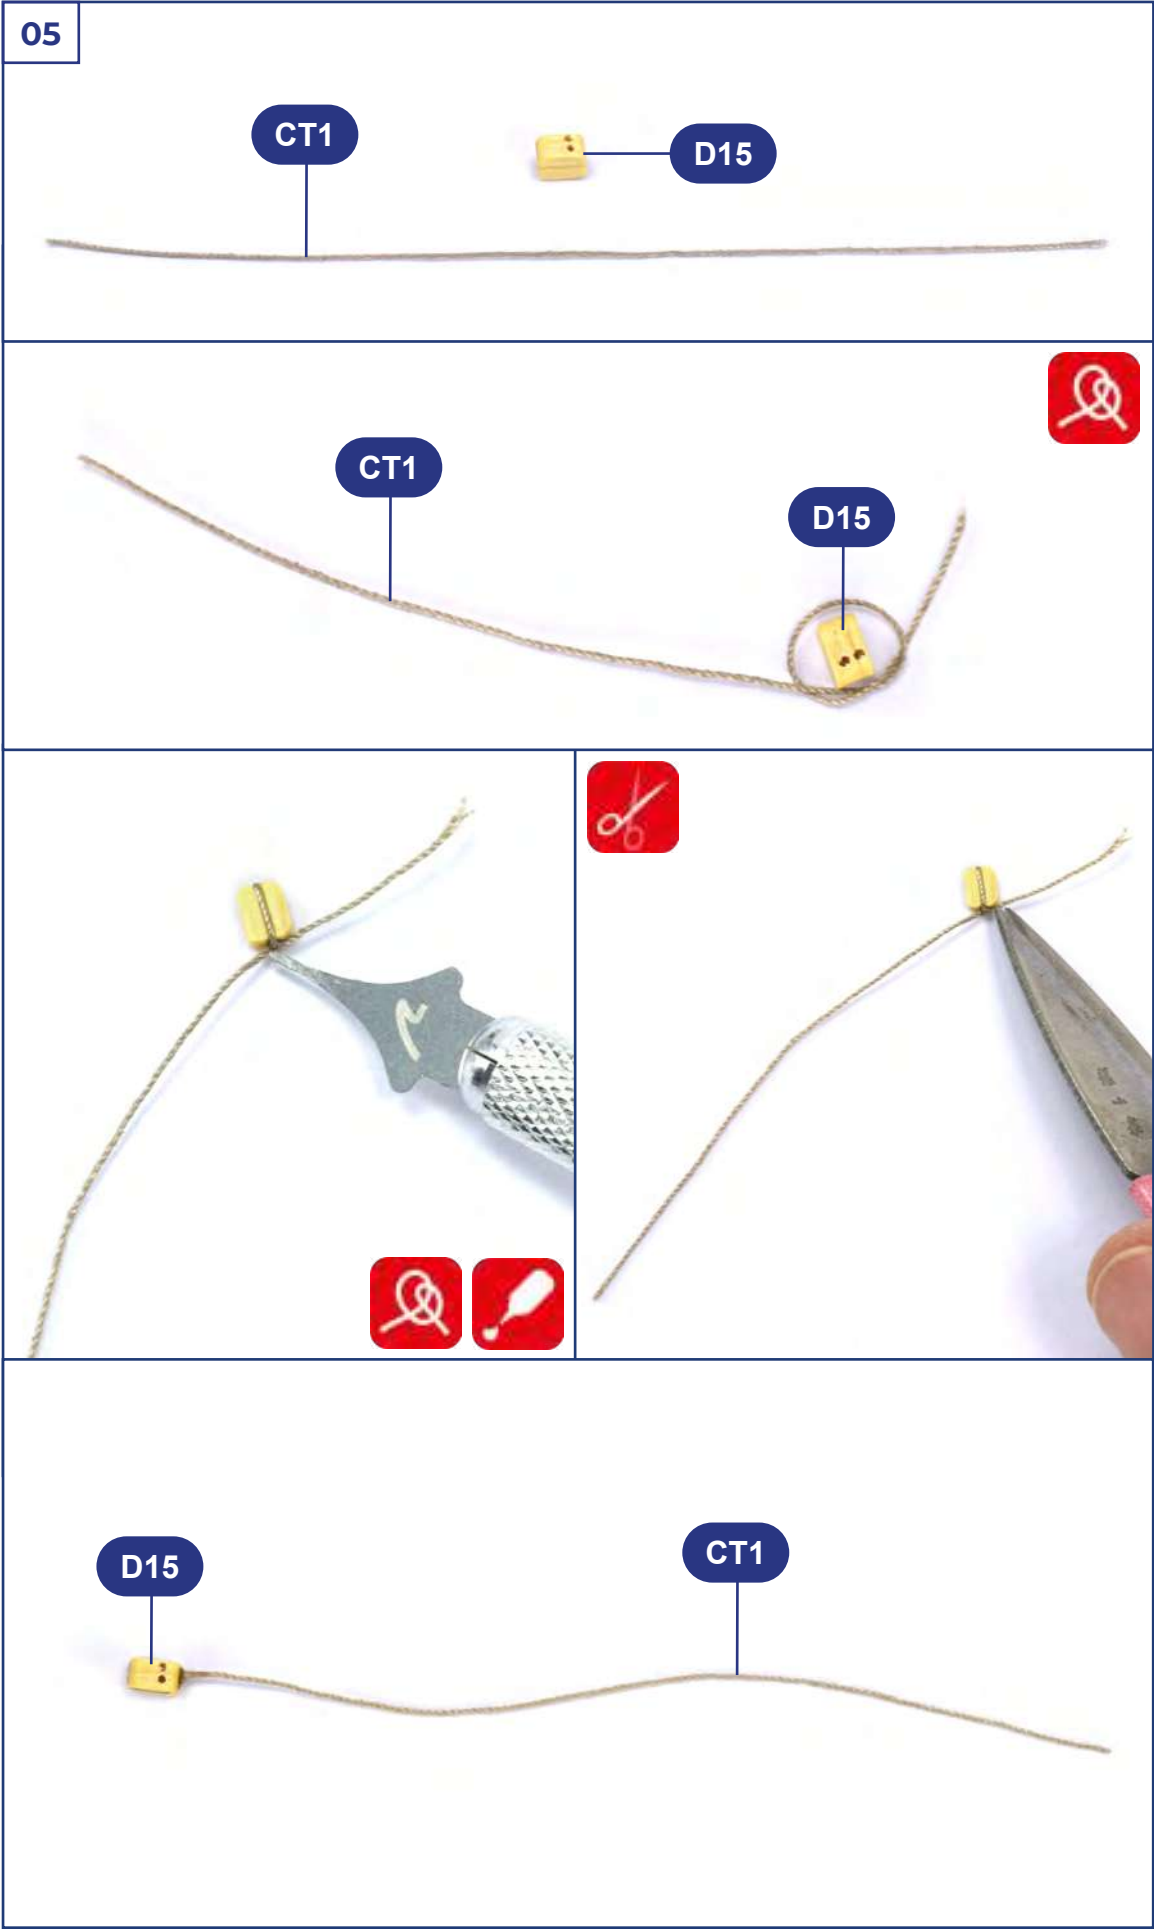

01

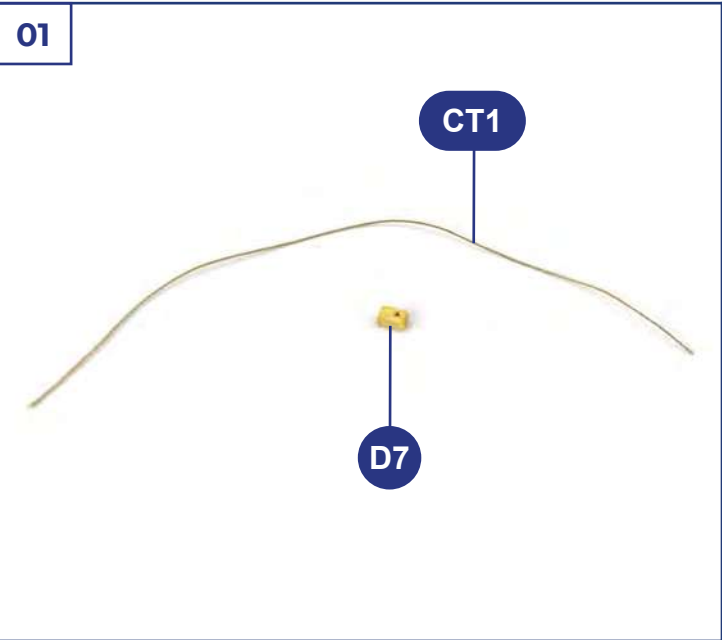


Diagram showing a curved wire with a small yellow component labeled **CT1** and a small blue component labeled **D7**.





Diagram showing a curved wire with a small yellow component labeled **D7**.





Diagram showing a curved wire with a small yellow component labeled **D7**.





Diagram showing a curved wire with a small yellow component labeled **D7**.





Diagram showing a curved wire with a small yellow component labeled **D7**.

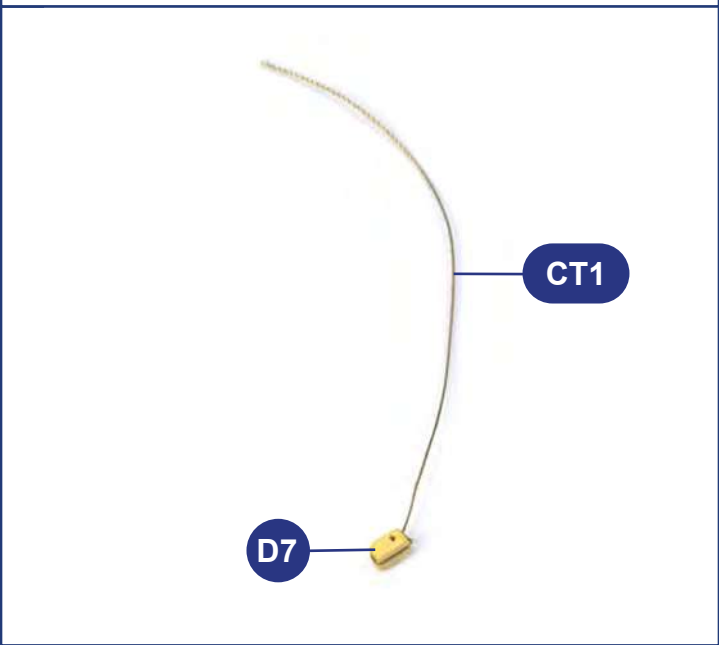


Diagram showing a curved wire with a small yellow component labeled **CT1** and a small blue component labeled **D7**.

02



Ø0,5mm







Photo showing a wooden structure with components labeled **D8 + CT1 + D7**.



R





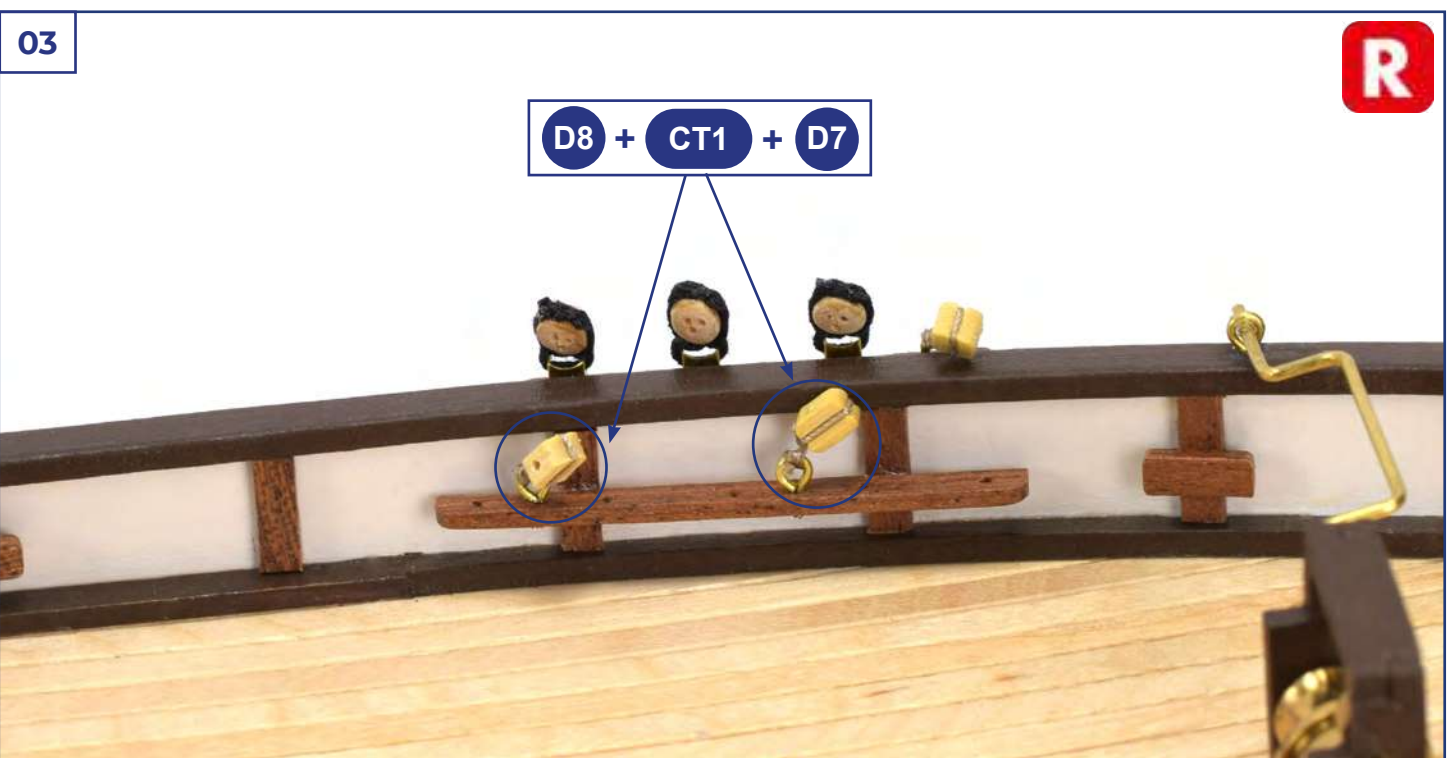


Photo showing a wooden structure with components labeled **D8 + CT1 + D7**.

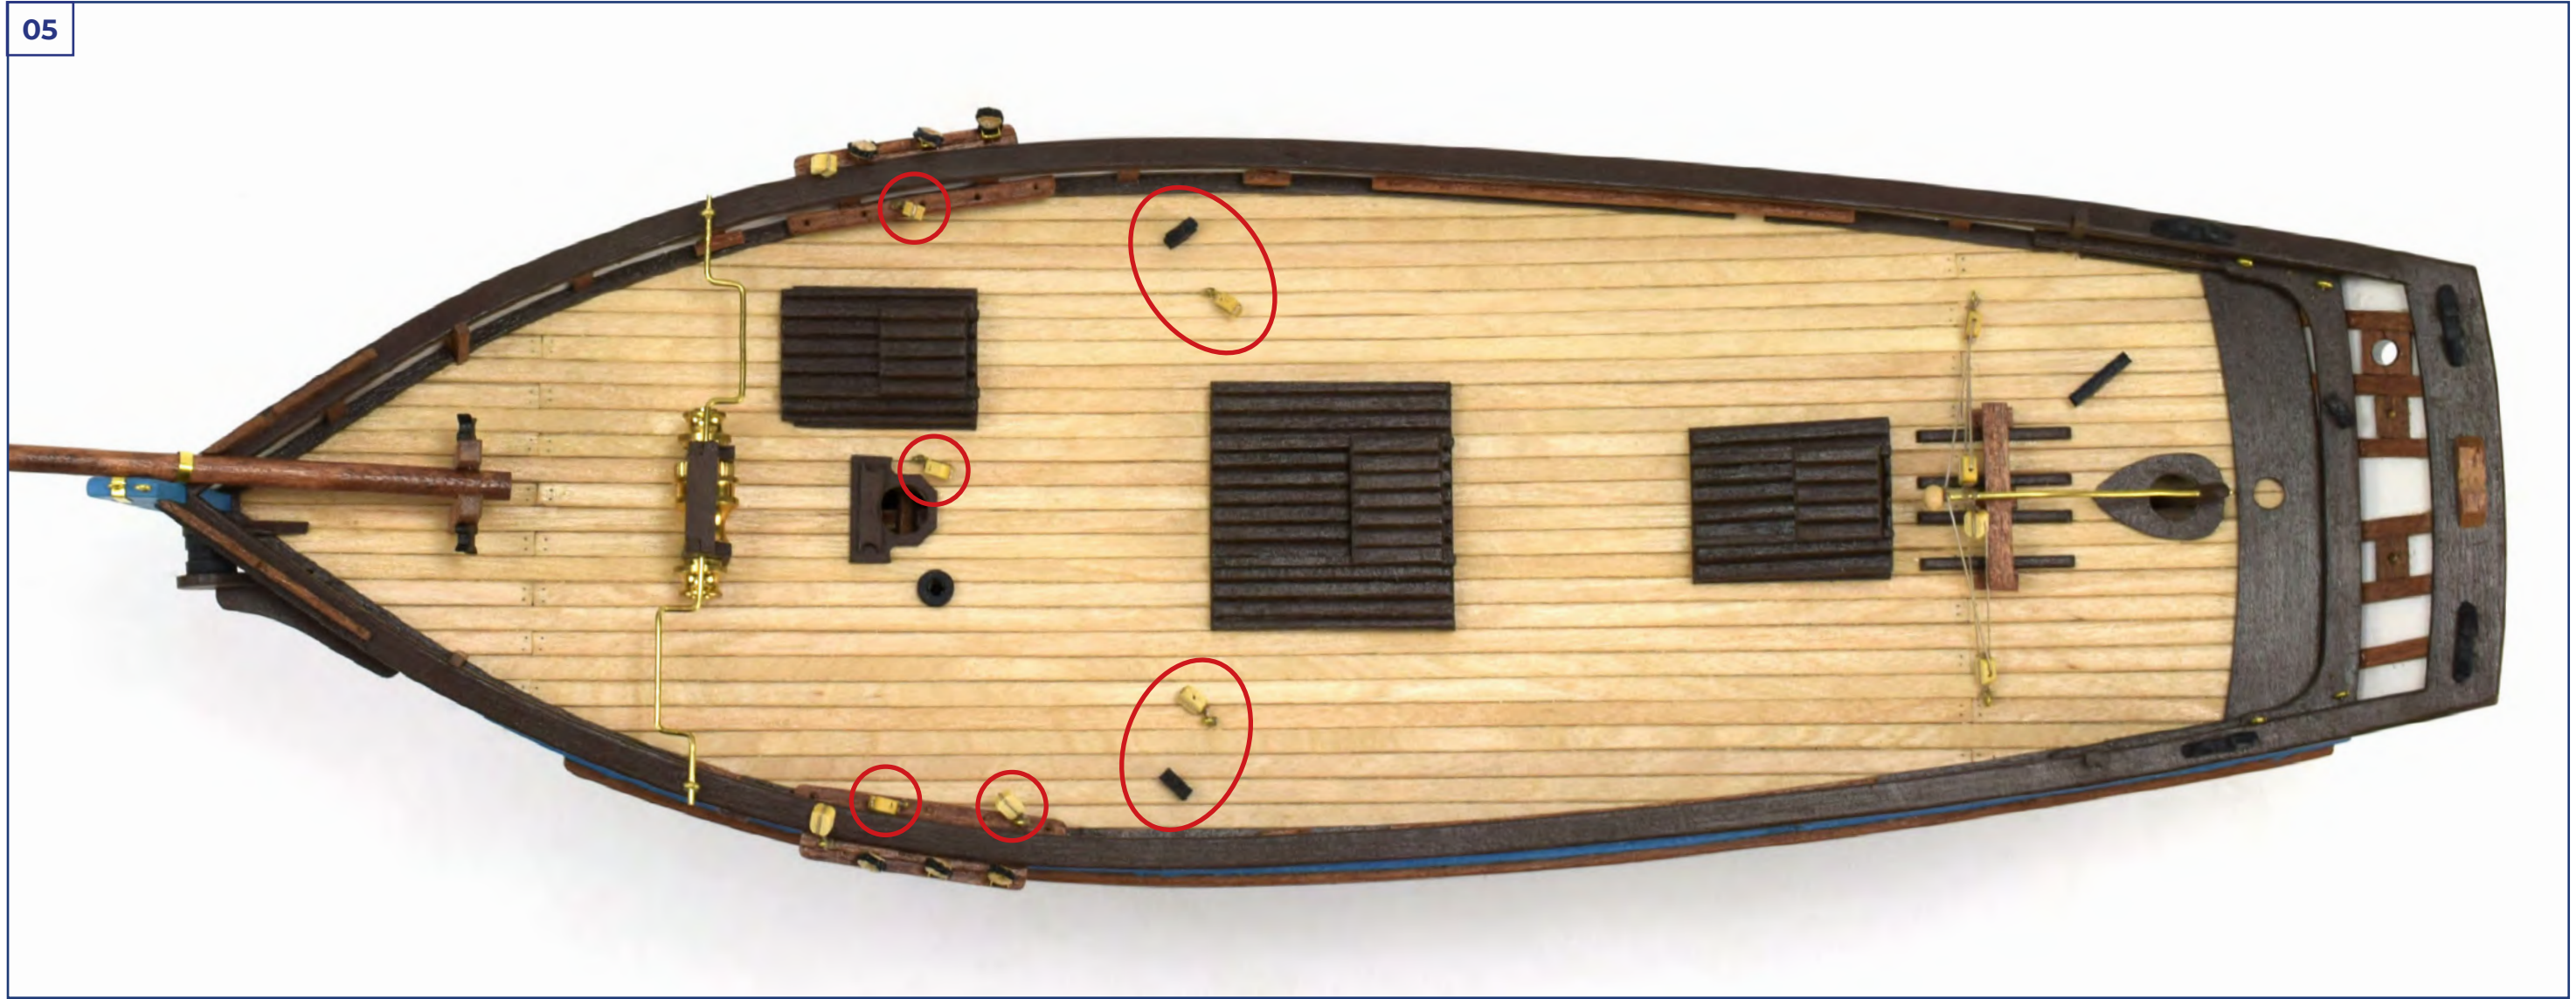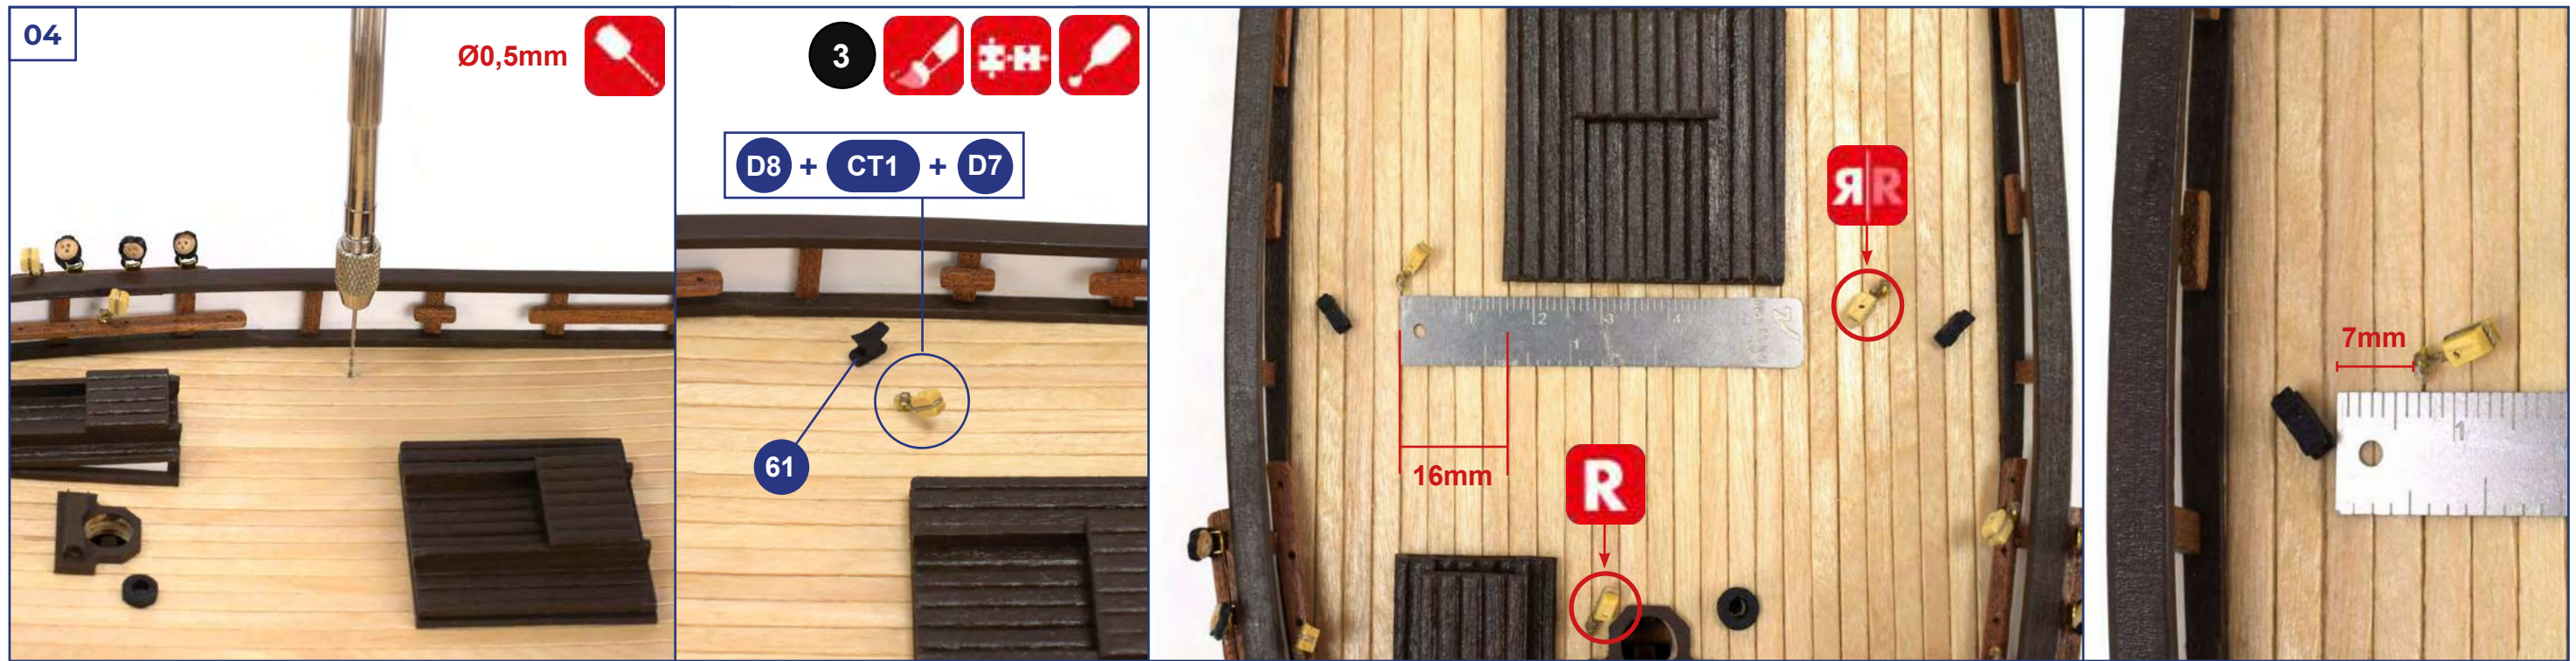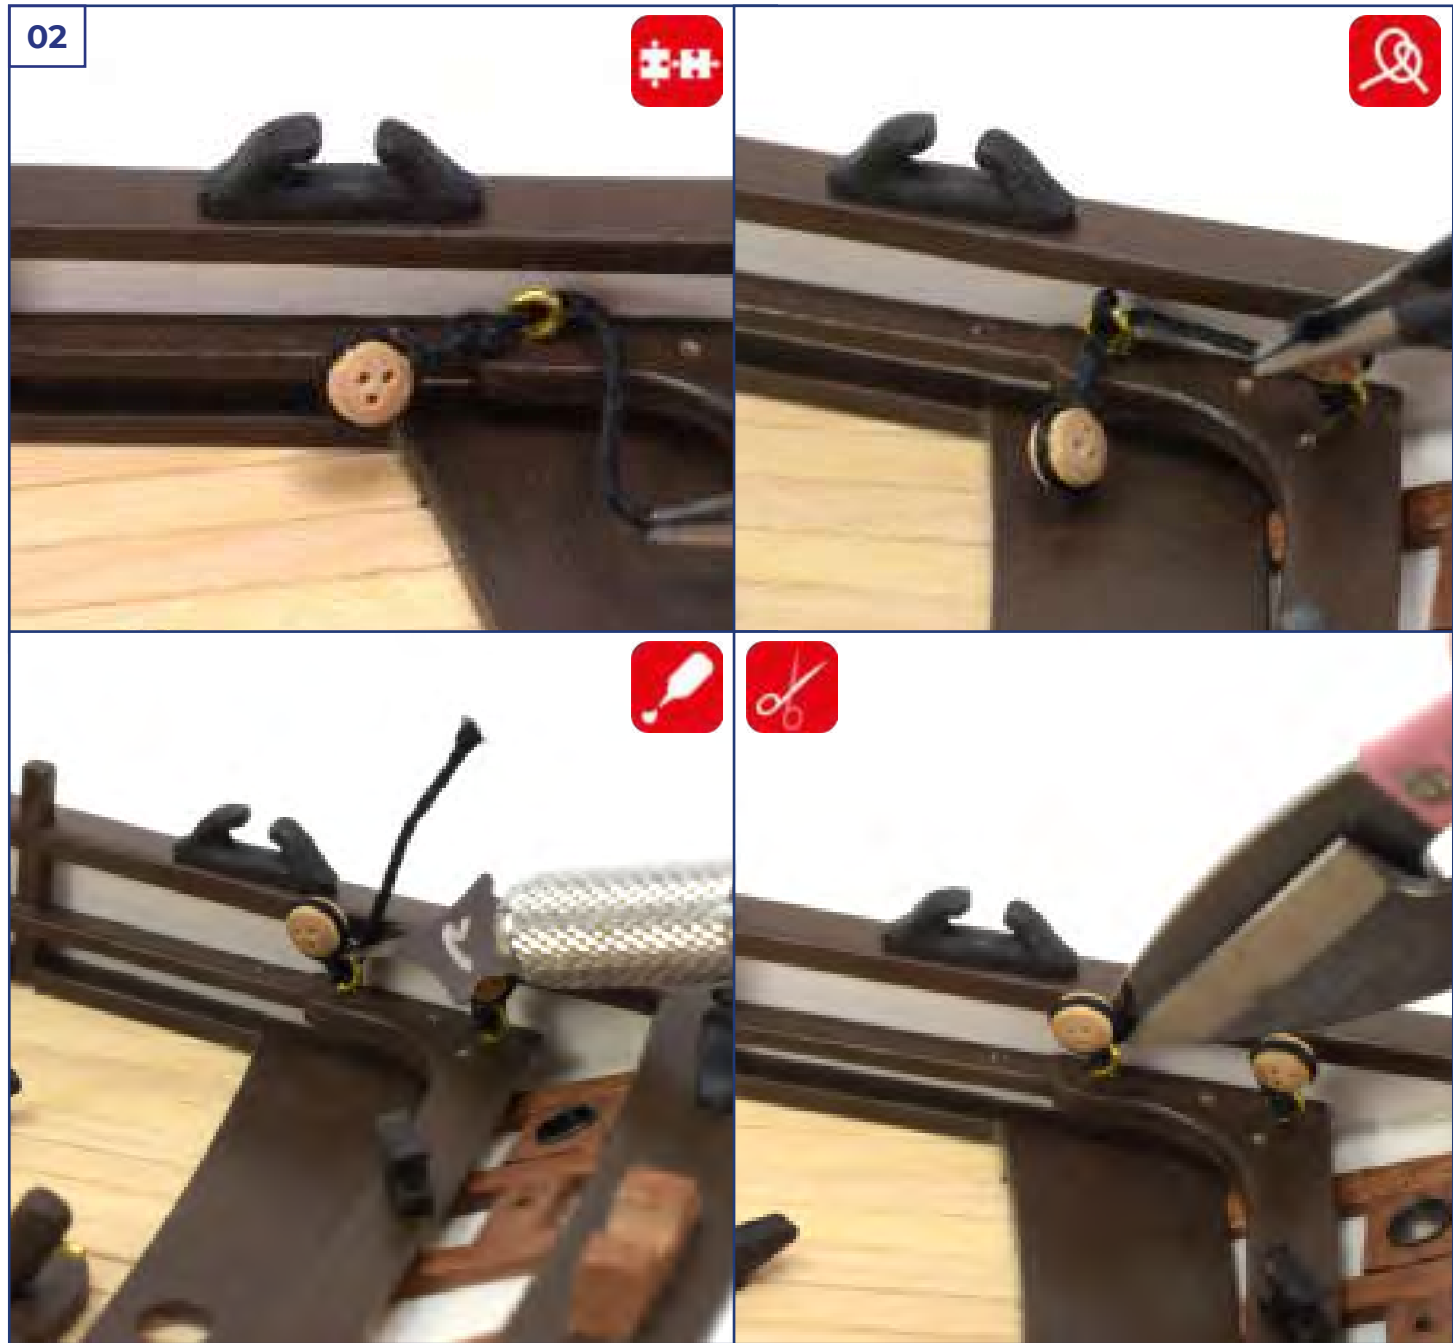

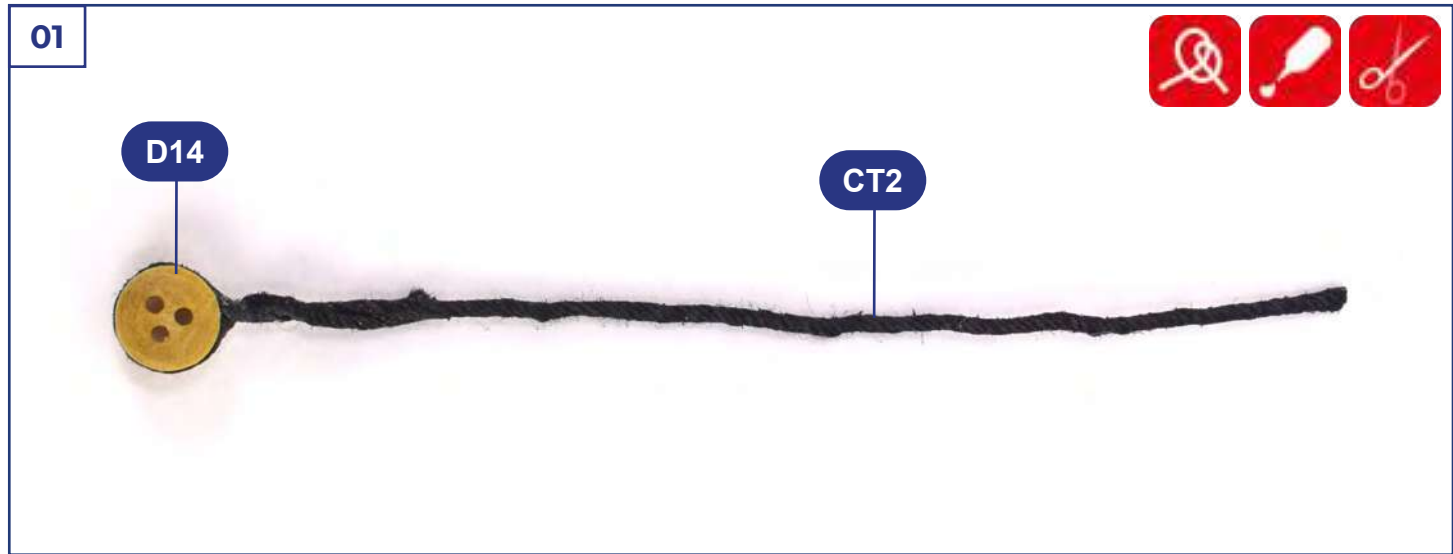

01

WS7

18mm

8mm

18mm

11mm

WS4

WS4

WS7

2mm

5mm

5mm

90

Scissors

Glue

Heat Gun

90

Scissors

Glue

Heat Gun

WS7

WS7

WS7

02

64mm

WS4

WS4

90

Scissors

Glue

R

Heat Gun

WS4

03


R

x3

Heat Gun





Heat Gun





04

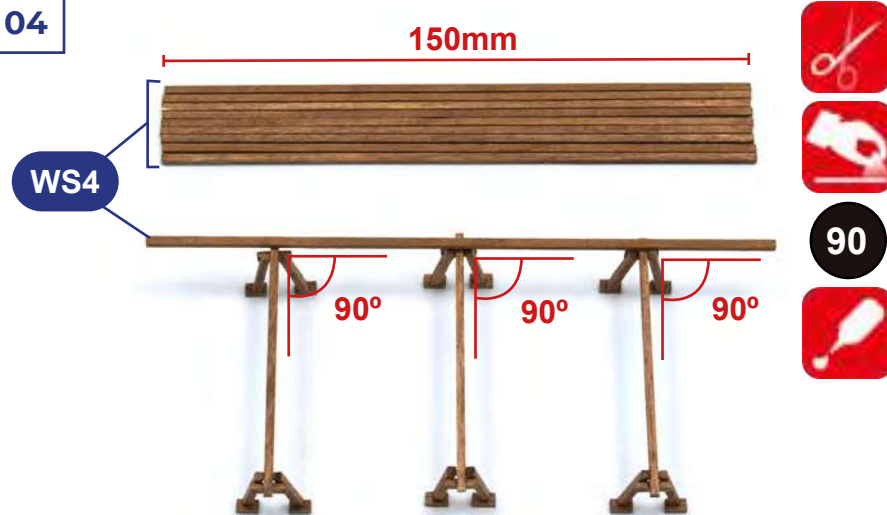

05



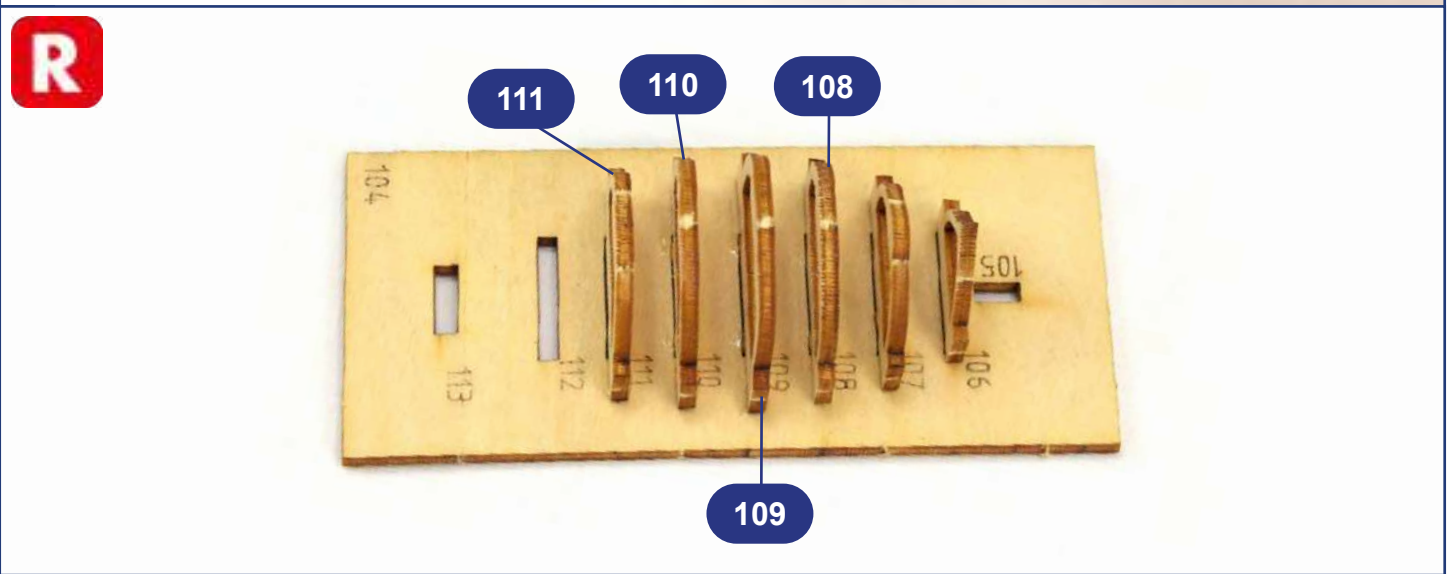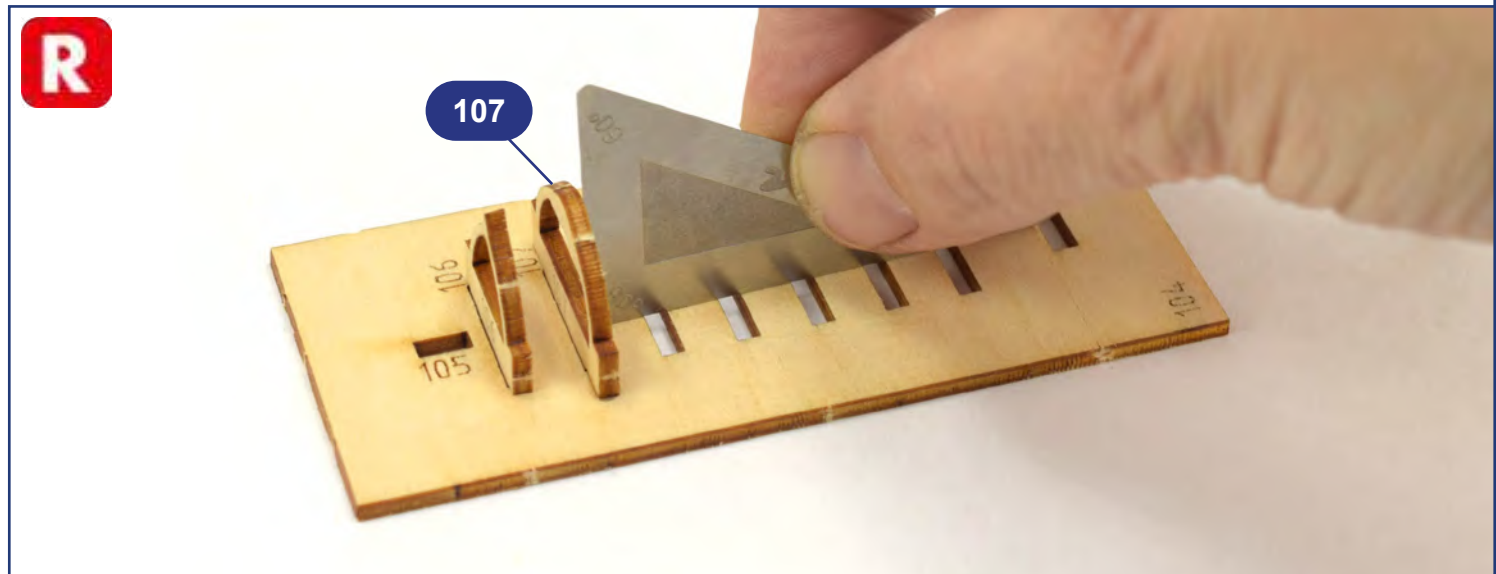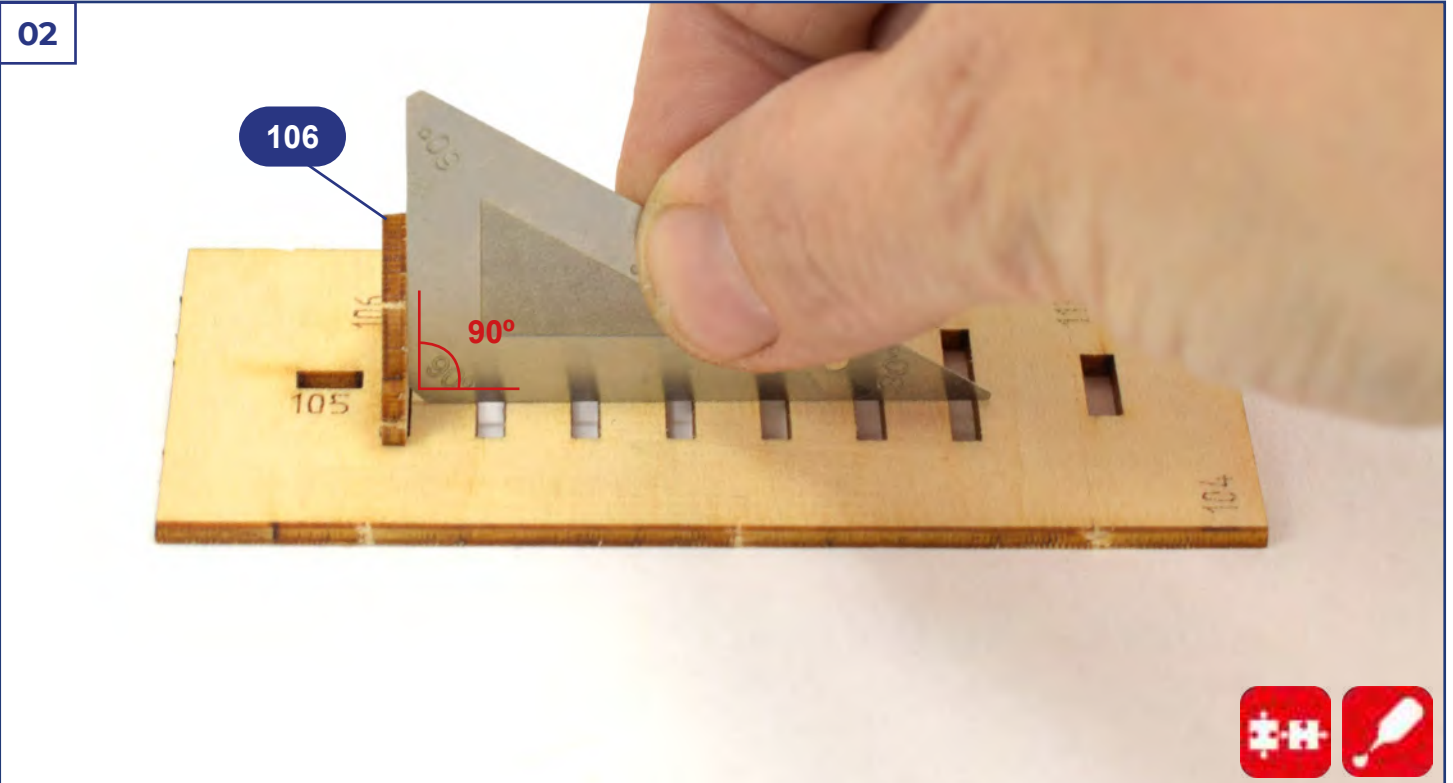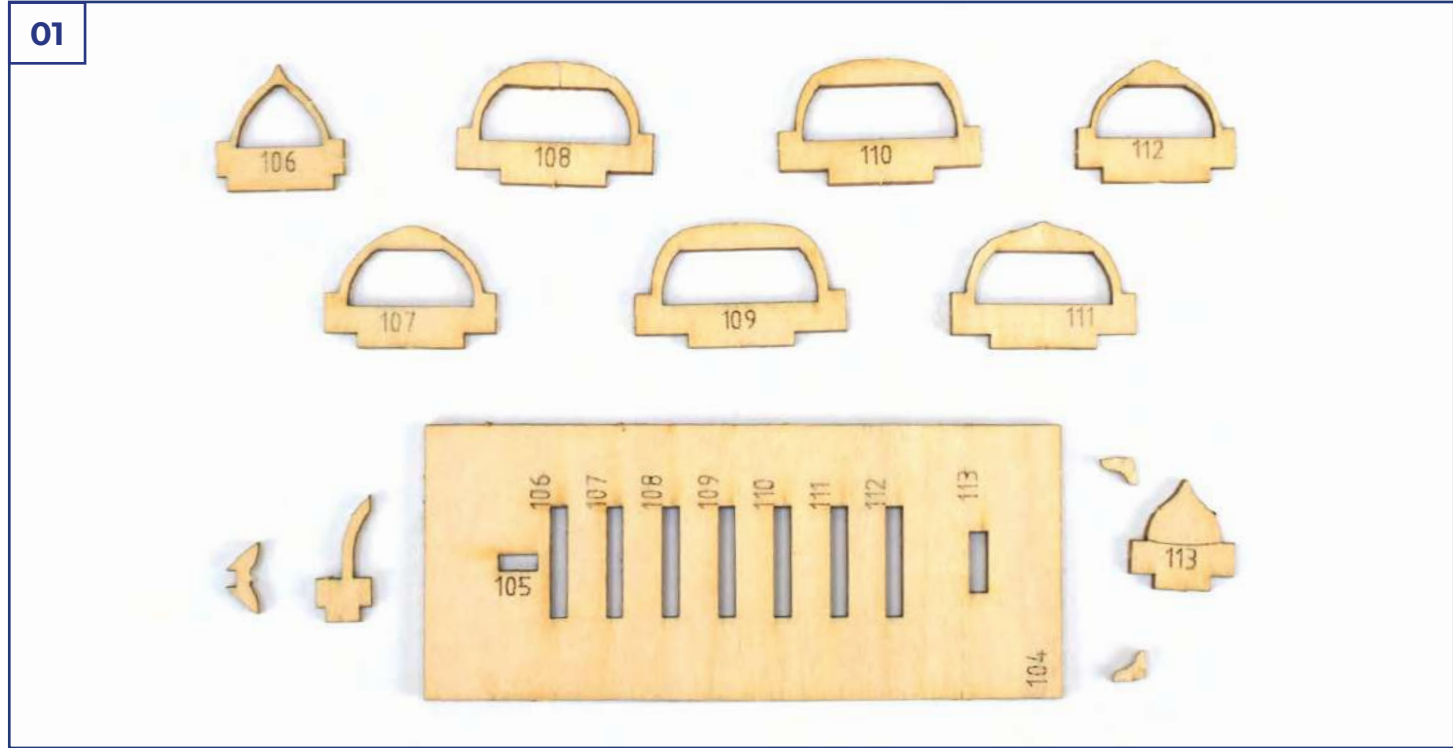


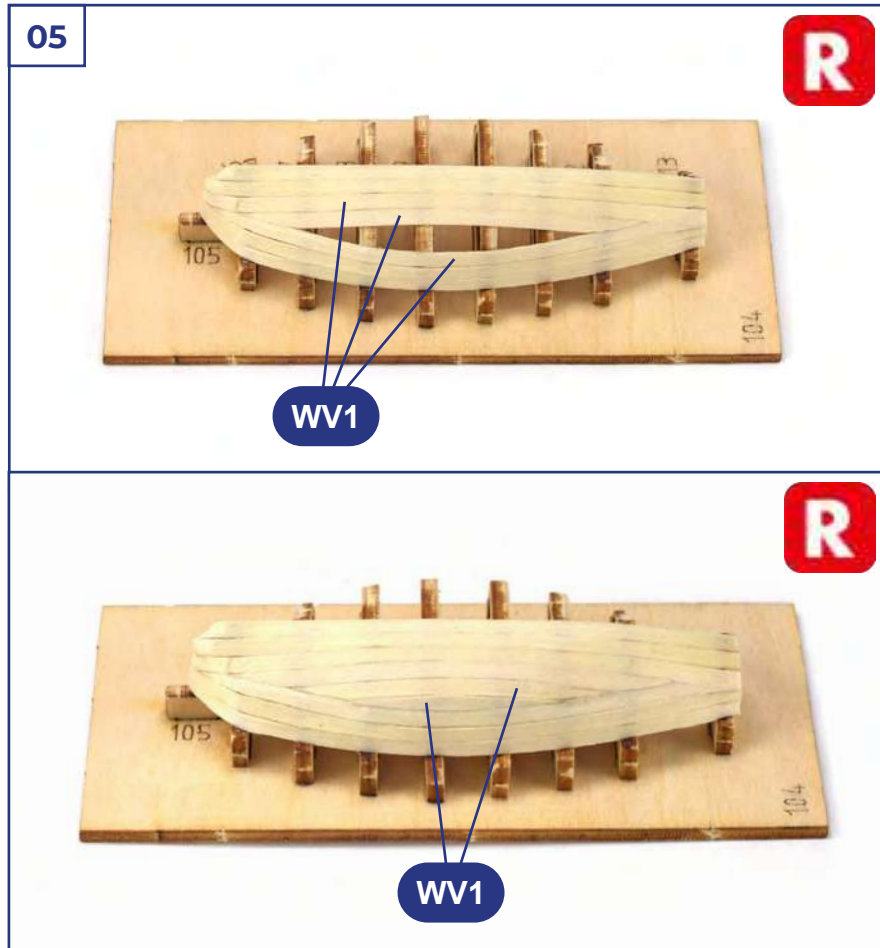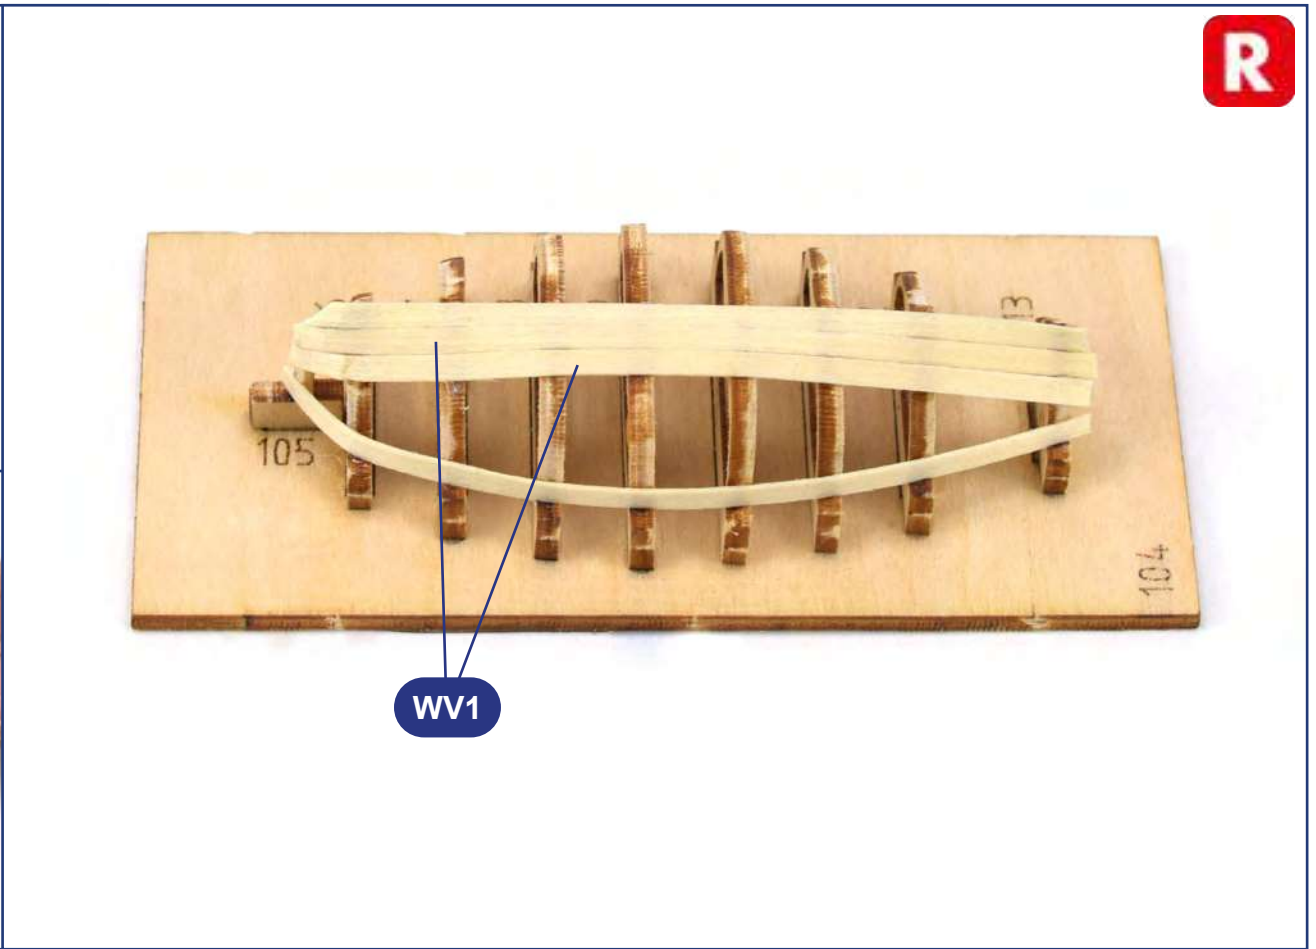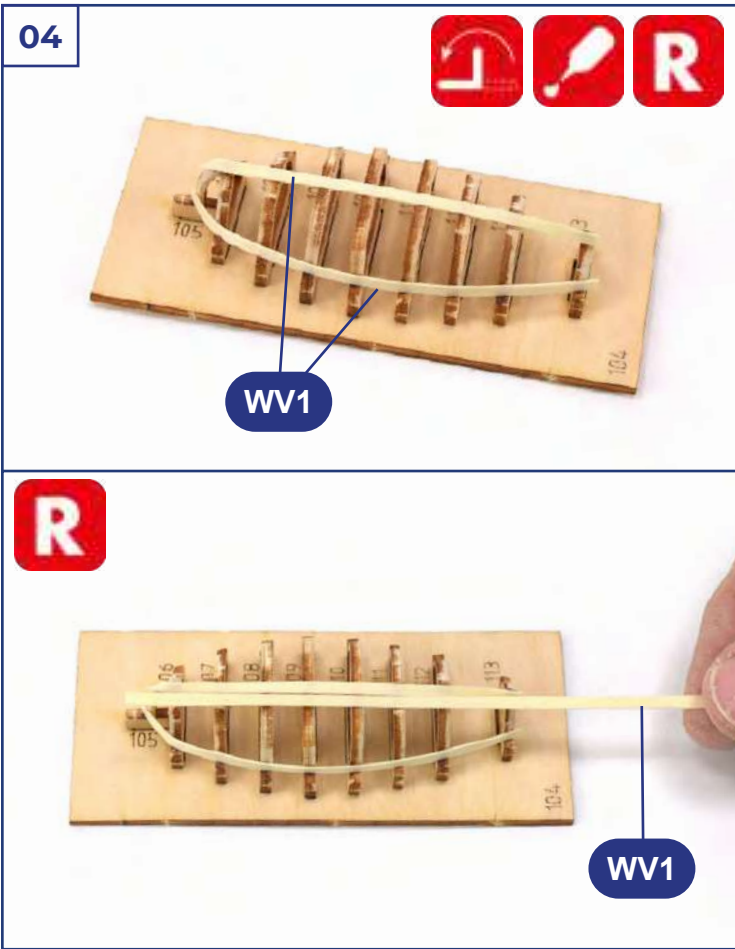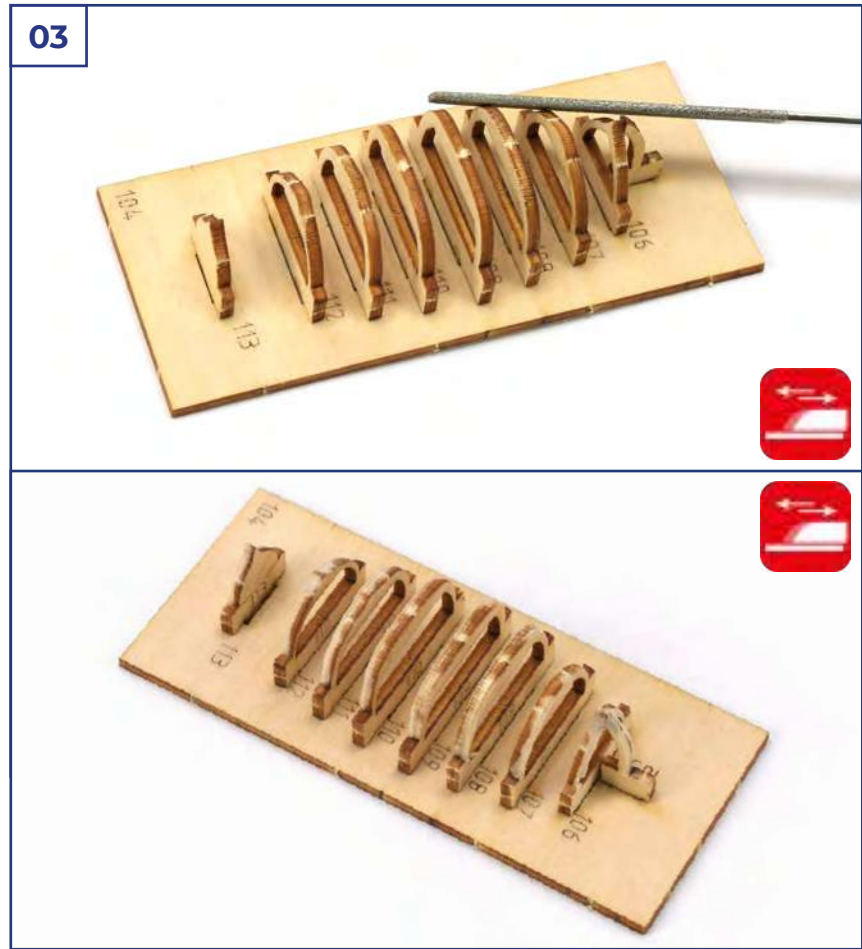

06



07


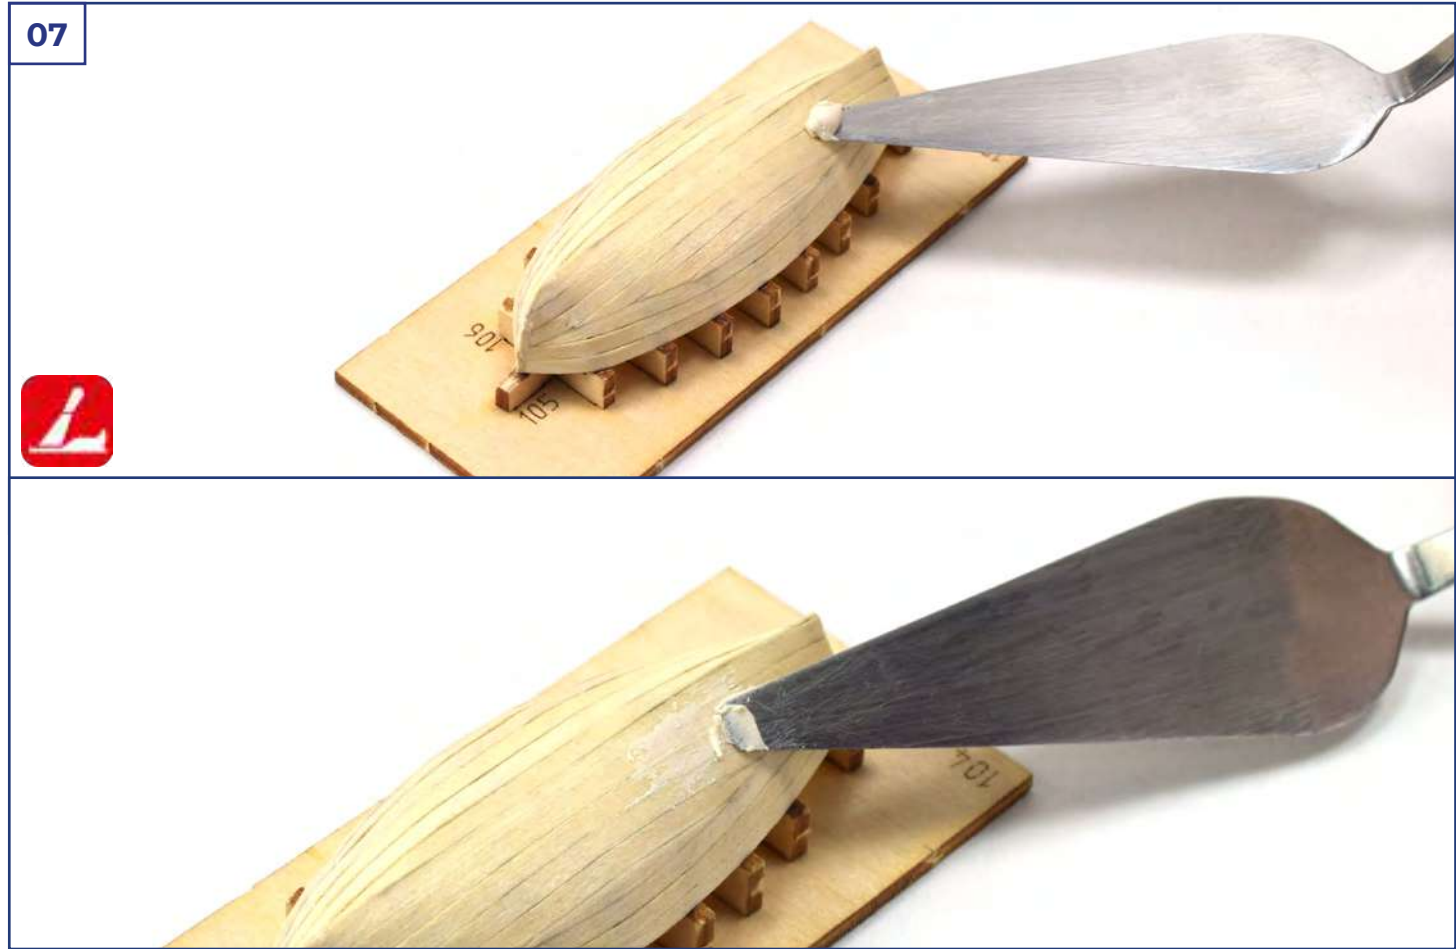




08





09







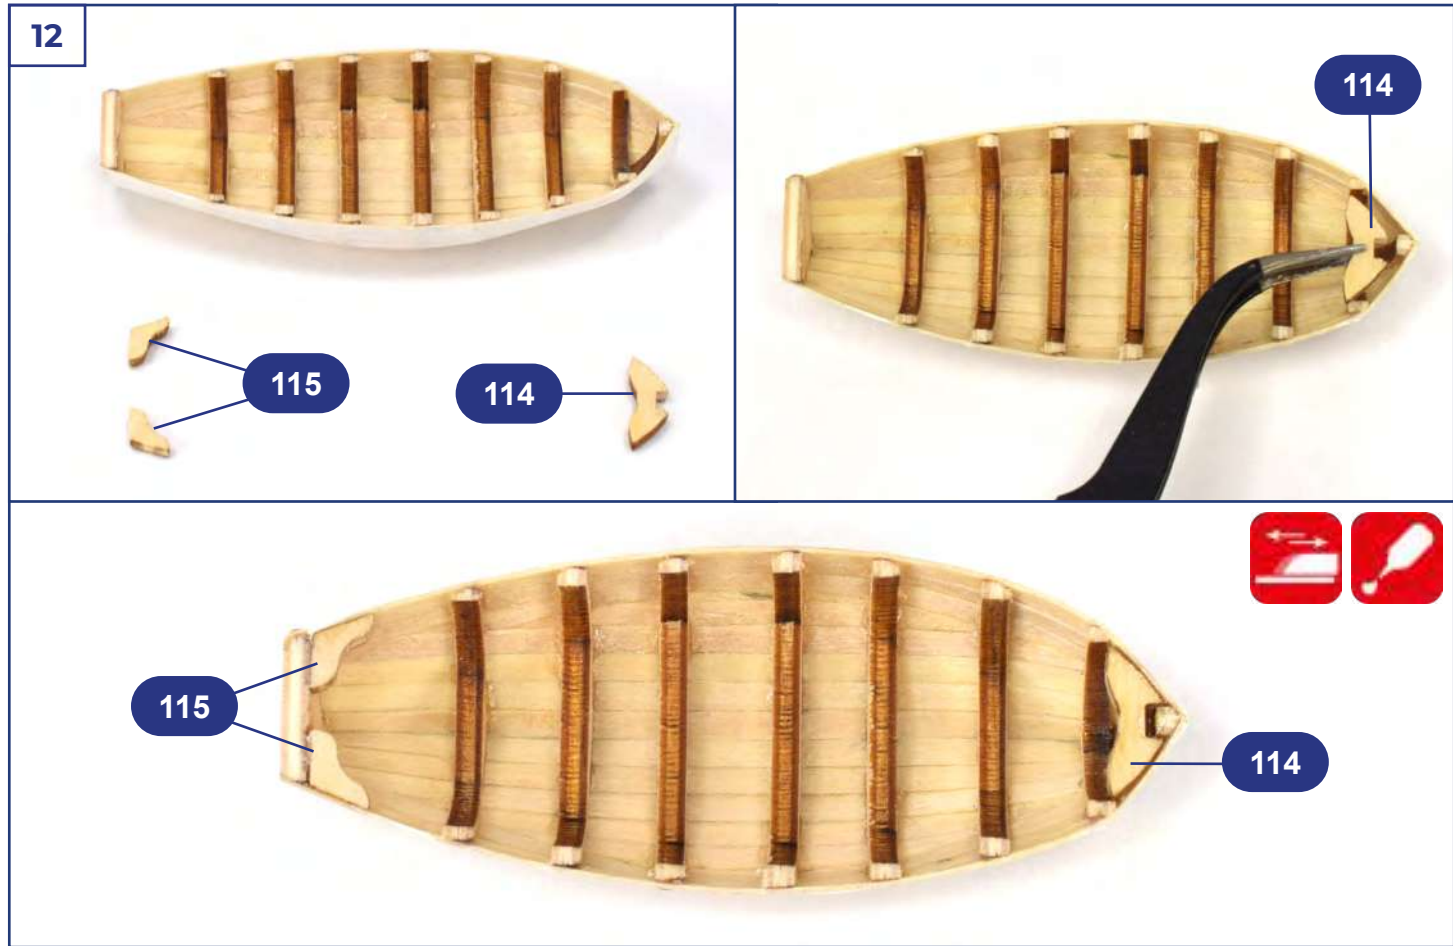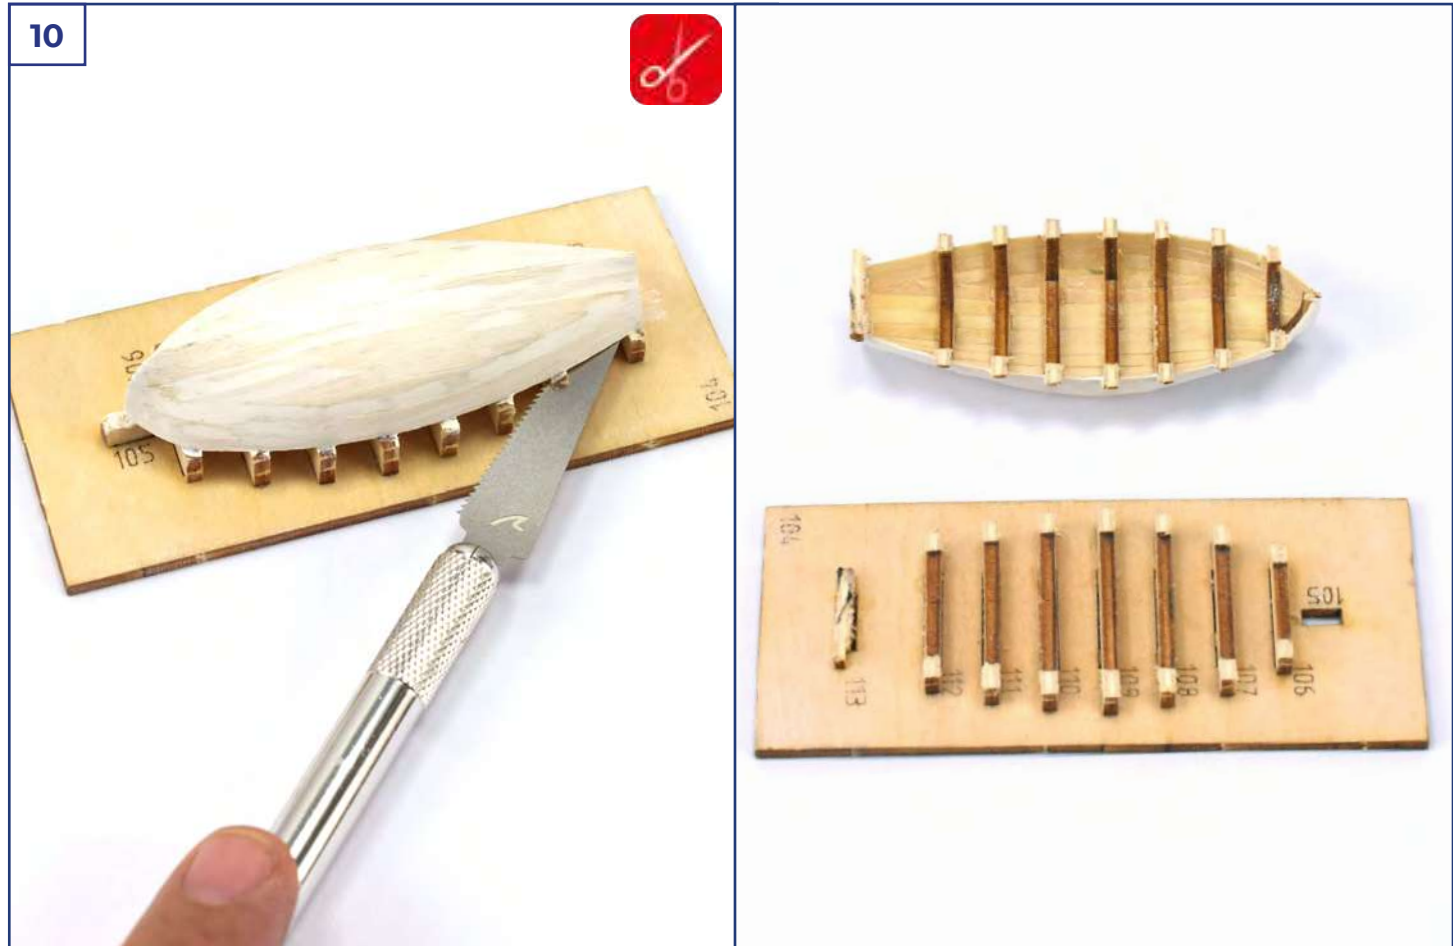

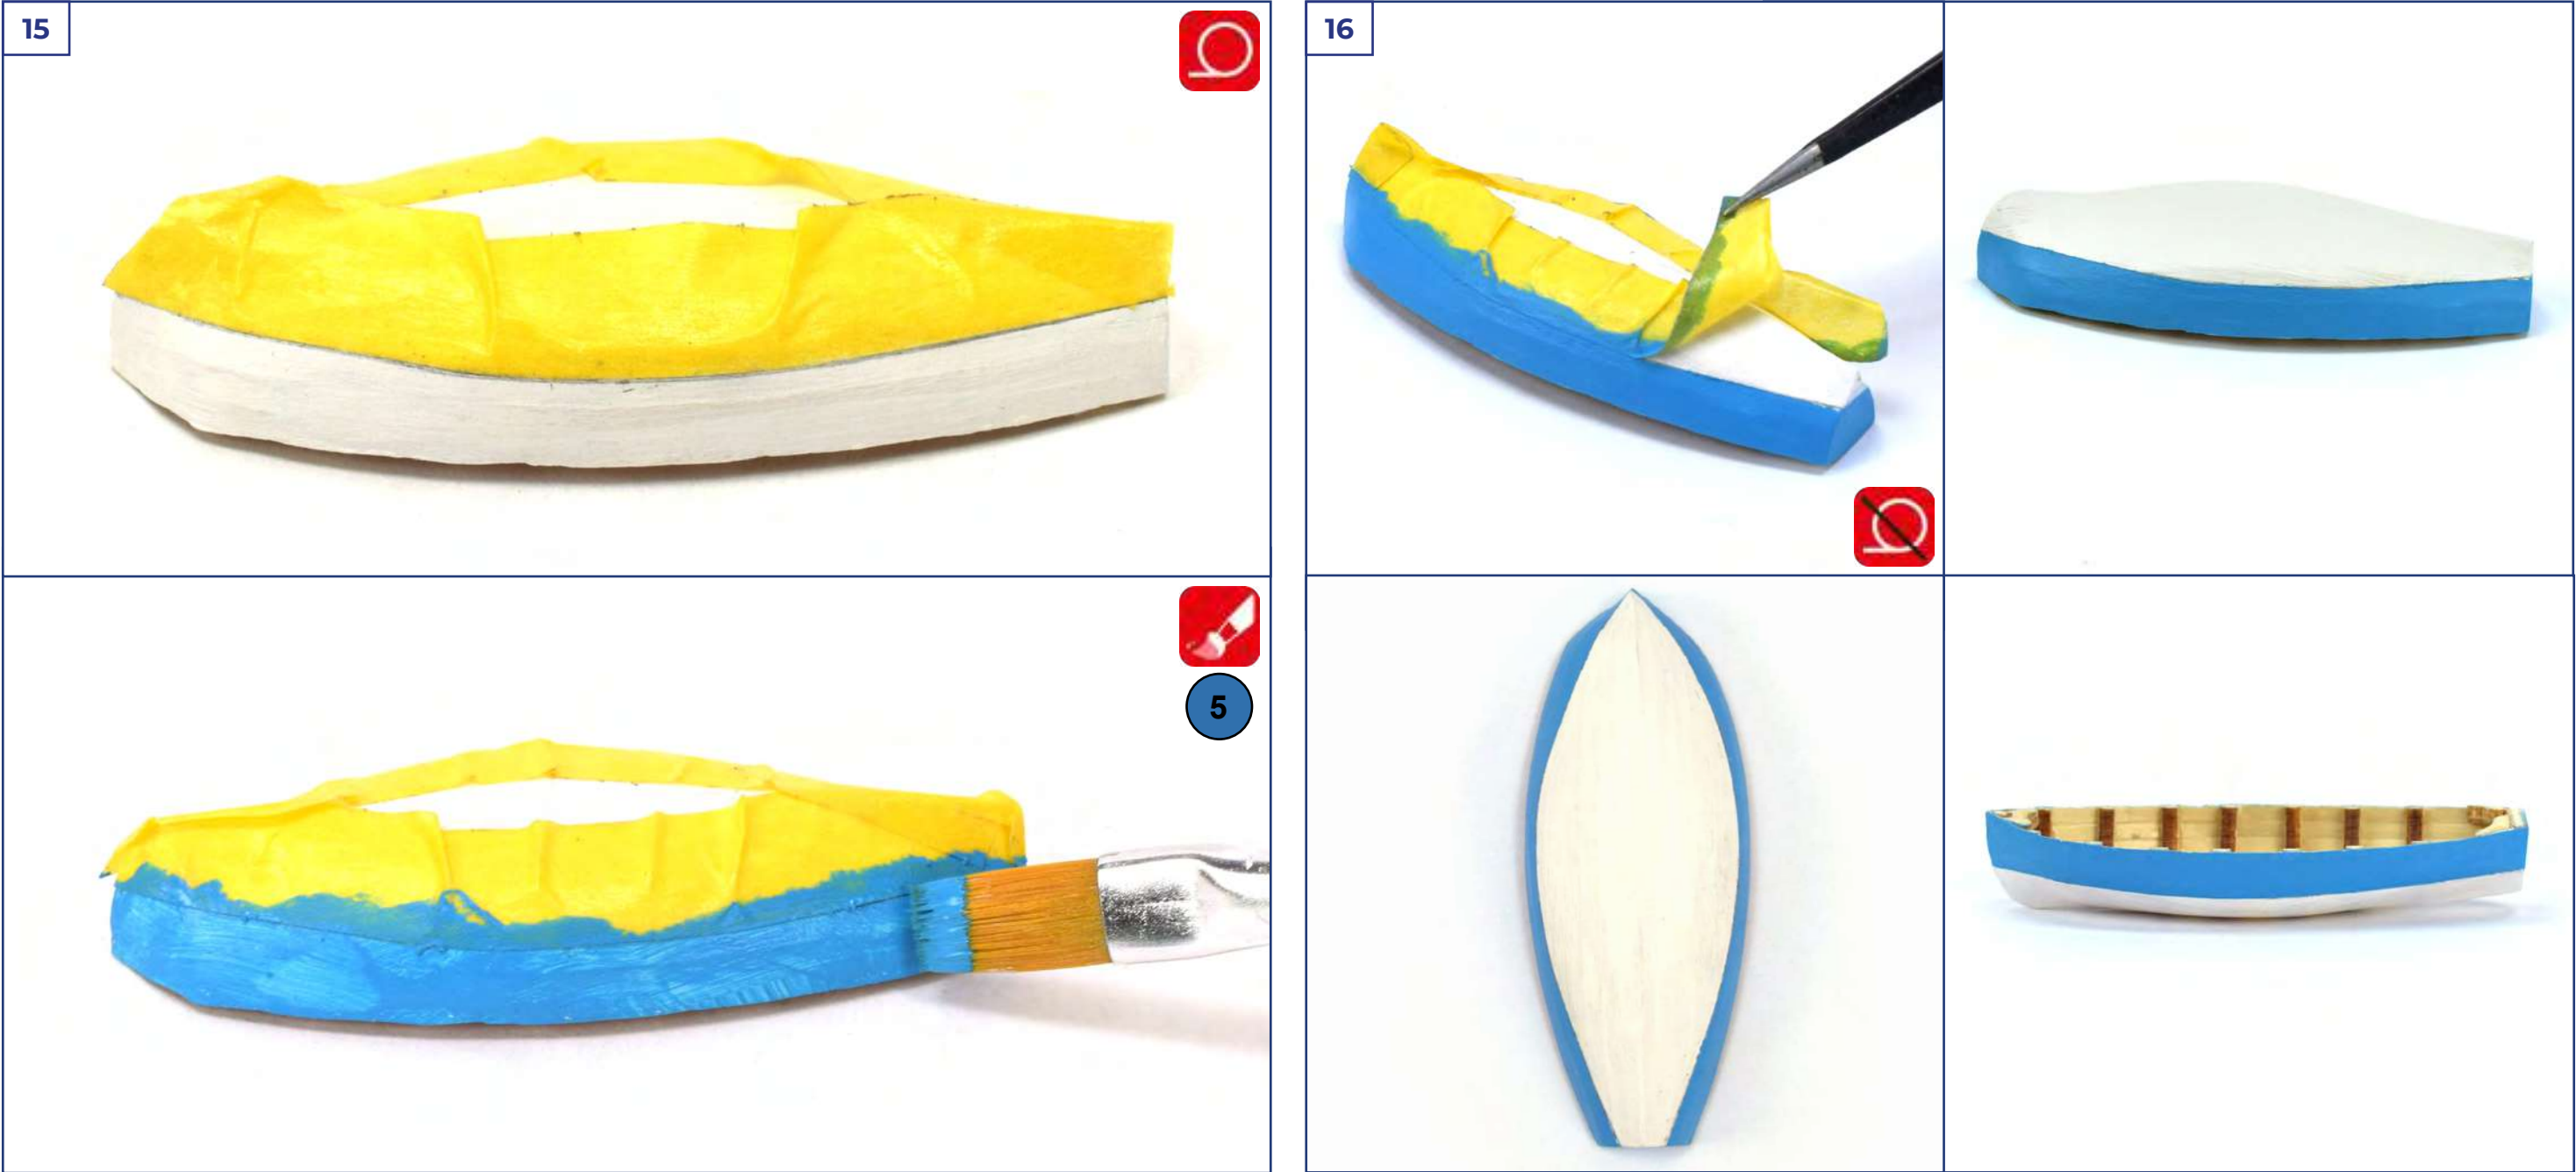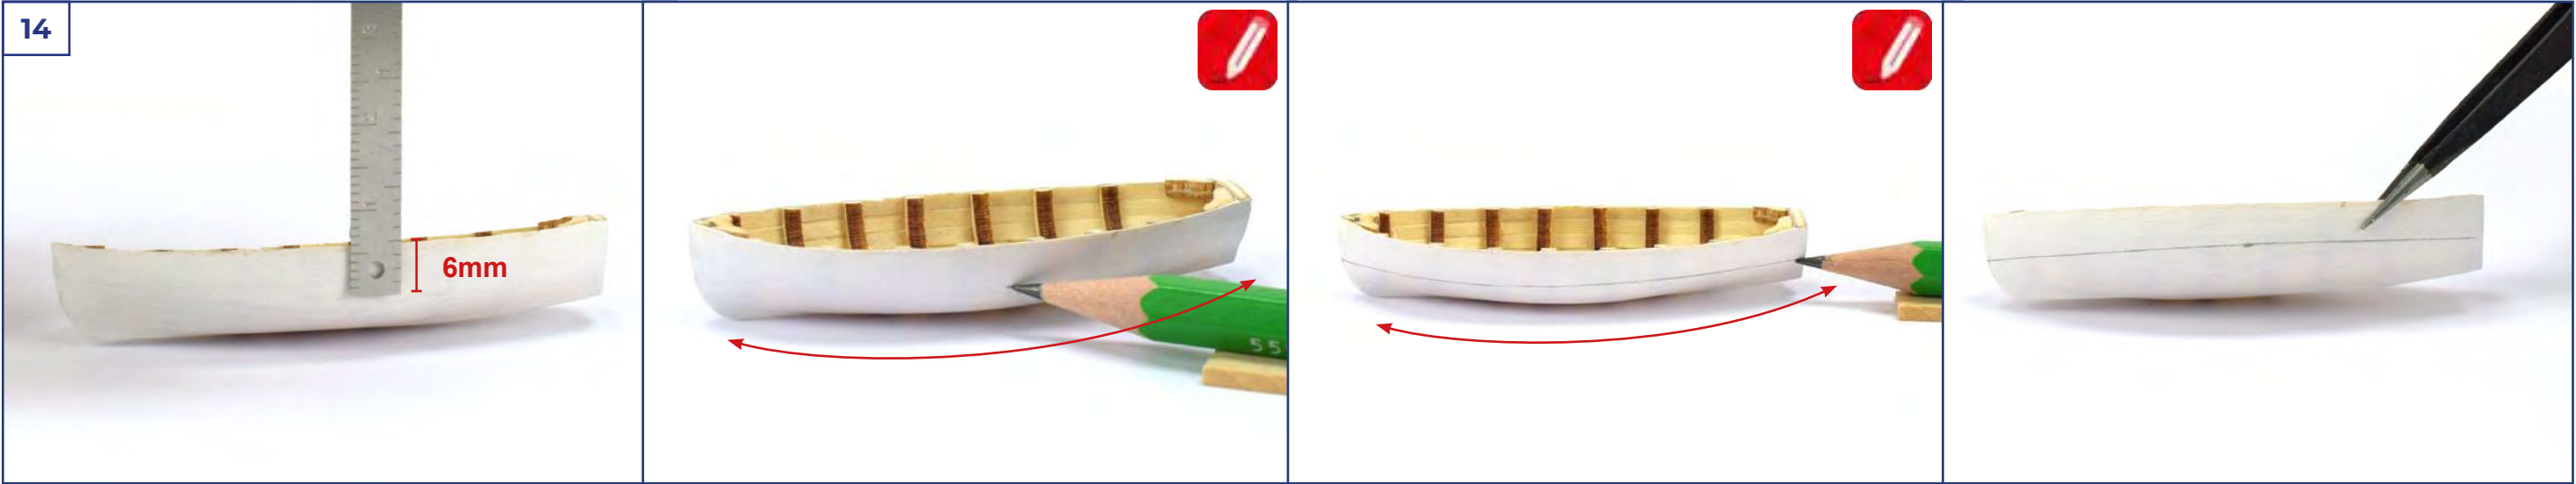

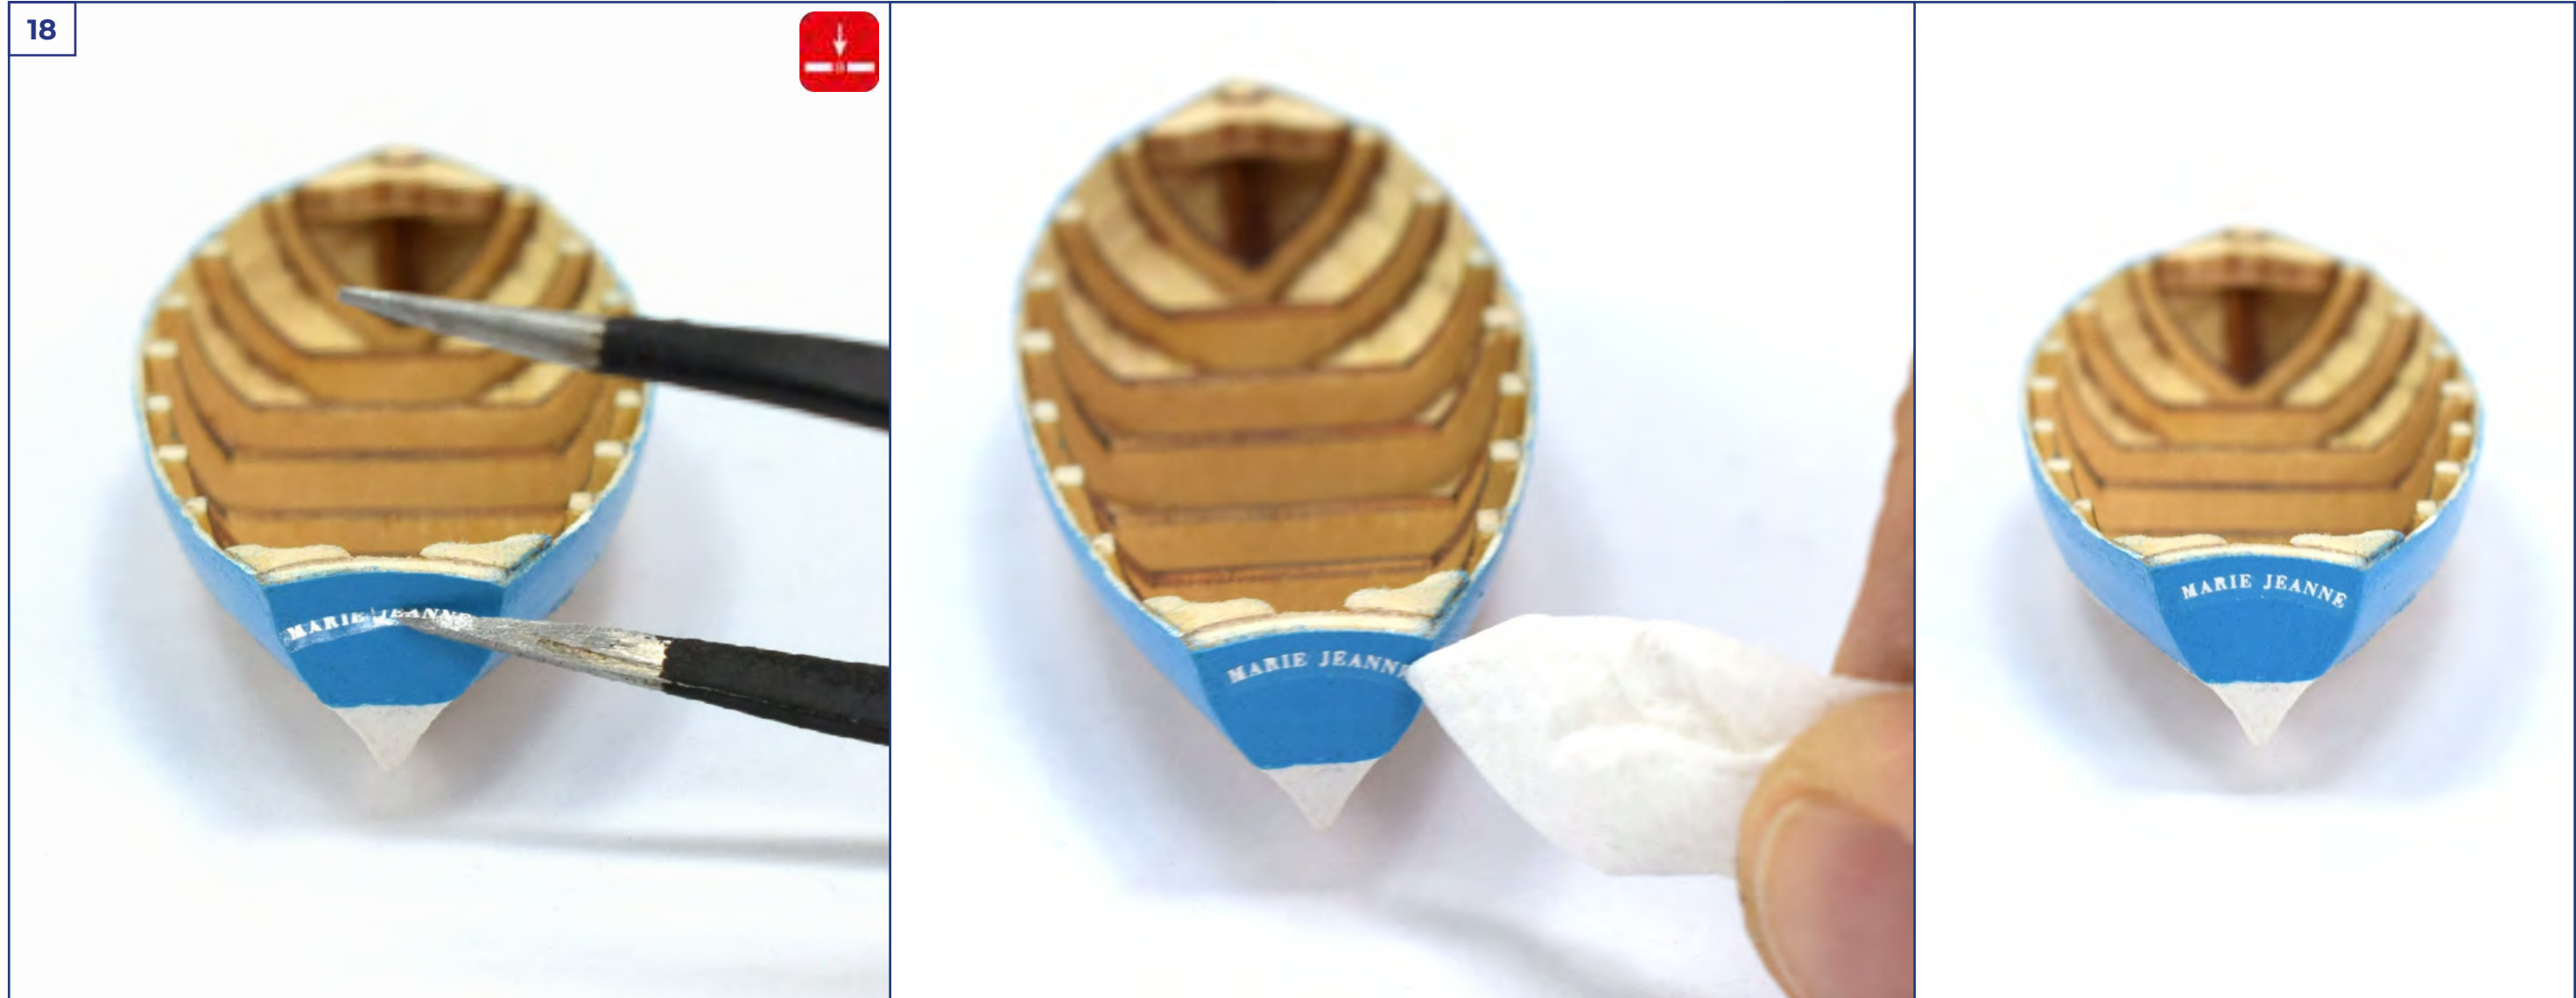

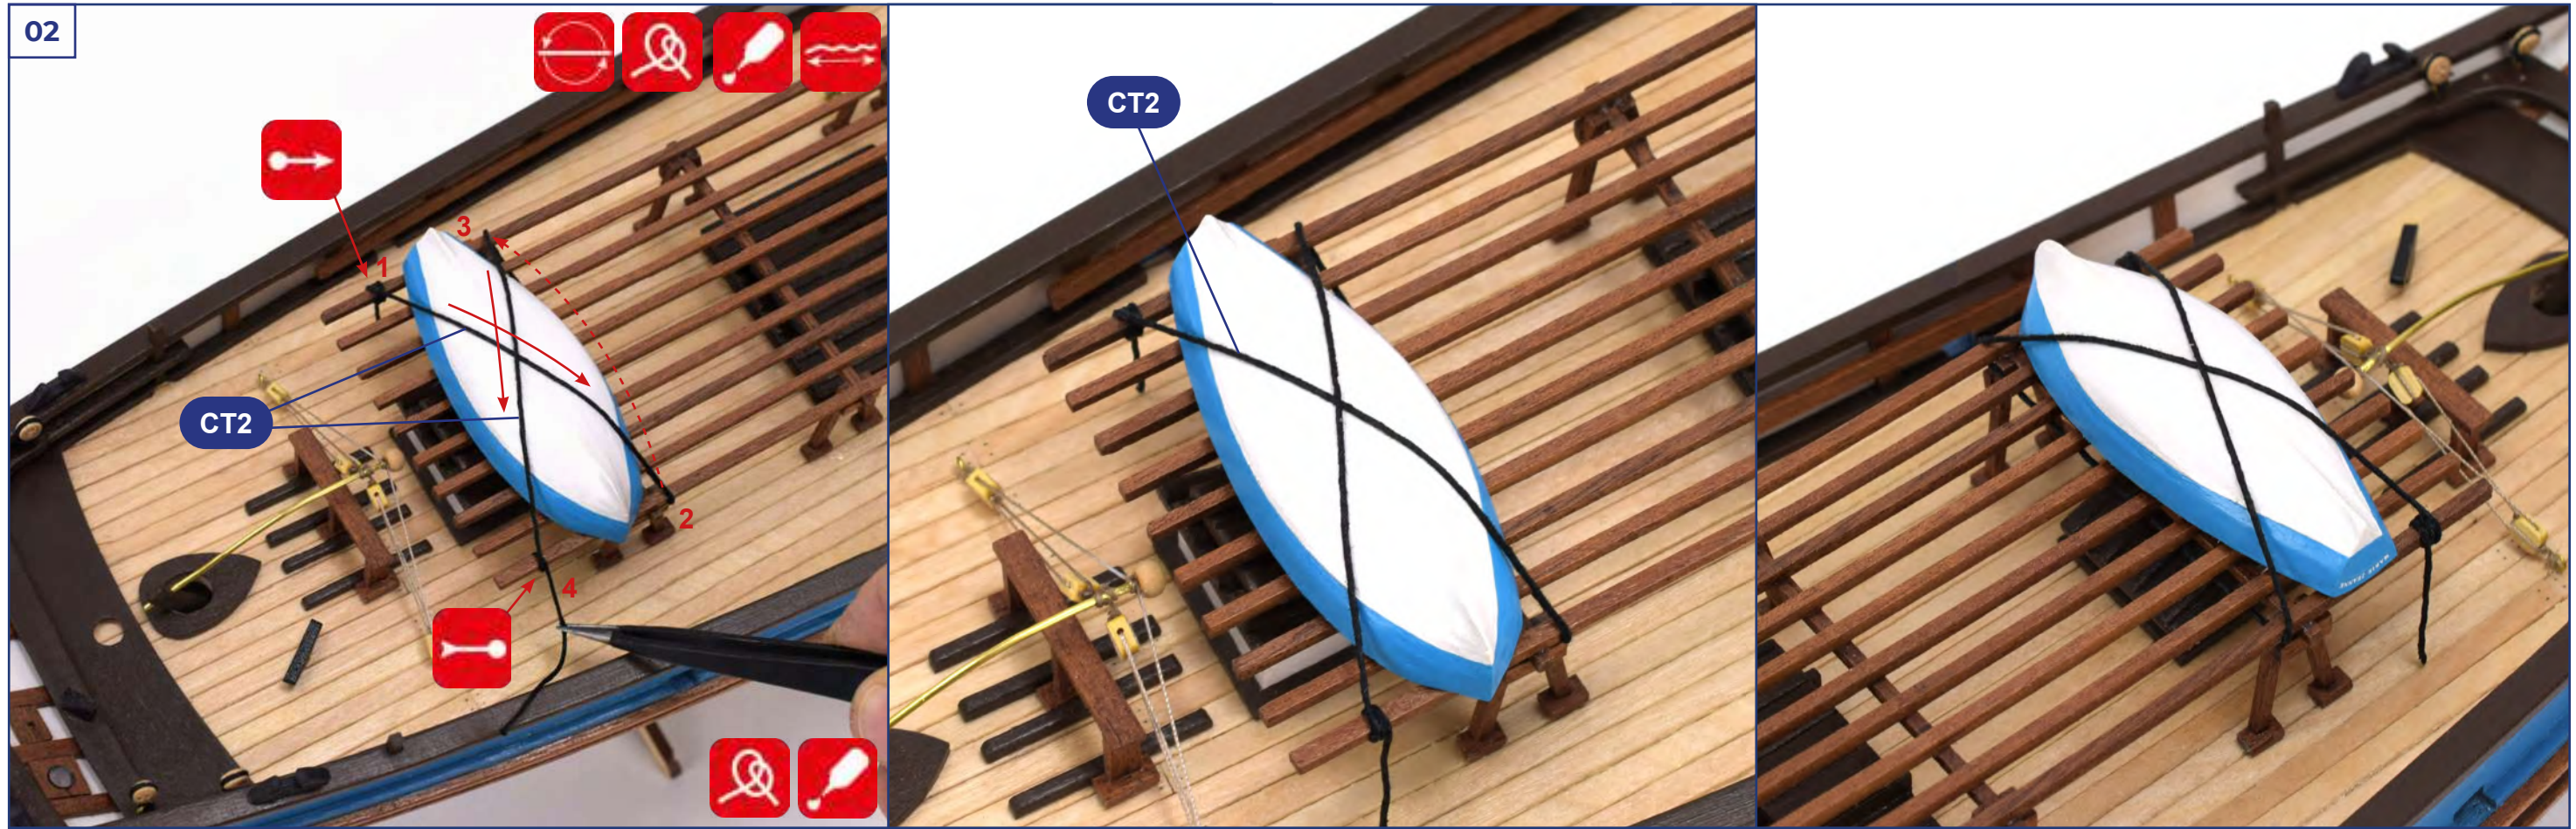

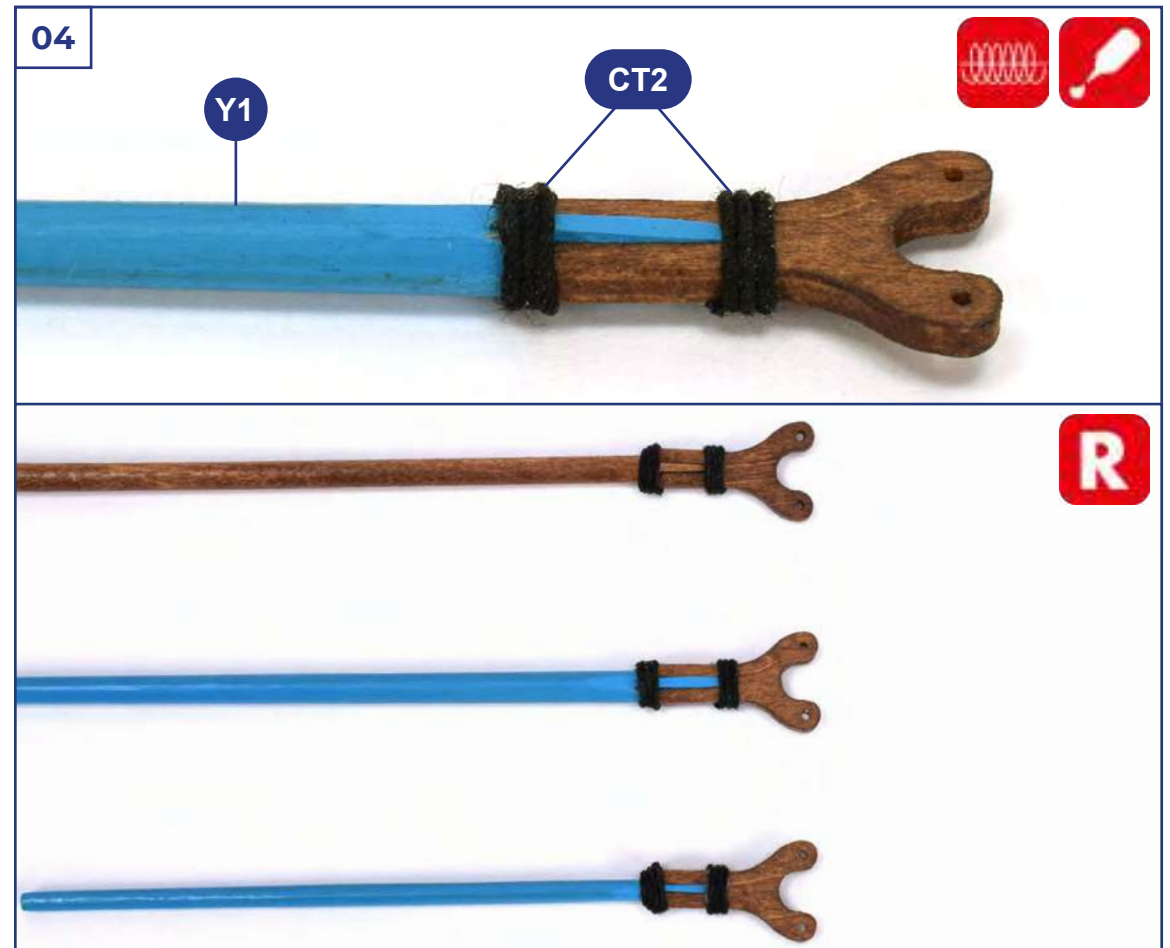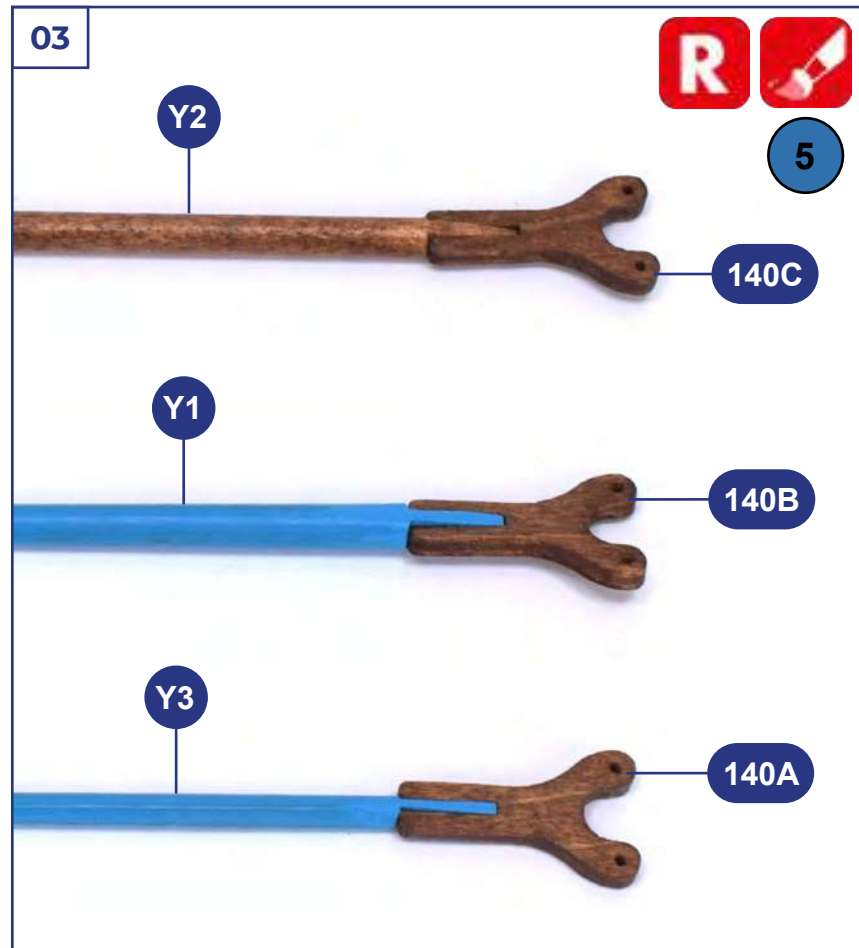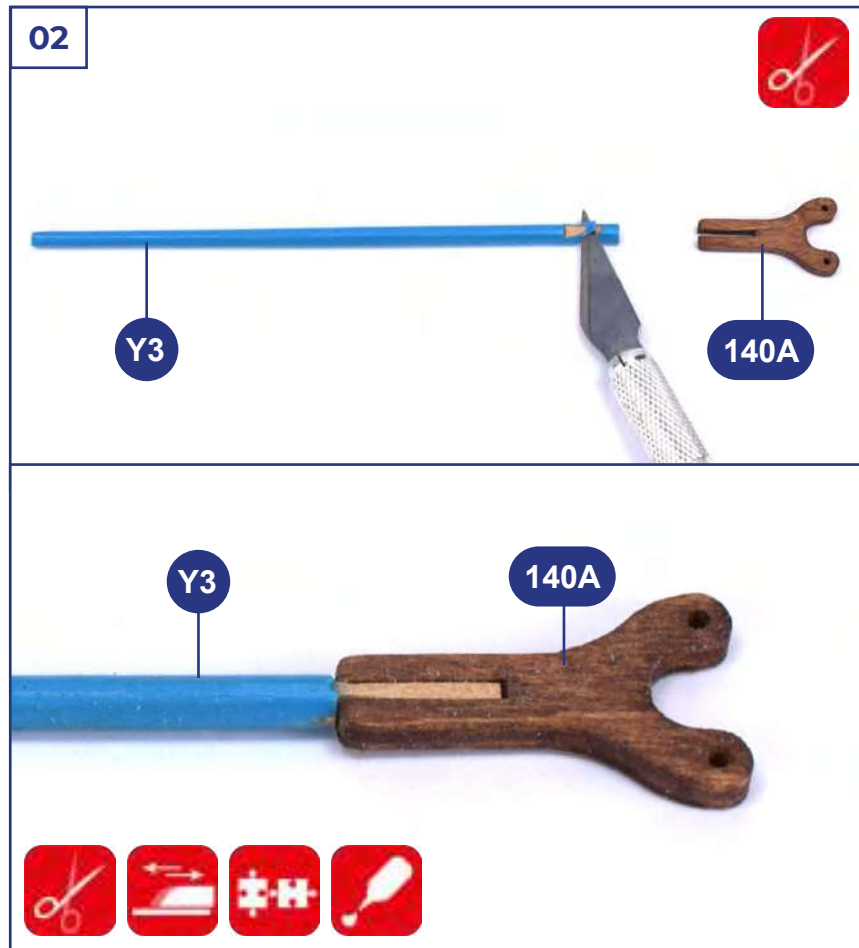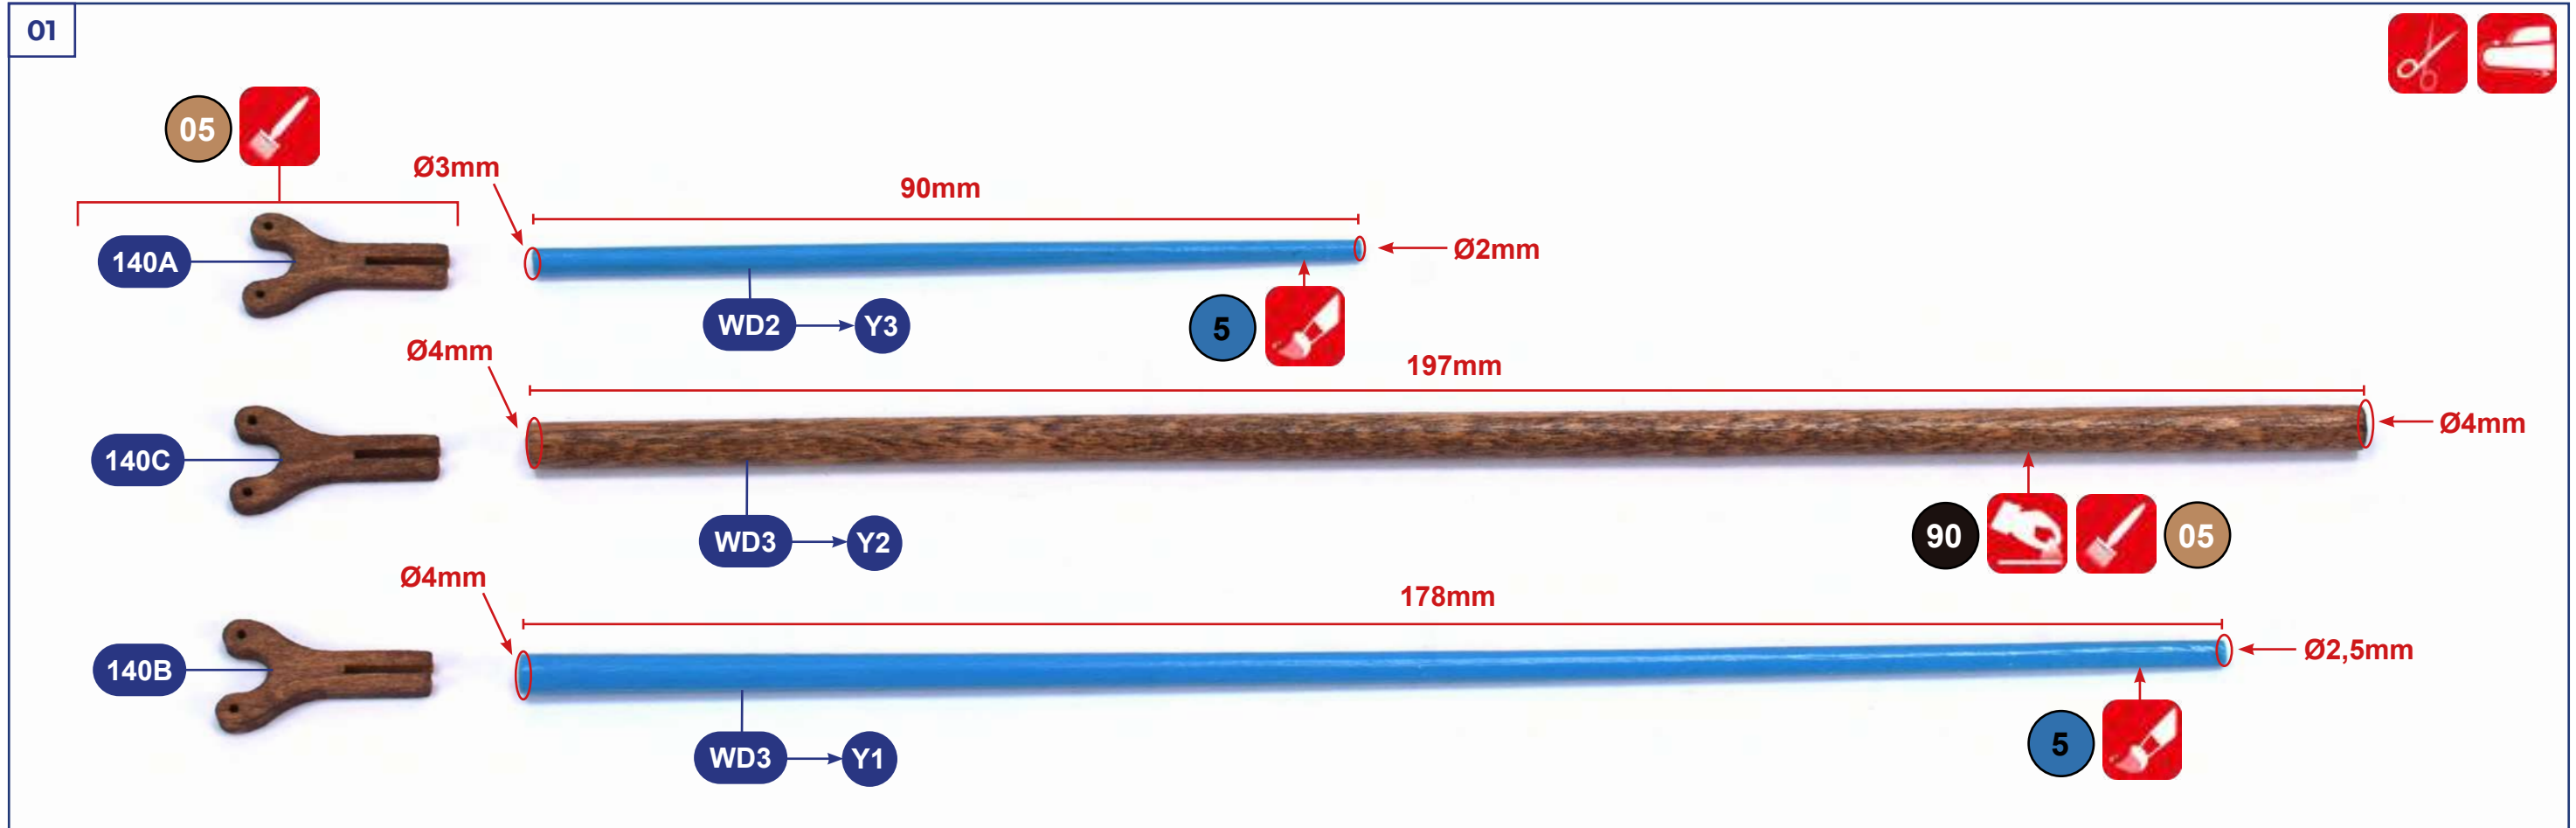

05

Y2

4

141

4

141

D15 + CT1

D8

D5

06

Ø1mm

07

WS4

90

86mm

08

Ø2,5mm

WD3

Y4

Ø4mm

110mm

90

05

P2

P2

Y4

P2

09

Y4

P2

Ø0,5mm

Y4

D4

P2

Y4

D4

P2

10

Ø1mm

D5

12mm

D5

11

P7

Ø4mm

10mm

01

2

357mm

Ø8mm

Ø4mm

90

WD4

=

MM

MM

05

100mm




02

MM


MM

MM


MM

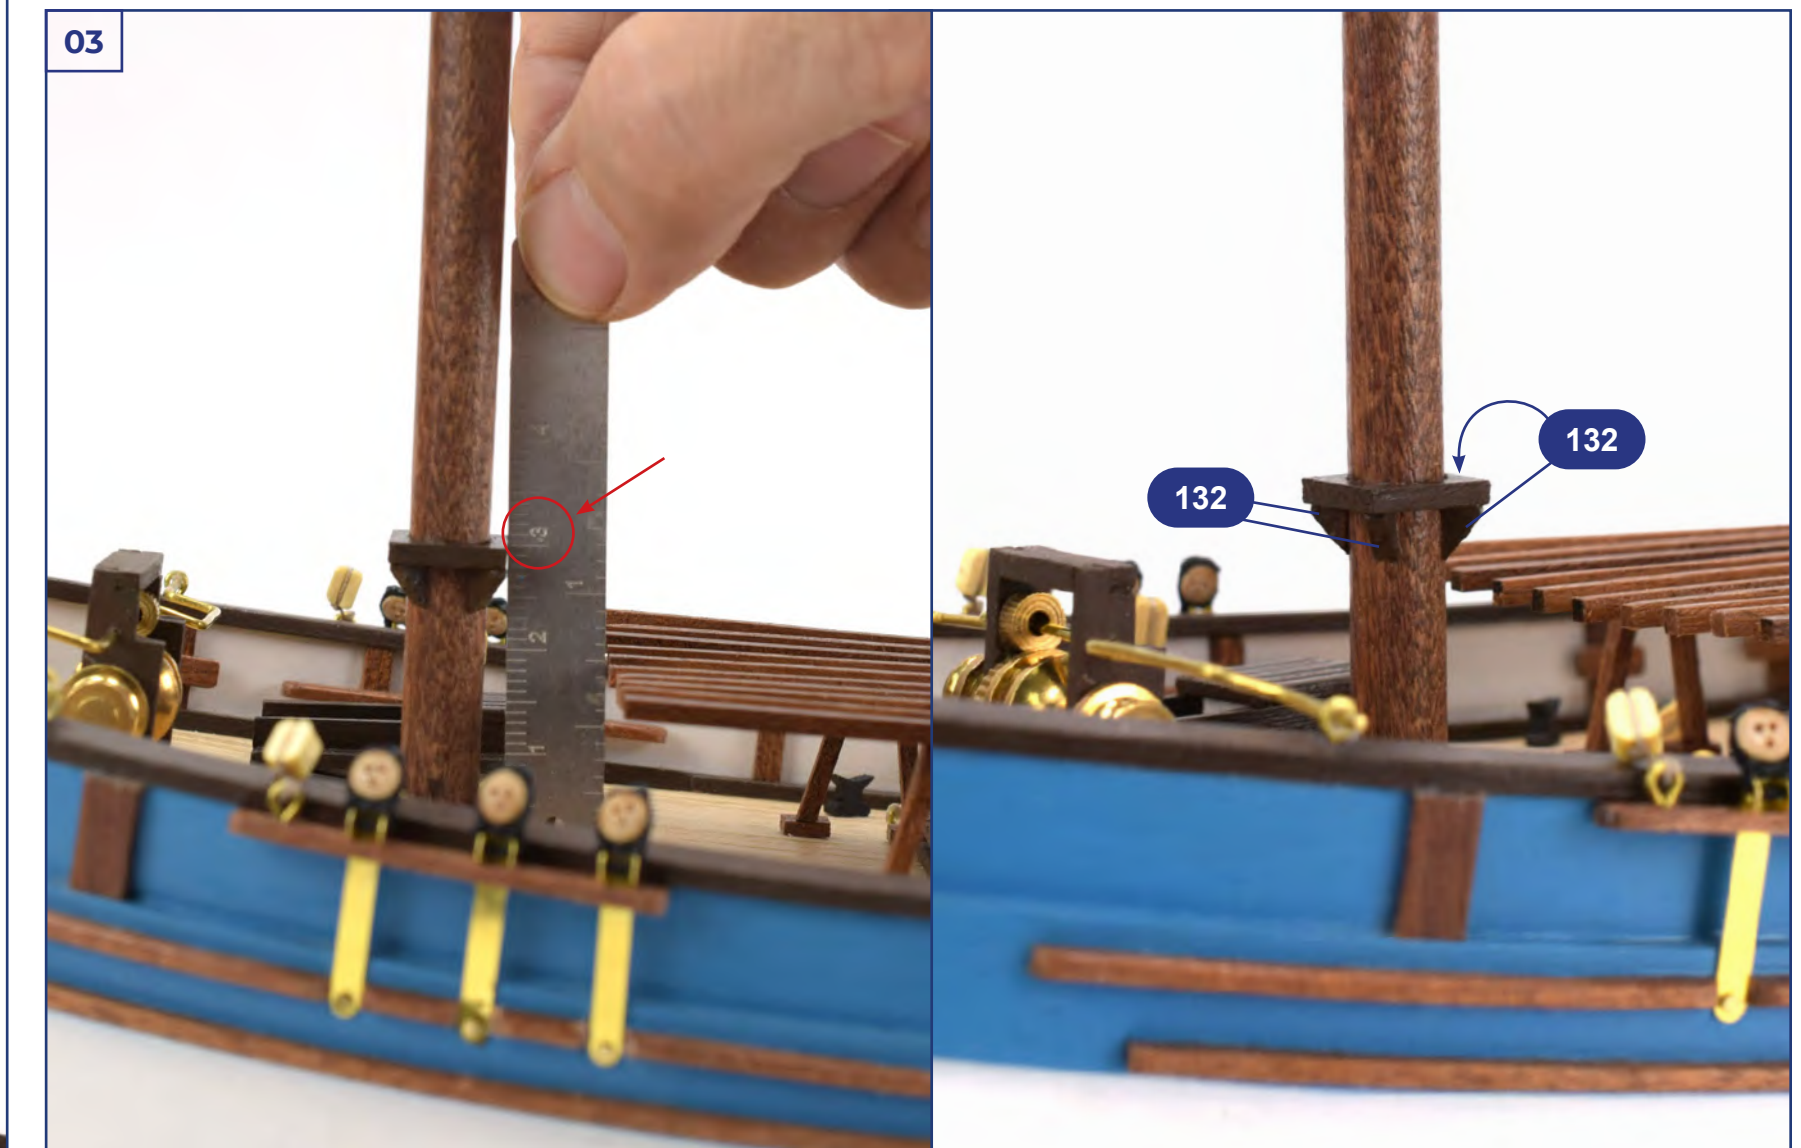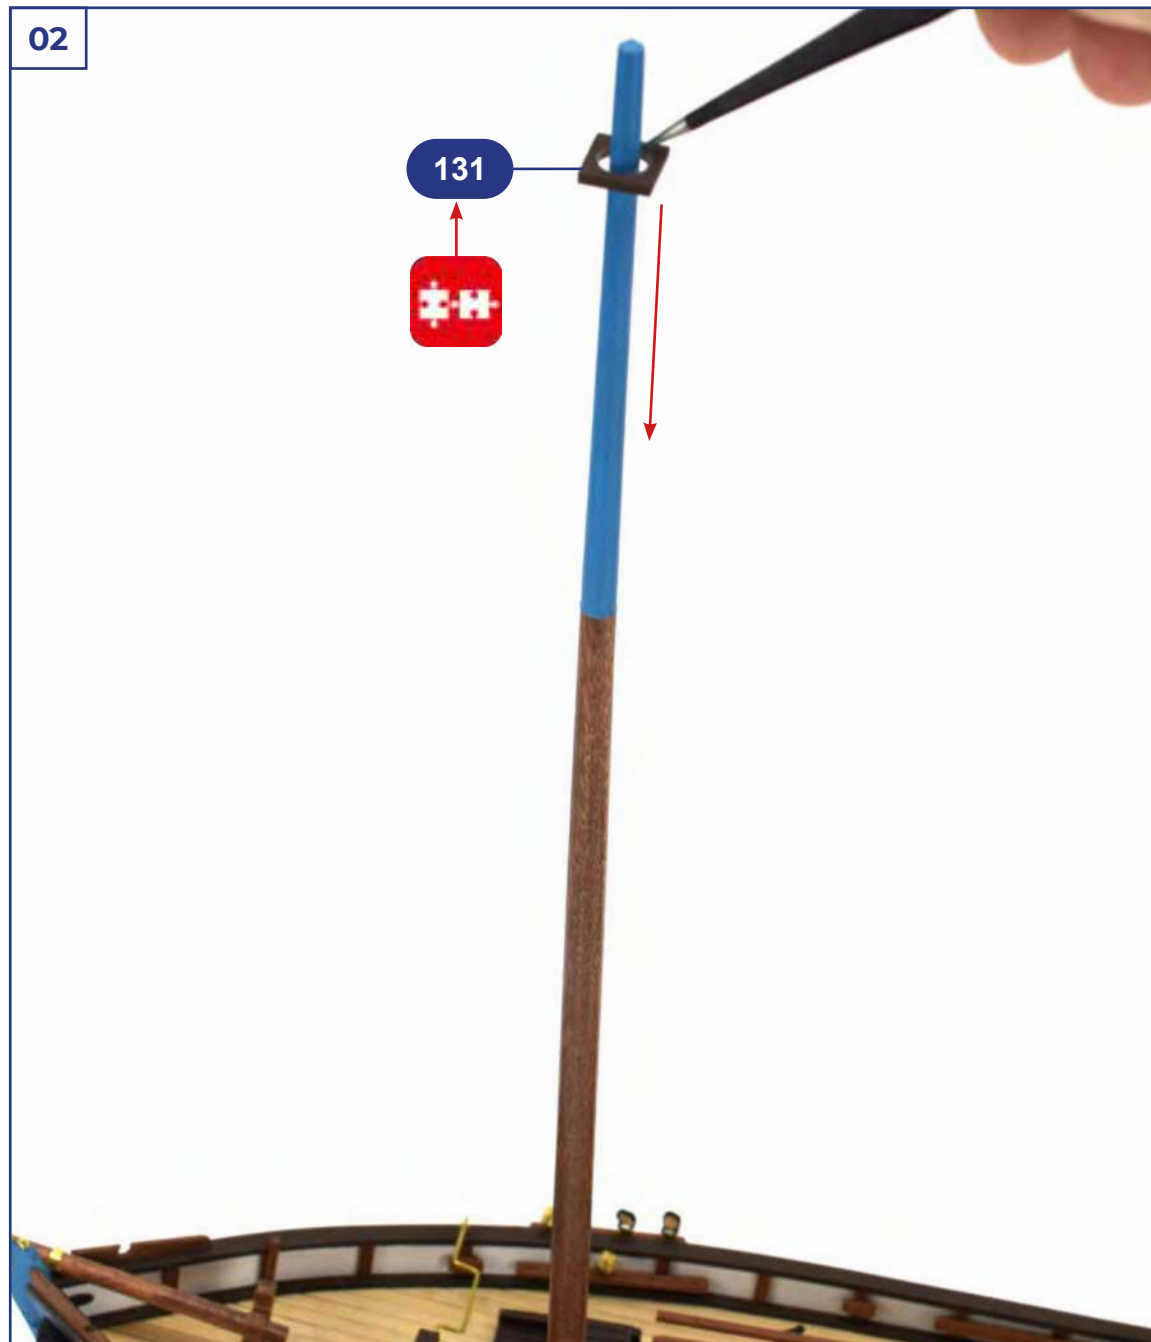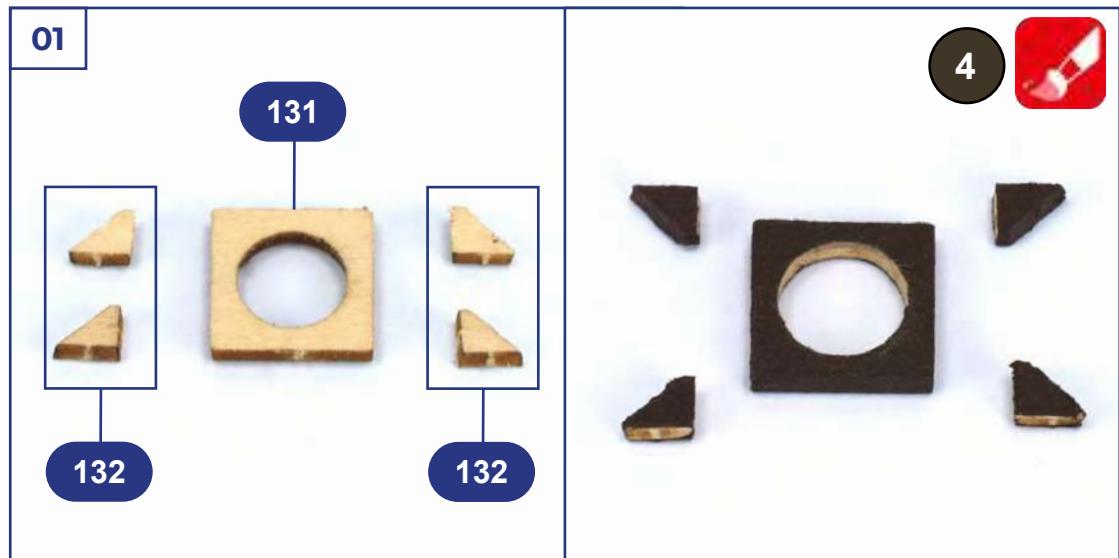

01

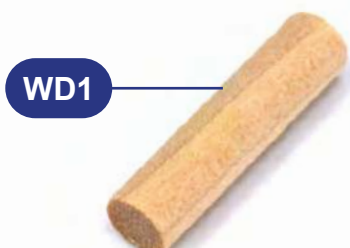


02

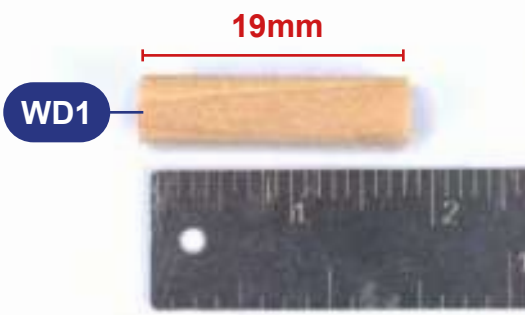


03



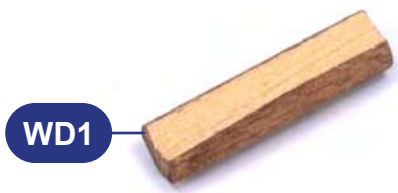

04



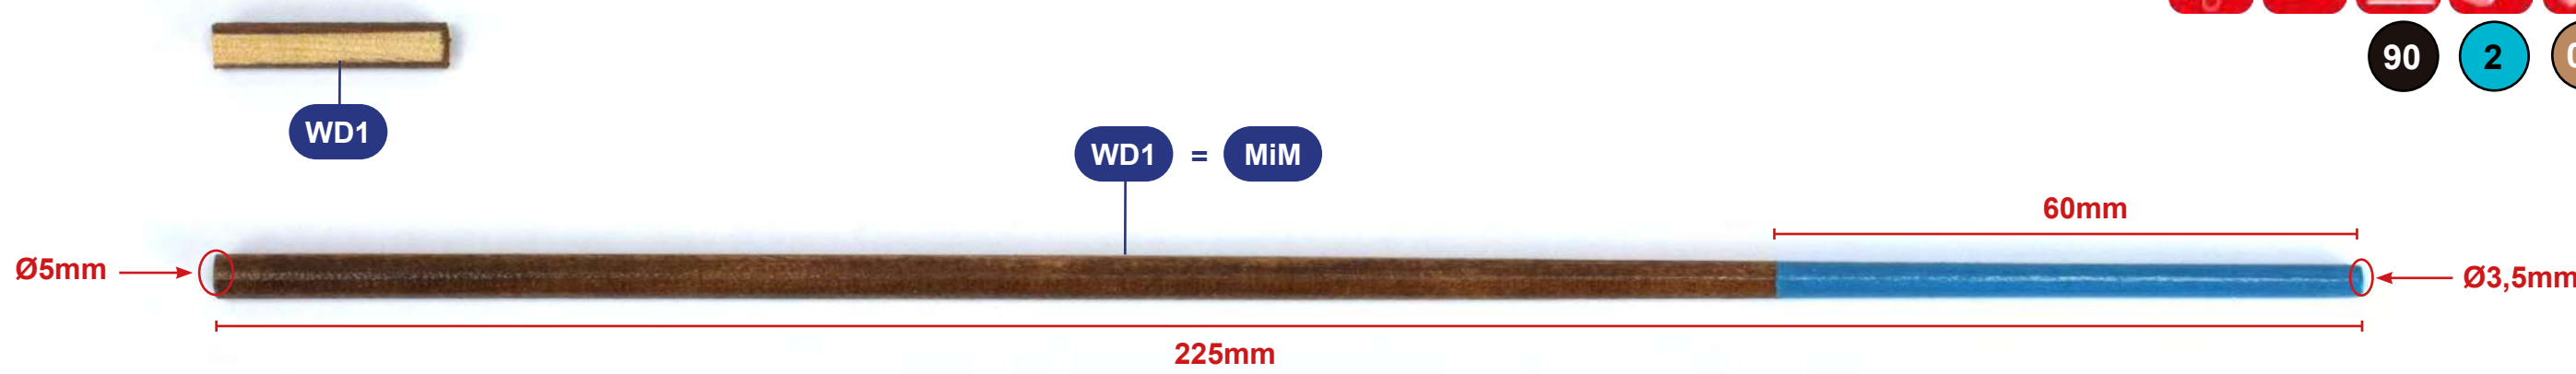






05











06







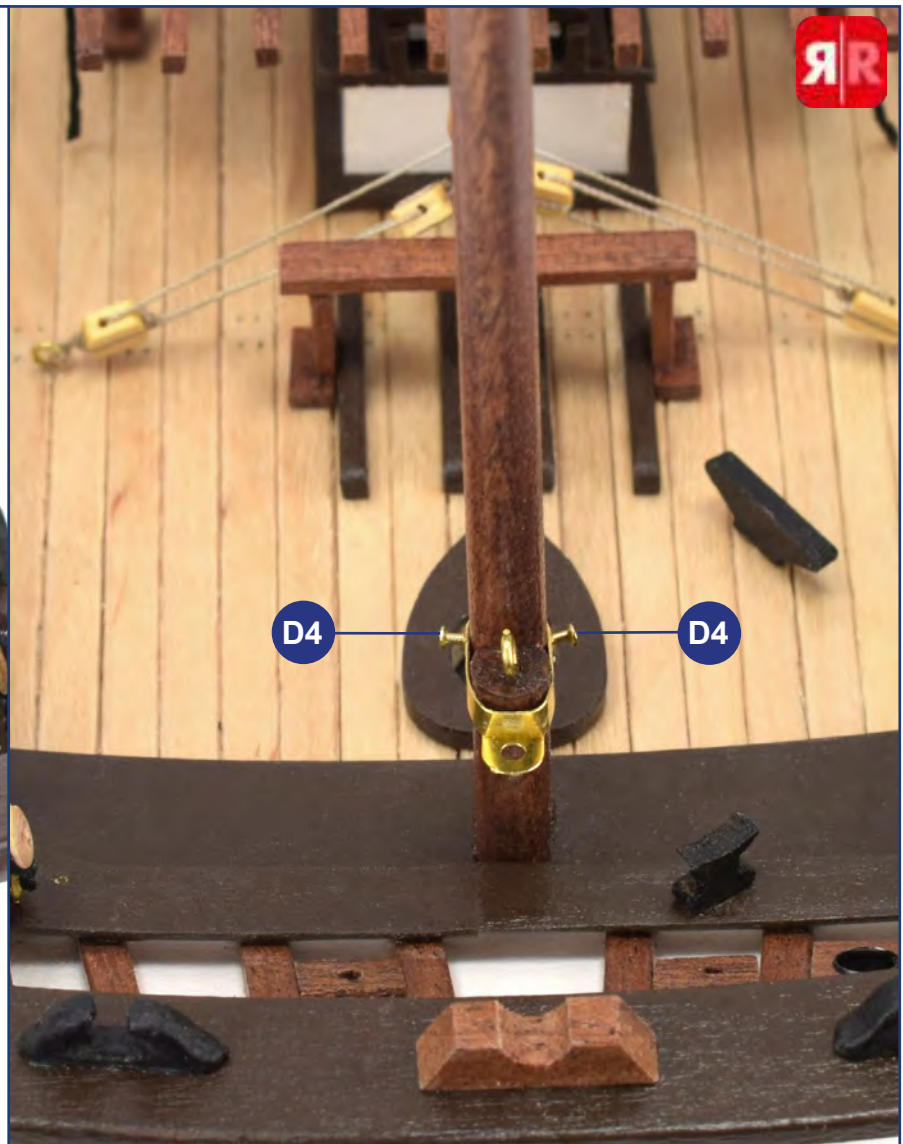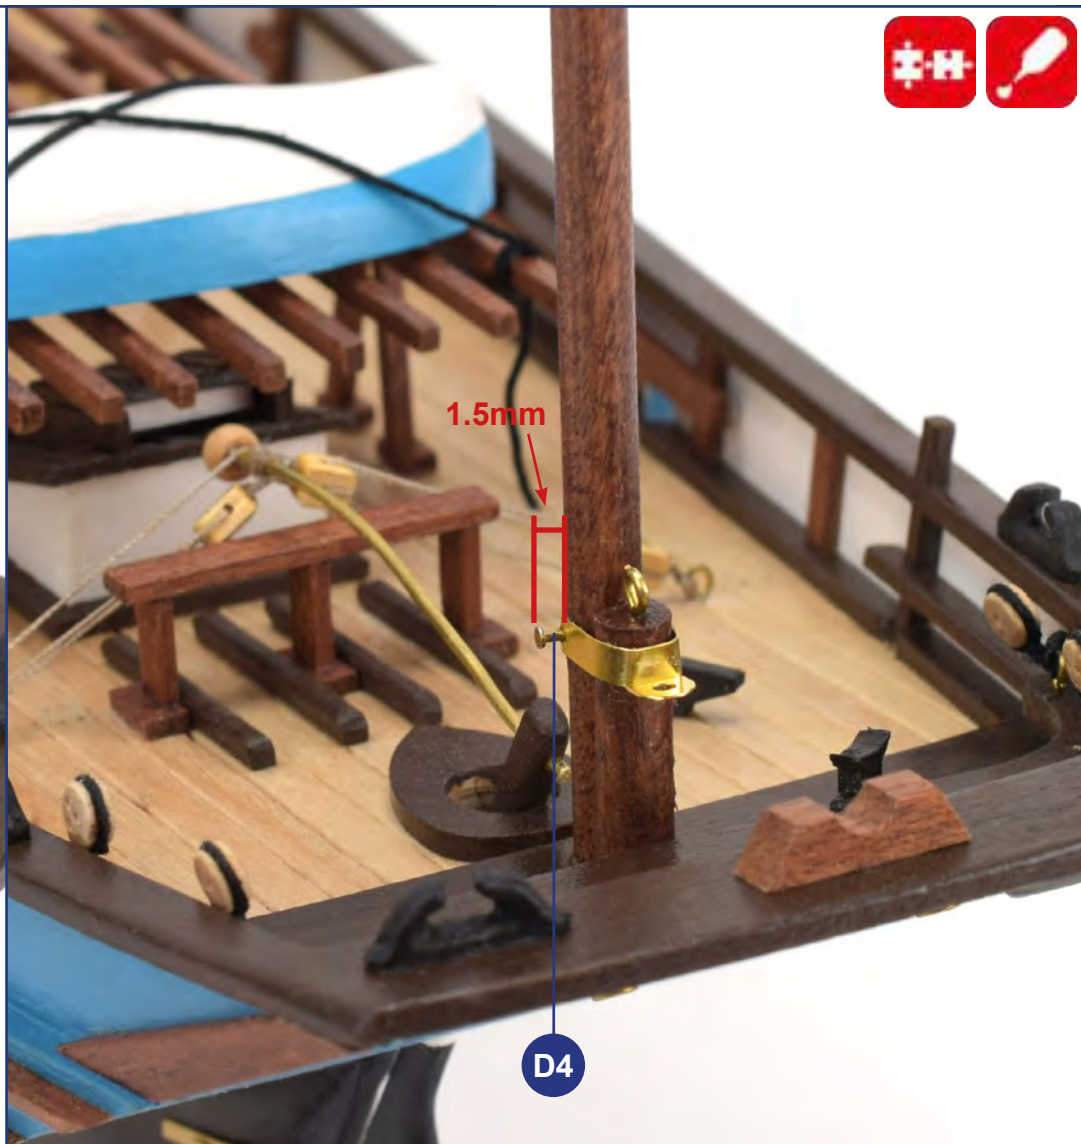
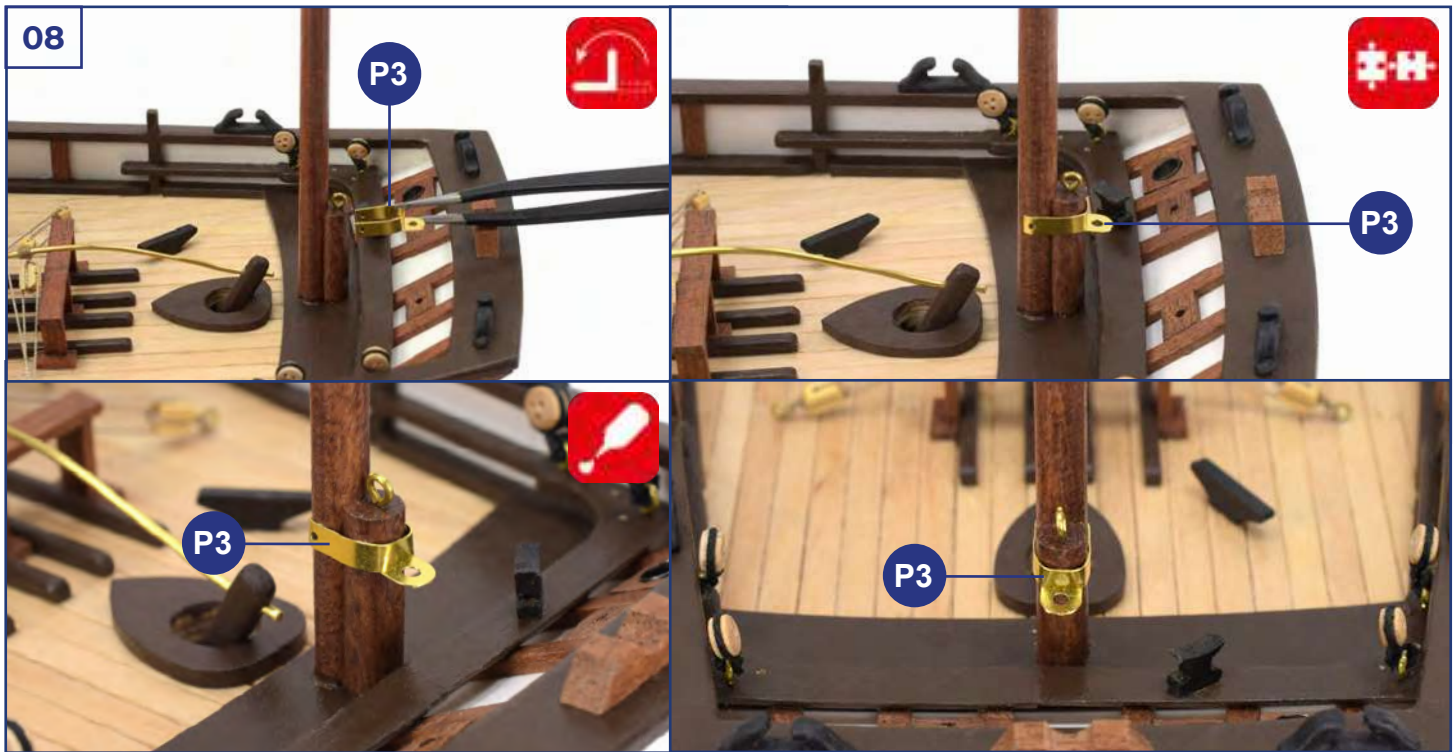


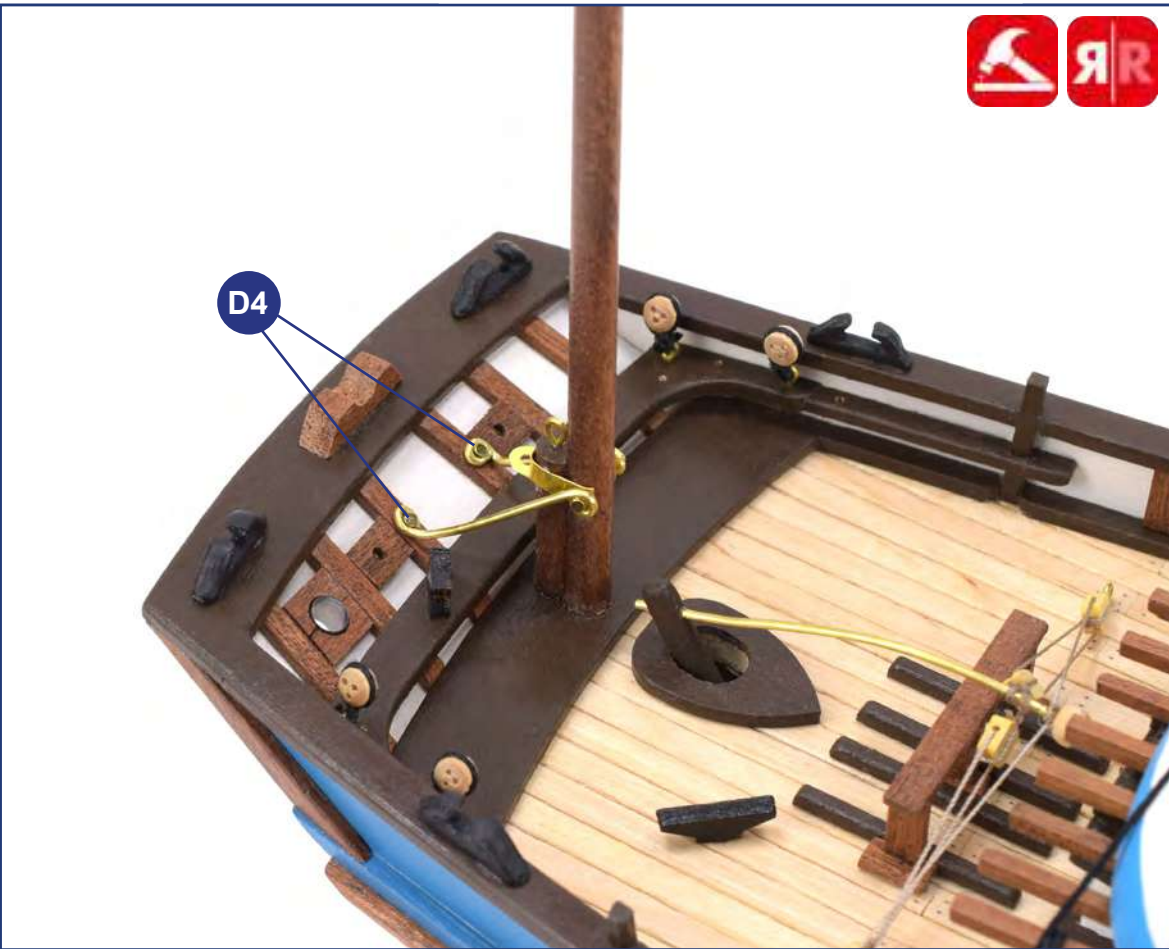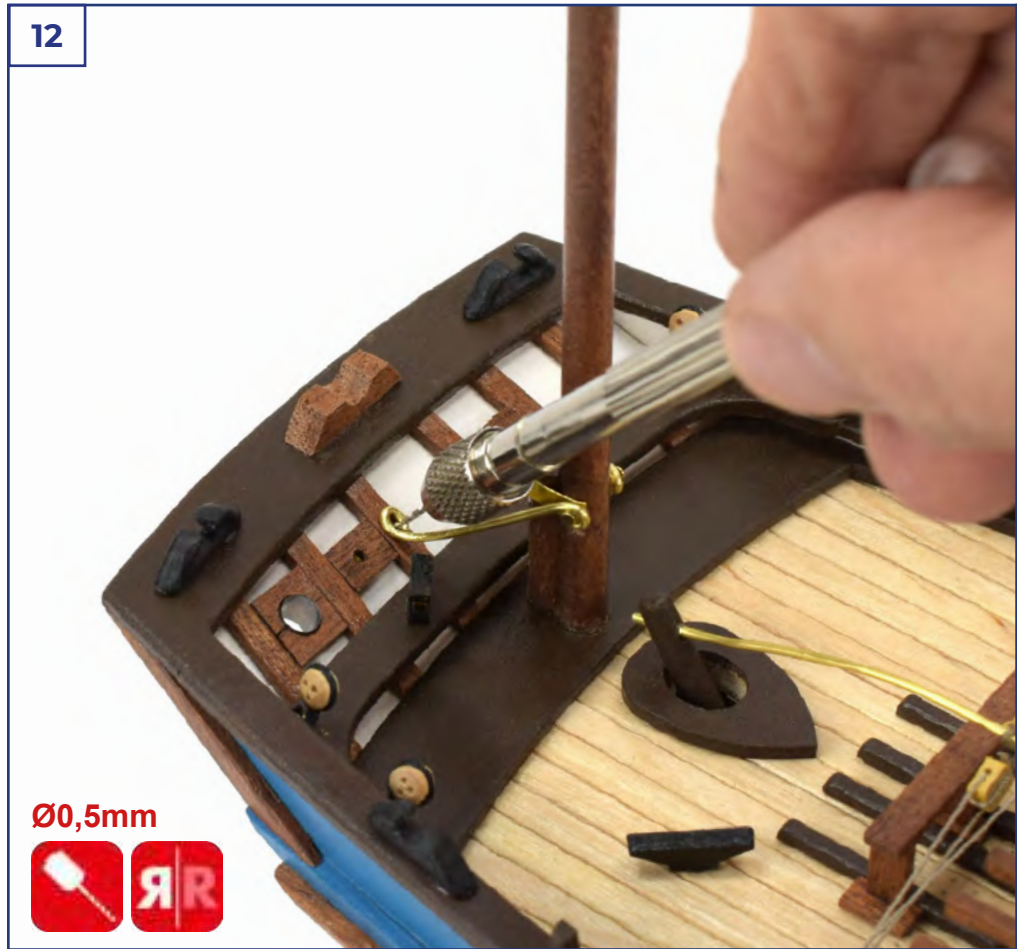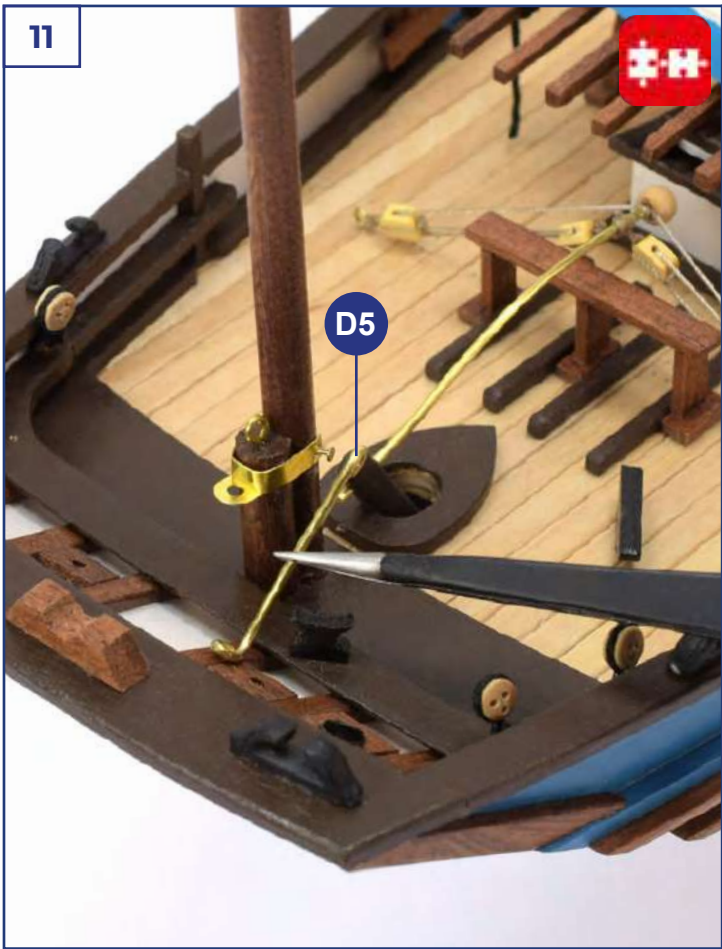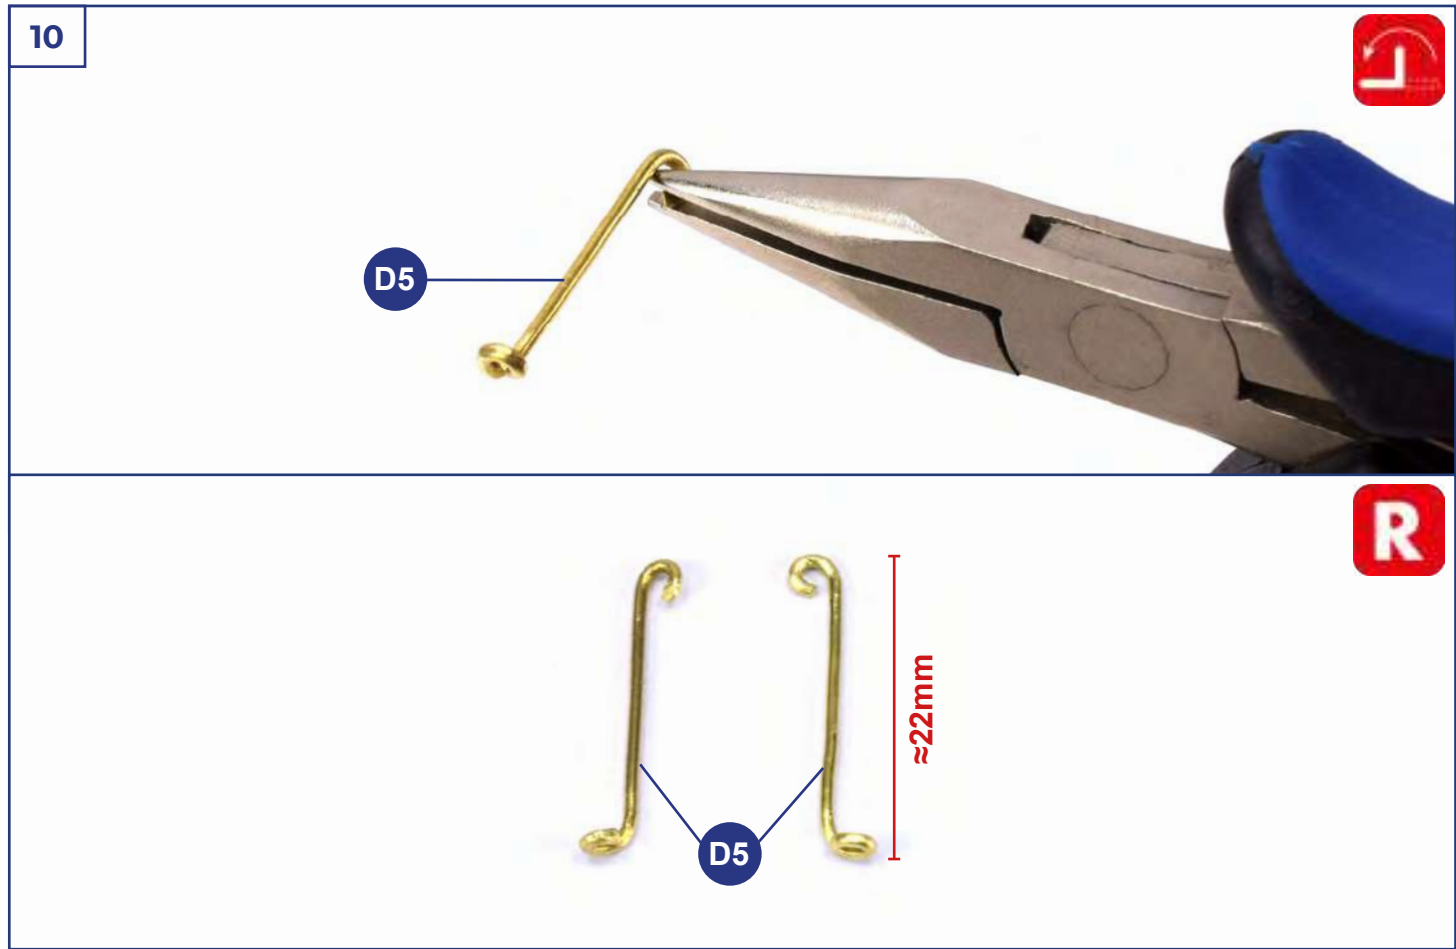


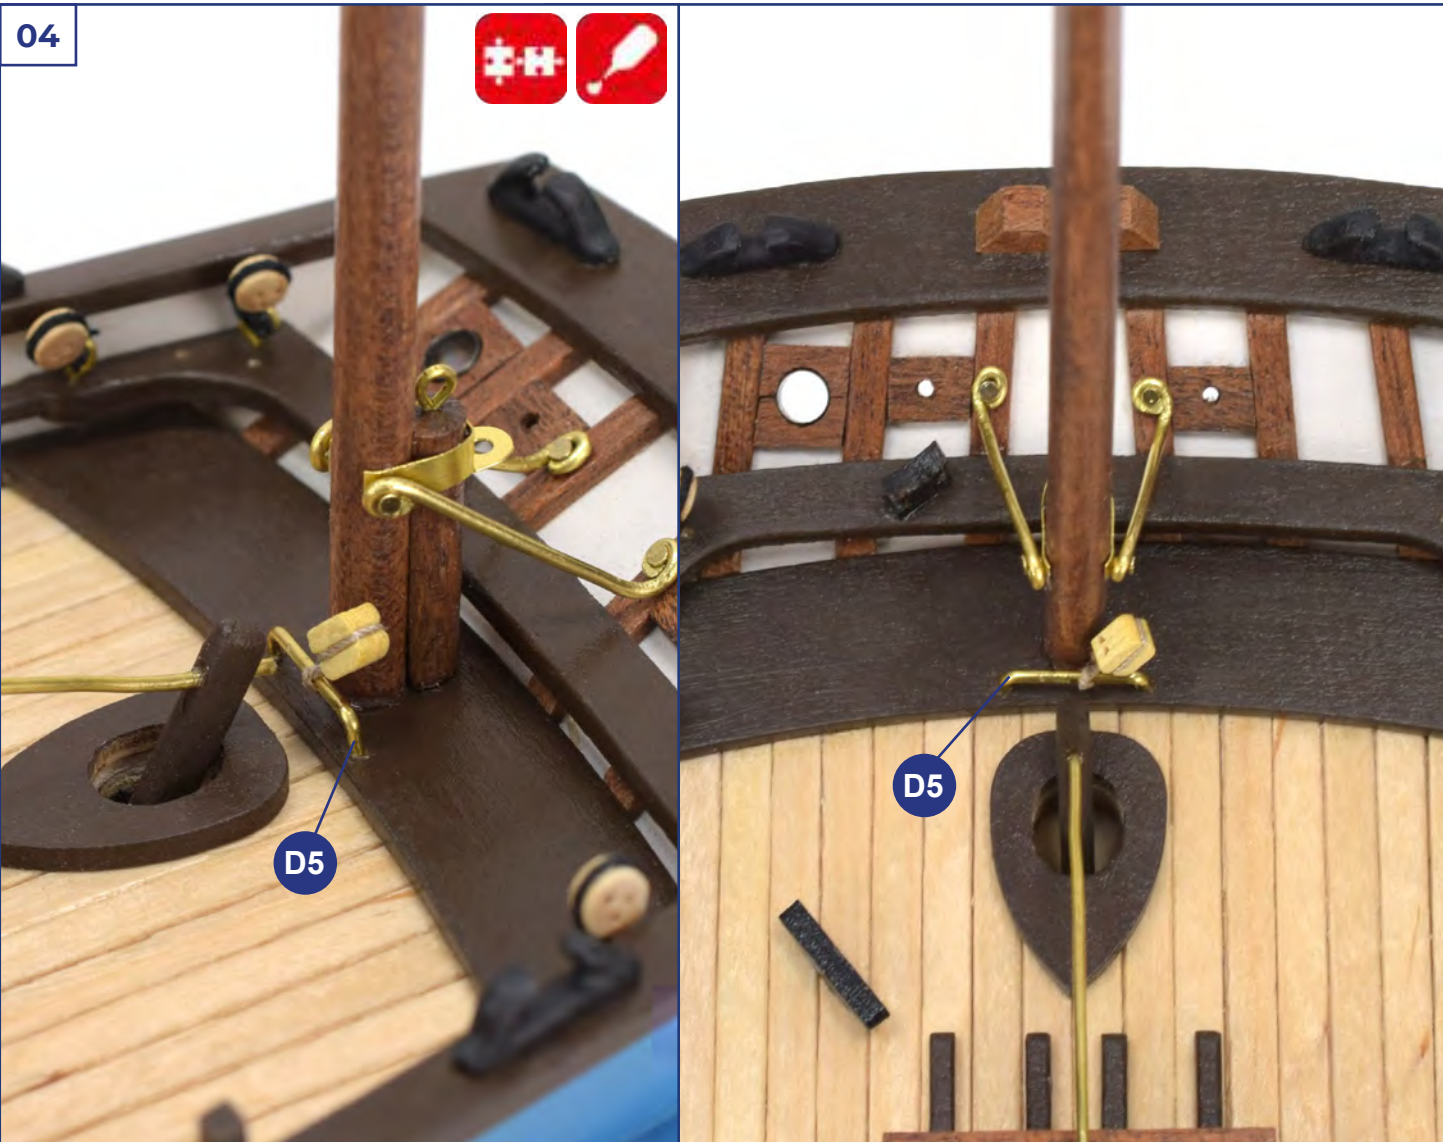
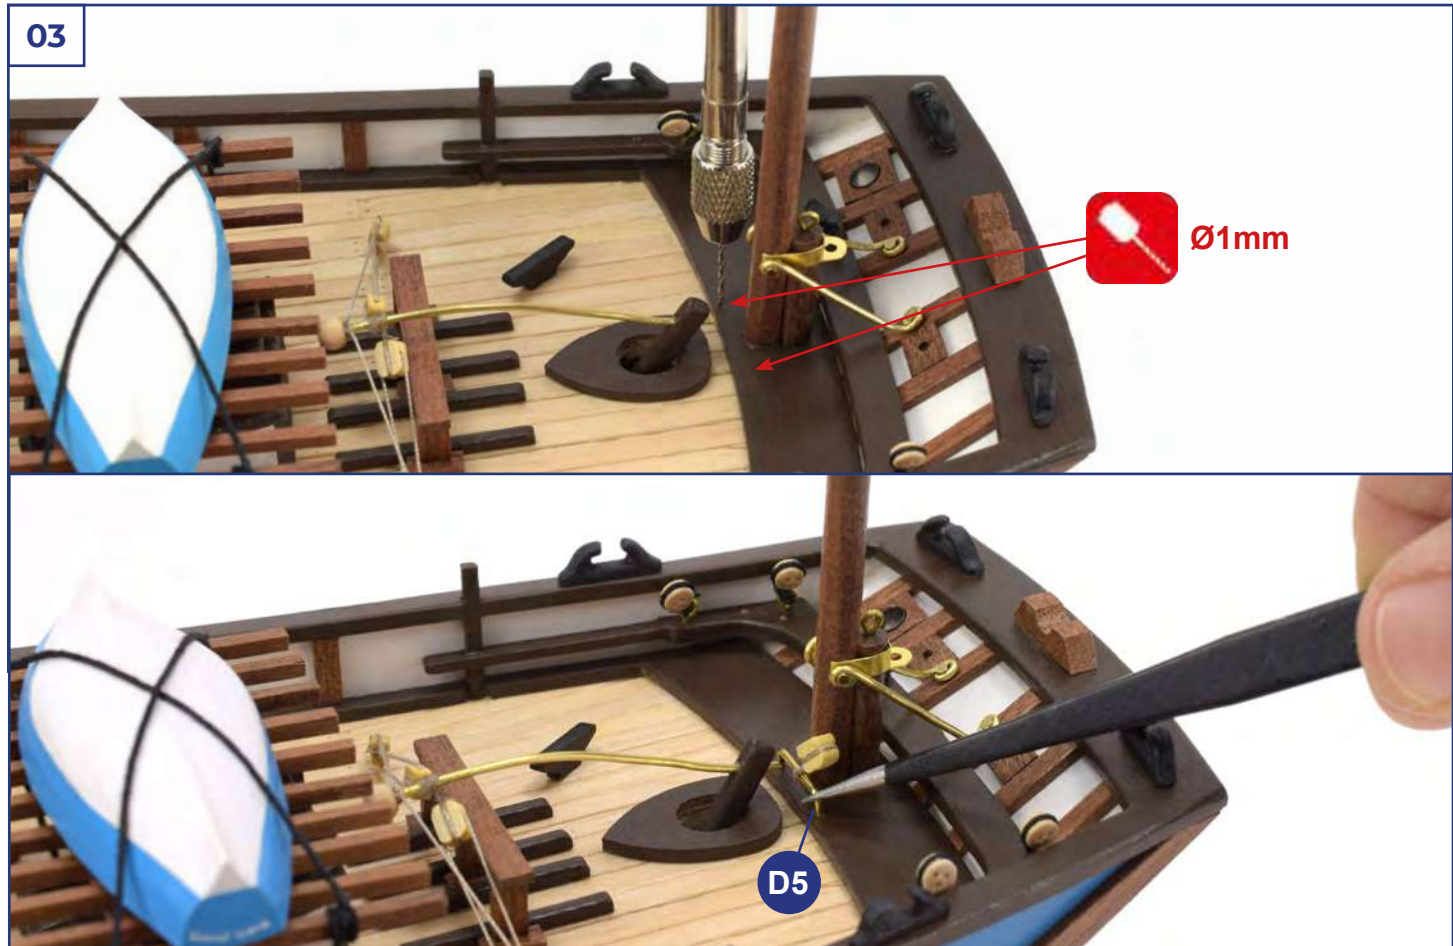
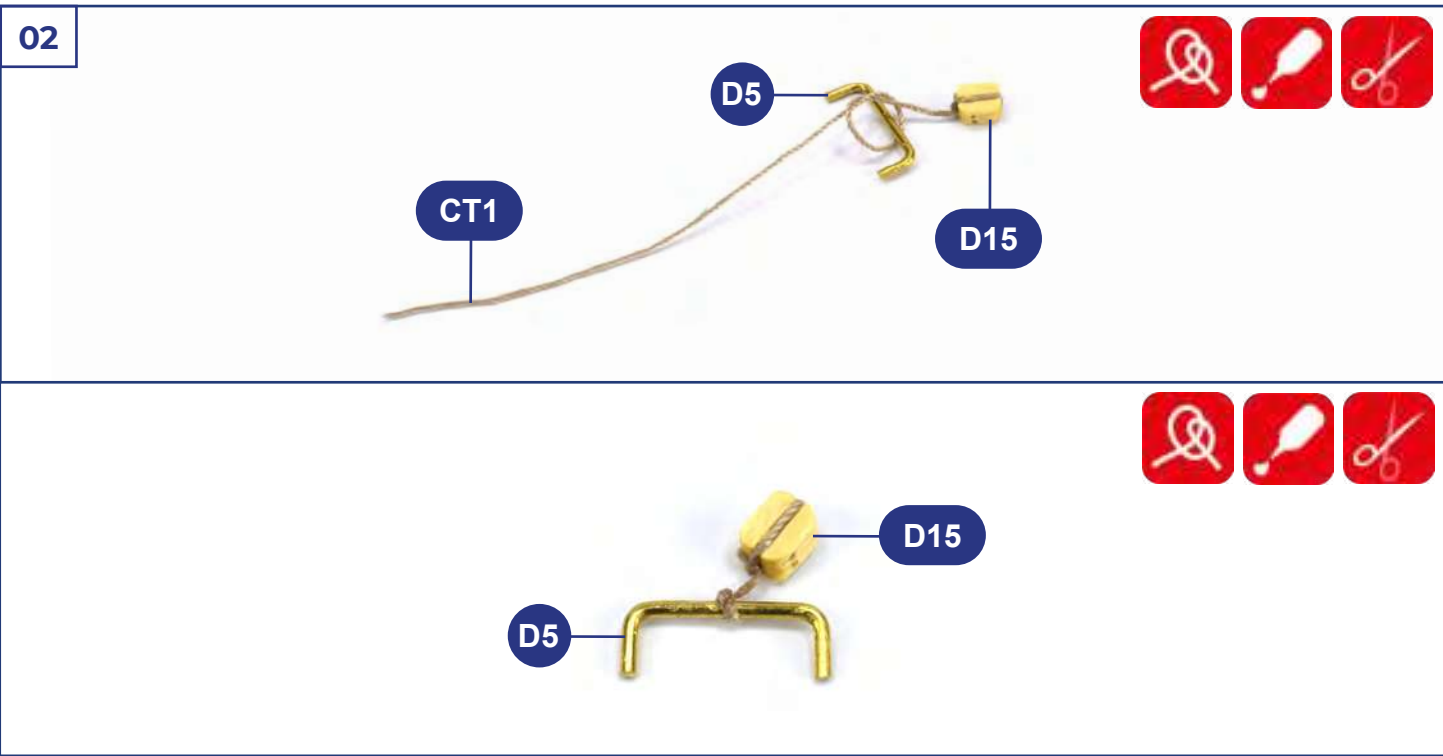


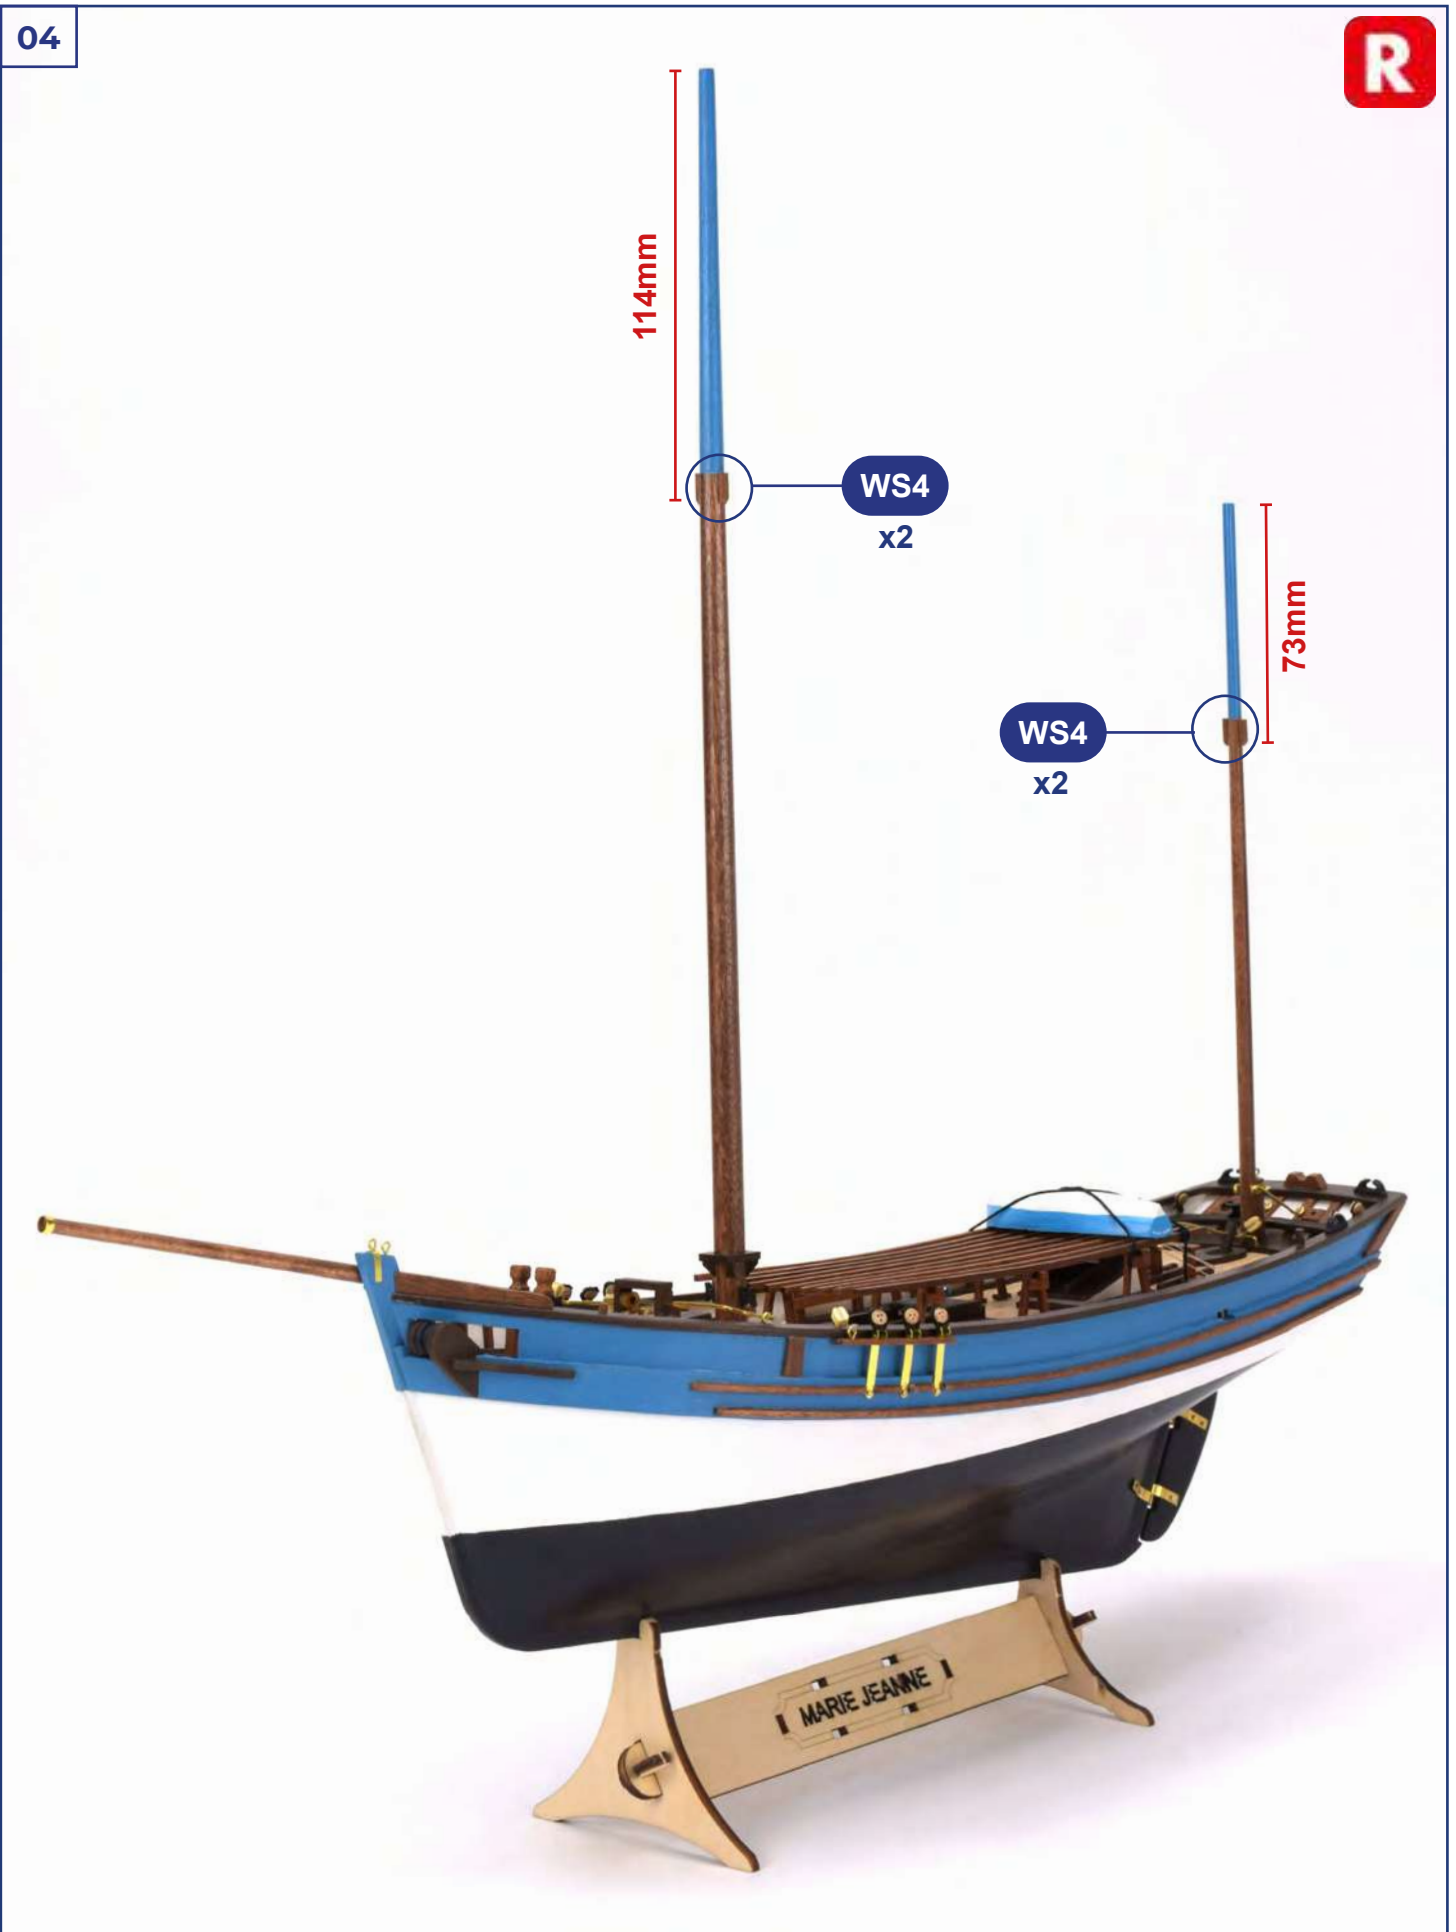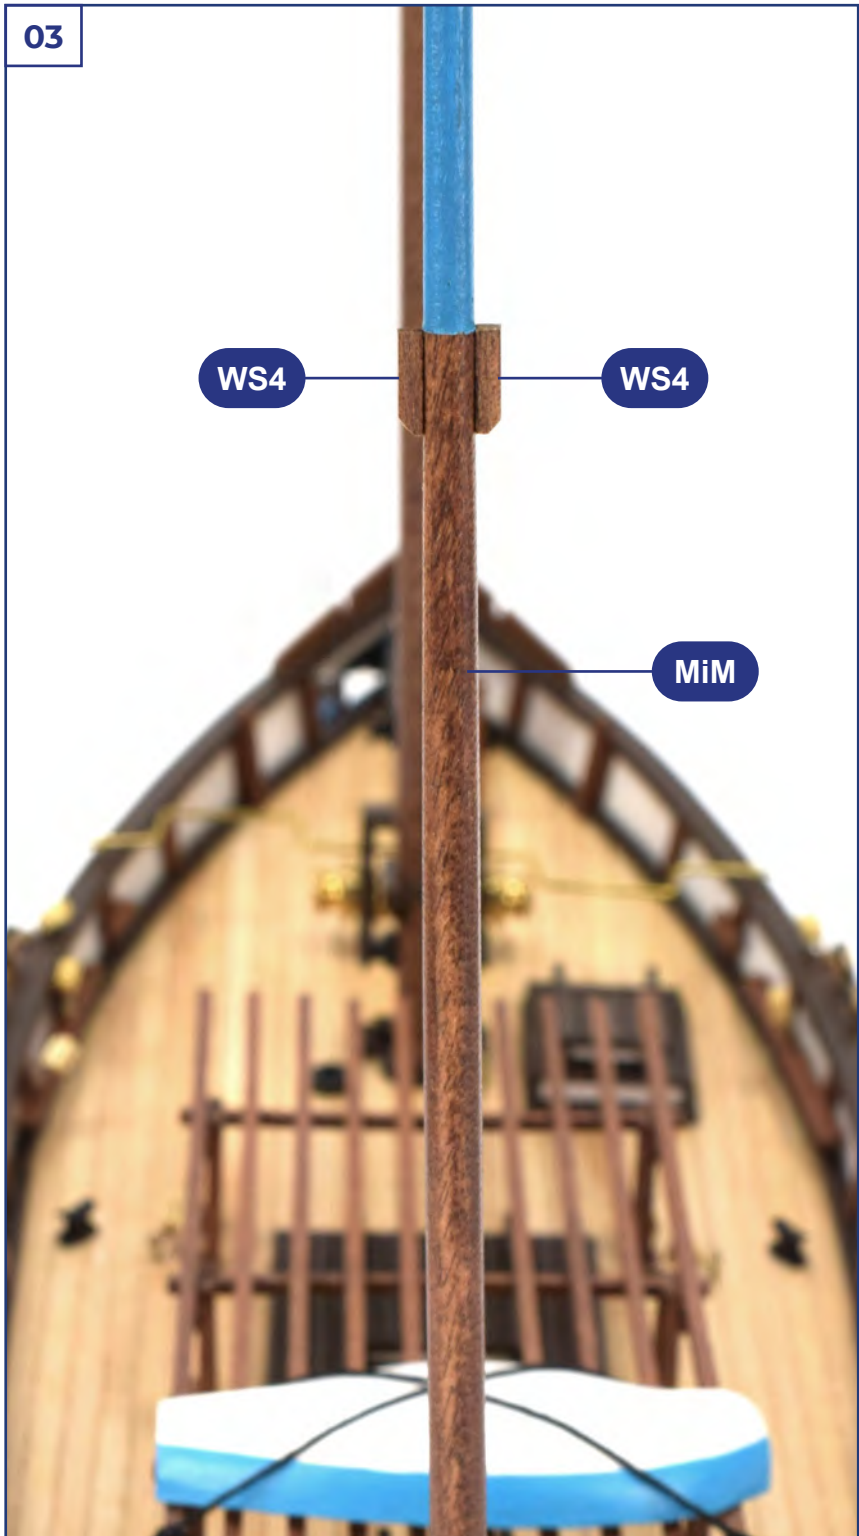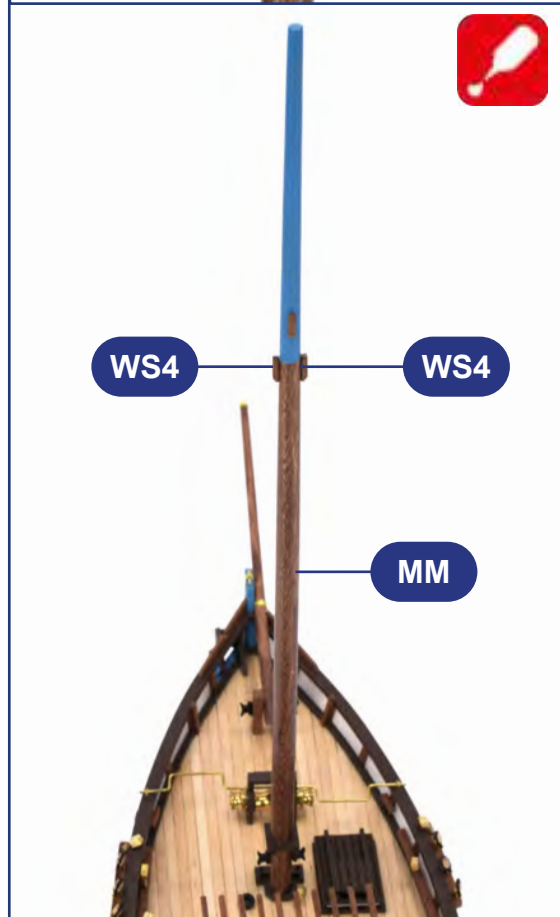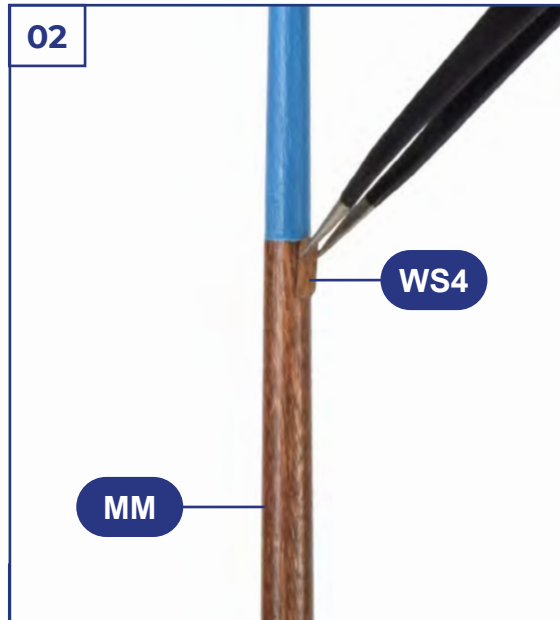
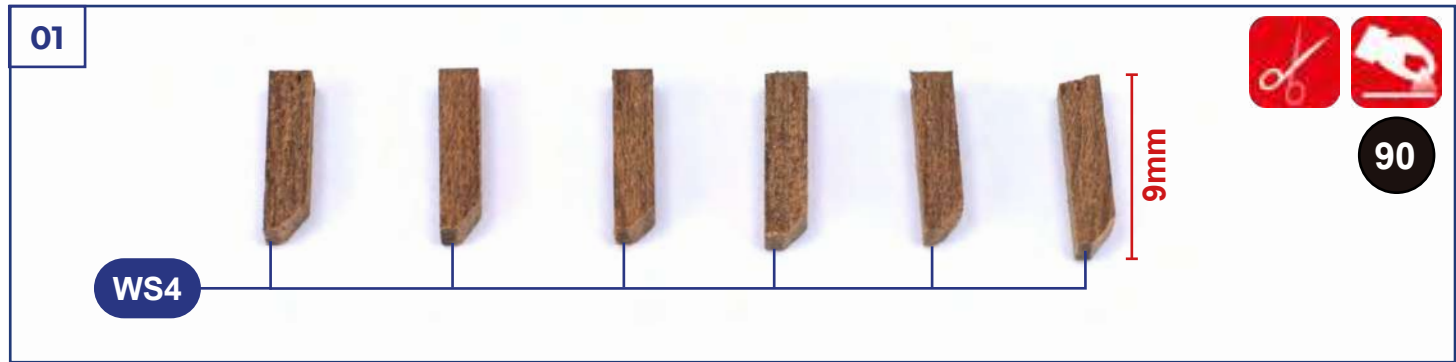


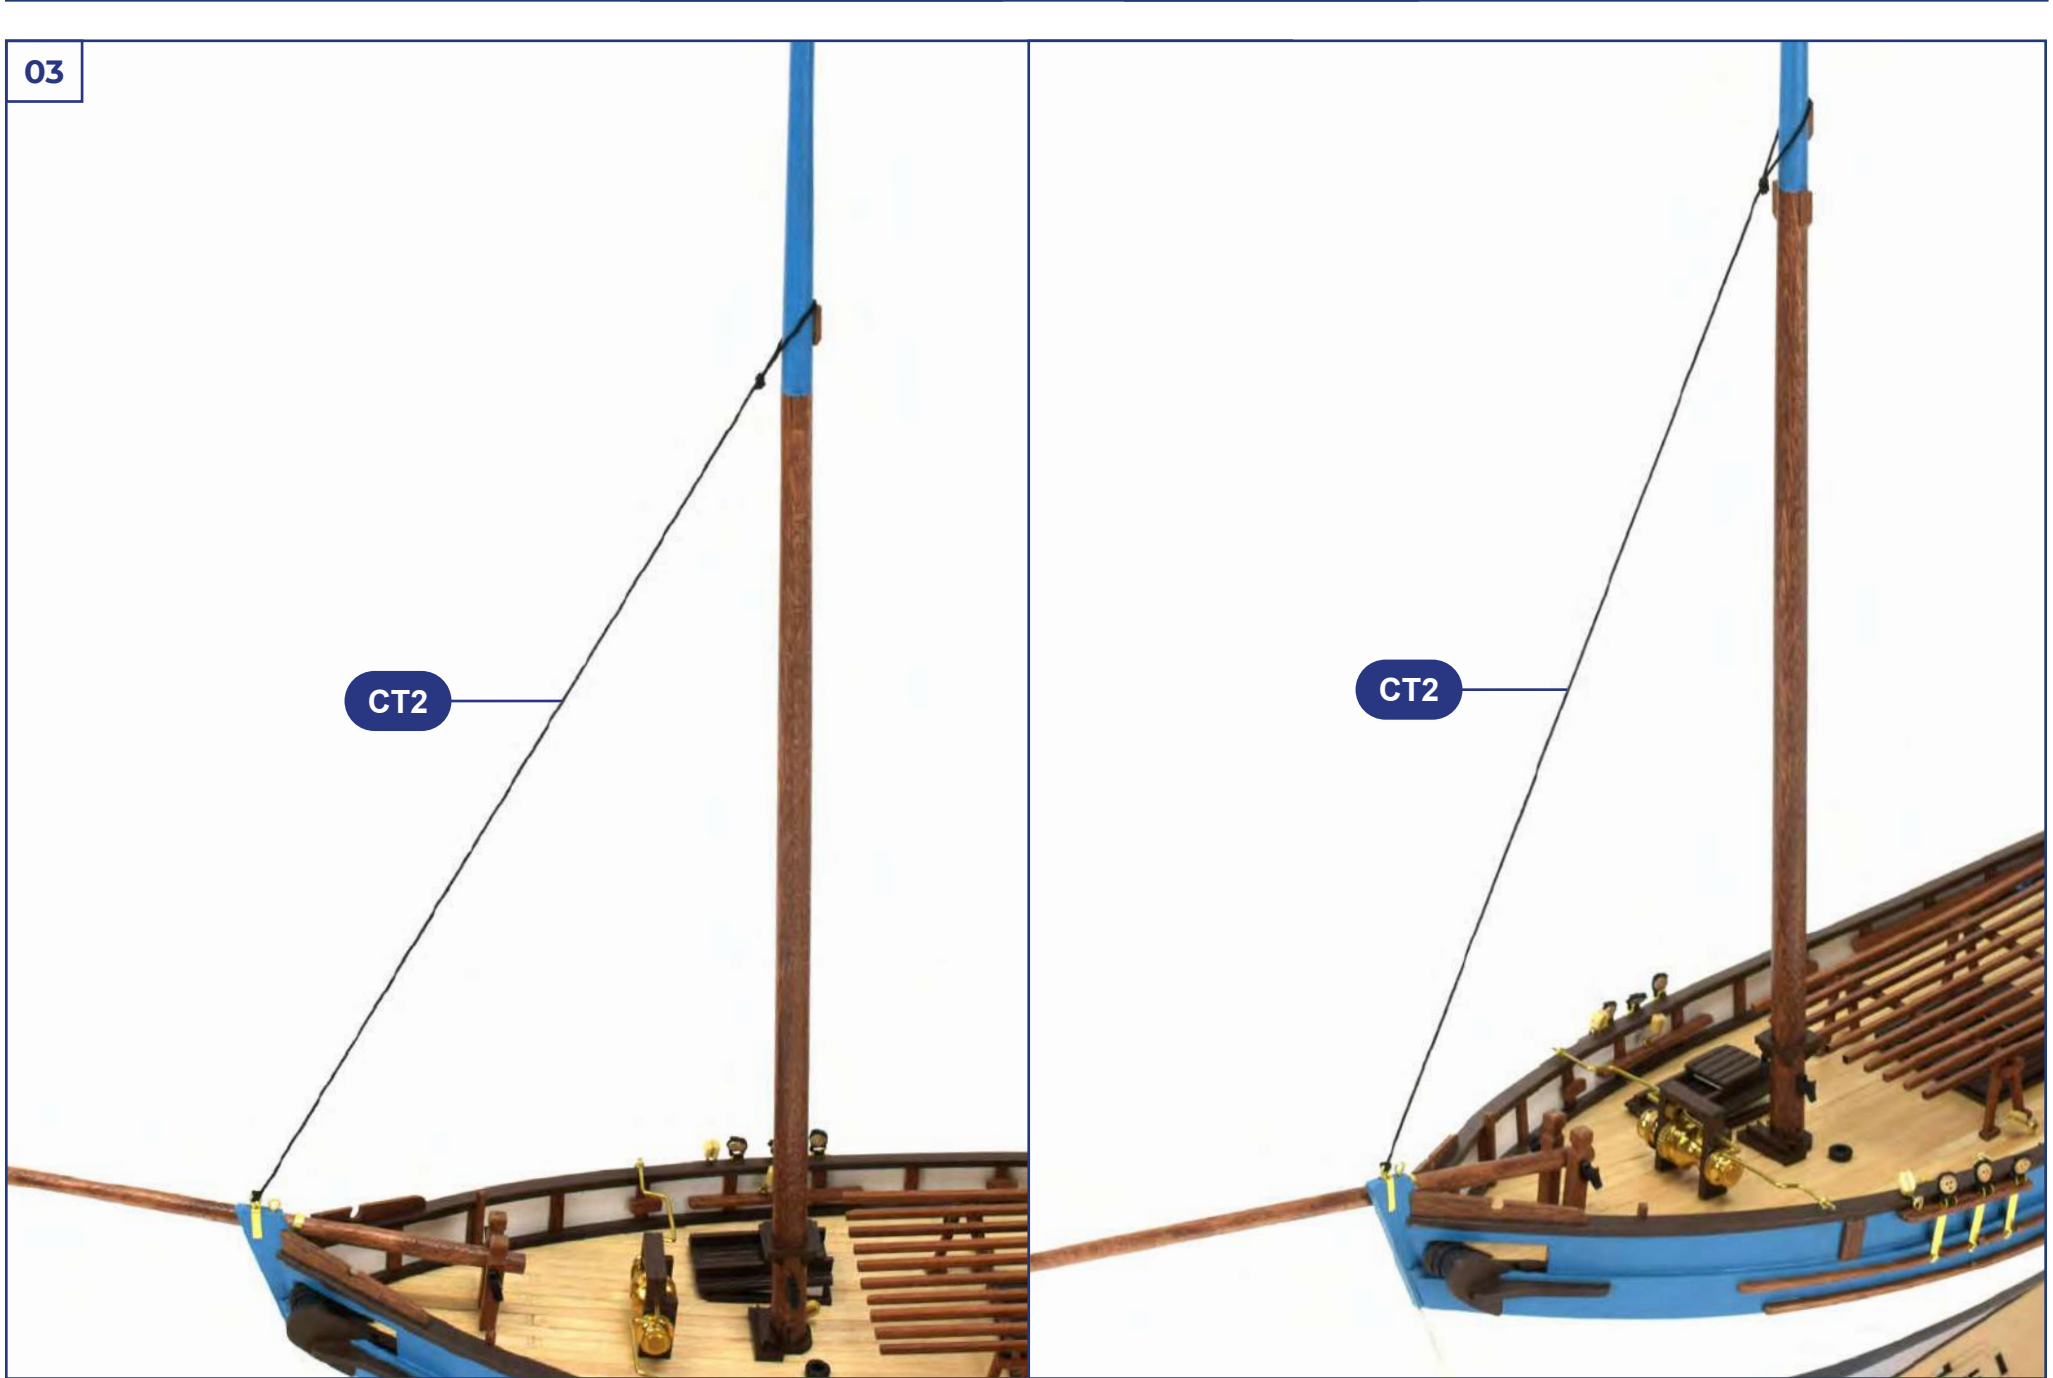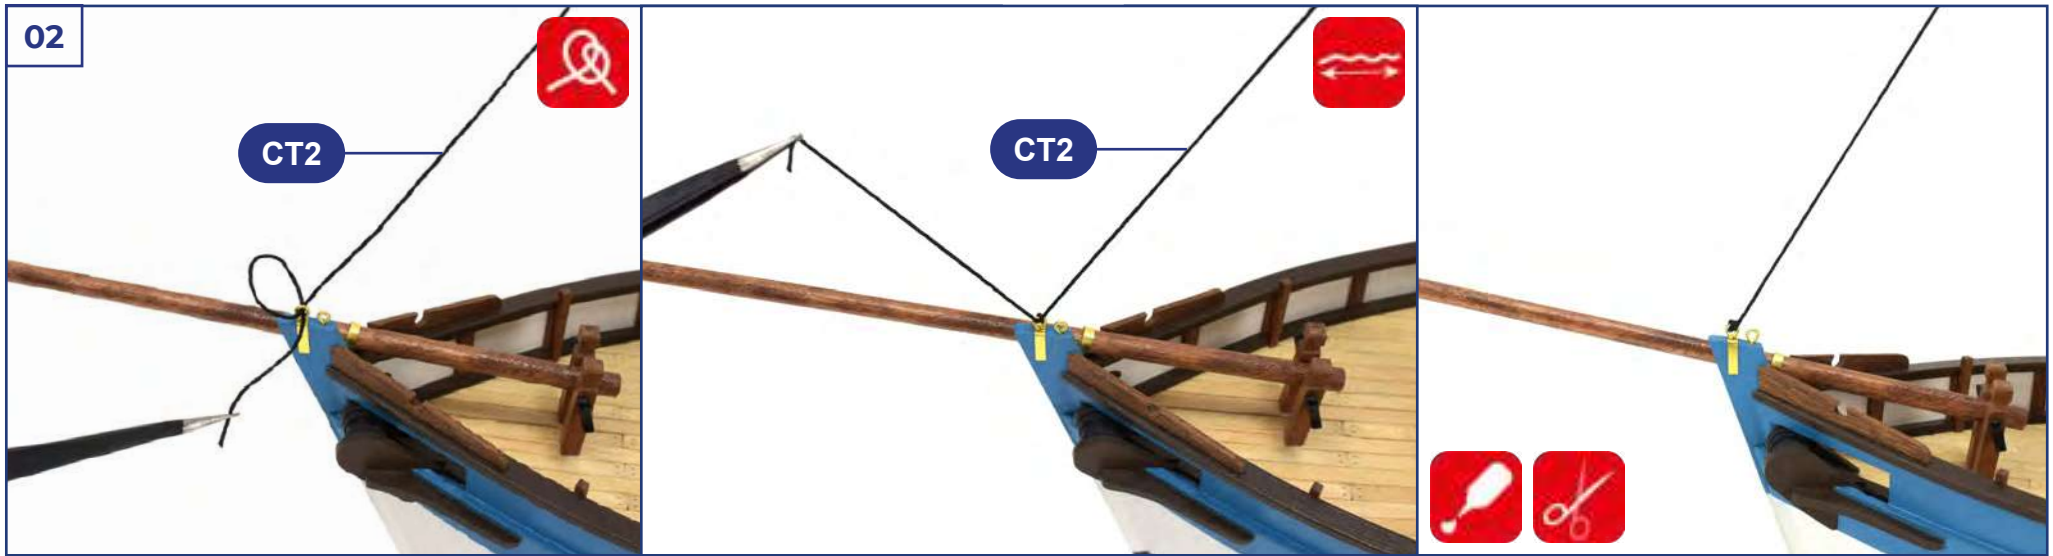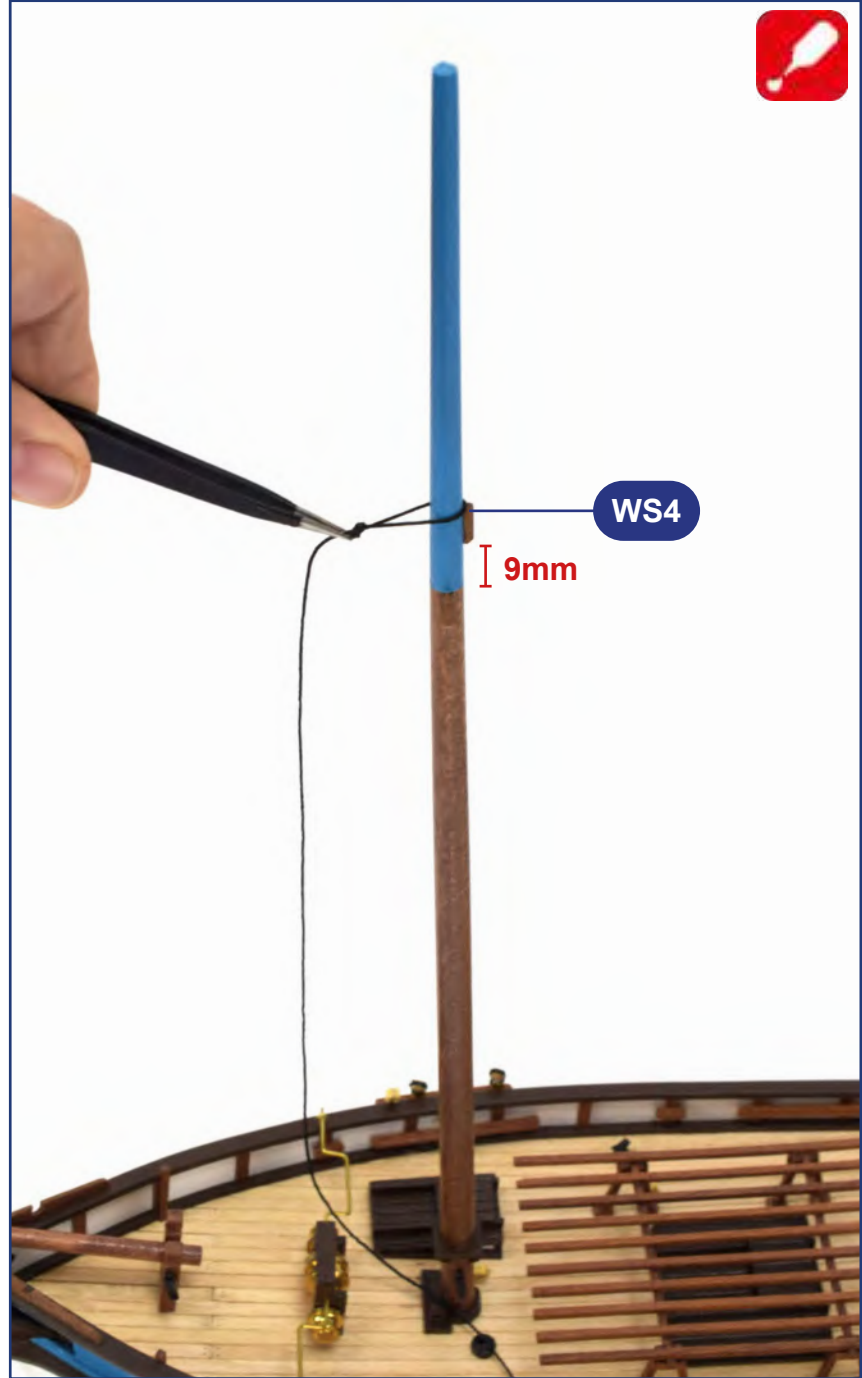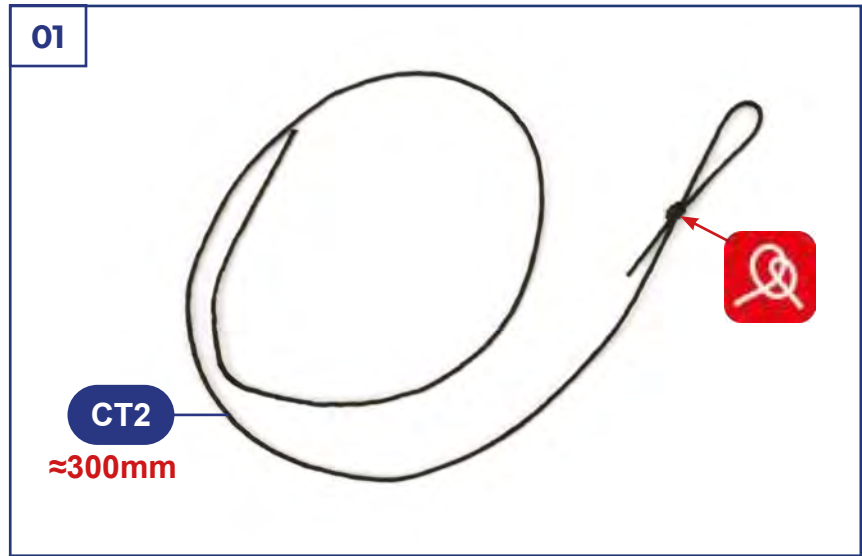


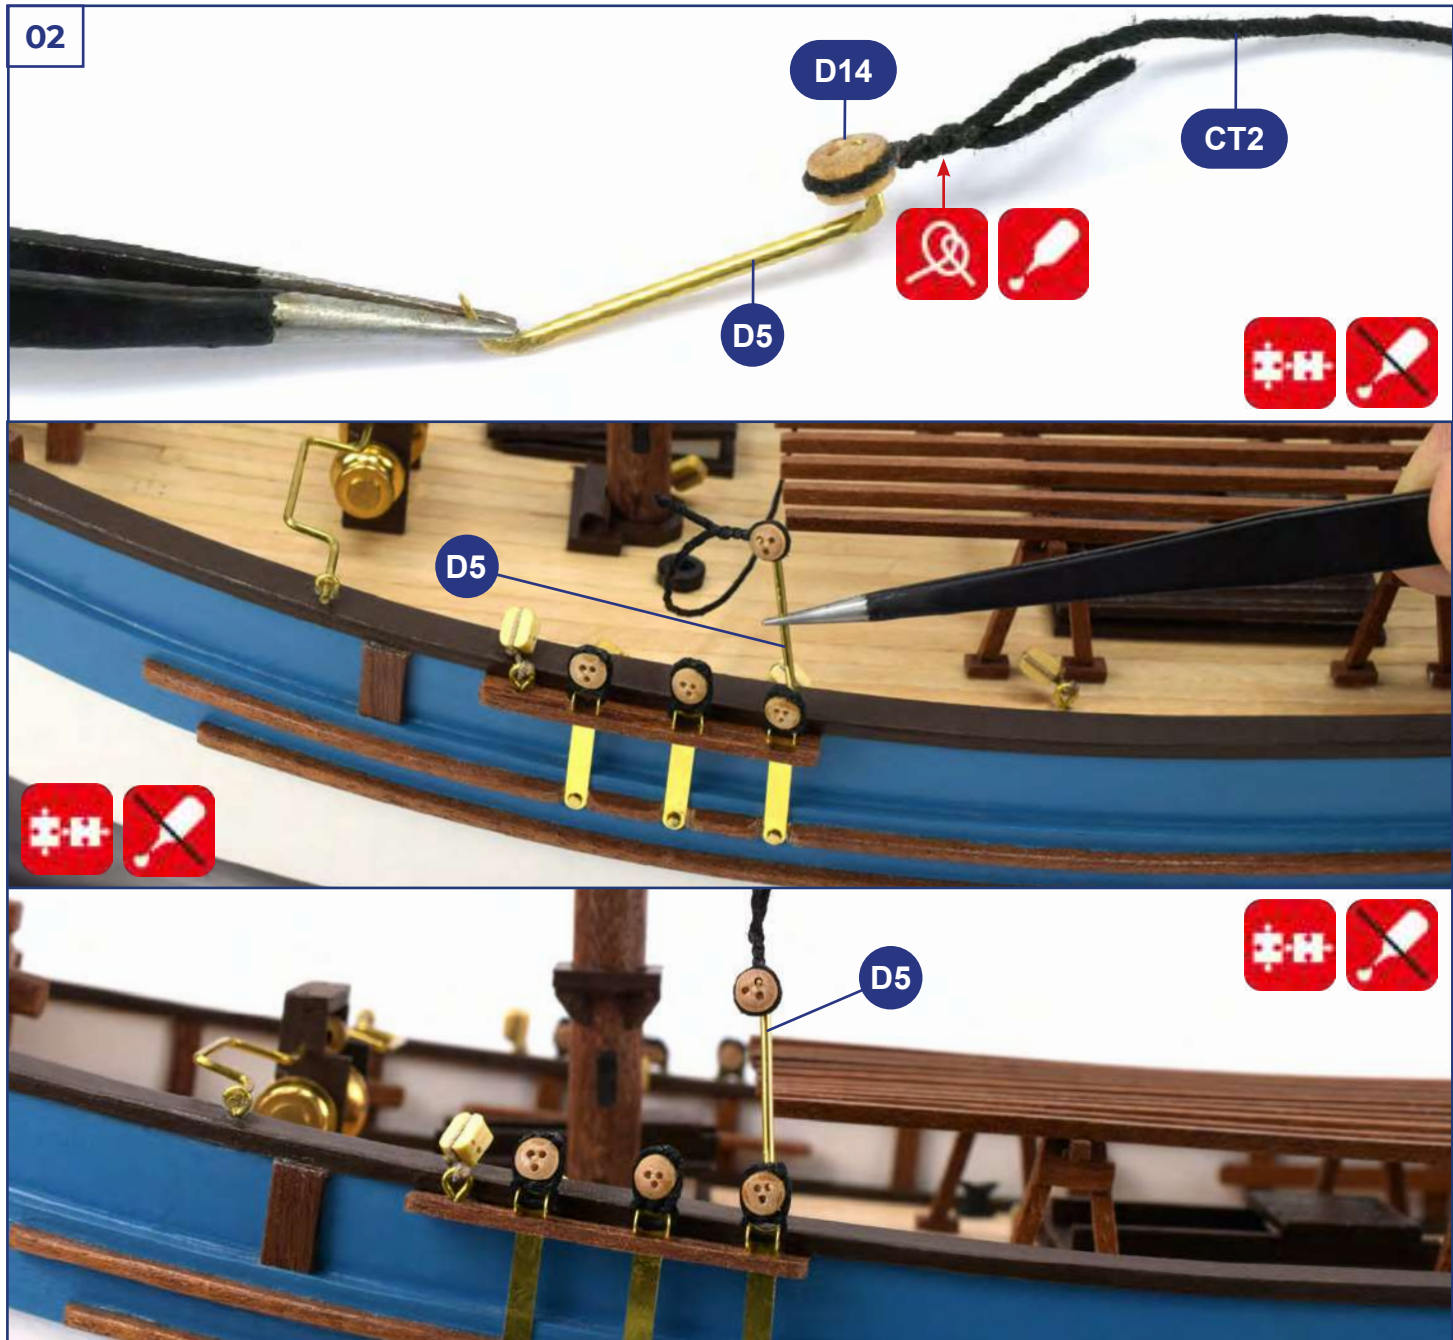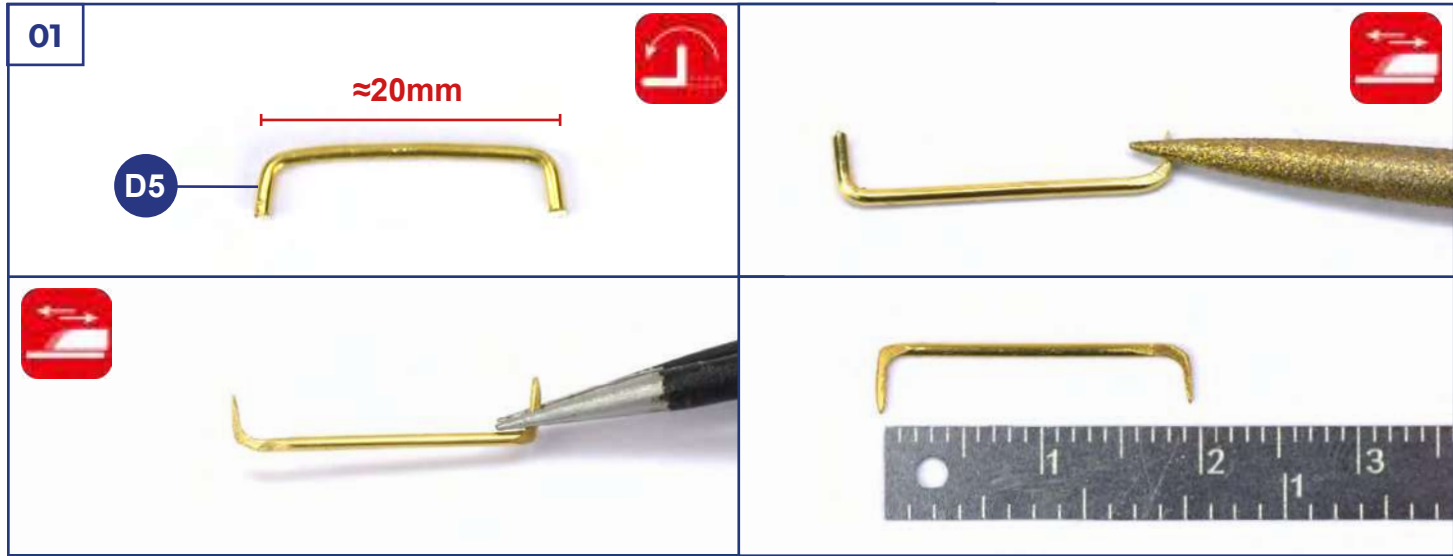



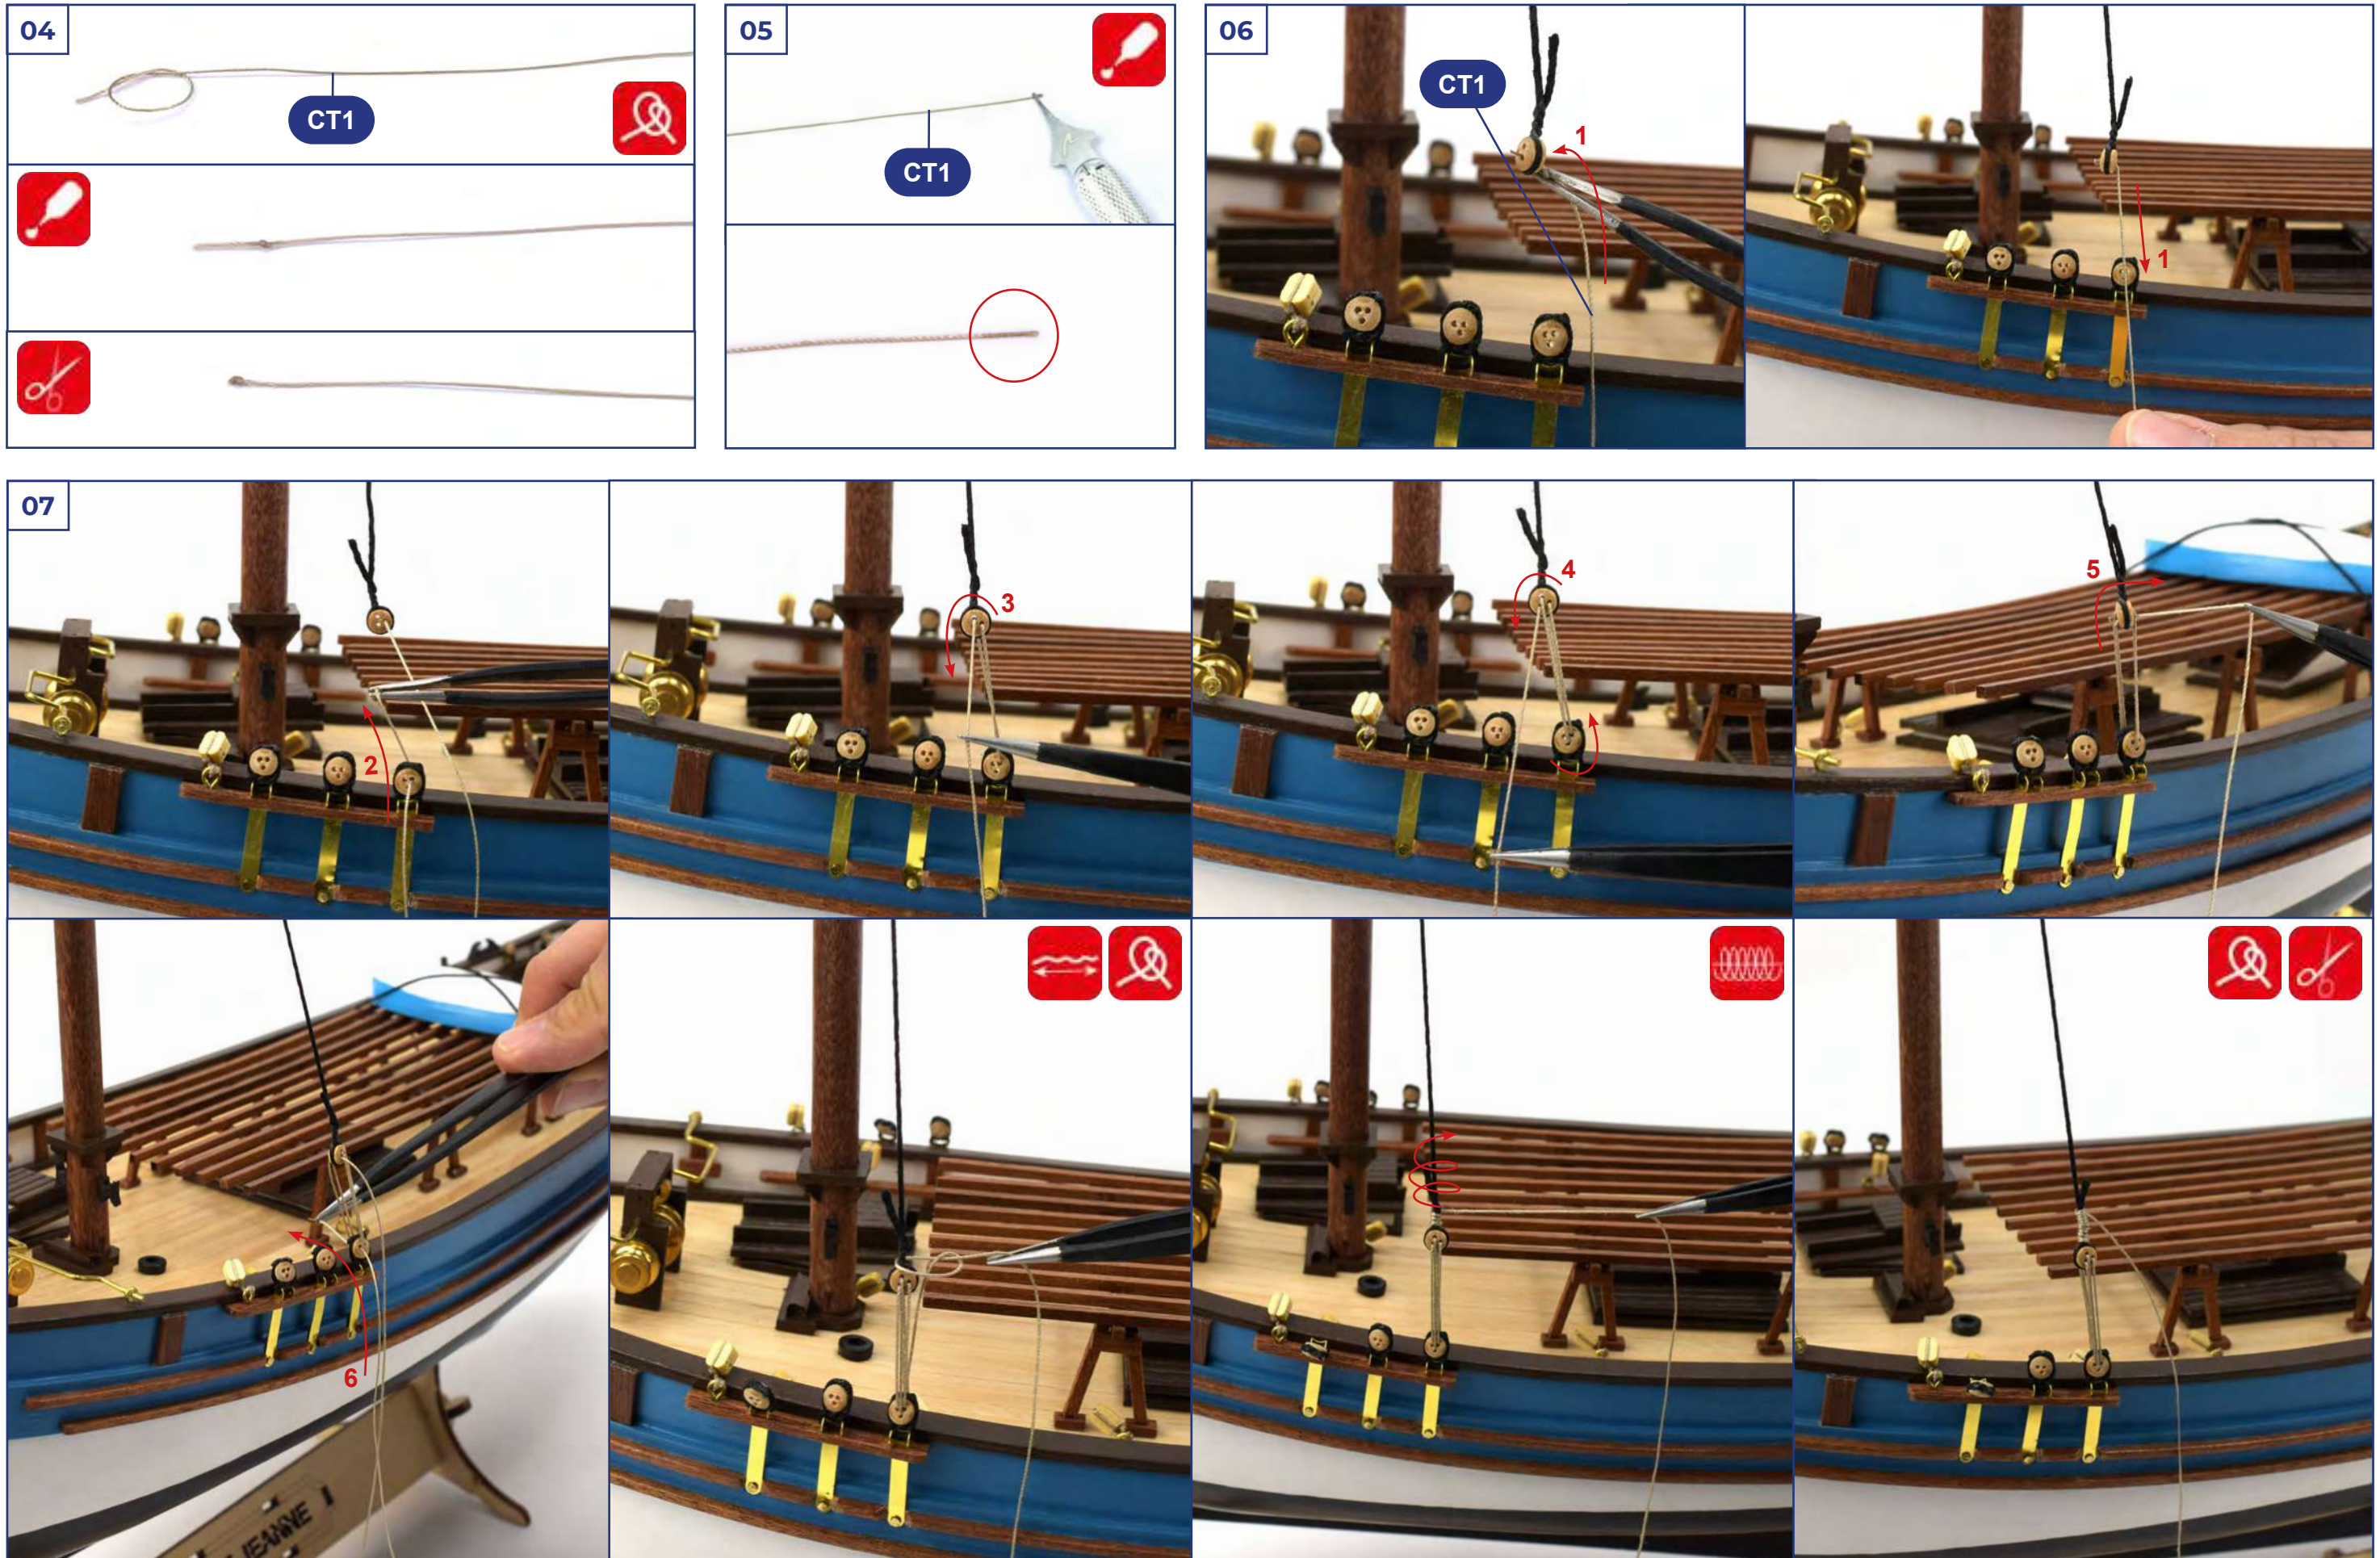


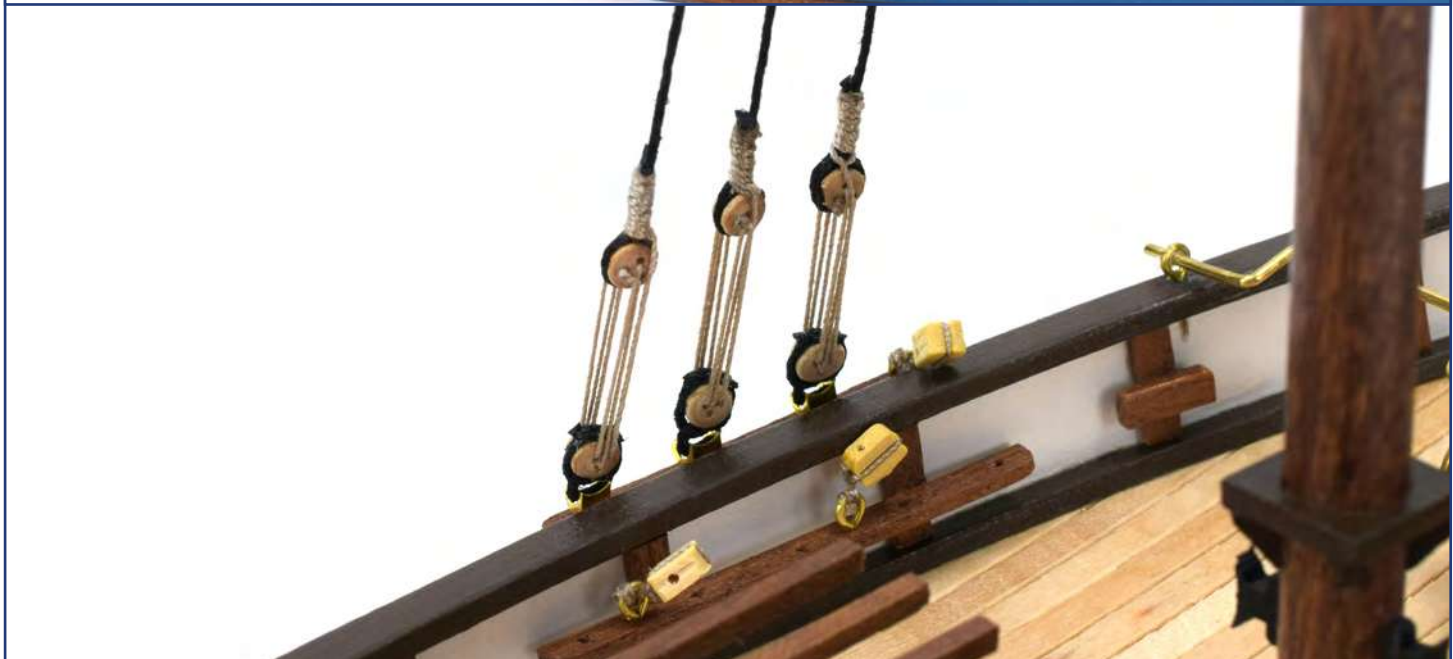
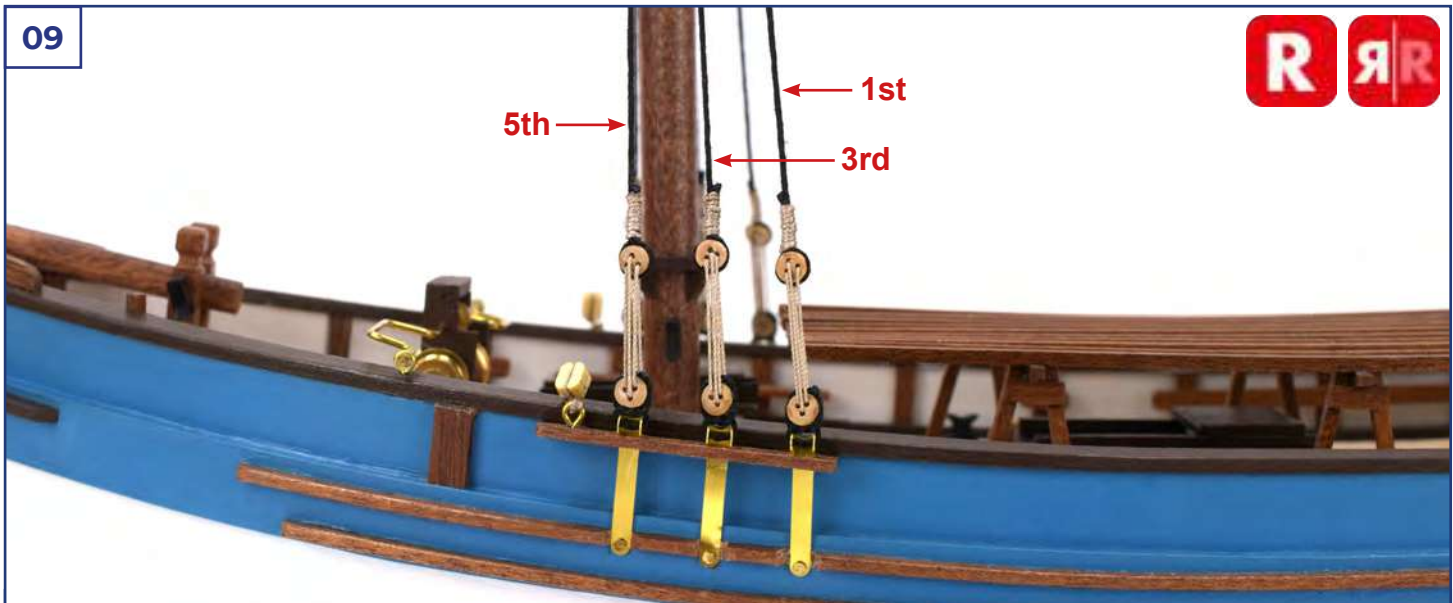
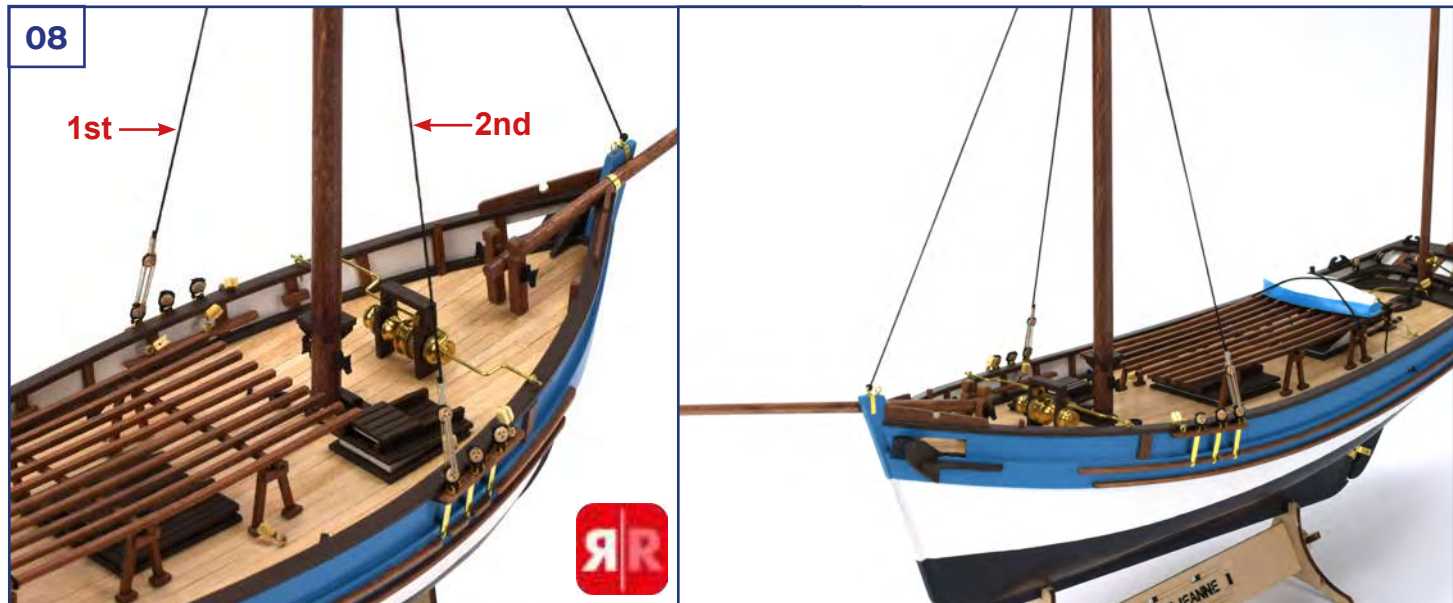





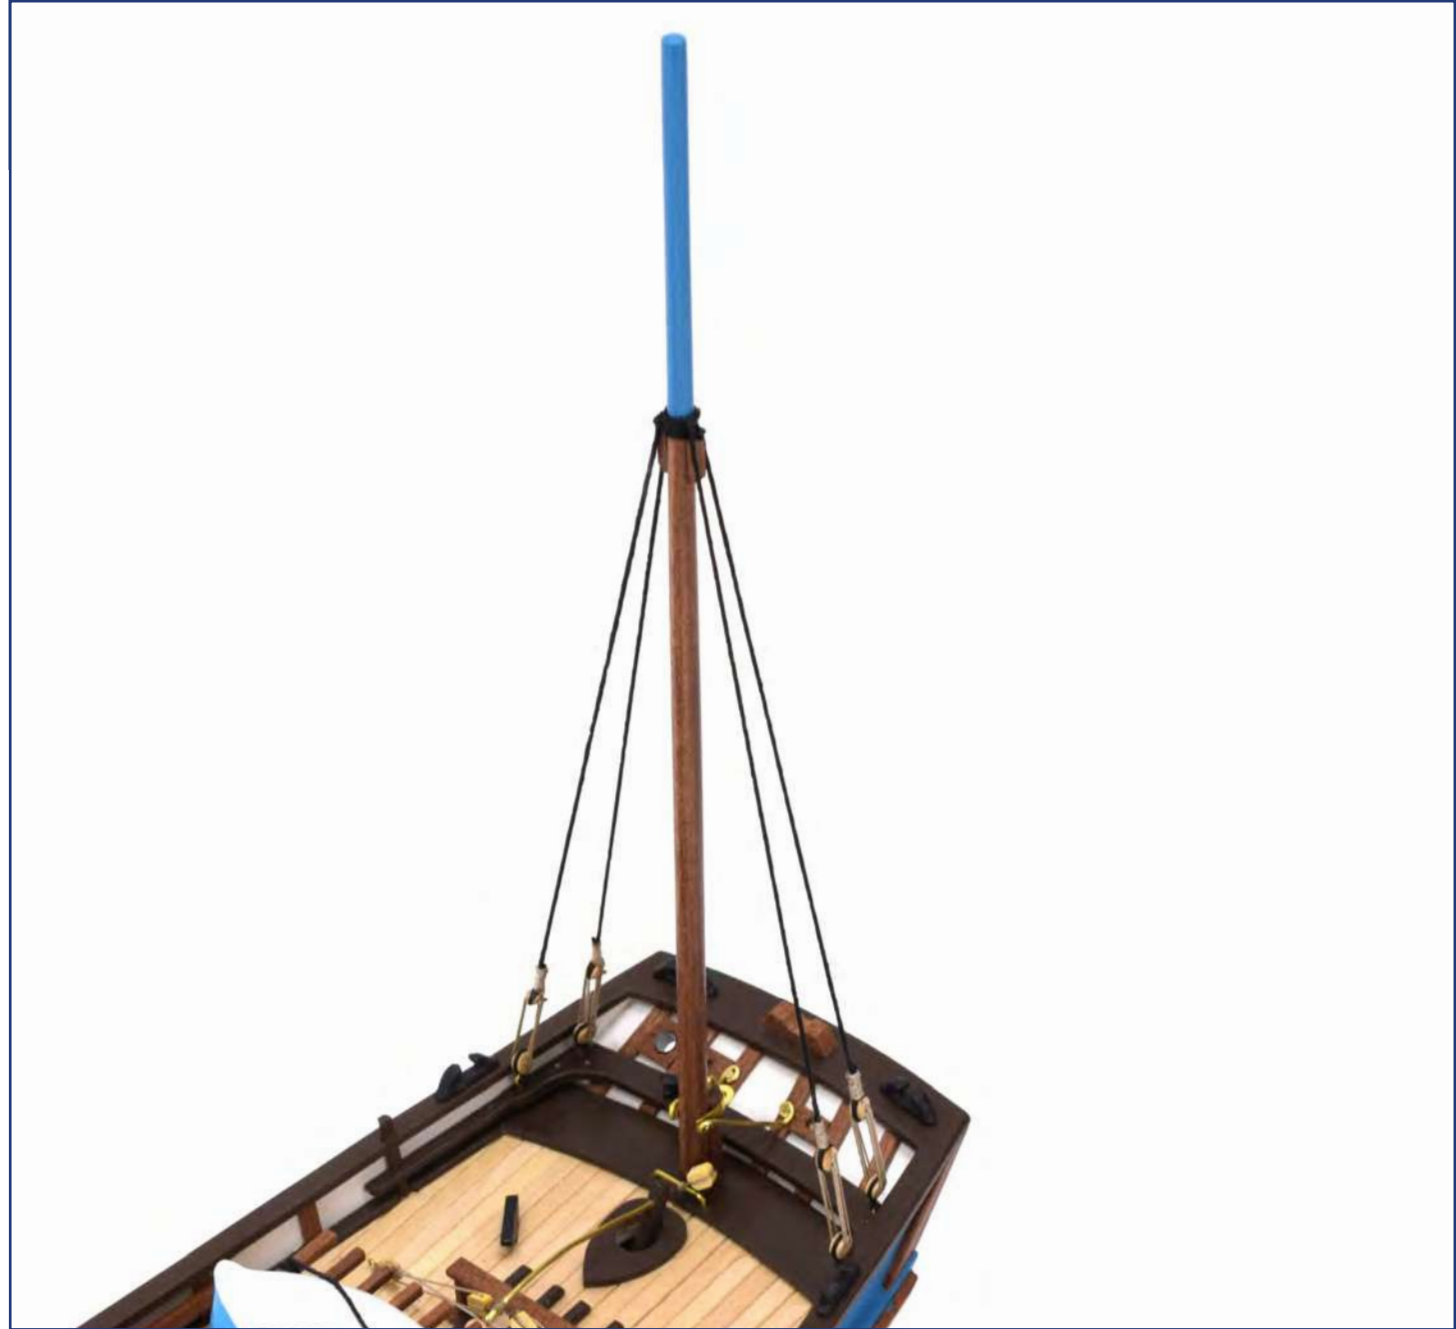
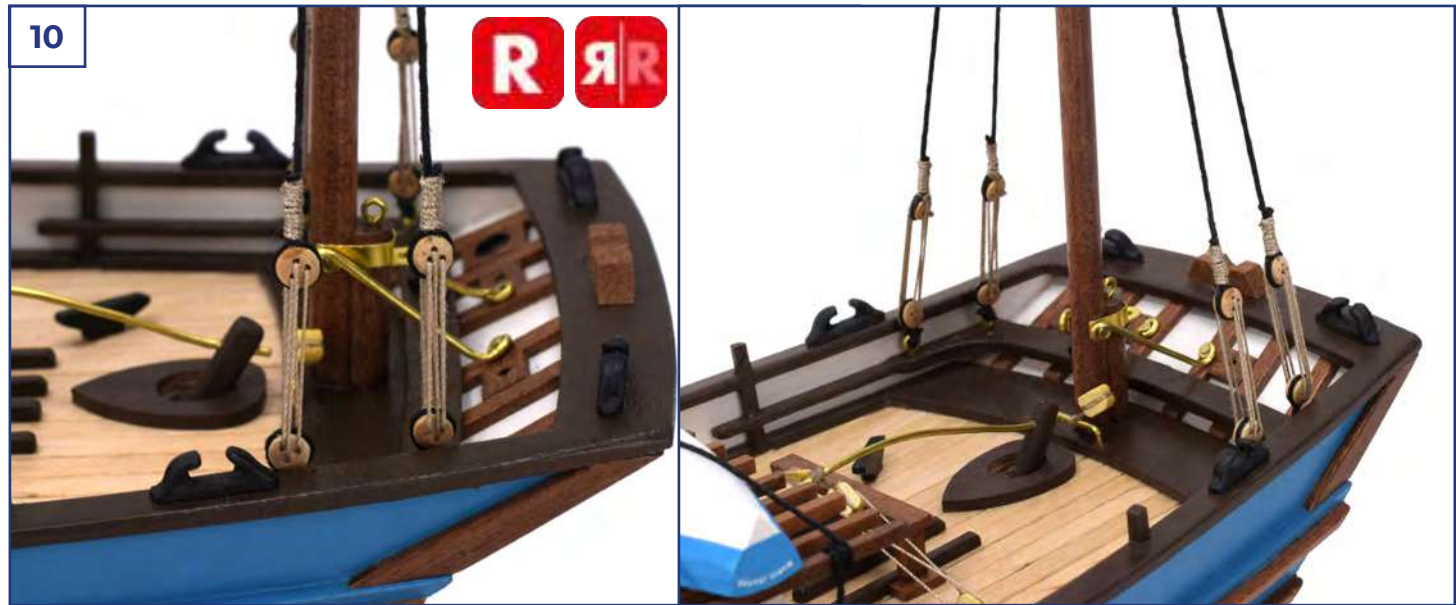


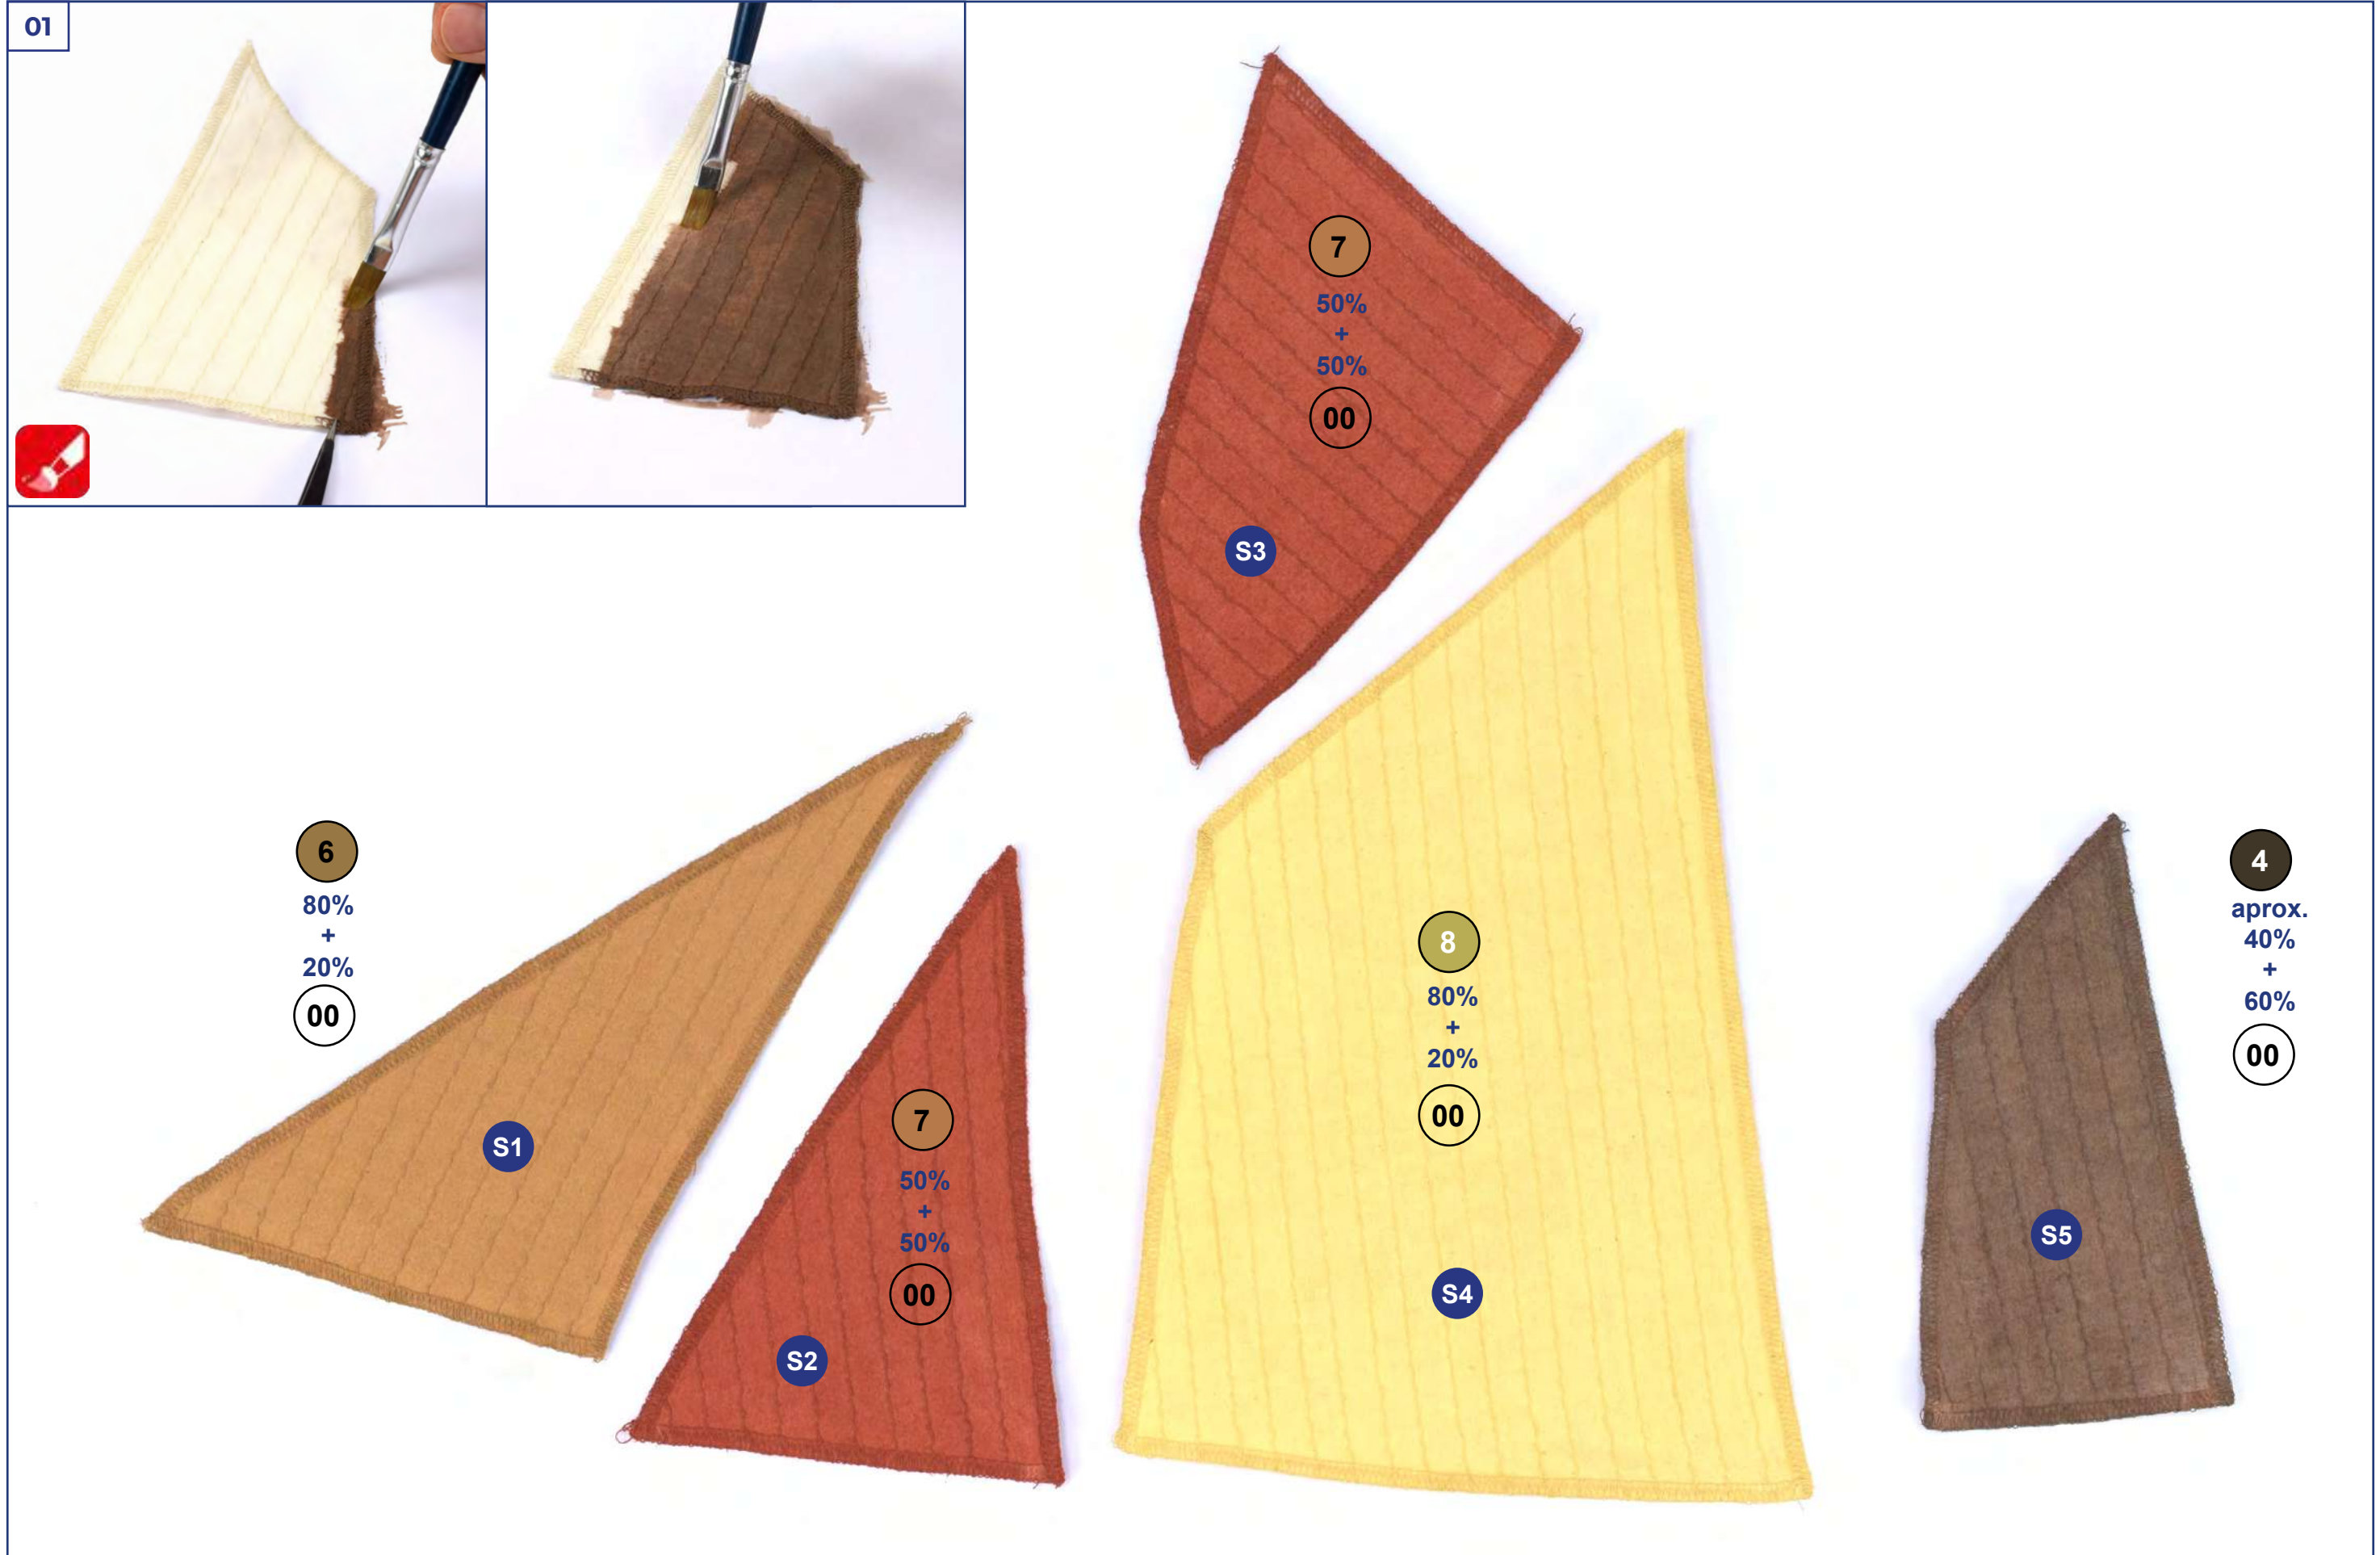


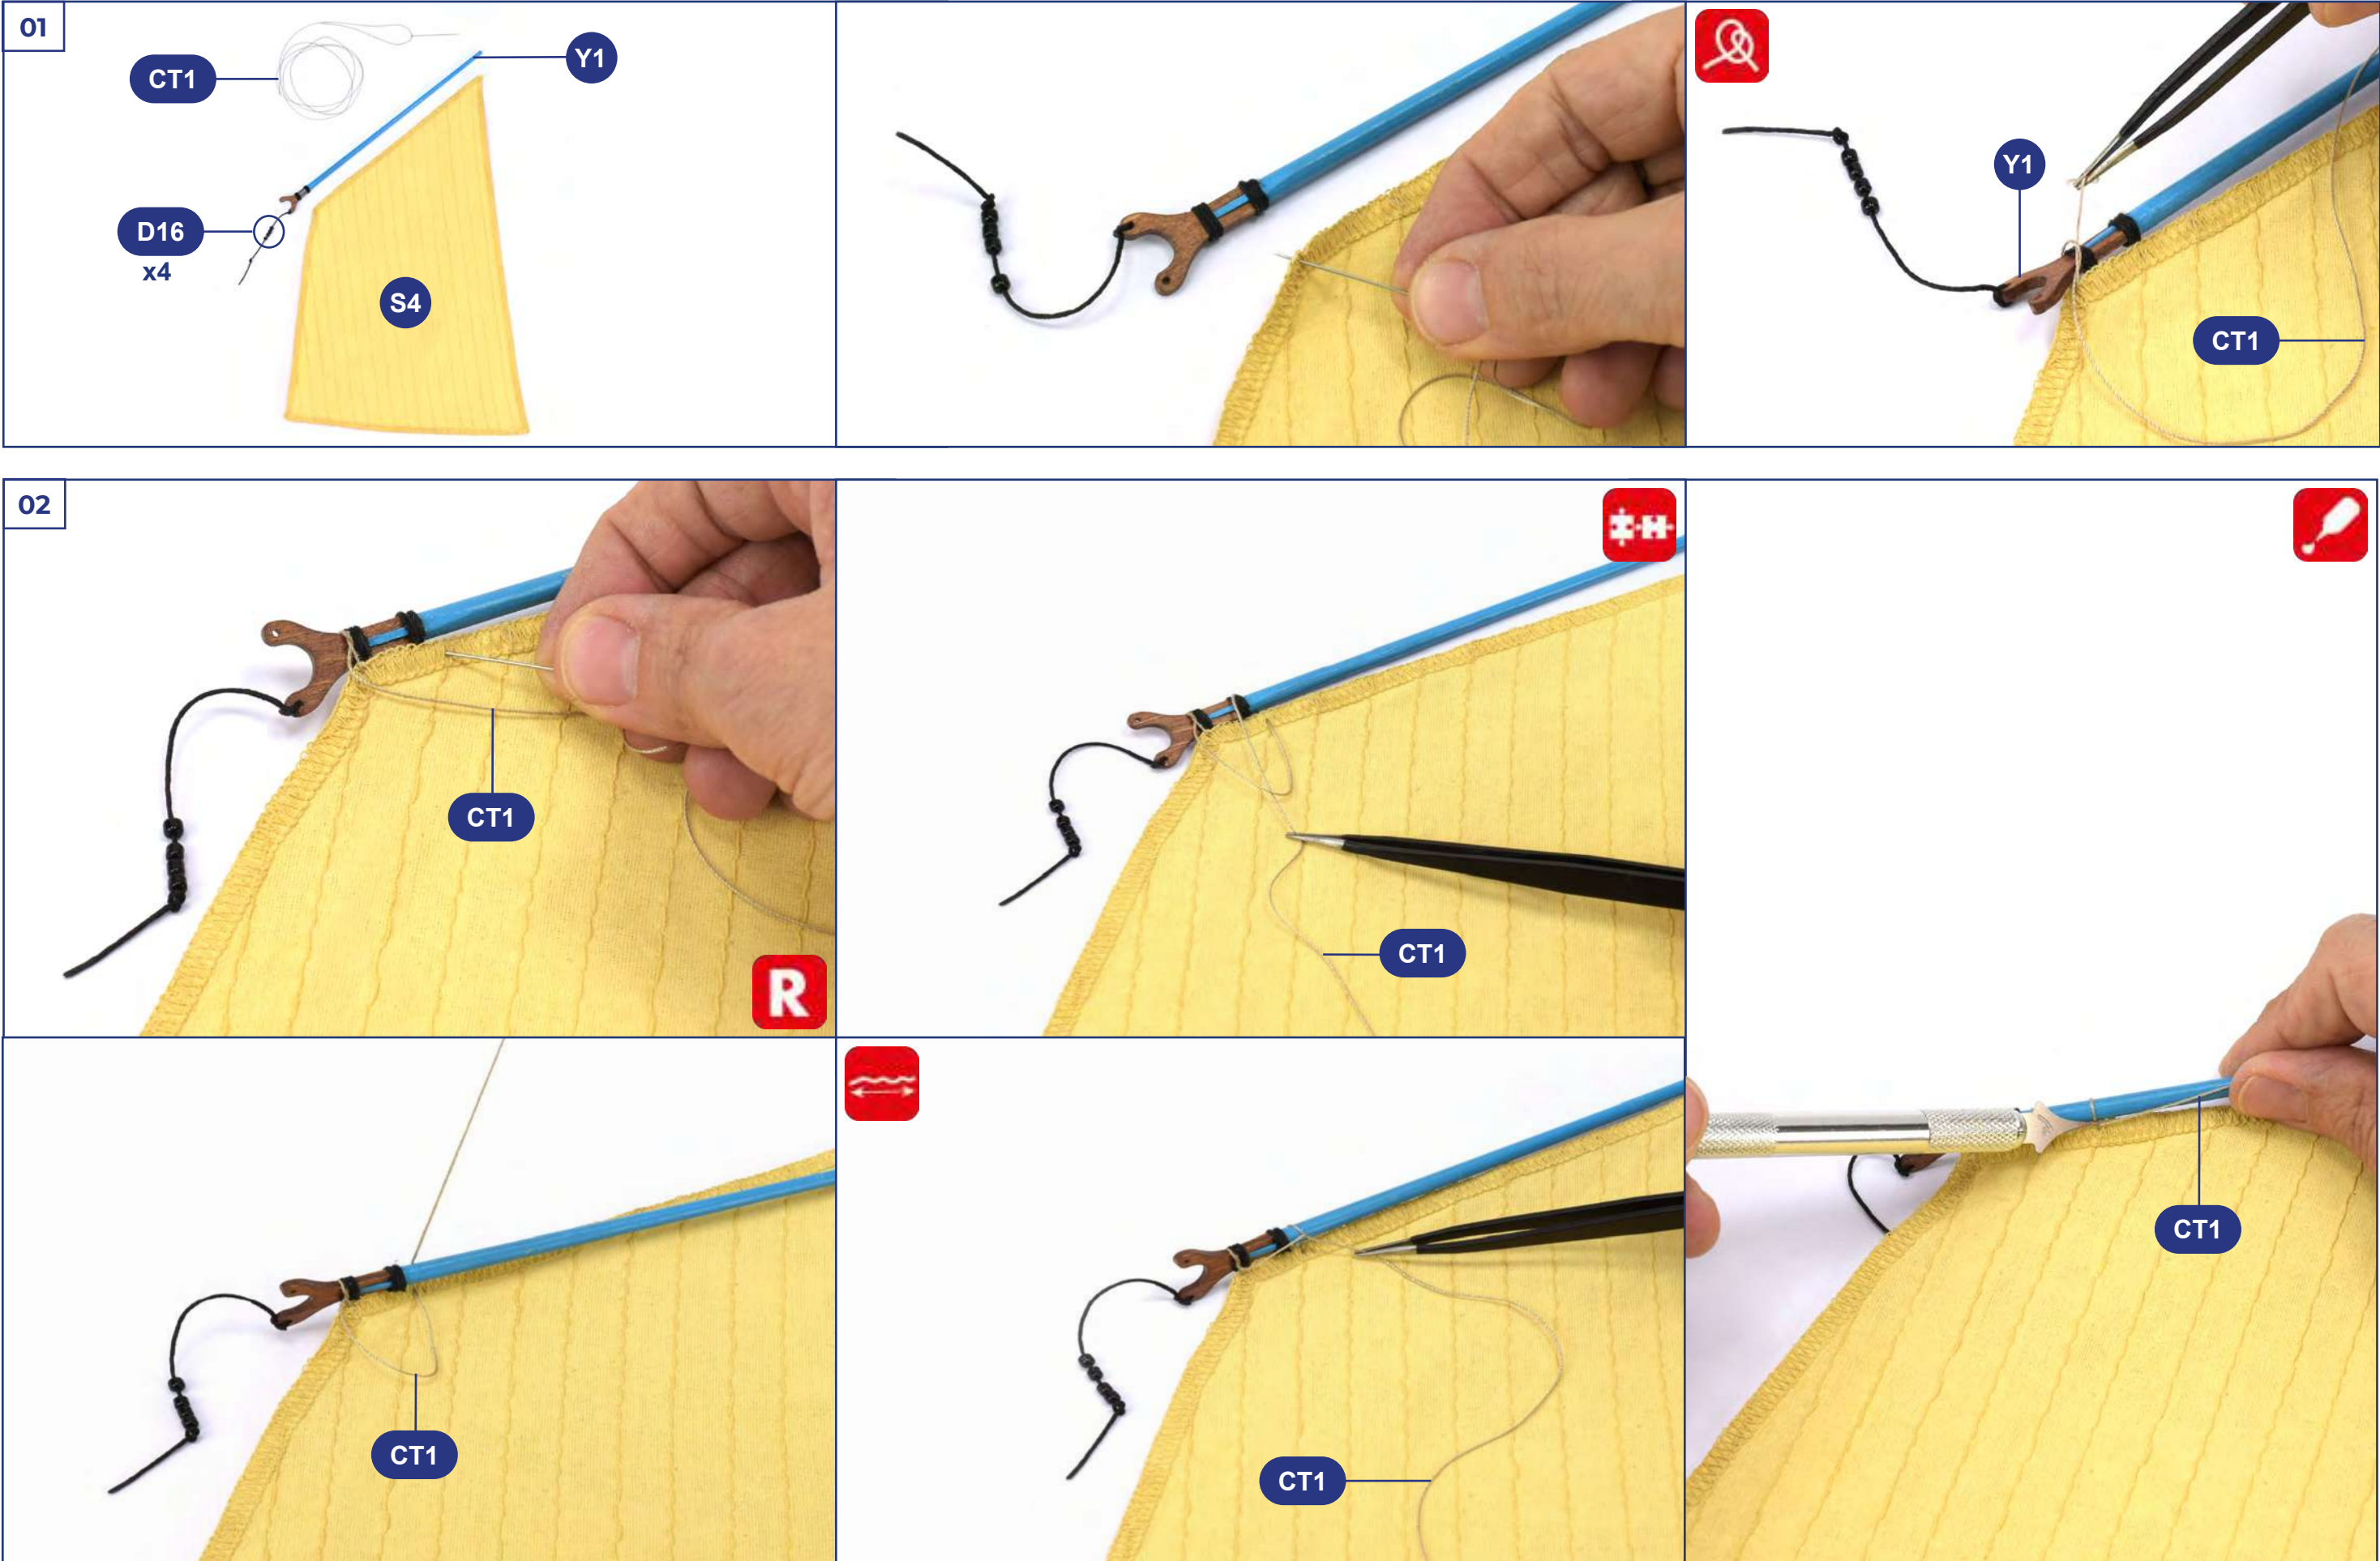


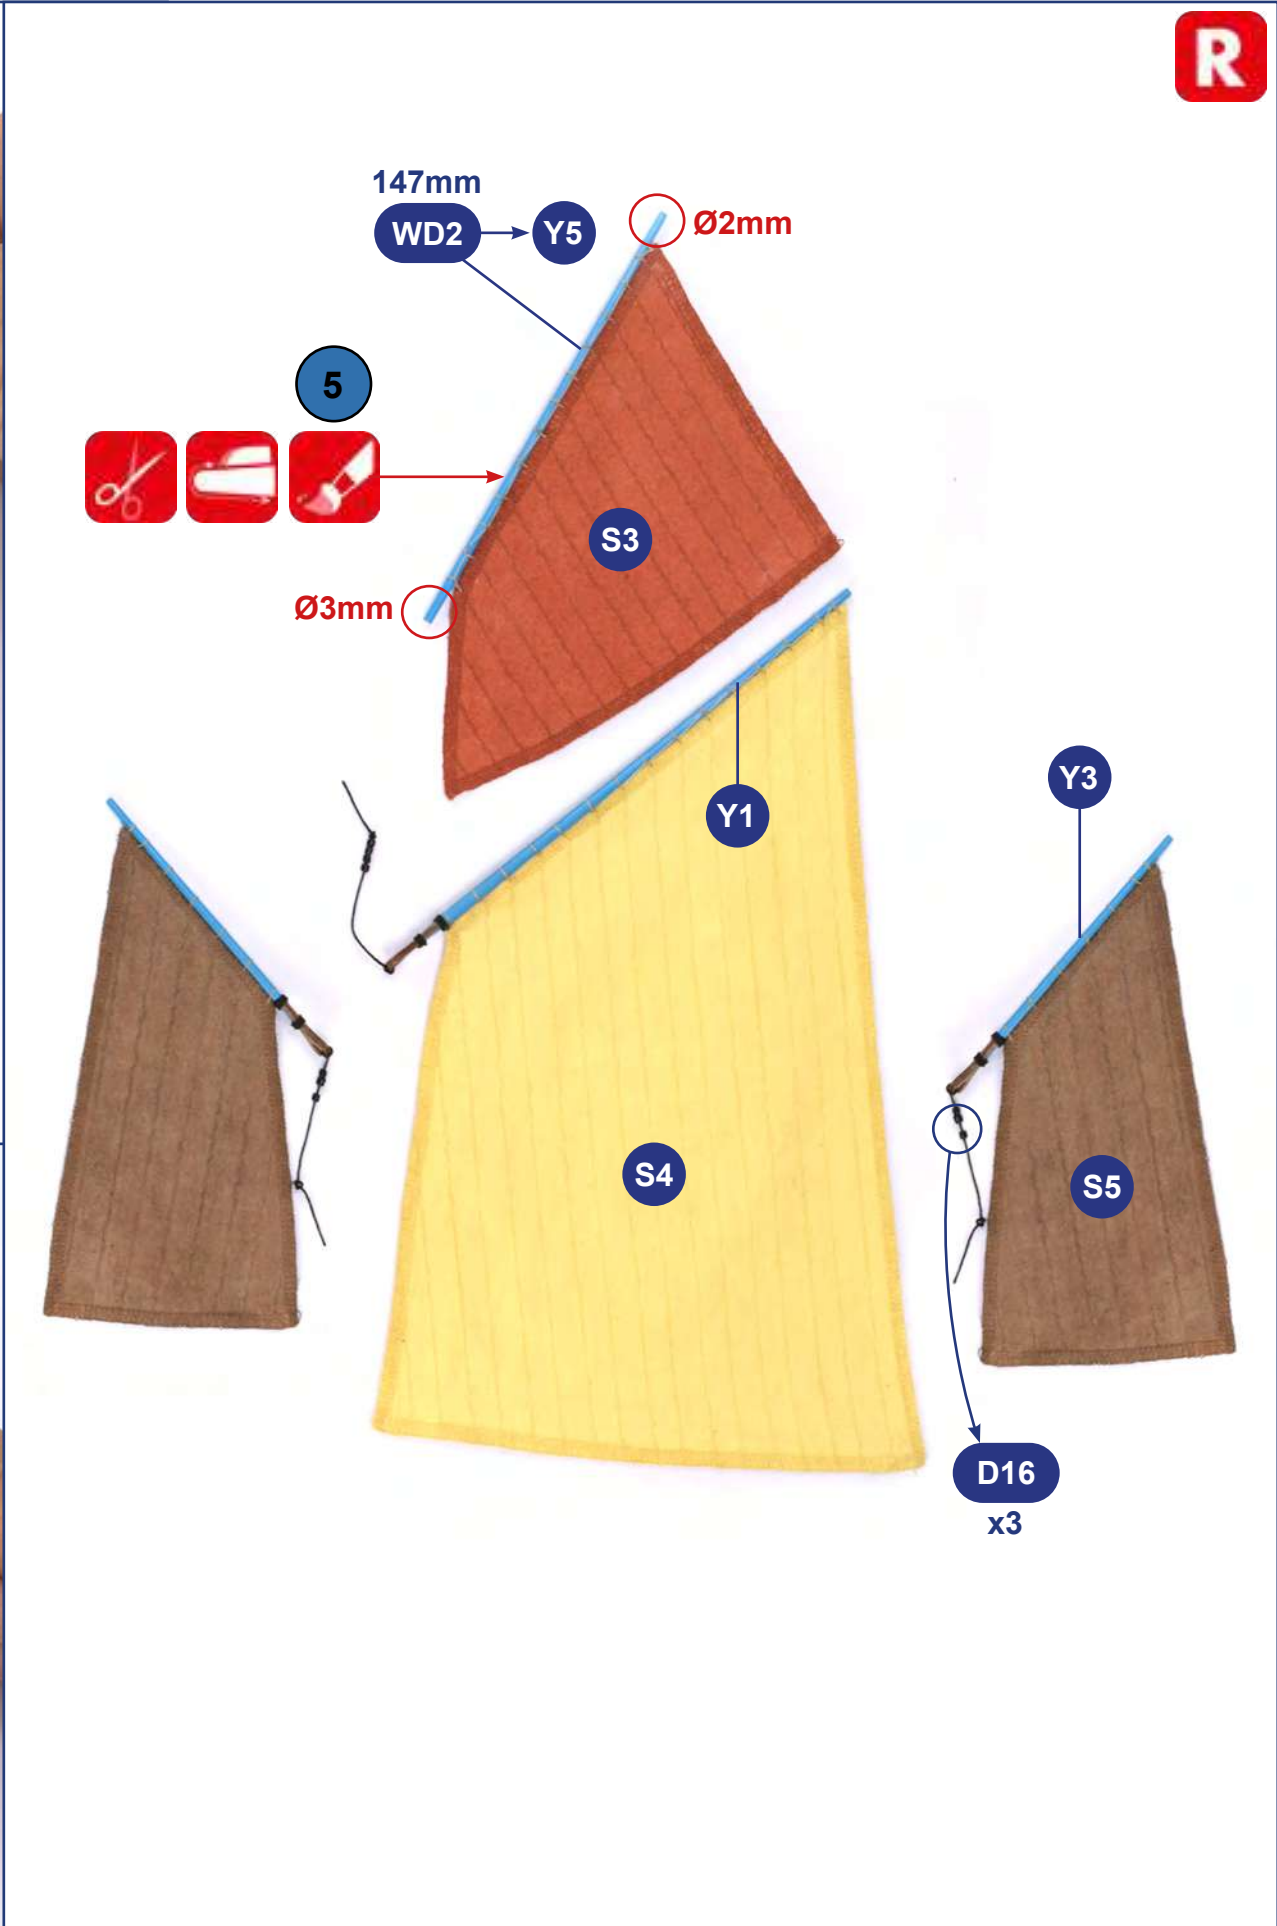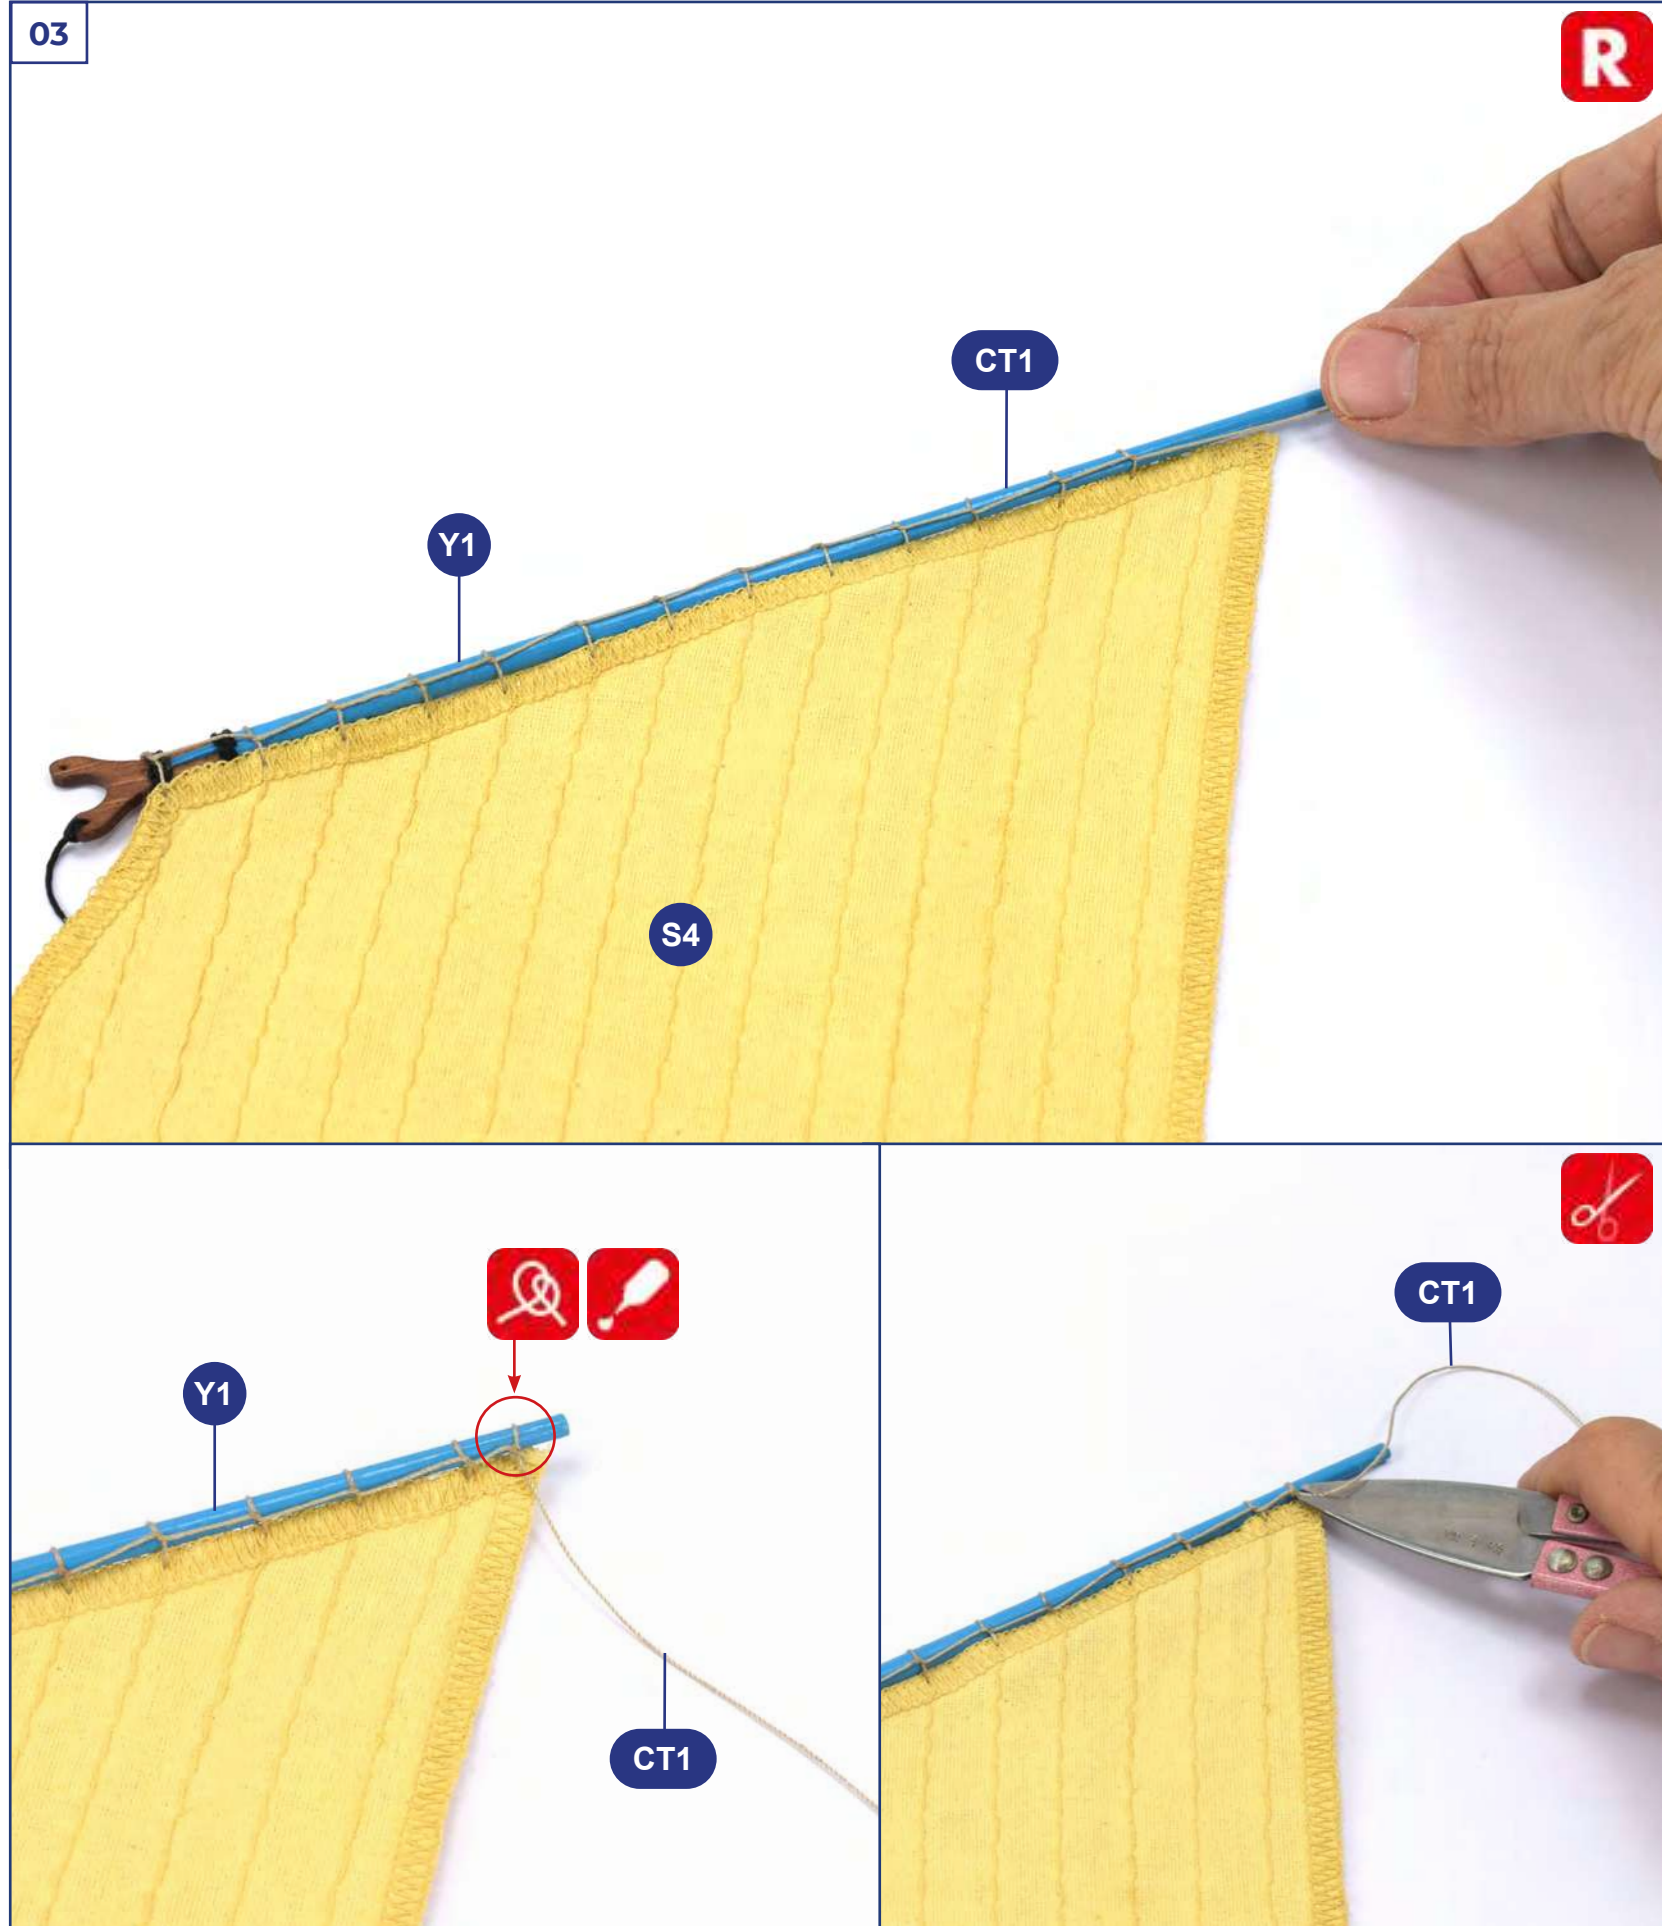


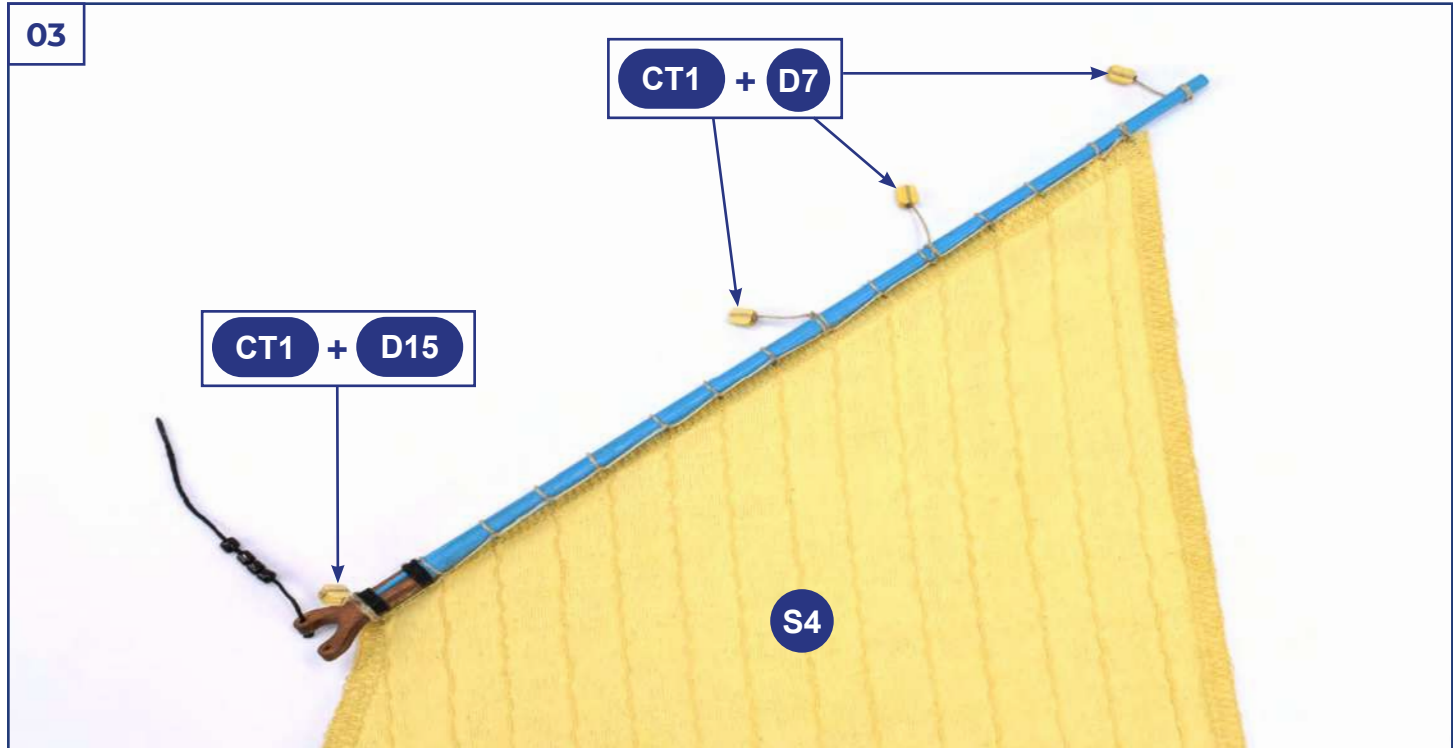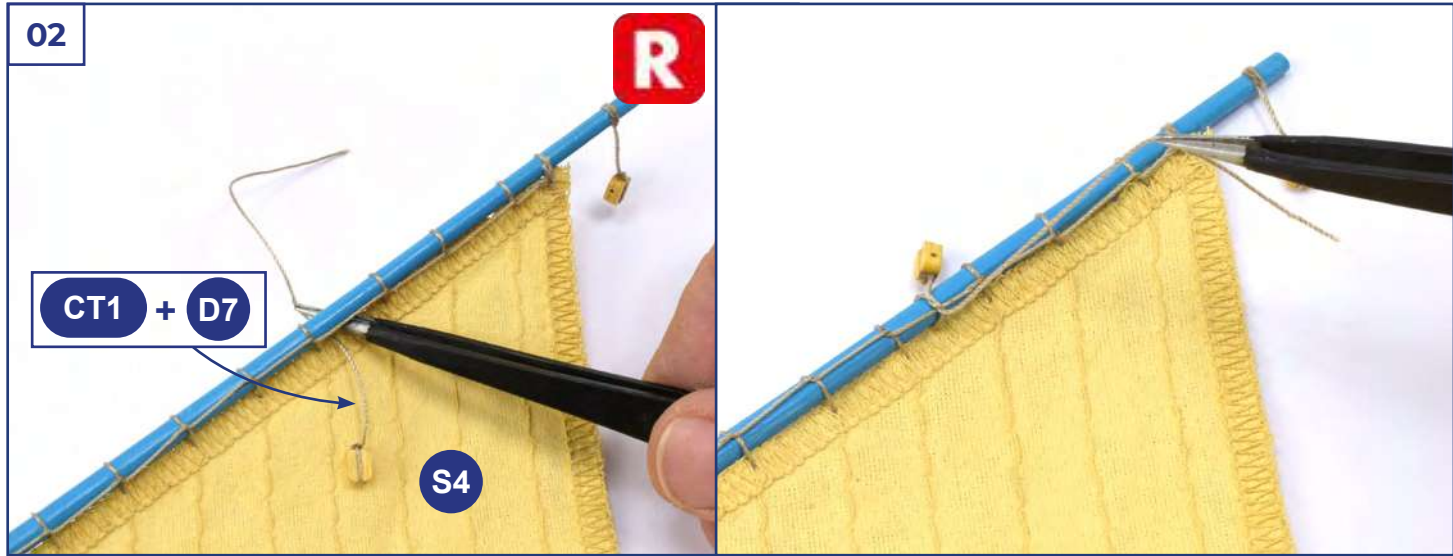
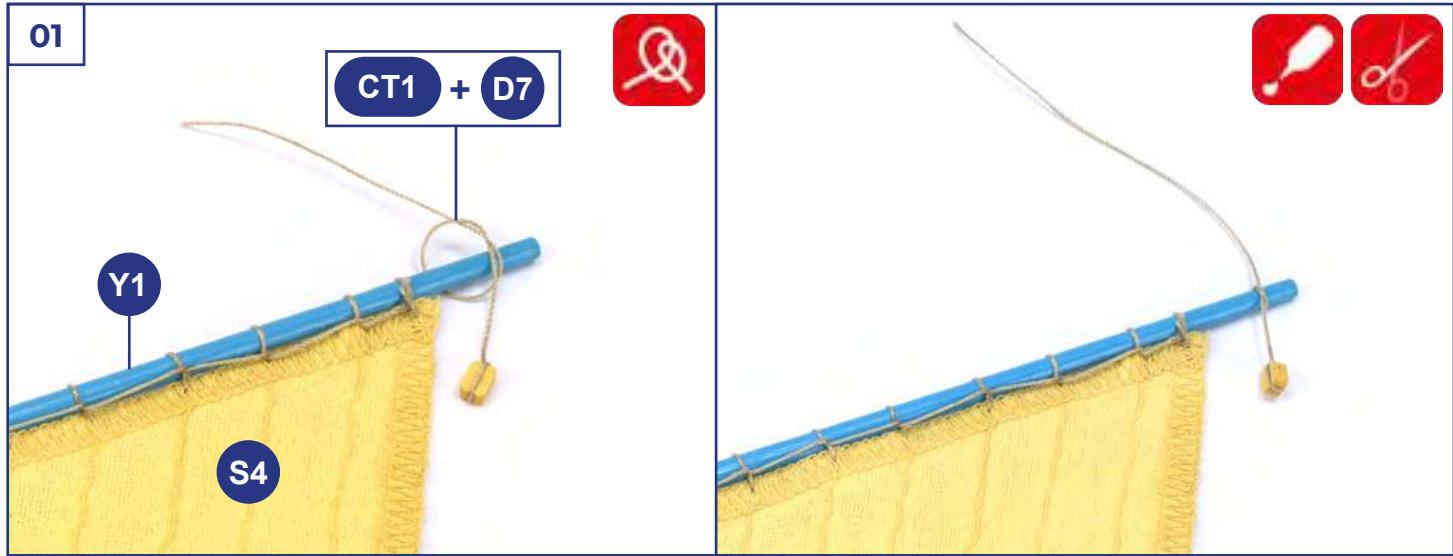


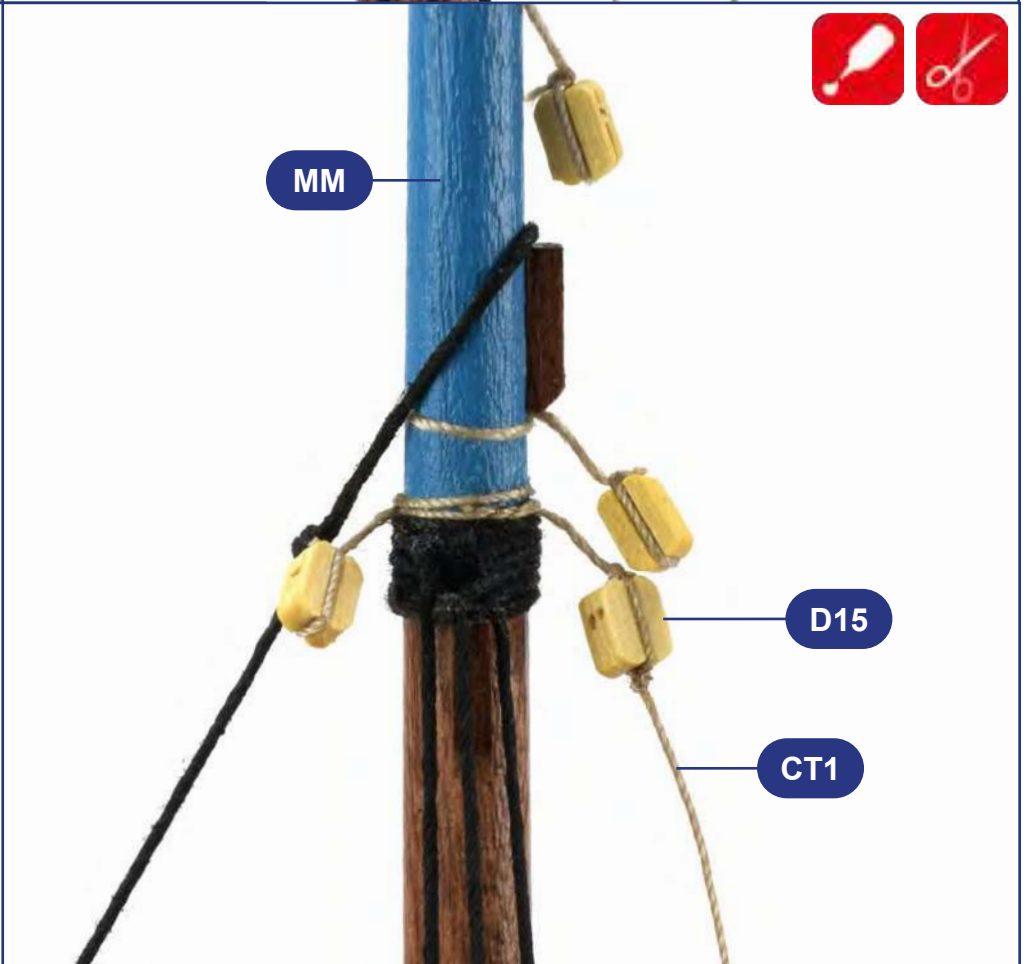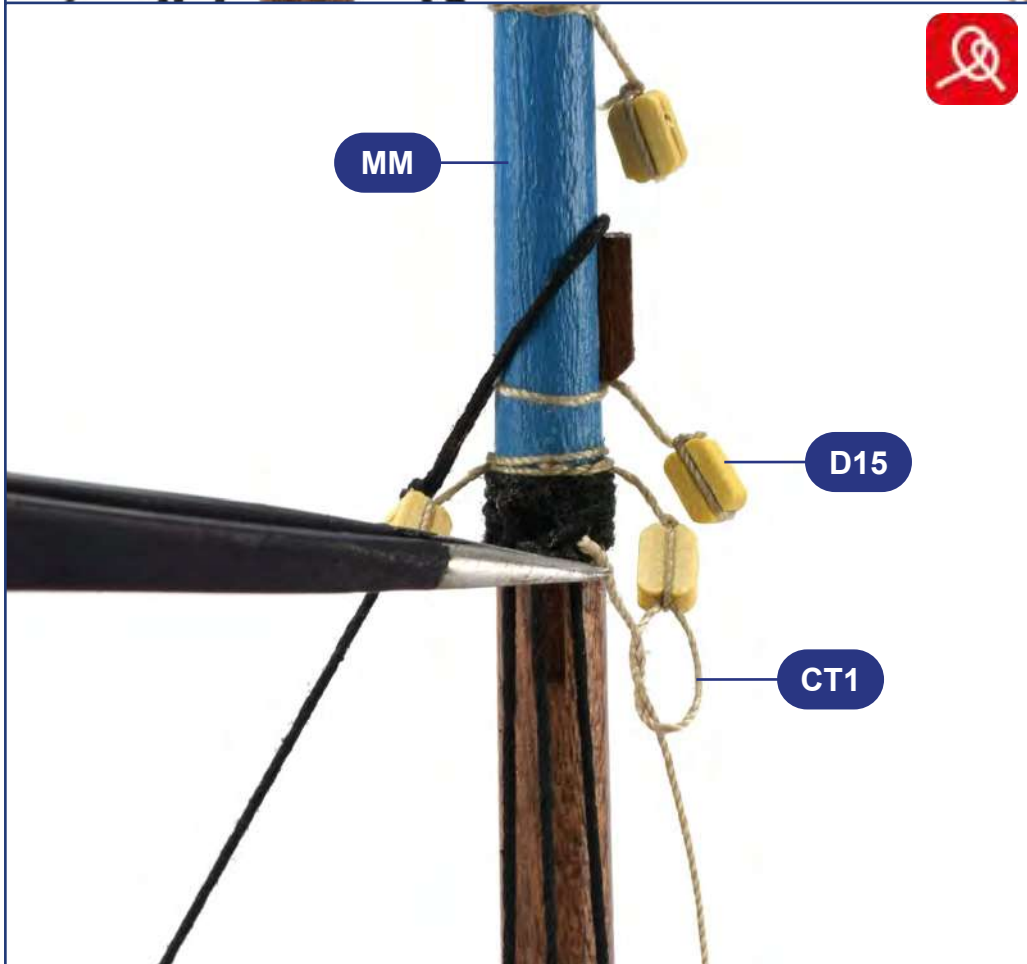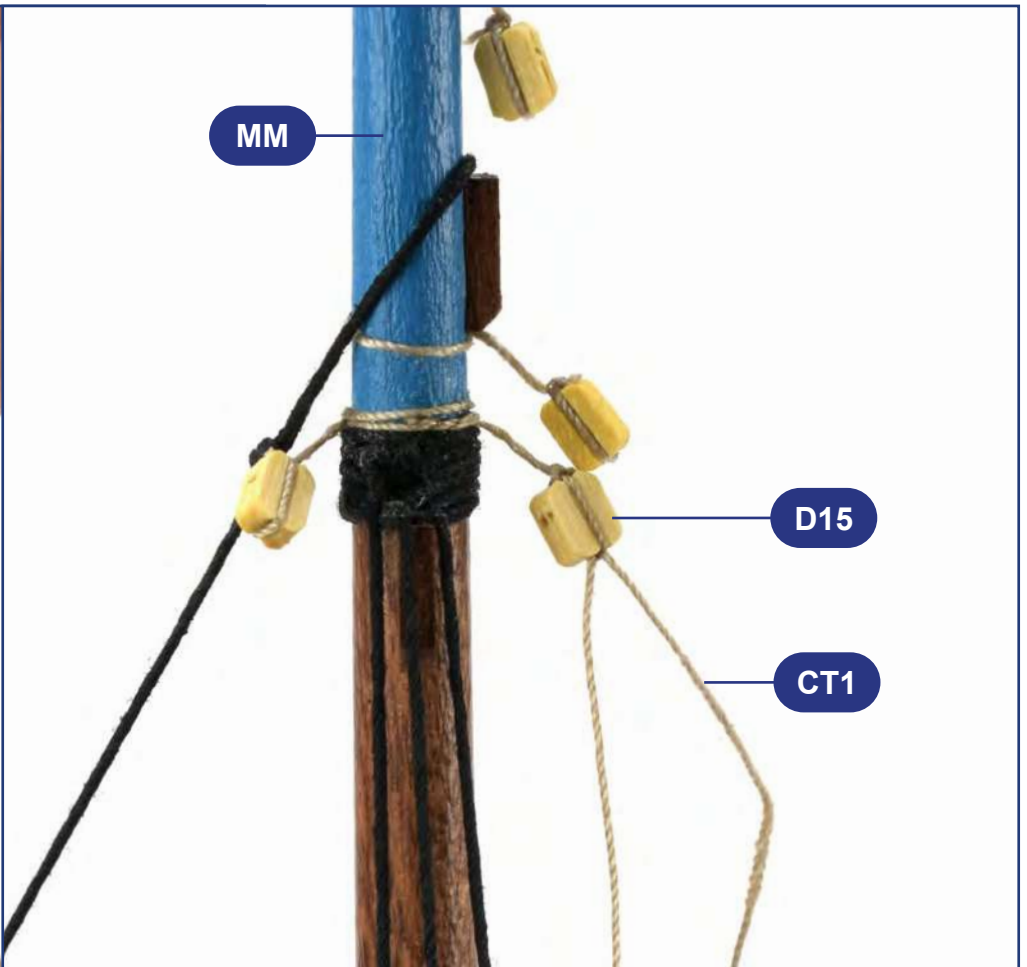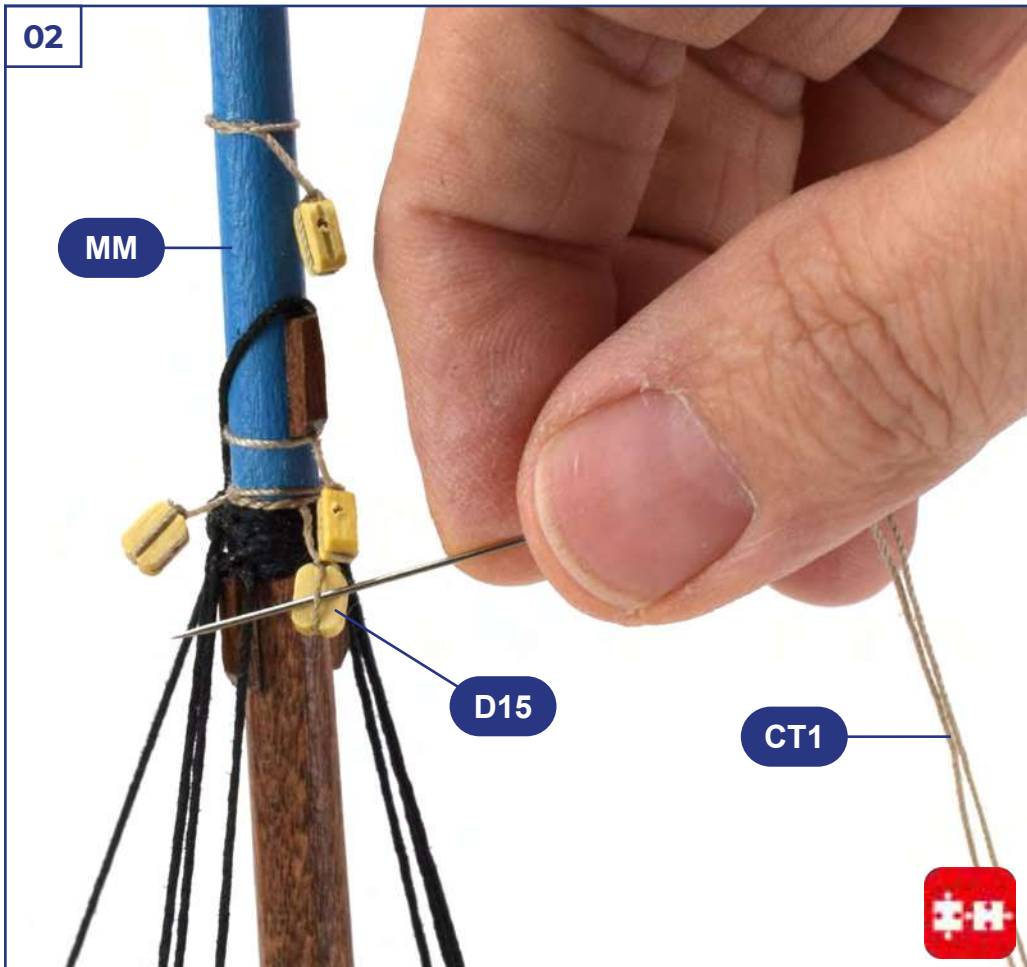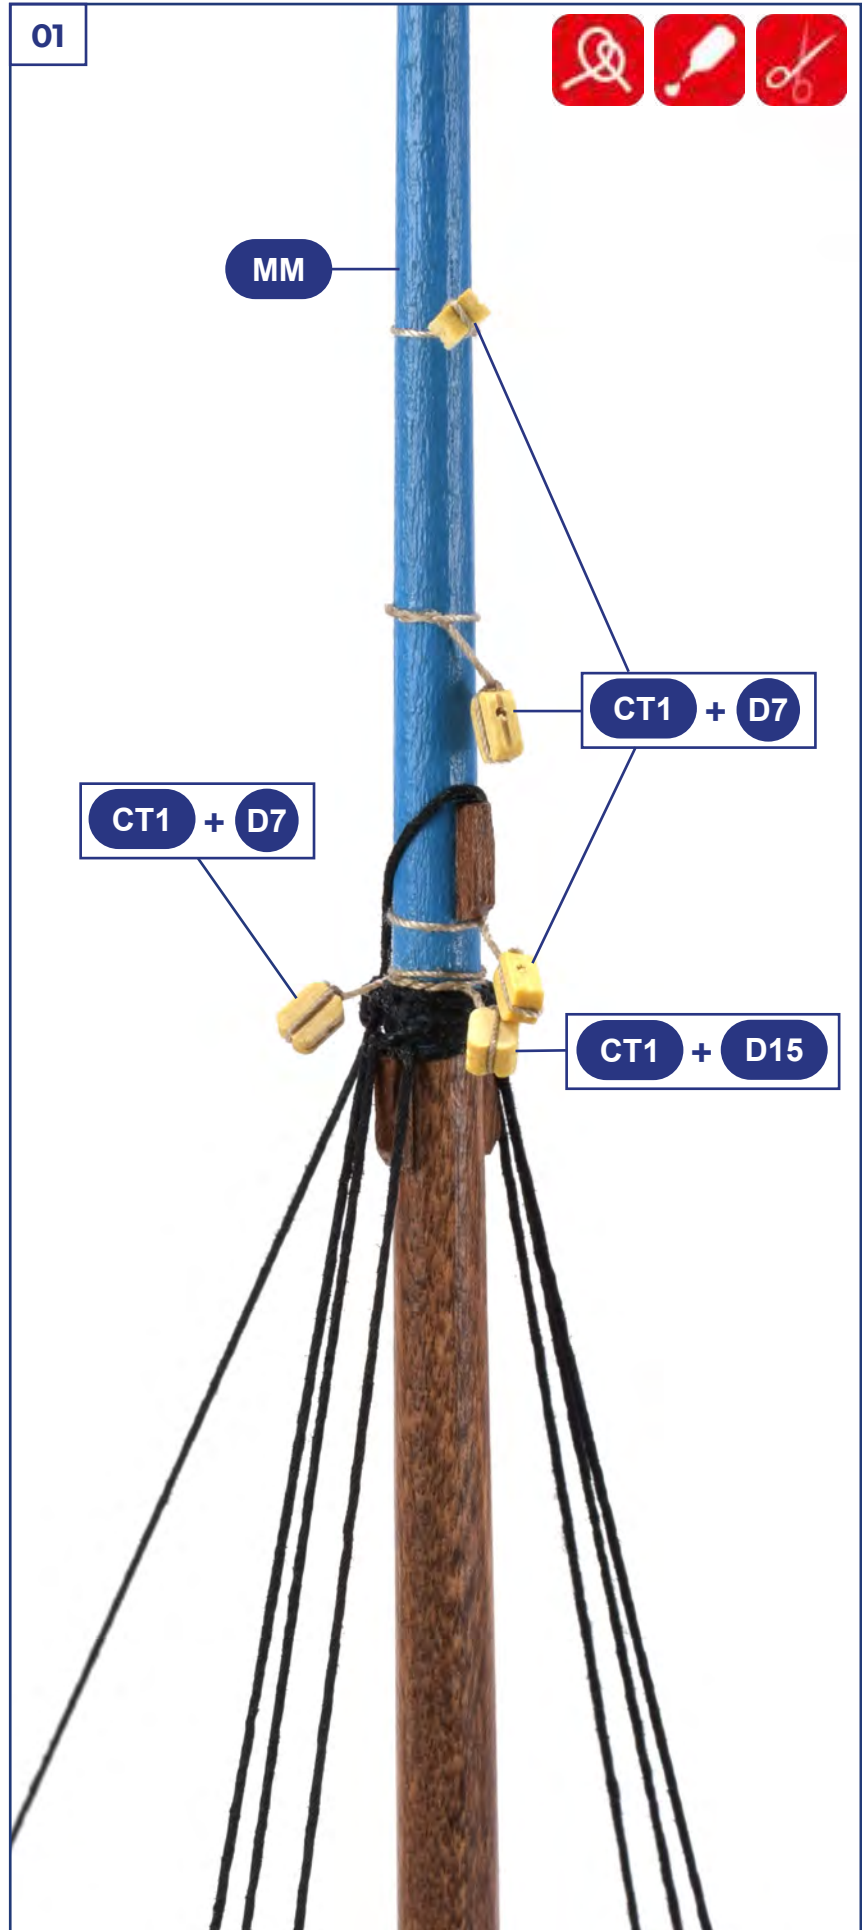











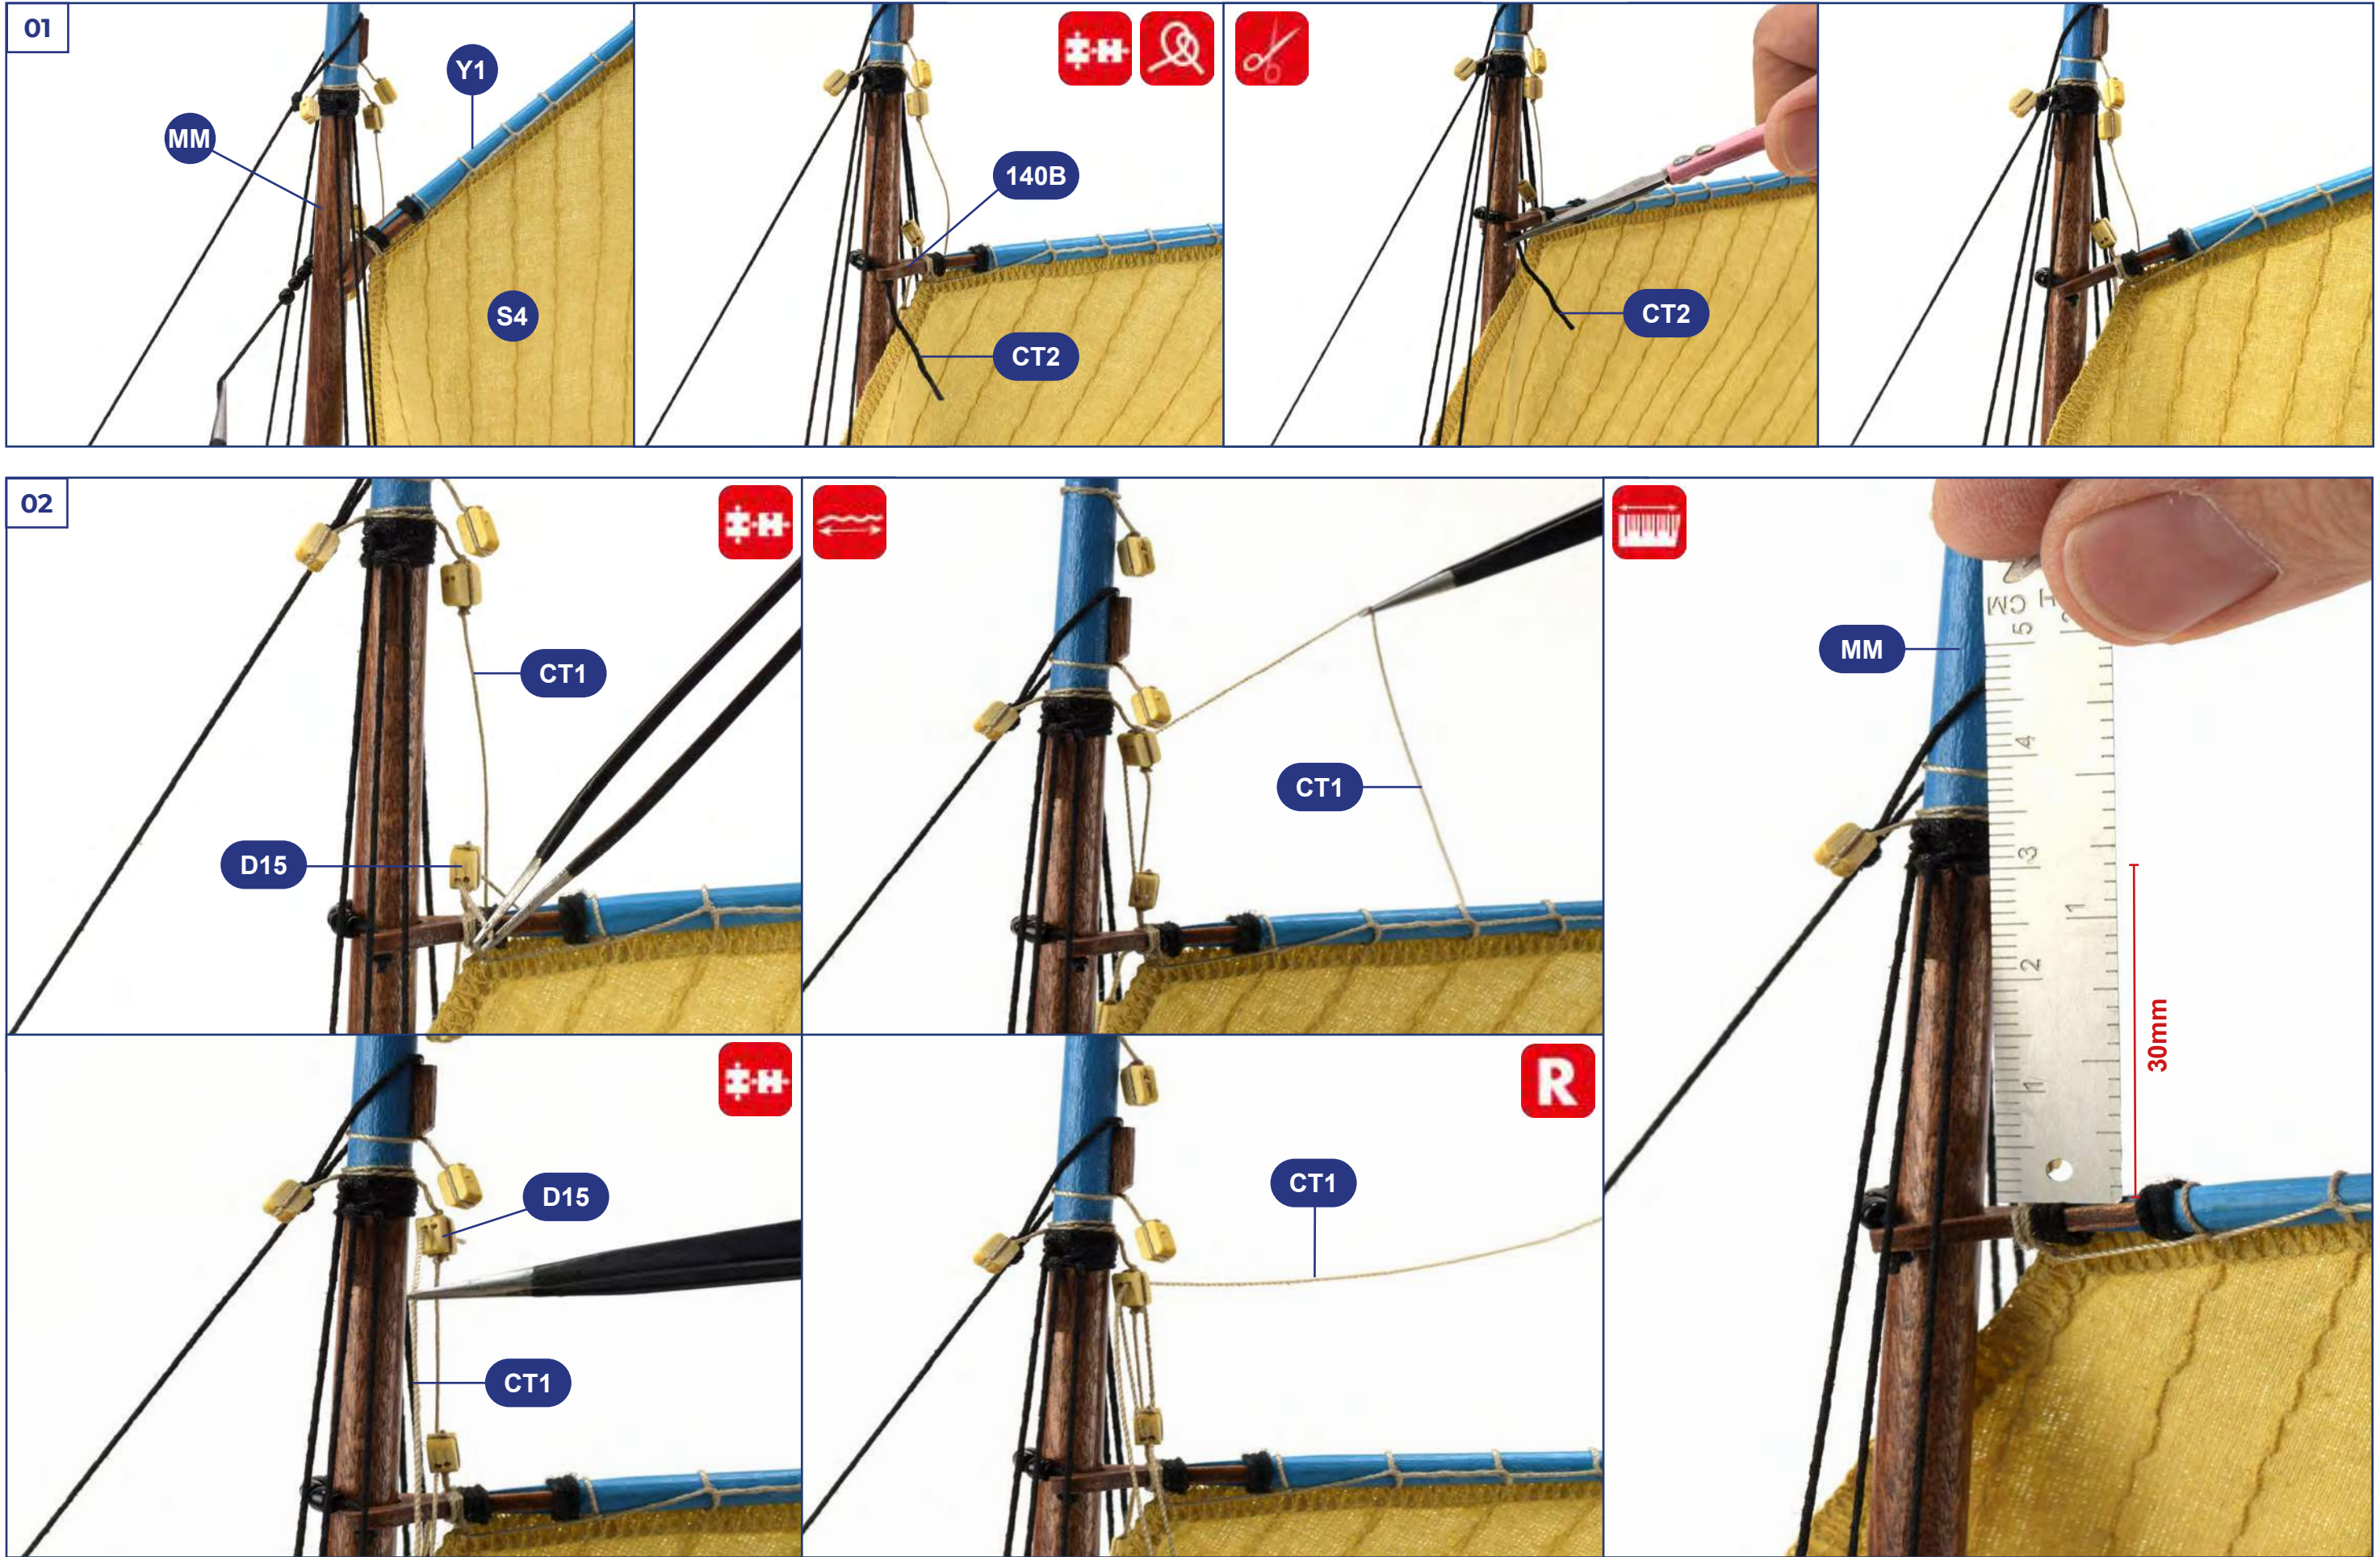


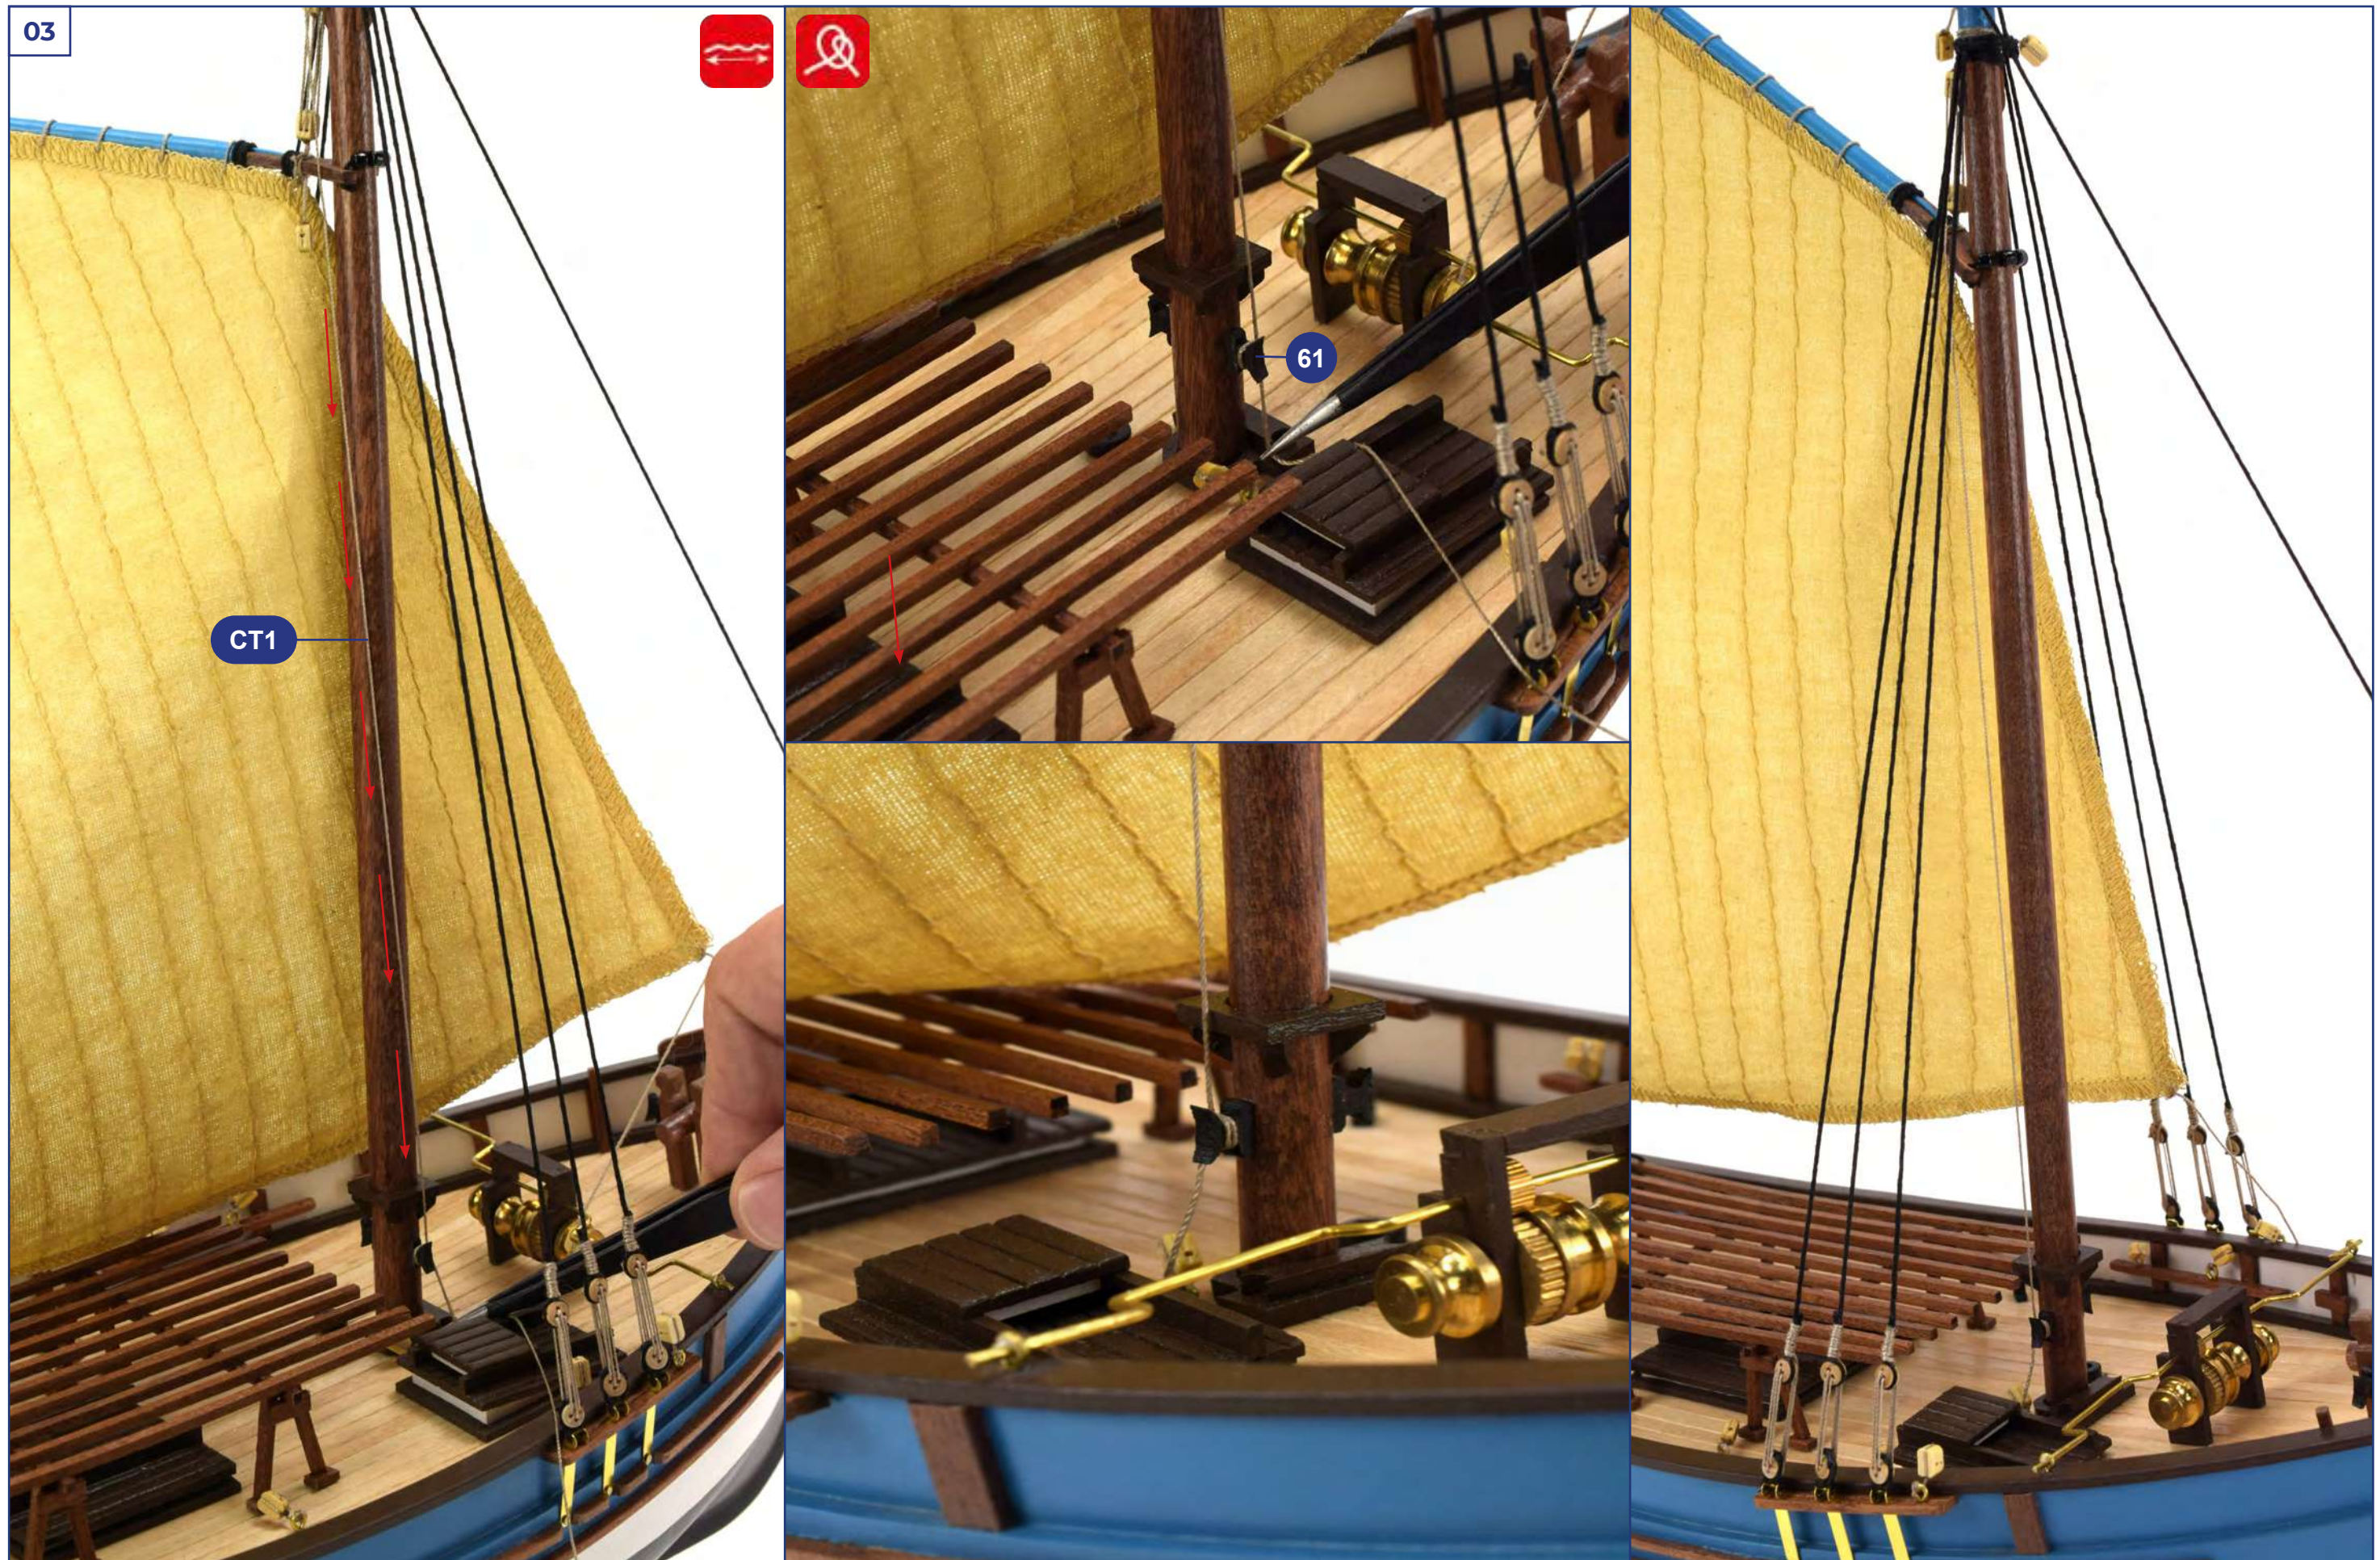



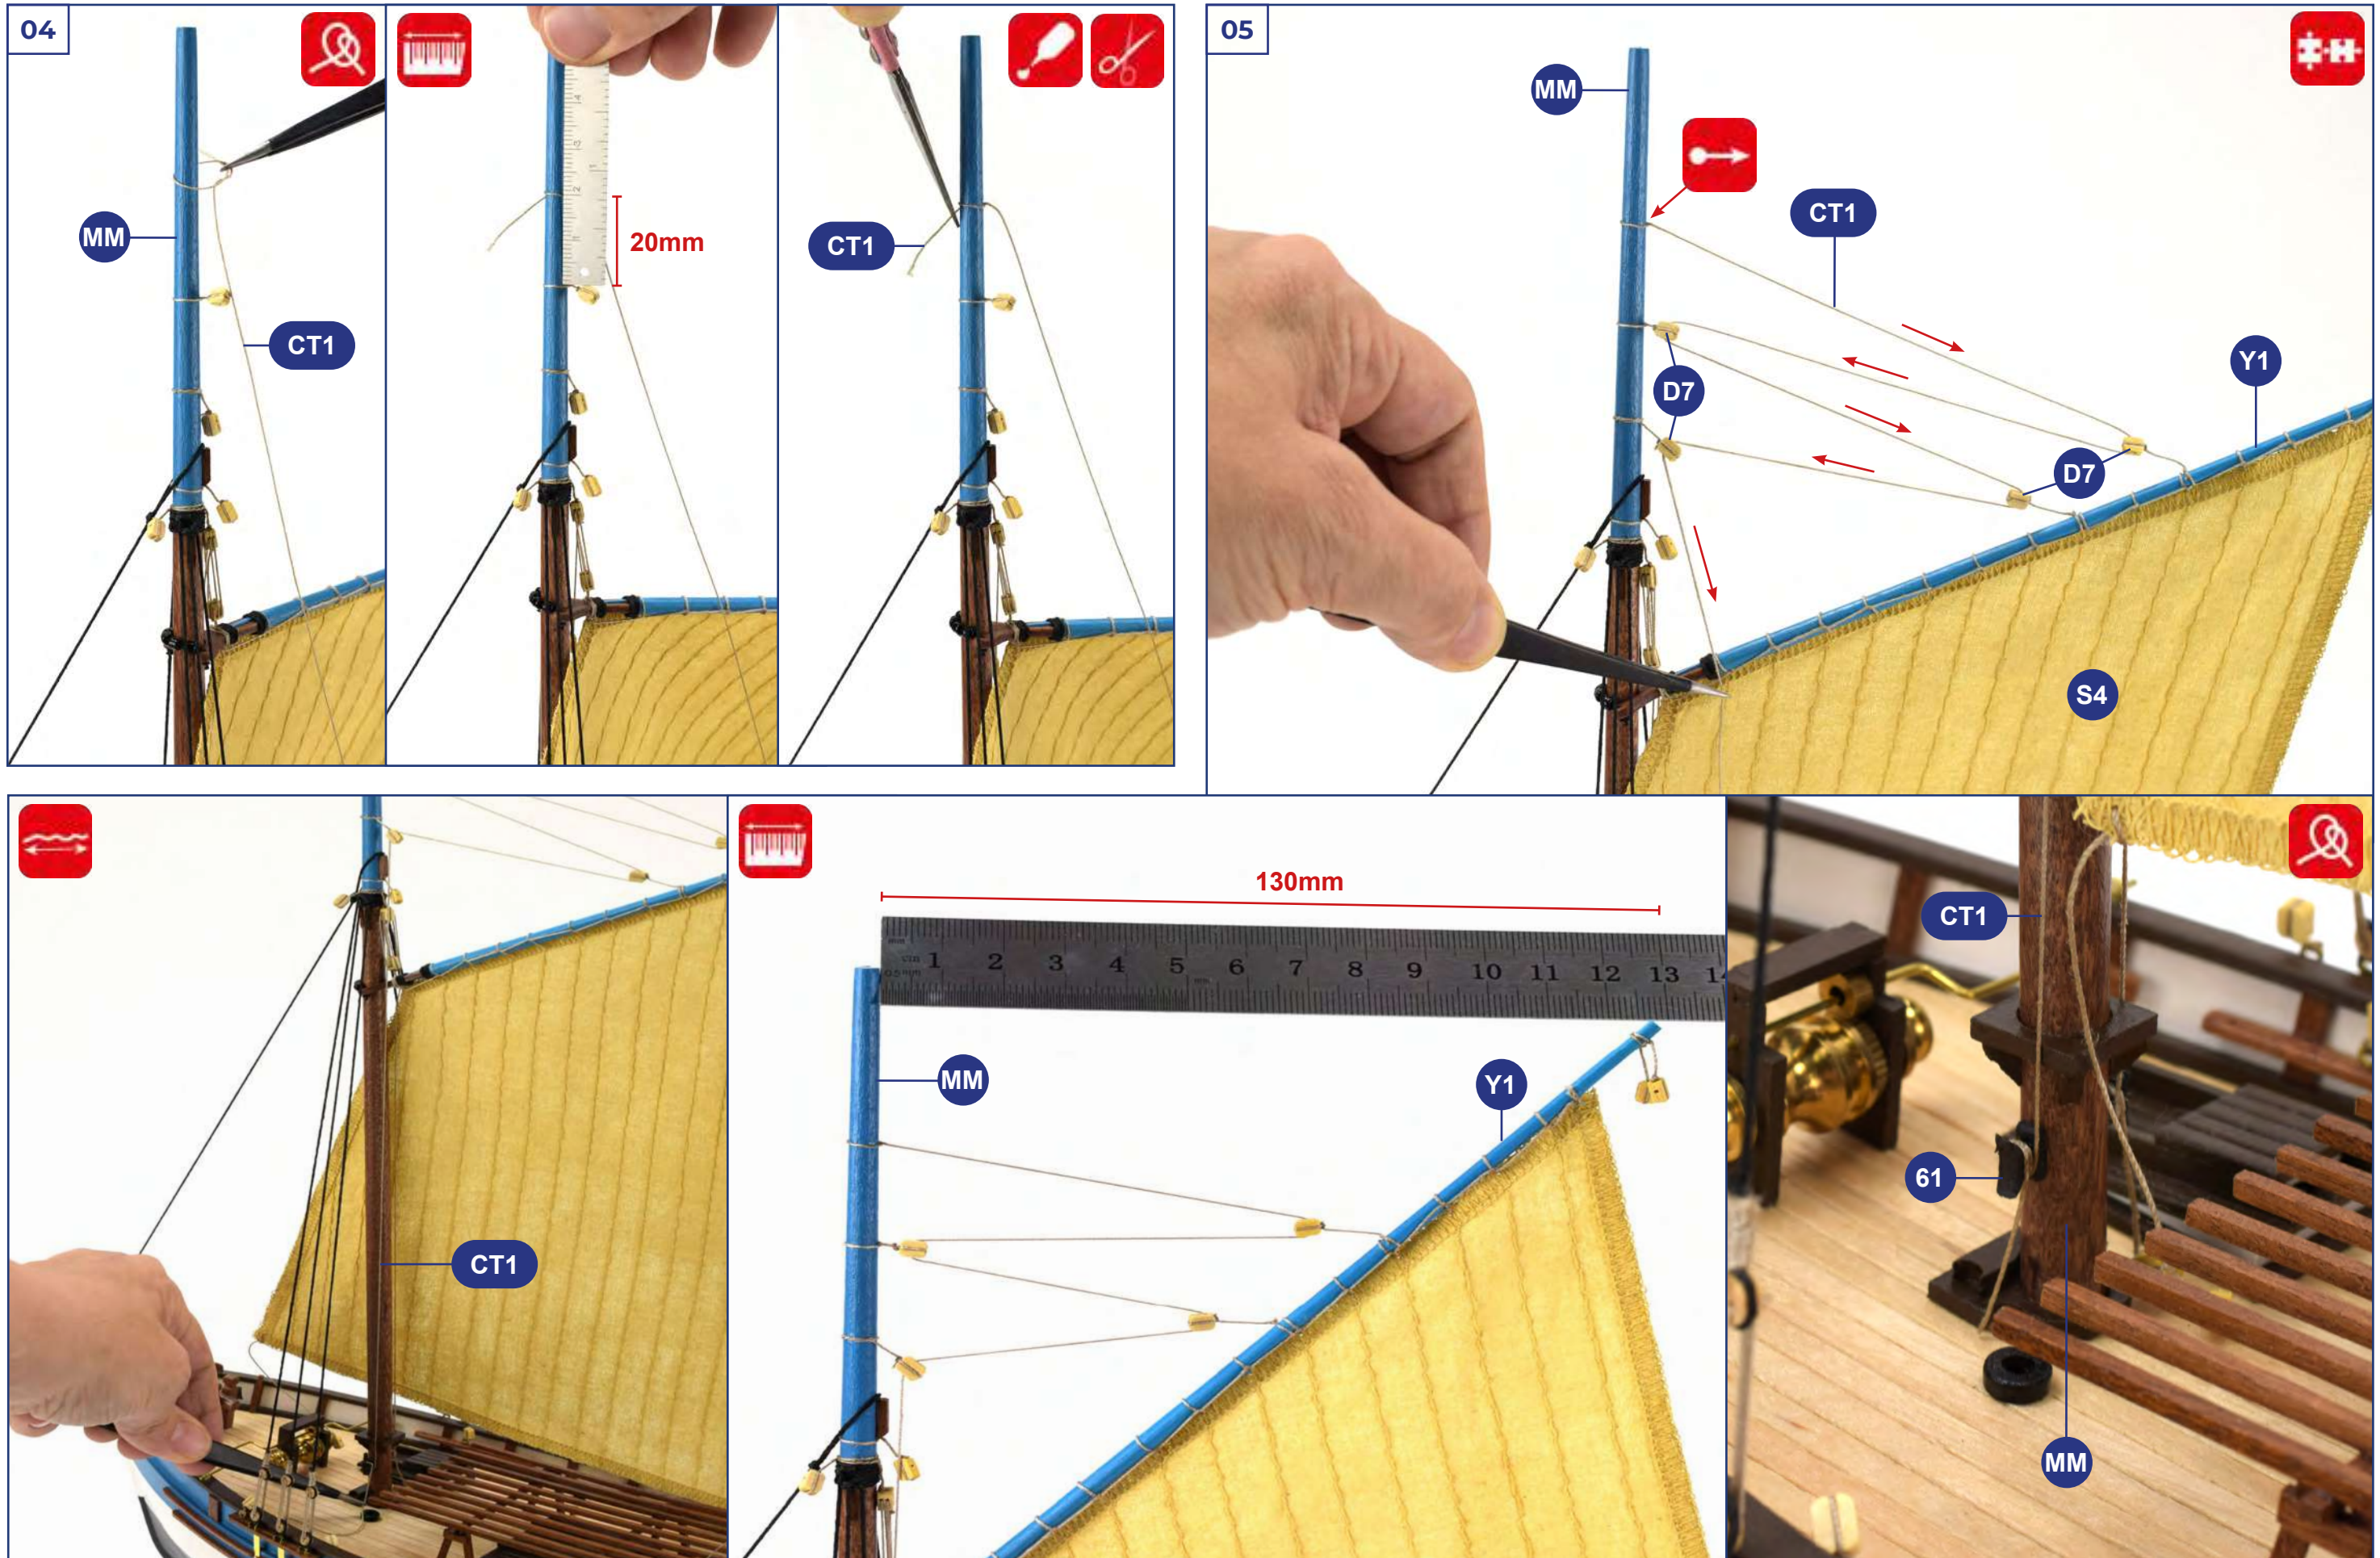


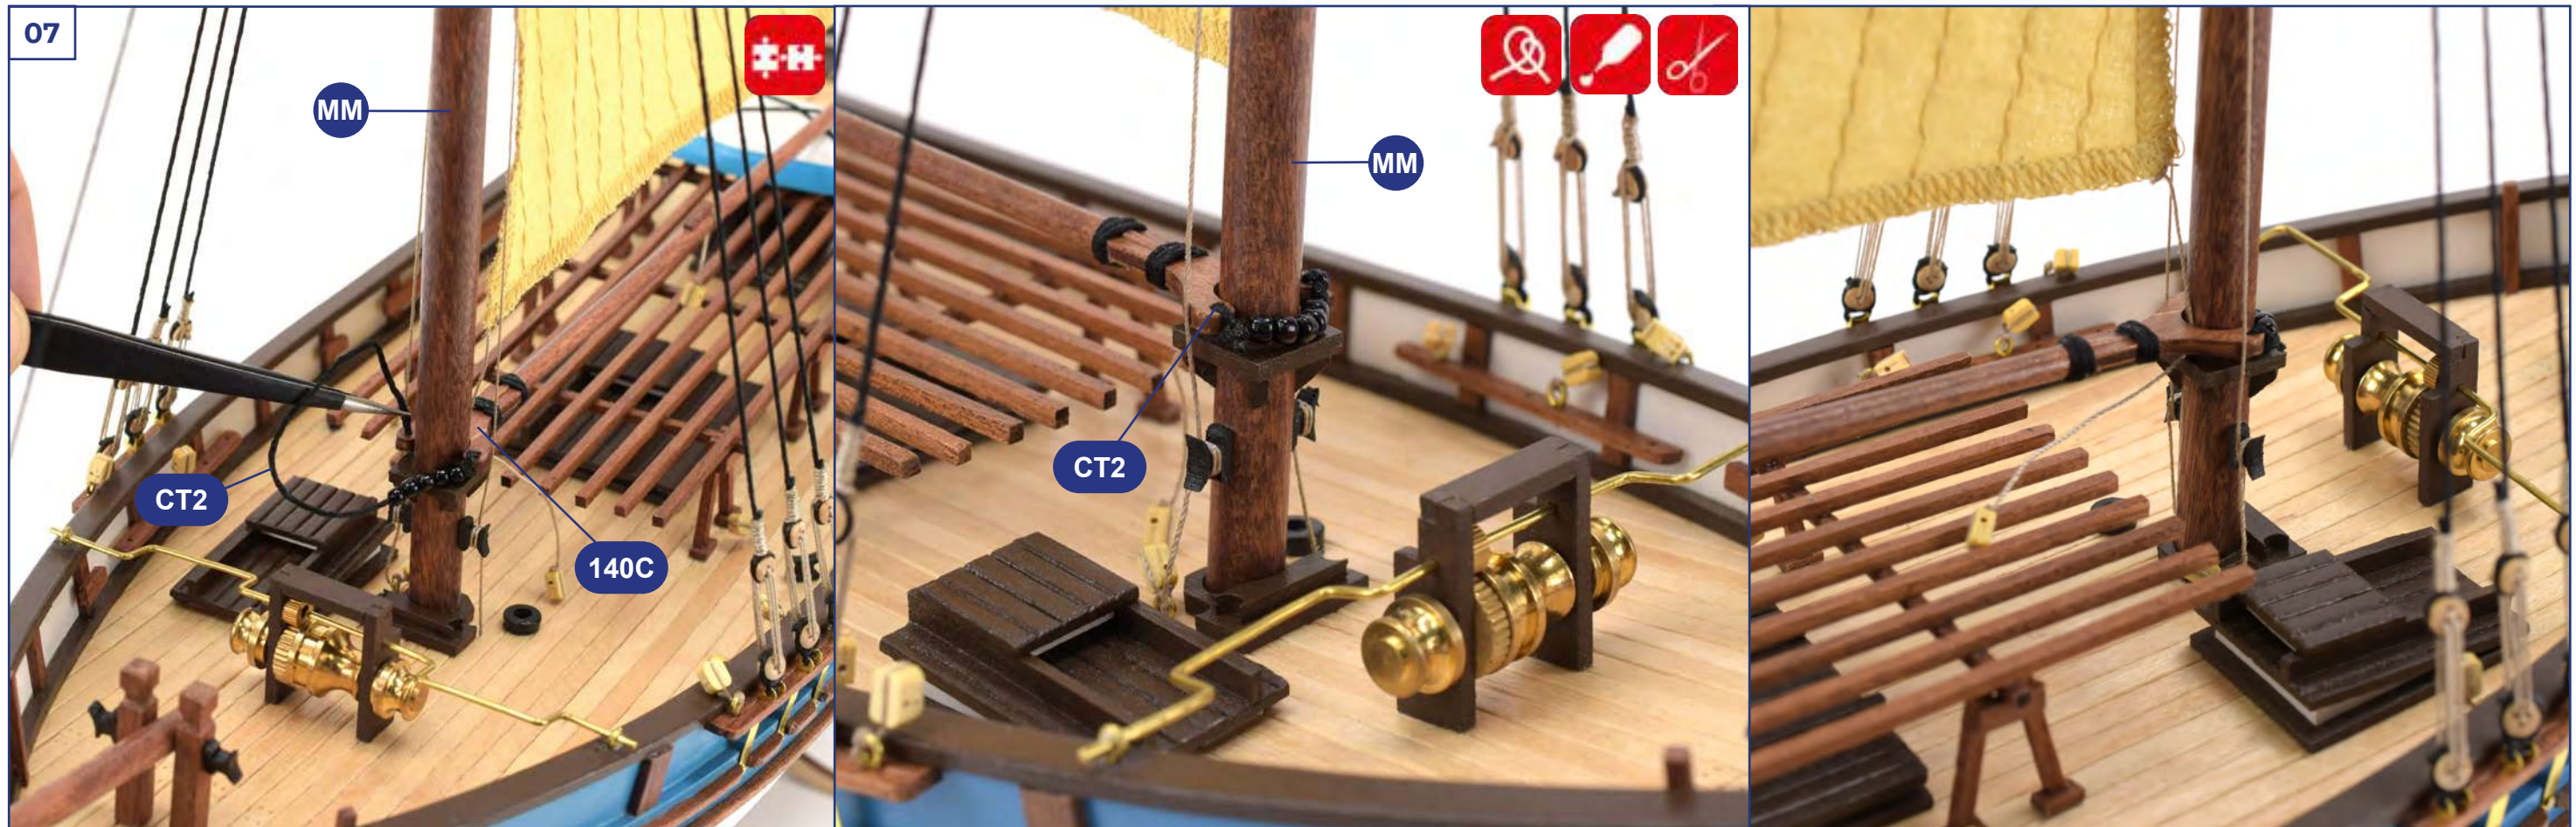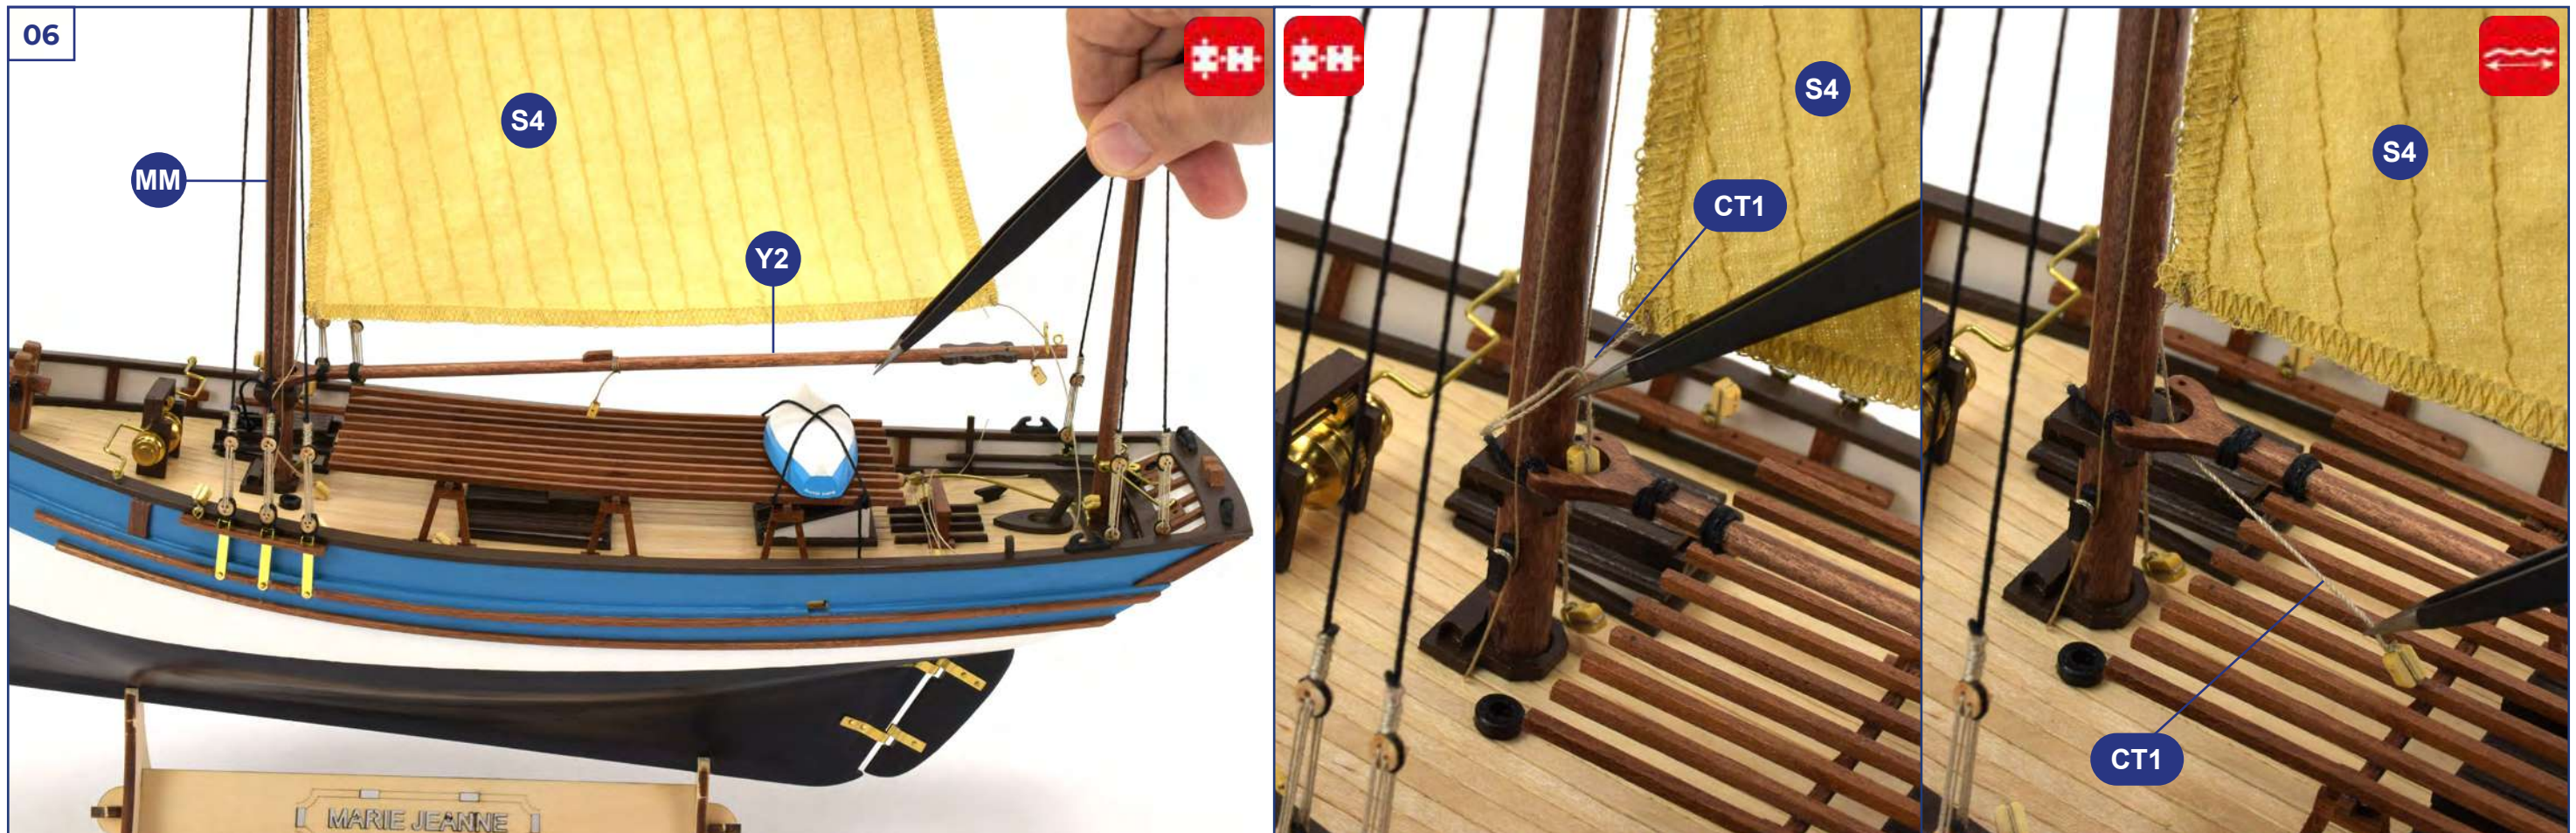


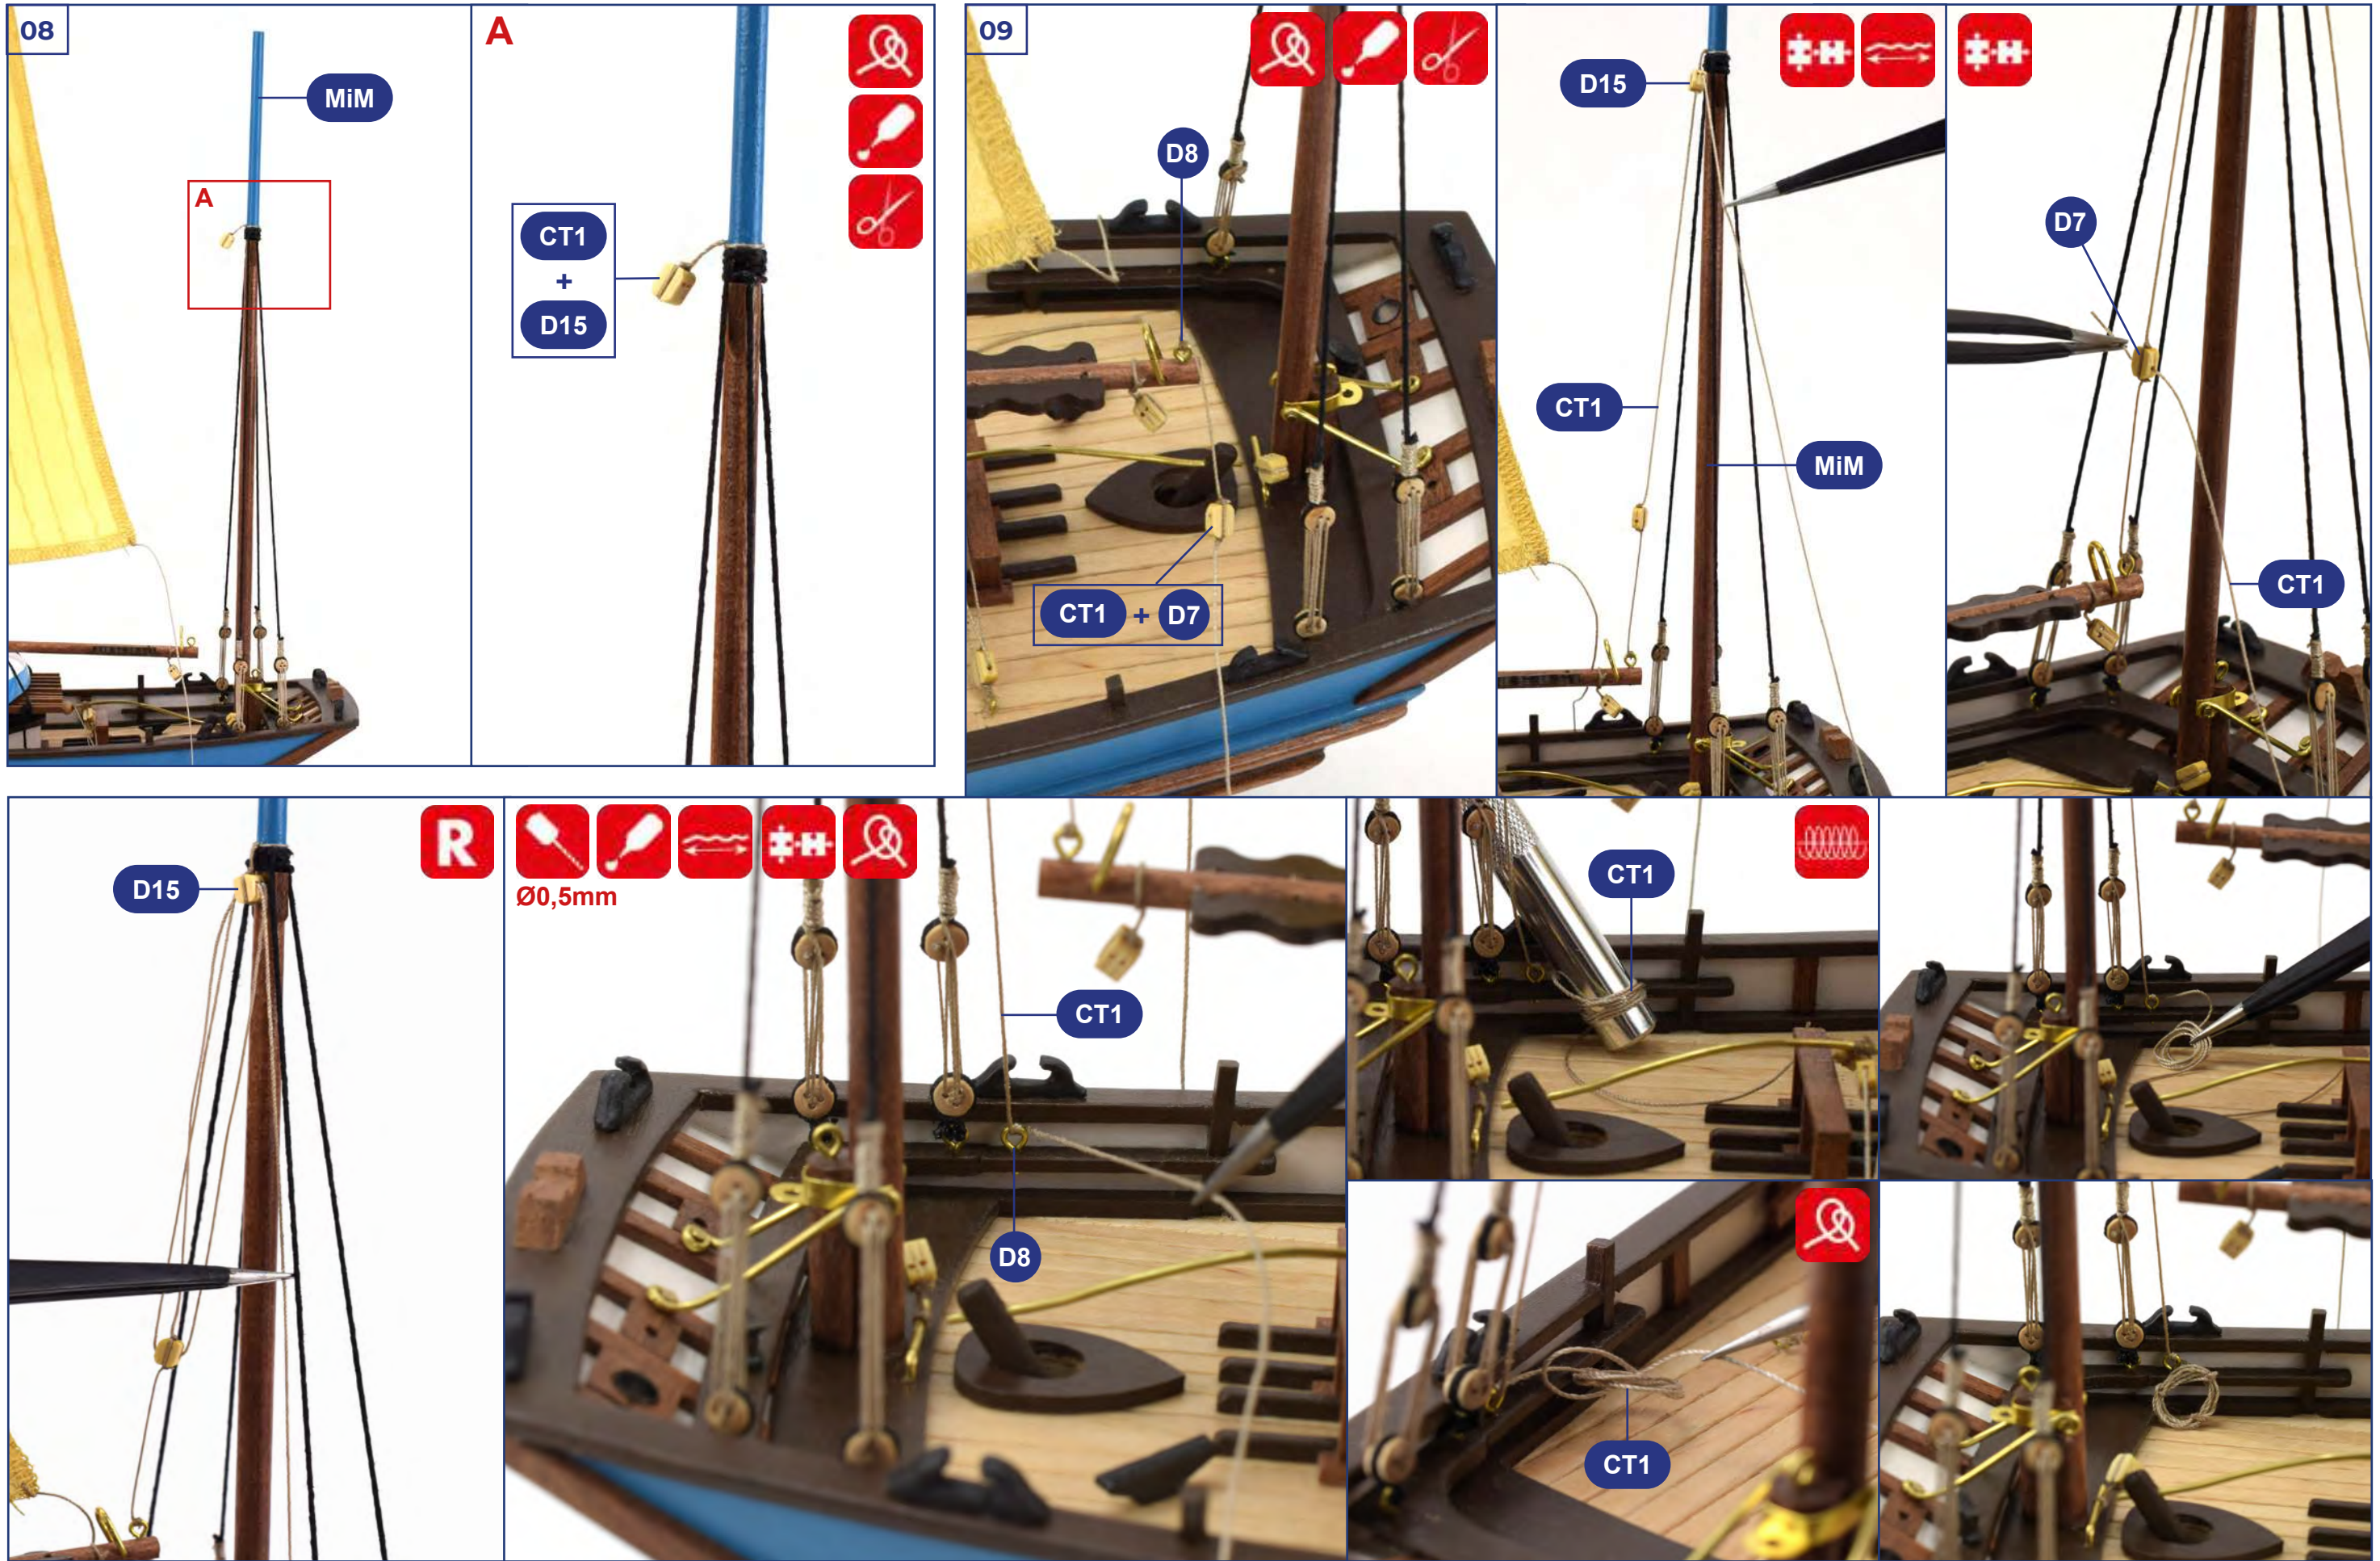


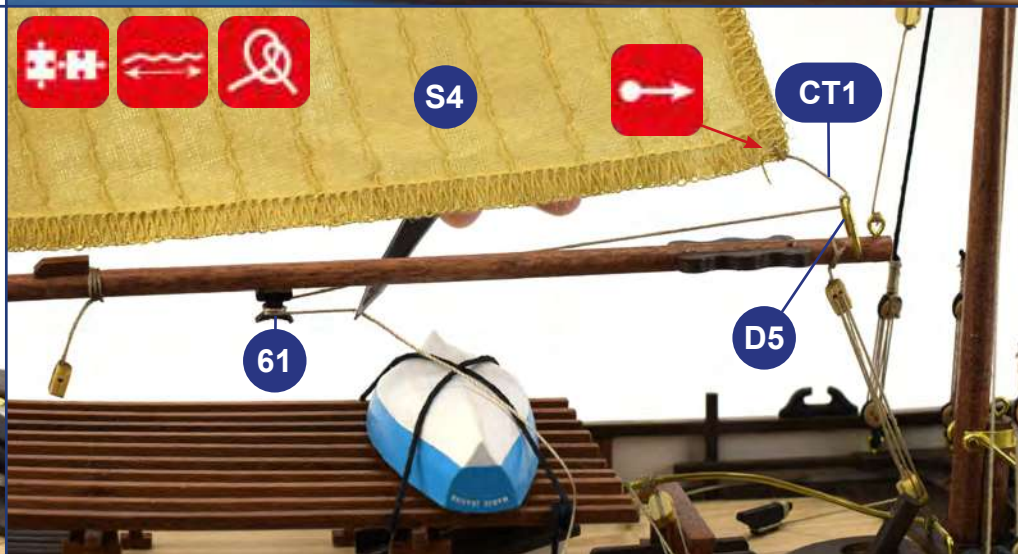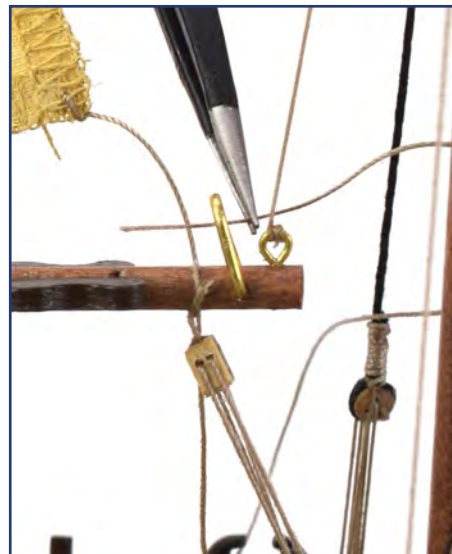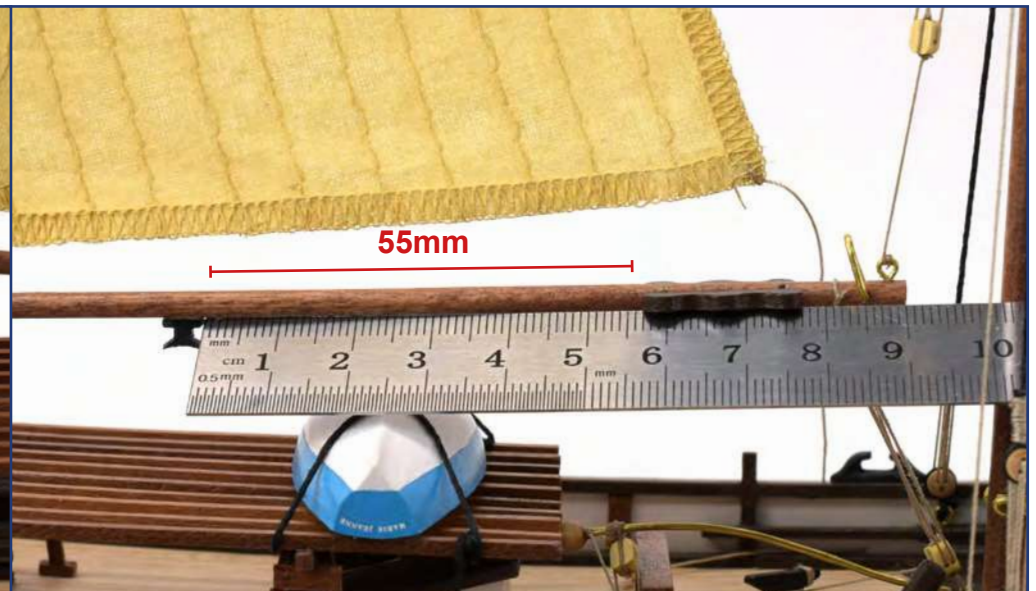
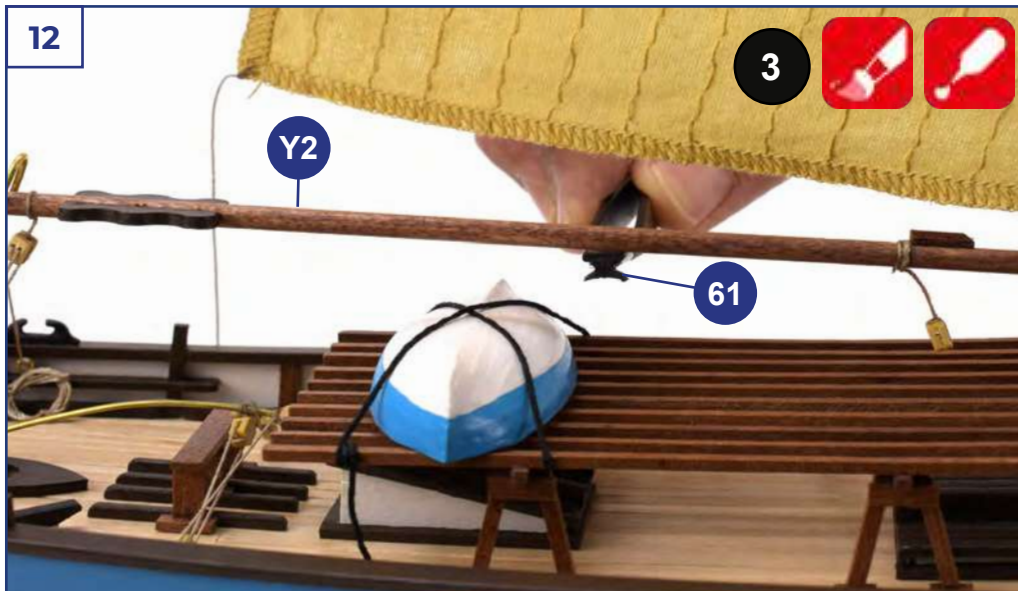
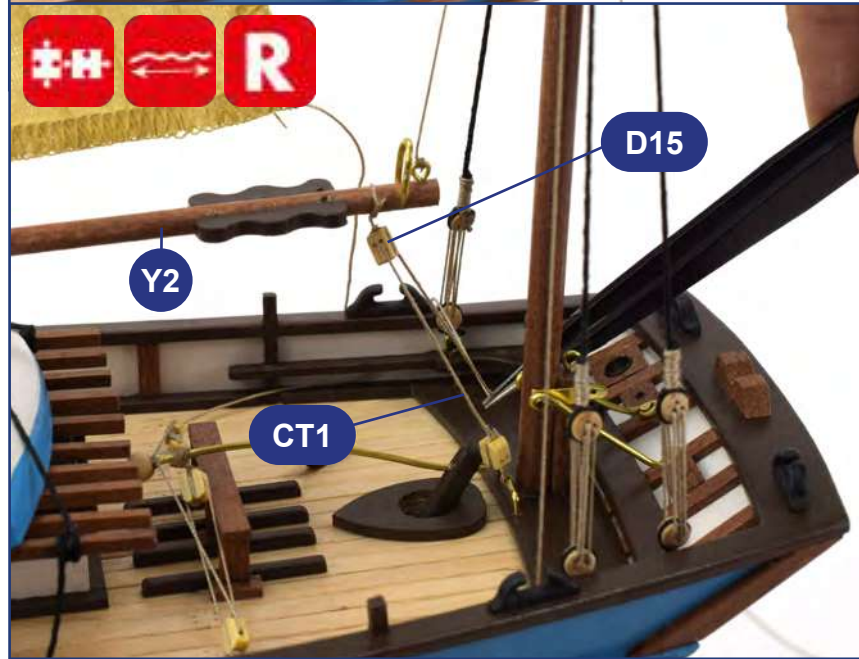
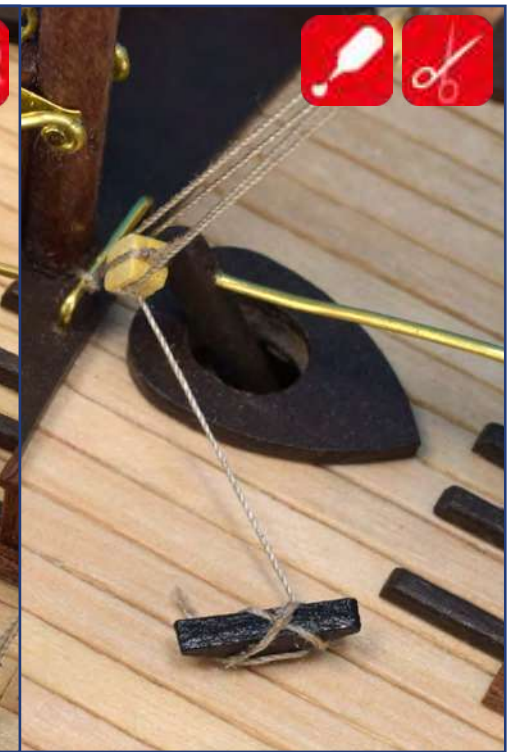
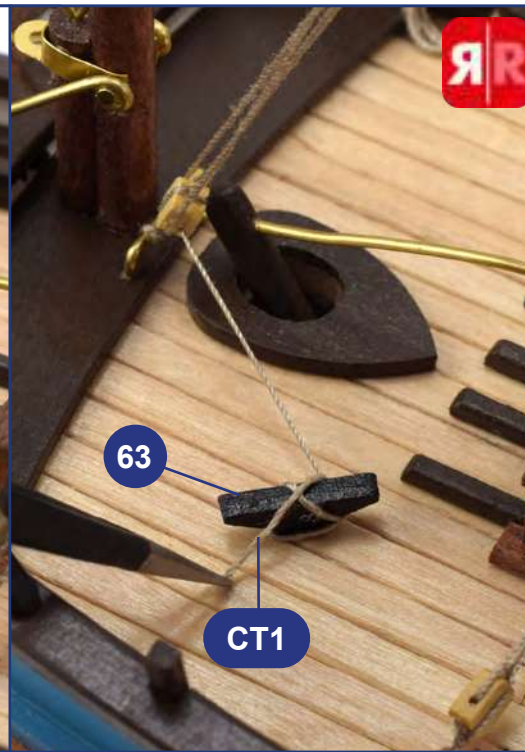
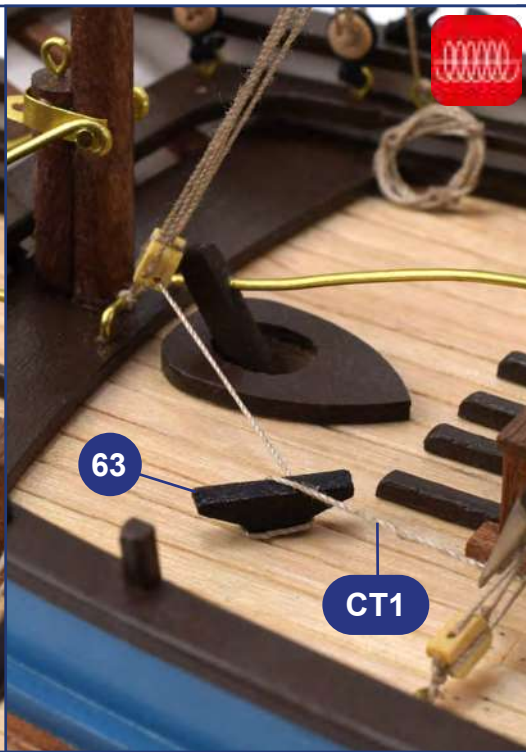
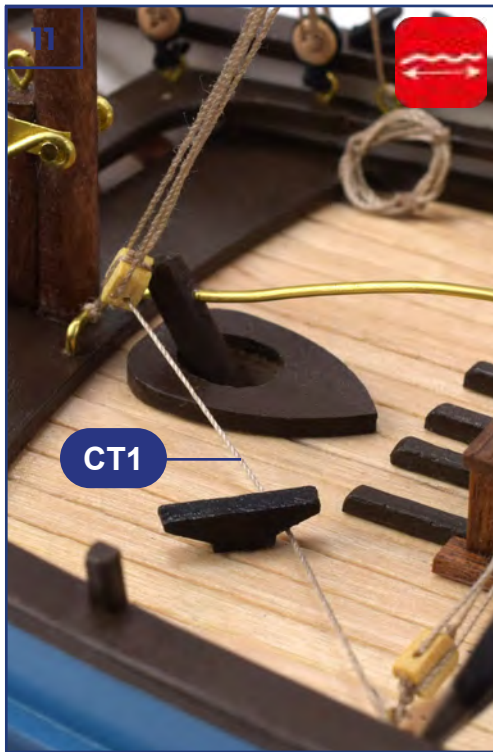
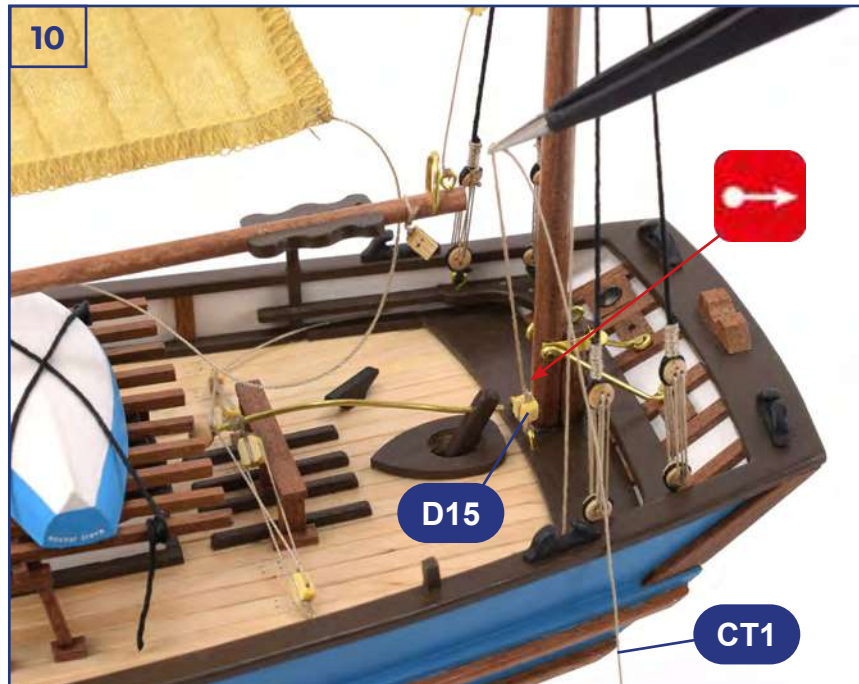



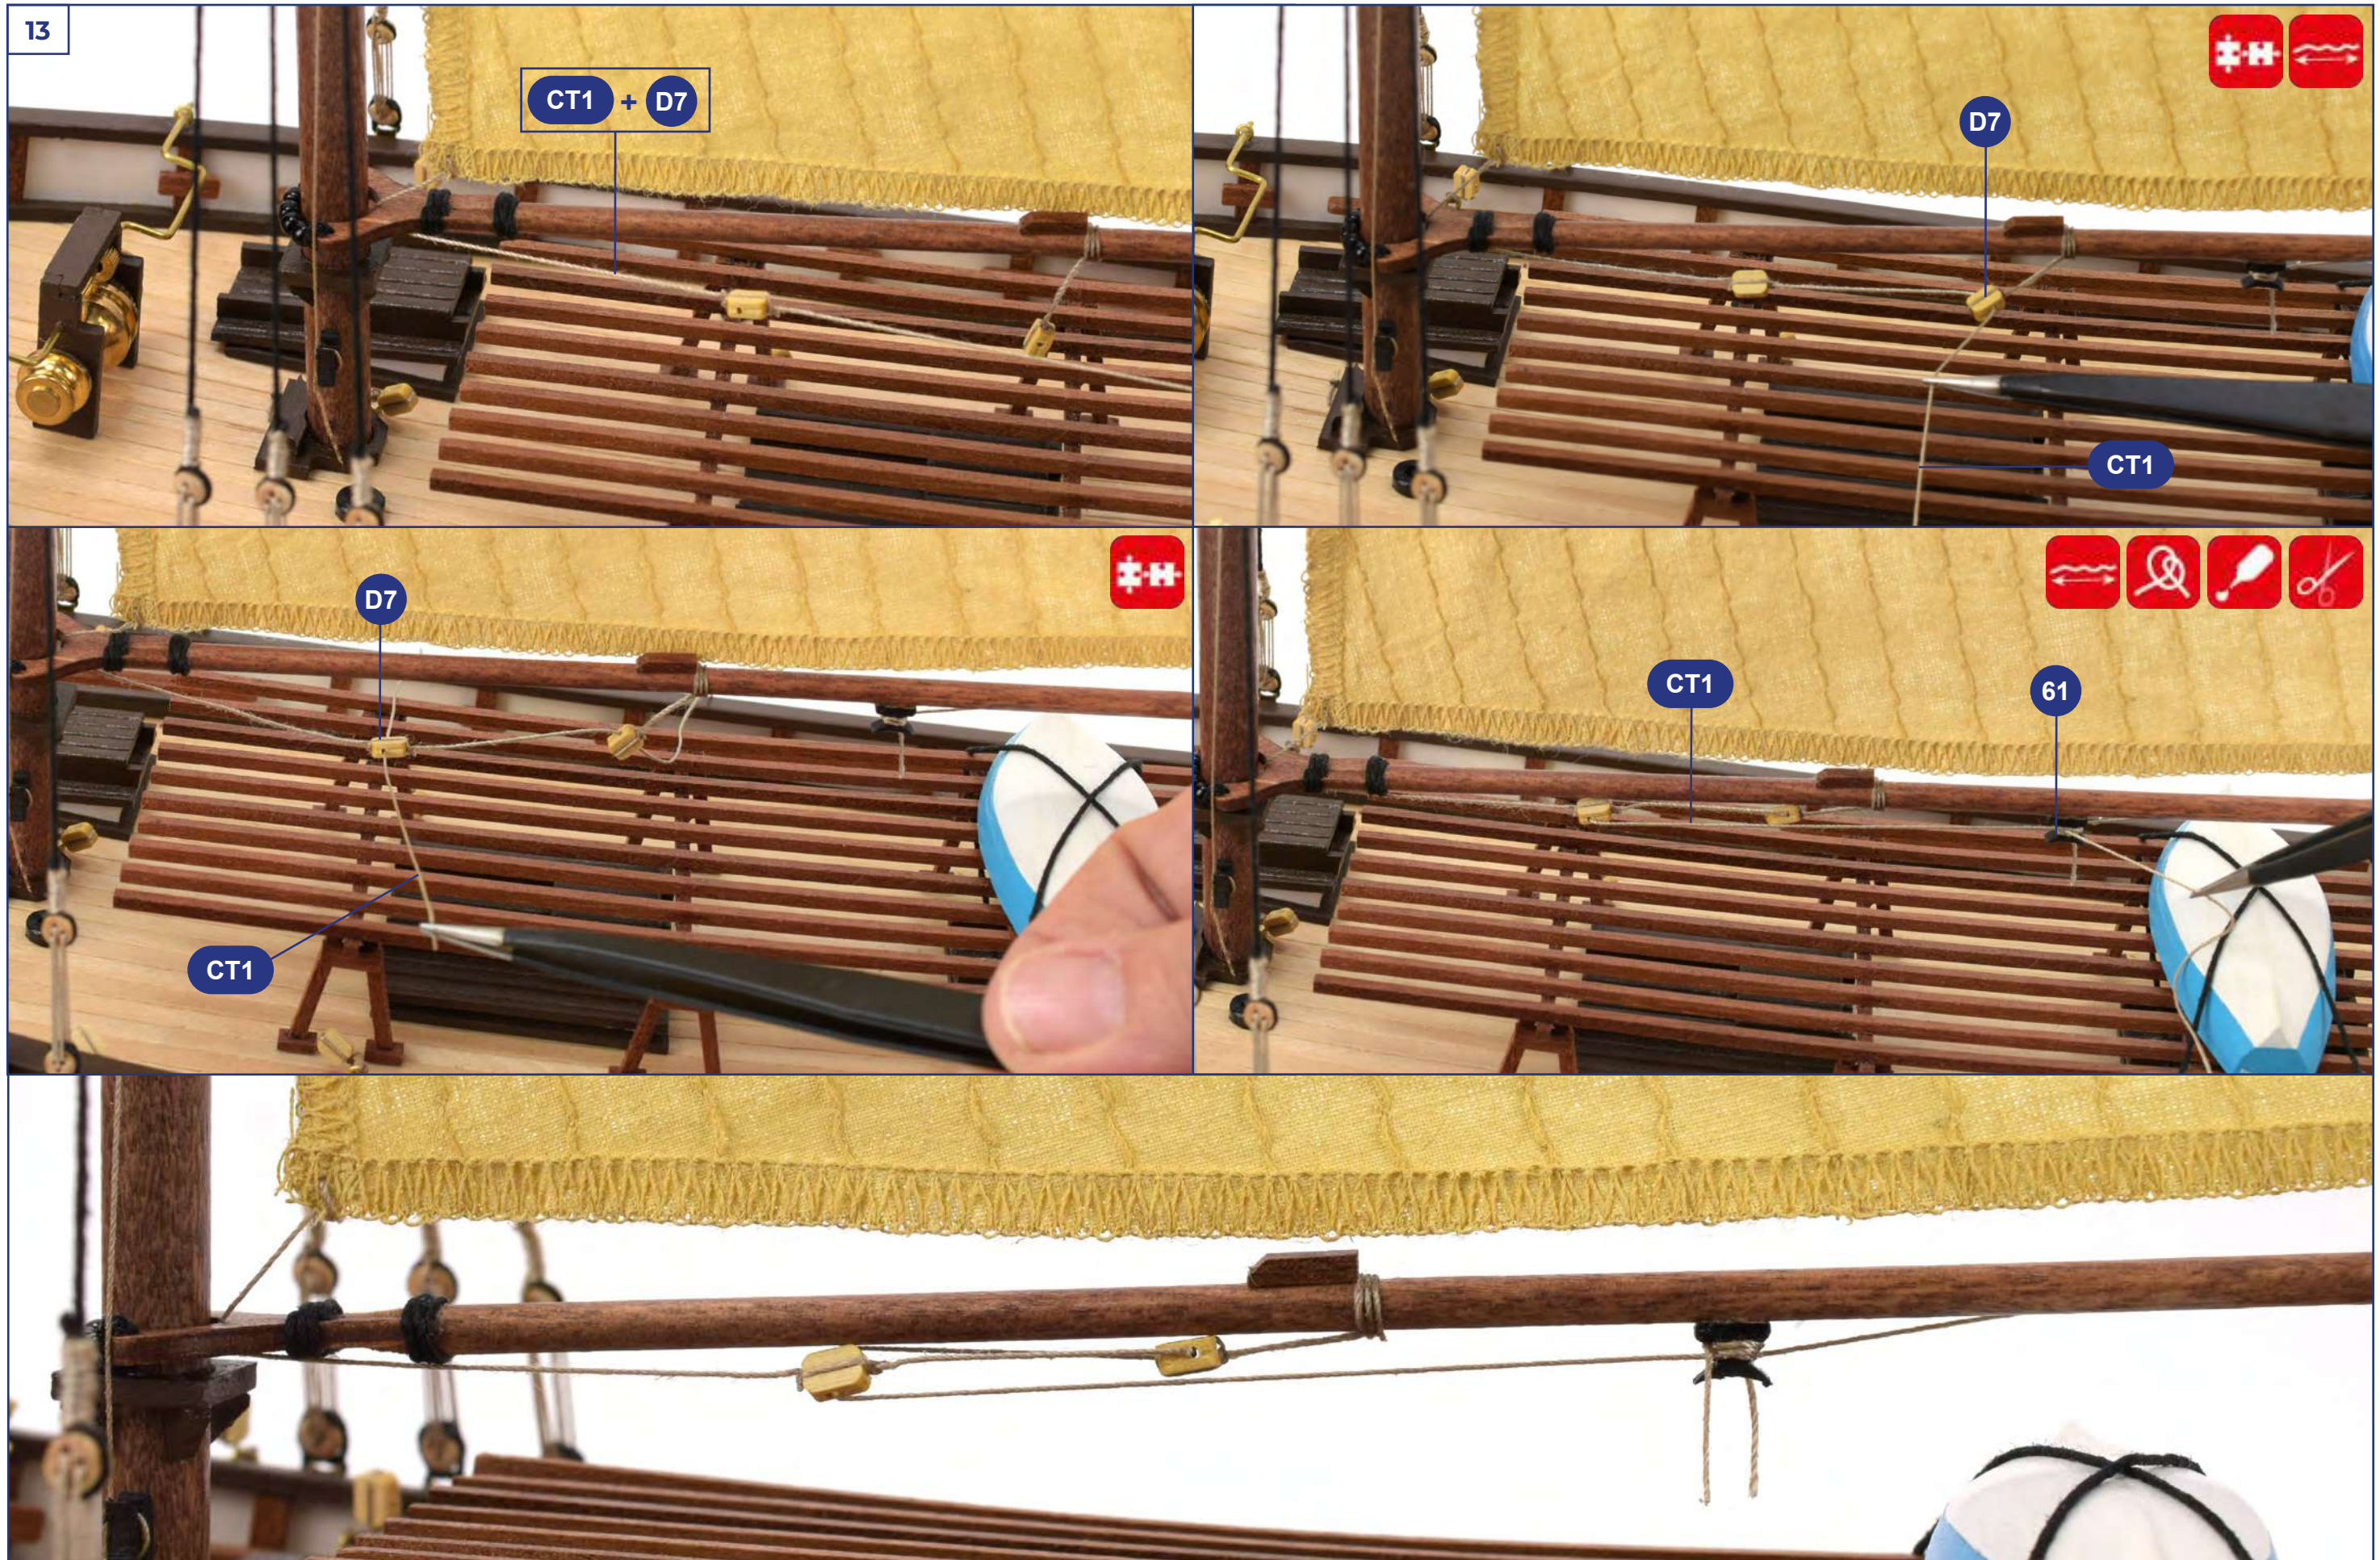


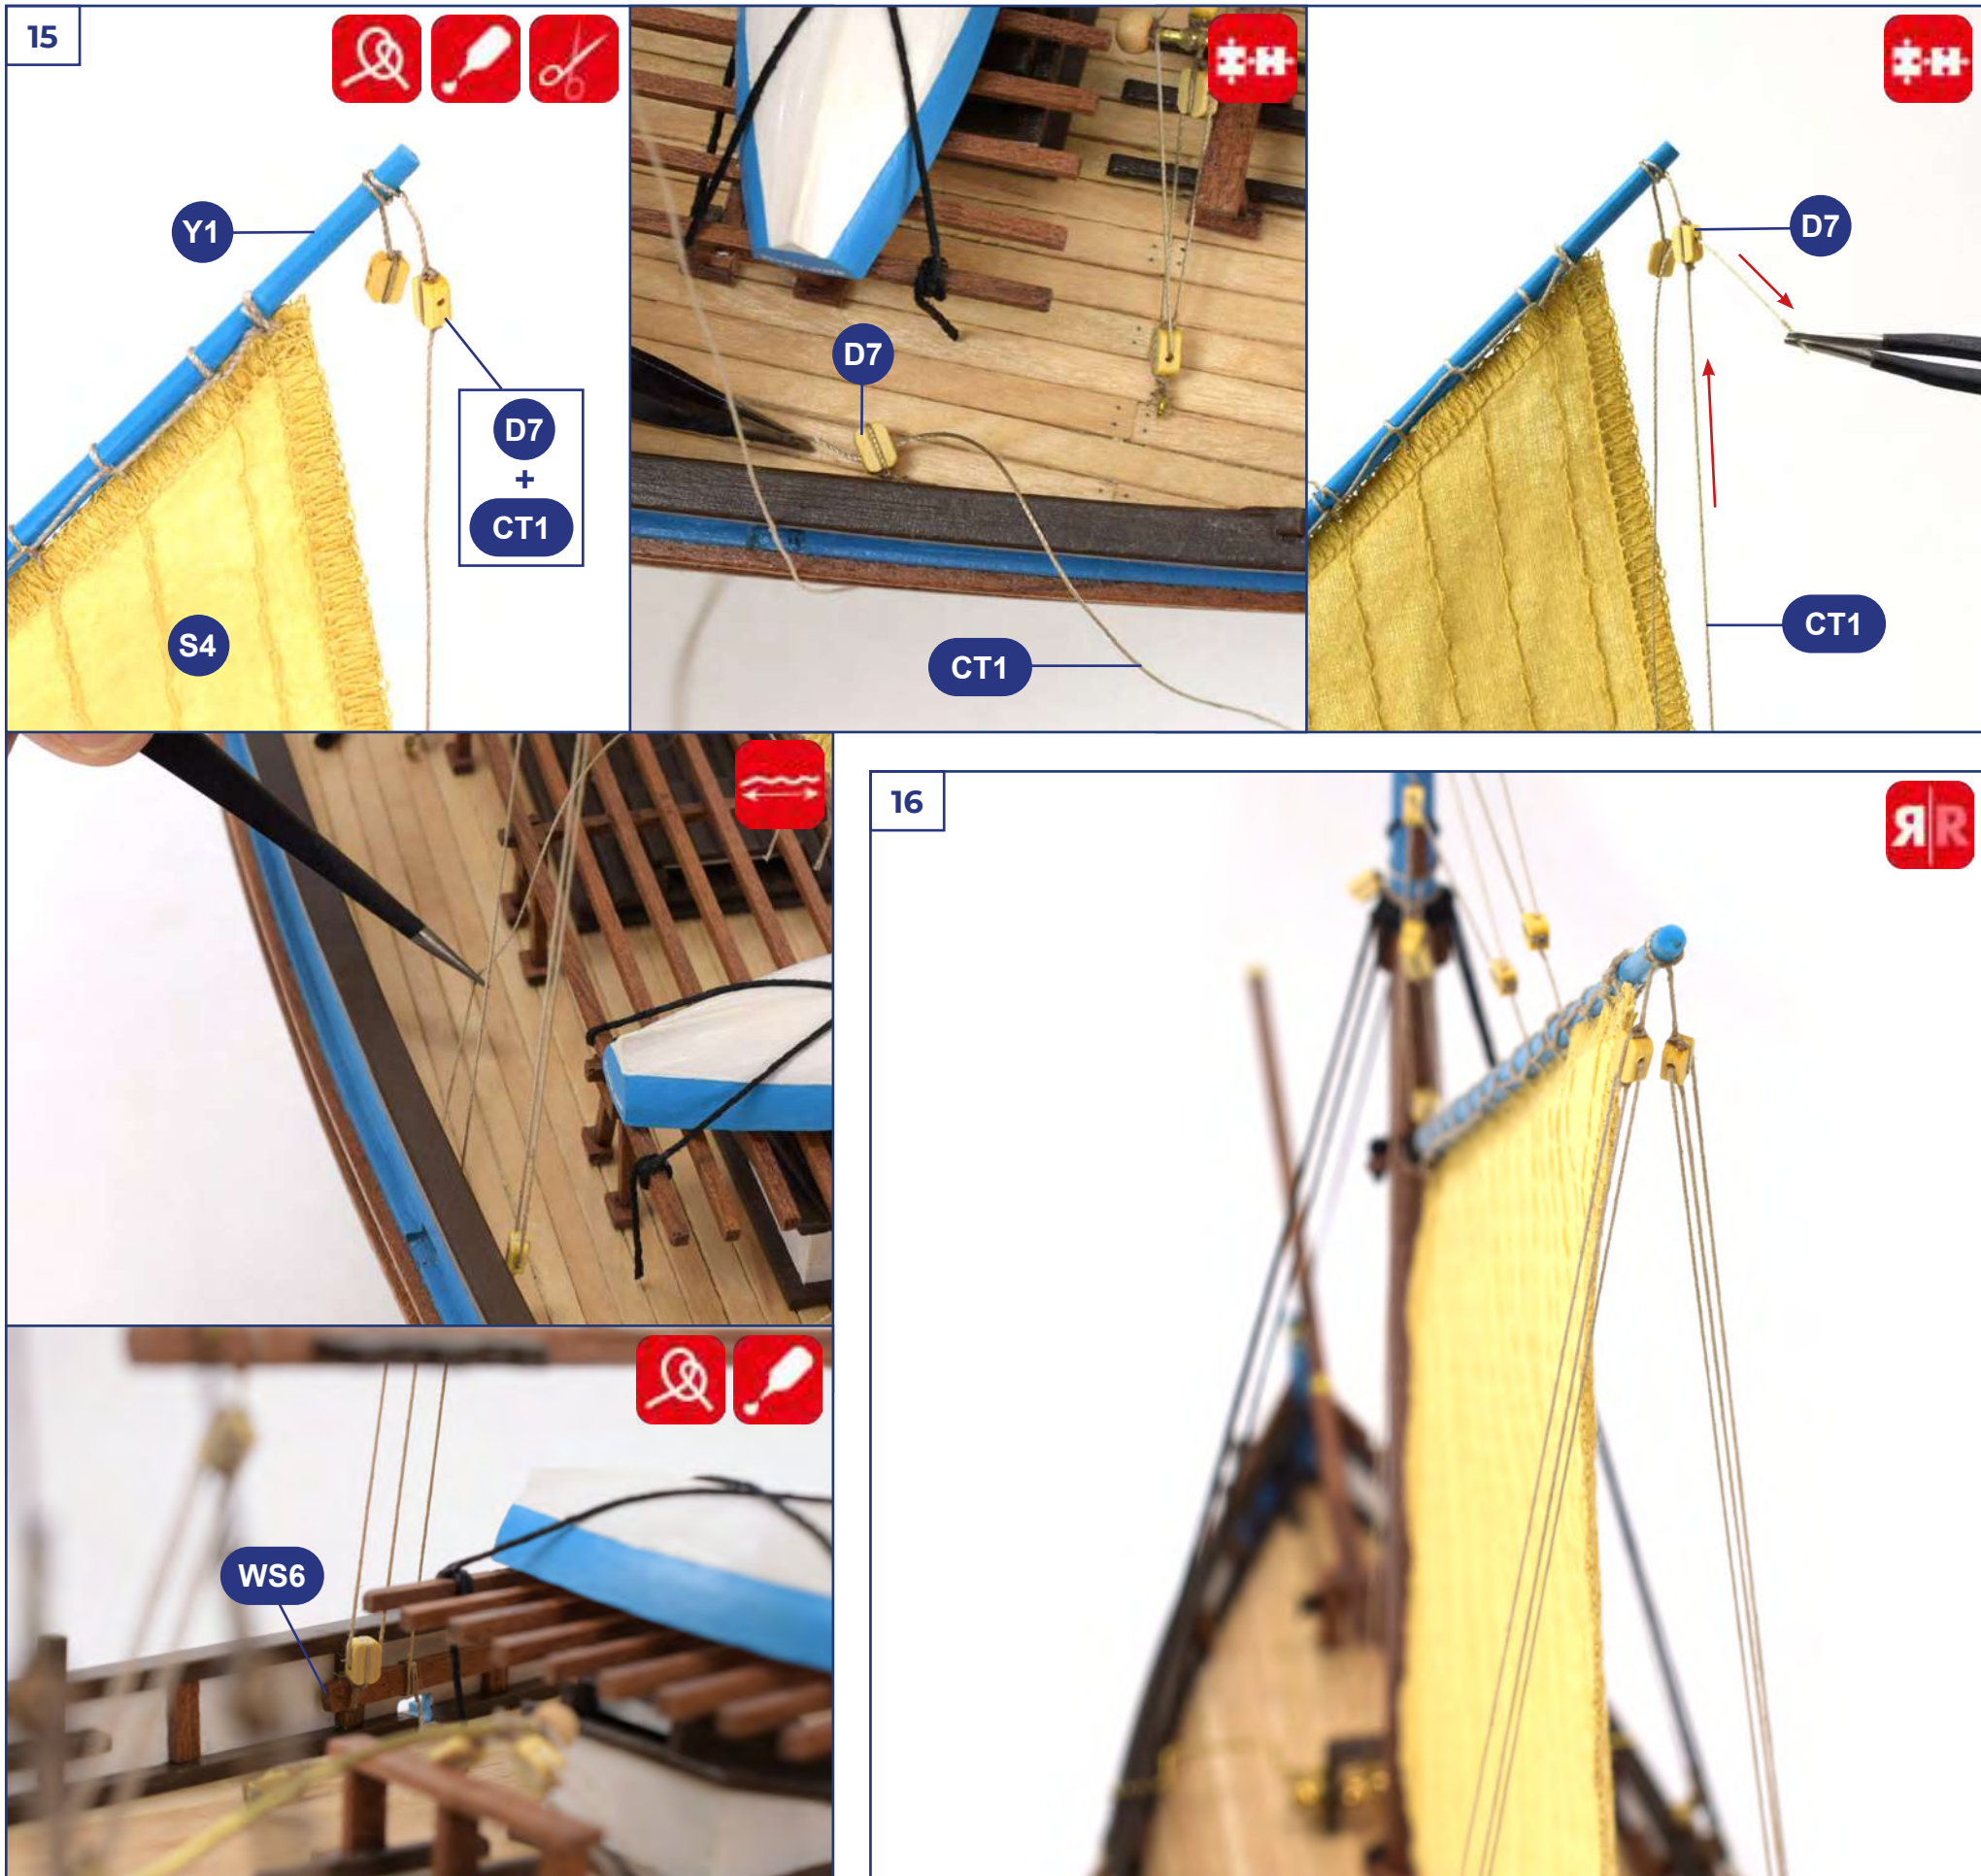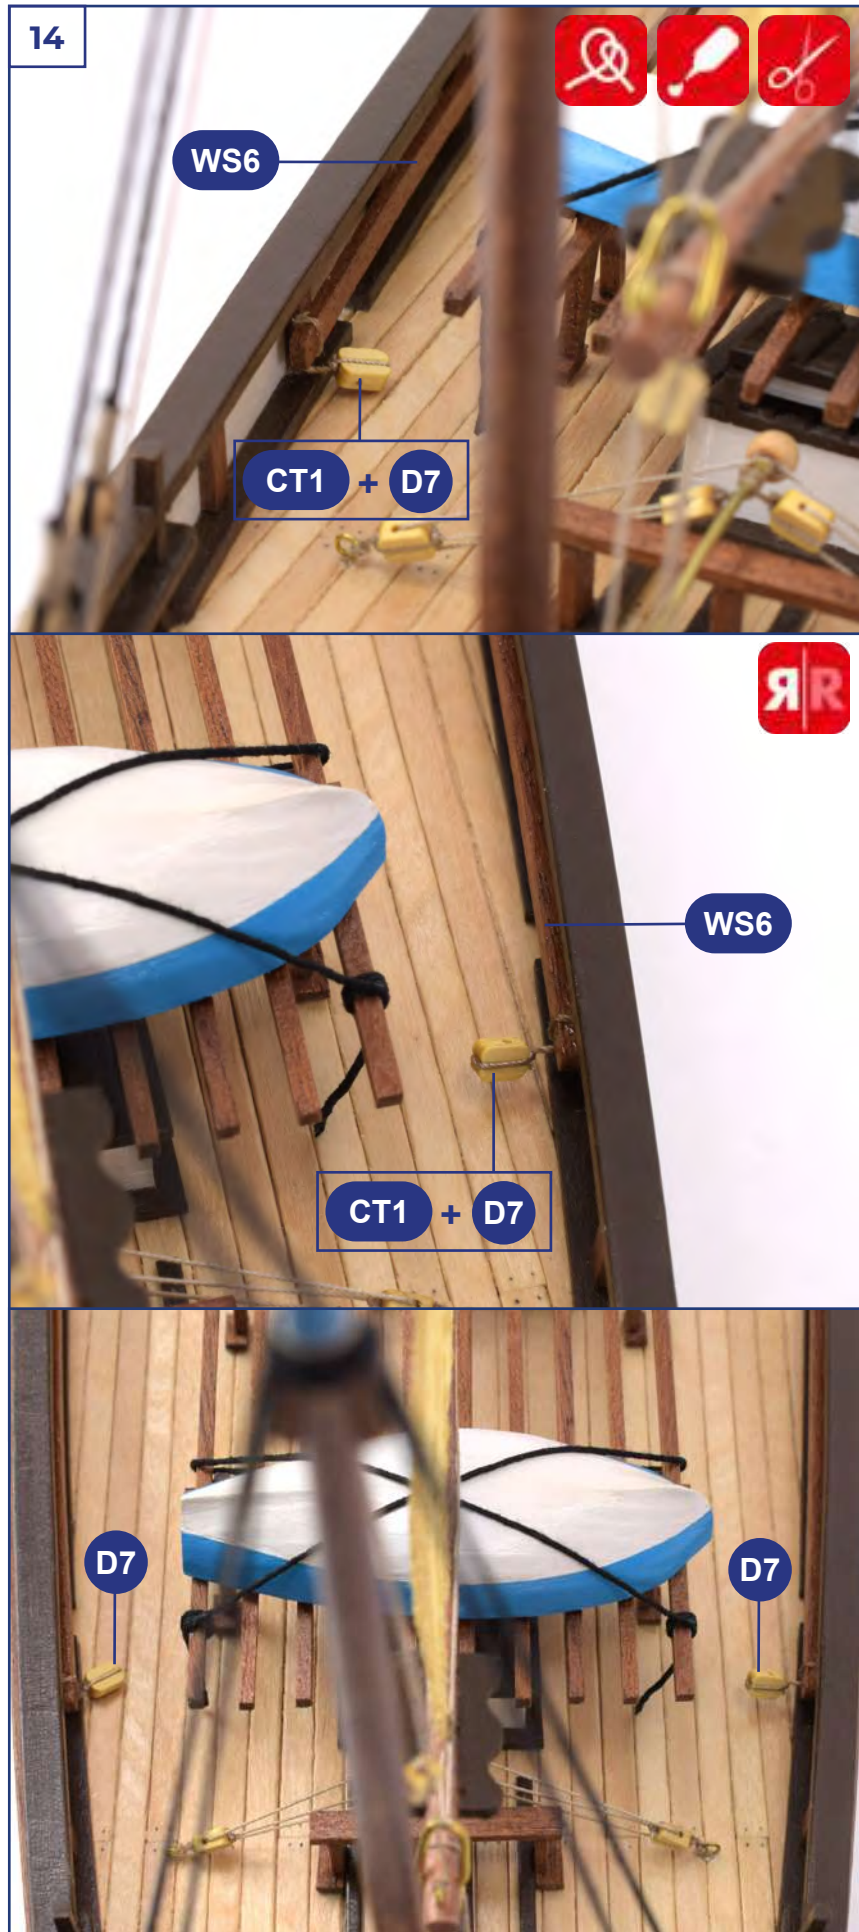

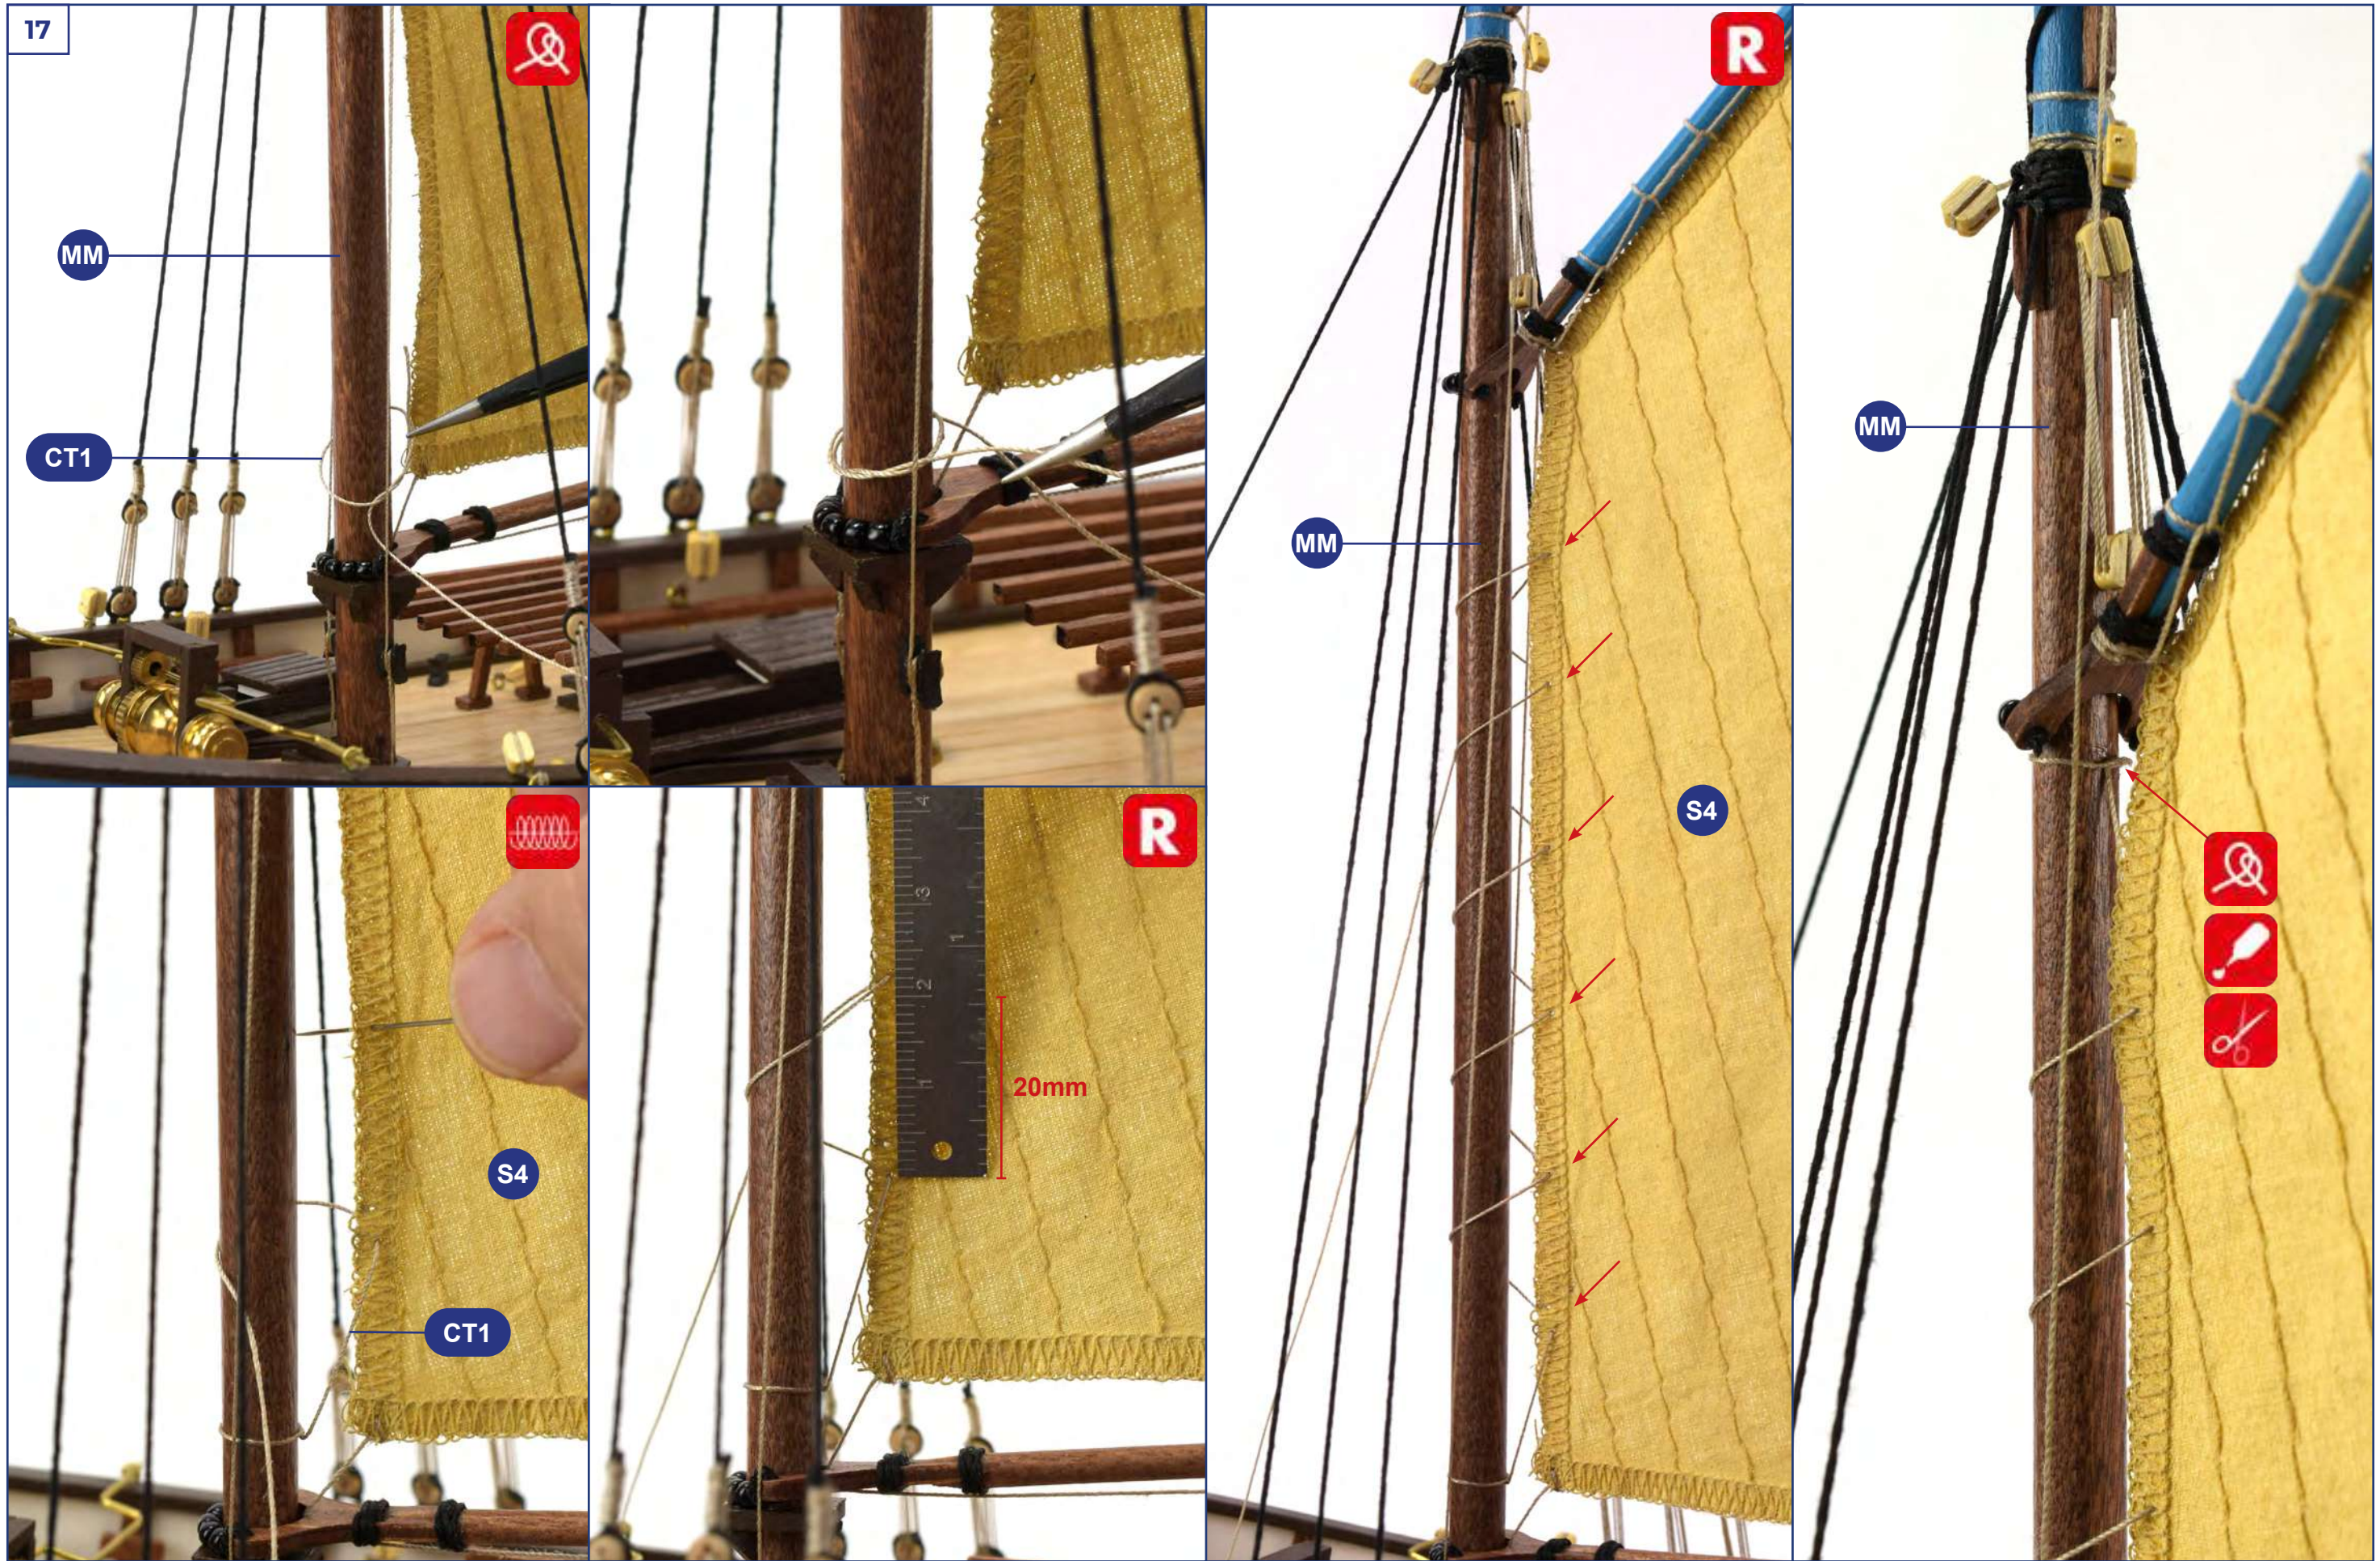



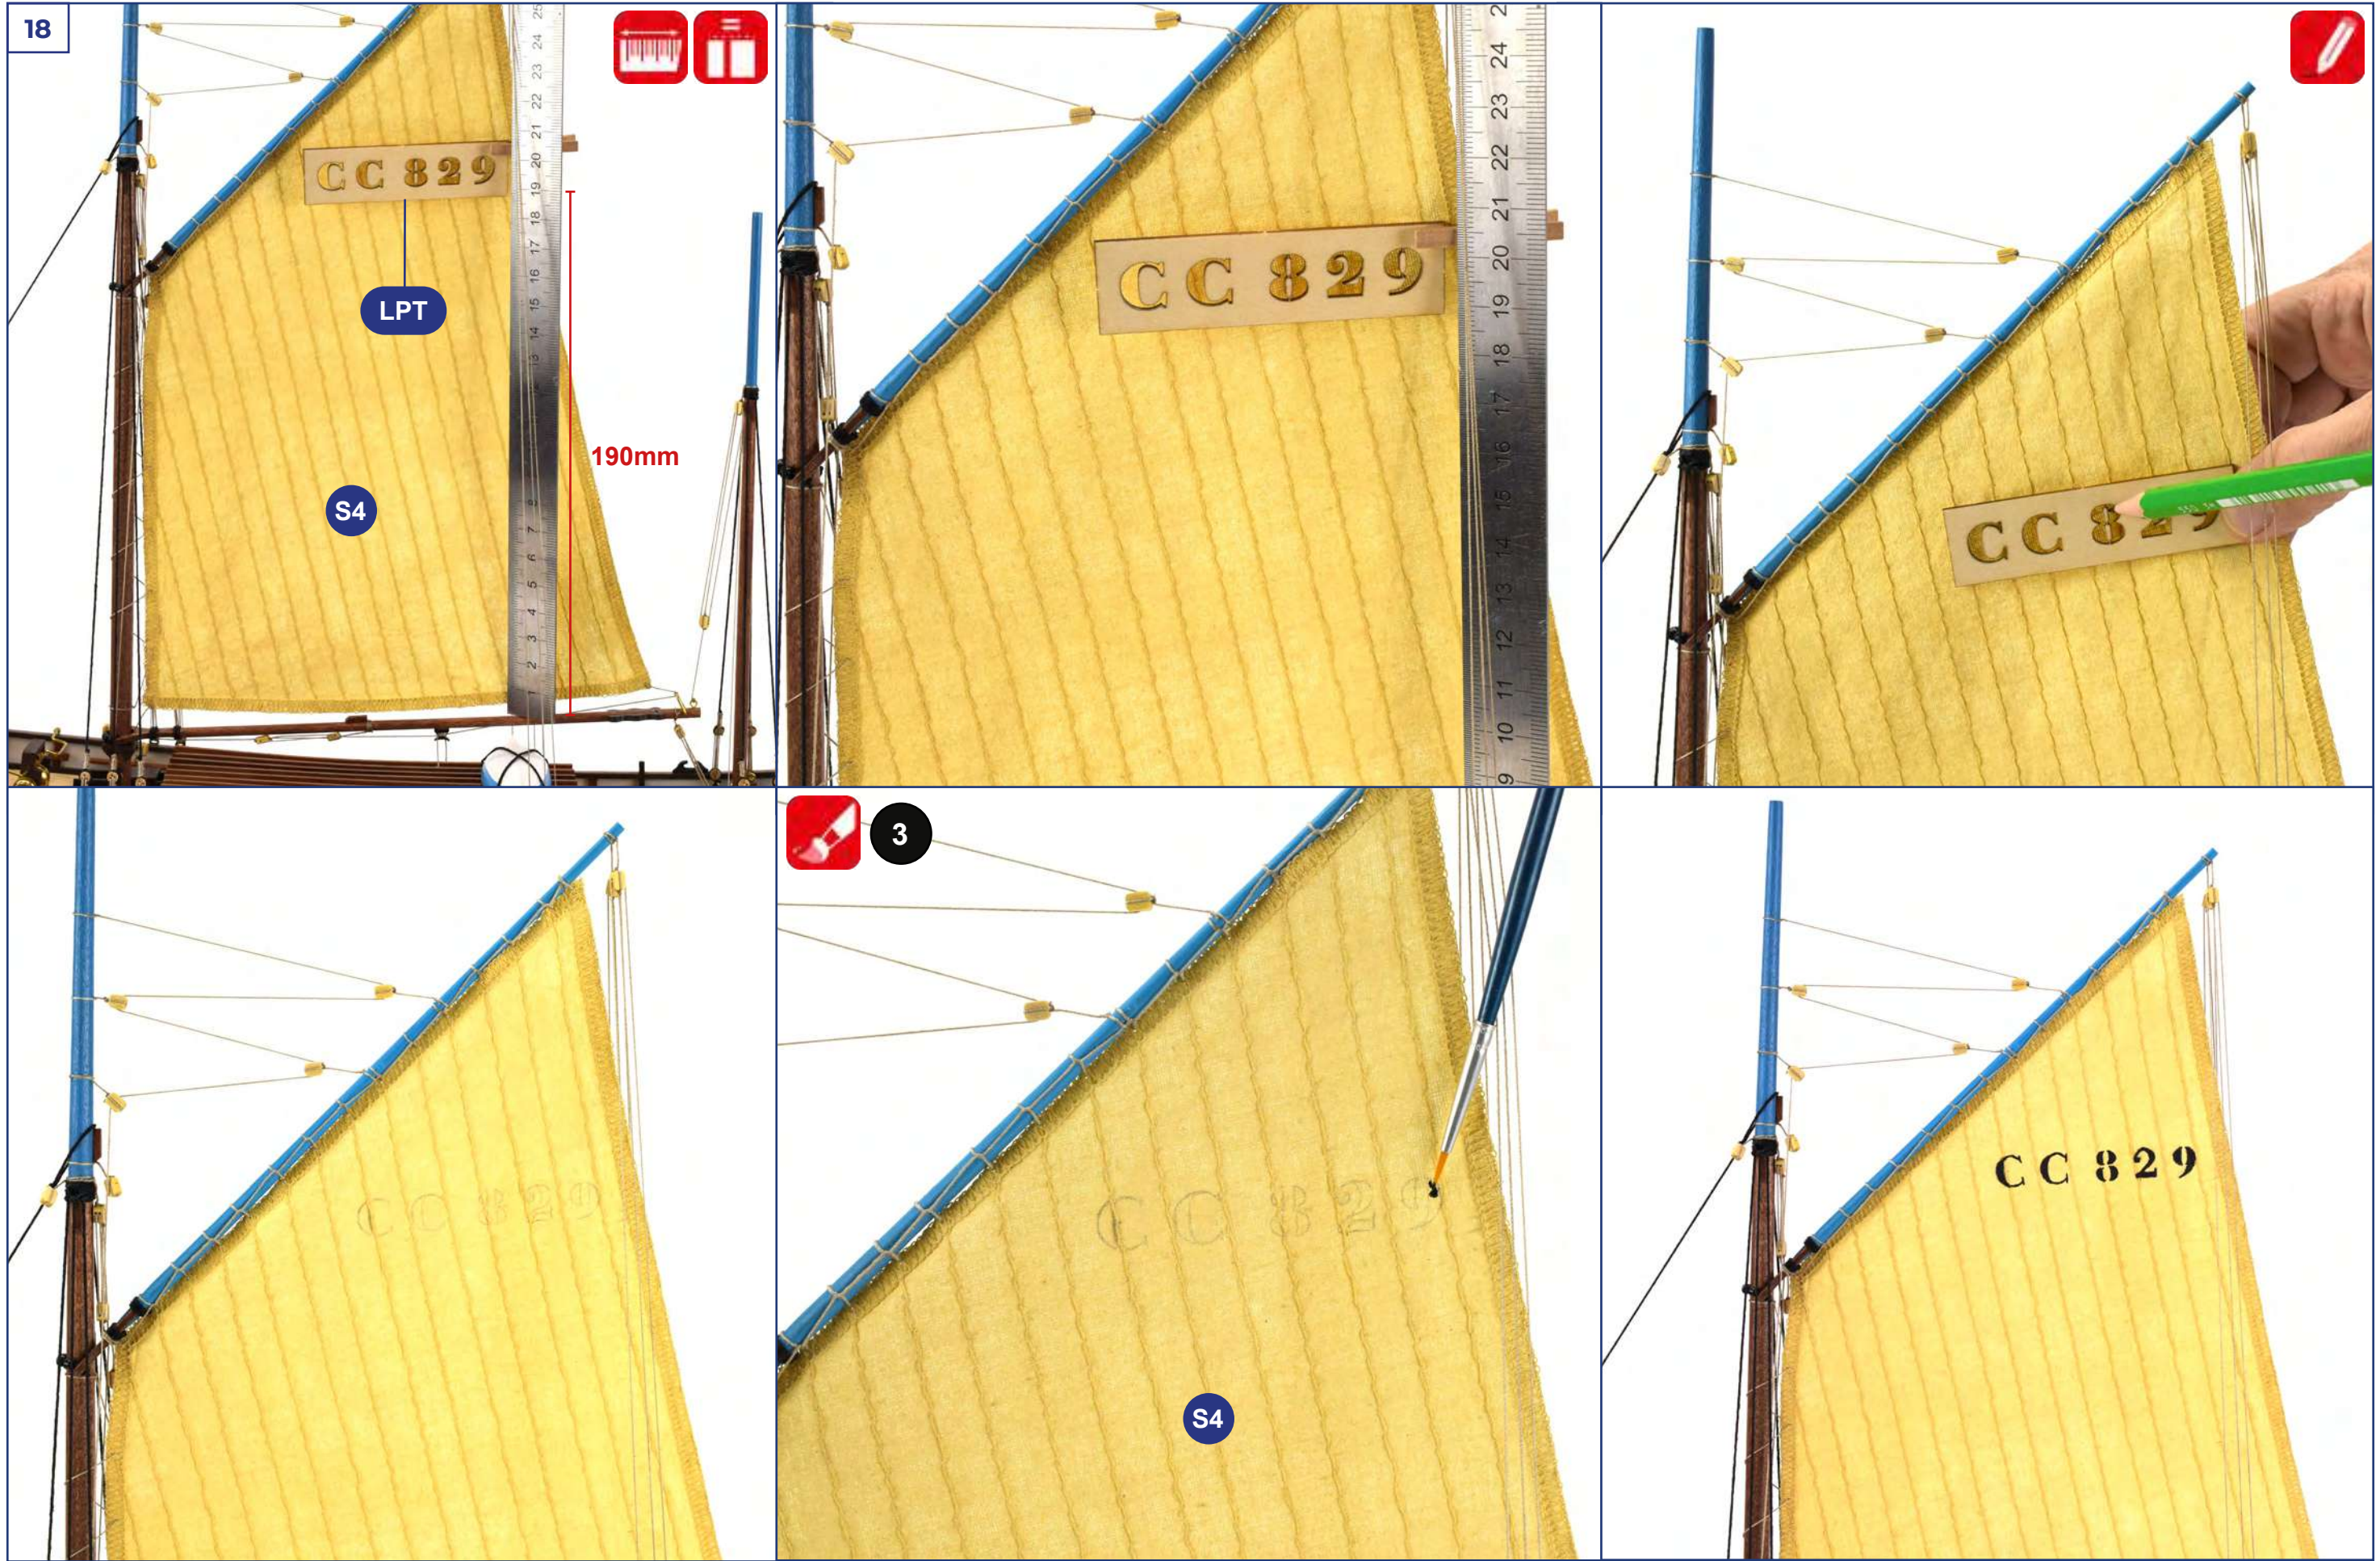


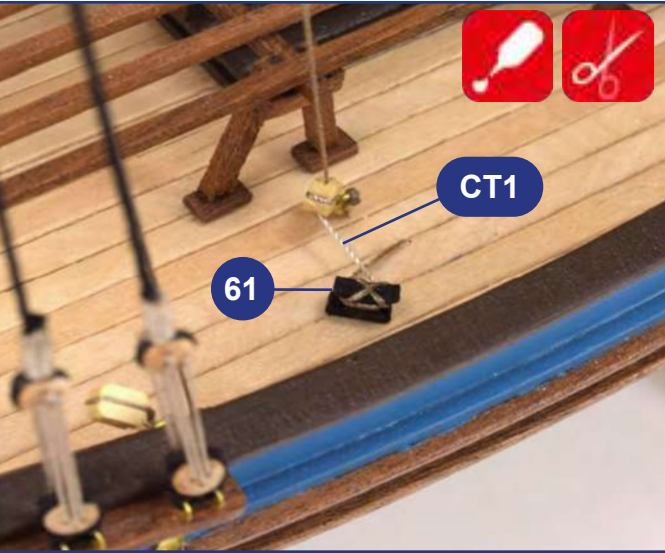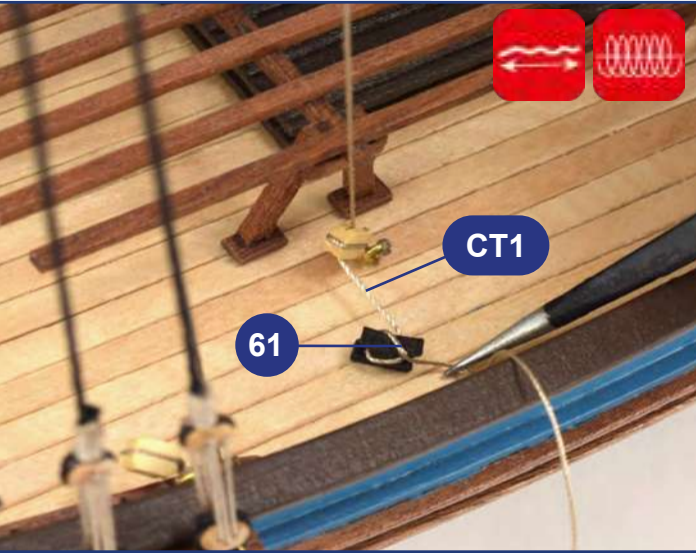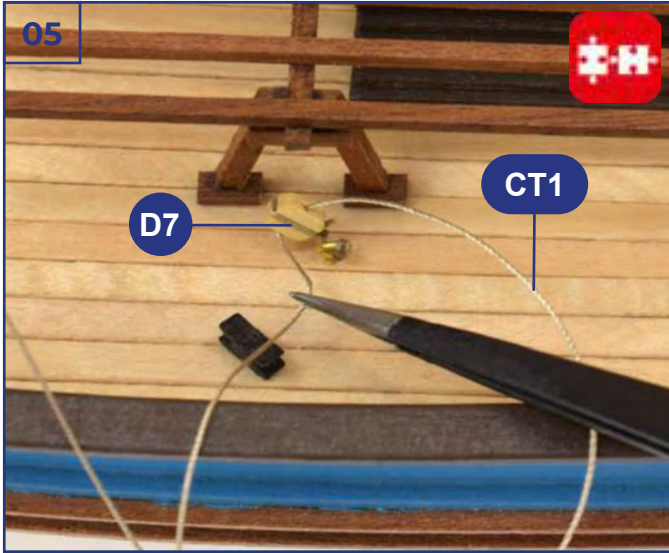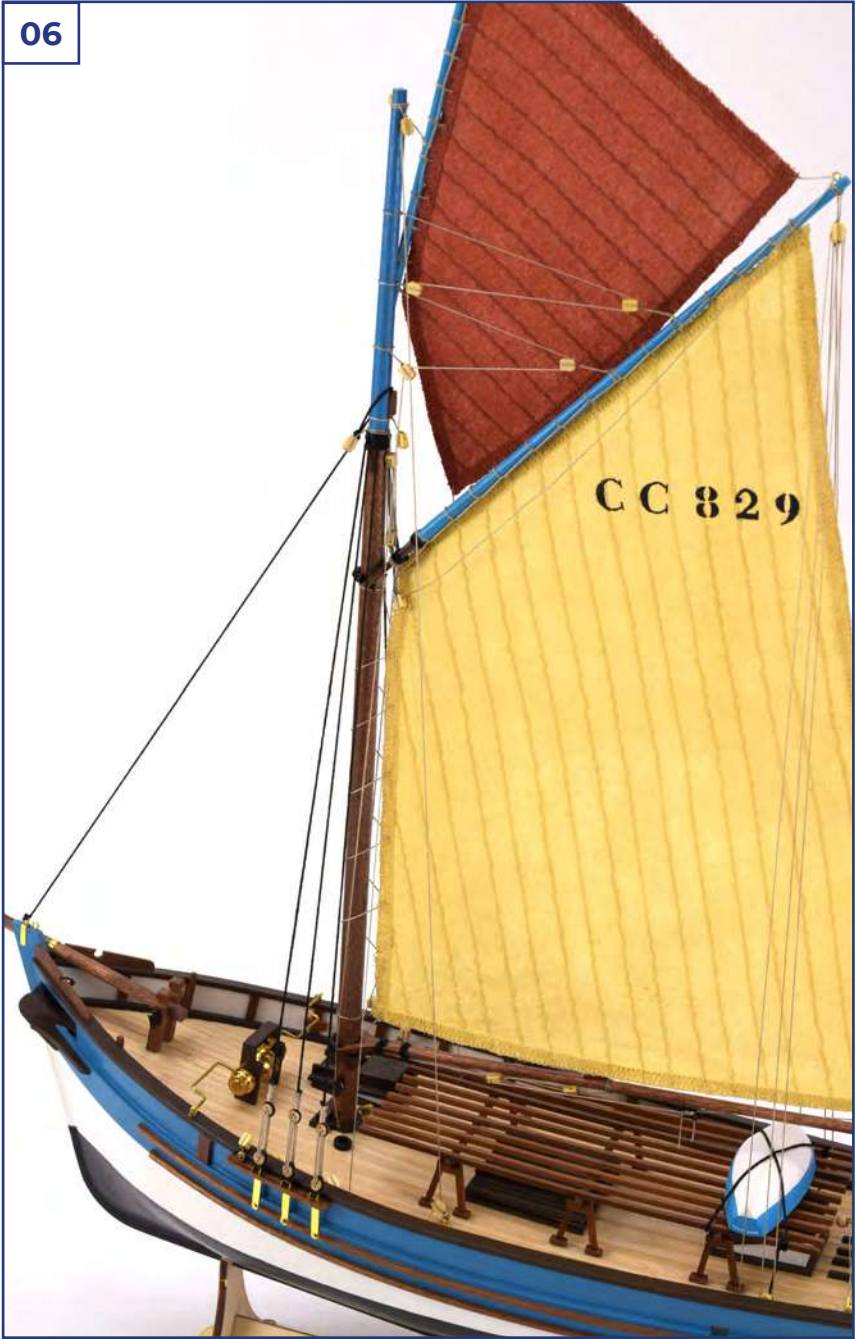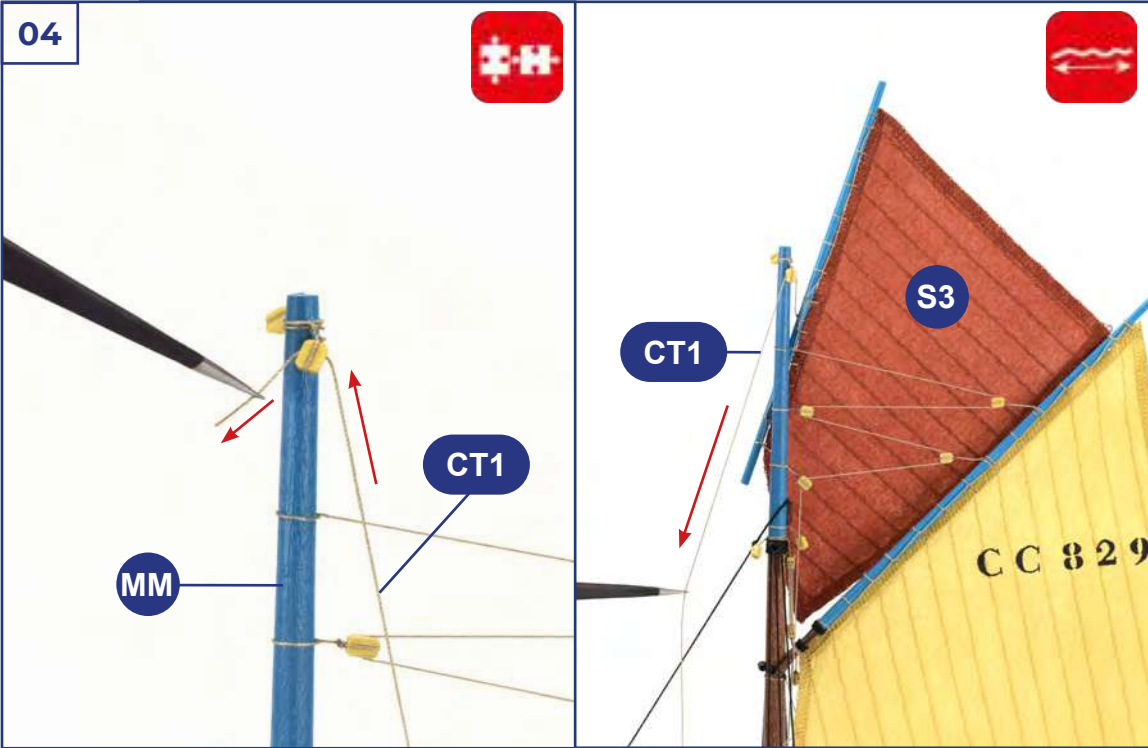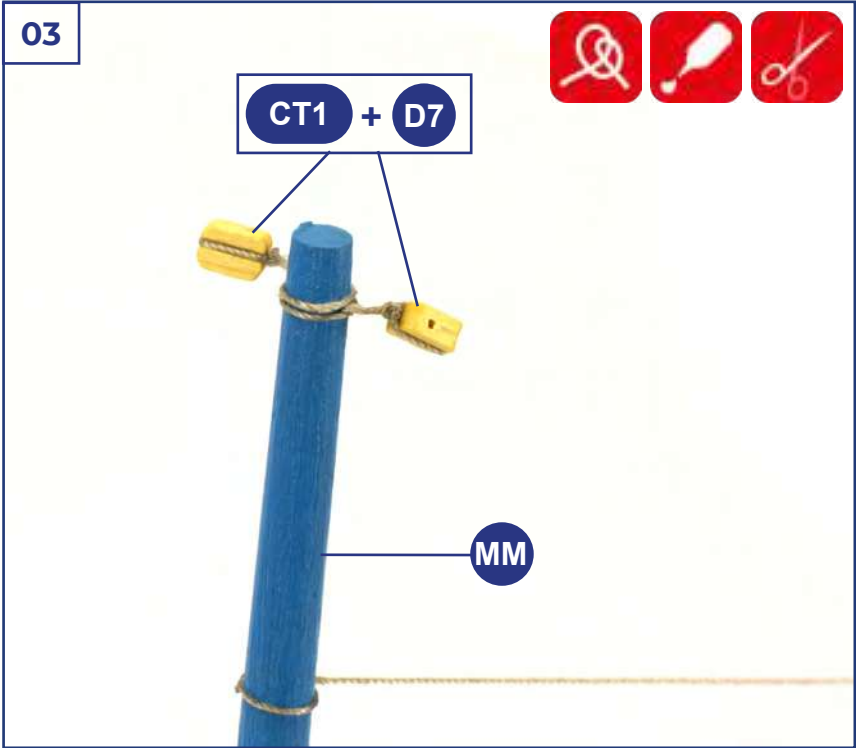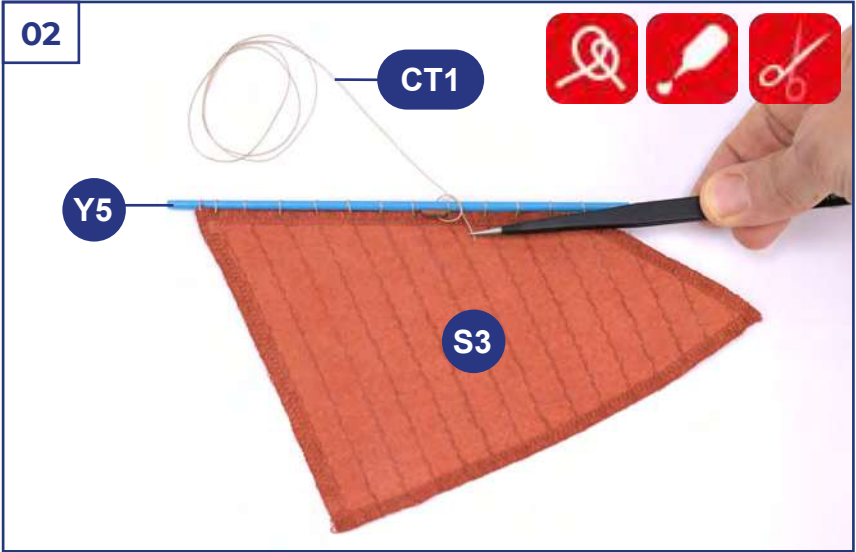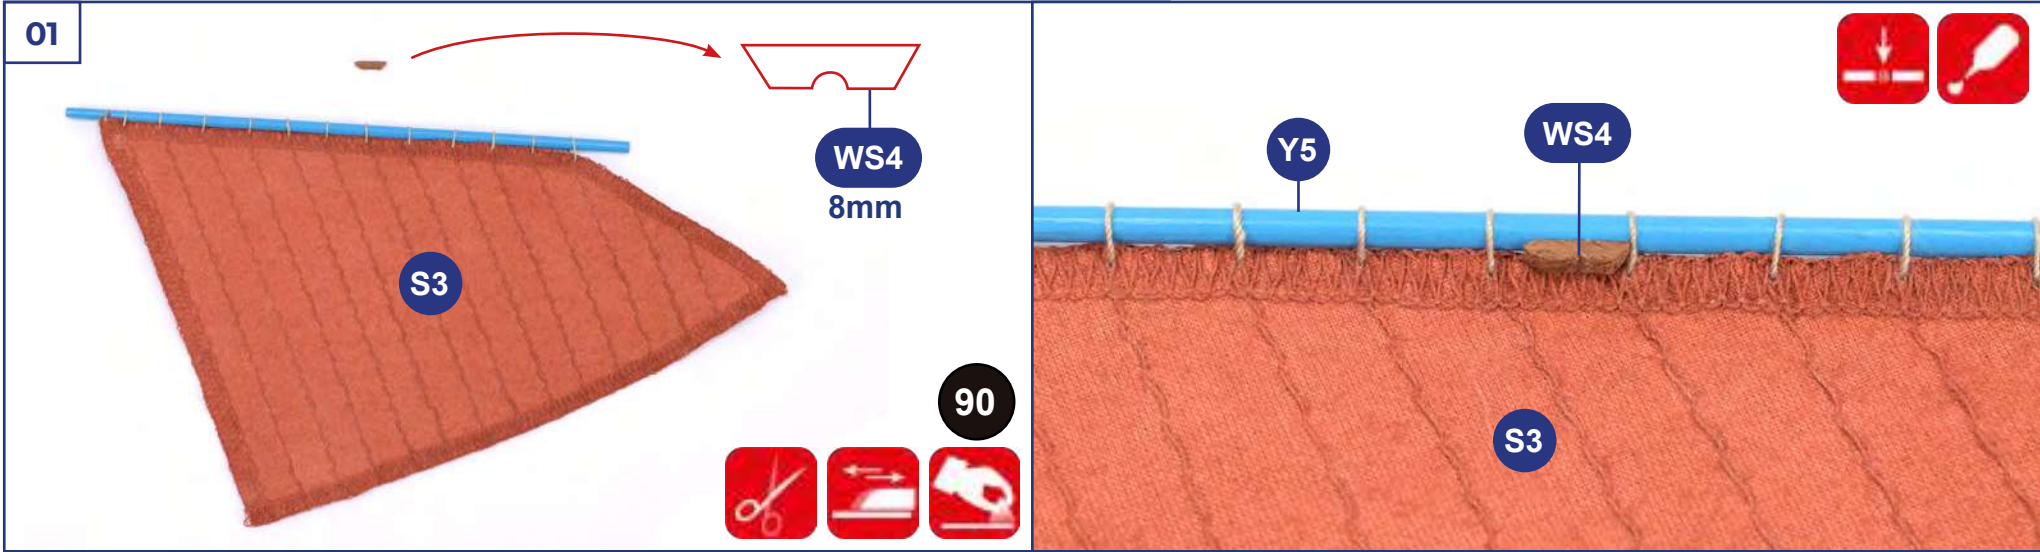


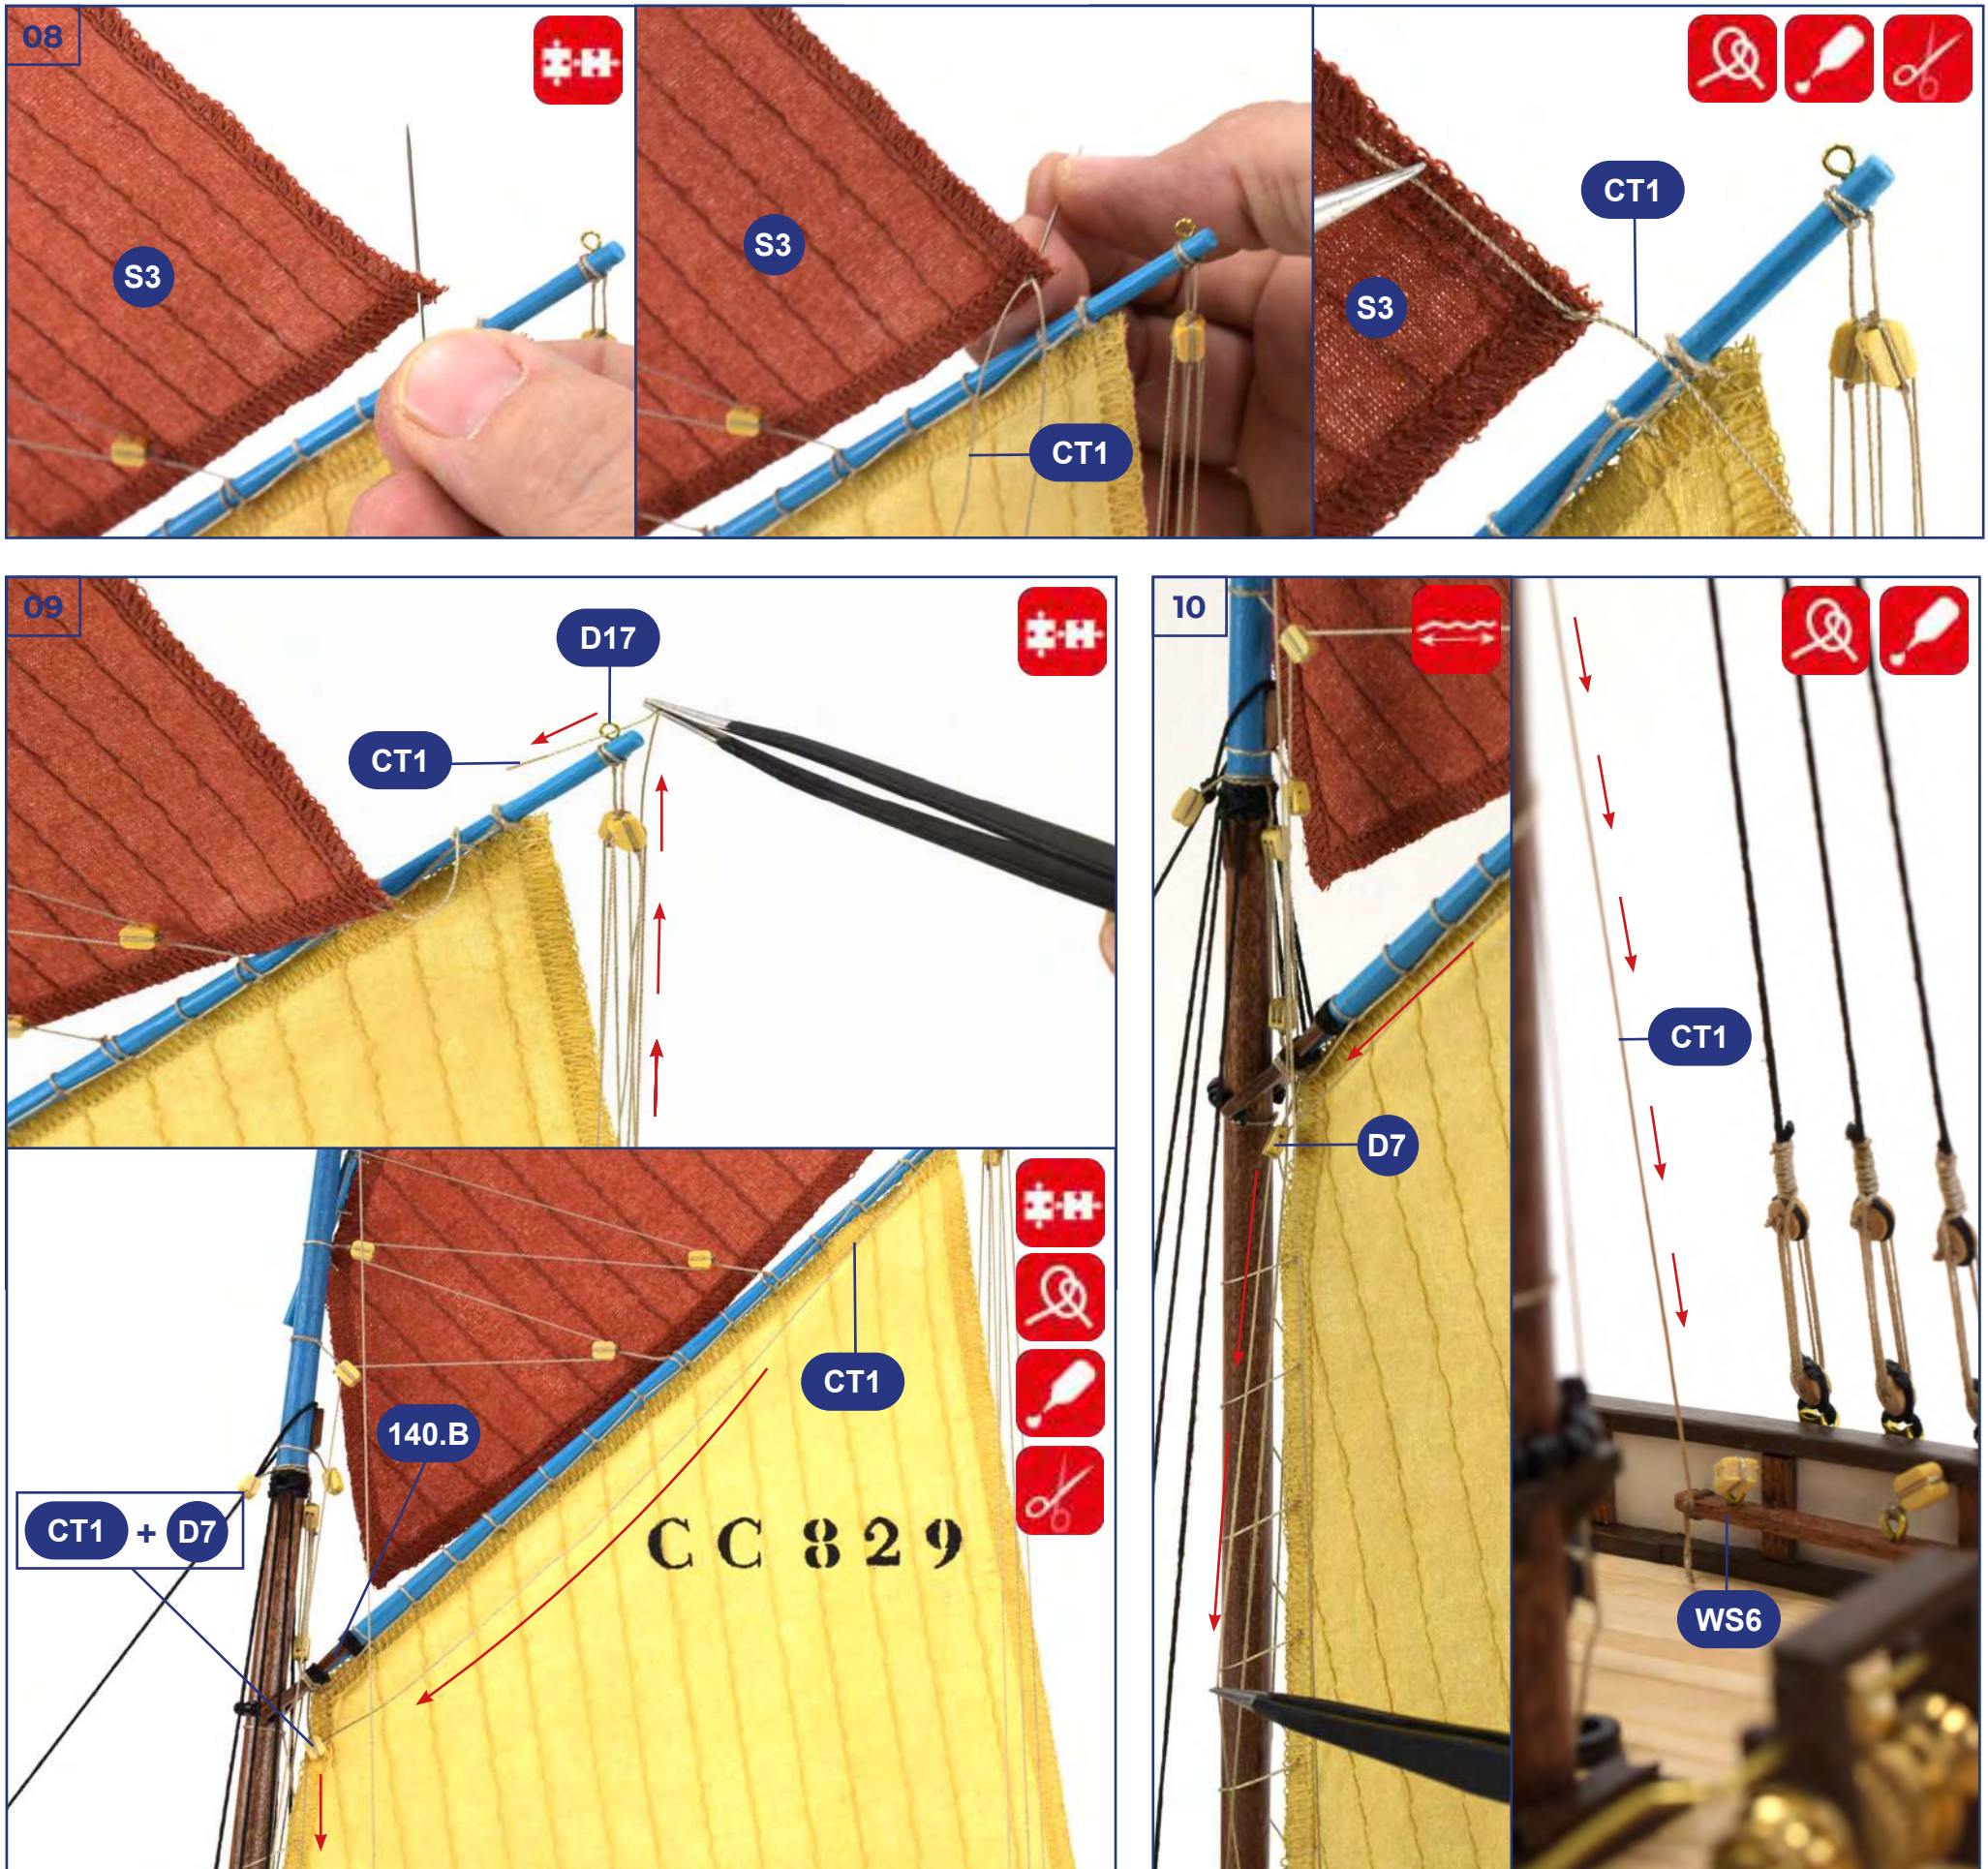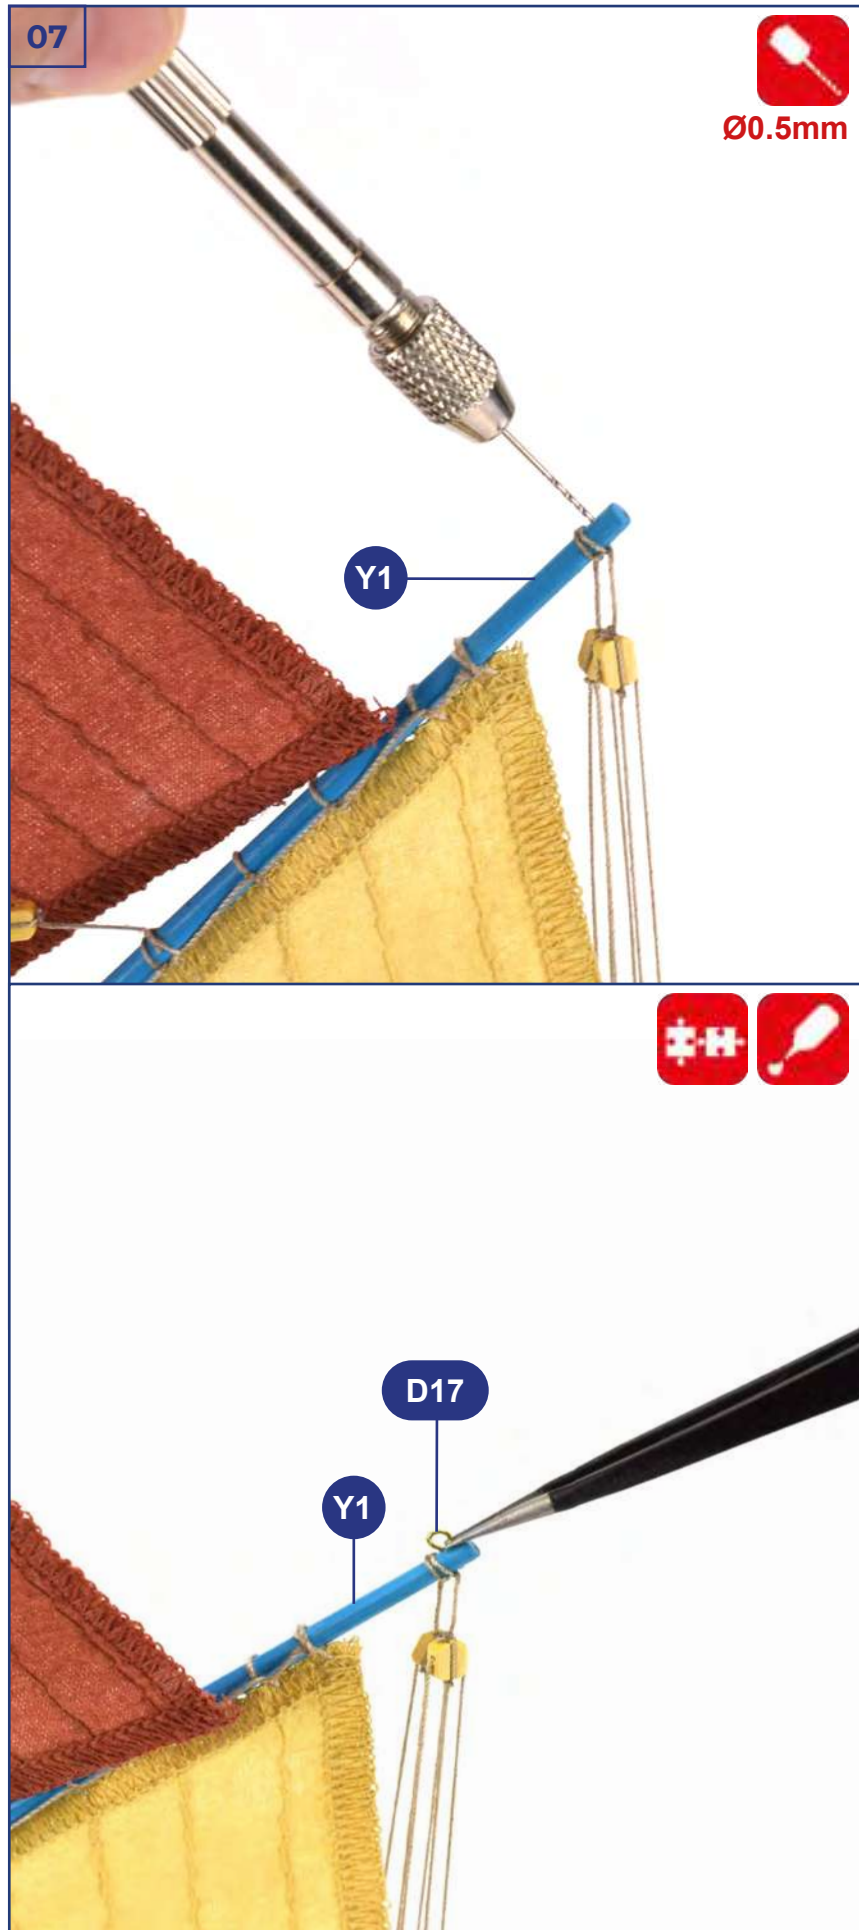




11



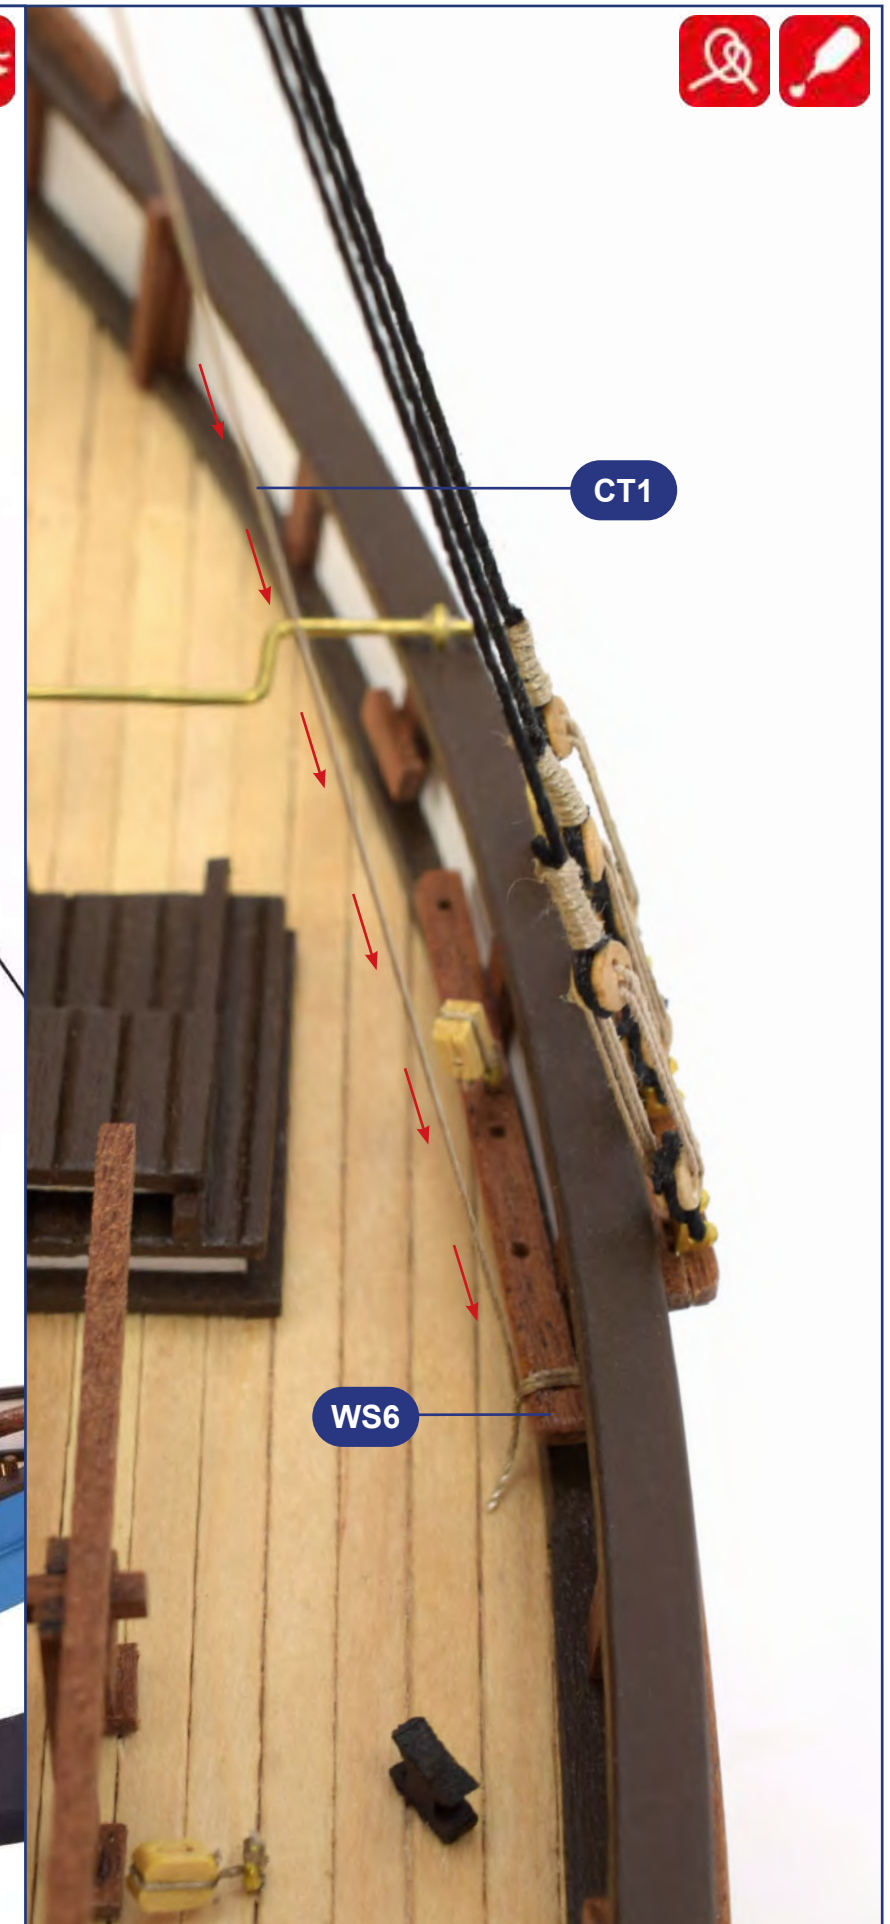




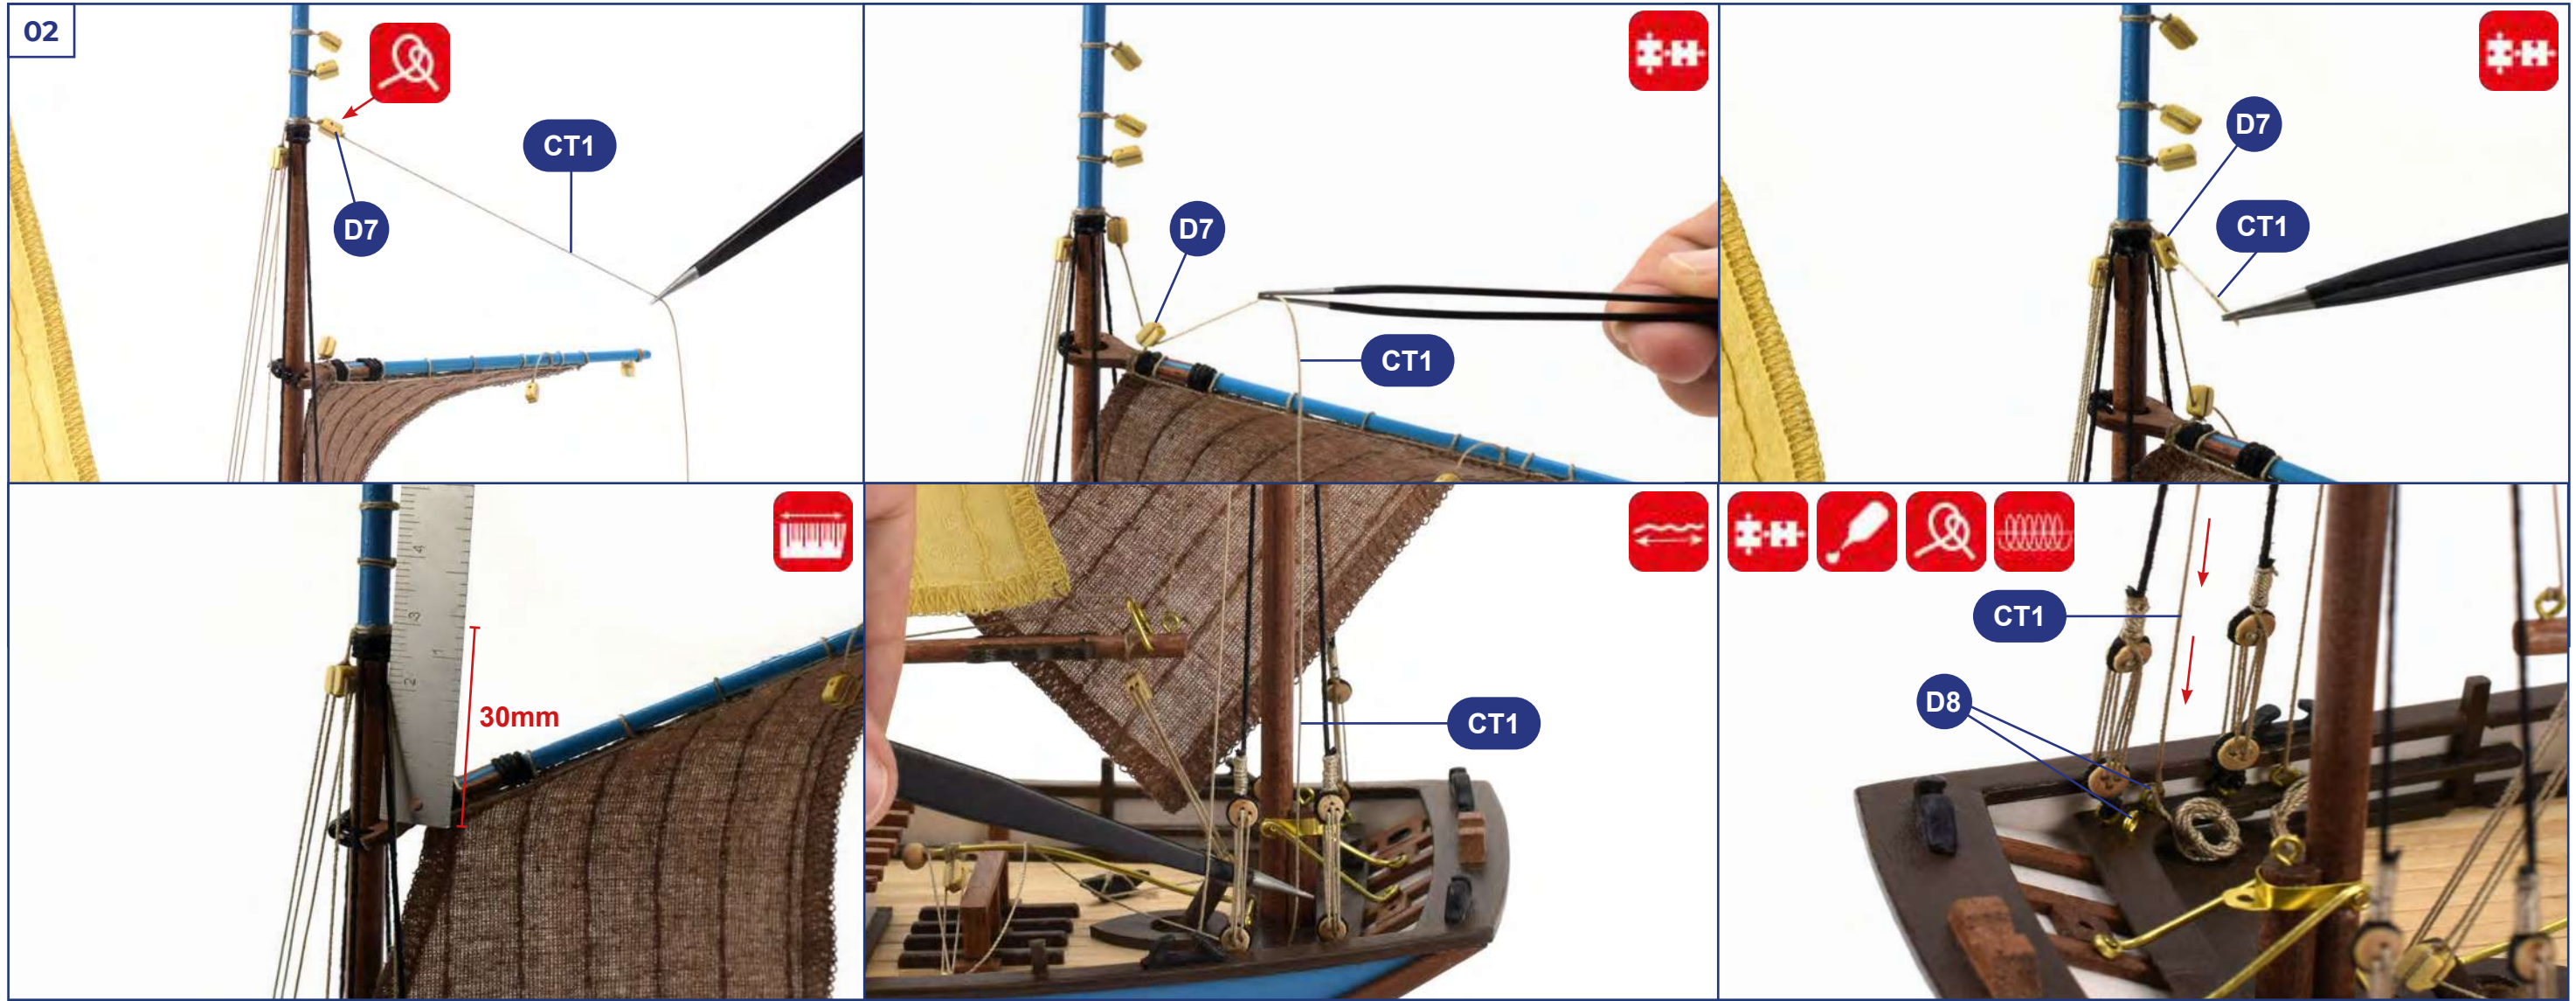
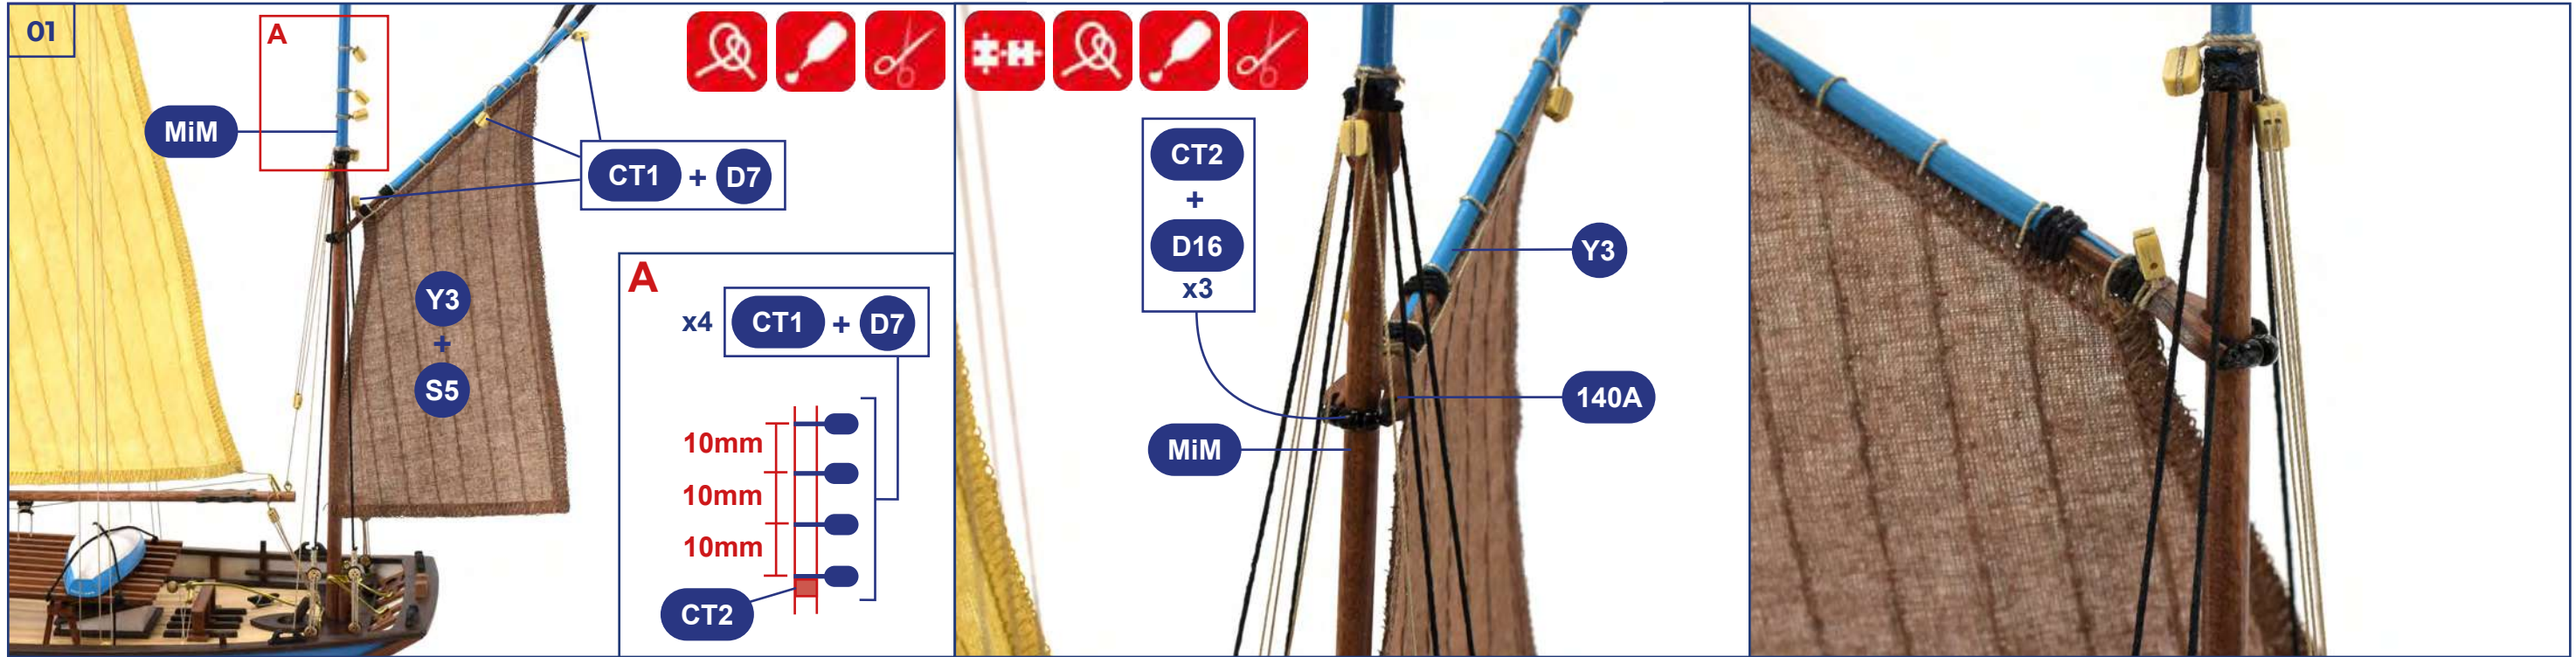



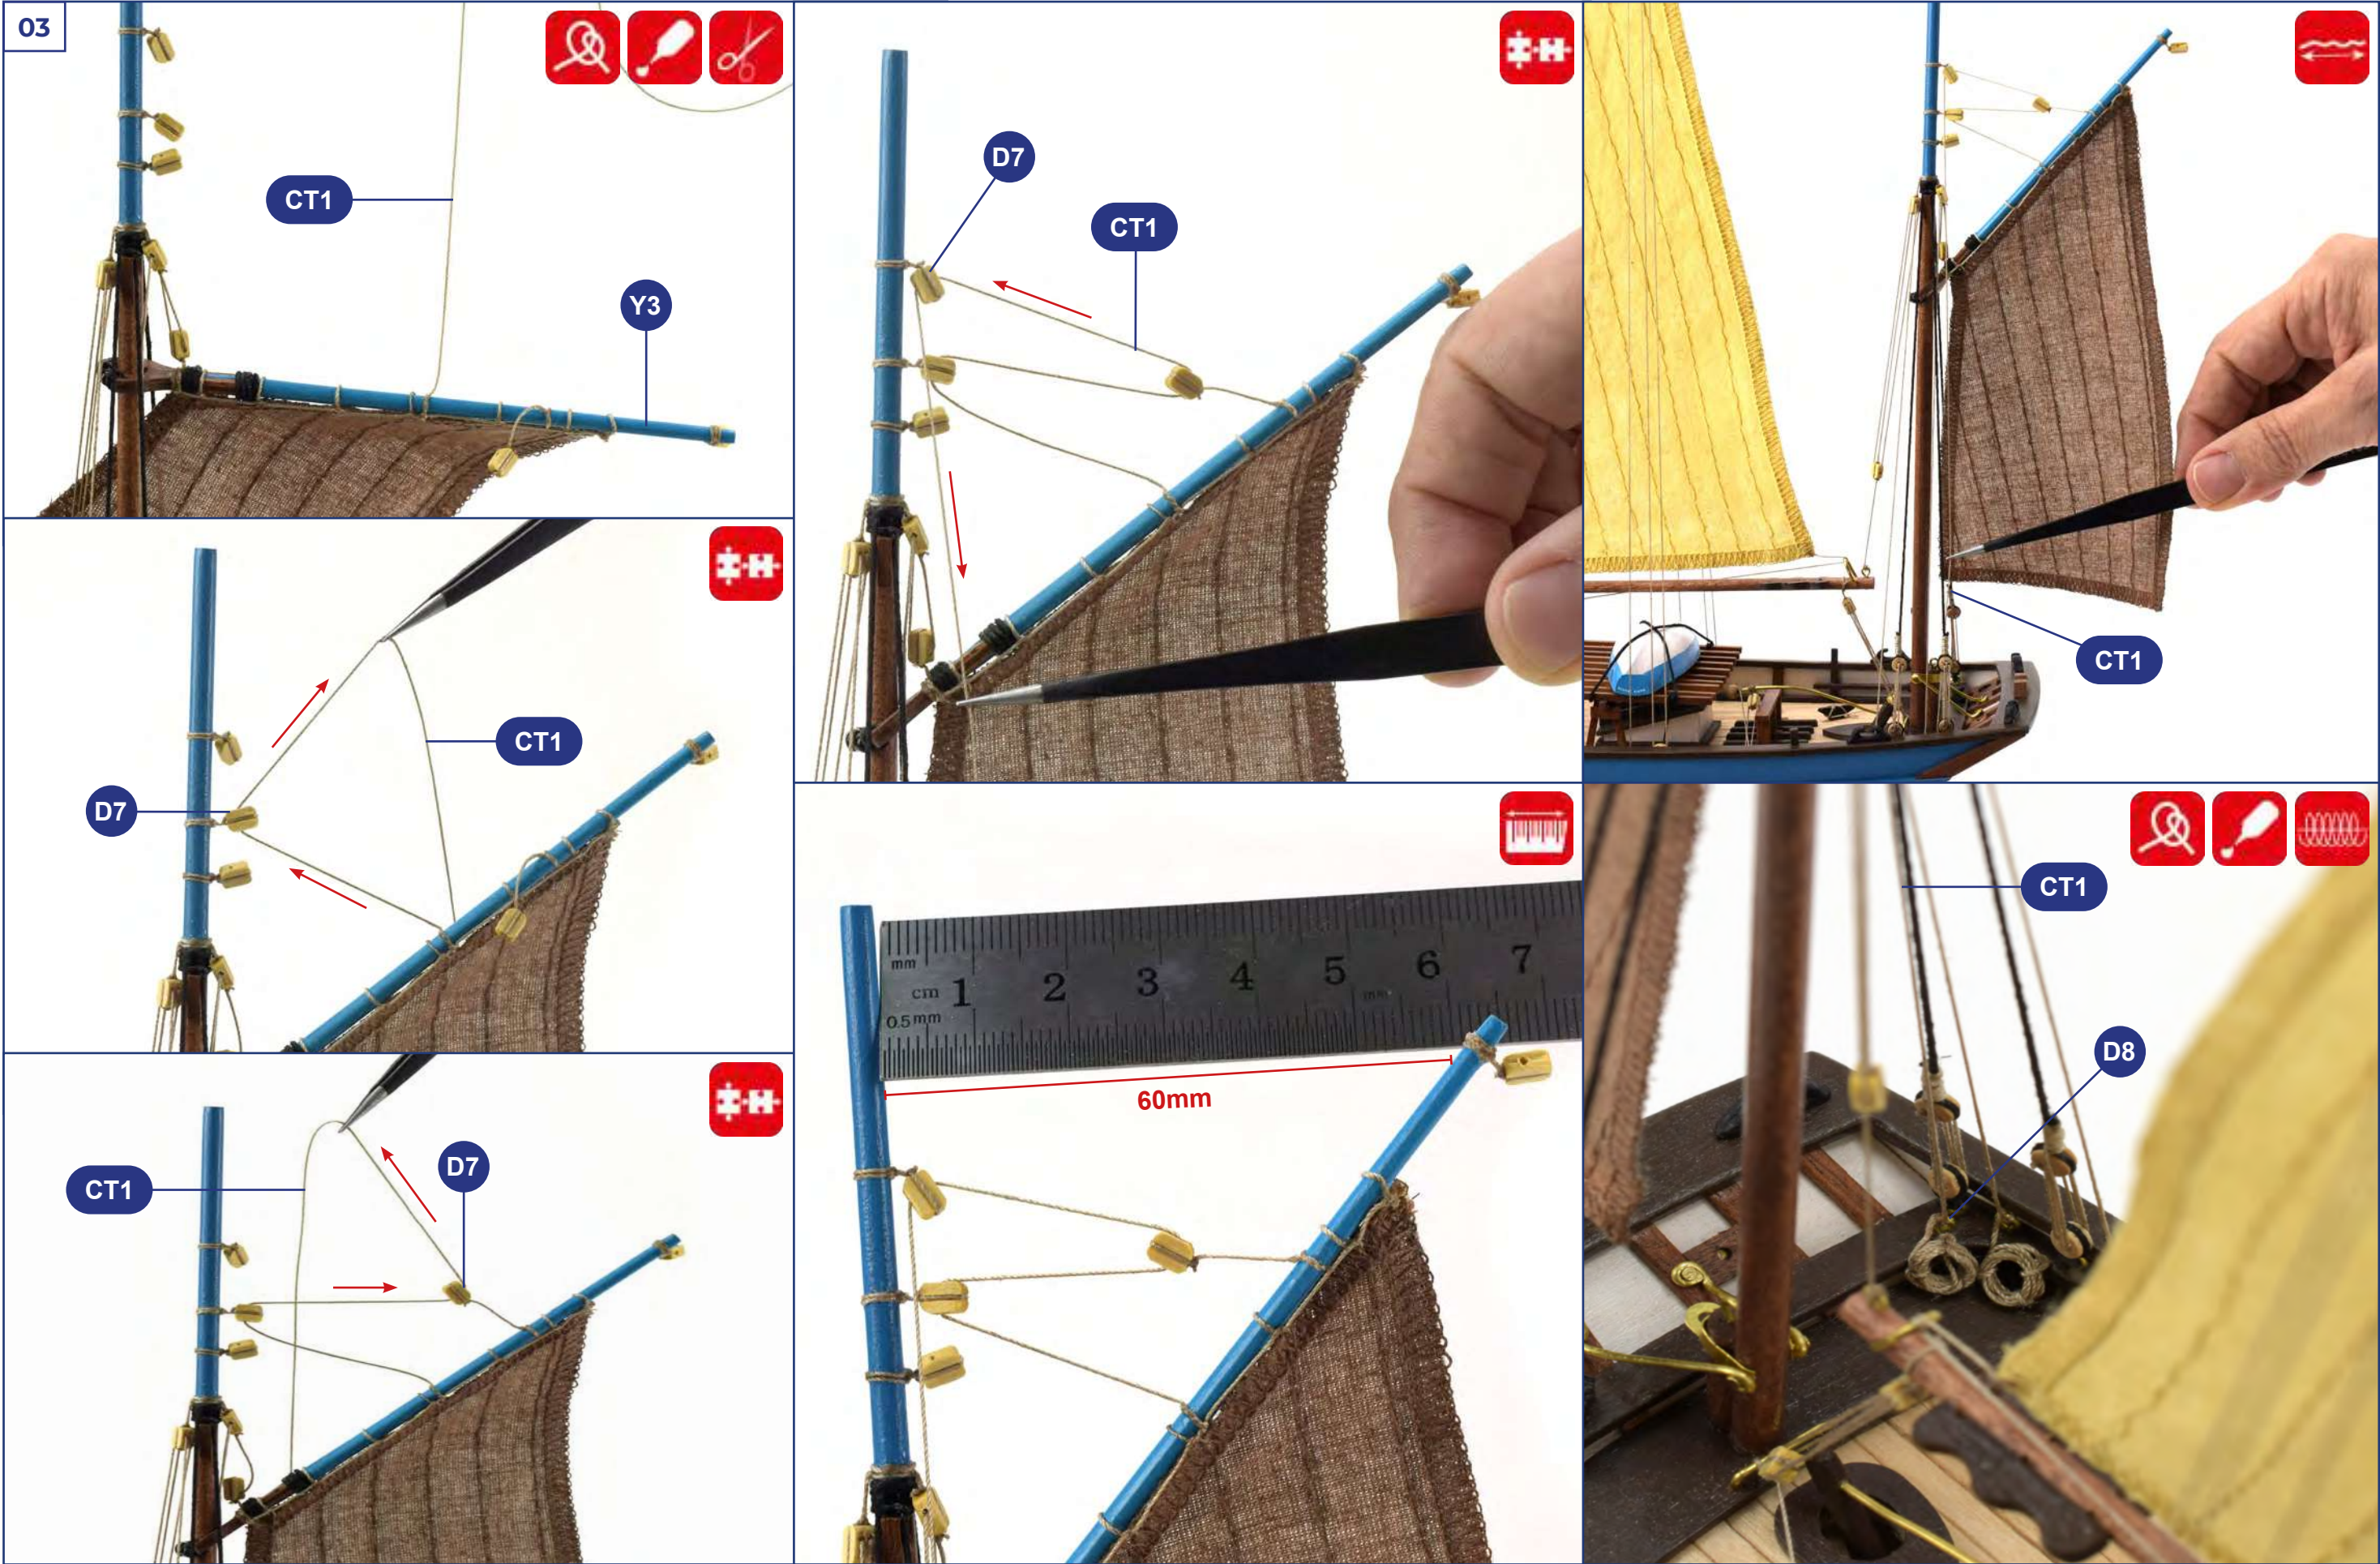




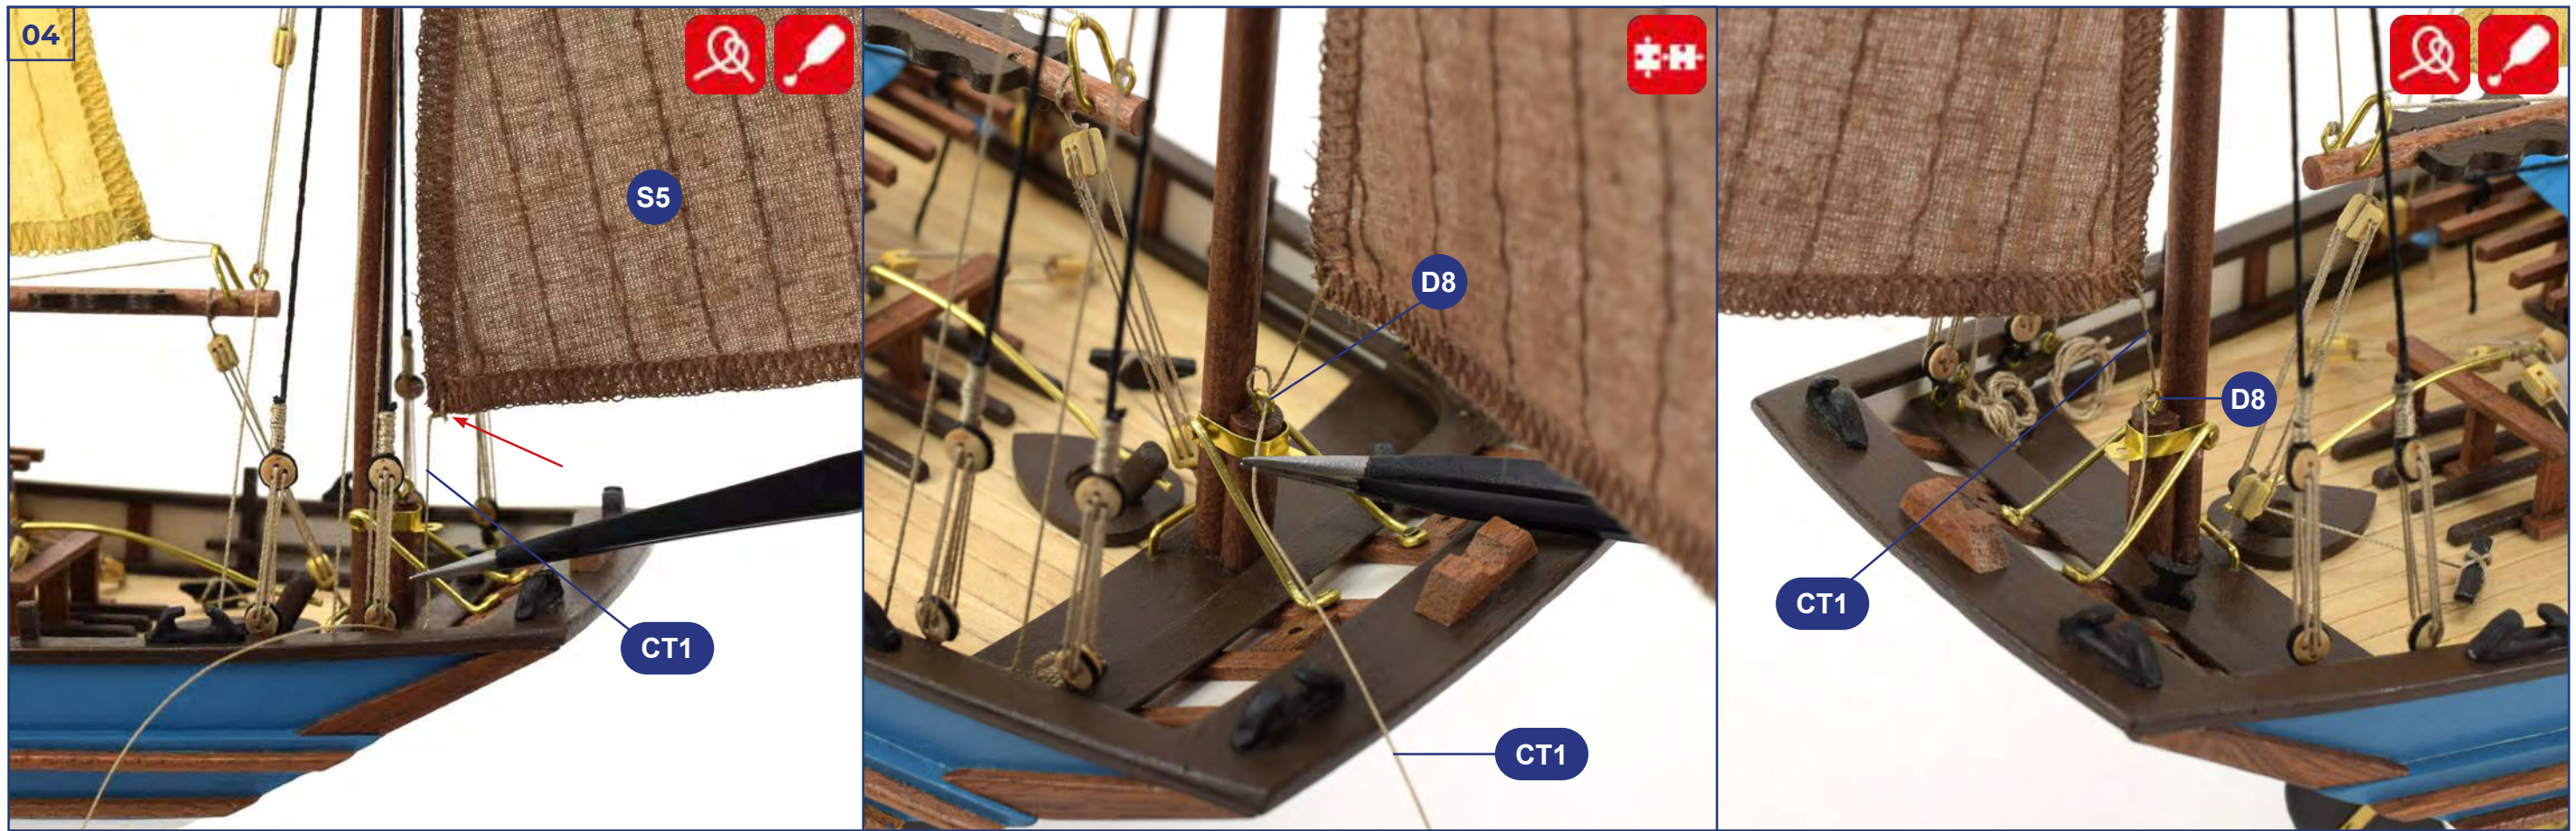


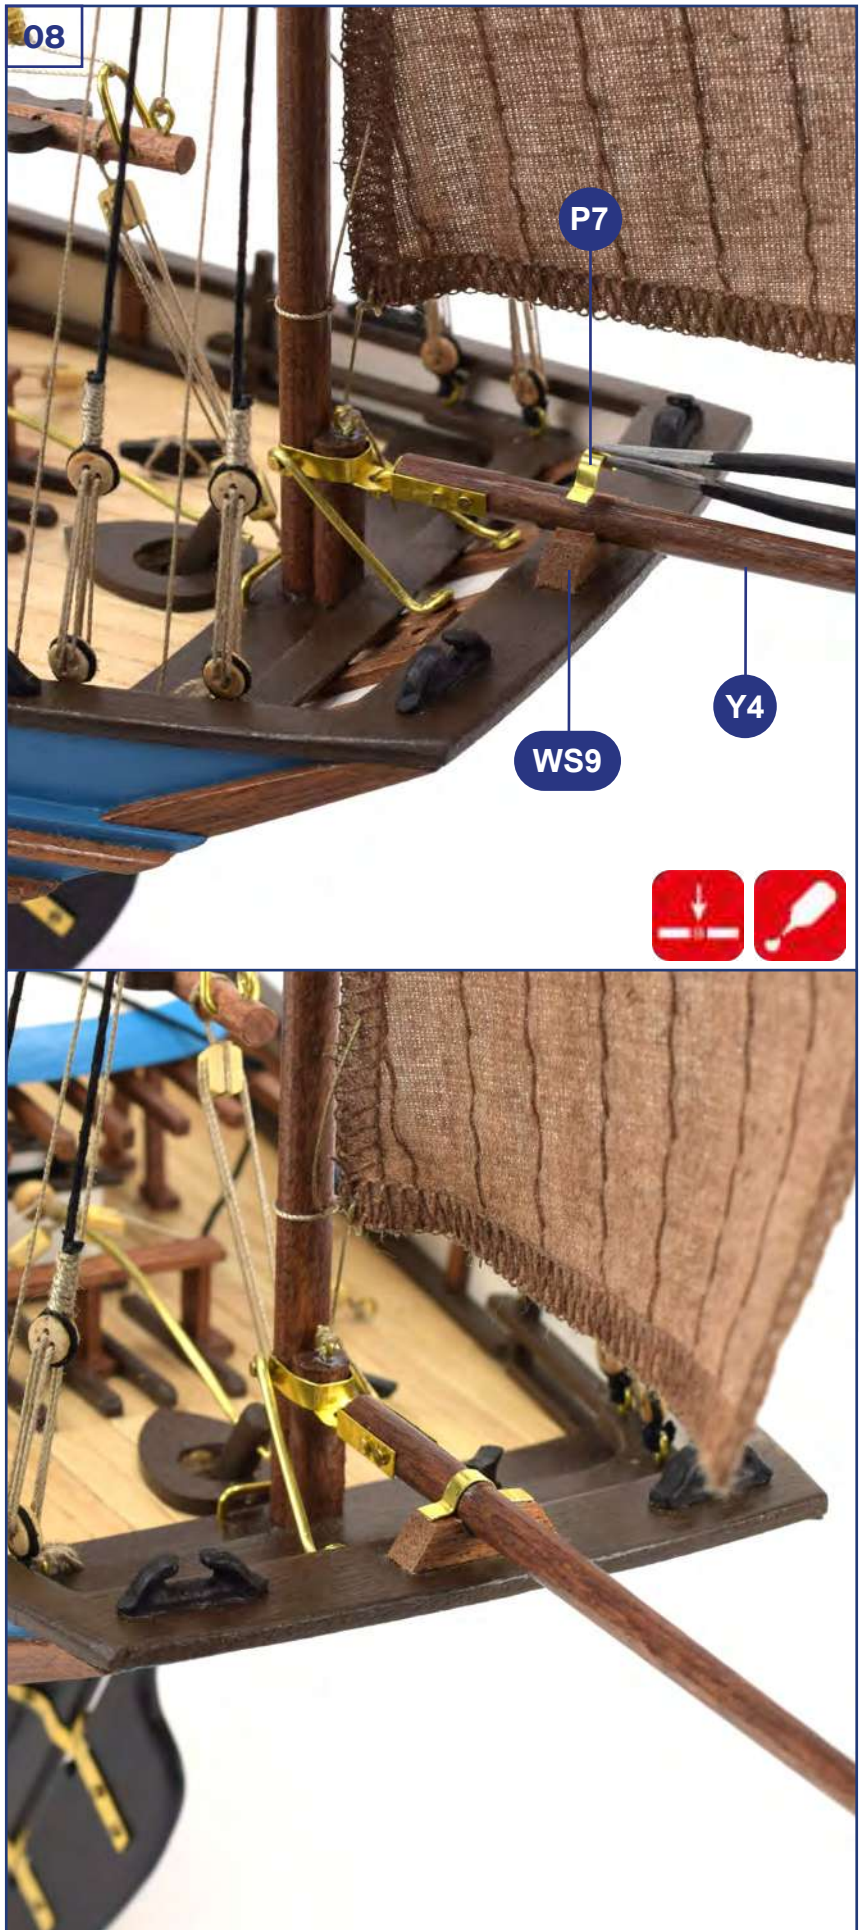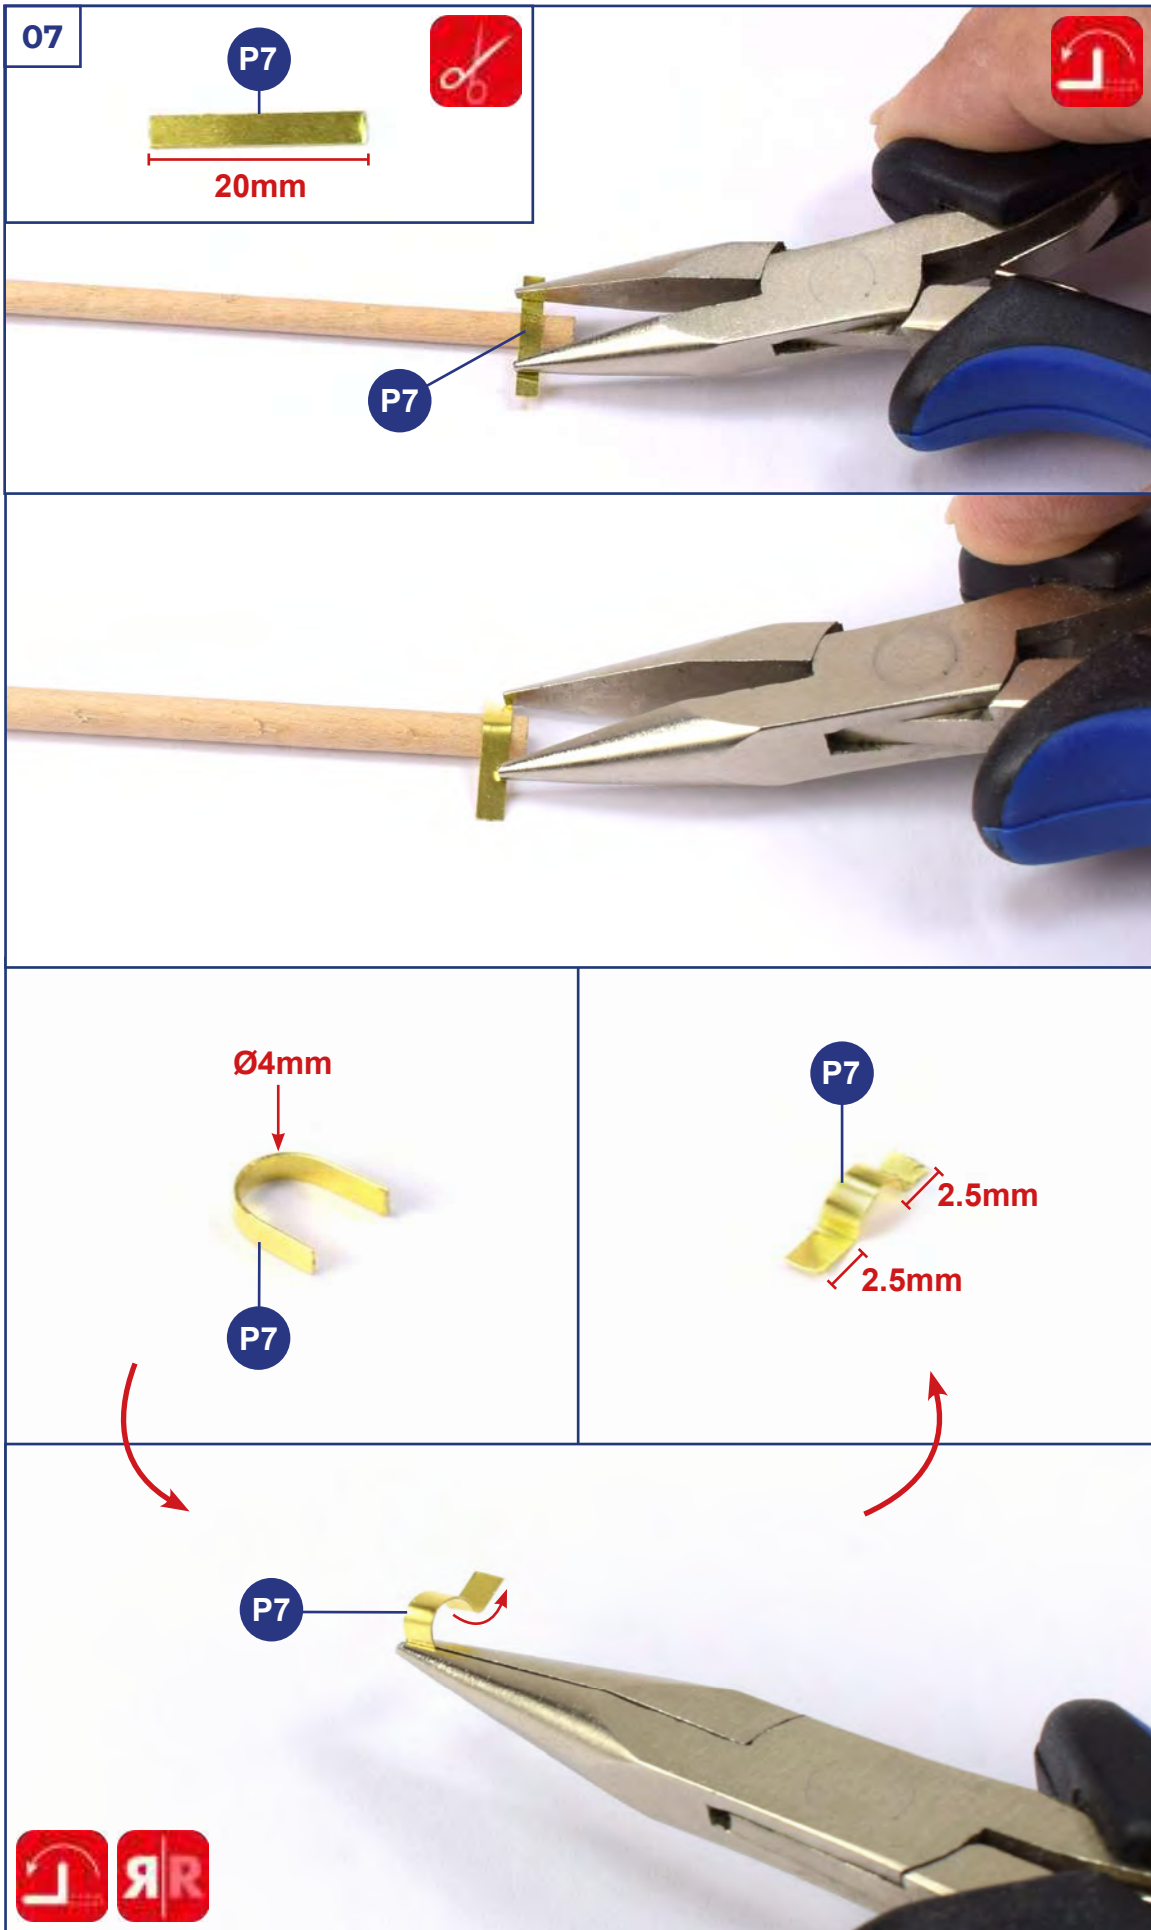





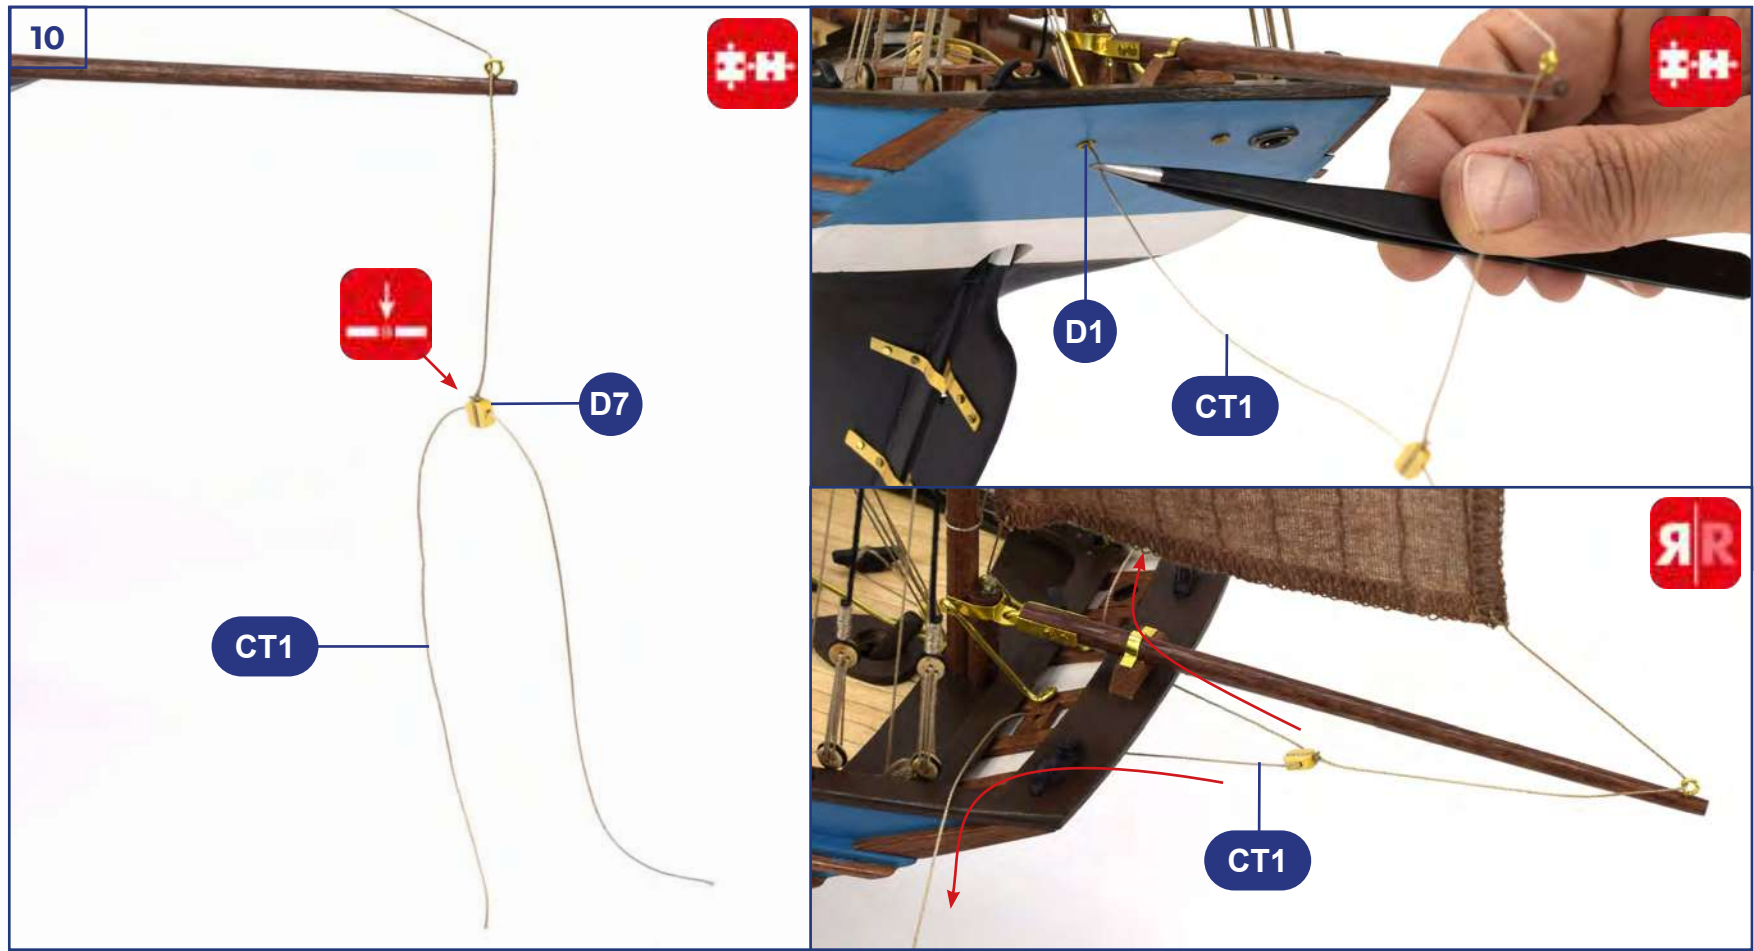
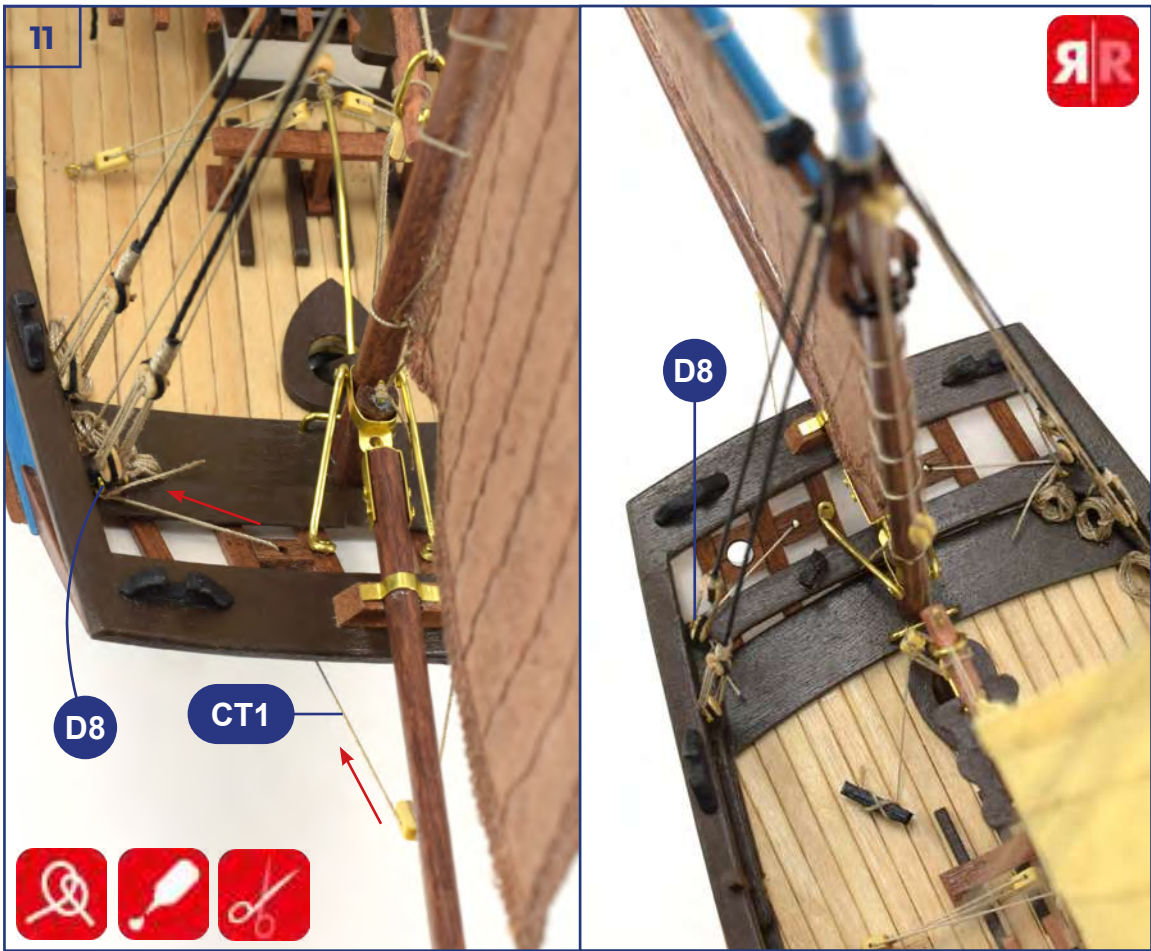
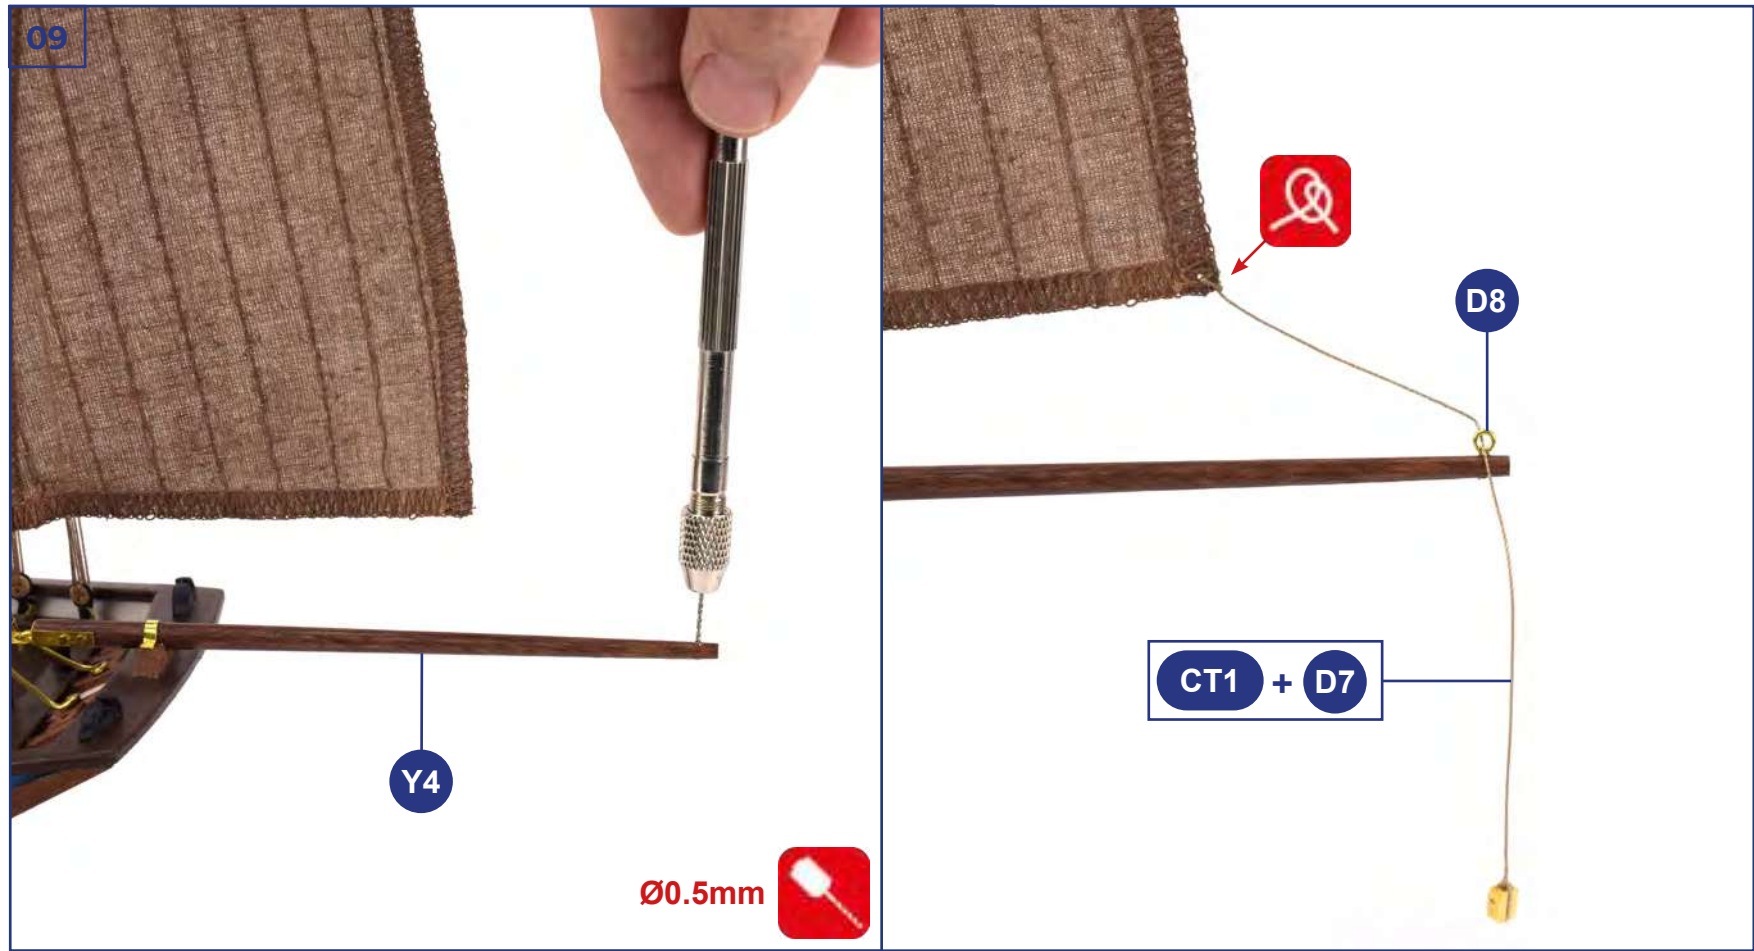


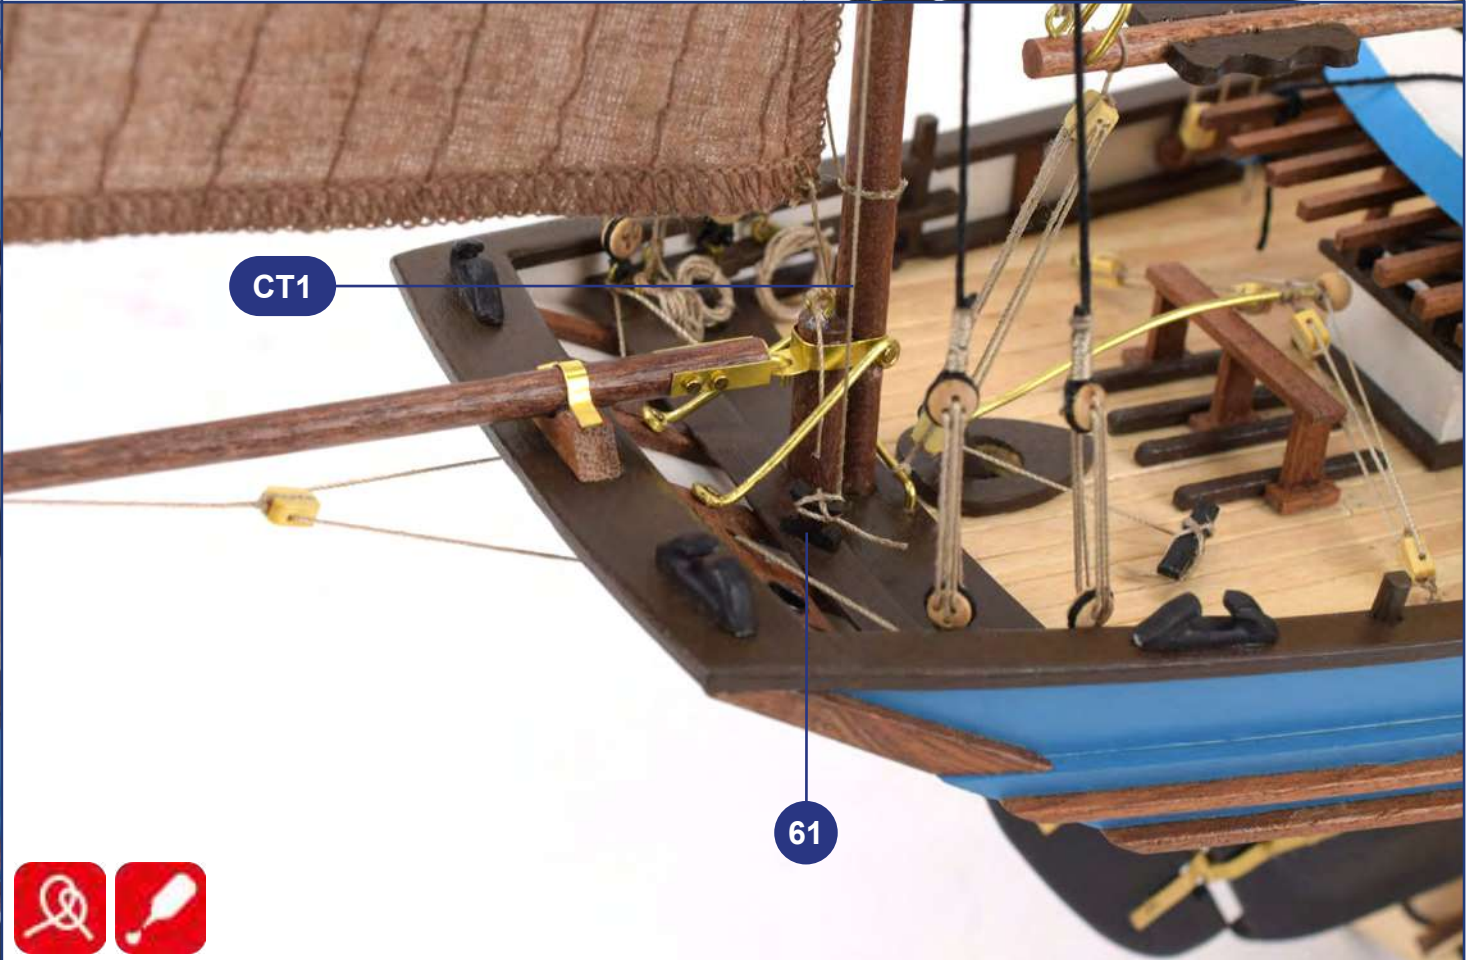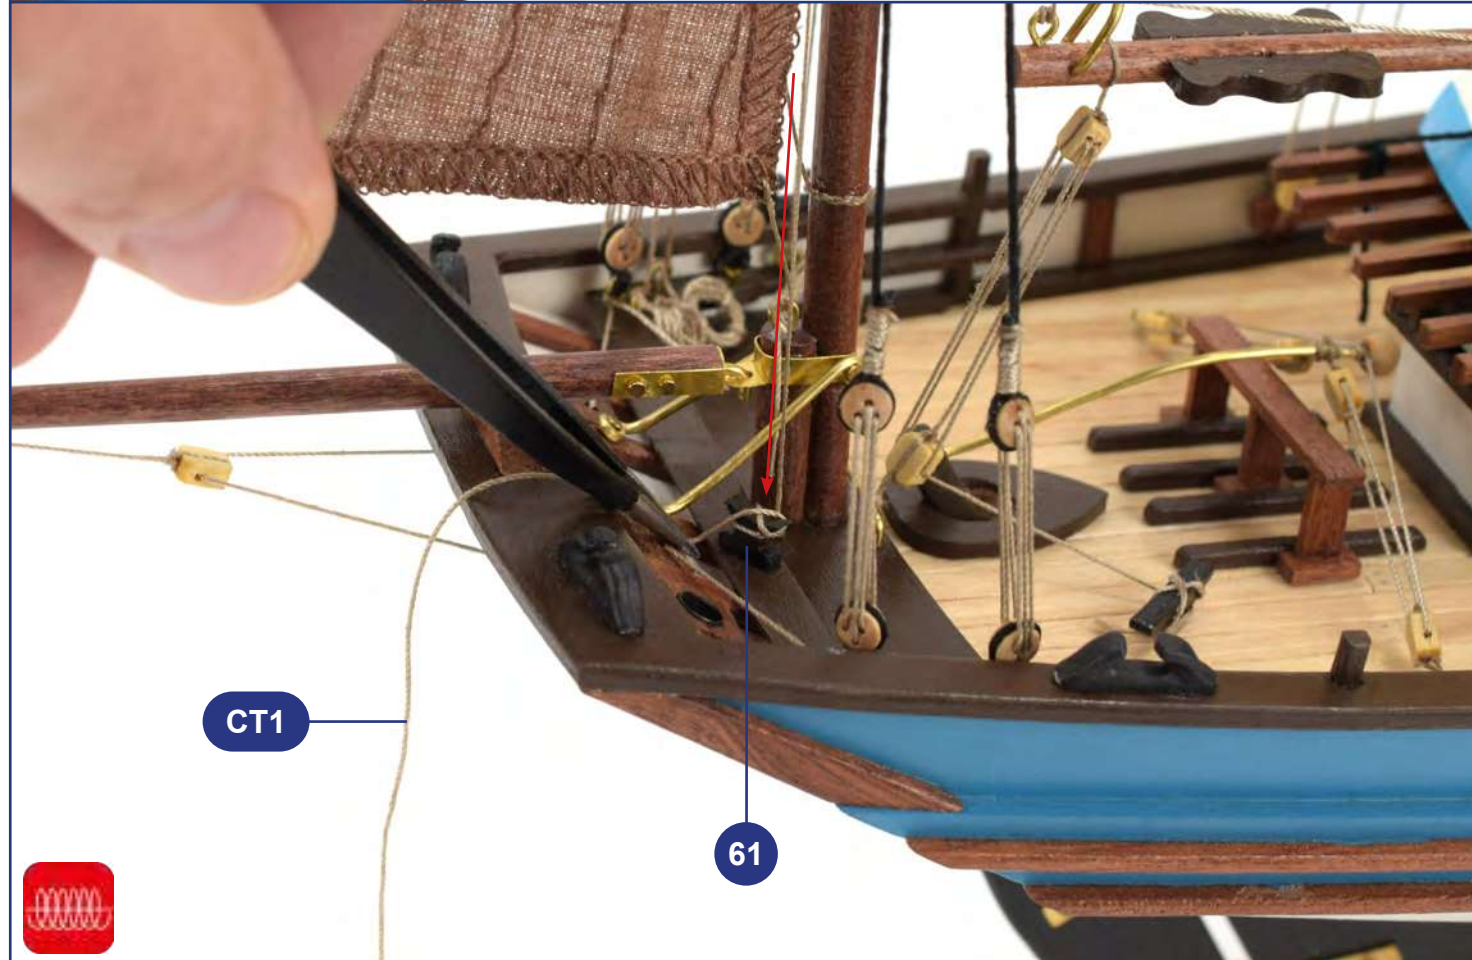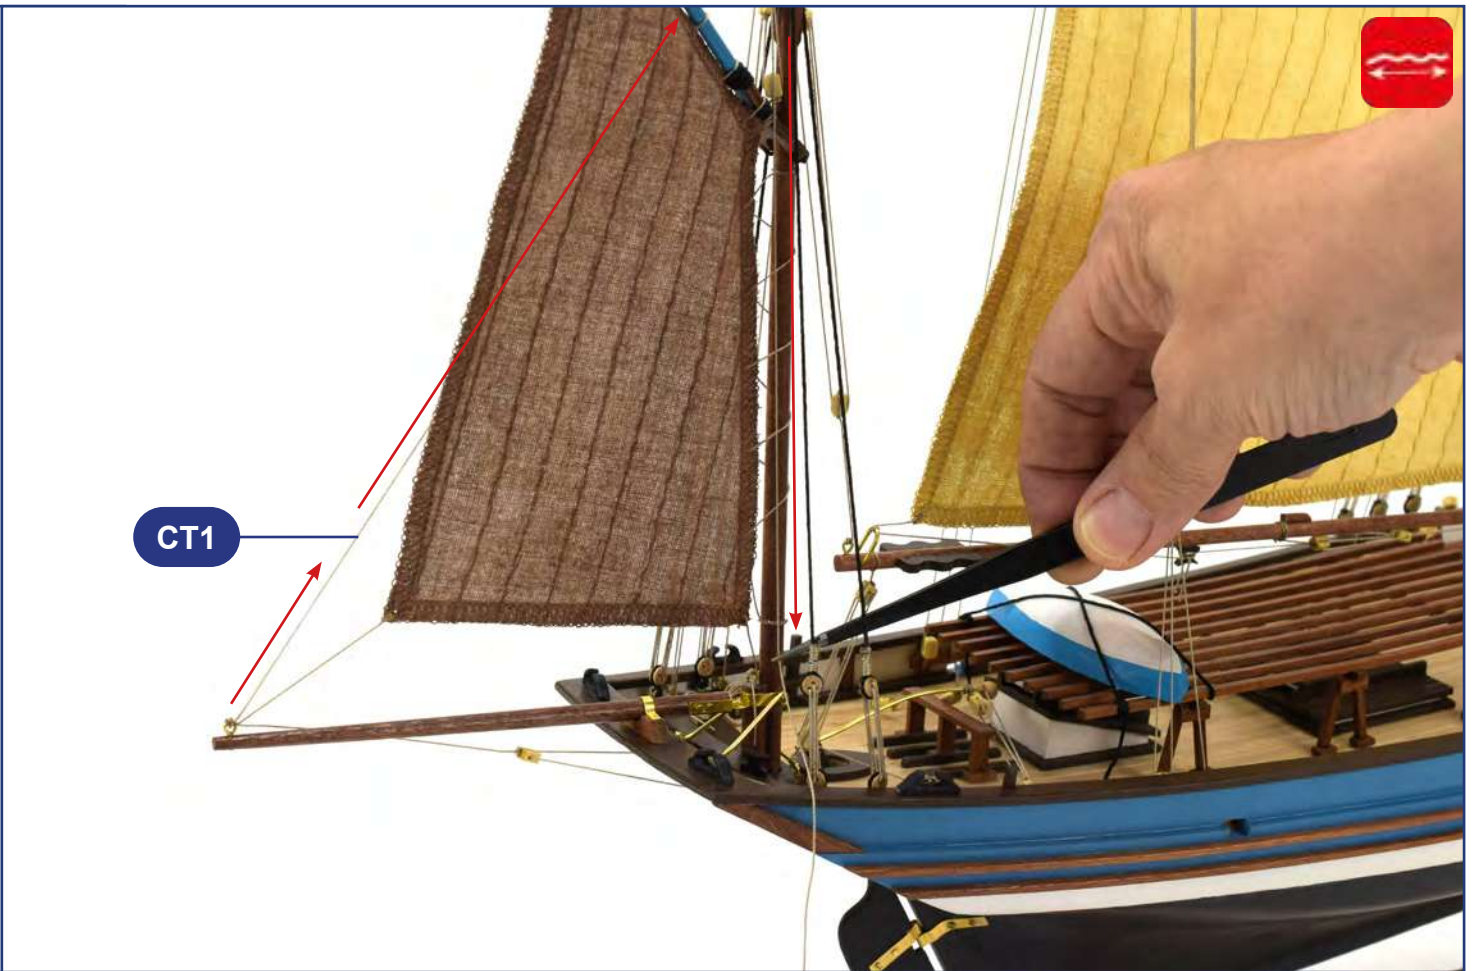
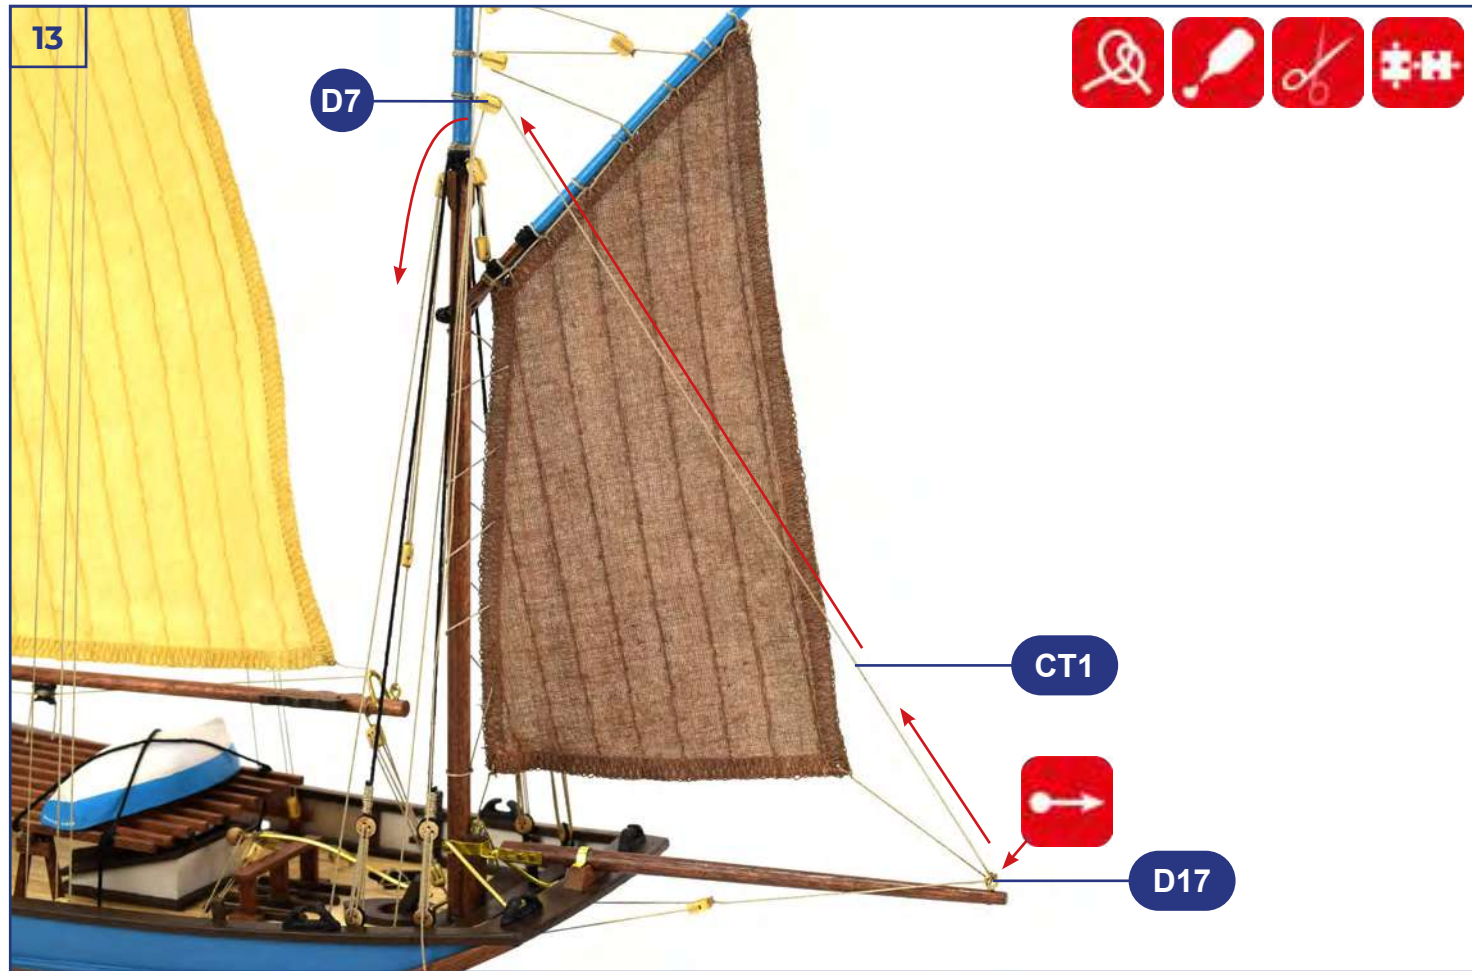




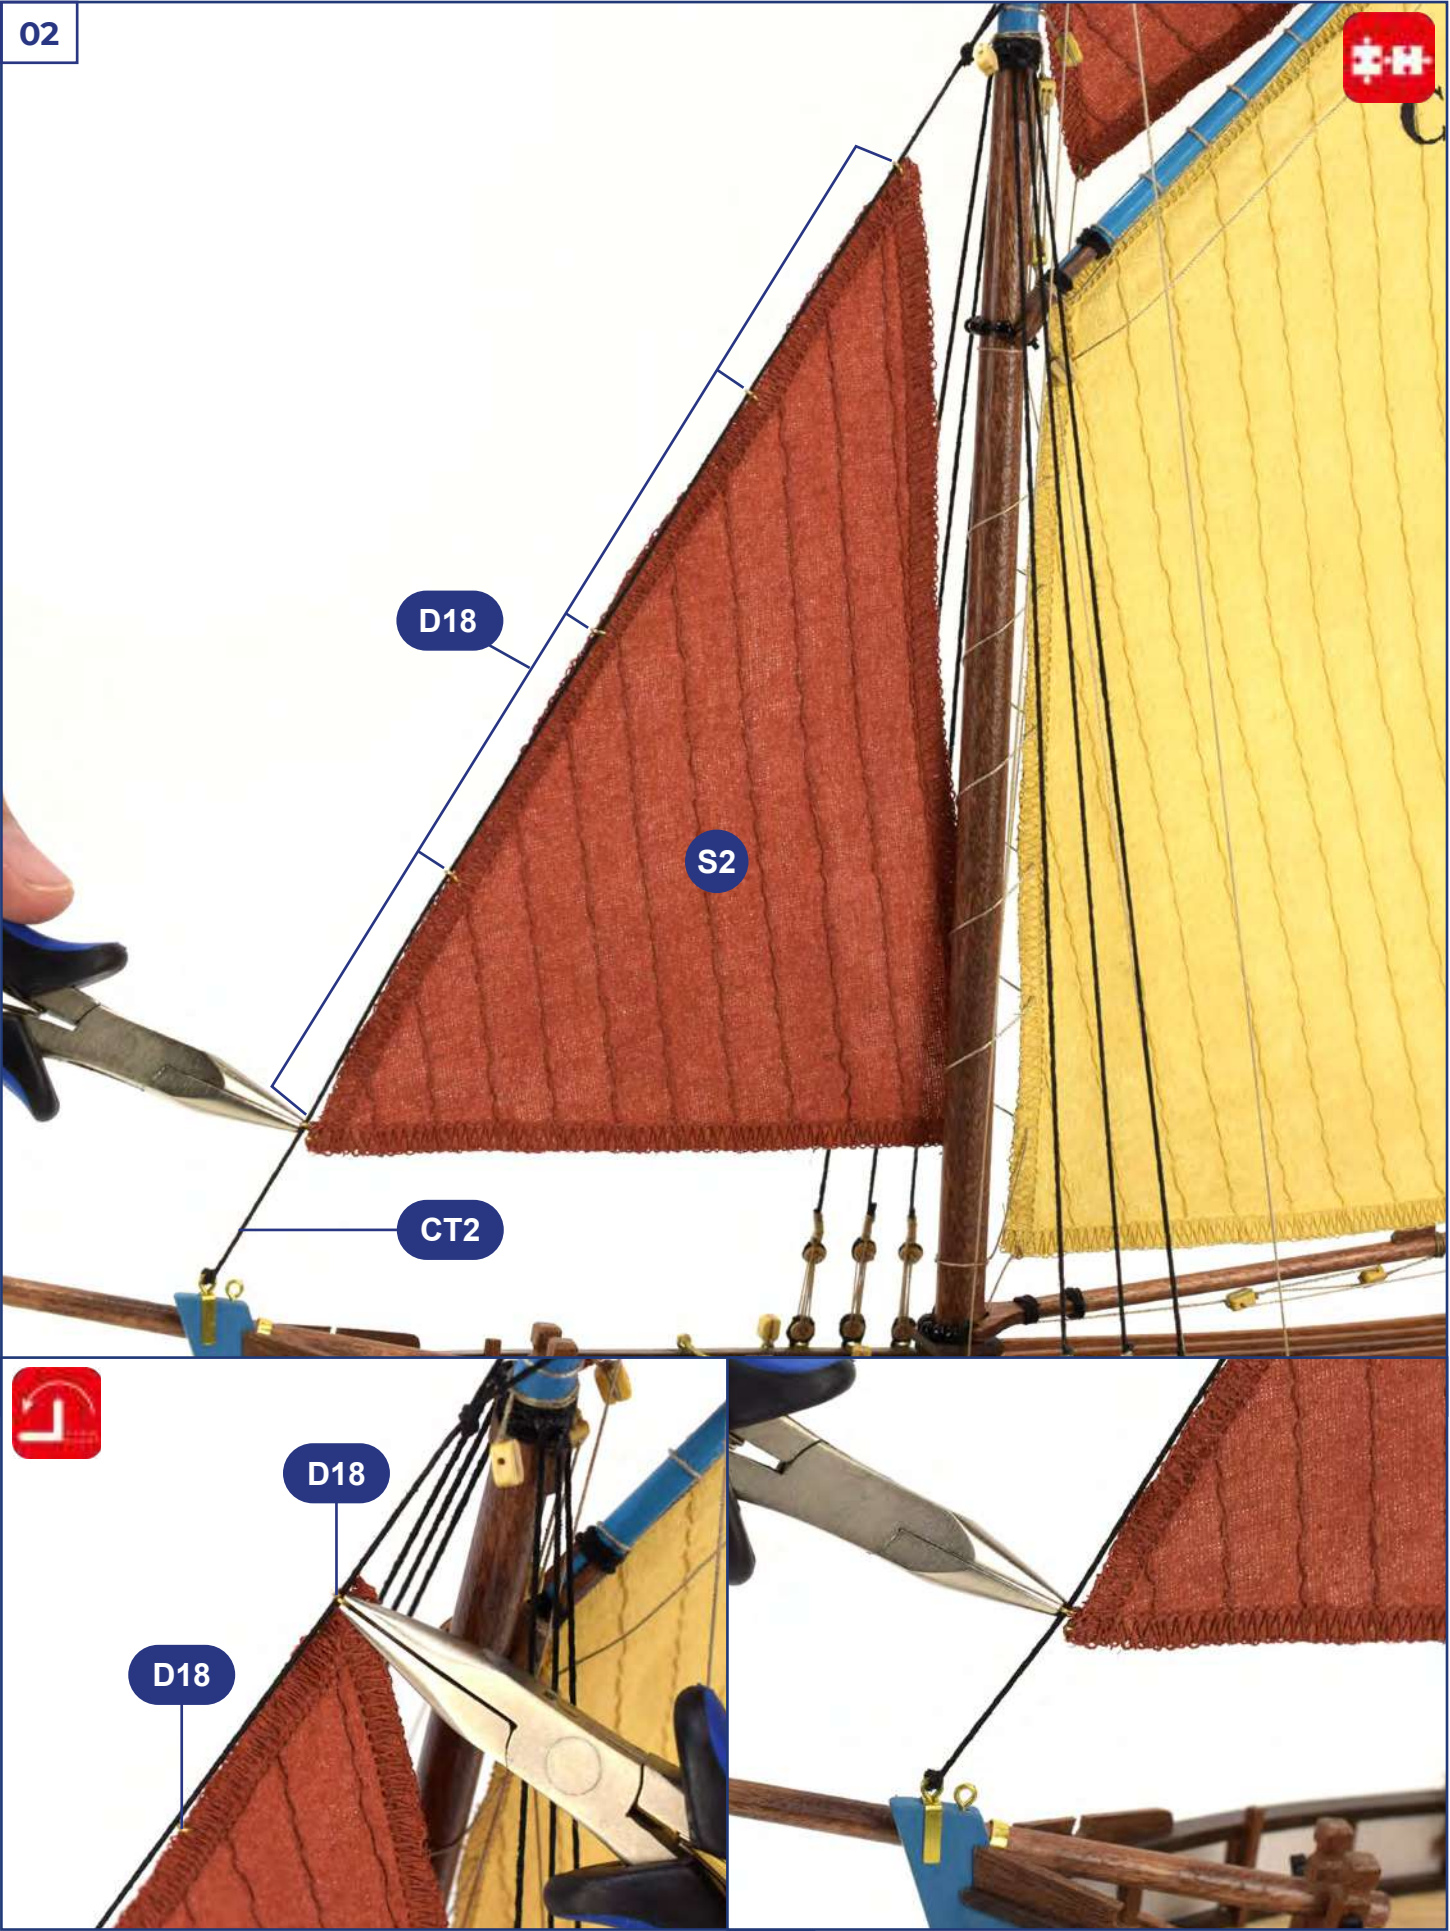
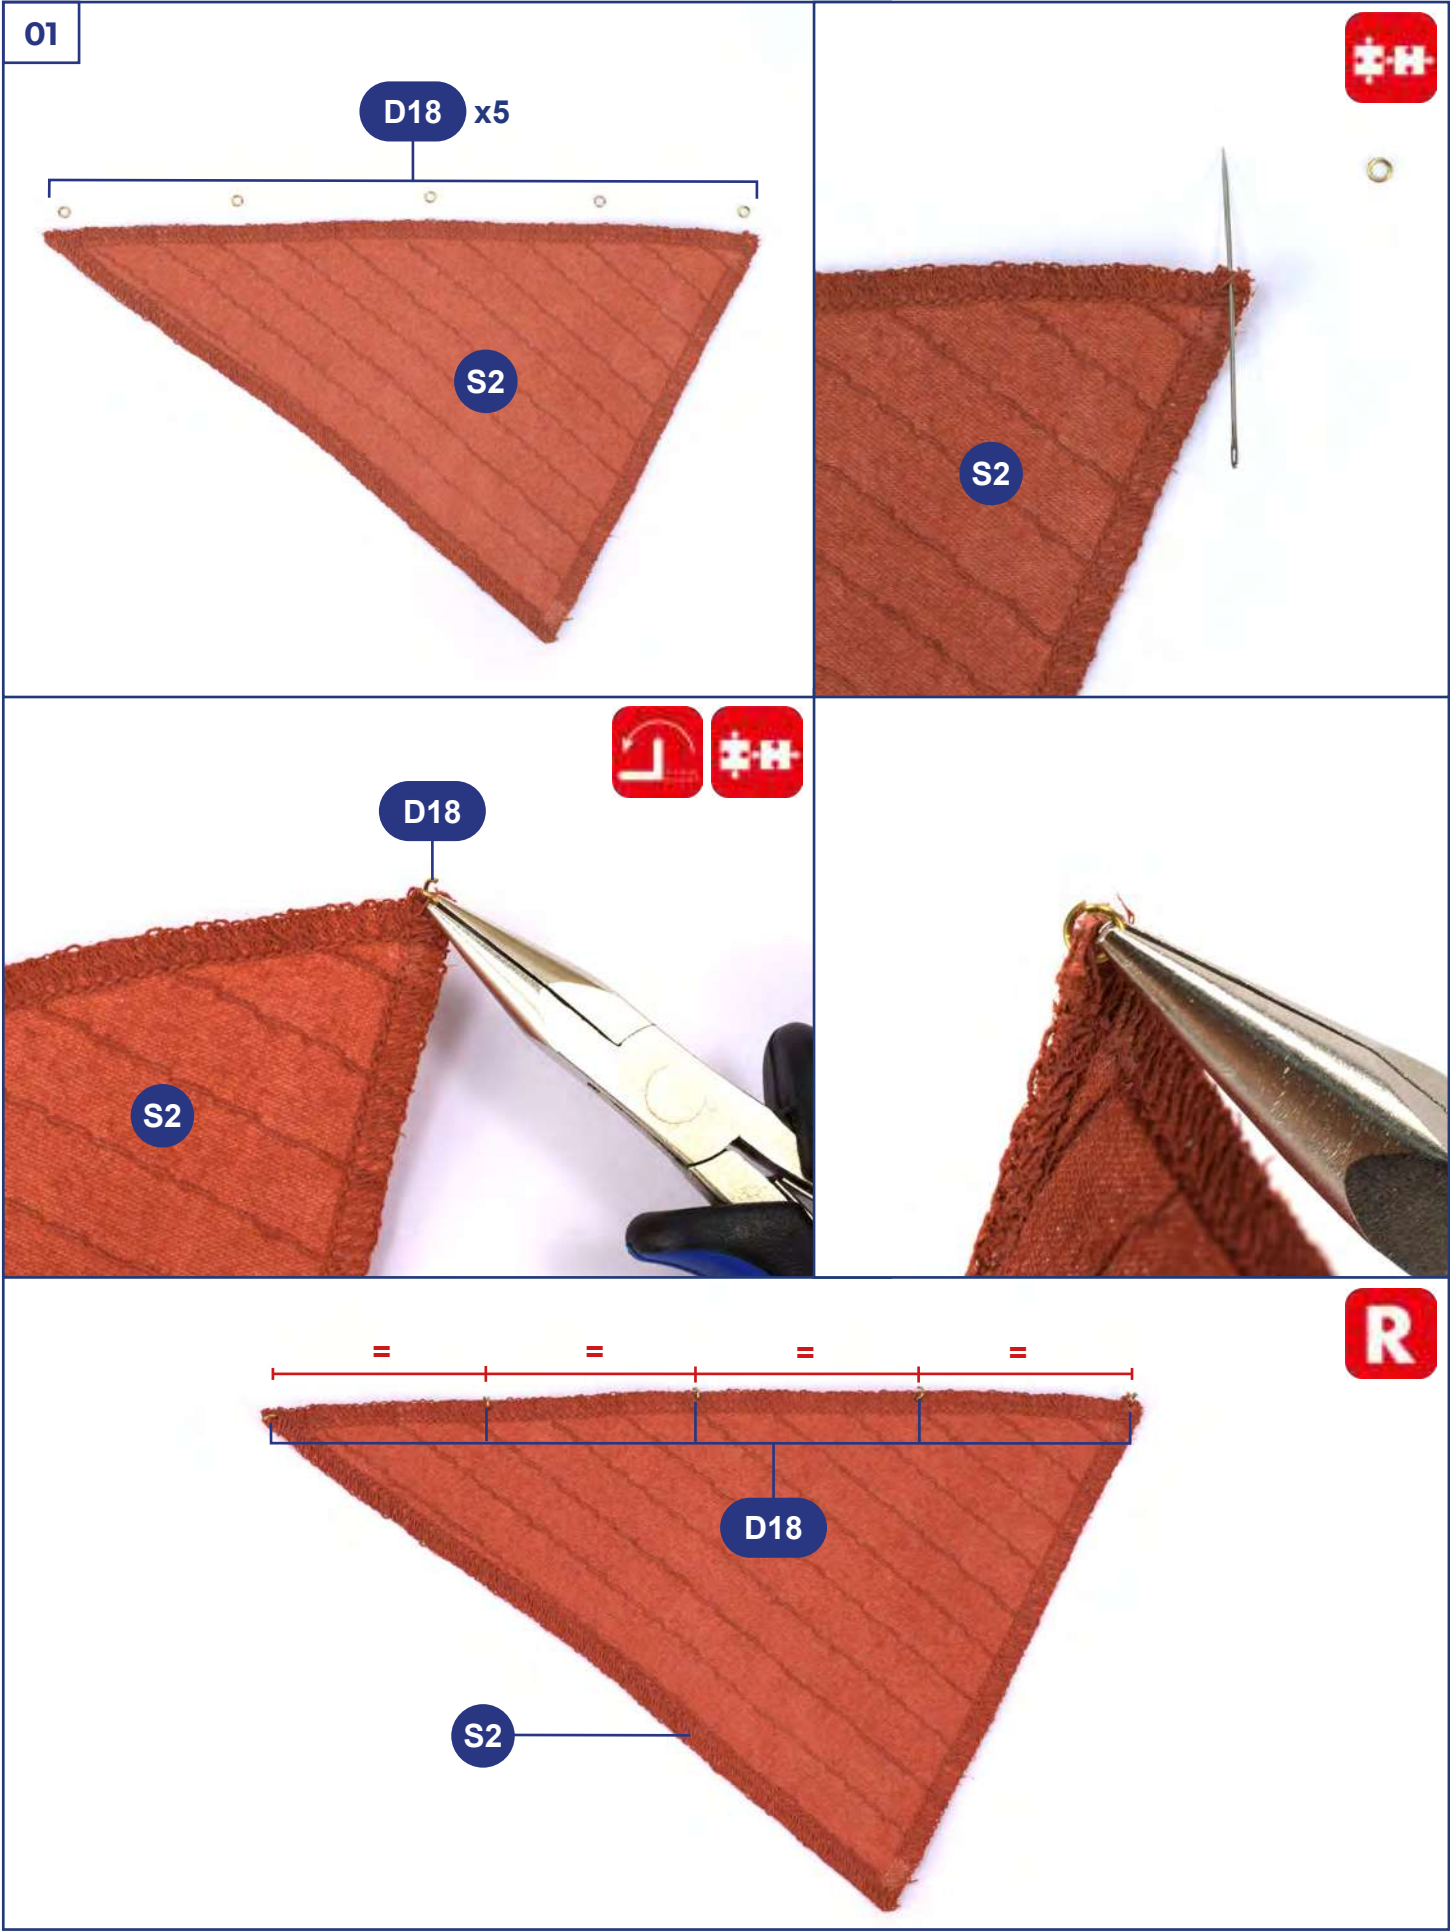


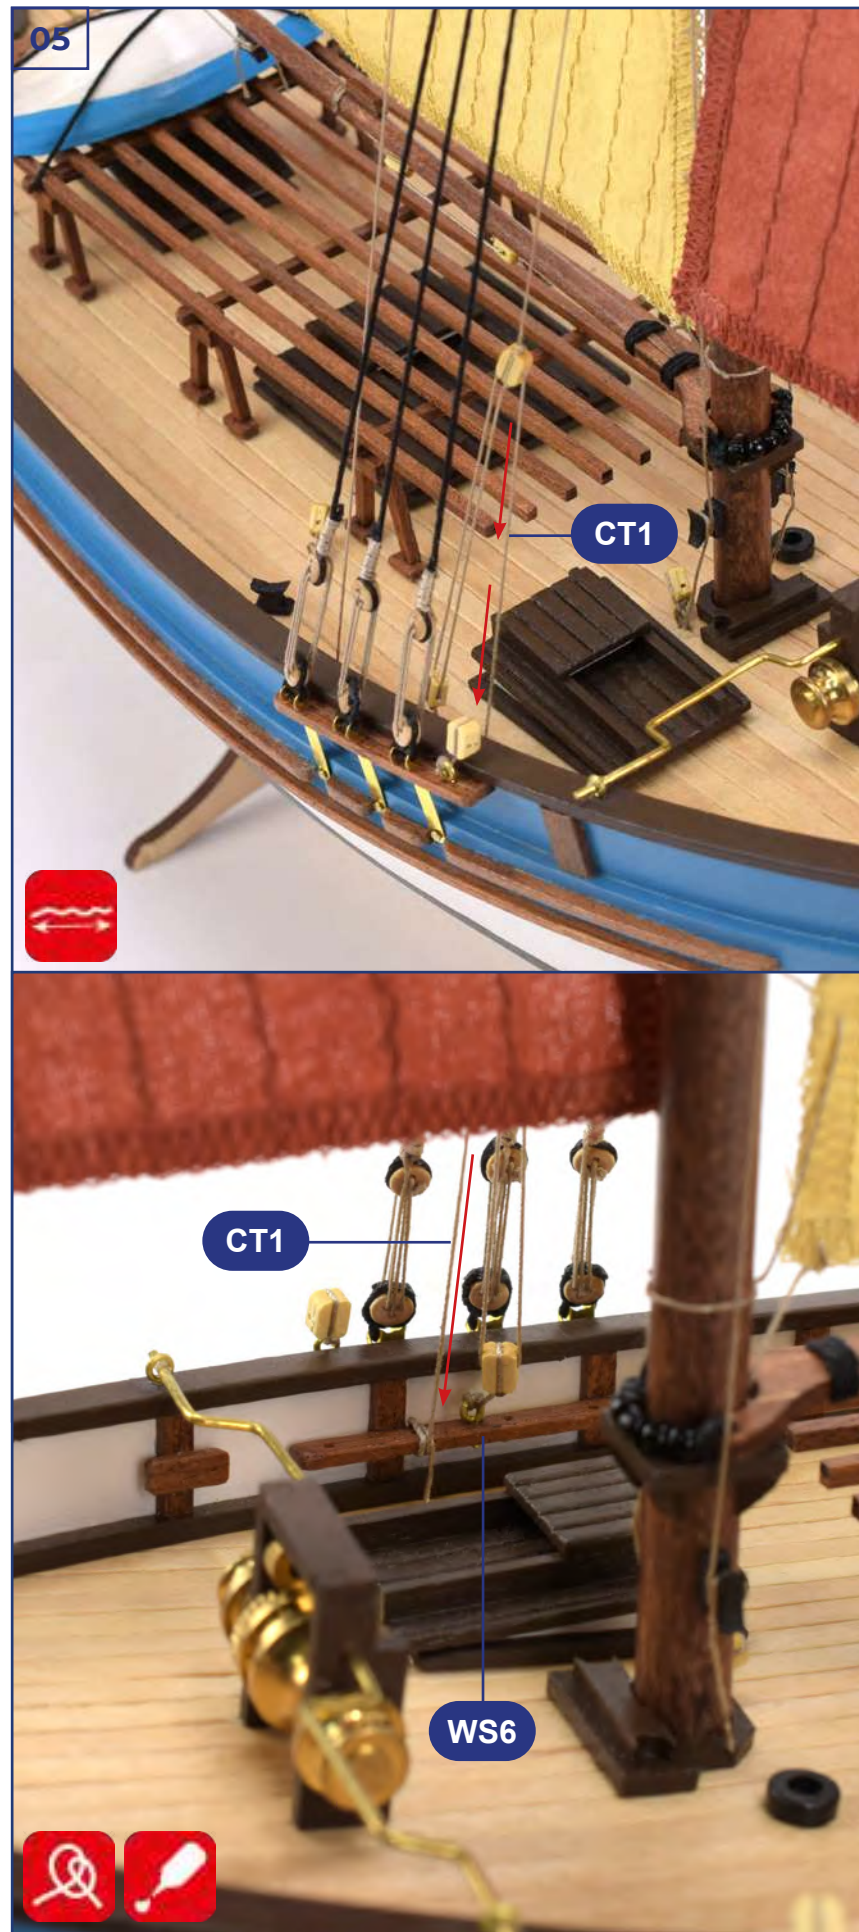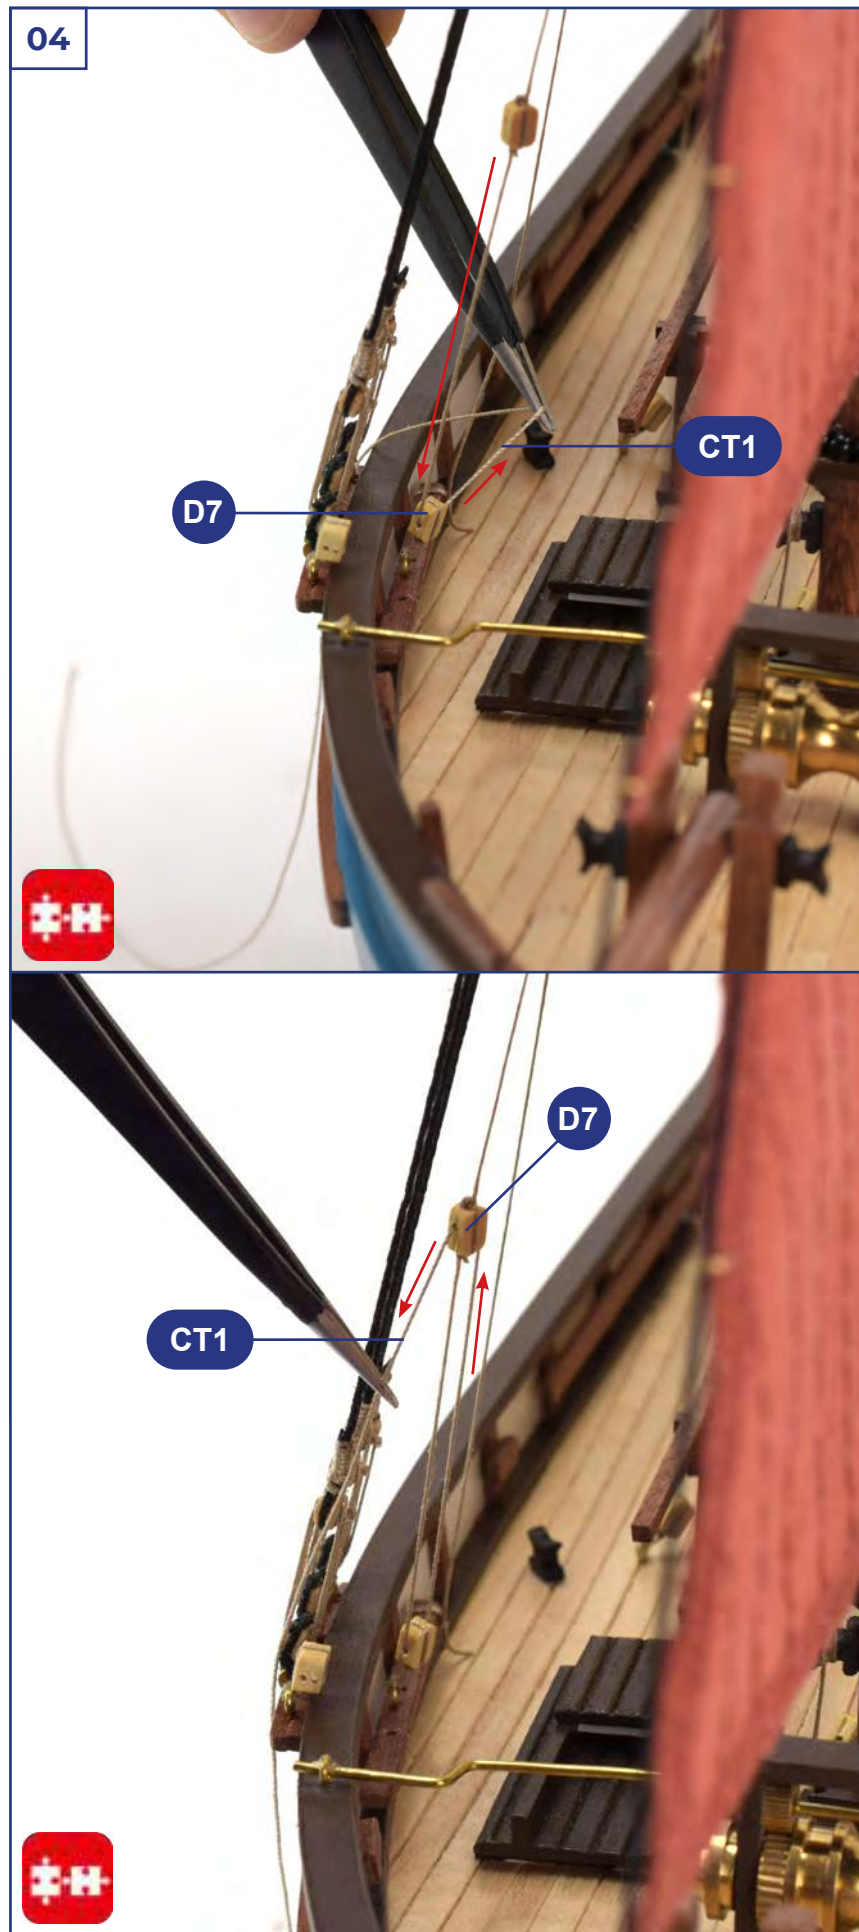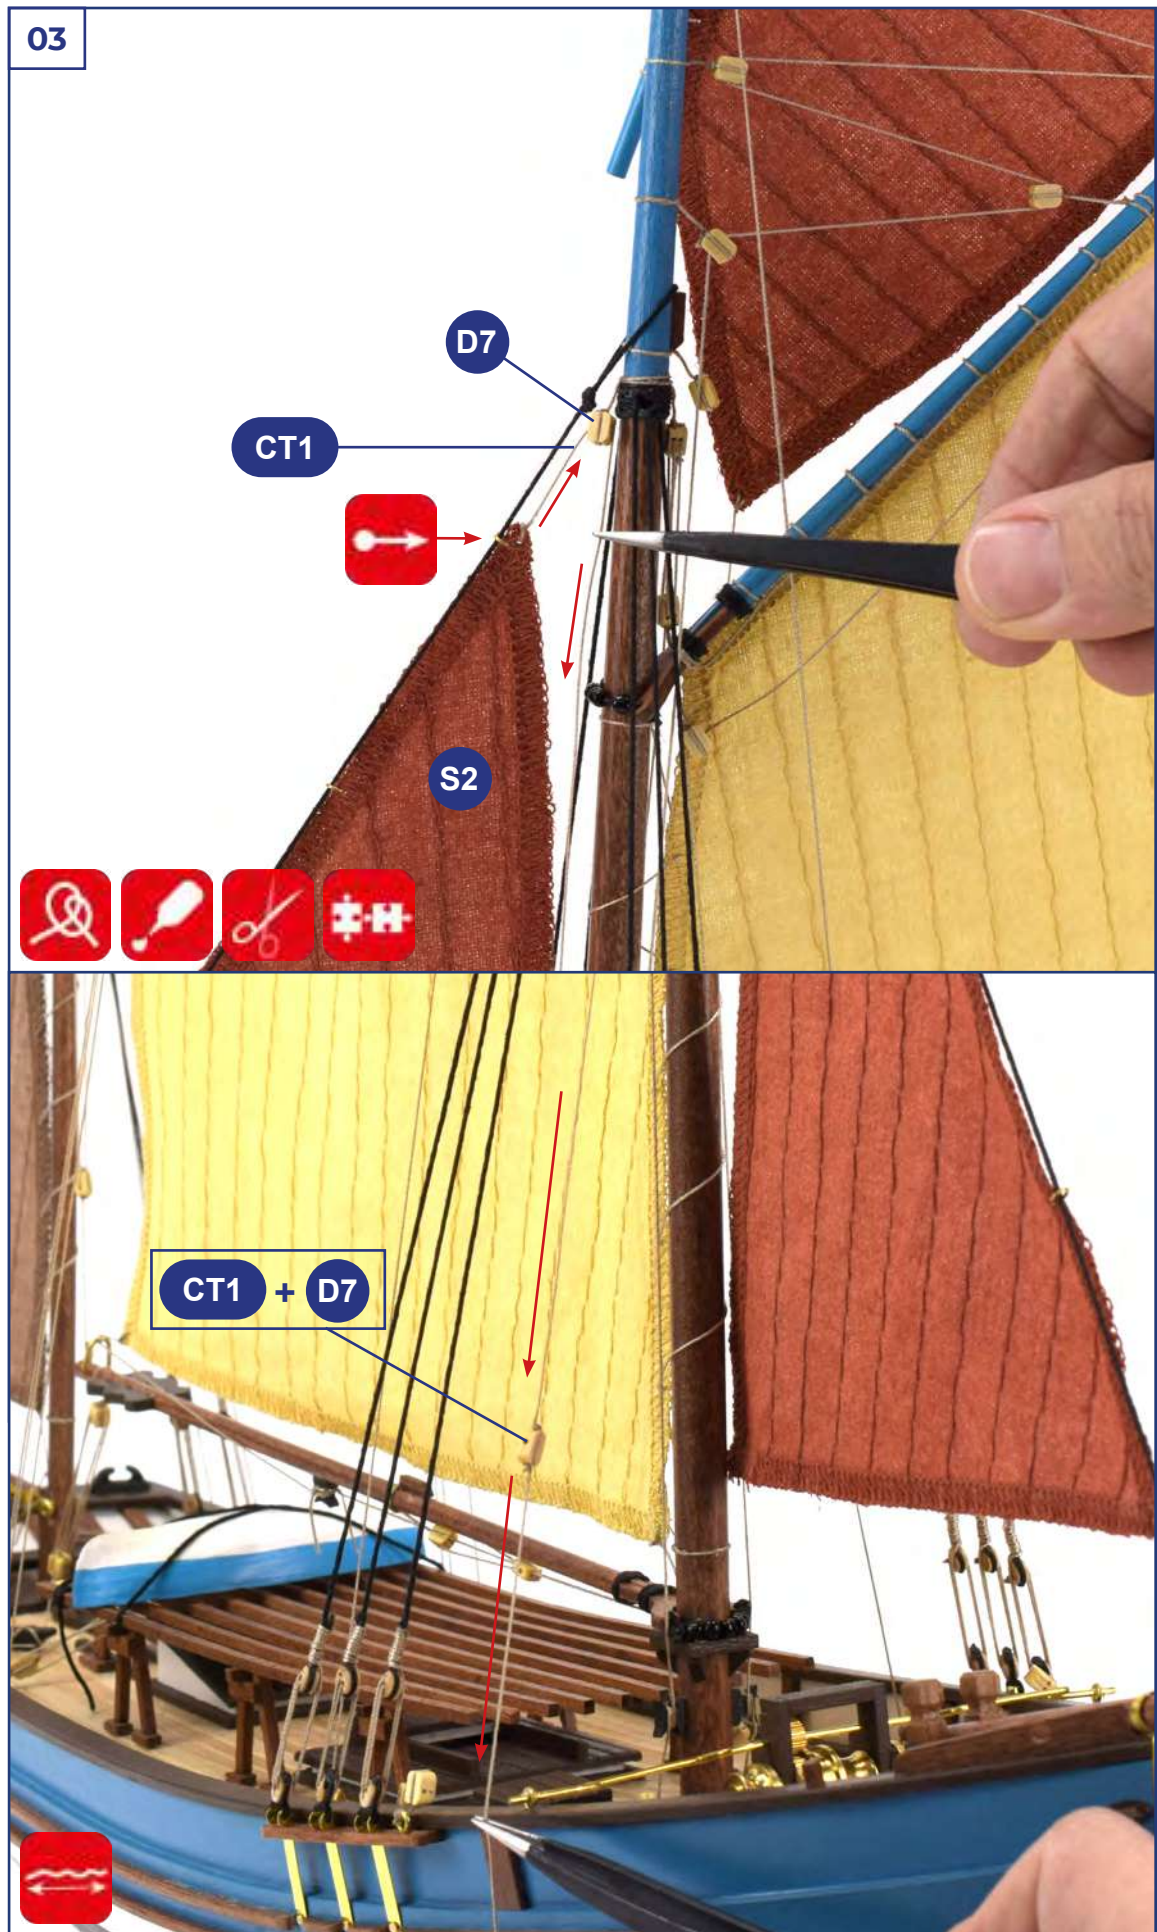

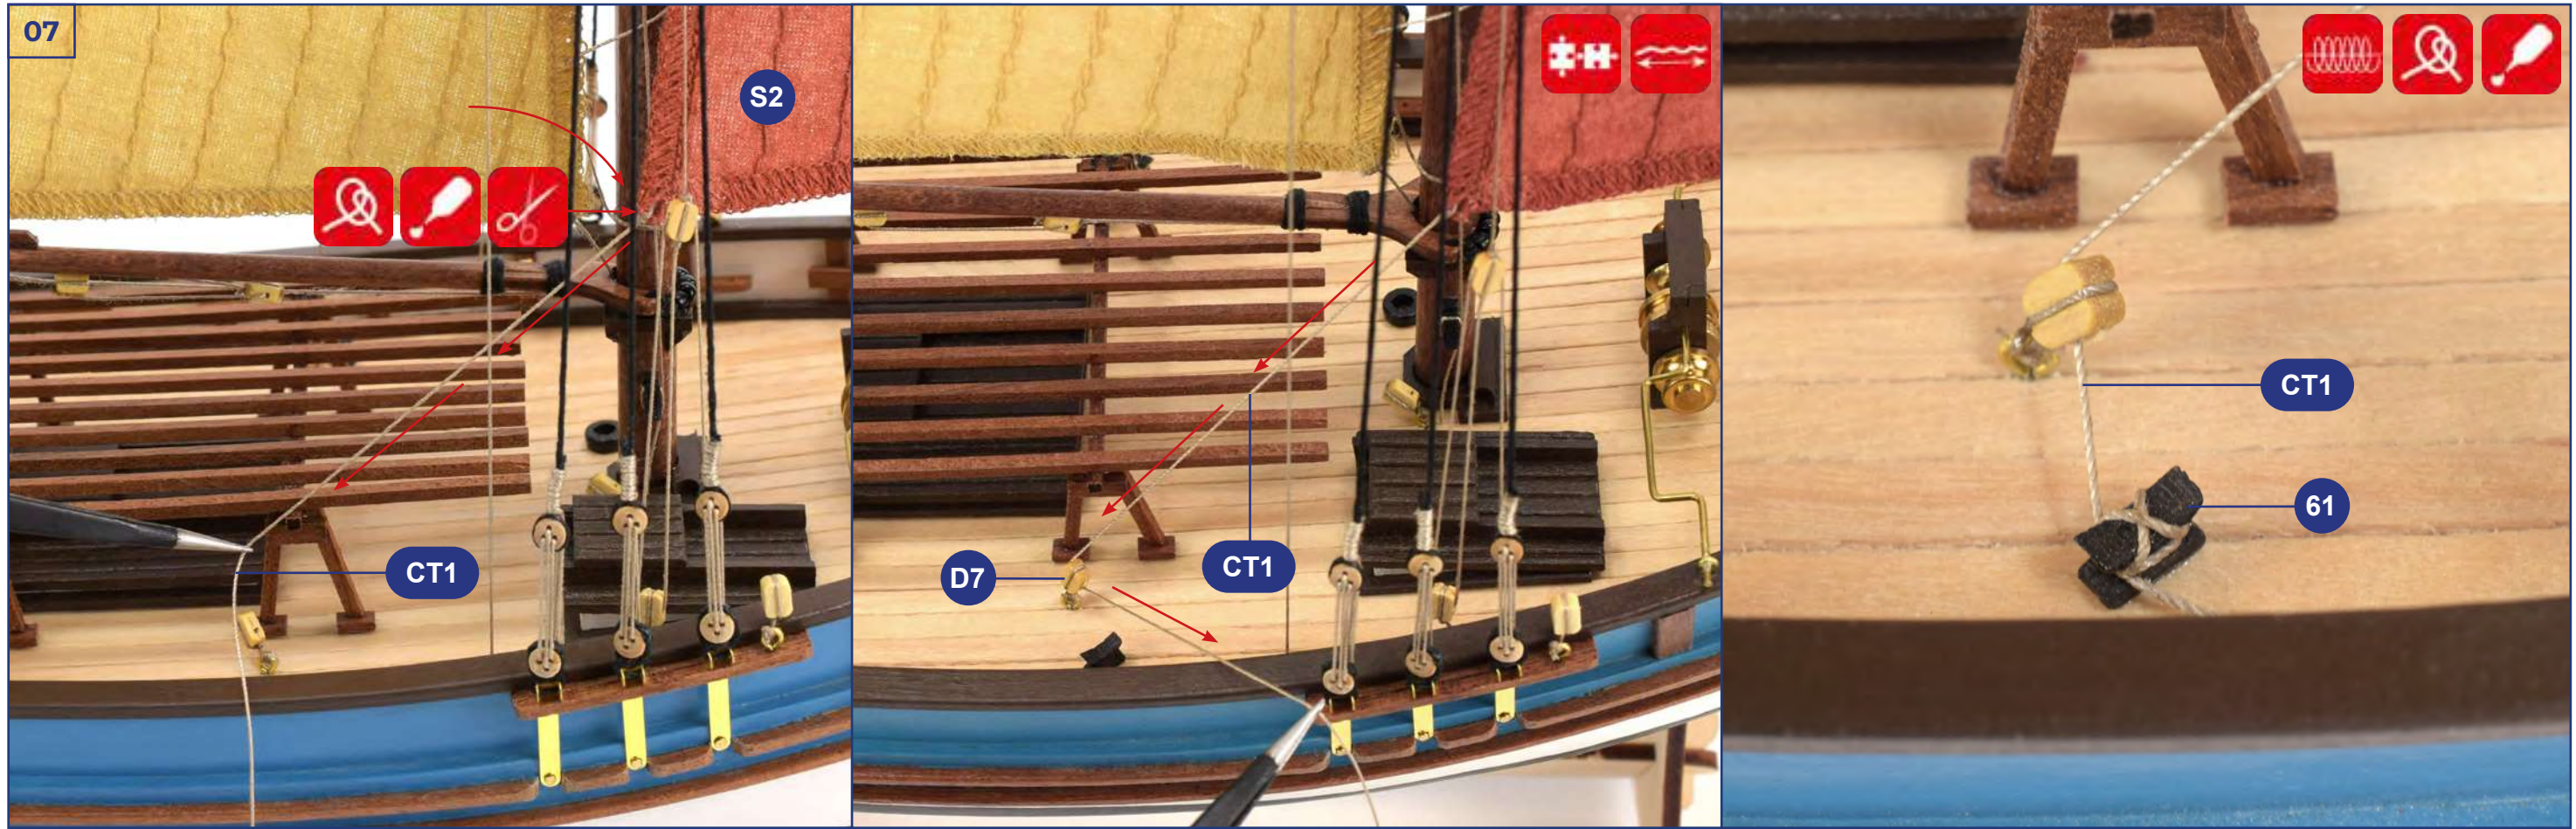


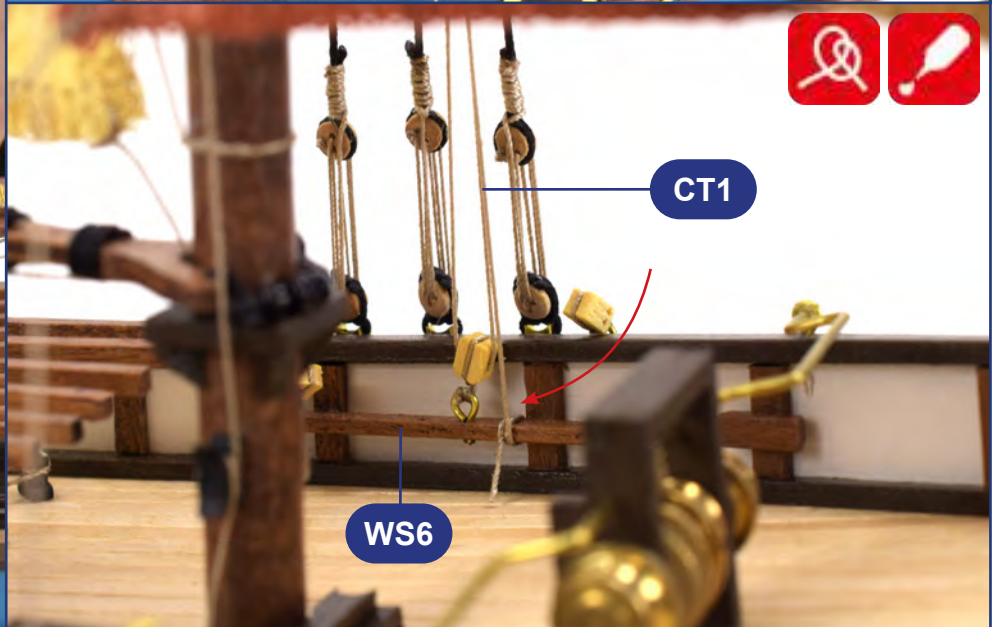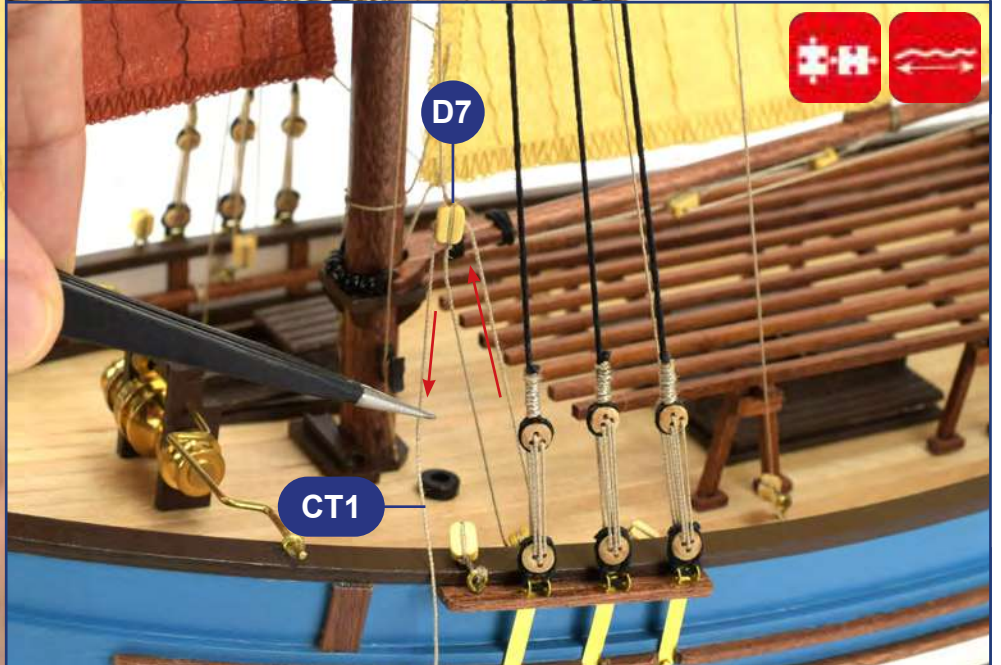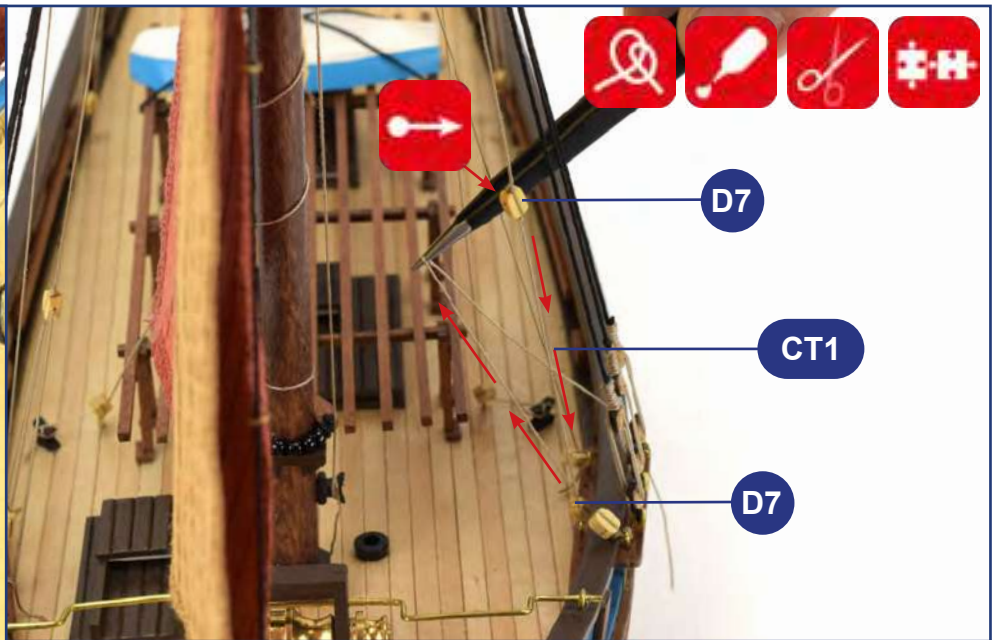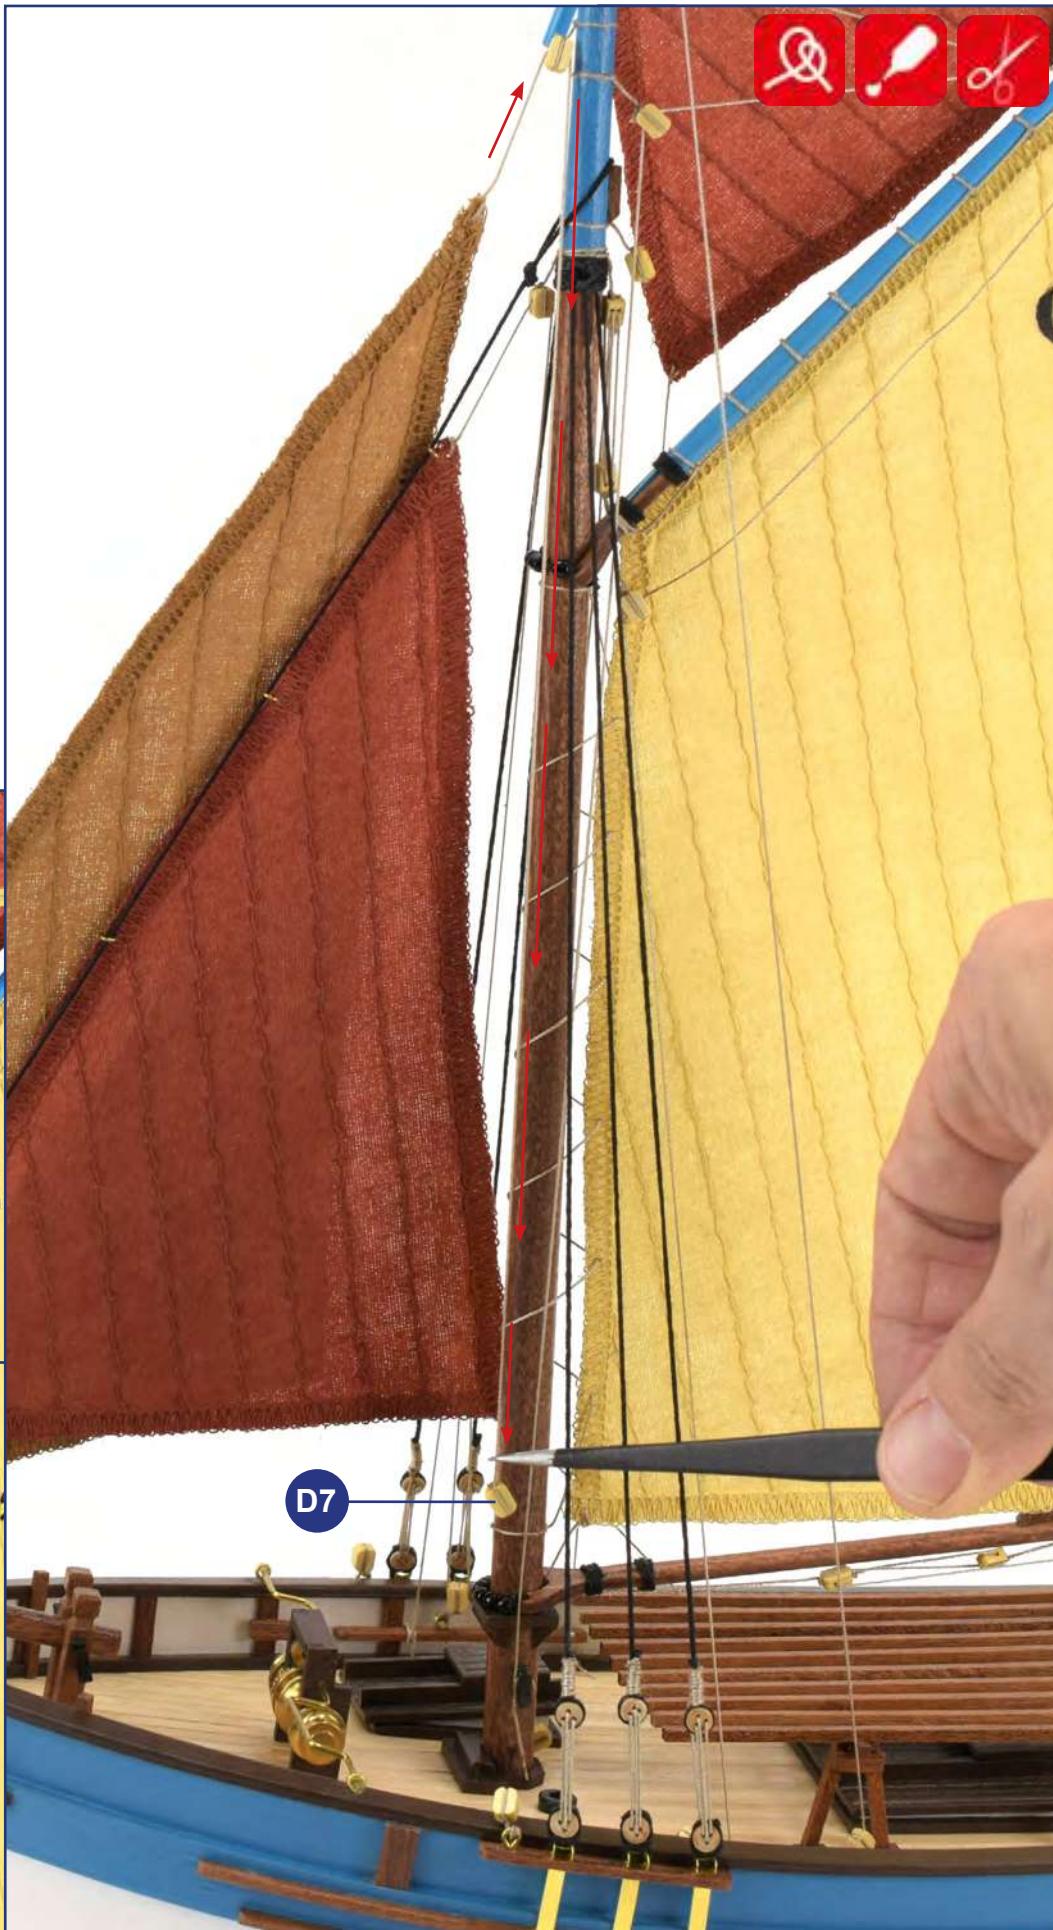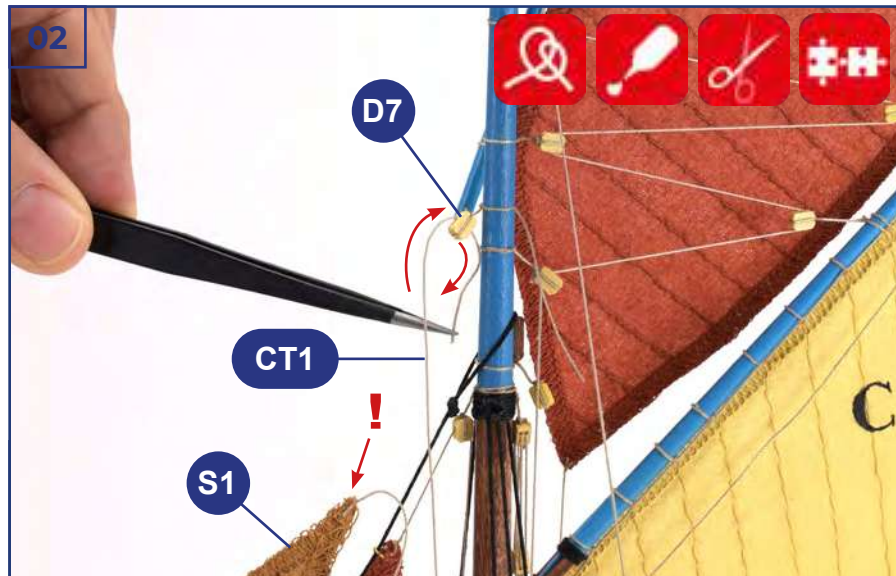
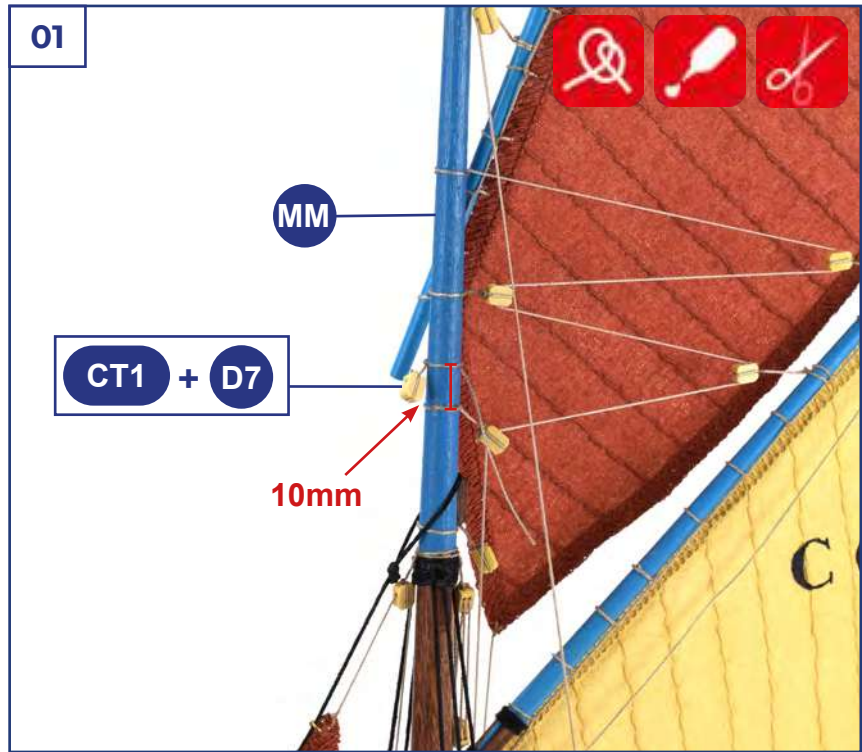


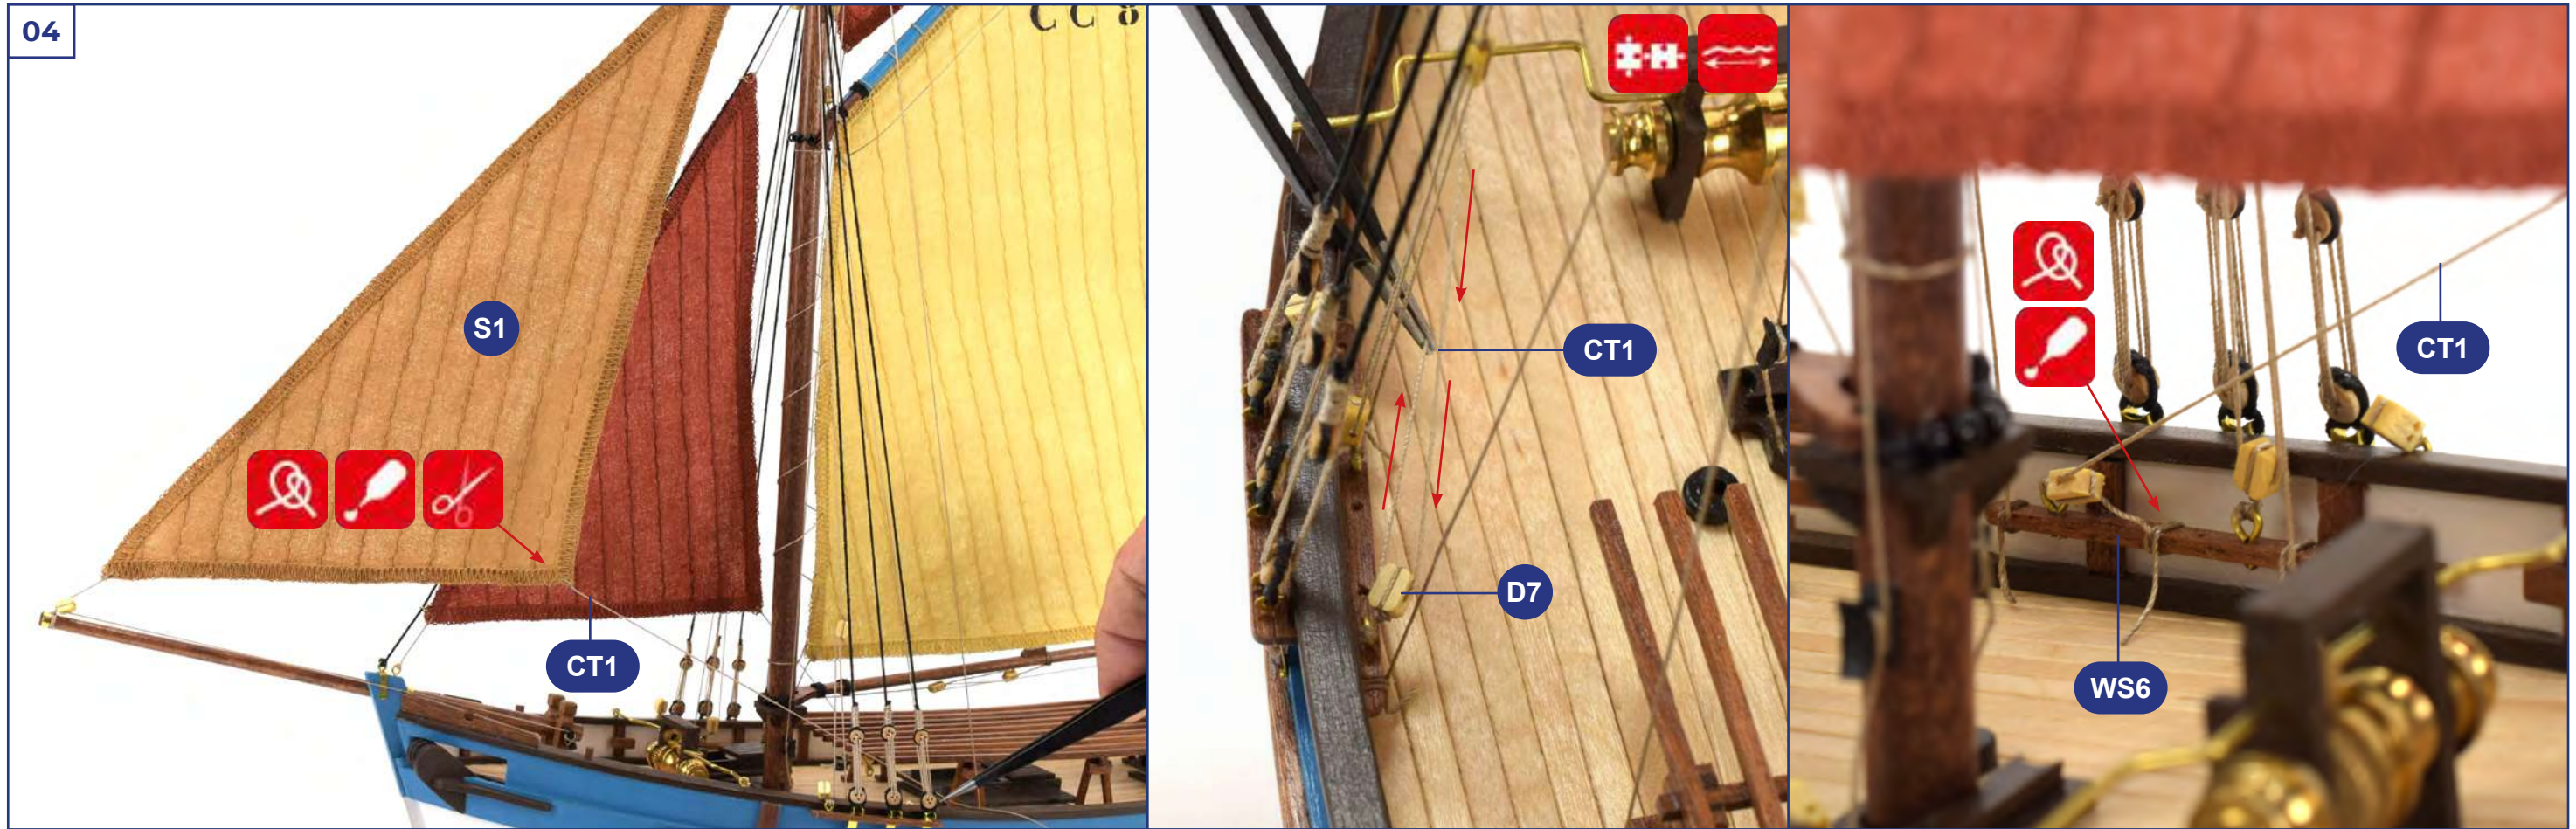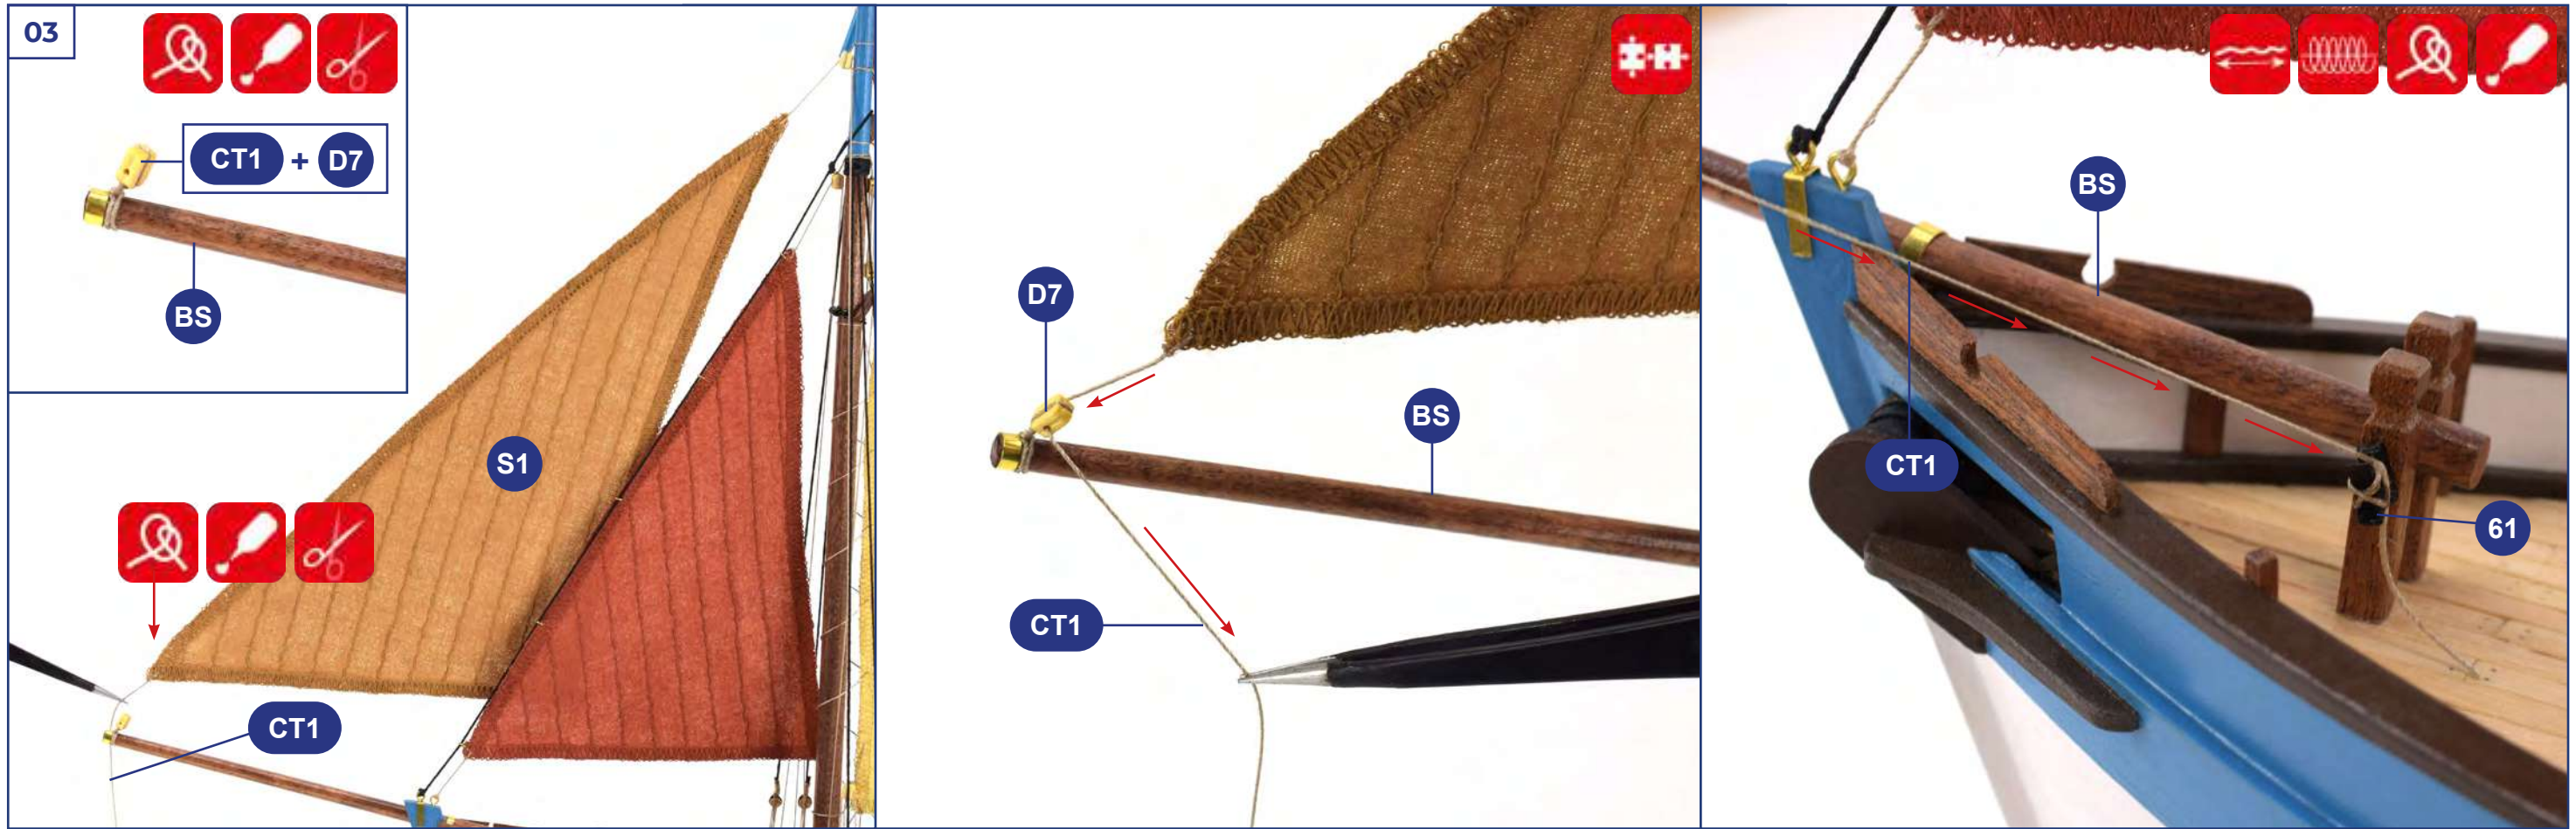

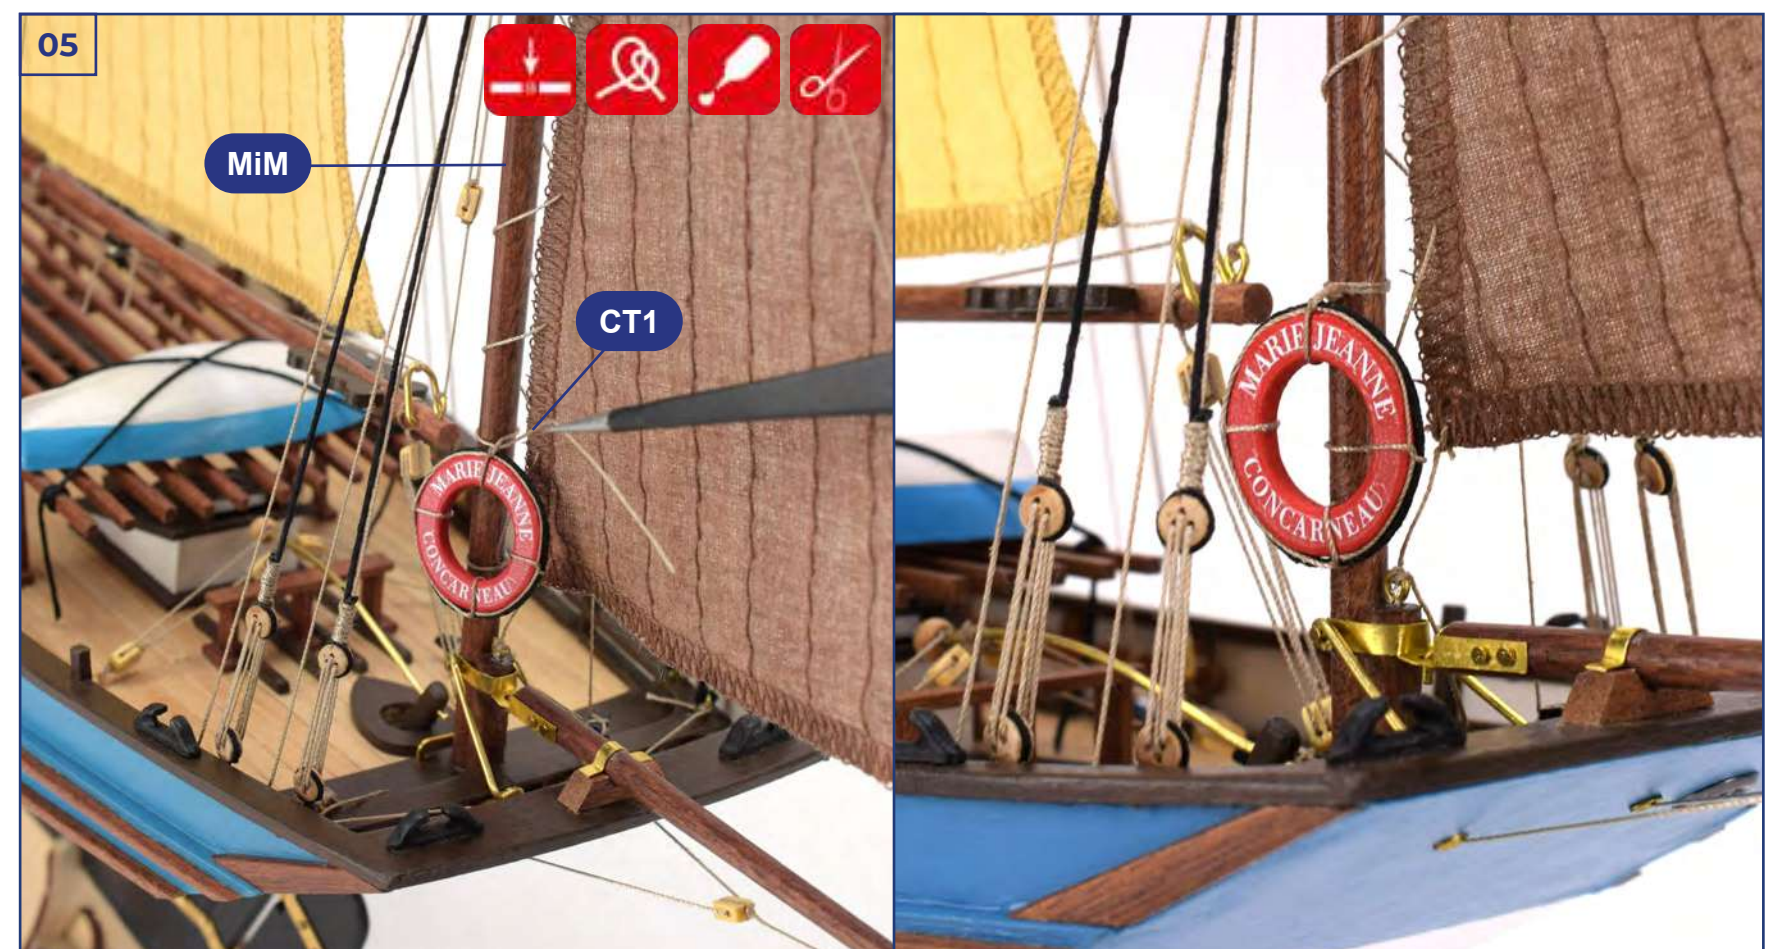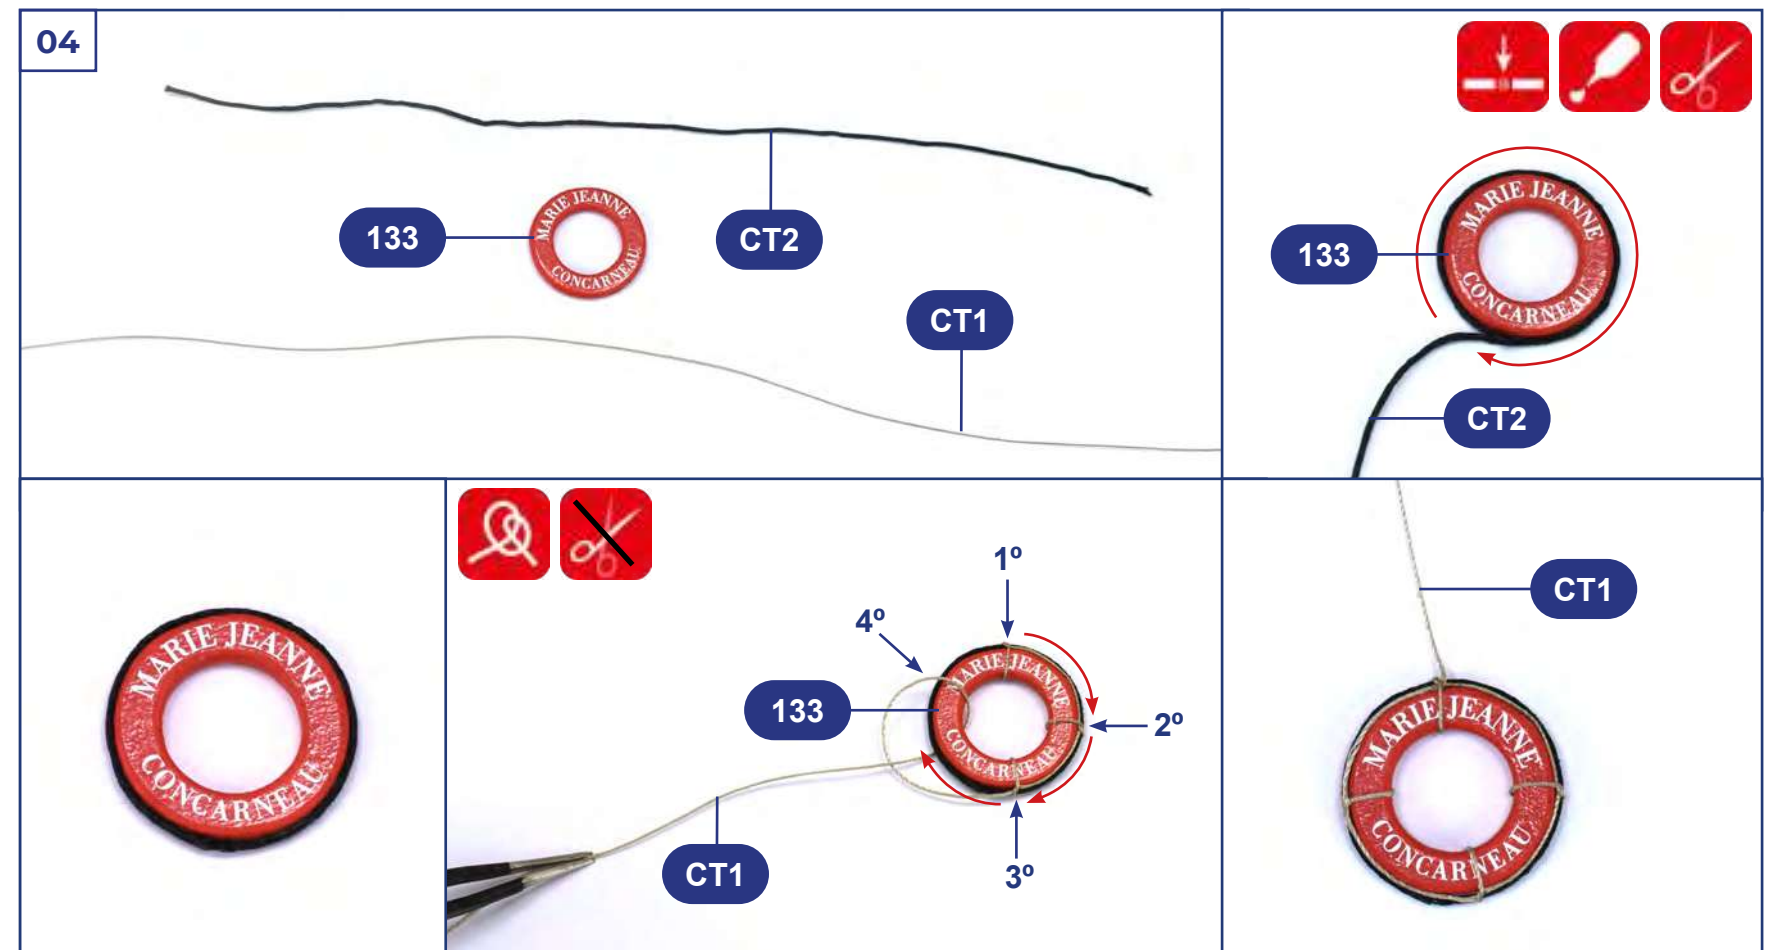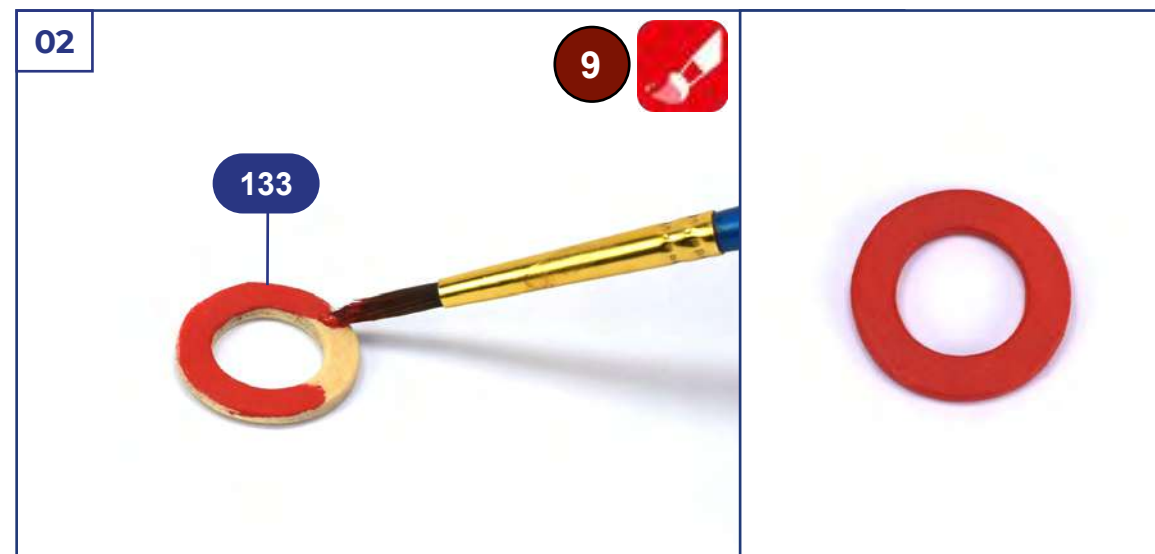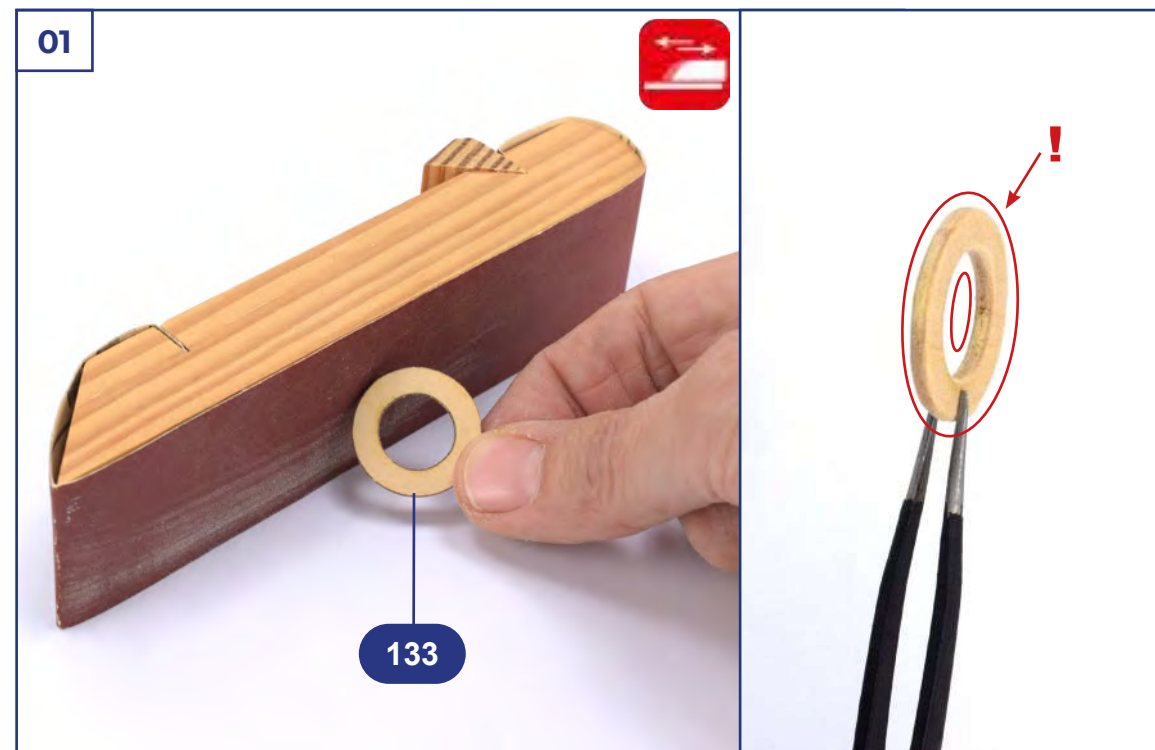


01

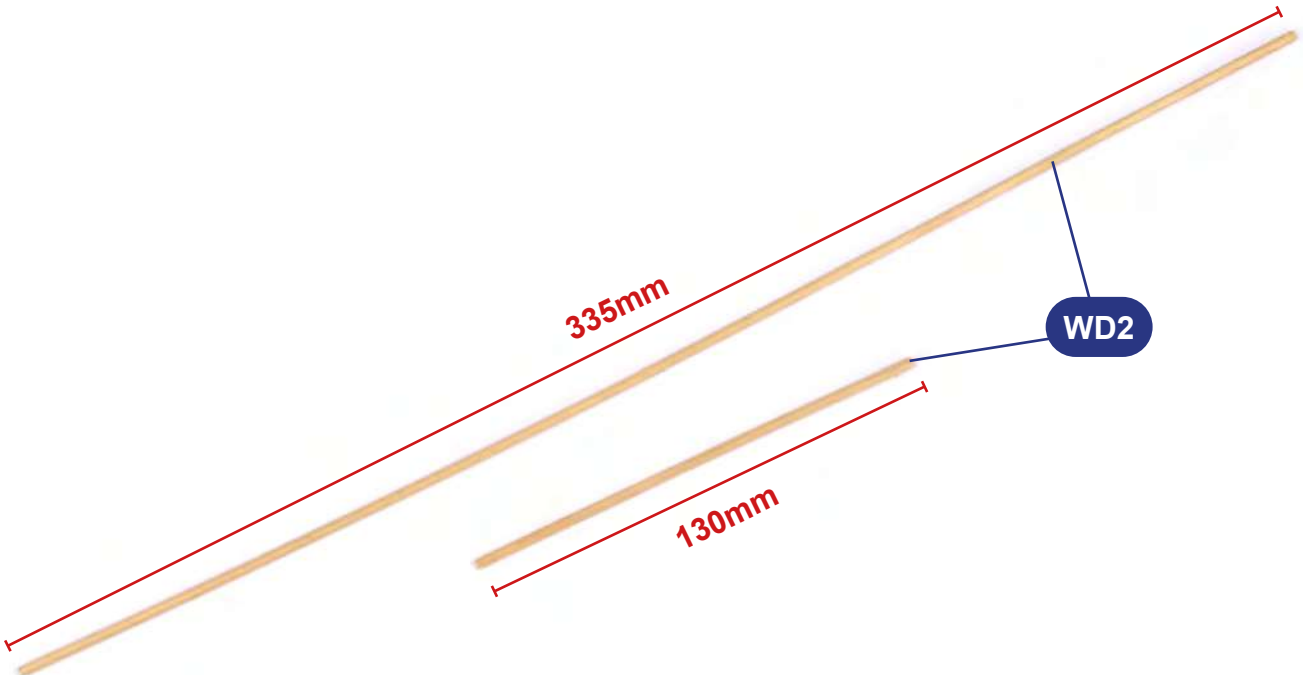


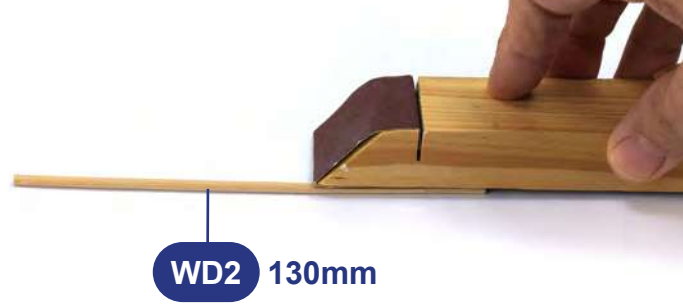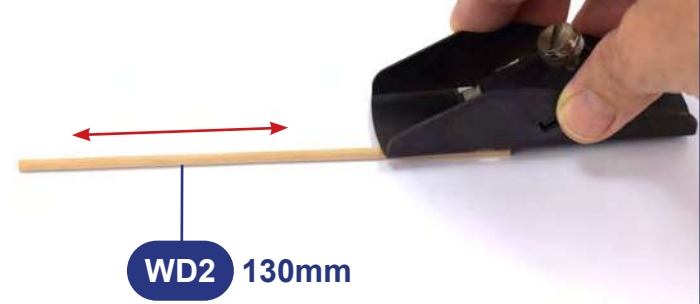



02

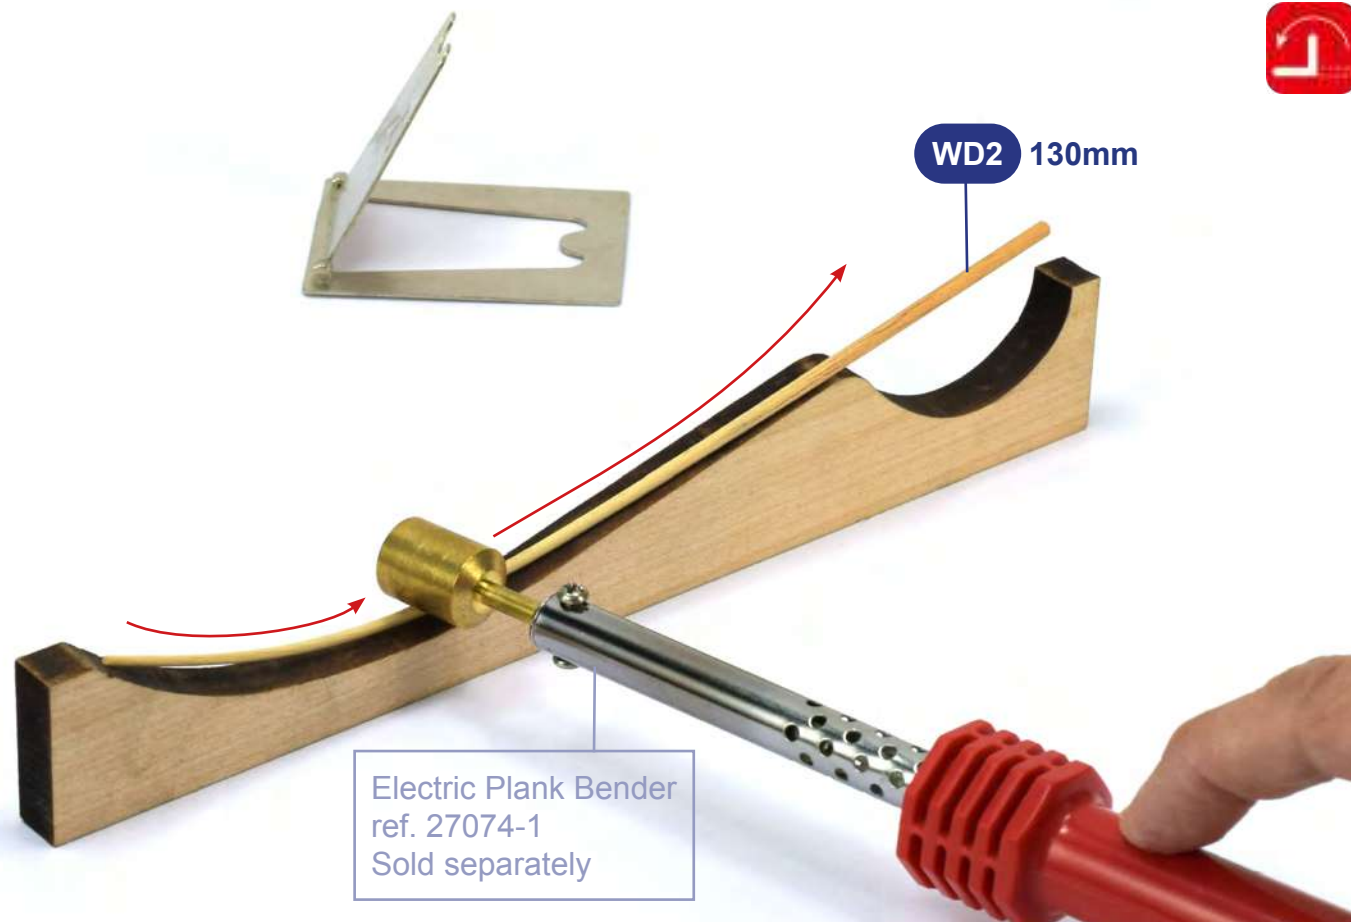


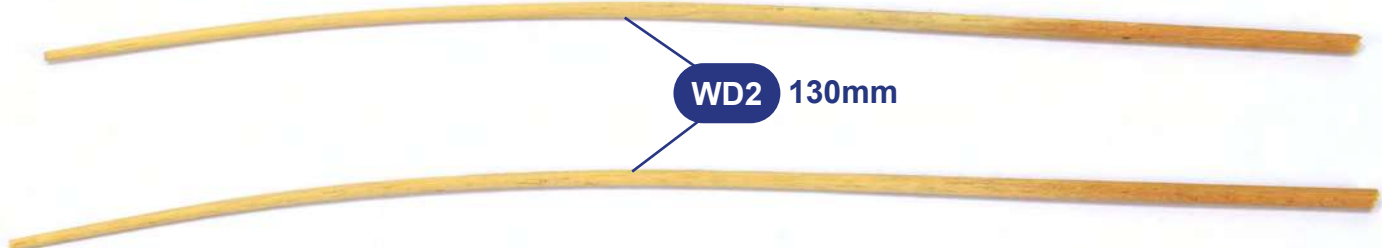



03

5

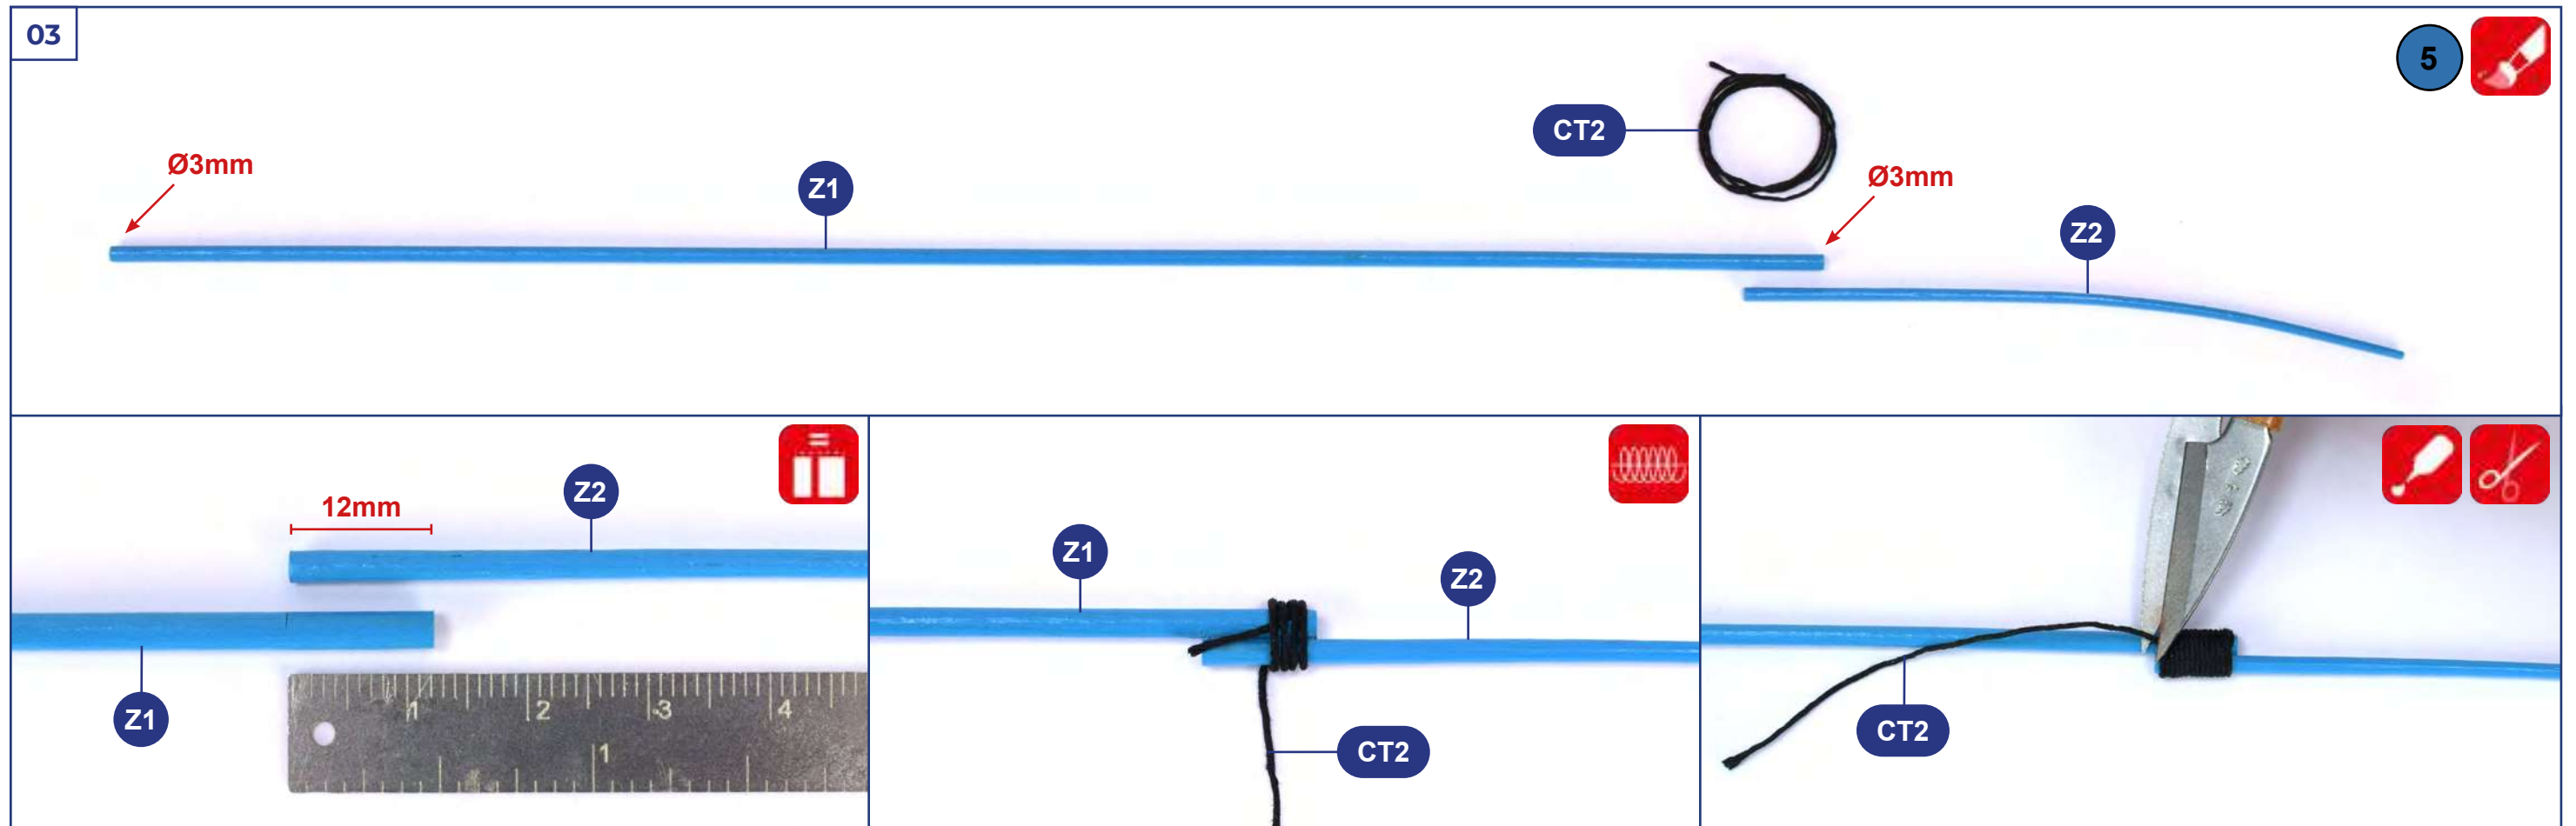

04

CT1
+
D7

CT1

CT1

105mm

20mm




05


R

CT1

Z1 + Z2


CT1

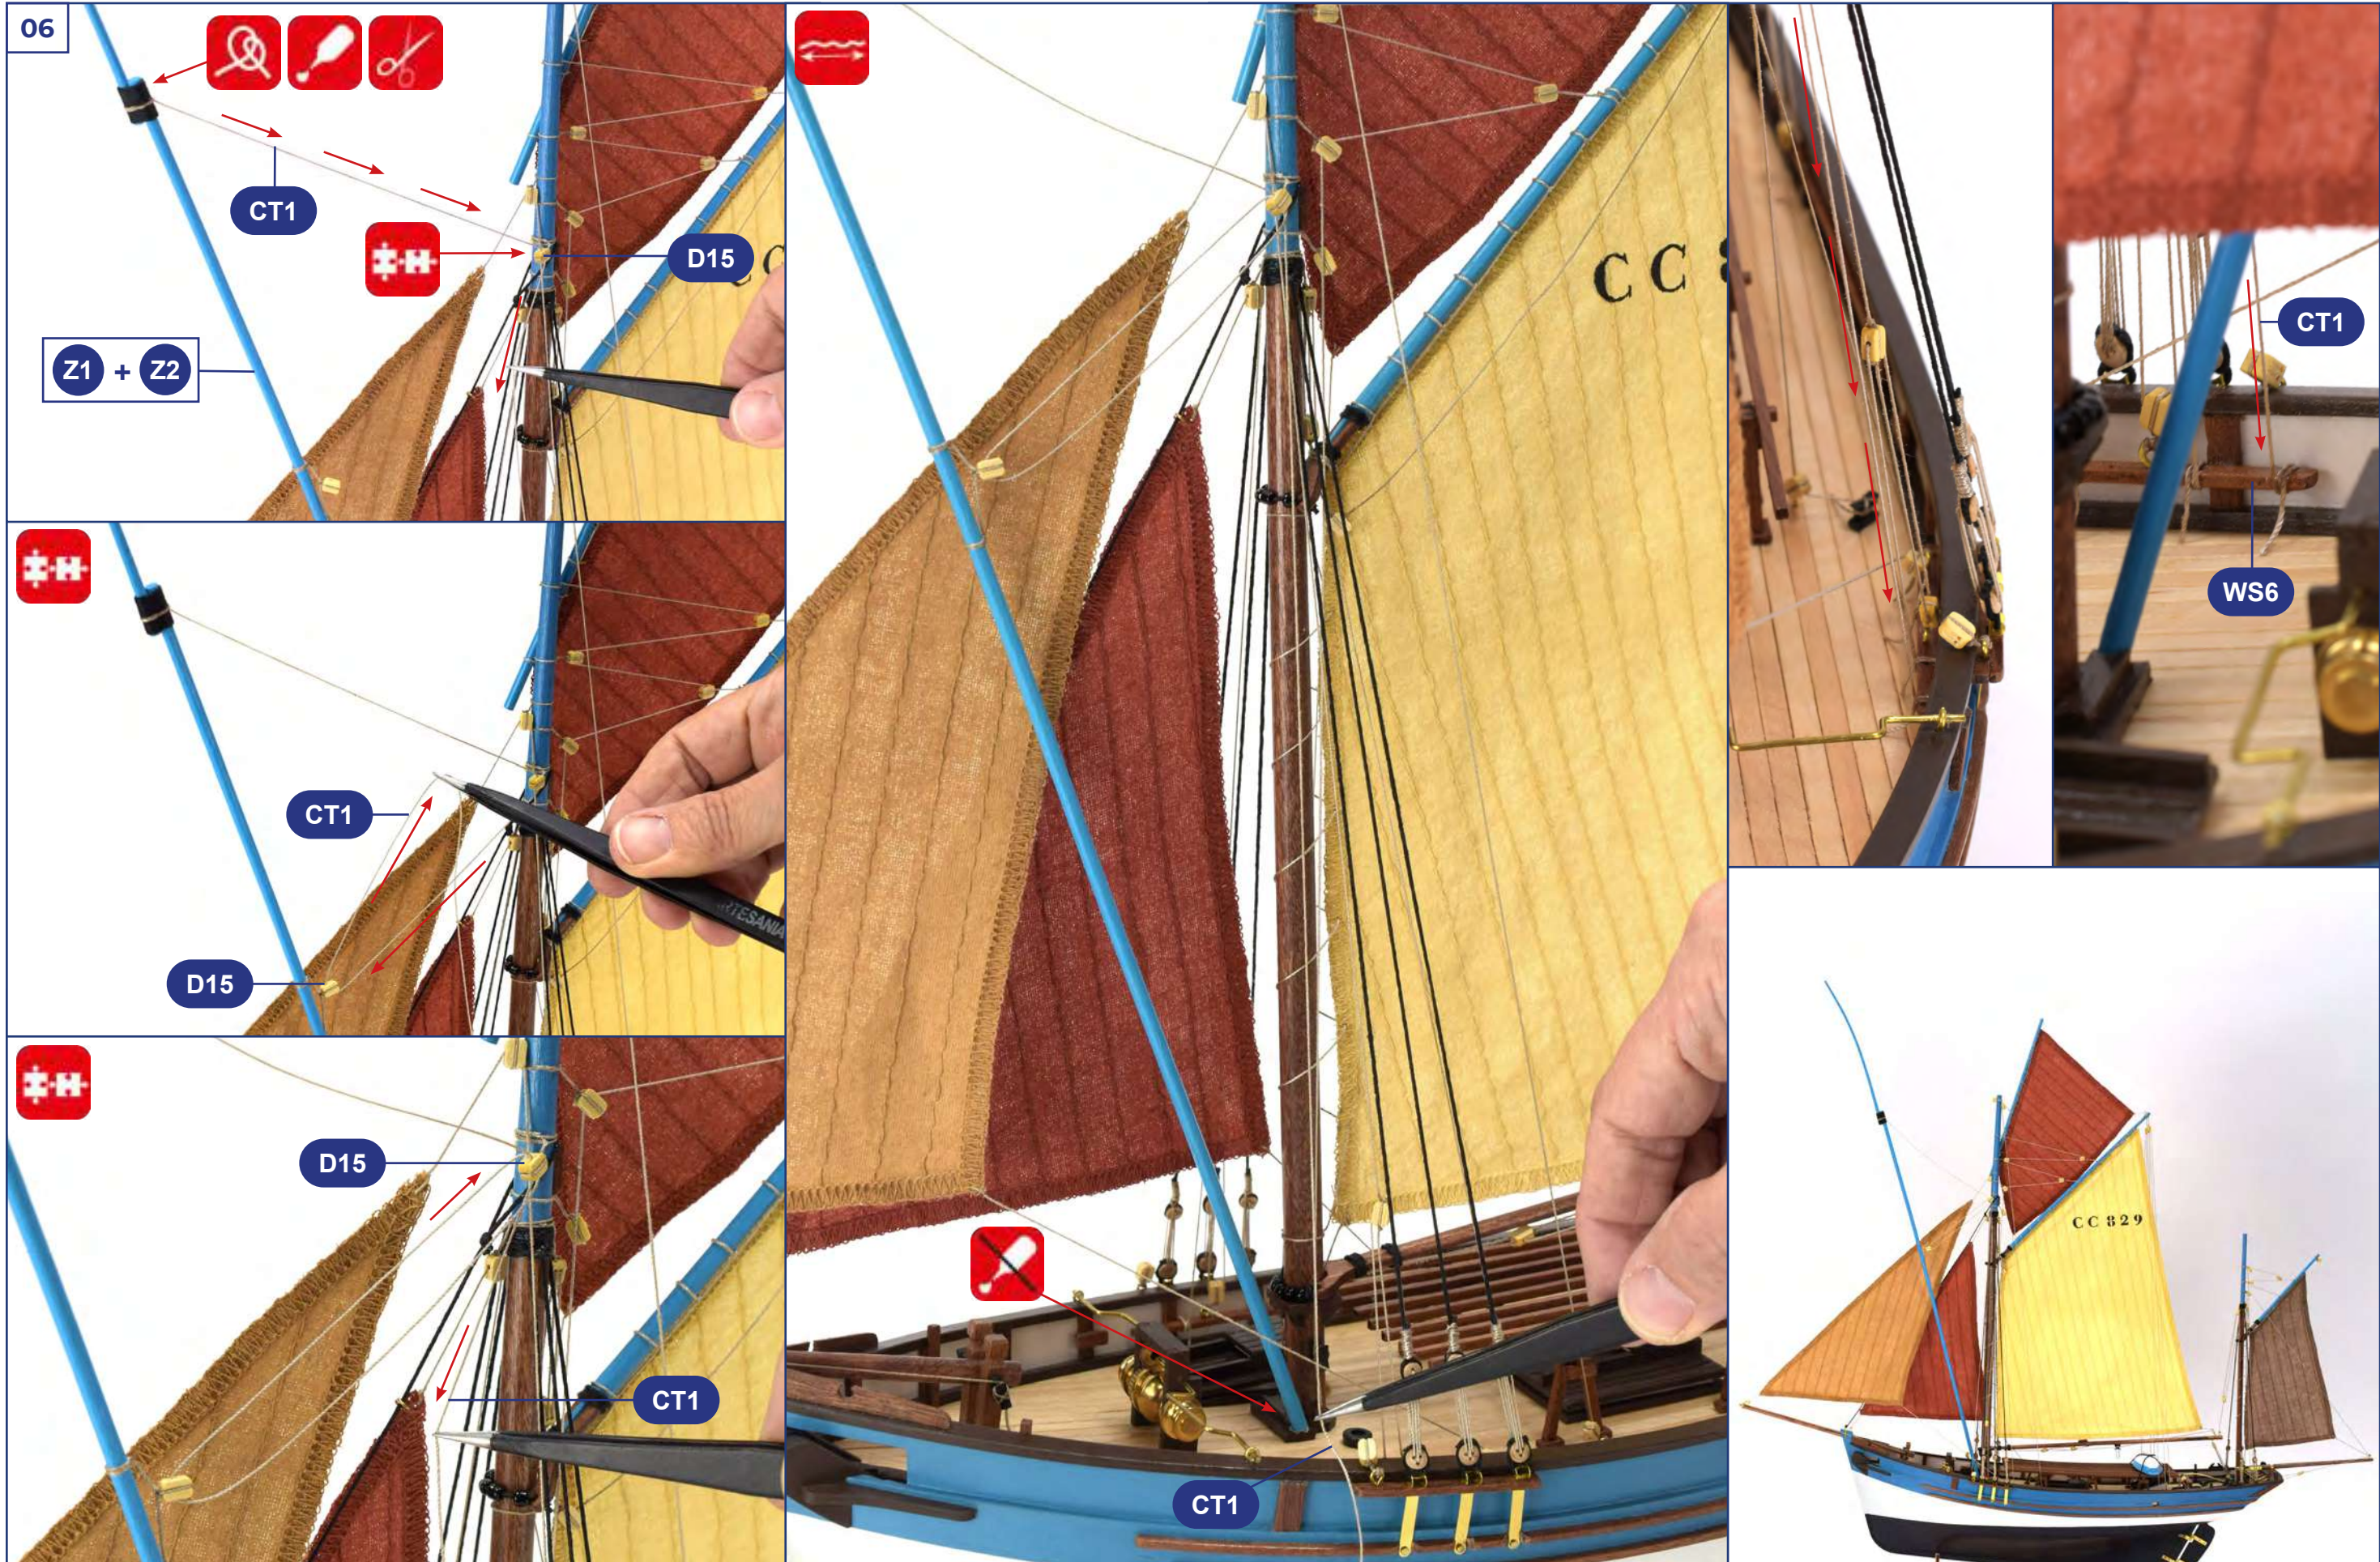

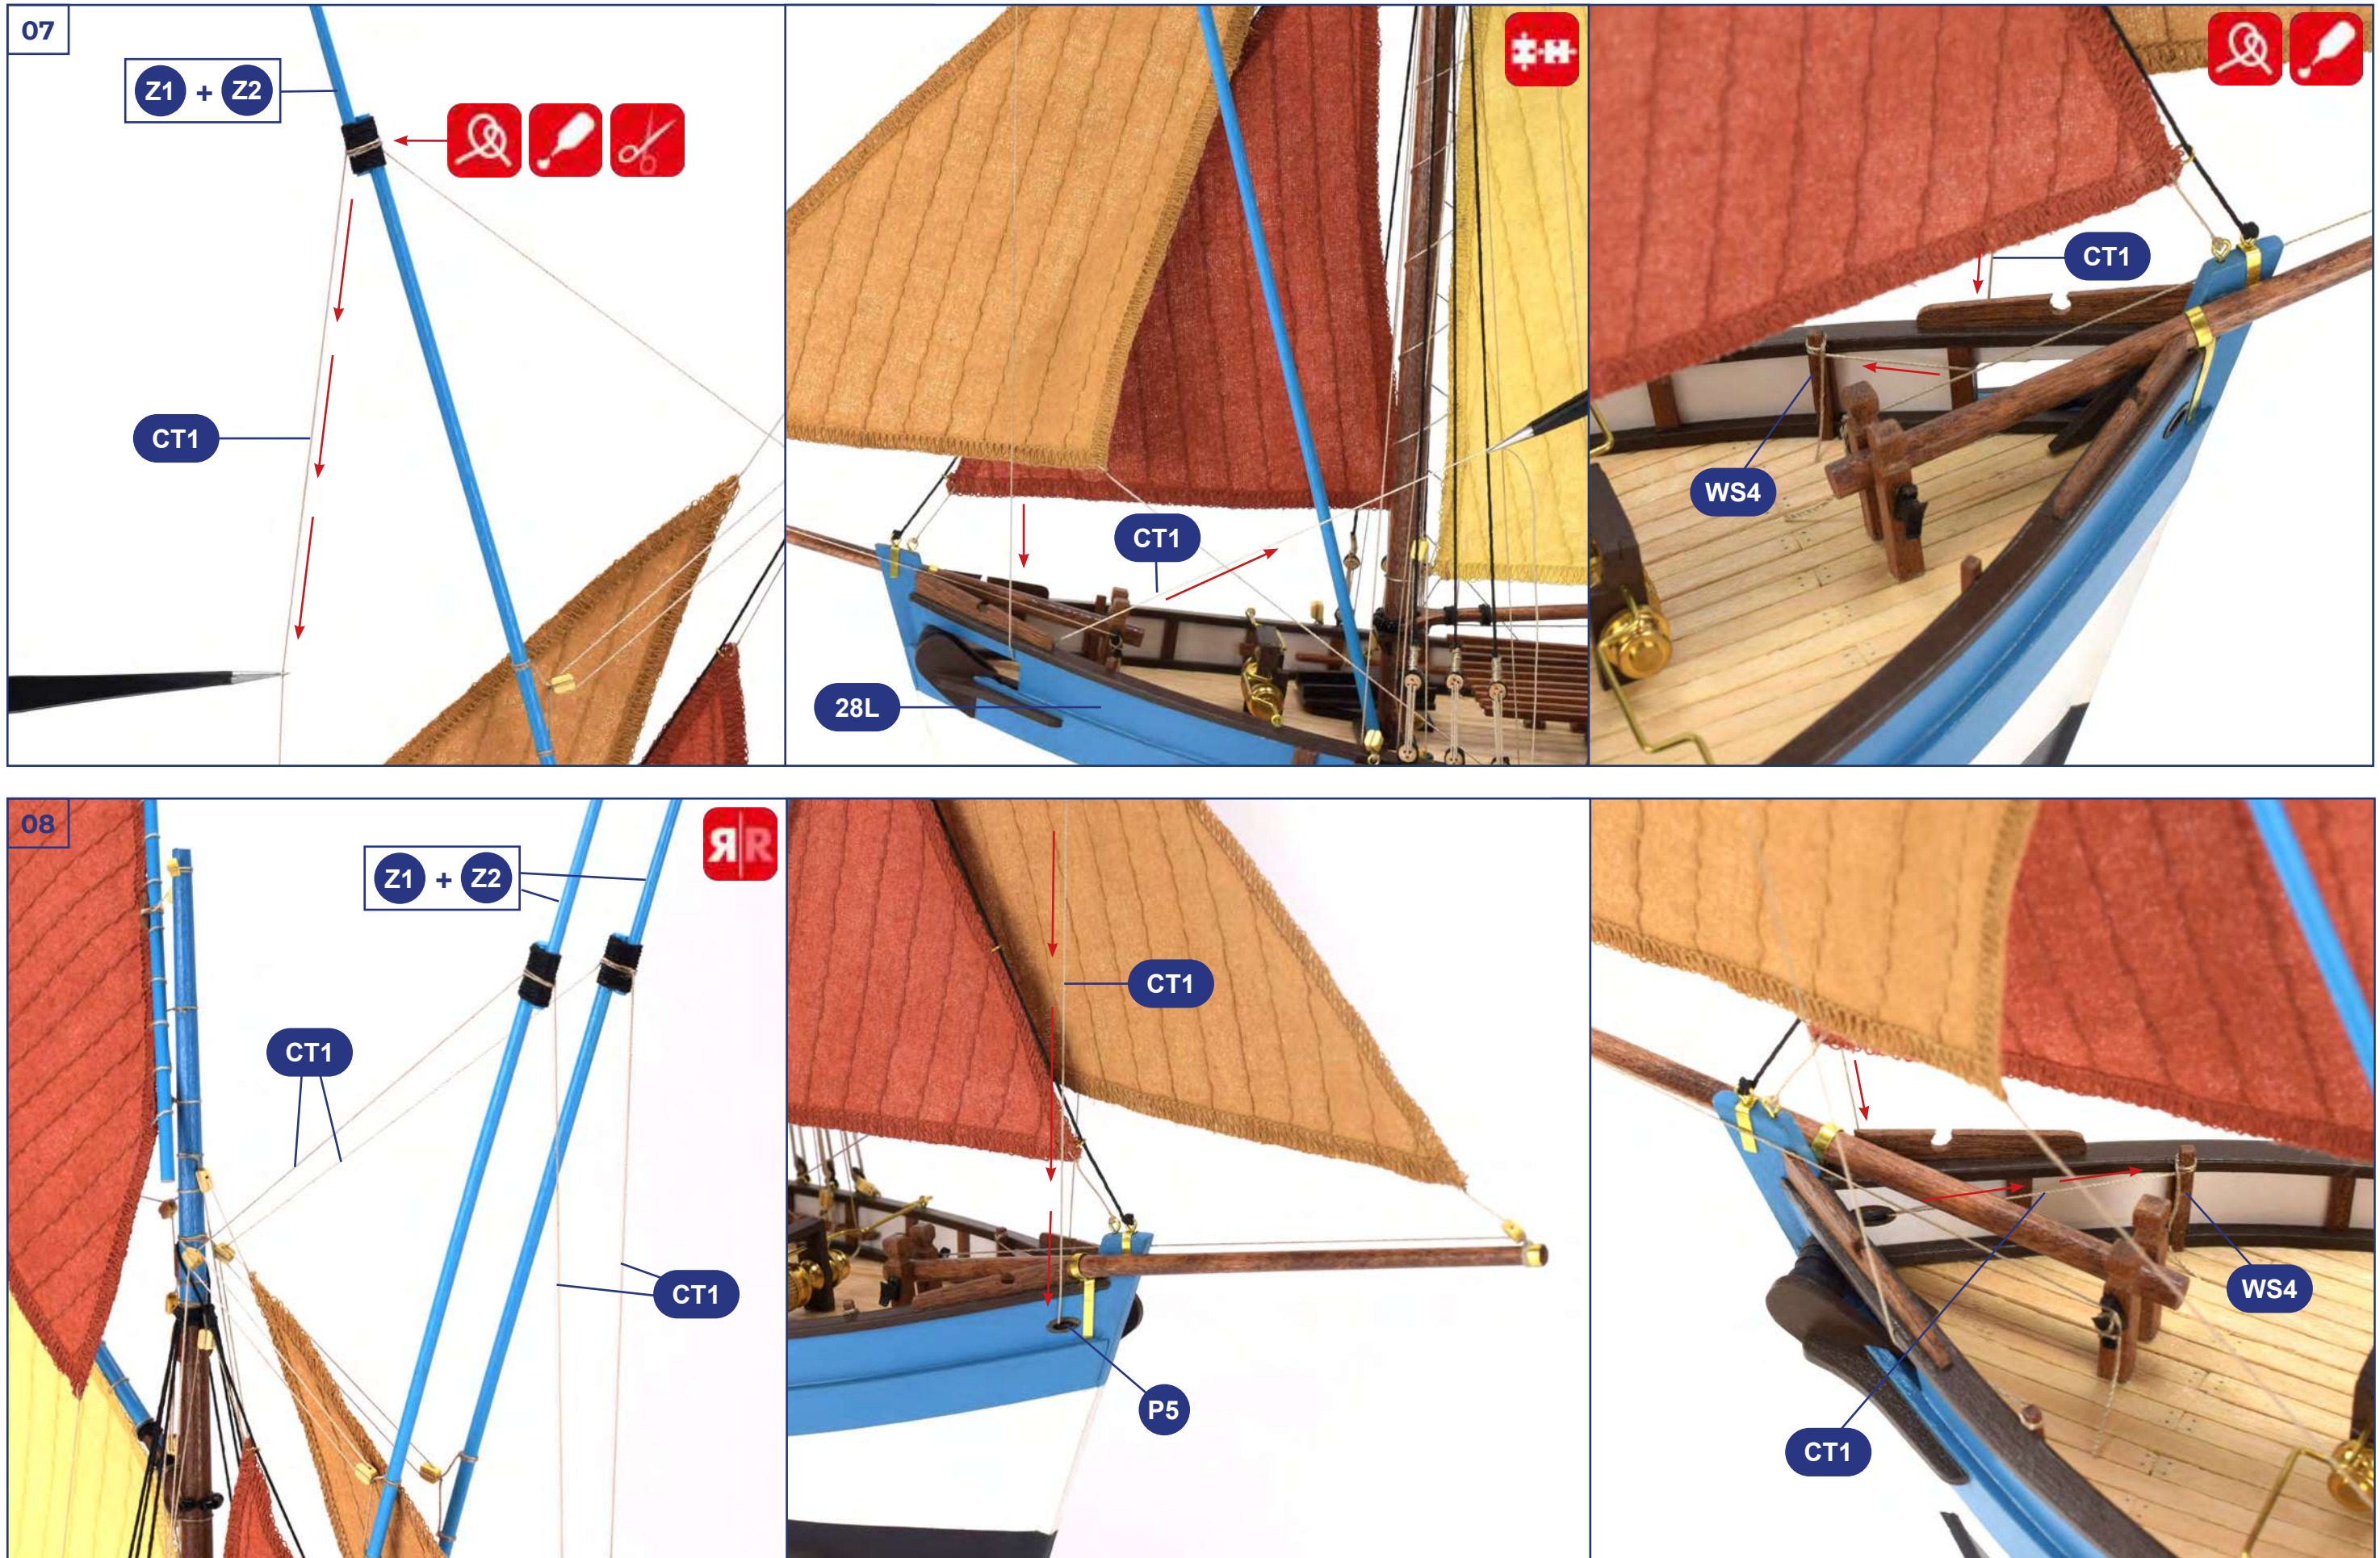




10

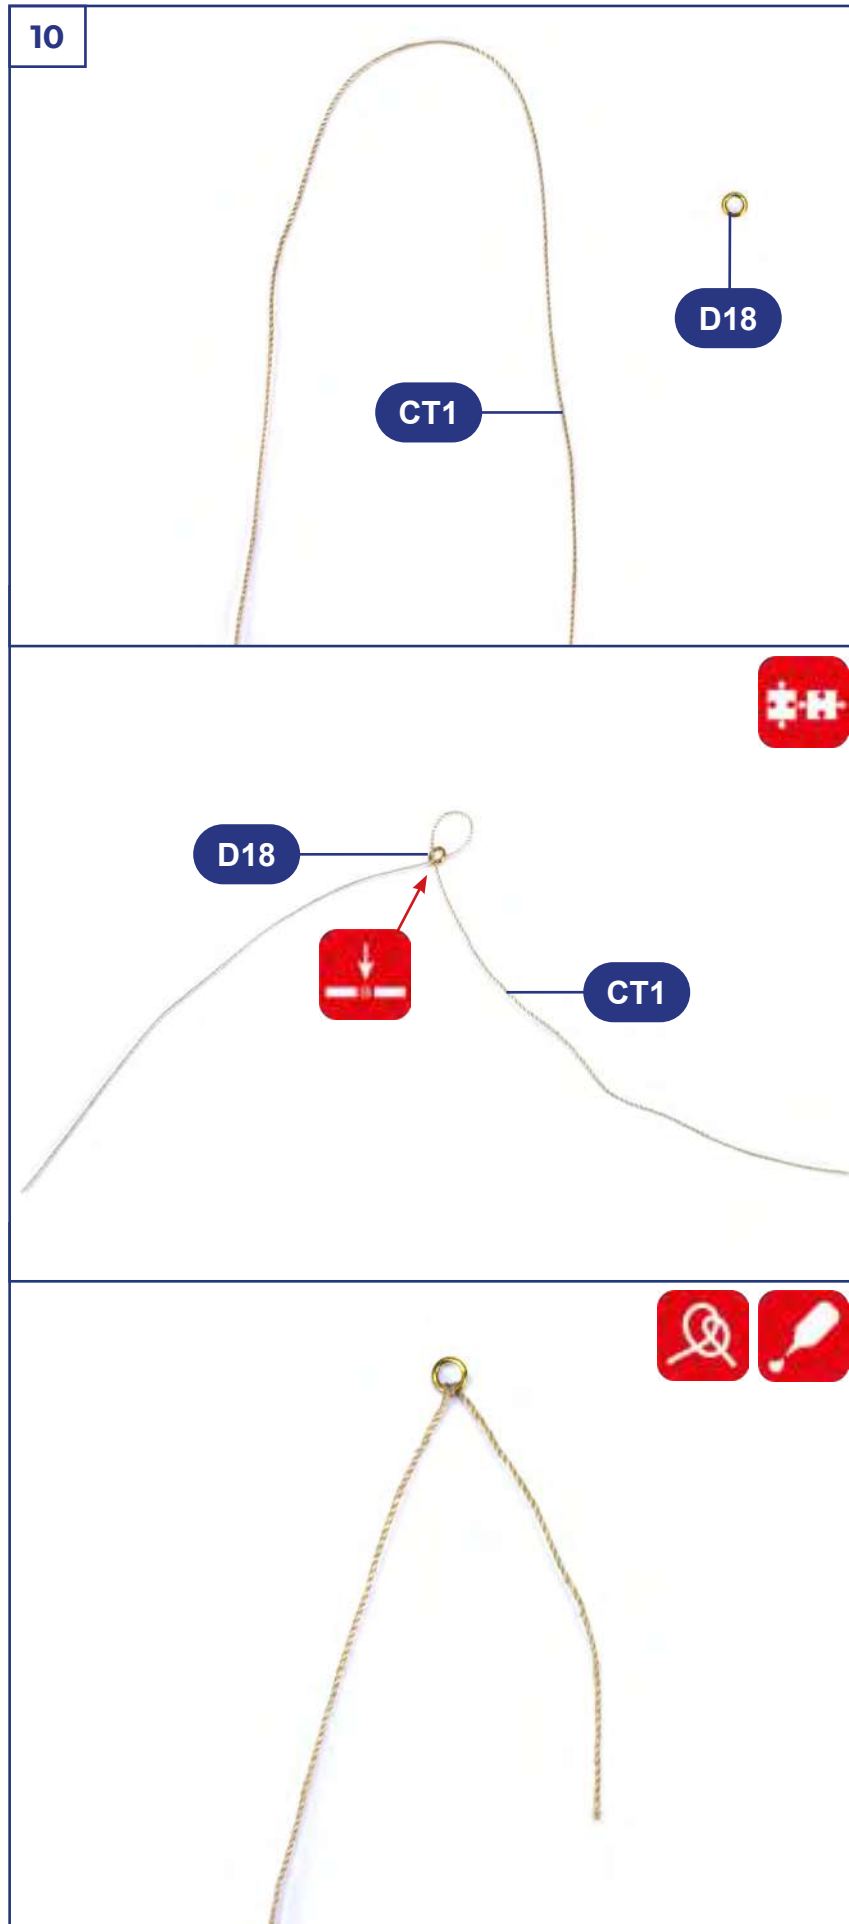







11




12

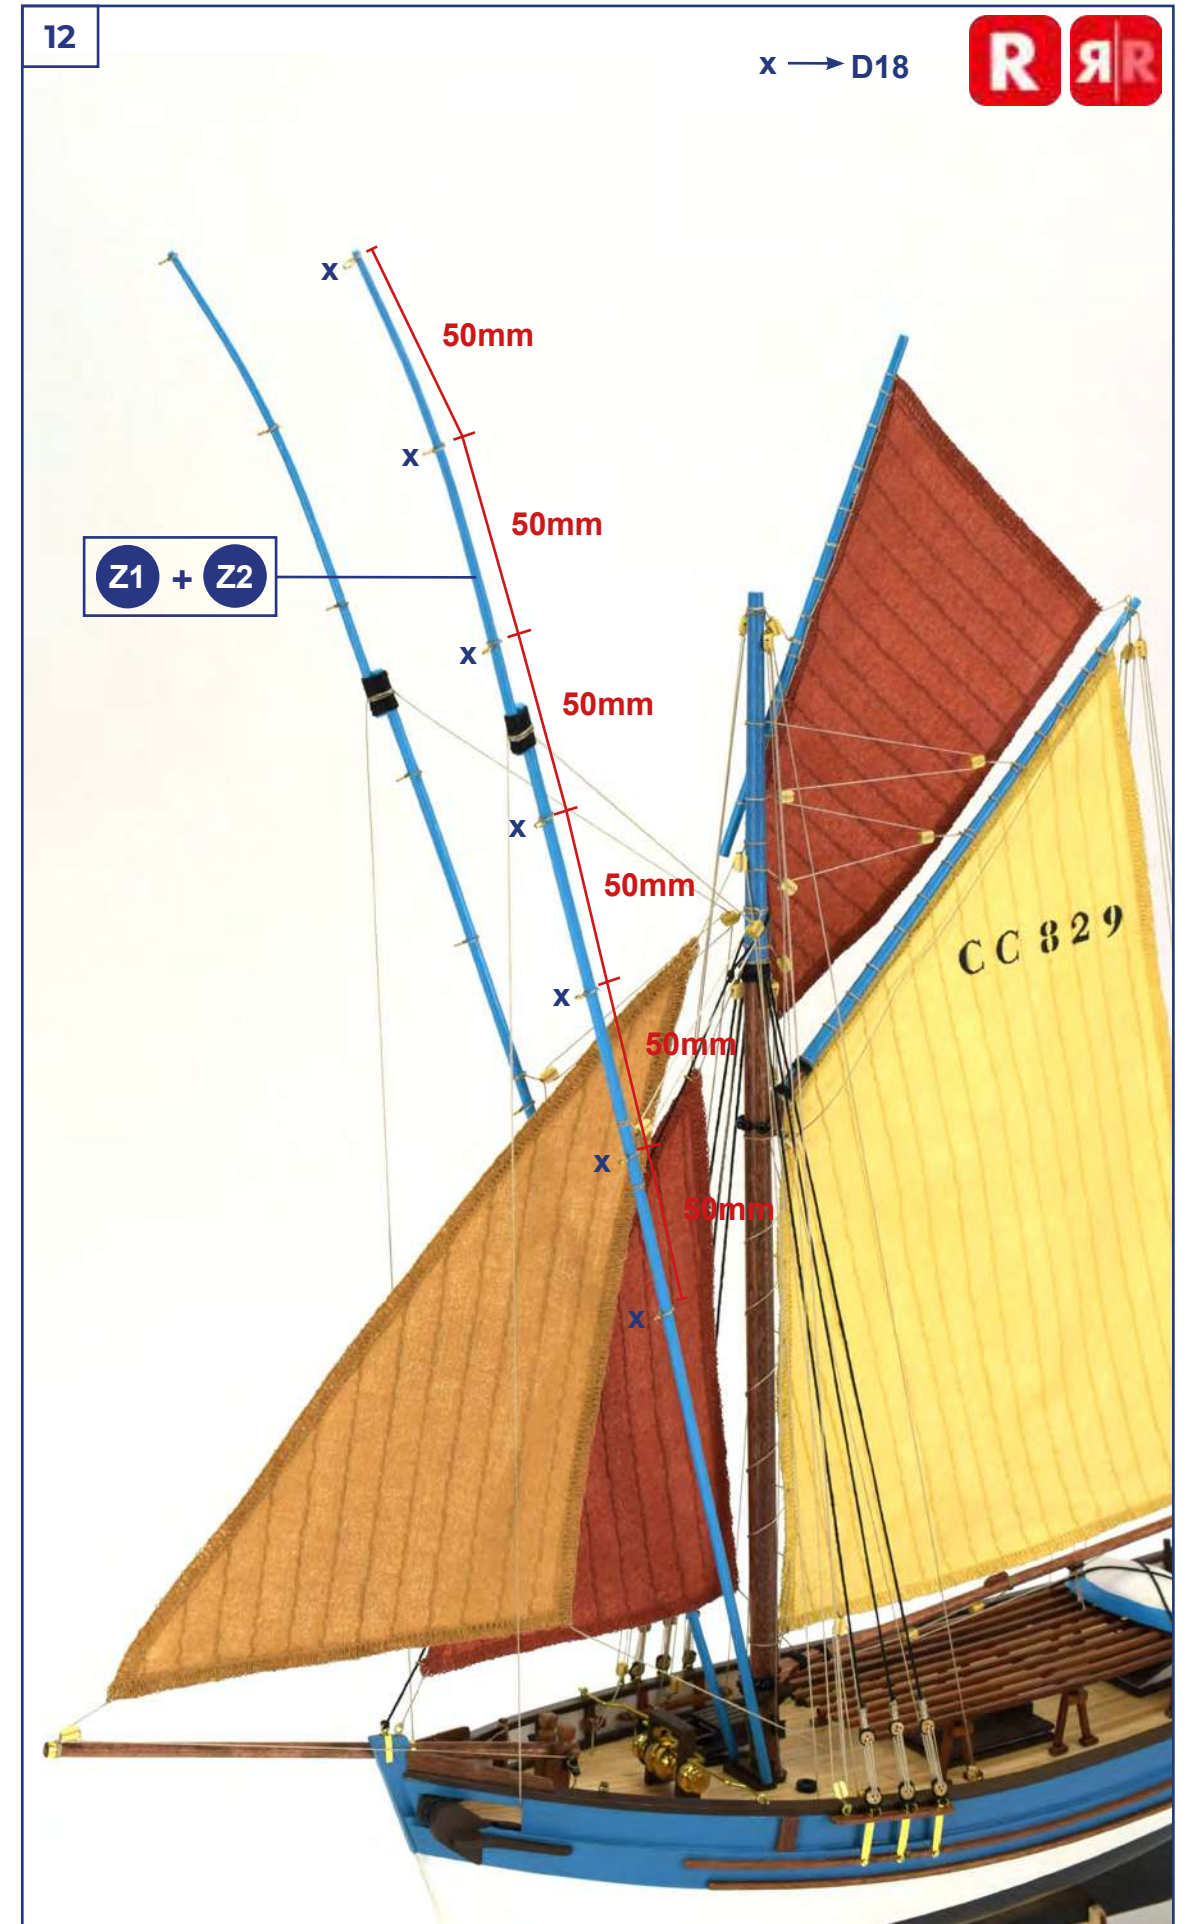

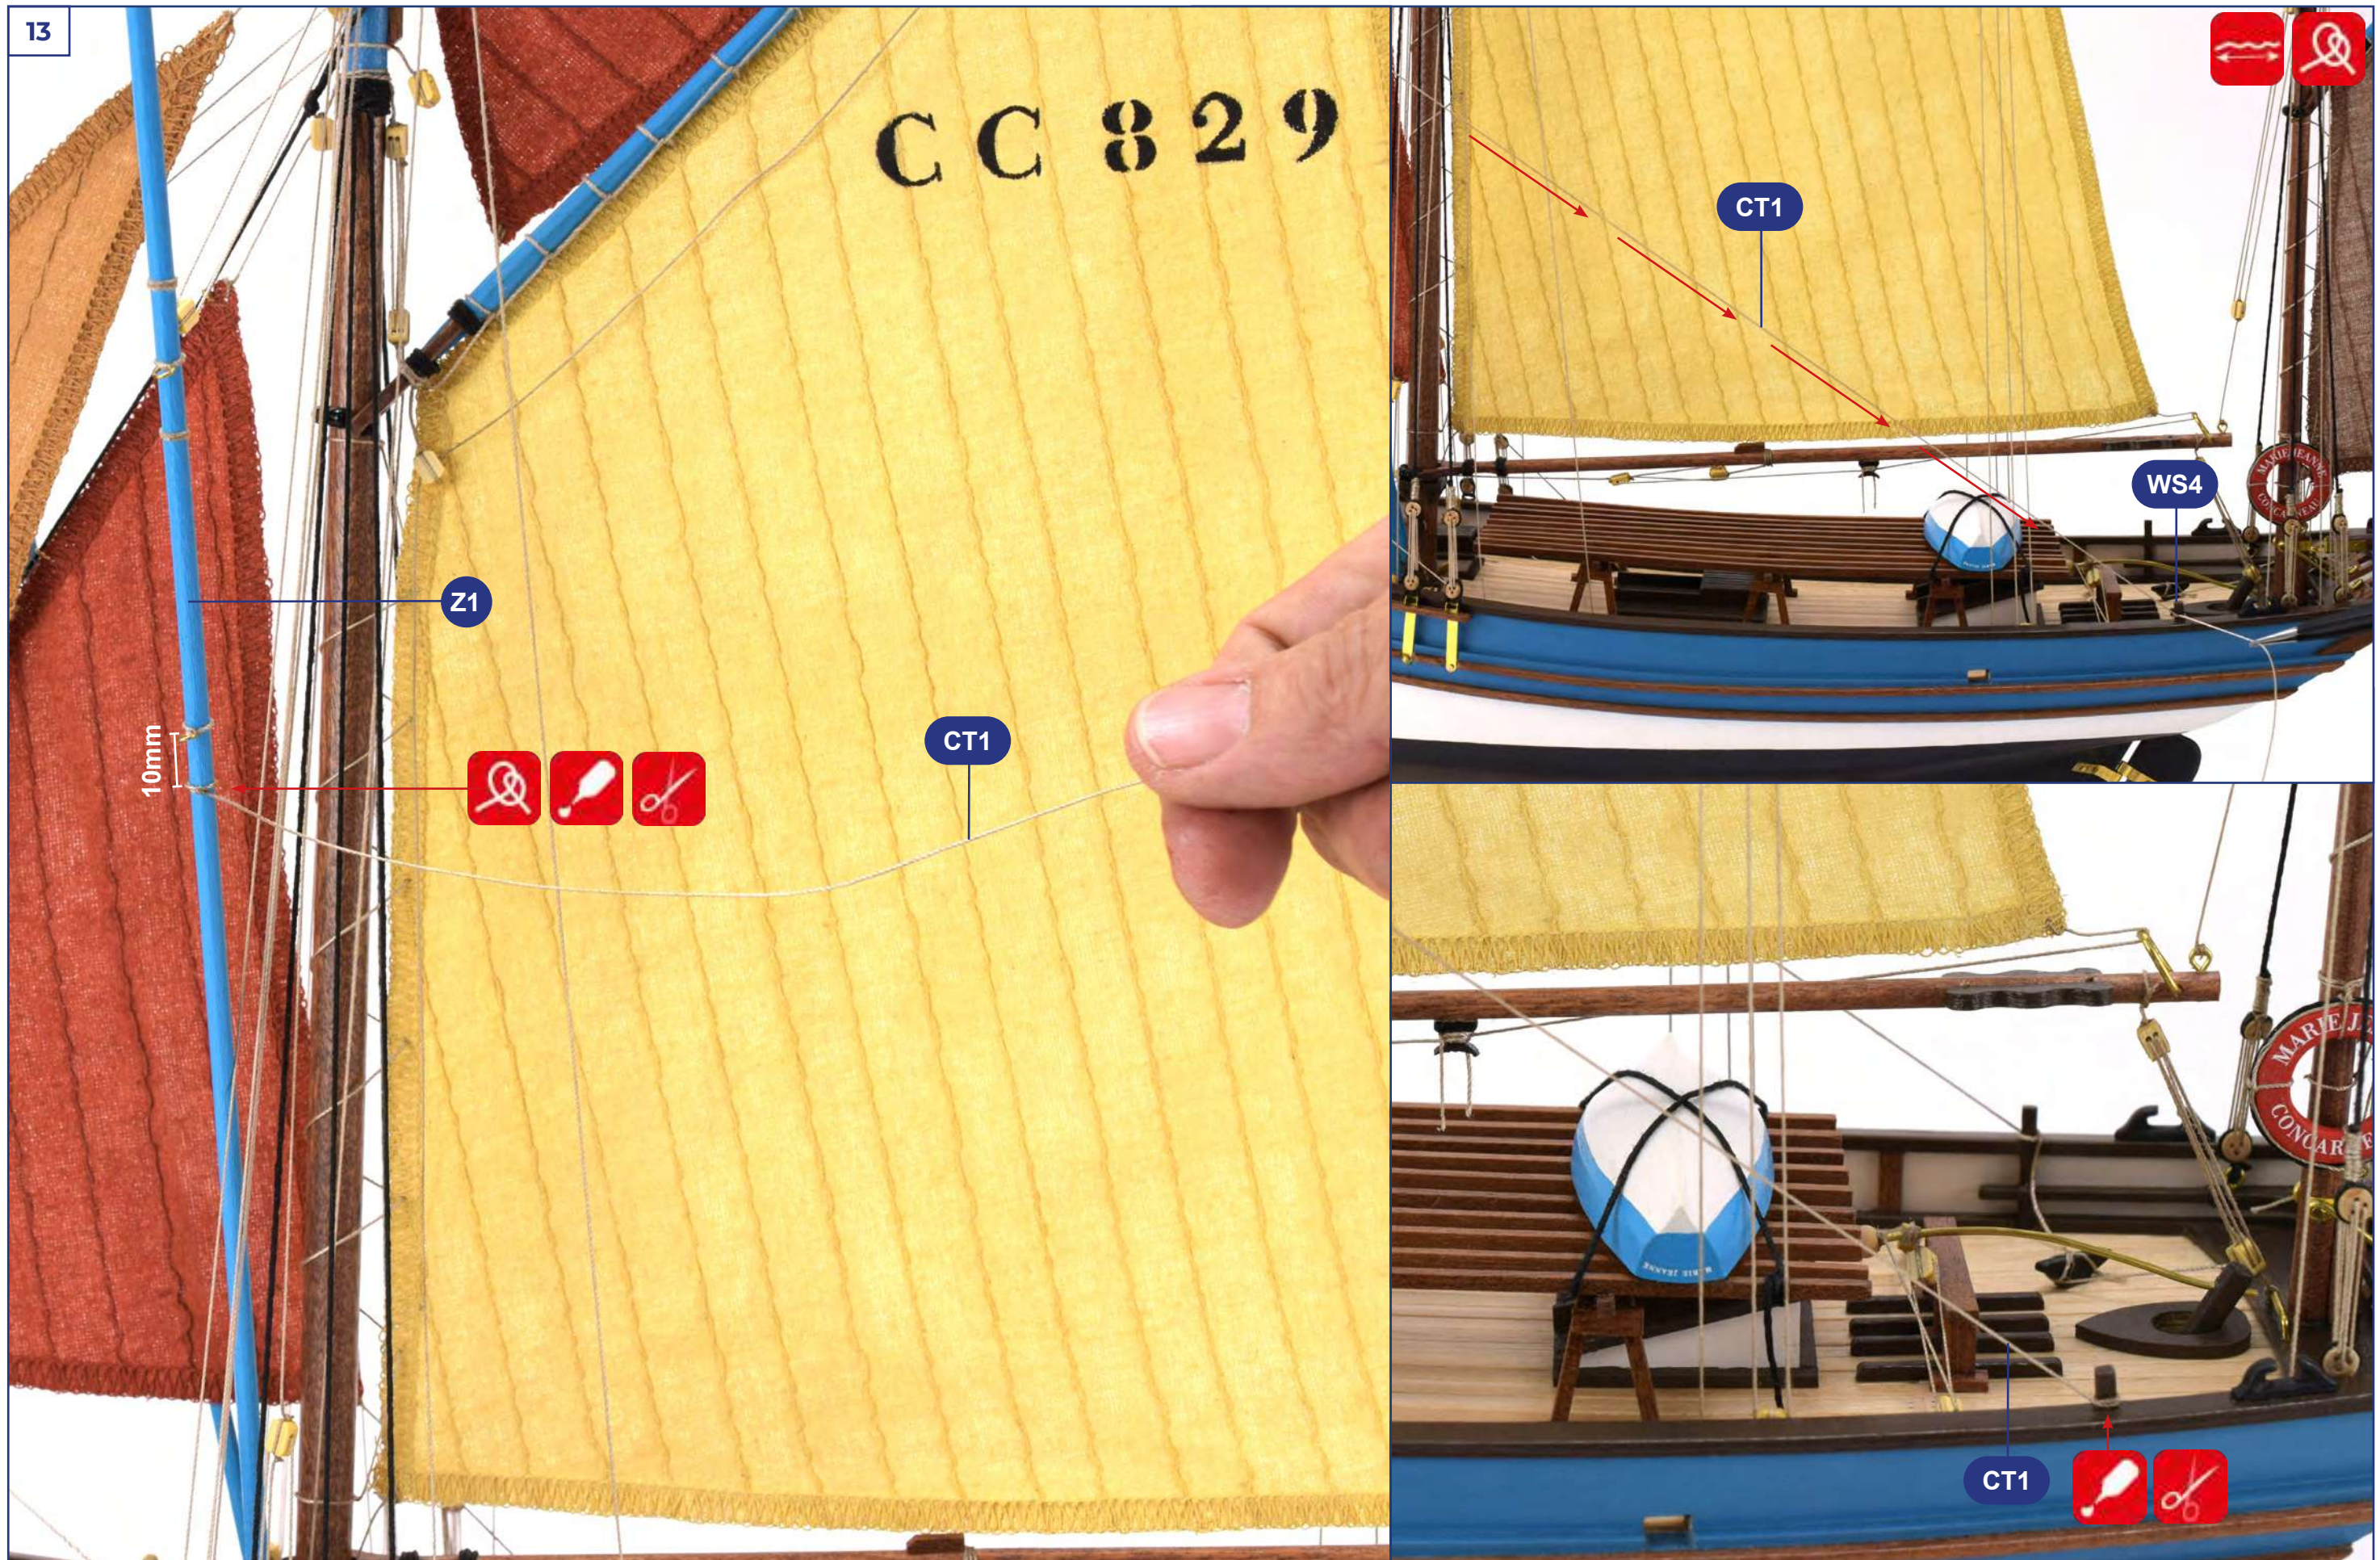

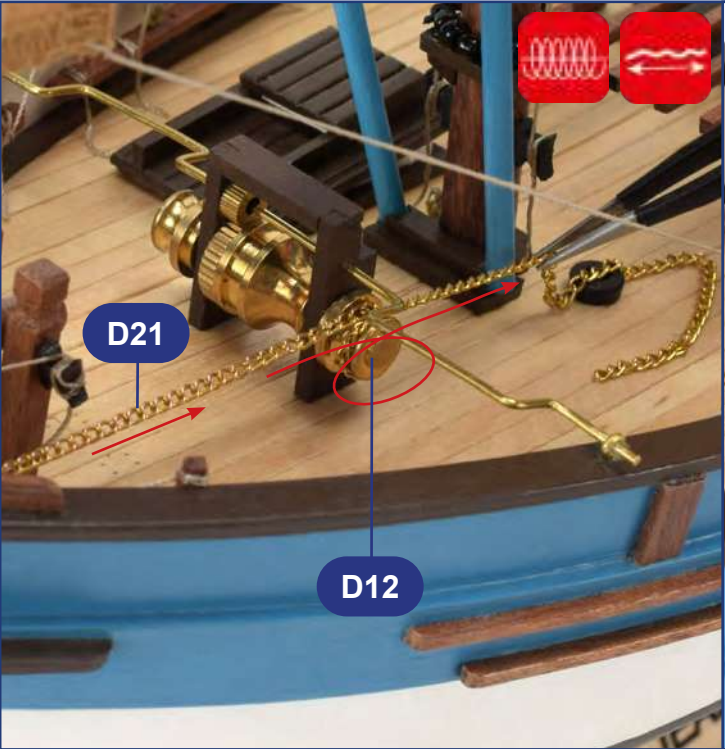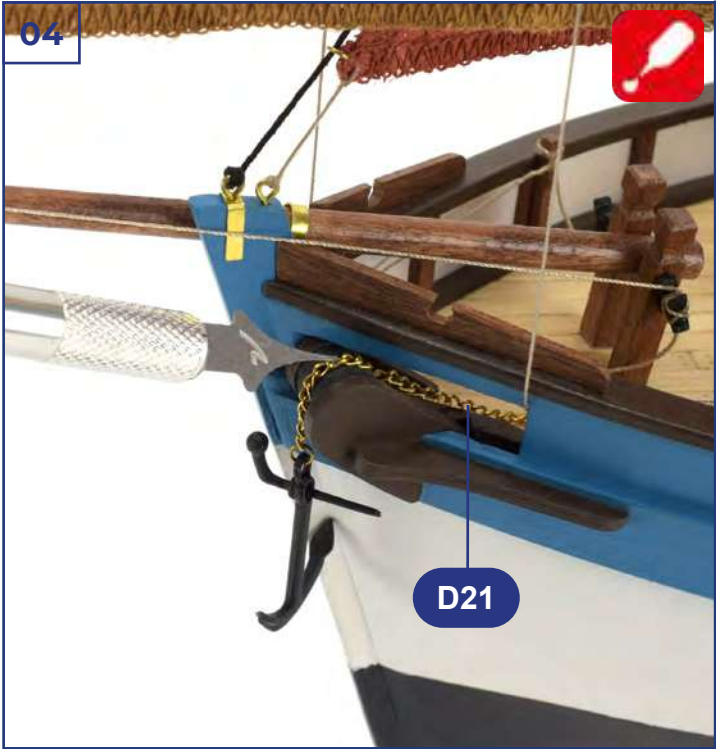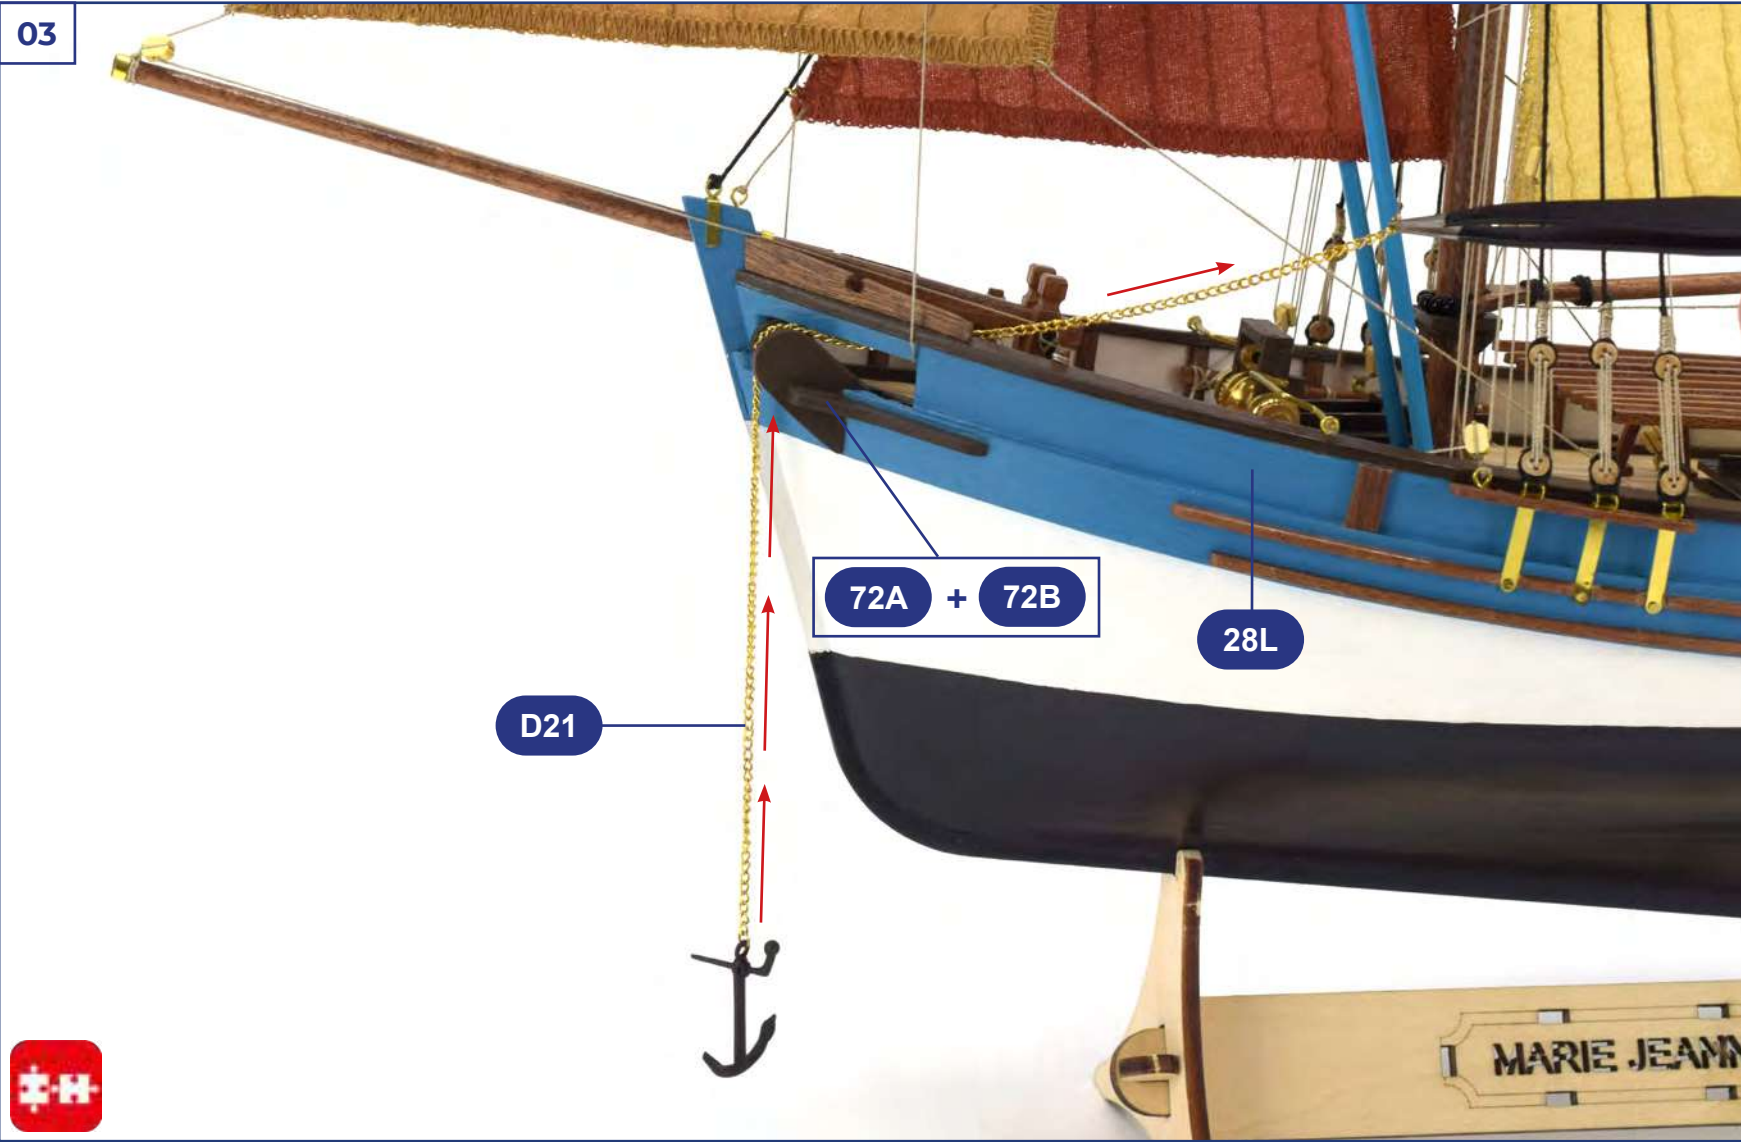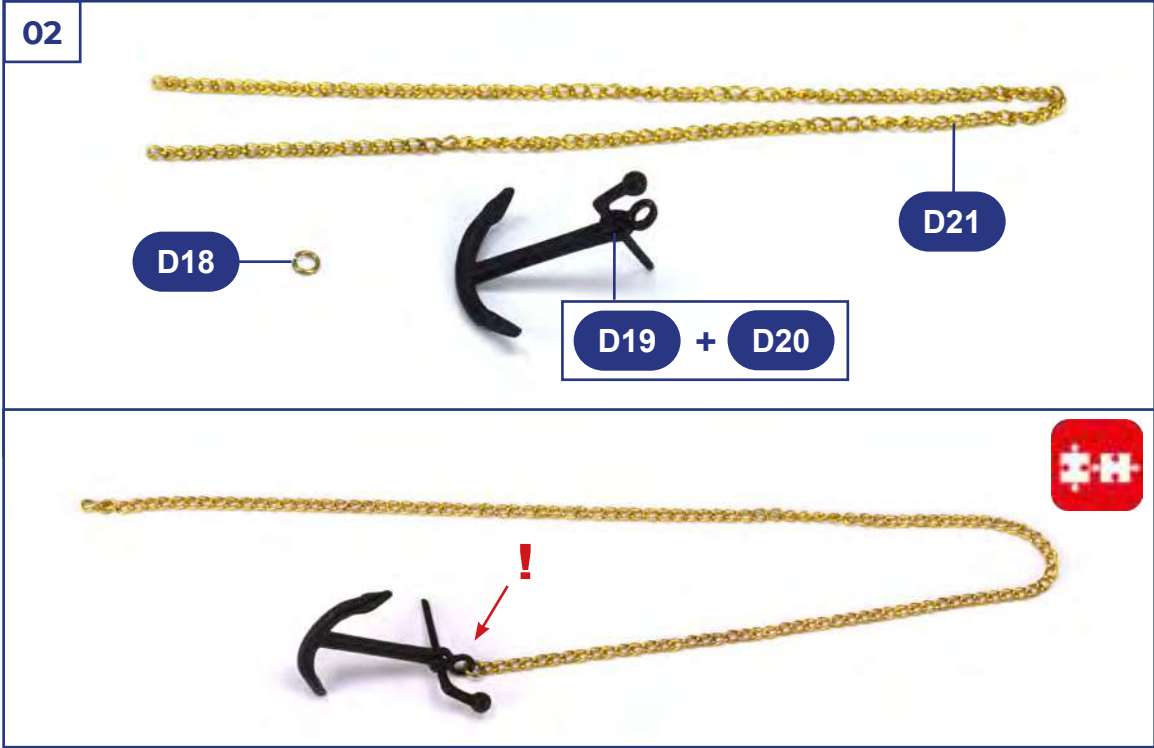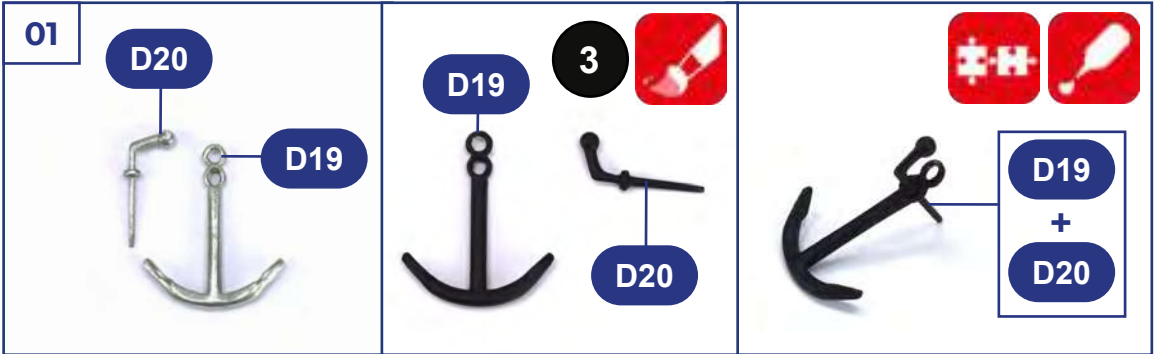

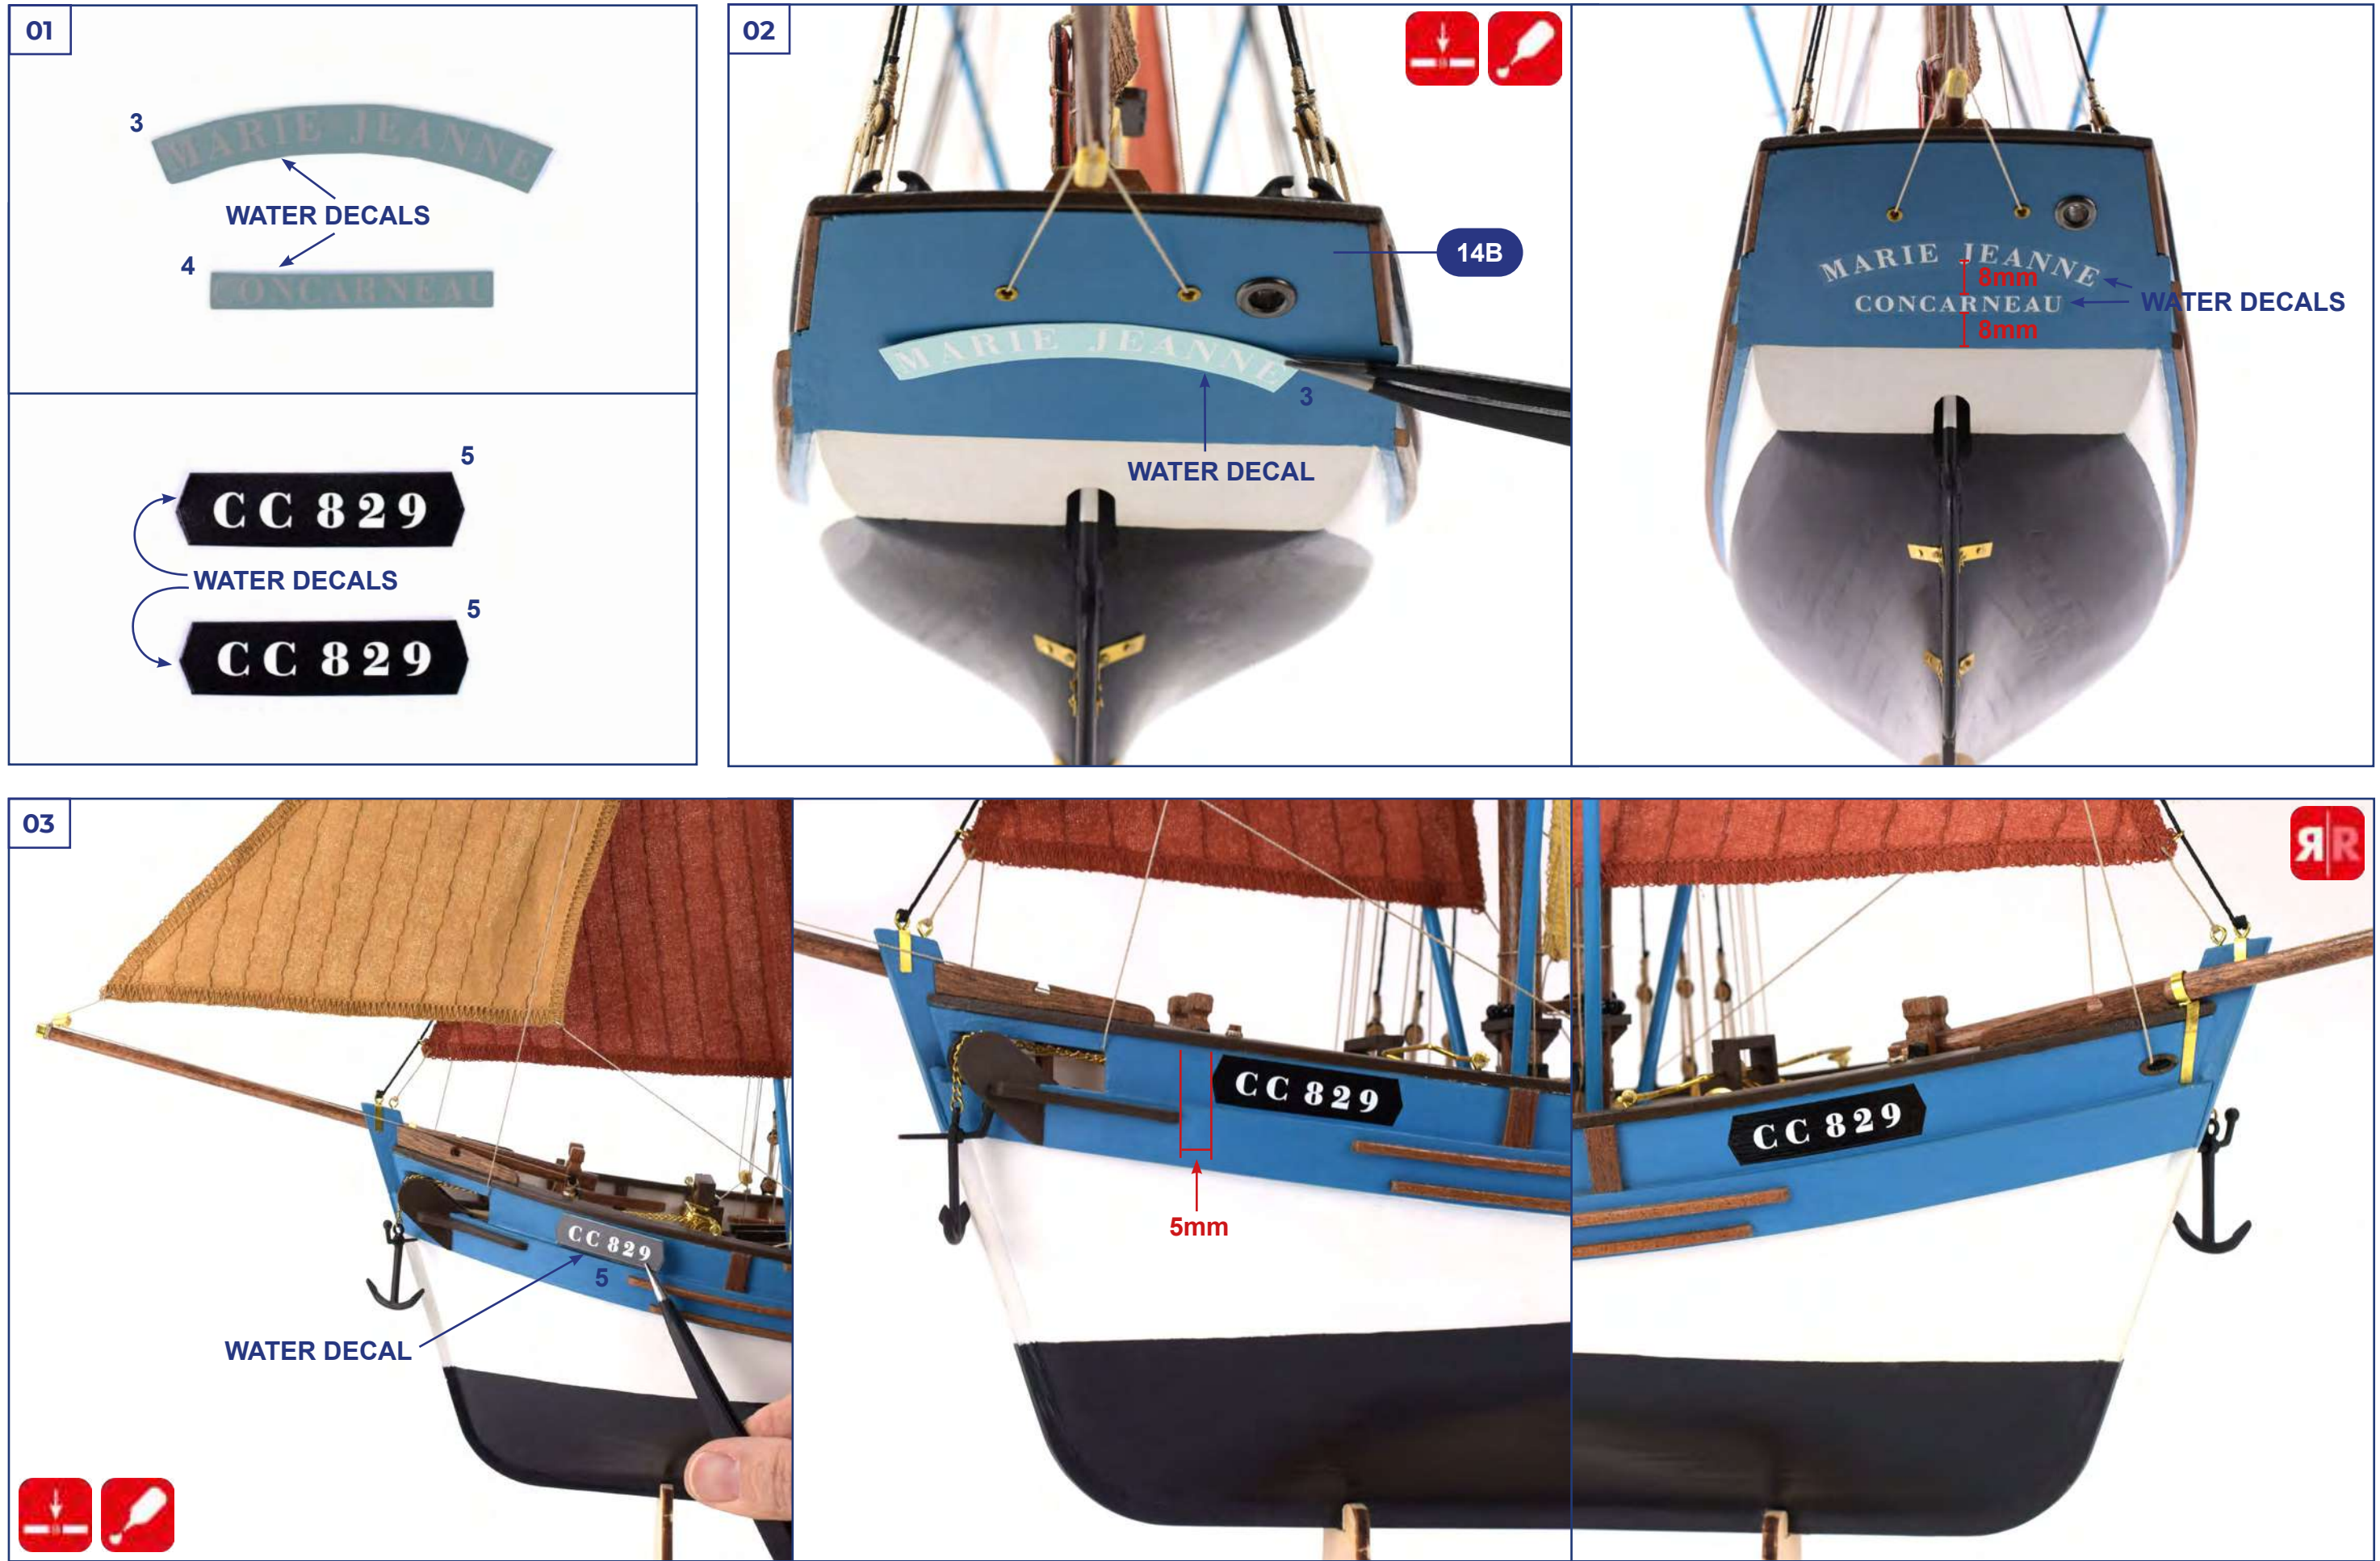

01

P4

90°

P4

90°

P4

P4

02

01

4

03

D22

01

D22

9

10

04

P4

D22

P4 + D22











05




P4 + D22







ЯR


ЯR

ЯR

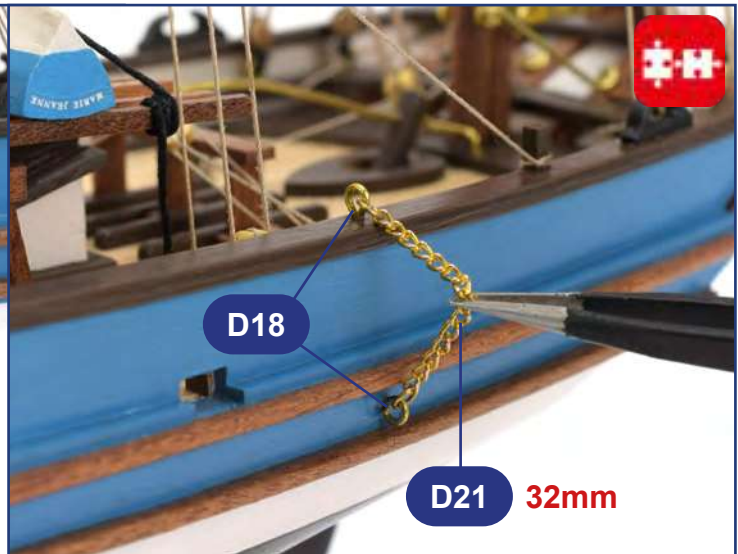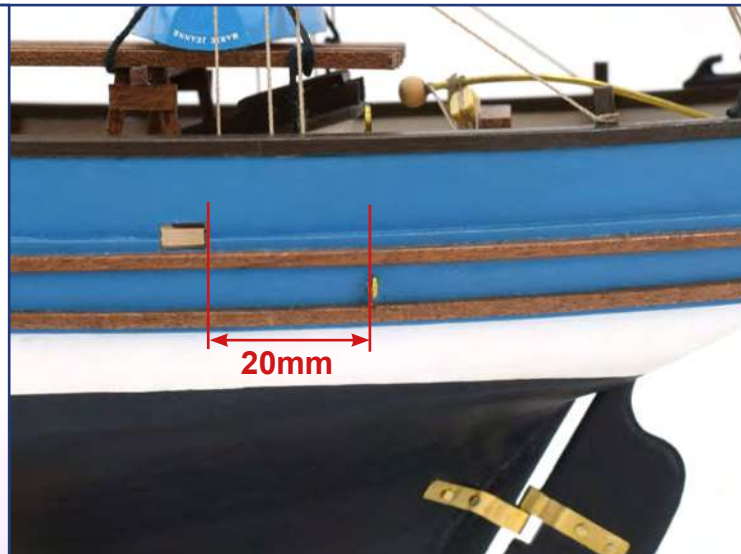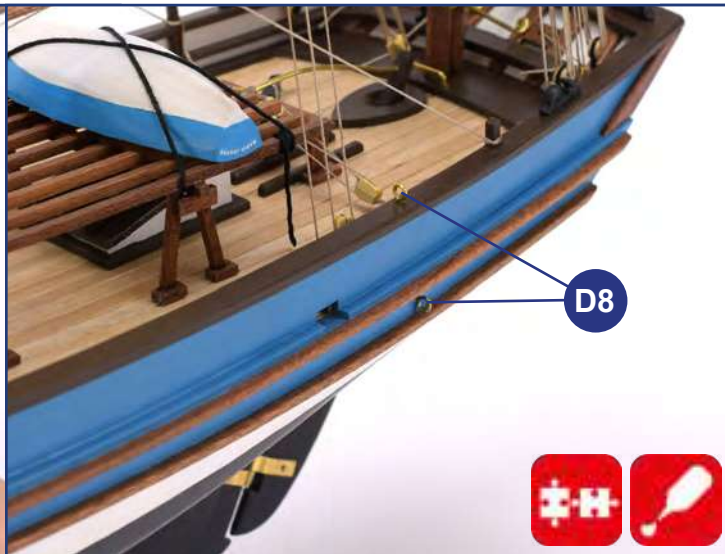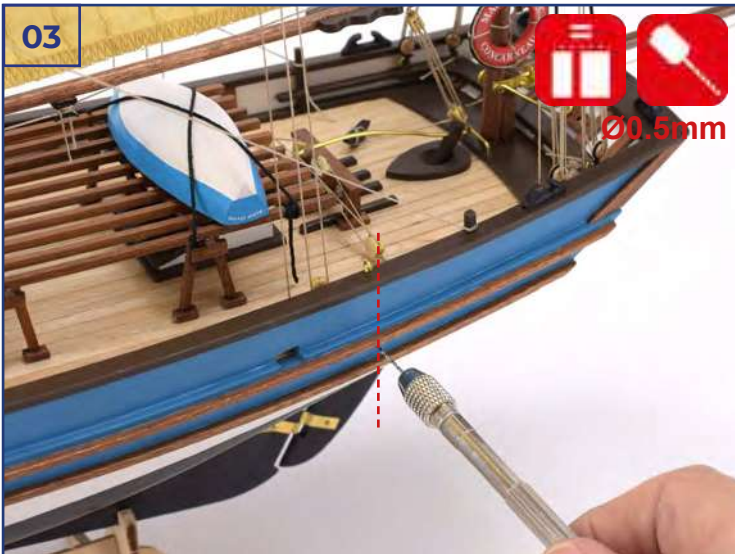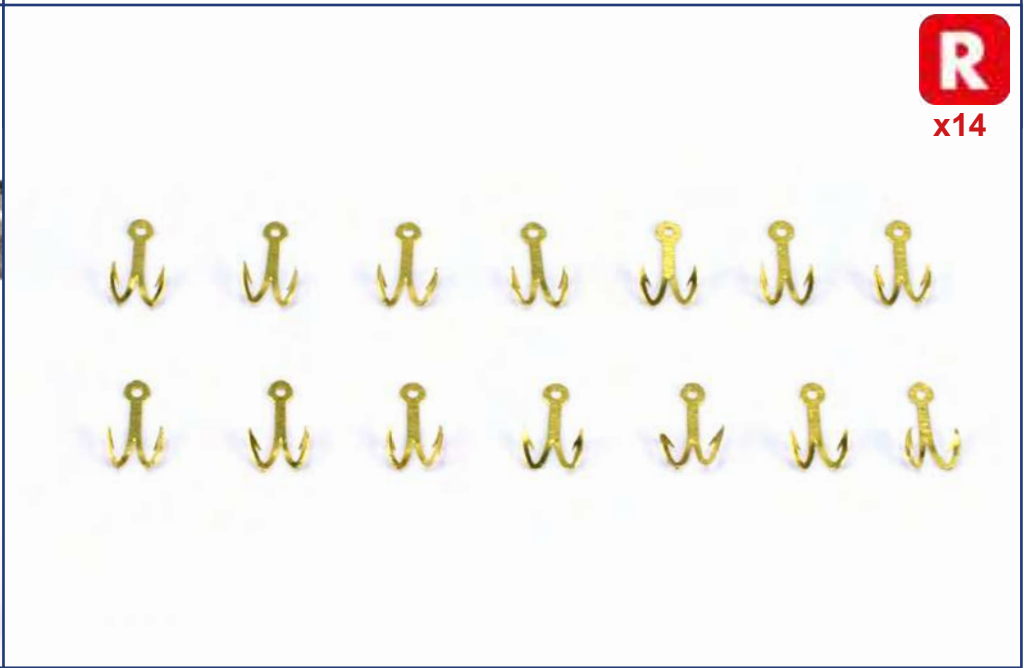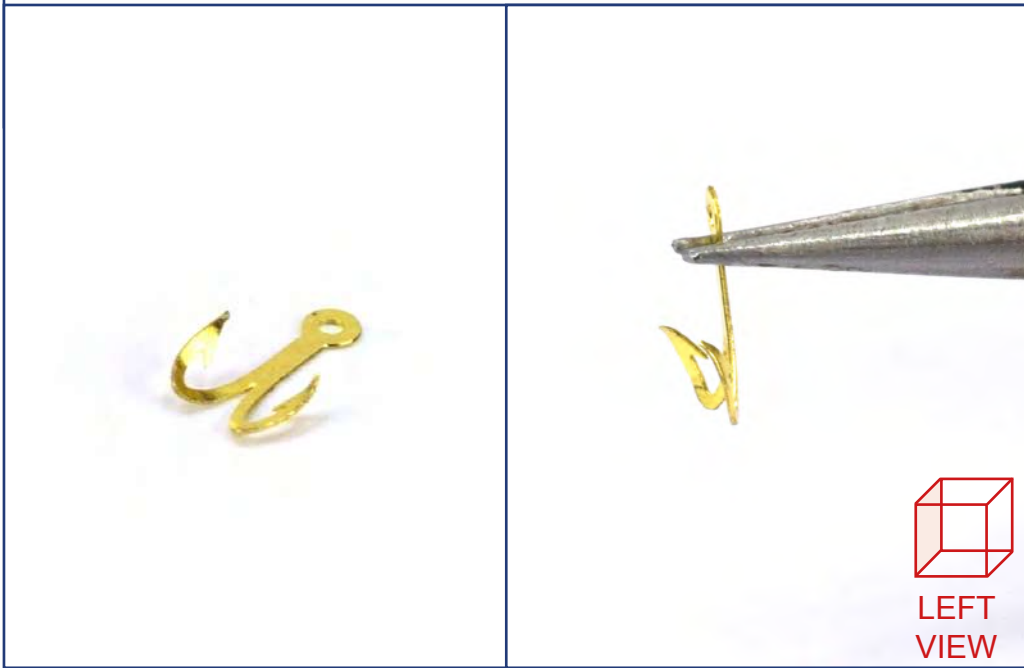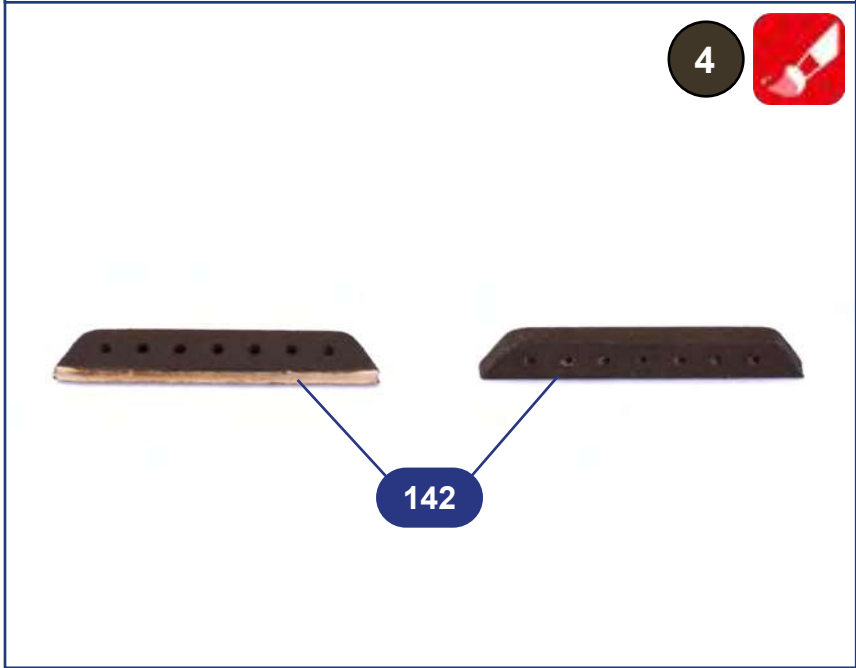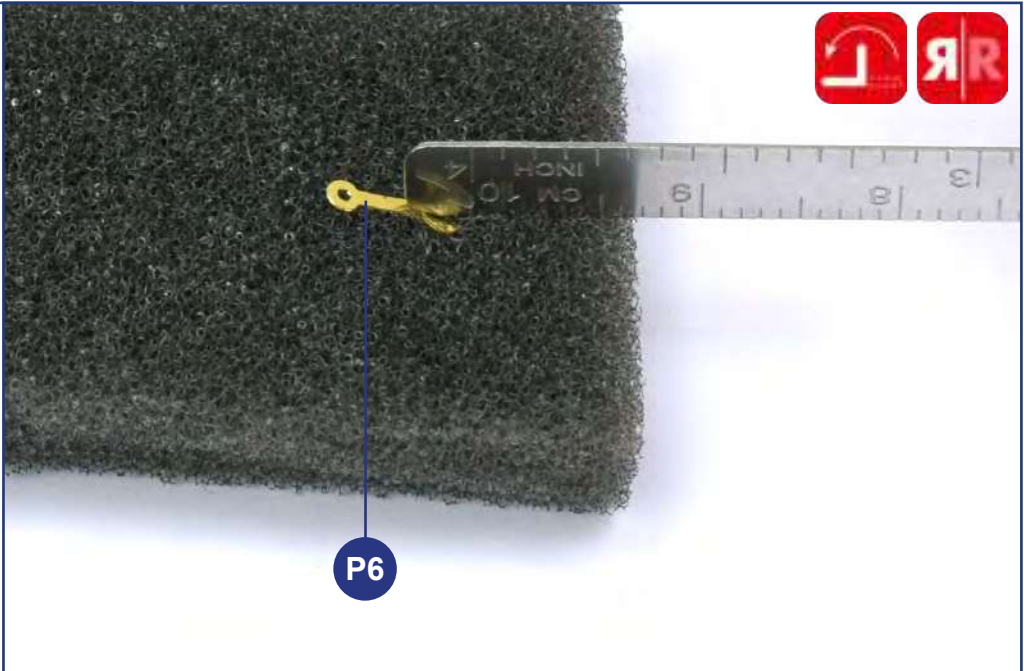
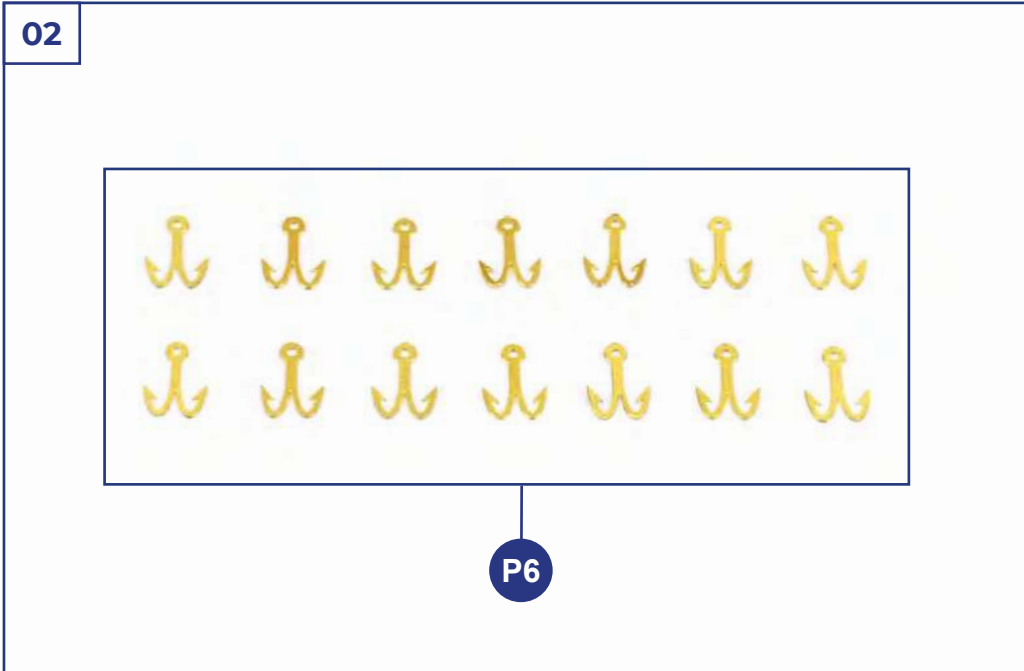
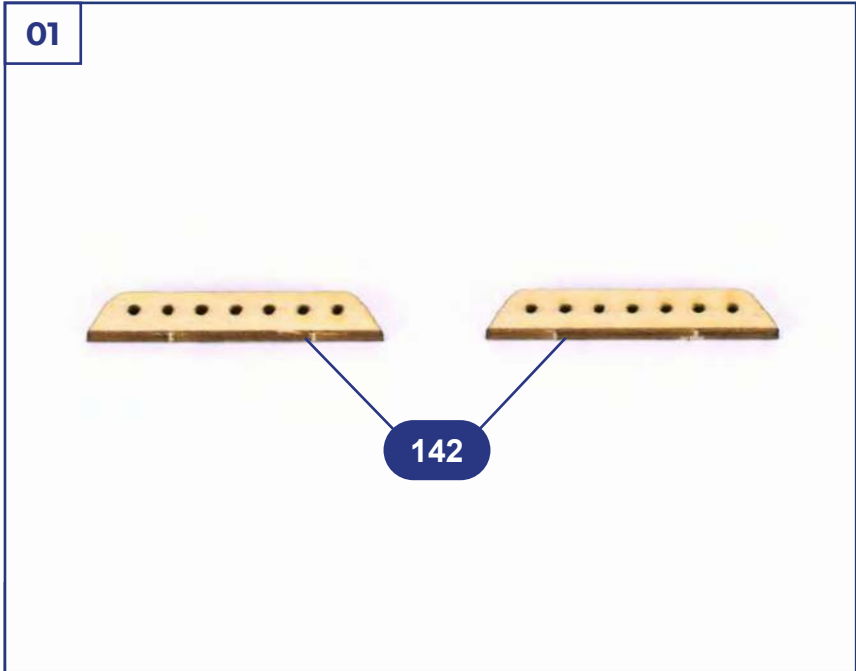


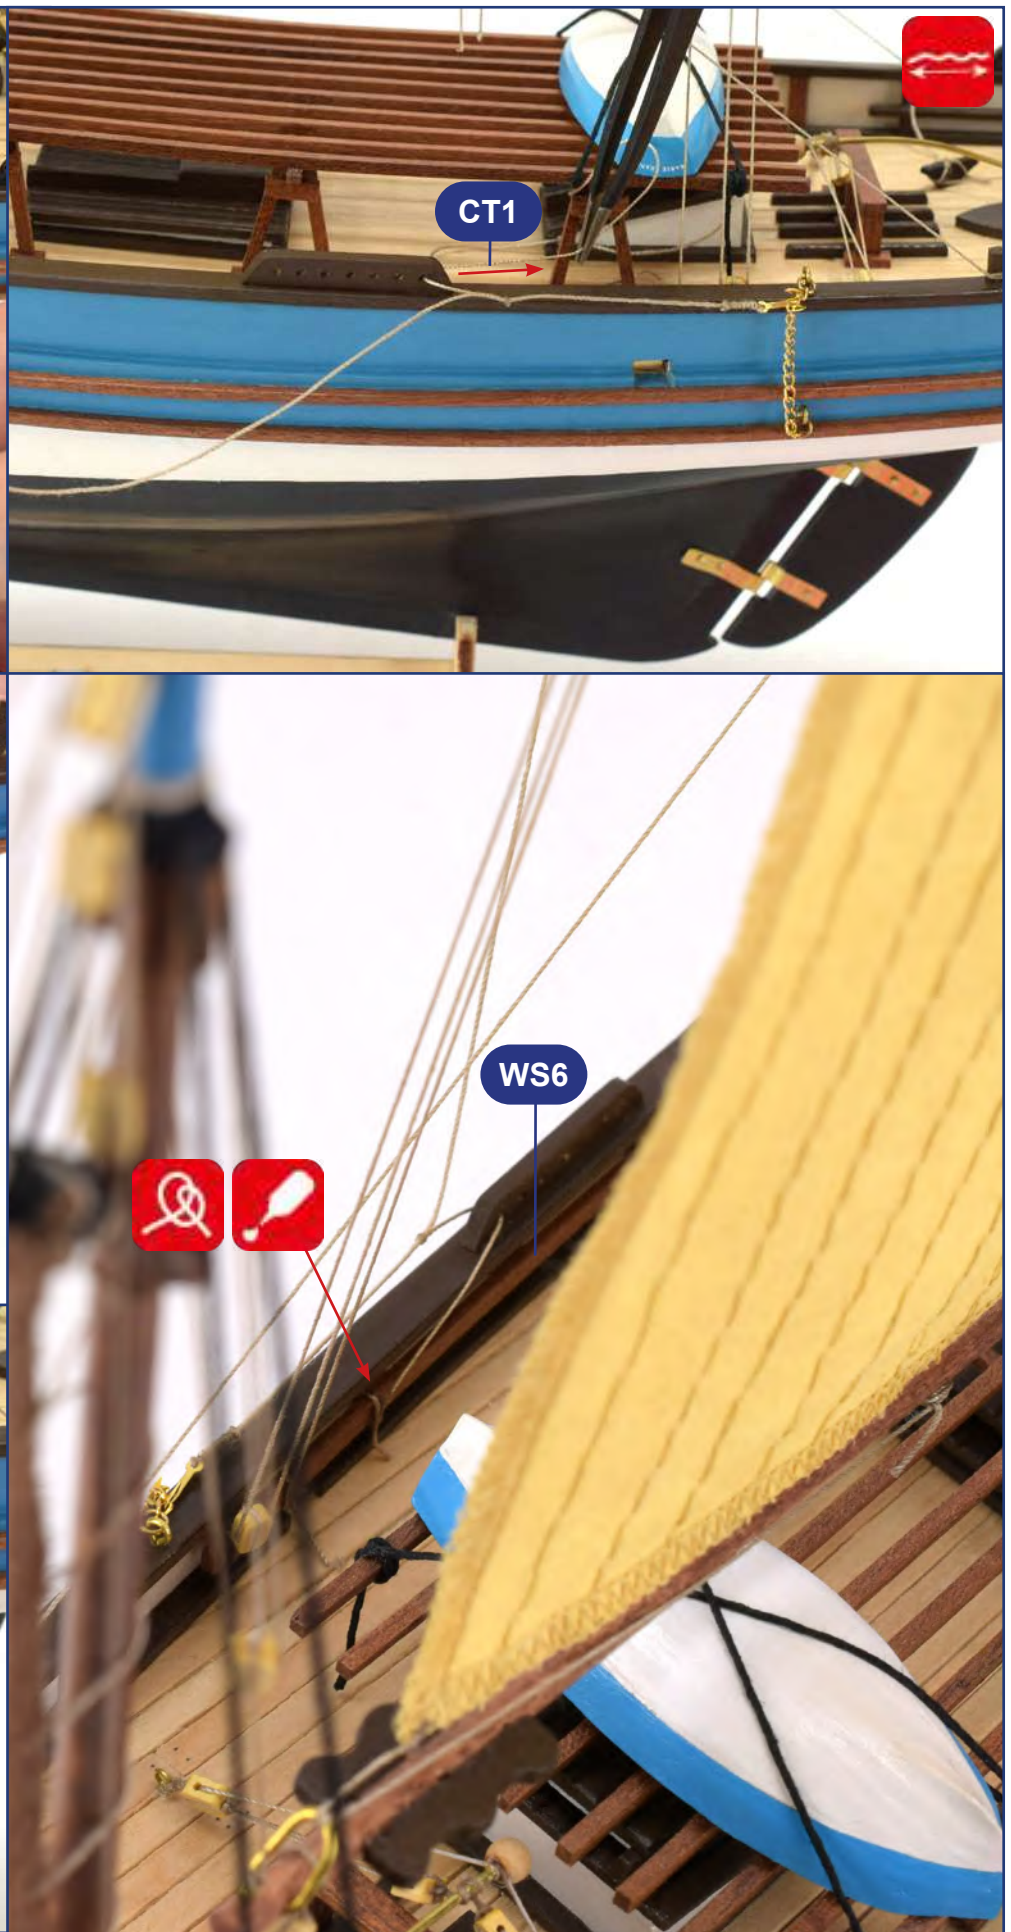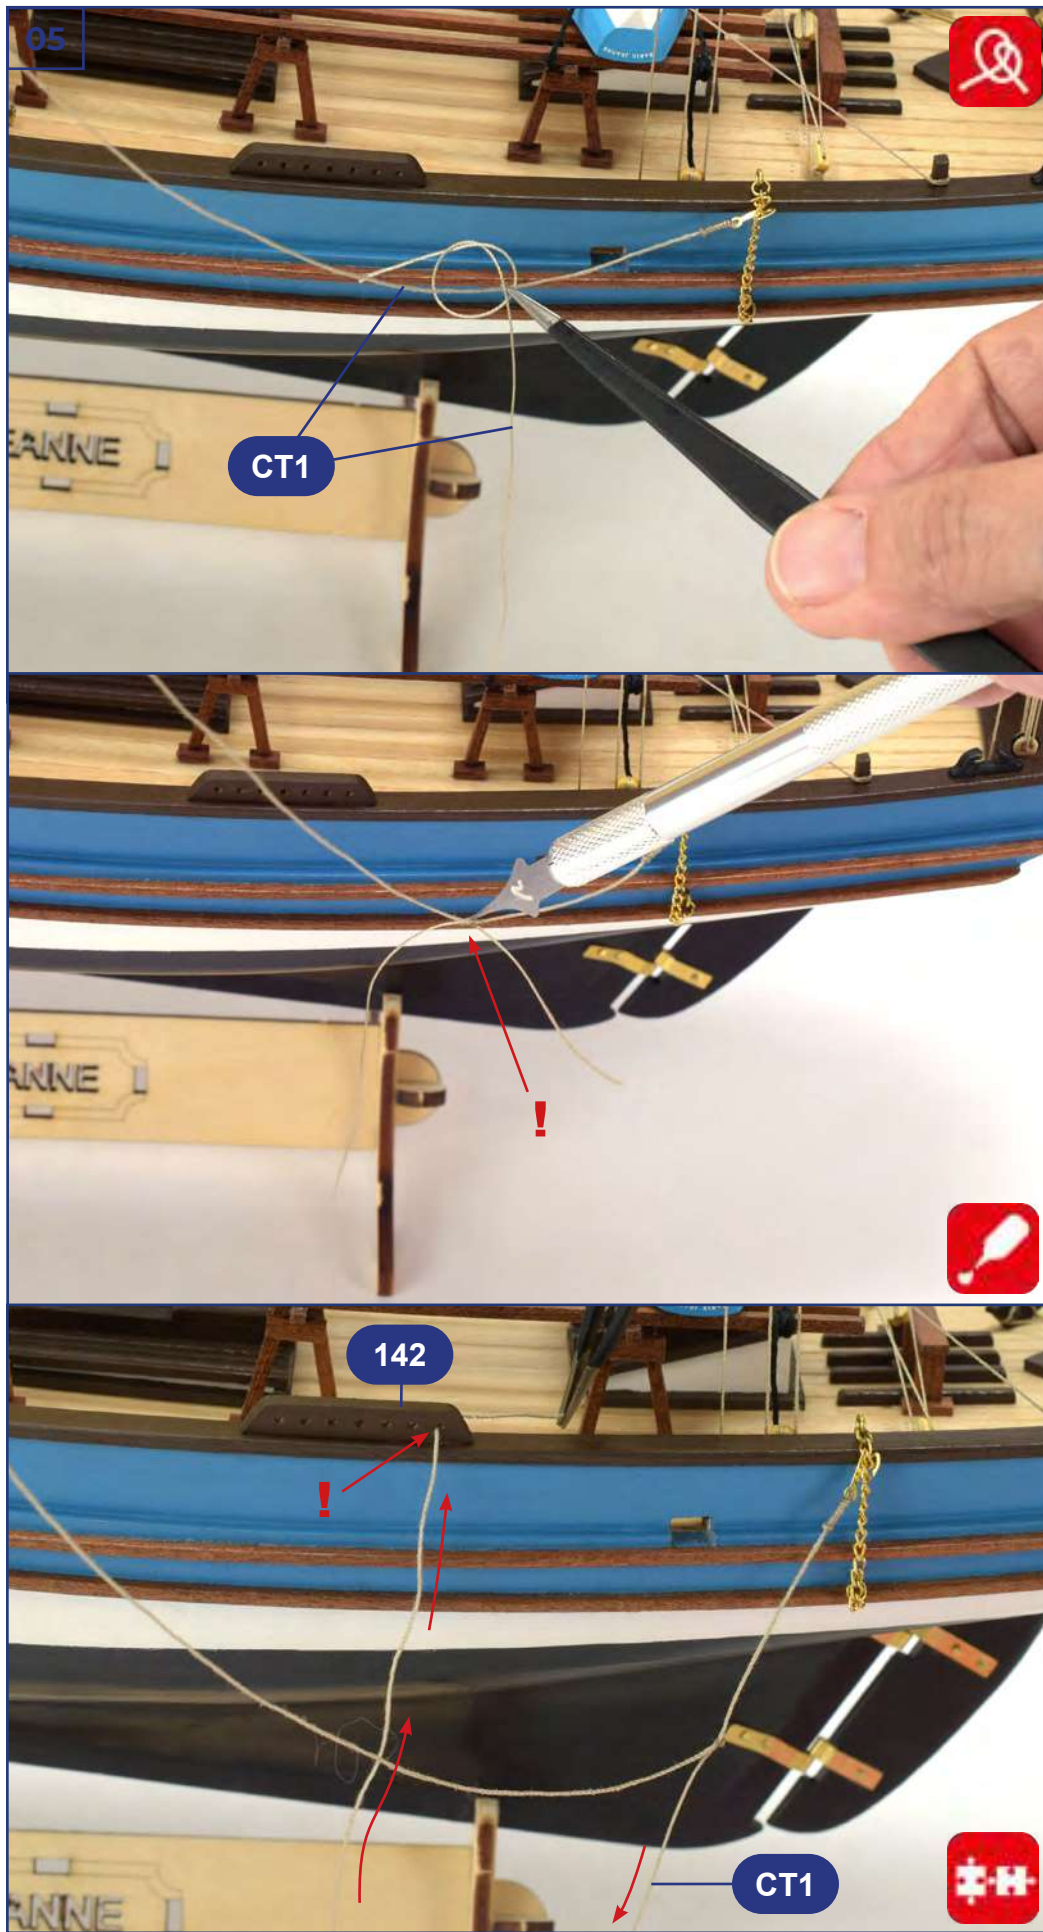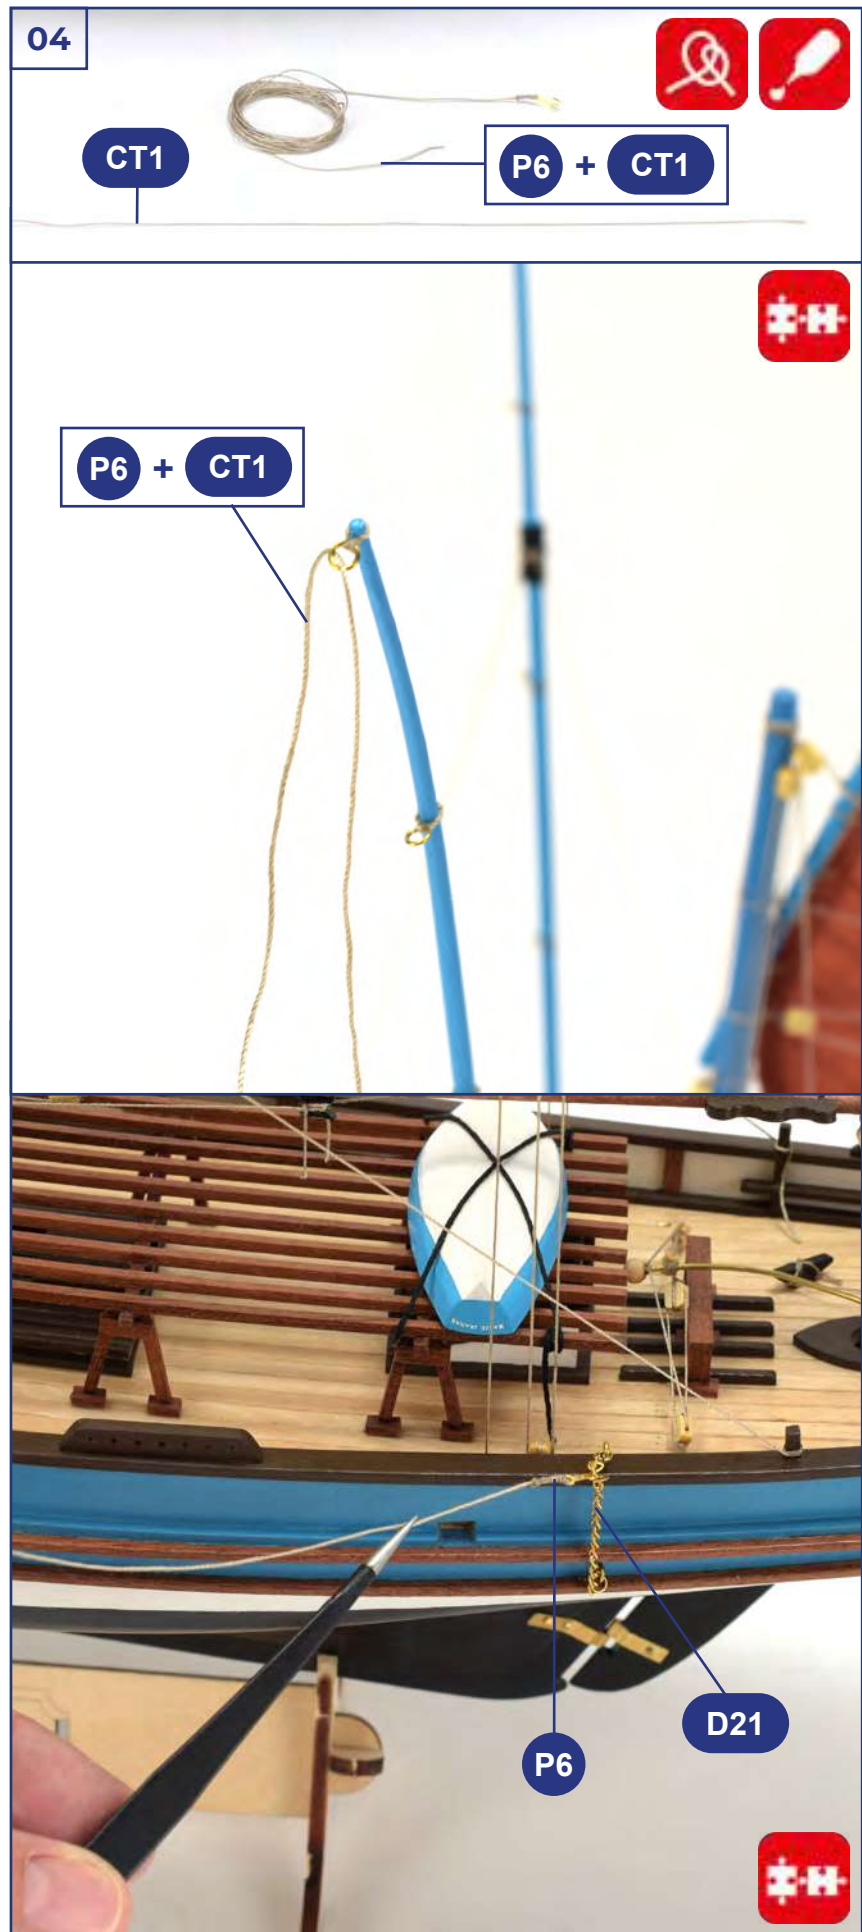

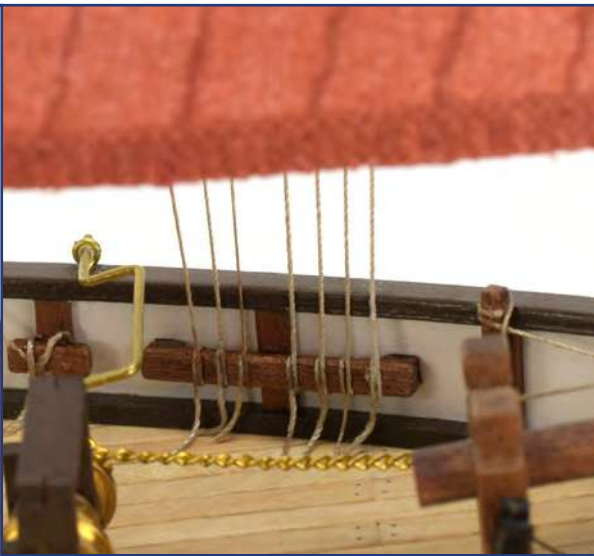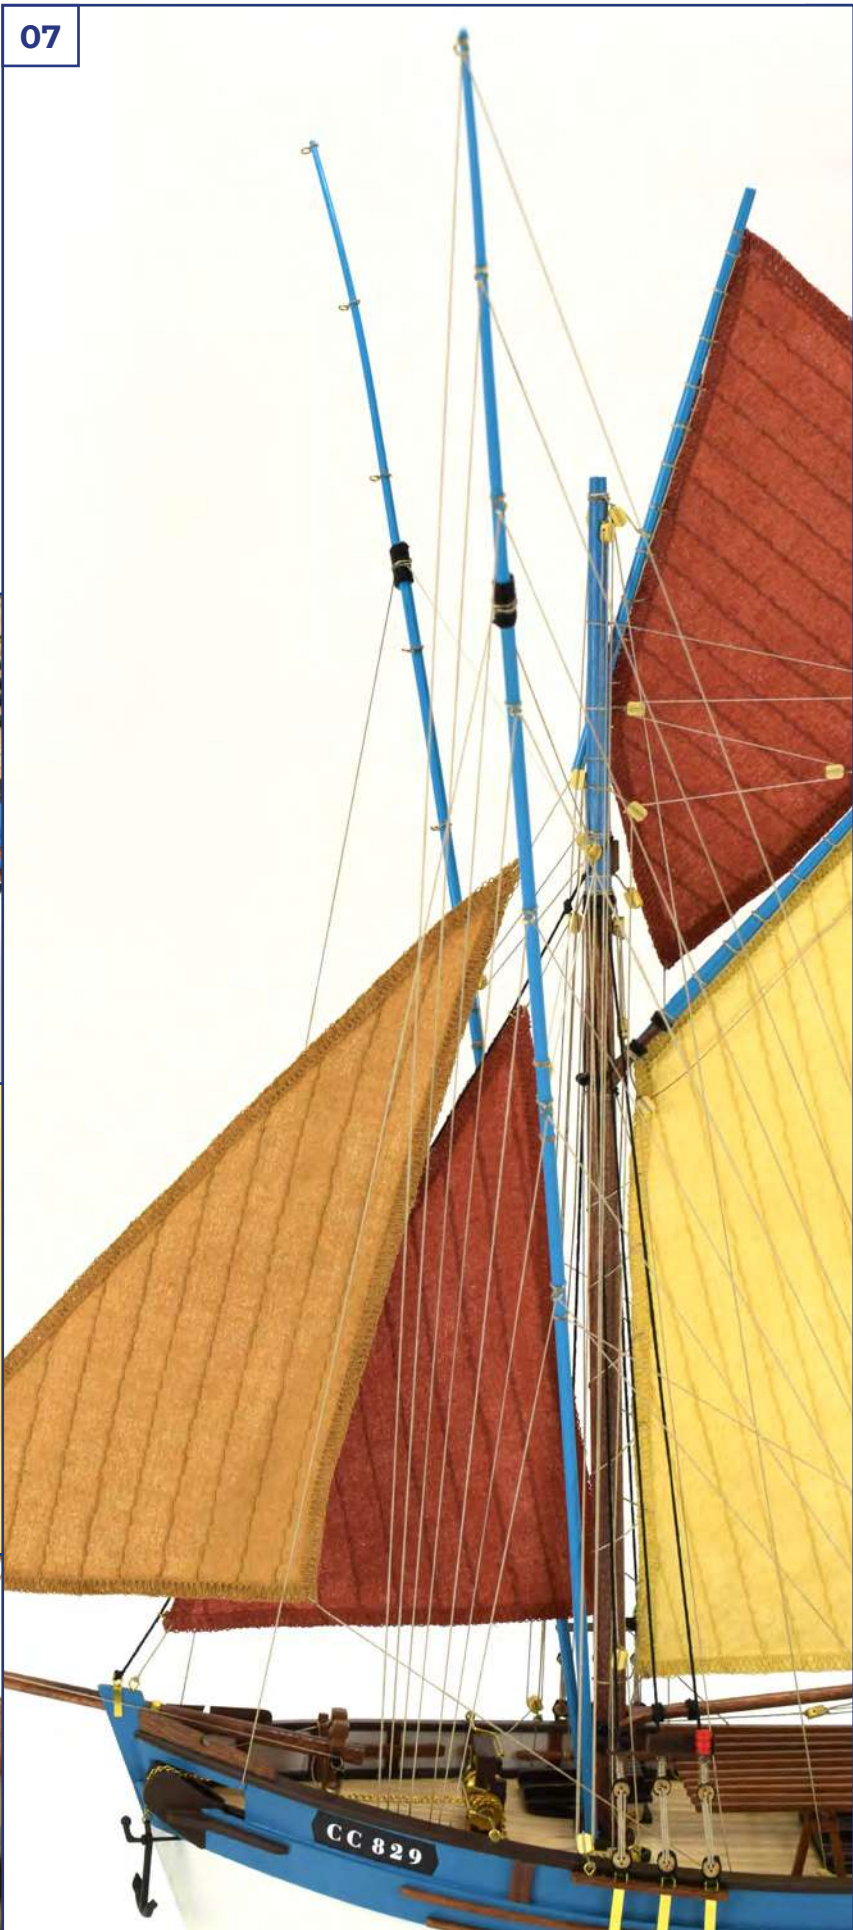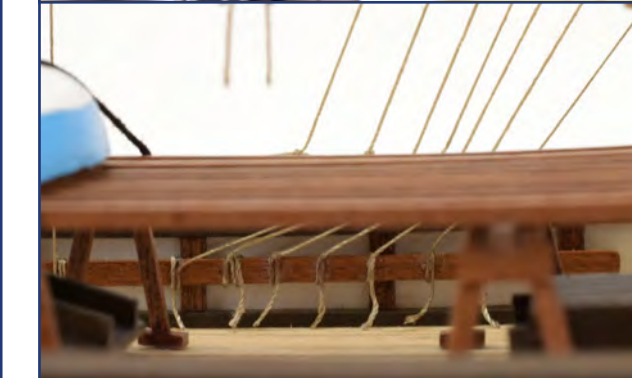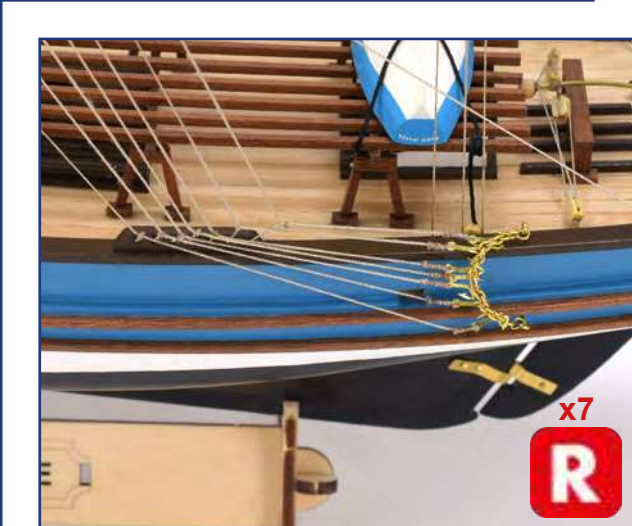
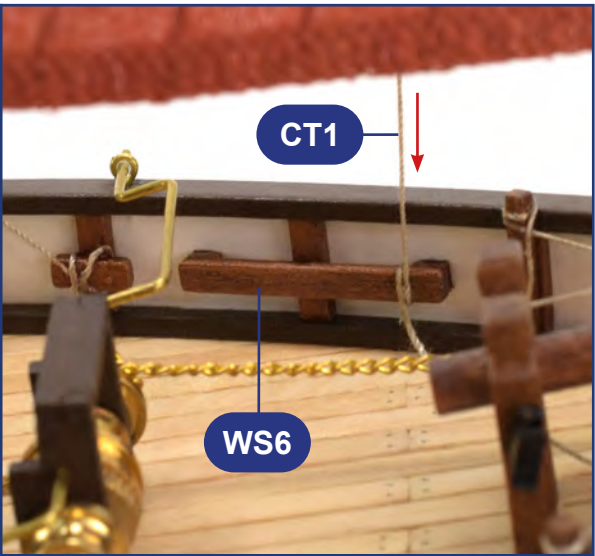
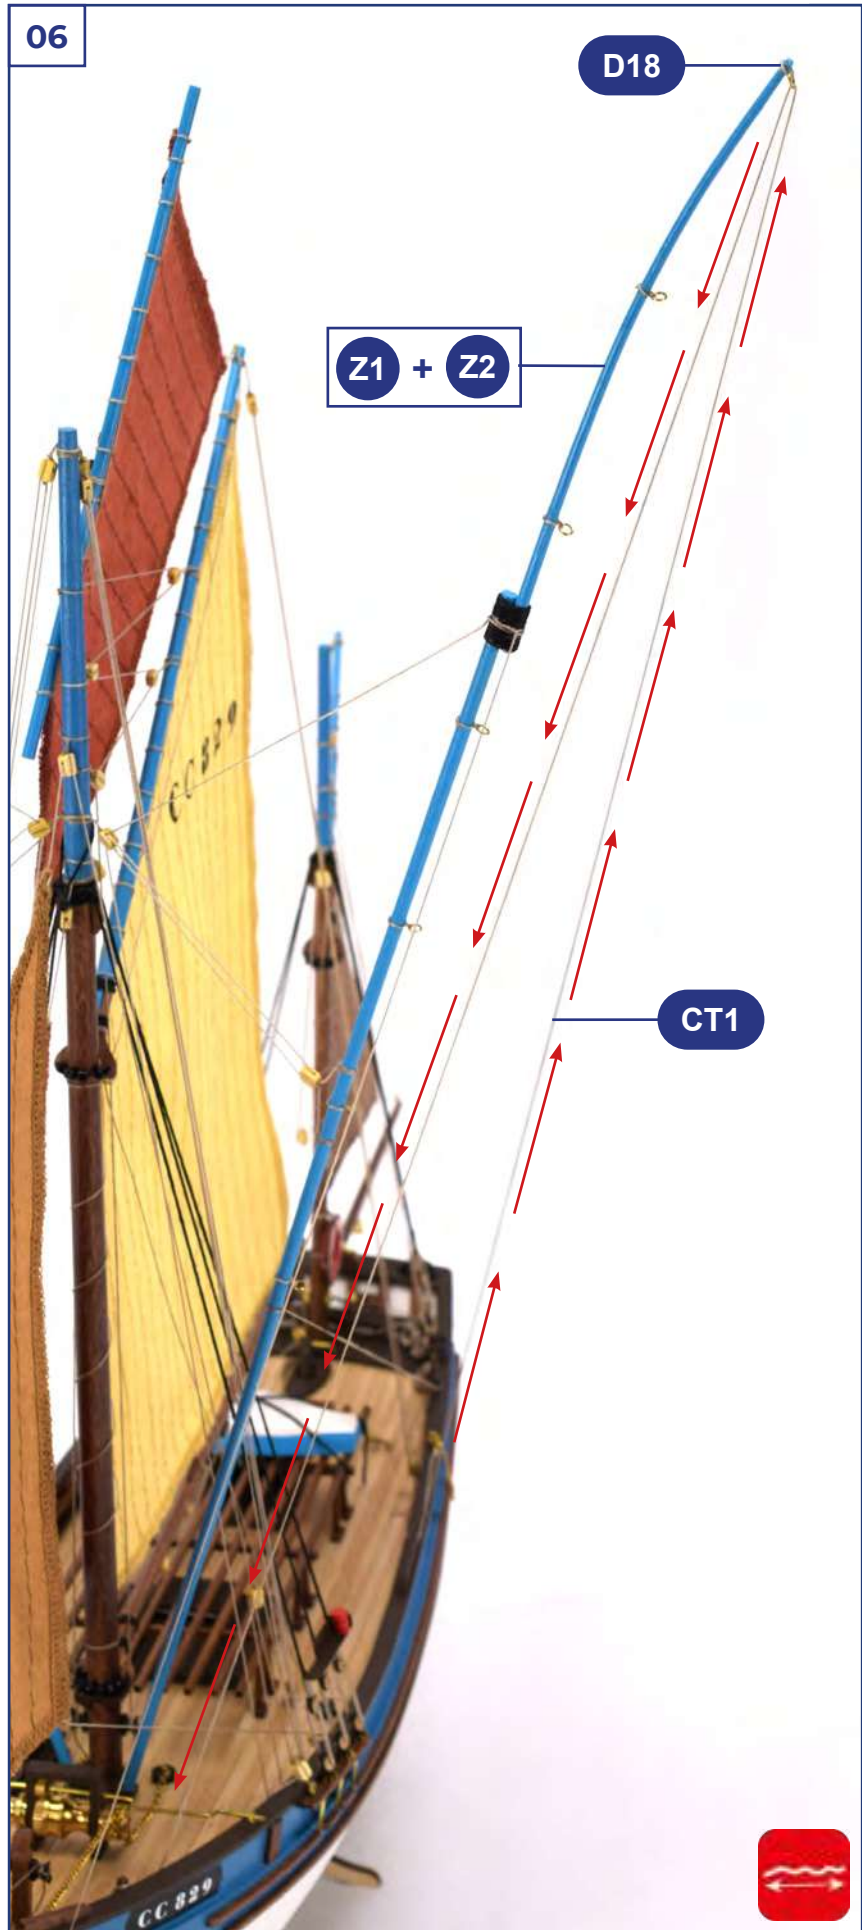


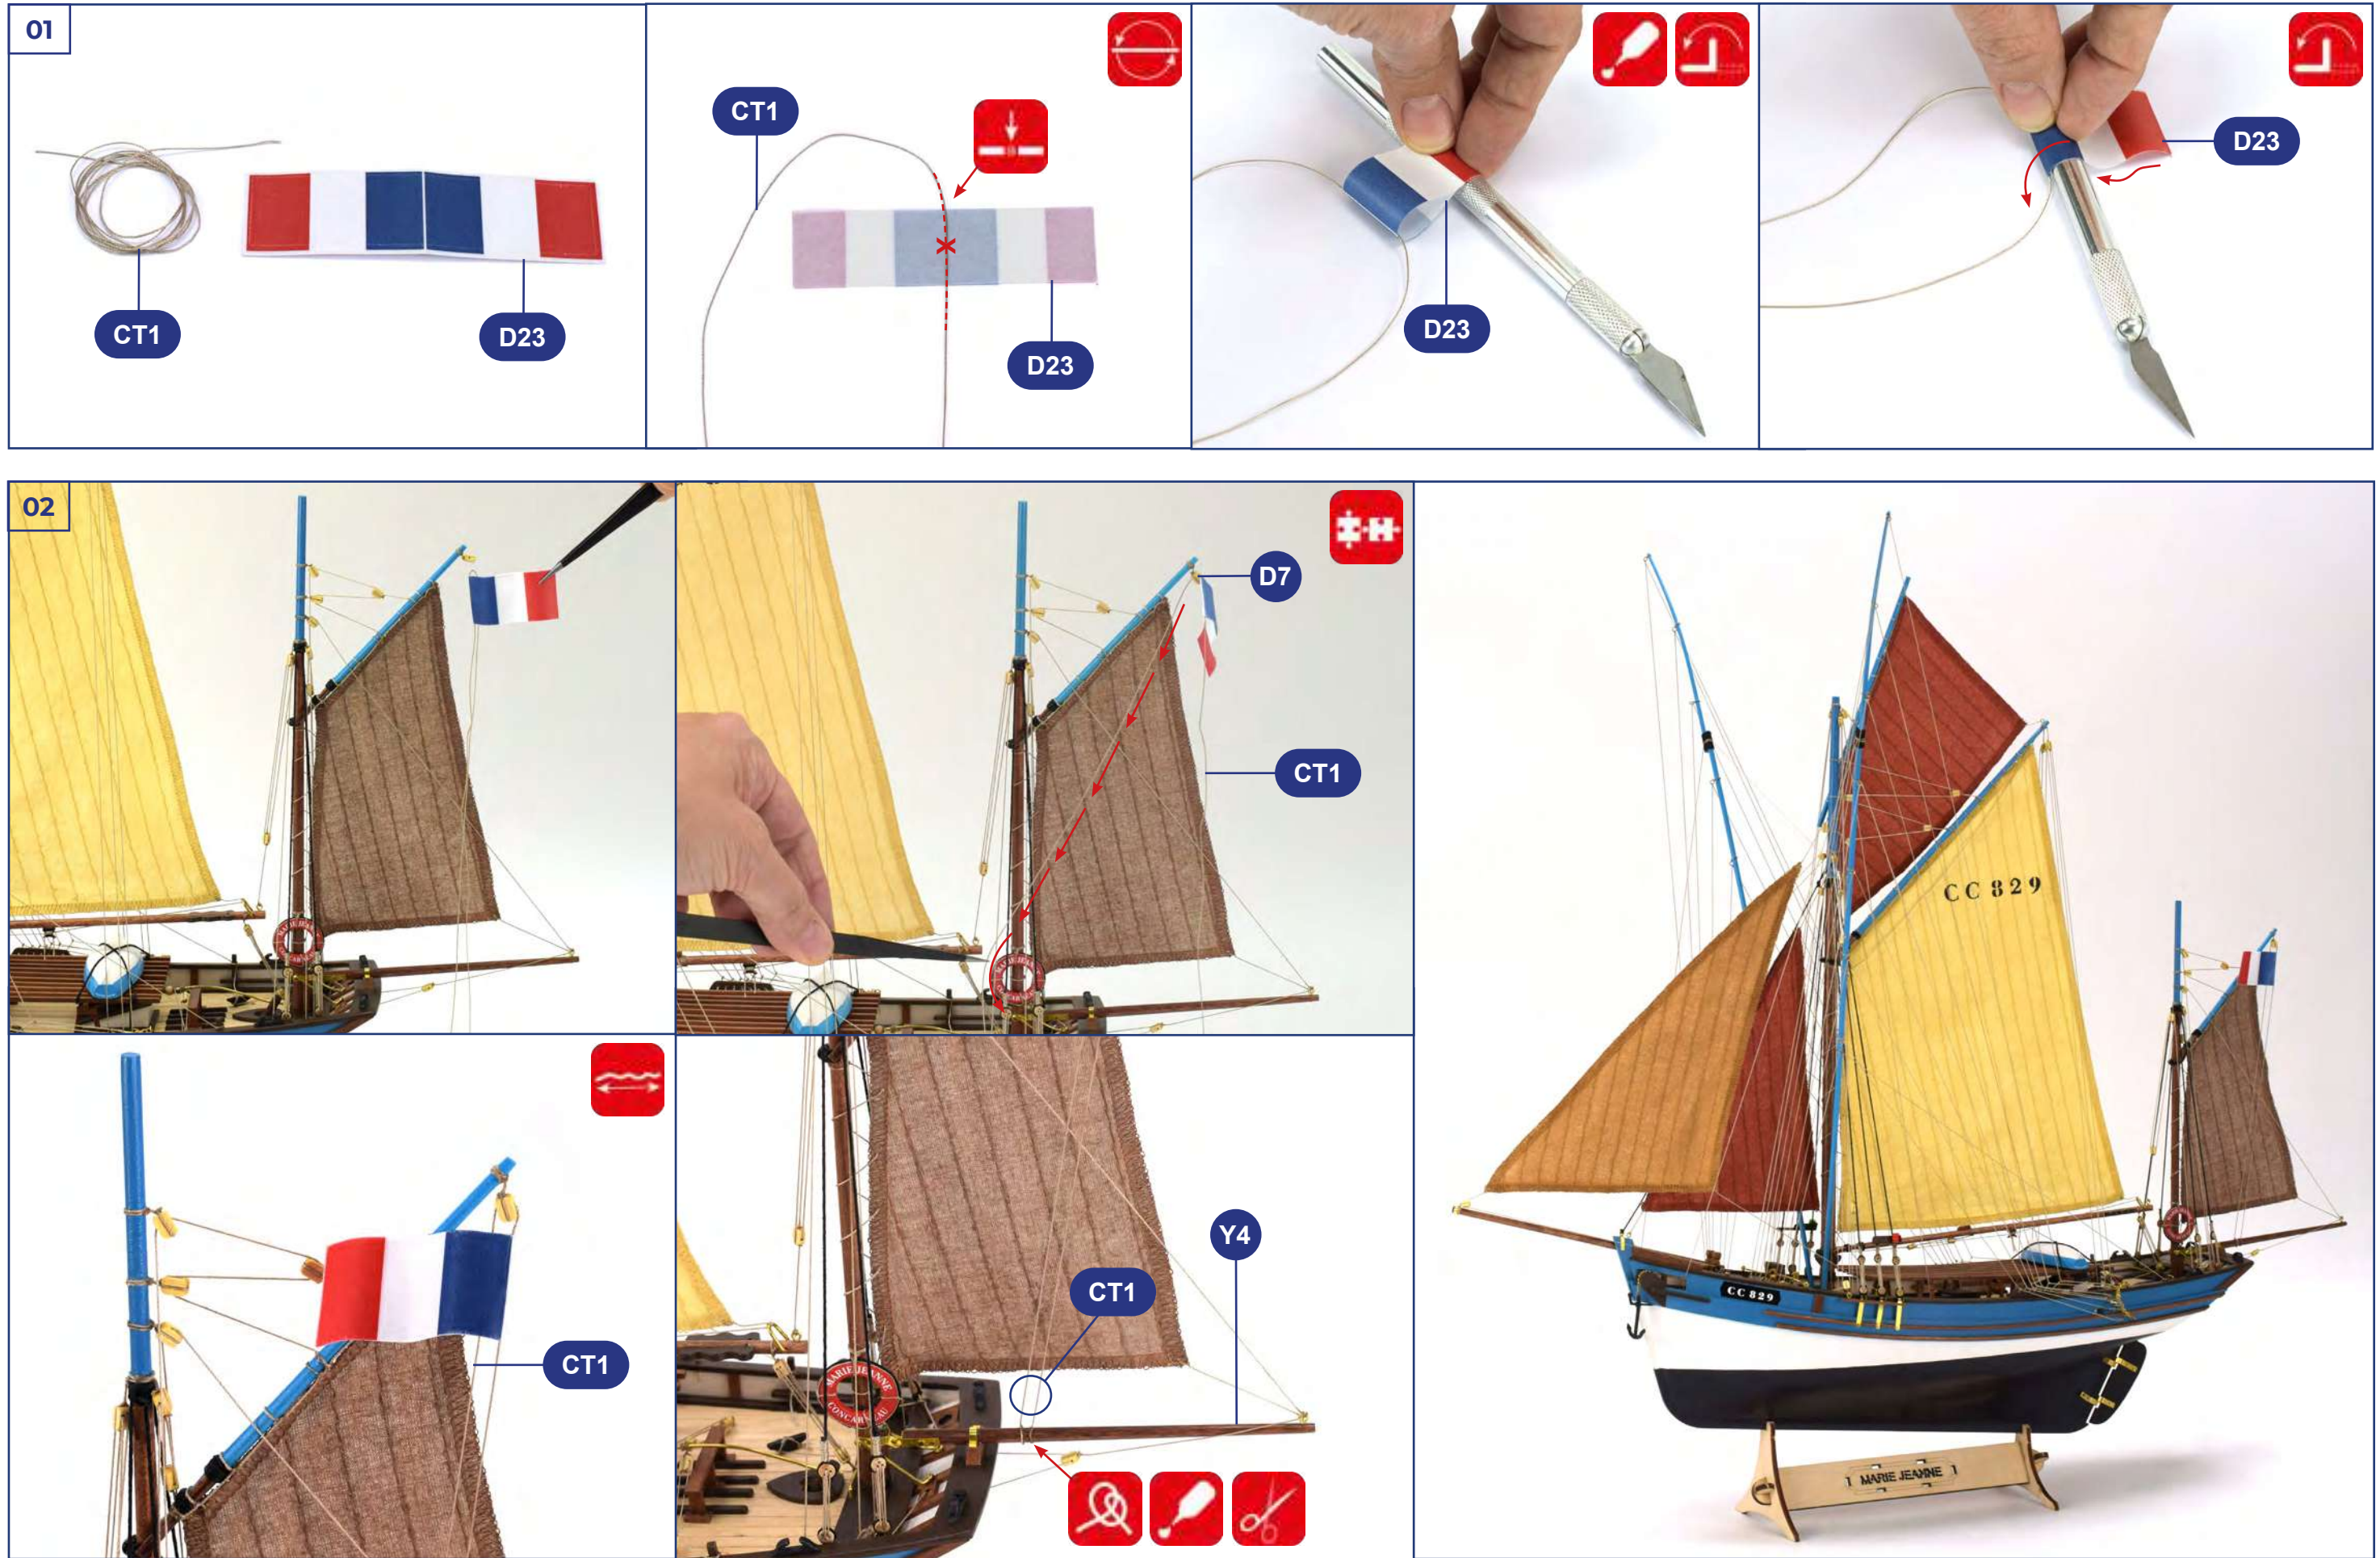


01

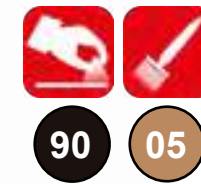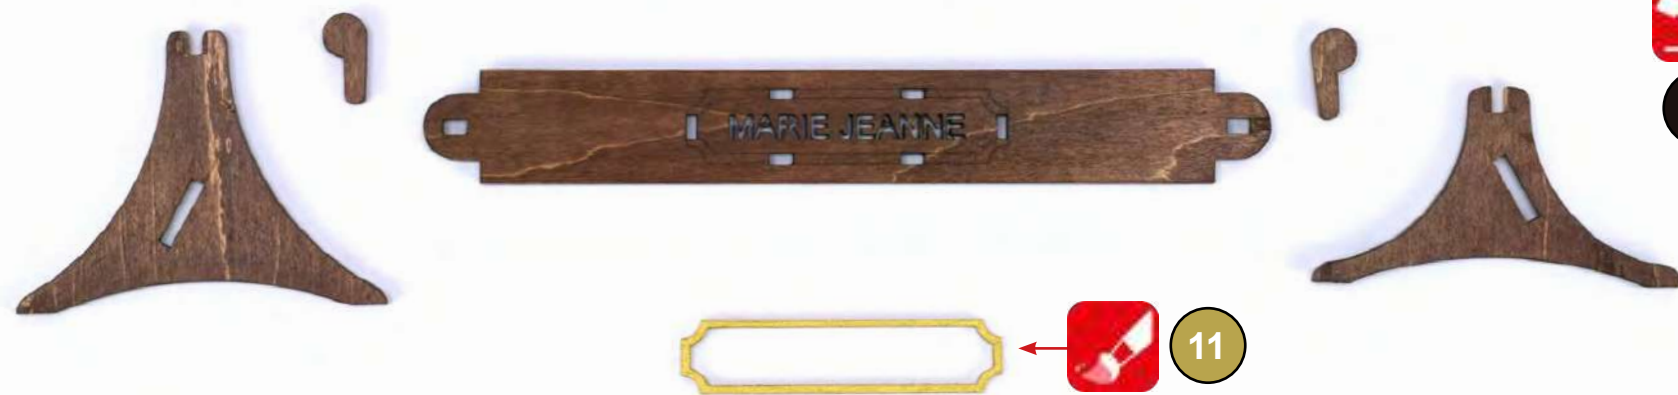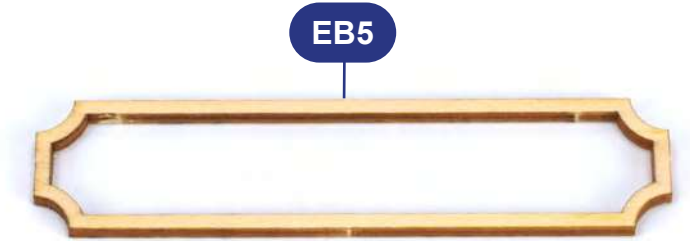

02

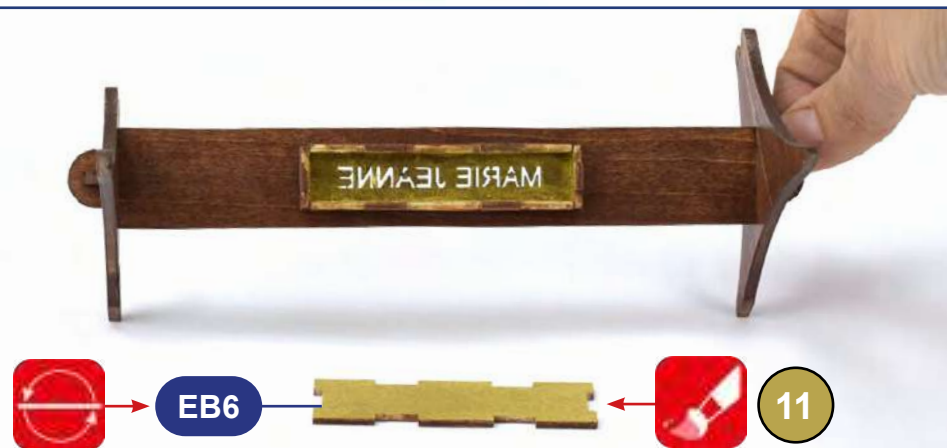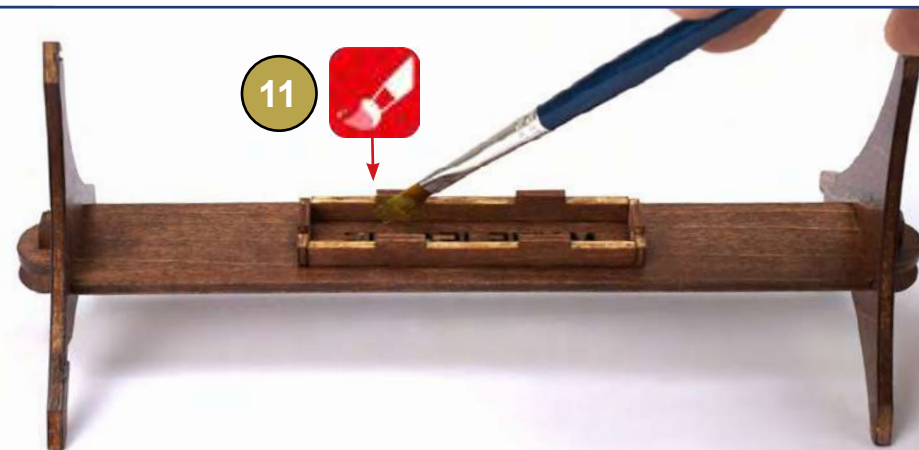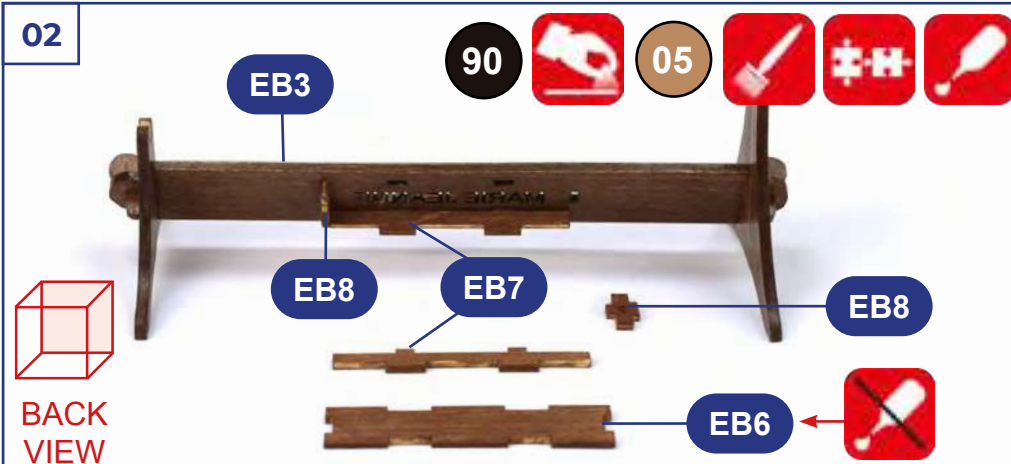

03

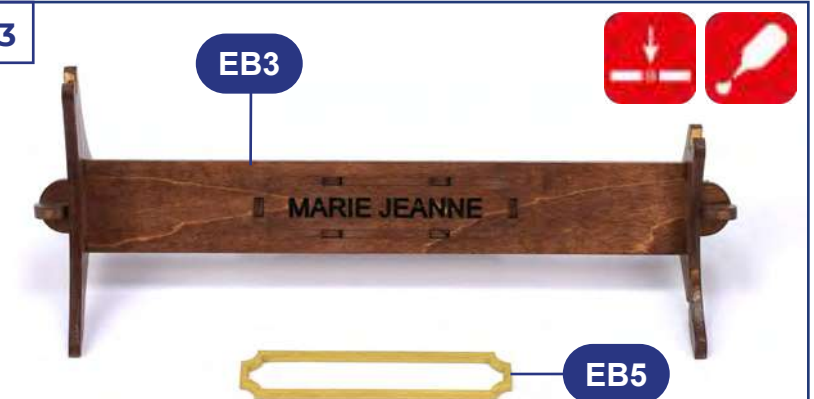


04

Lightning Set
ref. 27590
Sold separately




EB3



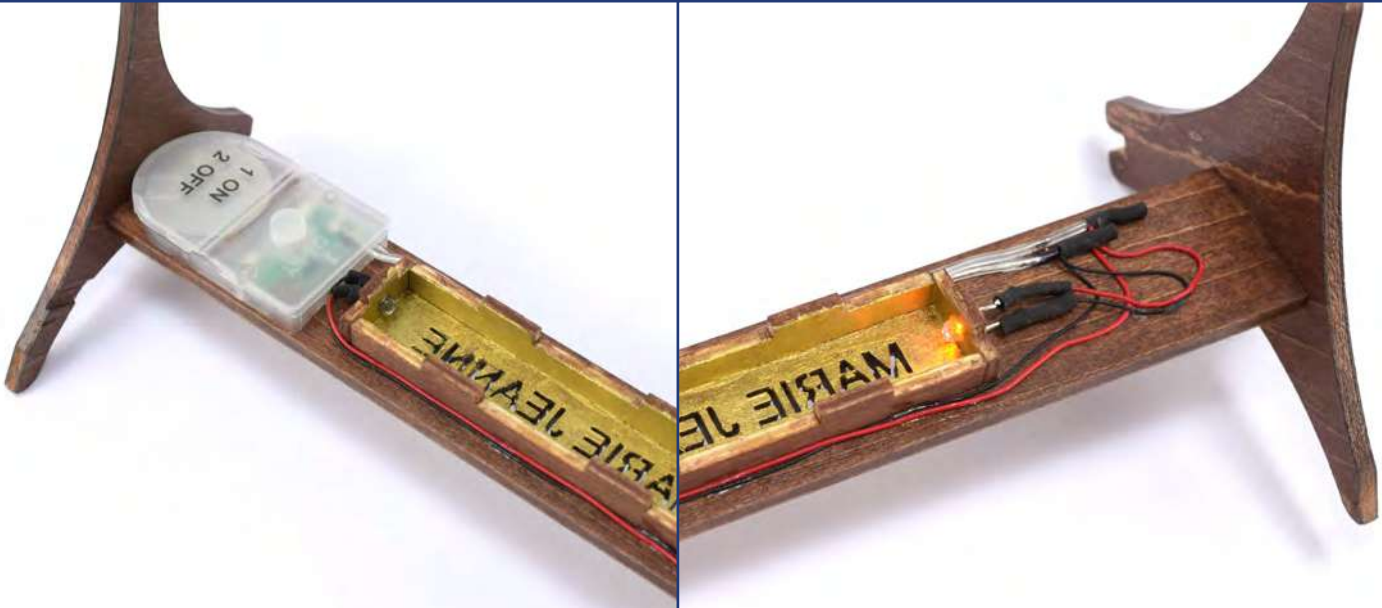



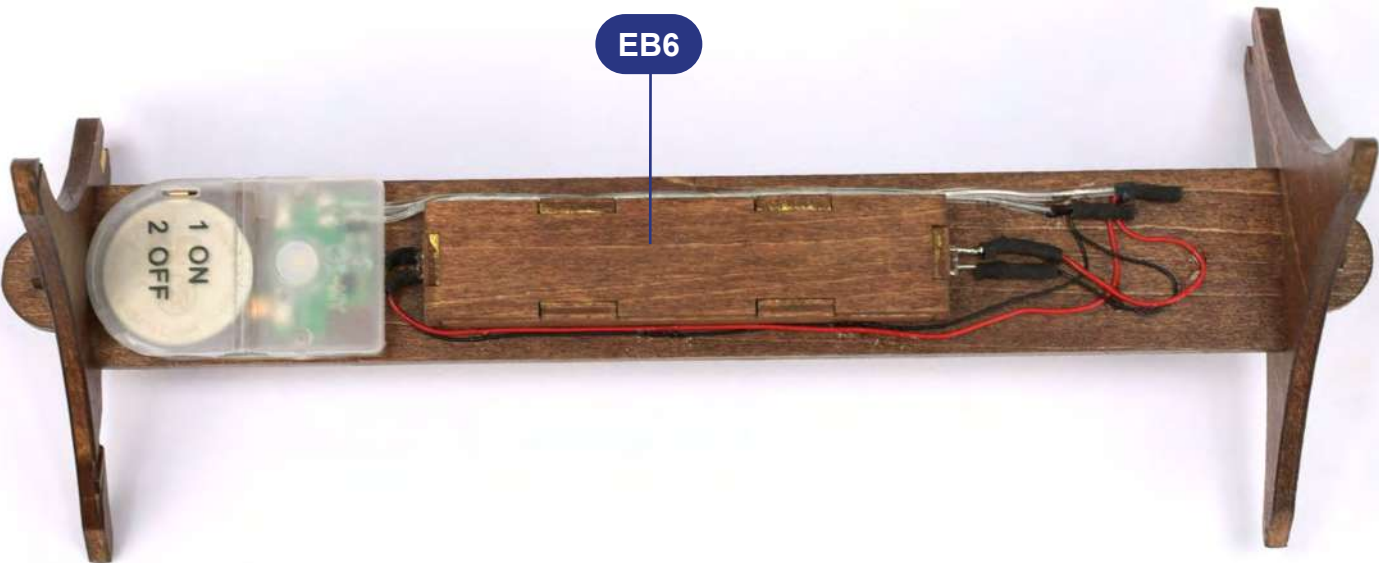











LE POUVOIR DE L'IMAGINATION
www.artesania latina.net