


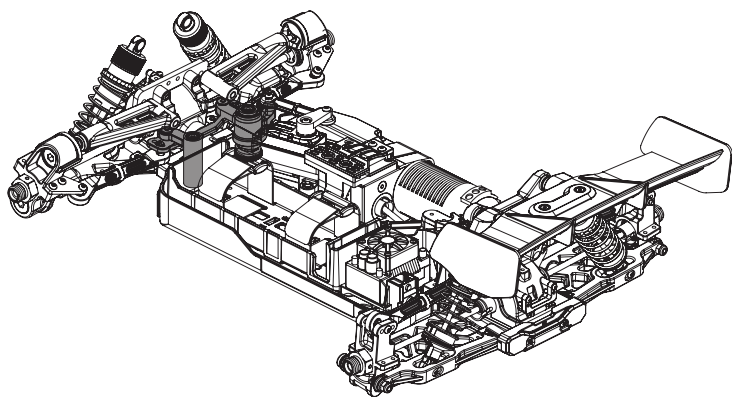


Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 


Finish before:

- Front Brace/ Steering Deck


STEP 1

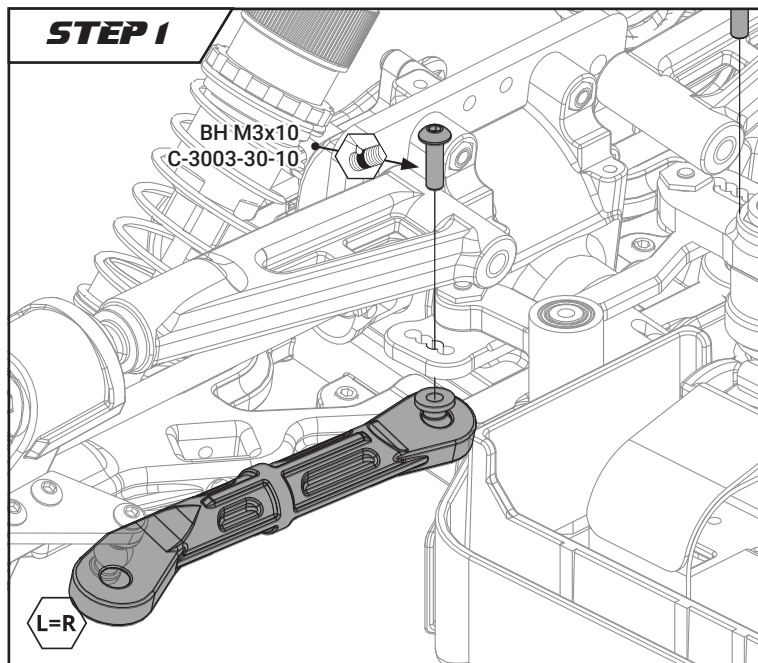


STEP 2

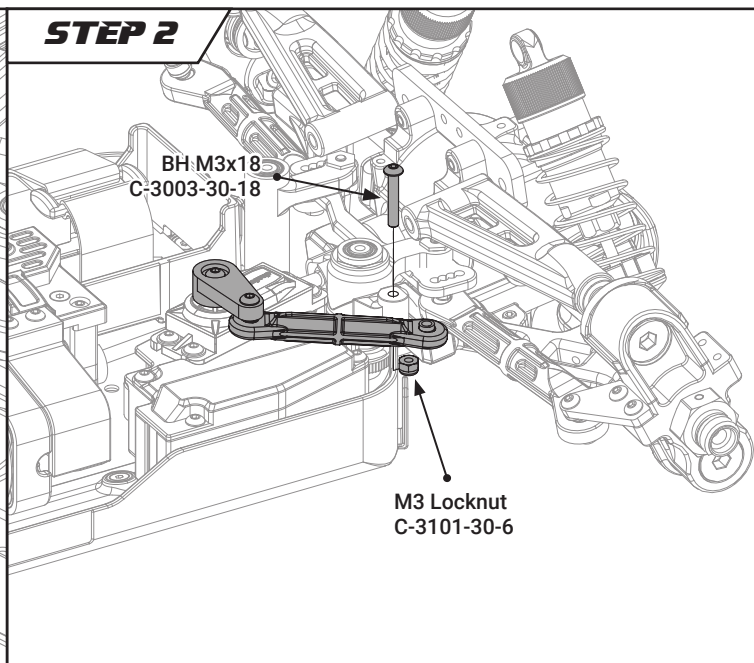

STEP 3

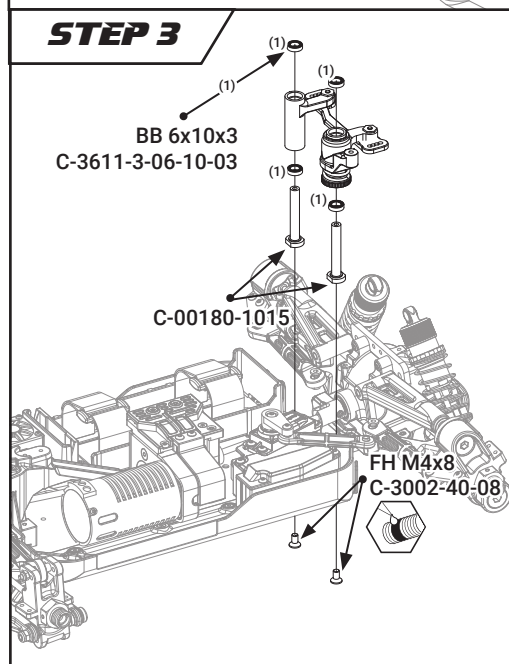

STEP 4

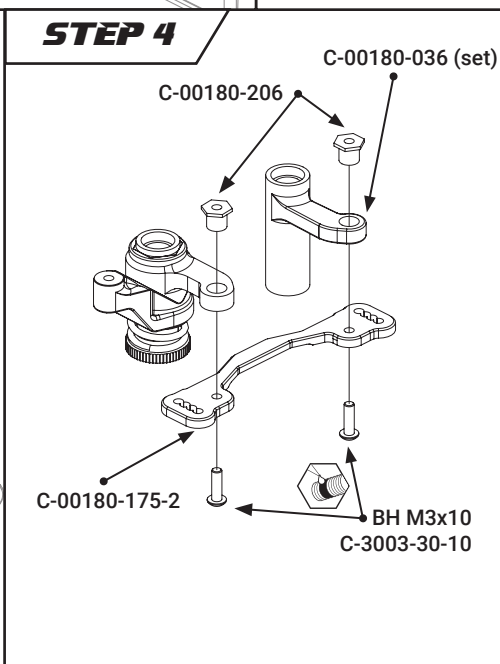

STEP 5

