


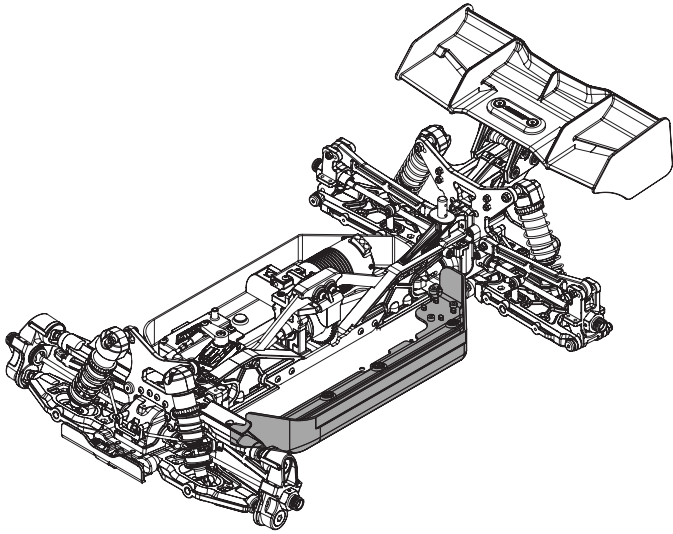

Required Tools:

- 2.0 Hex Driver

- Thread-locker




Finish Before:

- Battery/Esc Tray



VIDEO MANUAL
ON YOUTUBE

STEP 1

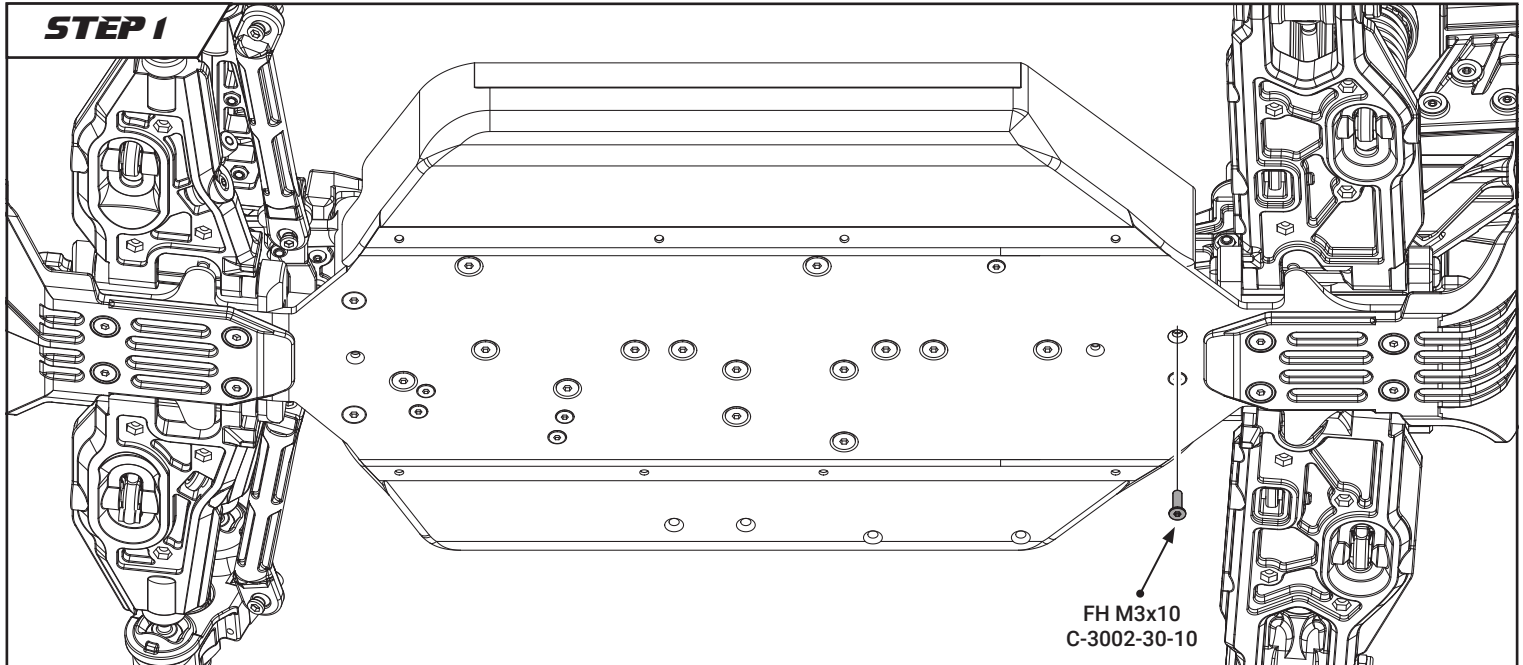

STEP 2

