



# RC4WD 2001 TOYOTA TACOMA 4 DOOR FOR TF2 LWB 313MM/12.3"

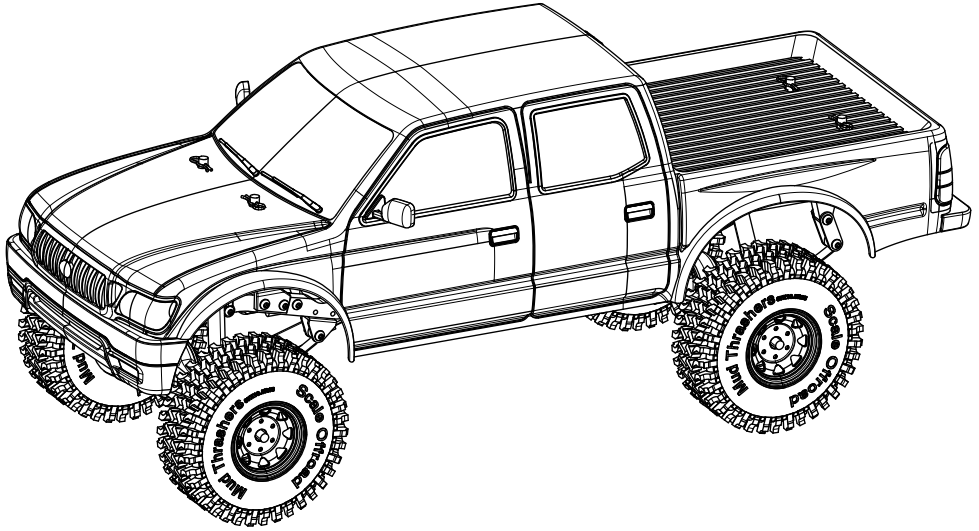

Congratulations on your purchase of the new RC4WD 2001 Toyota Tacoma 4 Door  
for the TF2 LWB 313mm/12.3"!


### ***Recommended Tools***




Hex Driver (2mm)



Body Reamer

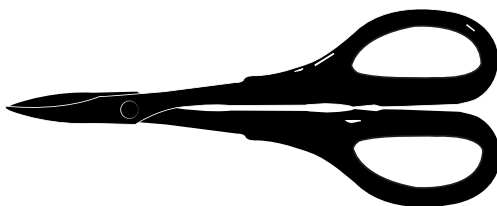


Curved Lexan Scissors

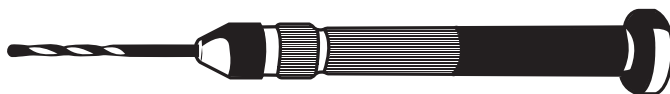

Drills (2mm, 3mm and 5mm)

## Parts List

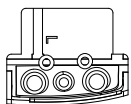

325-0297



325-0296



325-0292



325-0293



325-0295




325-0294




325-0289



325-0289



325-0291



325-0290



325-0295



325-0294



325-0267




325-0267



325-0281



325-0272



325-0266



325-0298



325-0275



325-0276



325-0277




325-0290




325-0275



325-0276

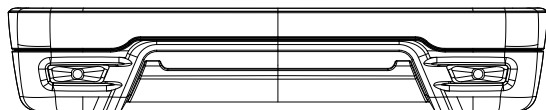

325-0288



325-0262



325-0263



325-0274




325-0273



325-0265



325-0264

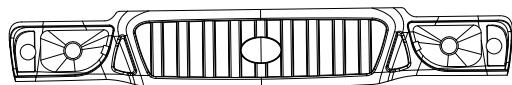

325-0282



325-0268




325-0269



325-0270



325-0271

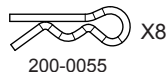

200-0055



X21

Z-S0652

M3 x 8mm BHCS



X2

Z-S0654

M3 x 12mm BHCS



X2

Z-S0653

M3 x 10mm BHCS



X2

Z-S0655

M3 x 14mm BHCS



## Instruction Manual Symbols Key



Glue



Repeat or Build Multiple



Build Right and Left



Trim with Hobby Knife



Build Front and Rear



Attention



Cut with Scissors



Paint



Double Sided  
Adhesive Tape



Drill Hole



Body Reamer

## Tips for Assembly

Use good quality hex drivers to avoid stripping screw heads.

Open kit bags in order of assembly steps.

Use "Step" index for quantity and size of hardware to be used for assembly step.

Drilling holes with specified drill size is preferred, but a body reamer can be used in its place.

Do not overtighten screws.

**The following is a preview of the instructions and the order in which they should be followed:**

- First, trim your body and drill all of the mounting holes. Making sure to test fit all of the parts. Do NOT glue anything to the body before painting.
- Second, clean and paint the lexan body.
- Third, apply the supplied stickers to fit your own personal style.
- Fourth, mount all of the supplied accessories using the provided instructions.

## Warranty




RC4WD non-electrical products are warranted to be free of defects in materials and workmanship when new. Our limited warranty does not cover damages due to normal wear and tear, user error of assembly or installation, user modifications, user's failure to perform routine maintenance, addition of aftermarket parts or option parts. This warranty lasts 30 days after arrival for original purchaser. In the event of a defect under this warranty, RC4WD will, at our discretion, replace the product, provided our inspection indicates that an original defect exists. RC4WD reserves the right to replace any product which is no longer available with a product of comparable value and function. If RC4WD determines the repair is not covered under warranty guidelines, we will contact you to discuss your options. If you have any questions, please contact us via email at [support@rc4wd.com](mailto:support@rc4wd.com).

RC4WD warranties its electronics for 30 days from date of arrival. This covers all electrical items except items that are already noted on the individual product page.




## ***How to Cut the Body***

Please trim the body along the green line as shown in the pictures below:

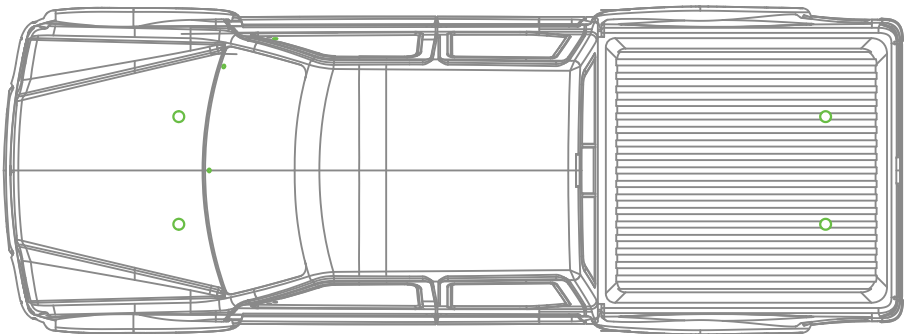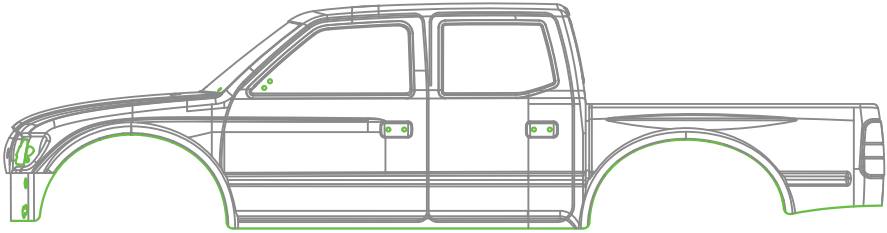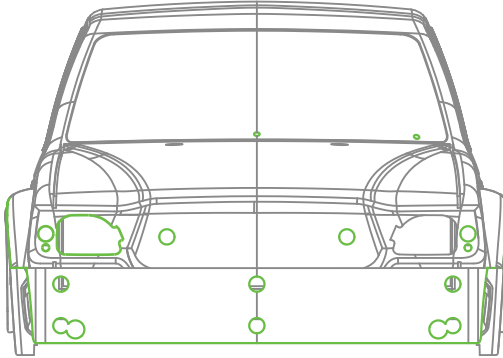





Lexan bodies come with an outer film to protect them during painting. Do **NOT** remove this covering until painting is complete.

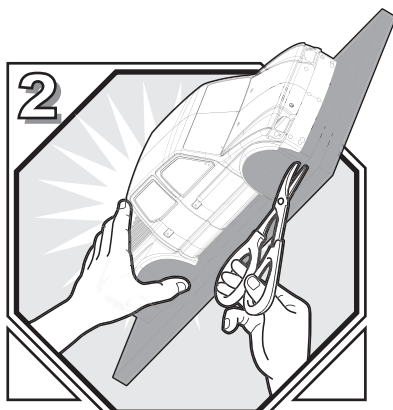


Lexan bodies are painted on the inside. Please take care to make all of the mounting holes and trim the body completely before painting. Test fit all of the hard plastic parts before painting. Do **NOT** glue any accessory parts to the body before painting.

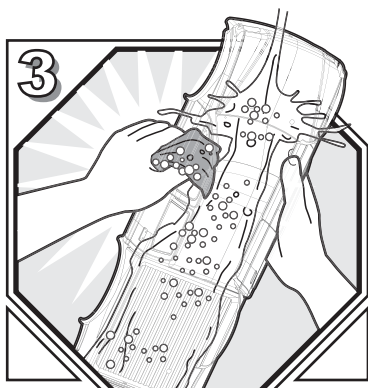


Lexan bodies come with an invisible residue from the mold and needs to be washed off for best paint results. Wash the body with dish detergent using warm water to rinse completely. Take care to dry with a lint free cloth or air dry completely before painting.

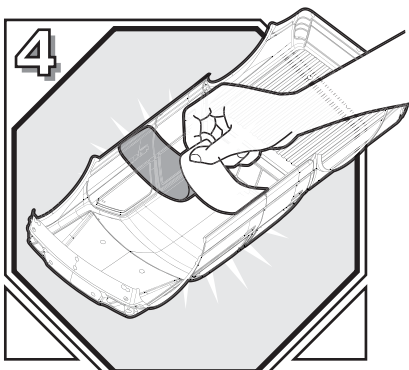


After washing, apply the supplied window masks to the interior of the body. Take care to firmly press the edge of the masks down to the body for best results and to prevent paint runs.

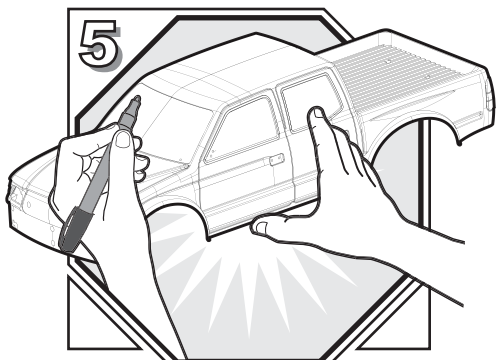


You can take this time to design a custom masking design or paint in one solid color. There are many advanced lexan body painting techniques available online. We are only covering the basic techniques.

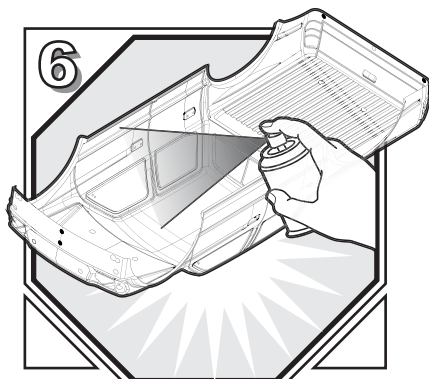

Once you are comfortable with your masking of the body, it is time to apply paint. Be sure to fully read and understand the directions of the paint you are using as supplied on the can. We recommend using lexan (polycarbonate) paint only. Normal household paints will not yield good results.

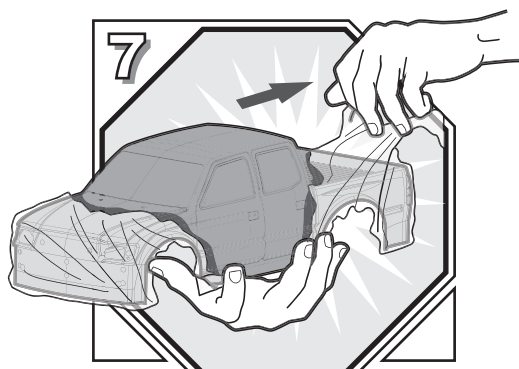


Once the paint is dry, it is time to remove the protective outer covering. This can be done by using the tip of your hobby knife or finger to gently peel up a corner and pulling it completely off.

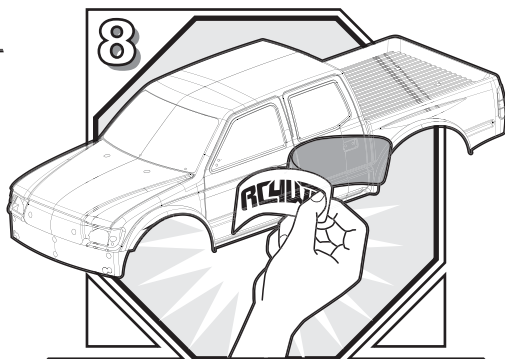

Now is it time to apply the supplied decals to meet your own personal style. You may now complete the installation of the plastic accessories.

## How to Install Body Decals

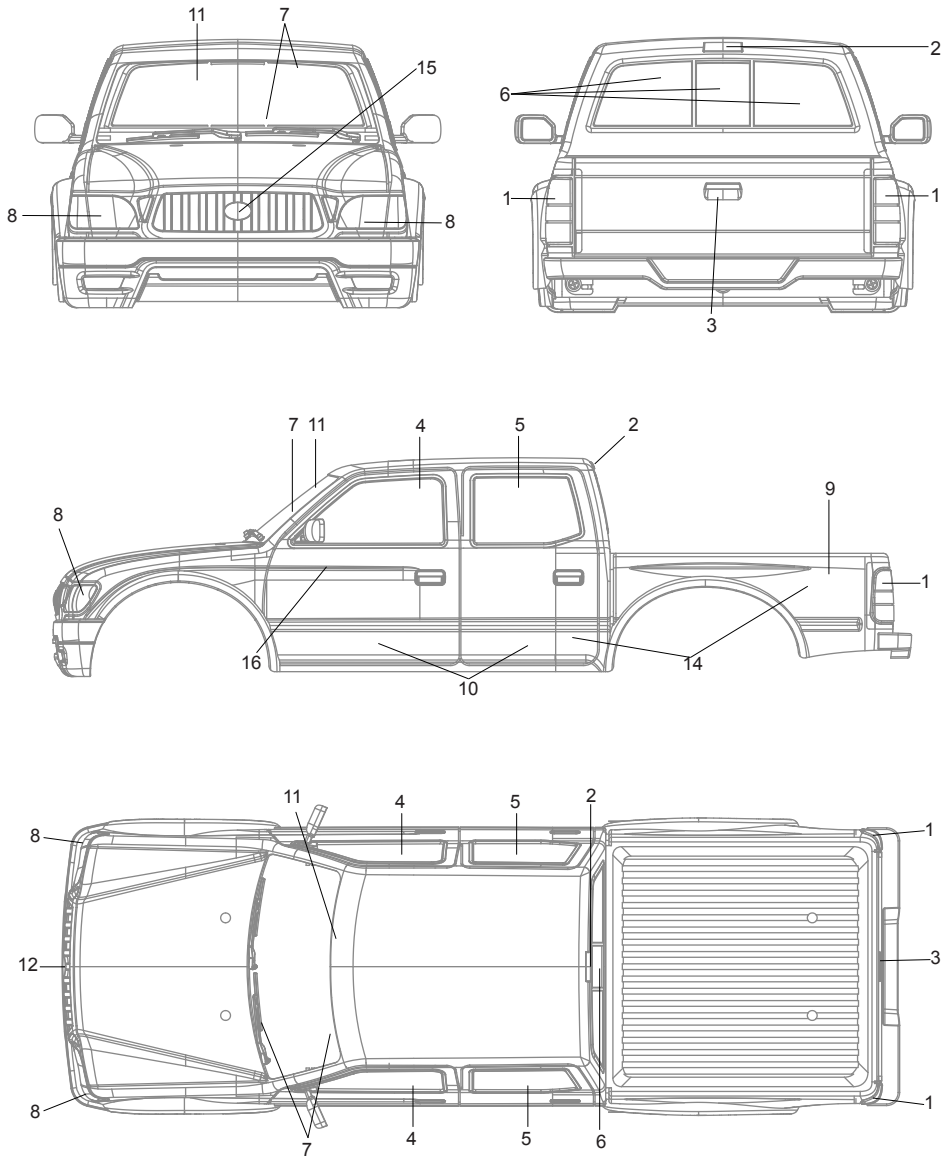


Certain decal sheets are supplied with multiple styles, giving you the option to choose whichever best fits your personal style! Many of the decals supplied can be freely applied in any location.




# RC4WD Step 1

Trim this section out for headlight

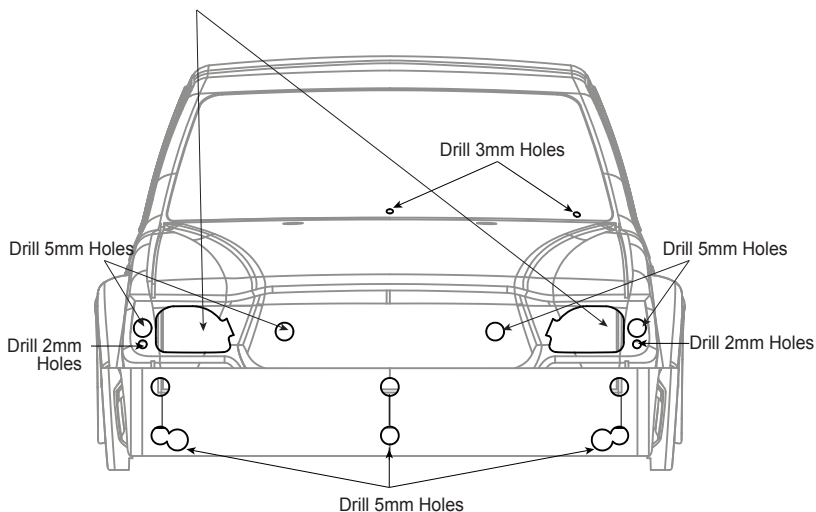

# RC4WD Step 2

X6  
Z-S0652  
M3 x 8mm BHCS

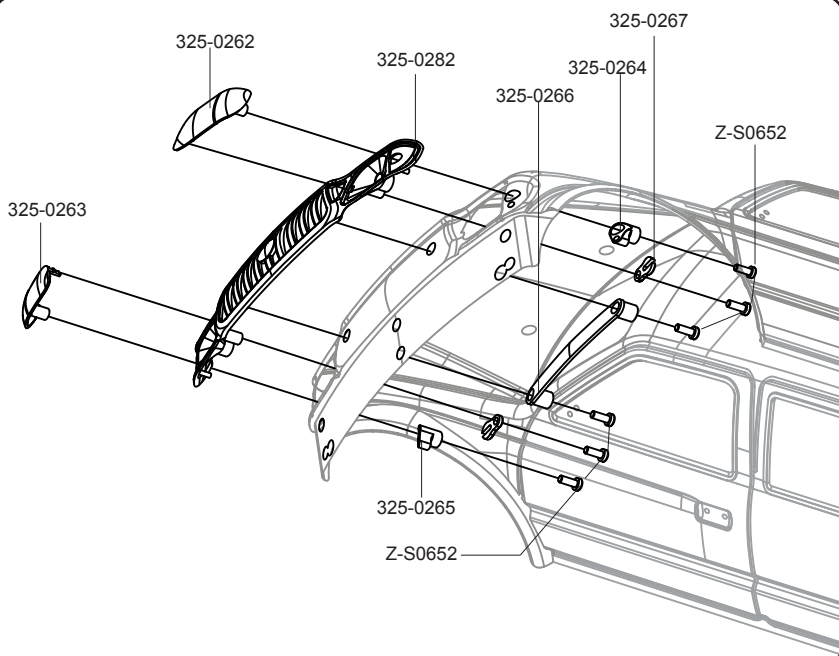


## Step 3



X6

Z-S0652  
M3 x 8mm BHCS

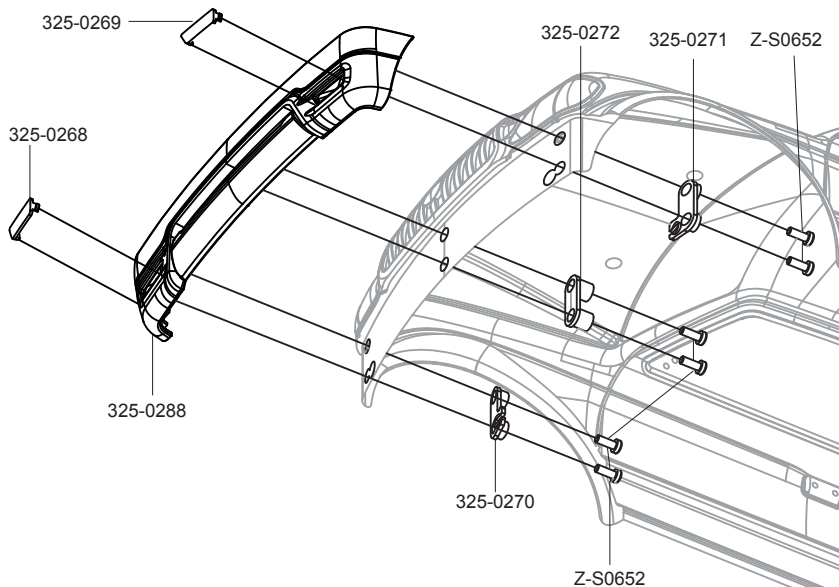


## Step 4



X4

Z-S0652  
M3 x 8mm BHCS

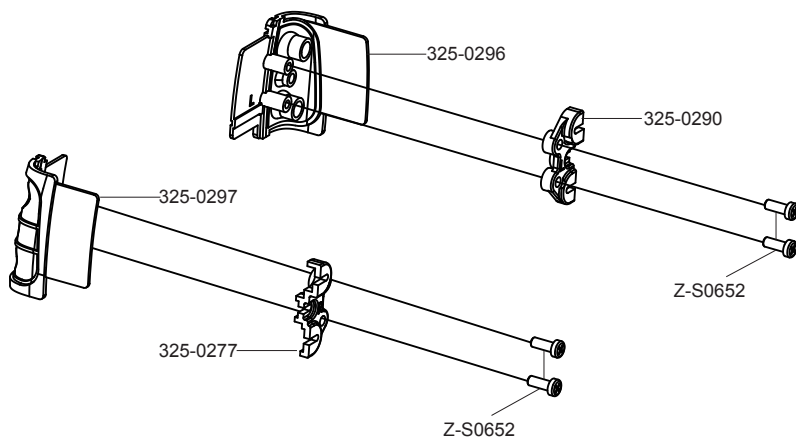


**RC4WD**

## Step 5

Please remove protective film from tape before applying.


Double Sided Tape

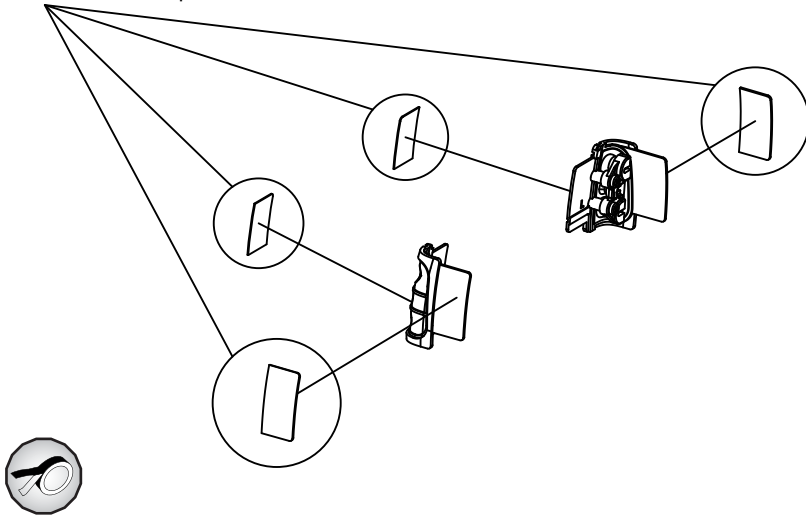

**RC4WD**


## Step 6

Please remove protective film from tape before applying.

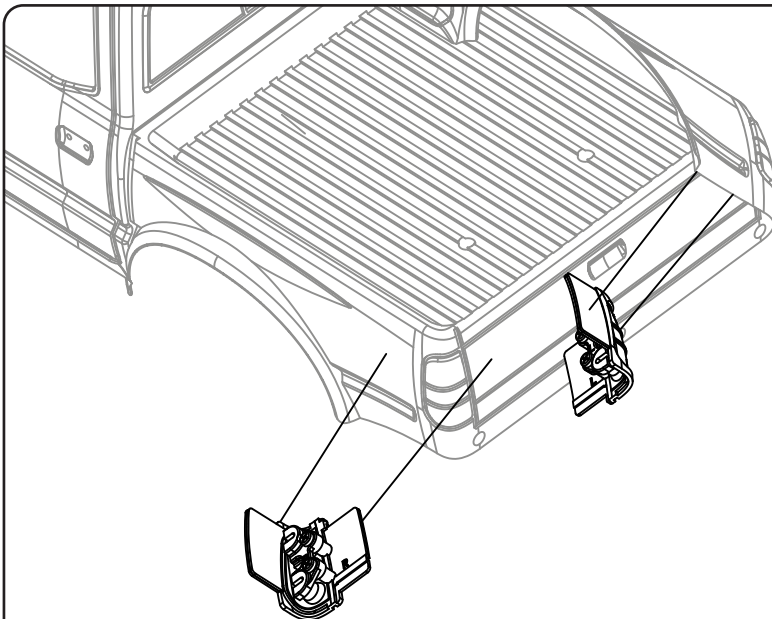

**RC4WD**


## Step 7

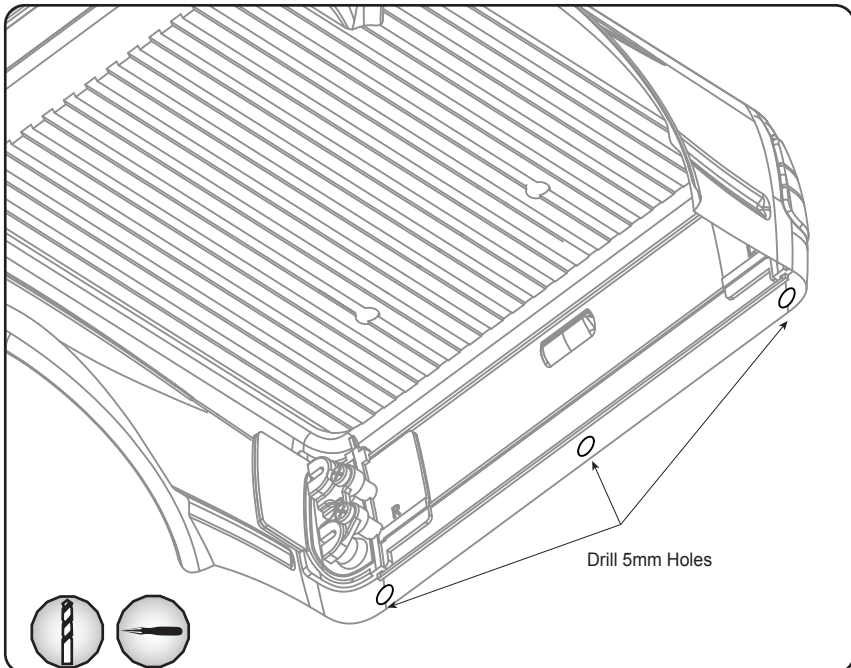

**RC4WD**




## Step 8

 X3  
Z-S0652  
M3 x 8mm BHCS

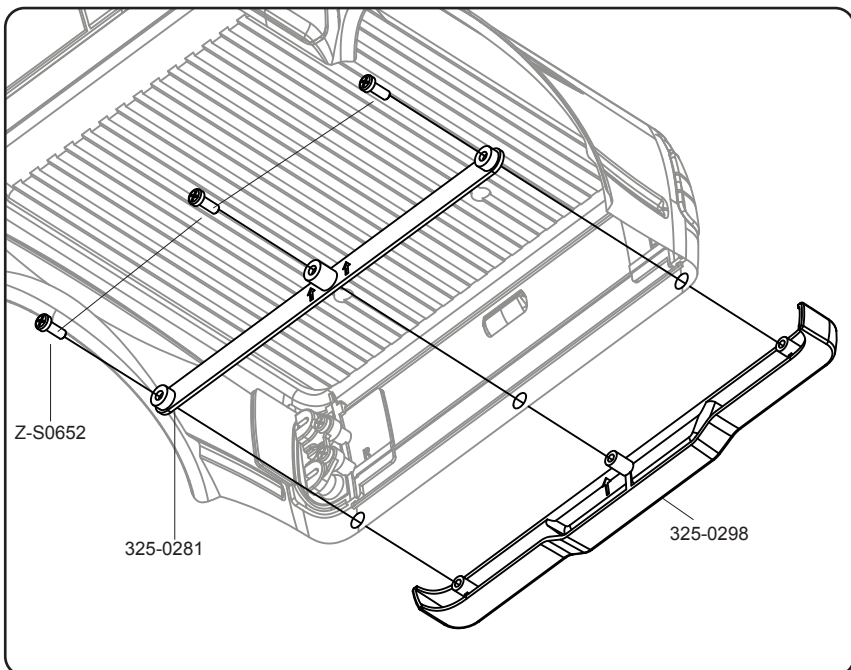

**REWARD**

Do not glue any parts before painting!

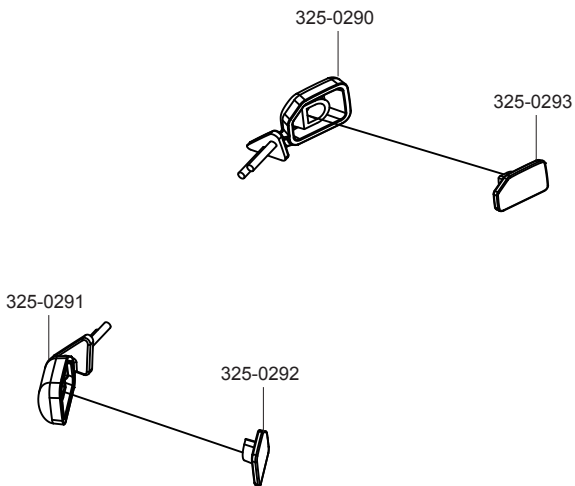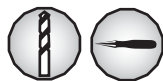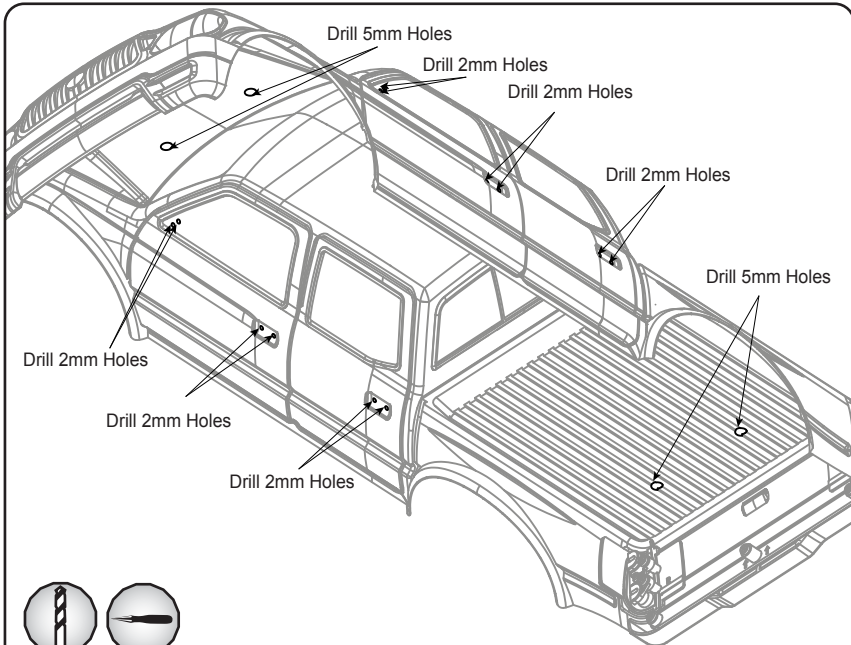
**REWARD**

## RC4WD Step 11

Do not glue any parts before painting!

Mirror brackets (325-0273) may fit on very tightly. Please use the body reamer or 2mm drill bit to slightly enlarge the hole.


Add glue to all these parts

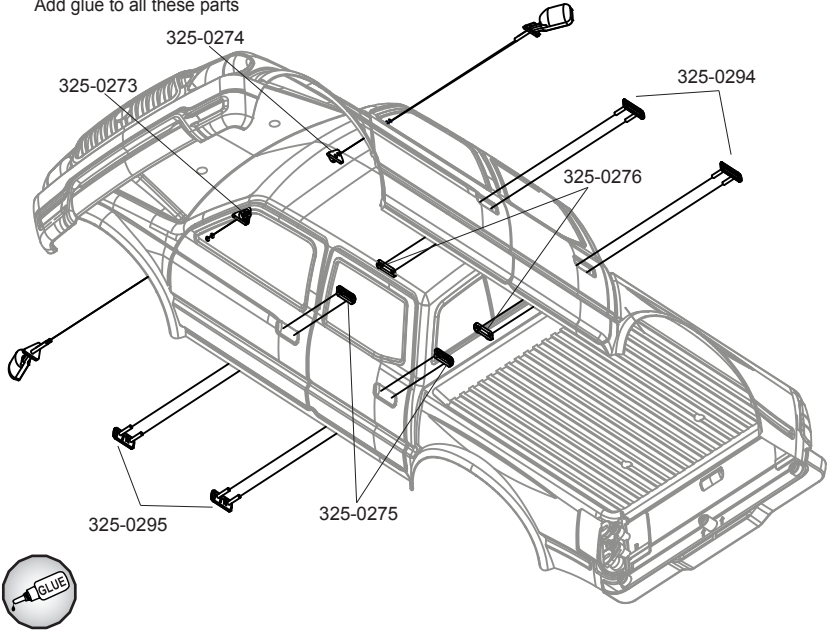

## RC4WD Step 12


Do not glue any parts before painting!

325-0289

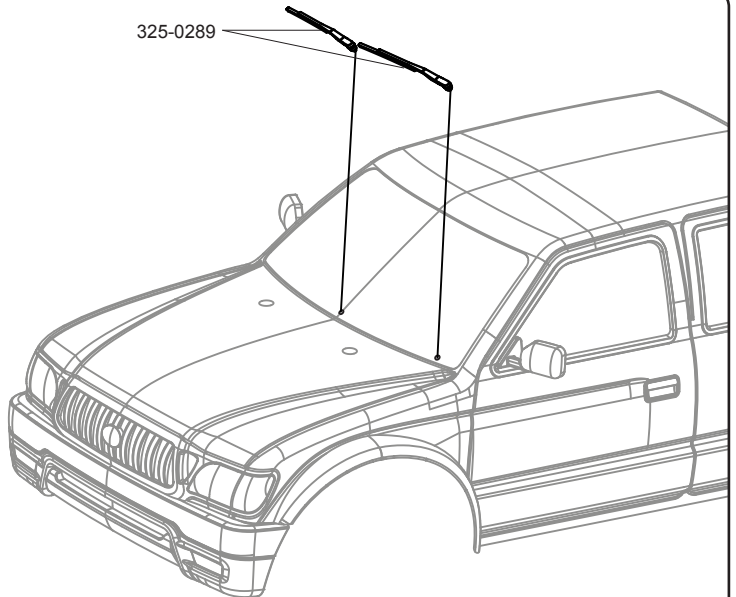


## RC4WD Step 13

-  X2  
Z-S0652  
M3 x 8mm BHCS
-  X2  
Z-S0653  
M3 x 10mm BHCS
-  X2  
Z-S0654  
M3 x 12mm BHCS
-  X2  
Z-S0655  
M3 x 14mm BHCS

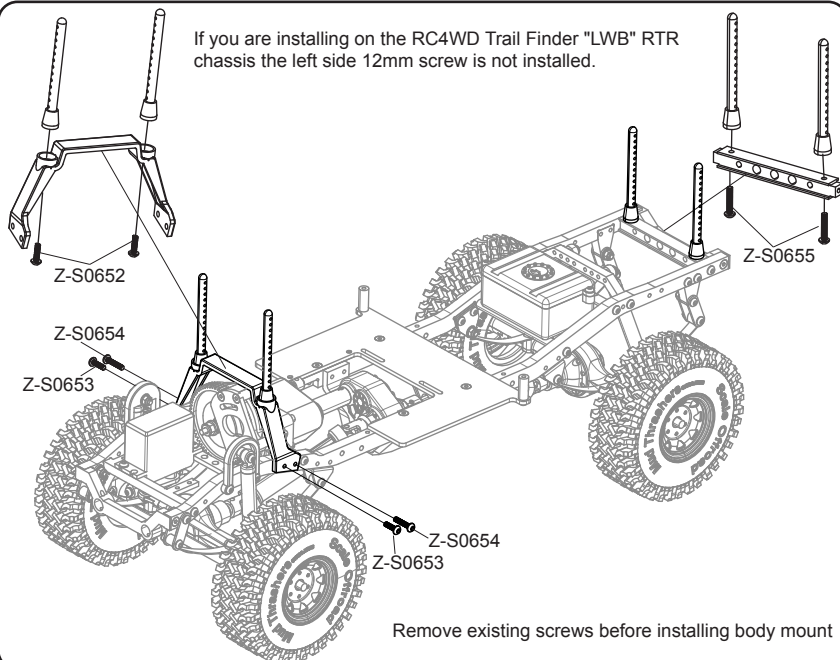


## RC4WD Step 14

-  X4  
Z-B0016

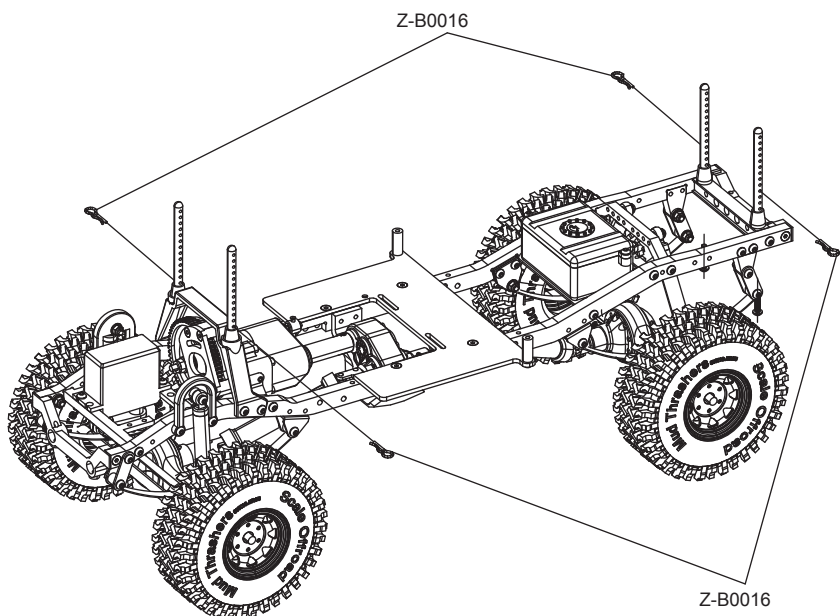


## RC4WD Step 15

Remove front  
bumper mount

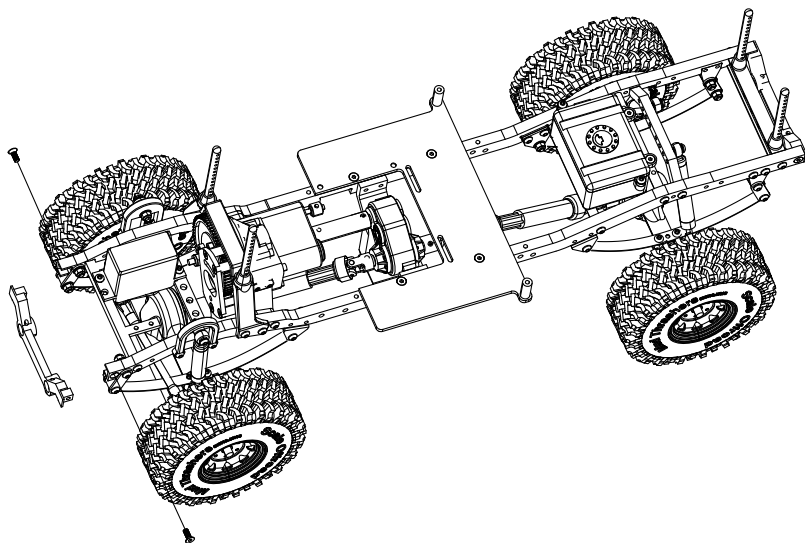


## RC4WD Step 16

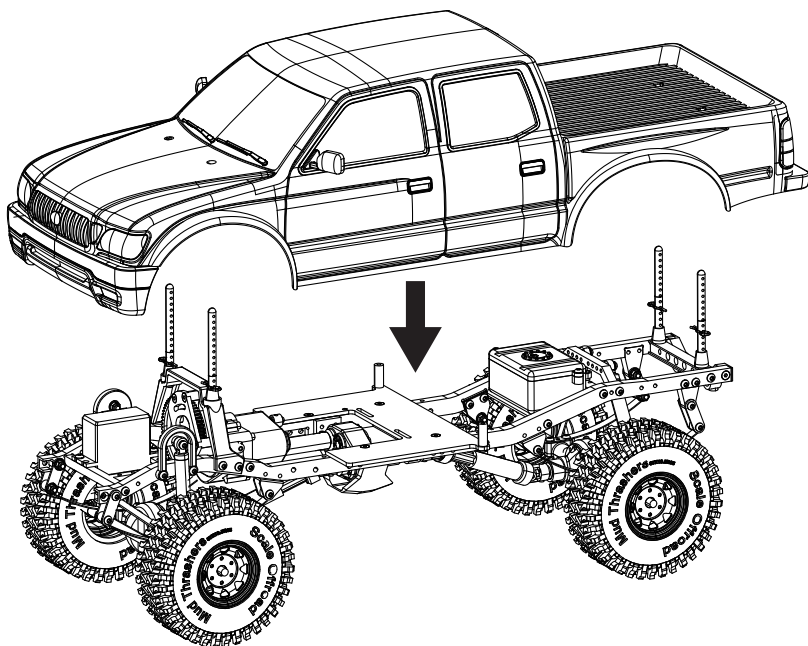


## RC4WD Step 17


 X4  
Z-B0016

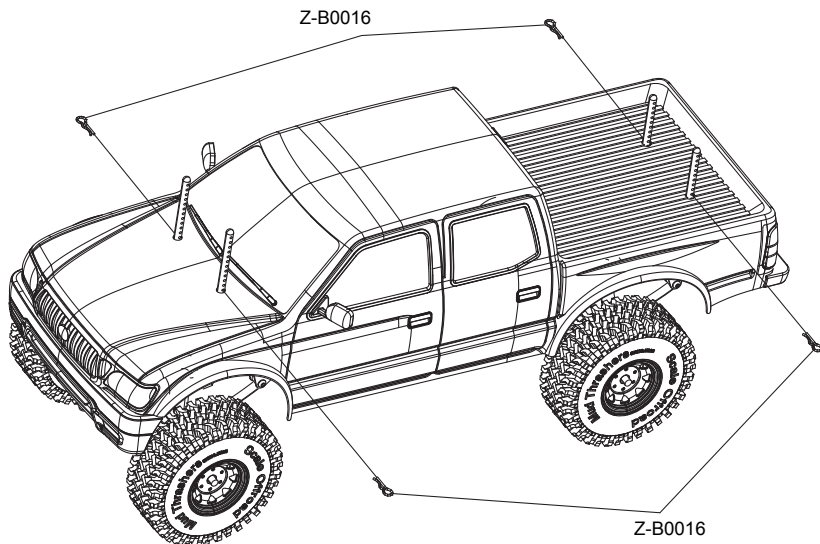

## RC4WD Step 18

Trim body posts  
to desired length.

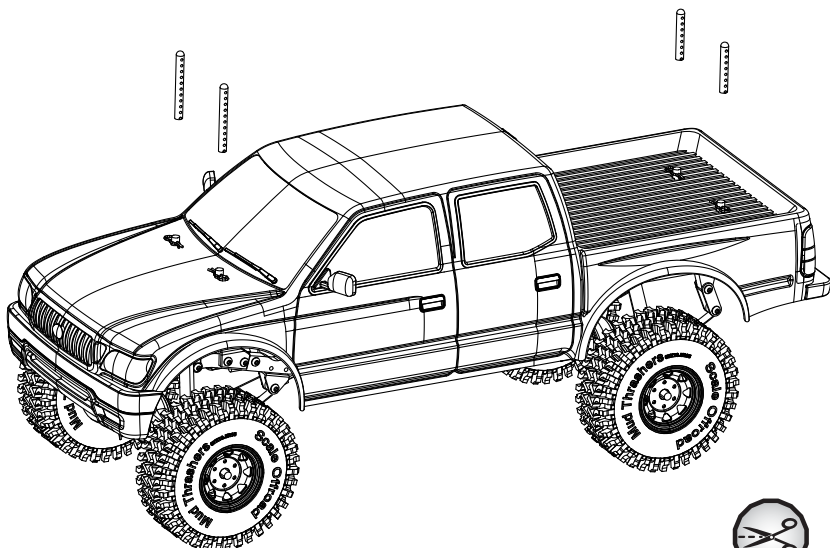

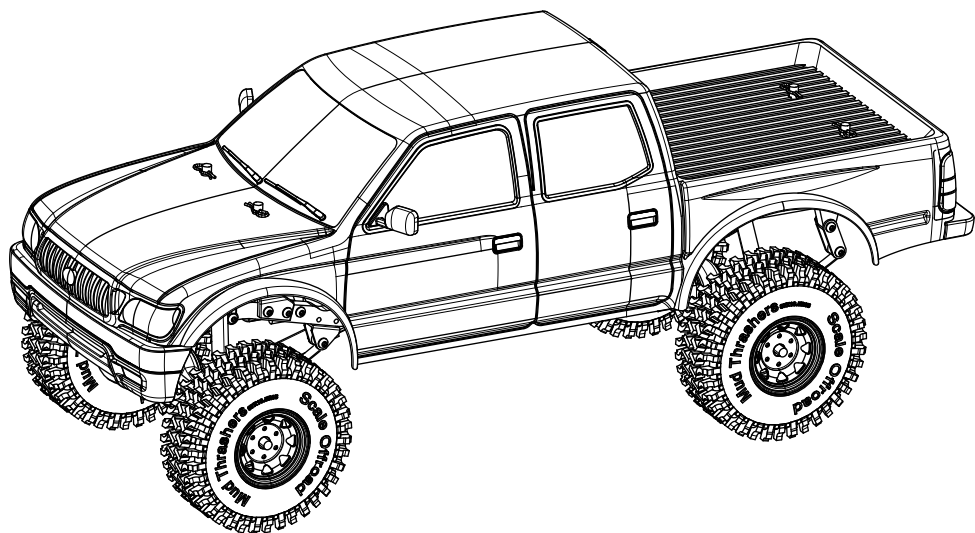

*Drive it like you built it!*





[www.rc4wd.com](http://www.rc4wd.com)



***RC4WD***

618 Blossom Hill Rd. Ste. 201

San Jose, CA 95123

Web: [www.rc4wd.com](http://www.rc4wd.com) - Email: [support@rc4wd.com](mailto:support@rc4wd.com)

RC4WD 100-0031