


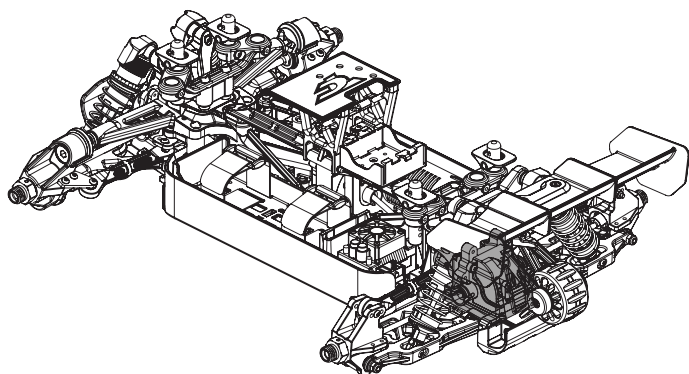

Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker
- Lithium Grease




STEP 1

BH M3x14
C-3003-30-14


BH M4x25
C-3003-40-25

C-00180-835

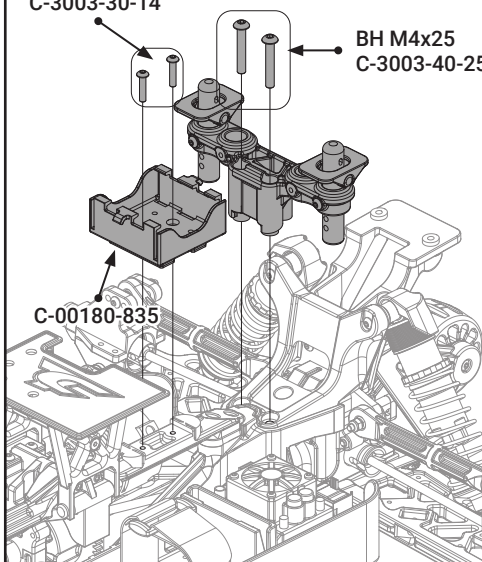


STEP 2

BH M3x30
C-3003-30-30

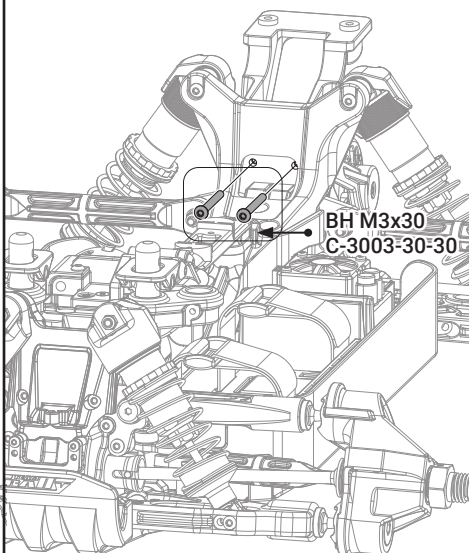

STEP 3

BH M3x16
C-3003-30-16

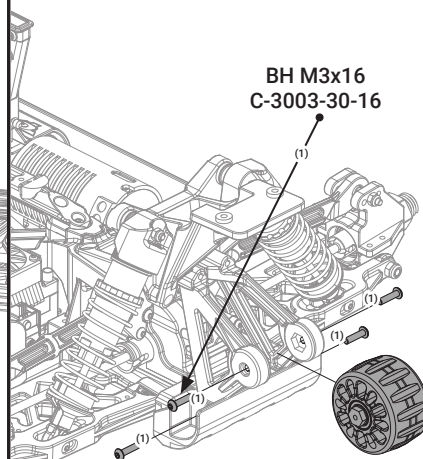


STEP 4

BH M3x18
C-3003-30-18

BH M3x16
C-3003-30-16


C-00180-1314

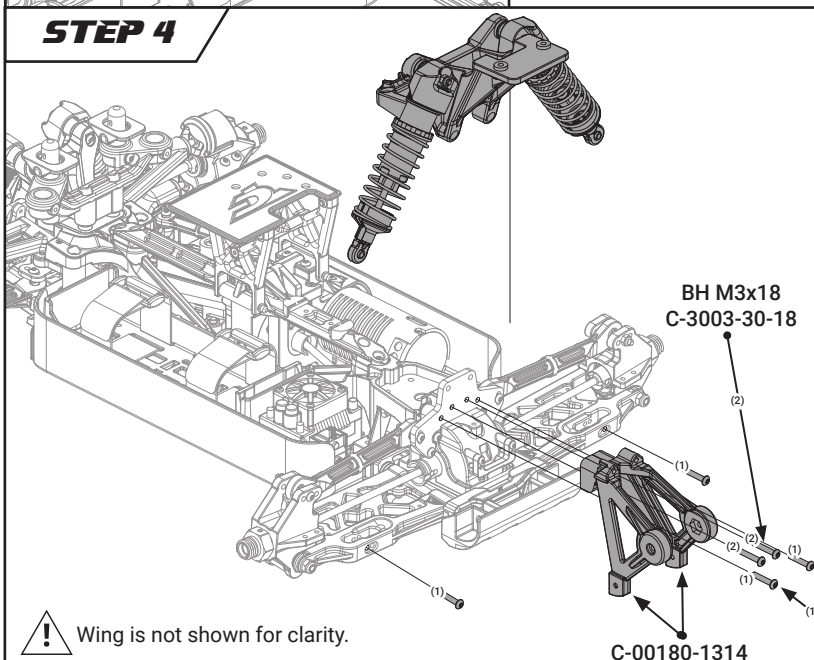


! Wing is not shown for clarity.

STEP 5


FH M3x12
C-3002-30-12

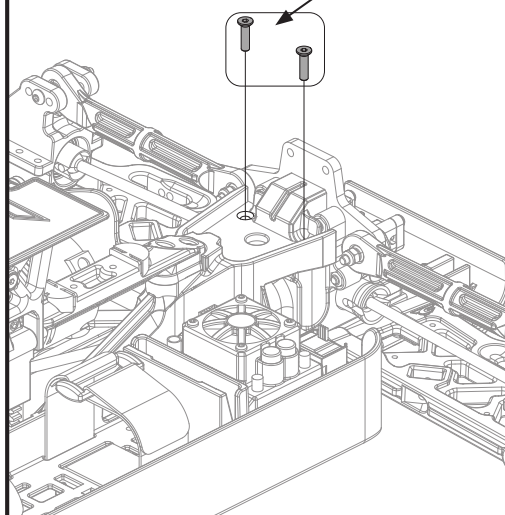


STEP 6

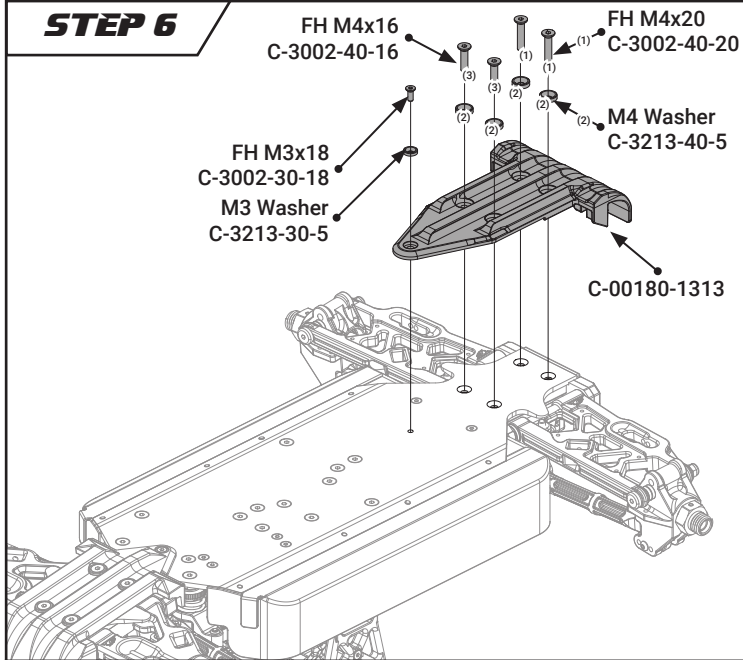

STEP 7

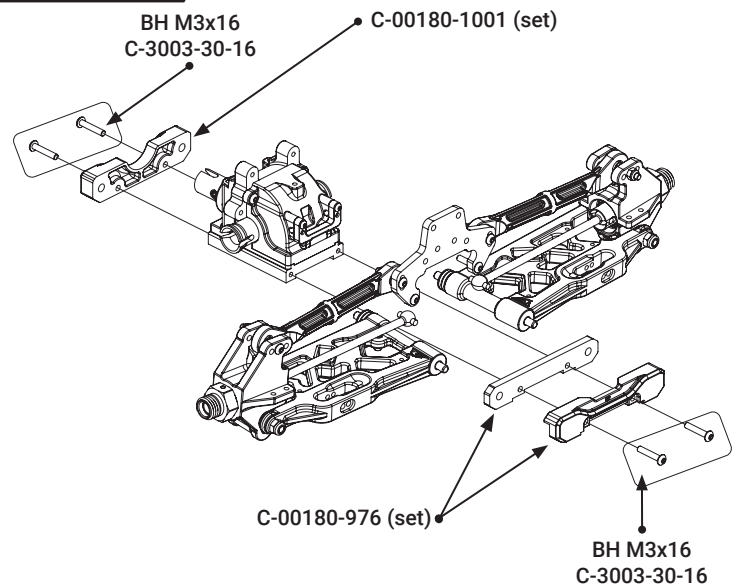

STEP 8

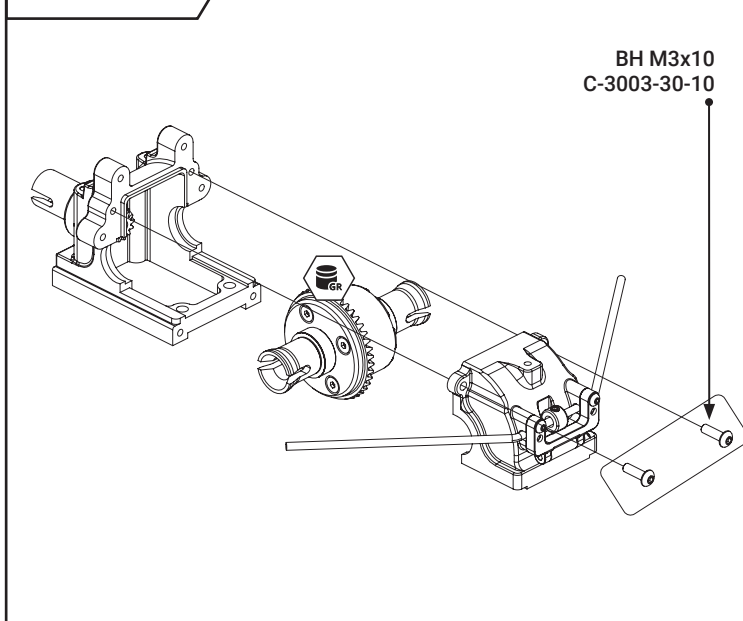

STEP 9

