



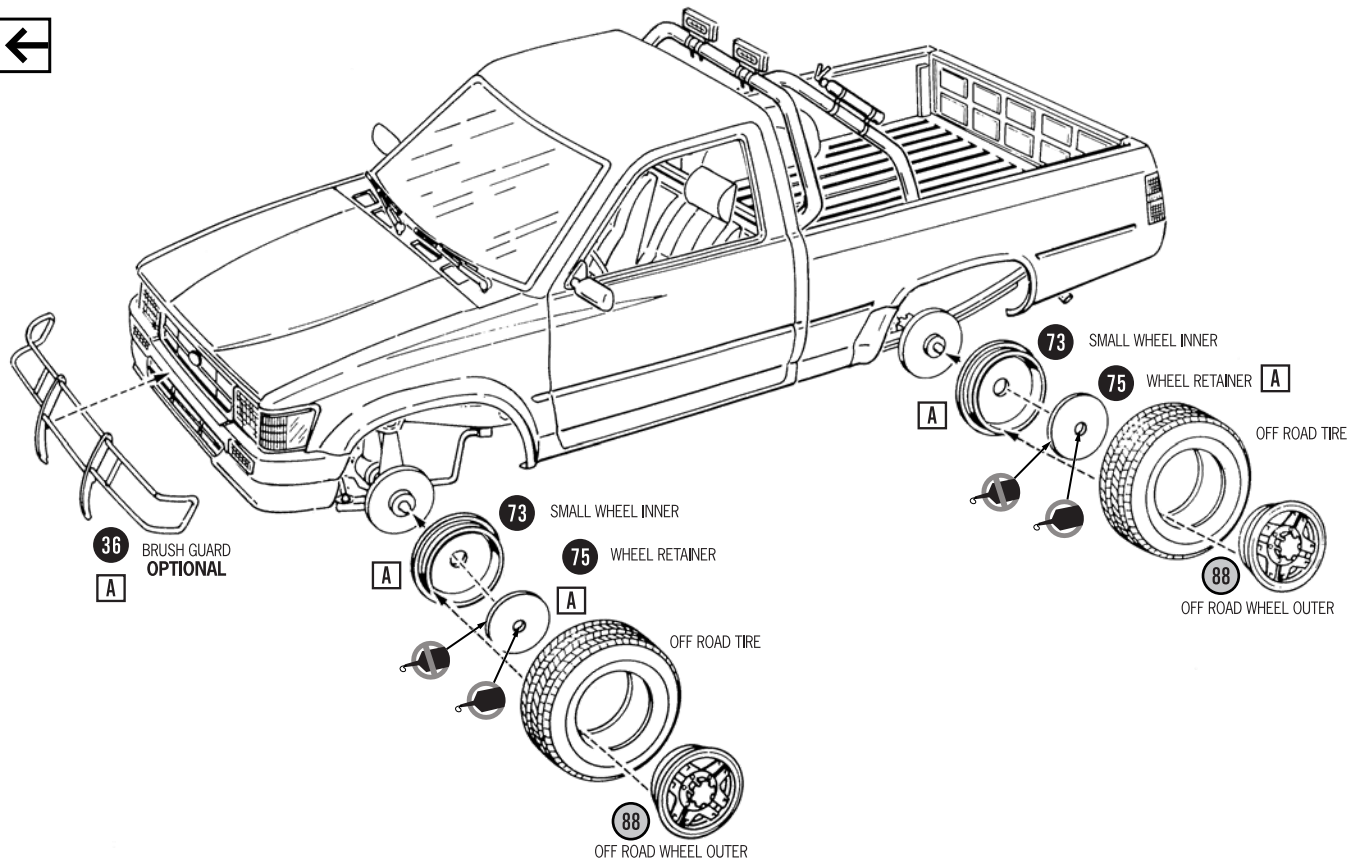

DECALS AND PAINT

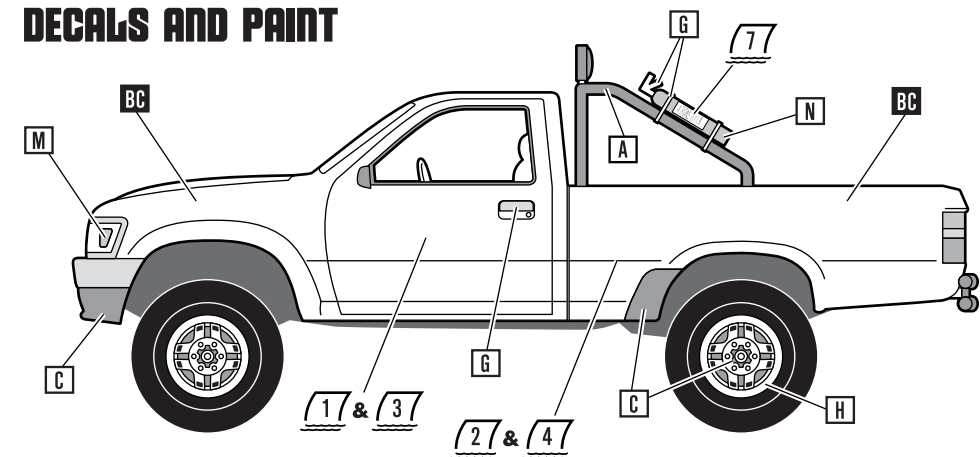

PAINT COLORS

A	Black	Q	Yellow
B	Flat Black	R	Tan
C	Semi-Gloss Black	S	Light Brown
D	White	T	Lt. Blue
E	Flat White	U	Med. Blue
F	Silver	V	Dark Blue
G	Chrome (Bright Silver)	W	Dark Brown
H	Aluminum	X	Lt. Green
I	Steel	Y	Woodgrain
J	Brass	Z	Dark Gray
K	Gold	MG	Metallic Graphite
L	Amber	IC	Interior Color
M	Transparent Amber	BC	Body Color
N	Red	▲	Semi-Gloss
O	Transparent Red	△	Gloss
P	Orange	▲	Metallic


EXTERIOR COLORS

White, Silver Metallic, Dark Gray Metallic, Black, Red, Cardinal Red, Garnet Pearl, Light Olive, Forest Green Metallic, Blue and Dark Blue Pearl.

INTERIOR COLORS

Black, Maroon, Red, Dark Gray, Medium Gray, Light Gray, Slate Gray, Taupe Gray, Neutral, Dark Brown, Medium Brown, Light Brown, Dark Blue, Light Blue and Dark Green .

It is recommended that you search the internet for additional color references and details.

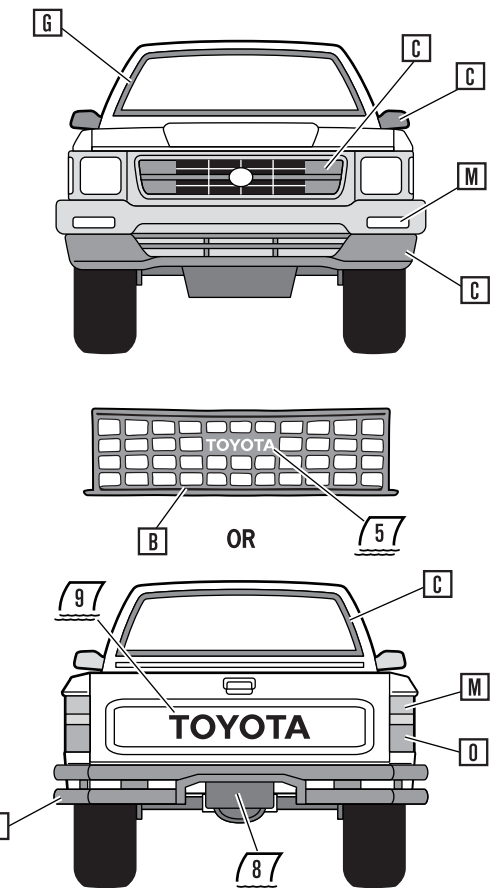

This vehicle body is approved by TOYOTA MOTOR CORPORATION. AMT and design is a registered trademark of Round 2, LLC. ©2023 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging made in the USA. Decals made in China. All rights reserved.



SYMBOLS


7	Part #	100	Chrome Part		Parts Shown Upside Down
105	Clear Part	9	Decal		Repeat on Other Side
	Cement		Do Not Cement		

READ THIS BEFORE YOU BEGIN Cement all parts unless otherwise indicated.


This kit may be built more than one way. Look over this instruction sheet carefully before you begin building. After you've planned your car, follow the assembly instructions and "TEST FIT" the parts without cementing. This will familiarize you with the location of parts. For best results, the various sub-assemblies and components should be painted before any chrome parts are attached. For example: When attaching non chrome engine parts, it is best to cement them in place and paint as a unit. AMT® kits are molded from the finest high-impact styrene plastic. Use only paint and

cement made for styrene. Trim excess plastic from parts before joining. When attaching "chrome" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces. Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just FOLLOW THE NUMBERS as the instructions are numbered in order of assembly. NOTE: Chrome and clear parts are indicated (see key on back page).


1

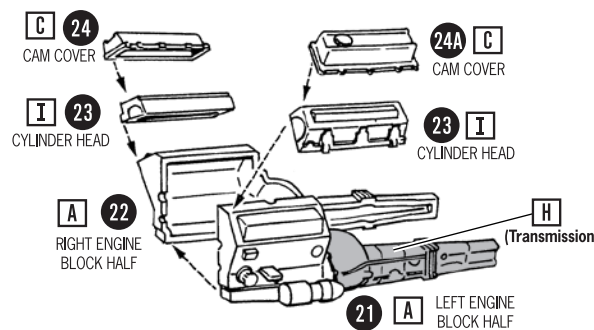


2

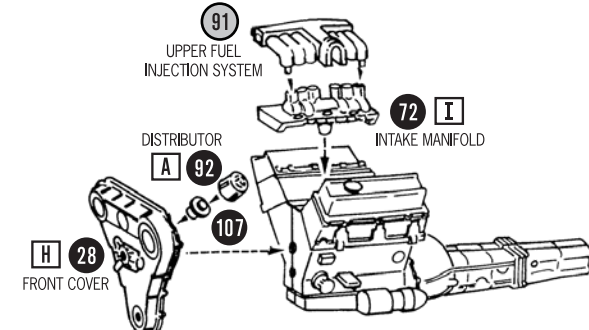

3

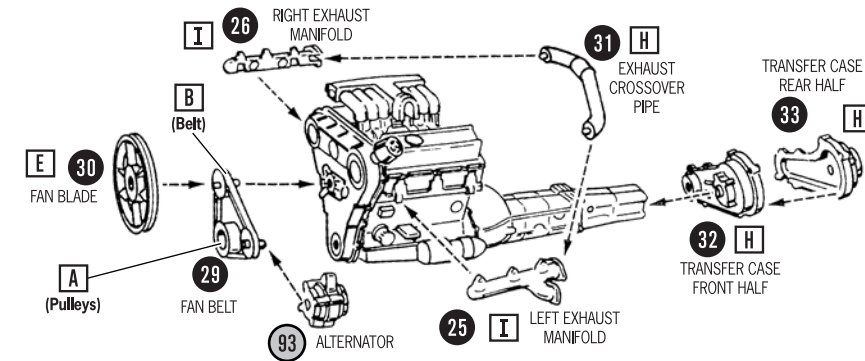

4

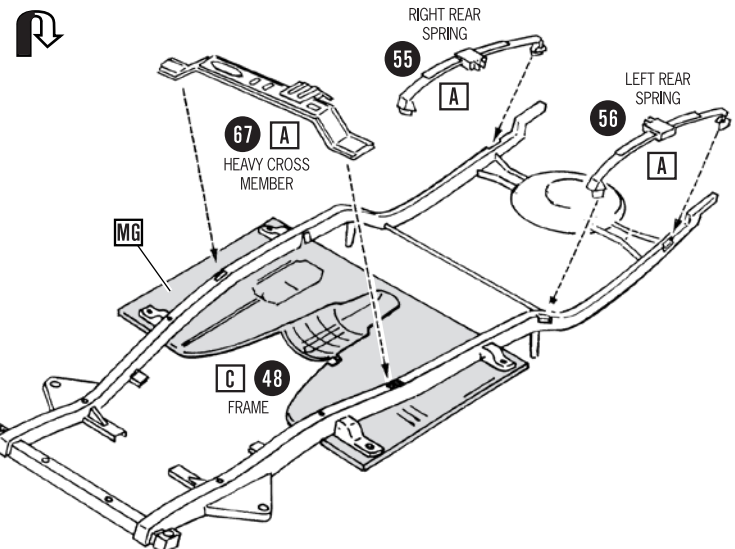

5

