


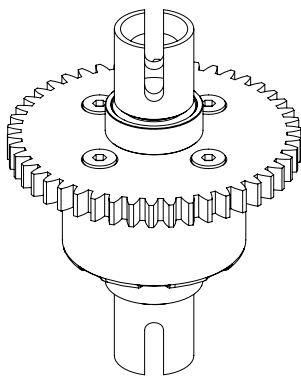

### Required Tools:

- 2.0 Hex Driver
- Silicone Diff Oil 
- Paper Towel
- Solvent/Brake Cleaner
- Hobby Knife or Other Sharp Tool
- Pliers

### Finish Before:


- Center Gearbox / Motor Mount

### Important Notice:


Do NOT use solvents on rubber gaskets or O-rings to prevent damage.

|           | FRONT DIFF | CENTRE DIFF | REAR DIFF |
|-----------|------------|-------------|-----------|
| TRACK USE | 7500cps    | 15.000cps   | 5000cps   |
| OFF ROAD  | 10.000cps  | 30.000cps   | 7500cps   |
| FACTORY   | 20.000cps  | 50.000cps   | 10.000cps |


### STEP 1

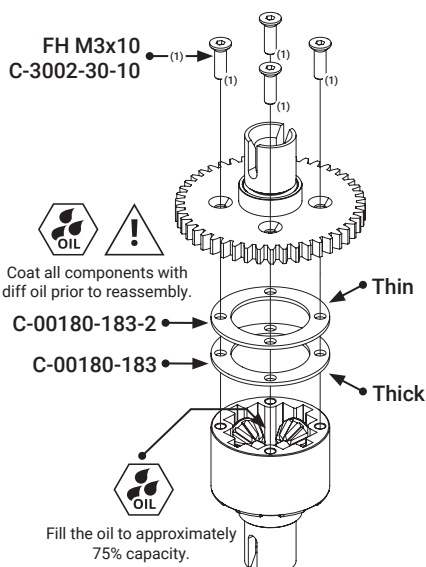


### STEP 2

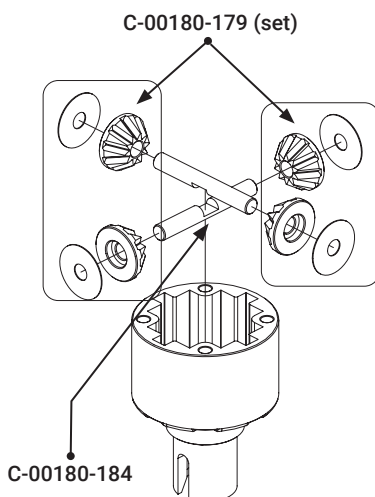


### STEP 3

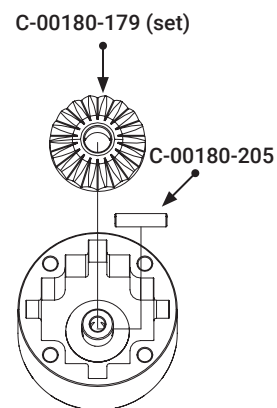

### STEP 4

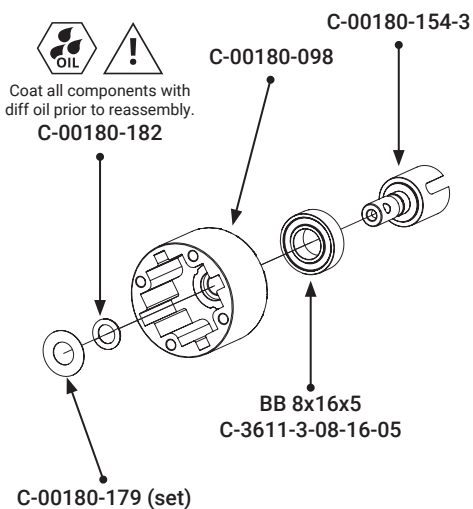

### STEP 5

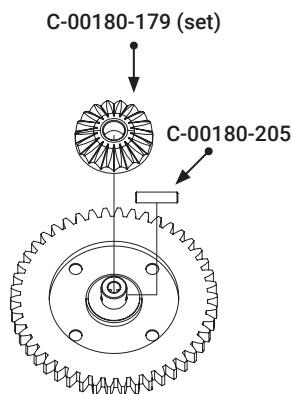

### STEP 6

