


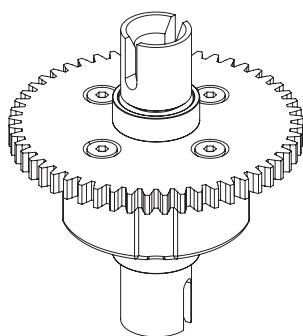

Required Tools:

- 2.0 Hex Driver
- Silicone Diff Oil 
- Paper Towel
- Solvent/Brake Cleaner
- Hobby Knife or Other Sharp Tool
- Pliers

Finish Before:

- Center Gearbox / Motor Mount


Important Notice:

Do NOT use solvents on rubber gaskets or O-rings to prevent damage.

	FRONT DIFF	CENTRE DIFF	REAR DIFF
FACTORY	30.000cps	100.000cps	20.000cps

STEP 1


FH M3x12
C-3002-30-12

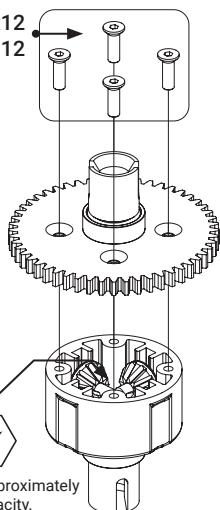

Fill the oil to approximately 75% capacity.

STEP 2


C-00180-179 (set)

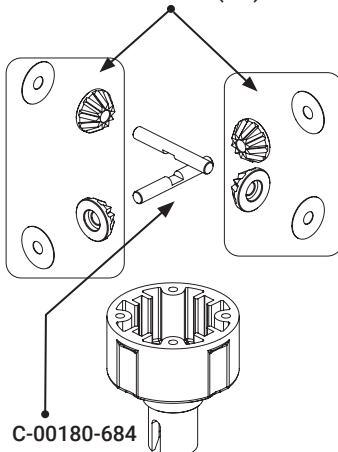

C-00180-684

STEP 3

C-00180-179 (set)

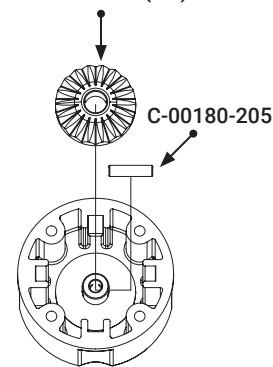

C-00180-205


STEP 4



Coat all components with diff oil prior to reassembly.
C-00180-182

C-00180-090-2

C-00180-154-3

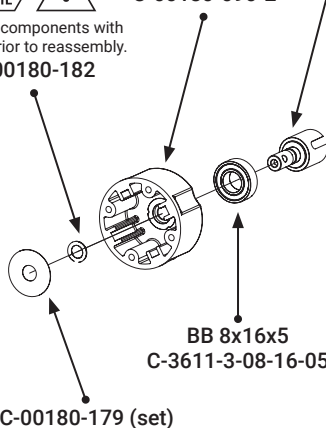


BB 8x16x5
C-3611-3-08-16-05

C-00180-179 (set)

STEP 5

C-00180-179 (set)

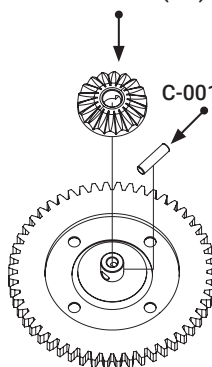

C-00180-205


STEP 6



Coat all components with diff oil prior to reassembly.
C-00180-182

BB 8x16x5
C-3611-3-08-16-05

C-00180-154-3

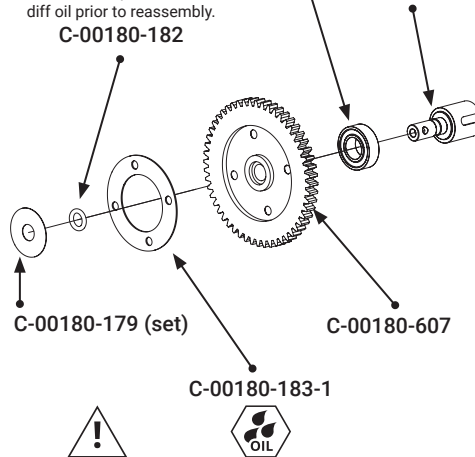

C-00180-179 (set)

C-00180-607

C-00180-183-1

Coat all components with diff oil prior to reassembly.