


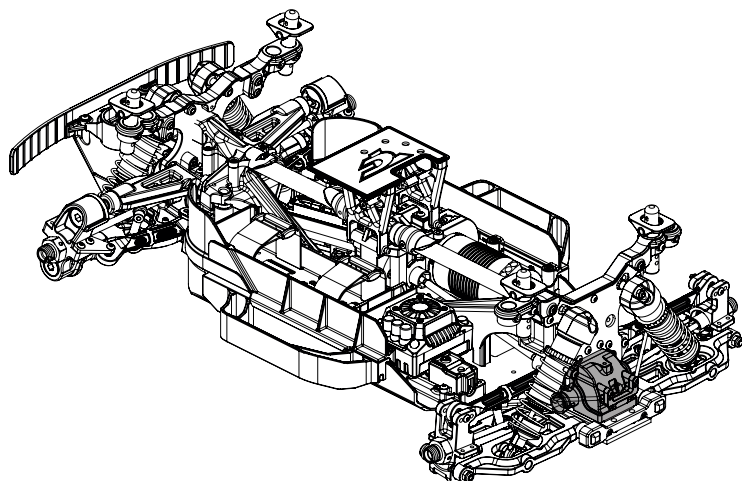

Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- Lithium Grease 
- Thread-locker 

Finish Before:


- Rear Bumper Skid Plate

Important Notice:

Wing is not shown for clarity.

STEP 1

Set Screw M3x3
C-3004-30-03

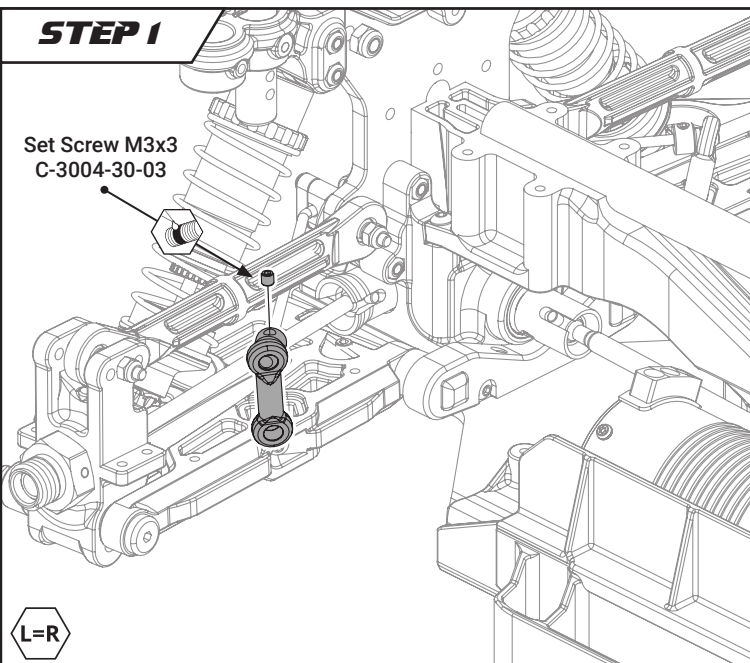


STEP 2

C-00180-907 (set)

C-00180-873

BH M3x16
C-3003-30-16

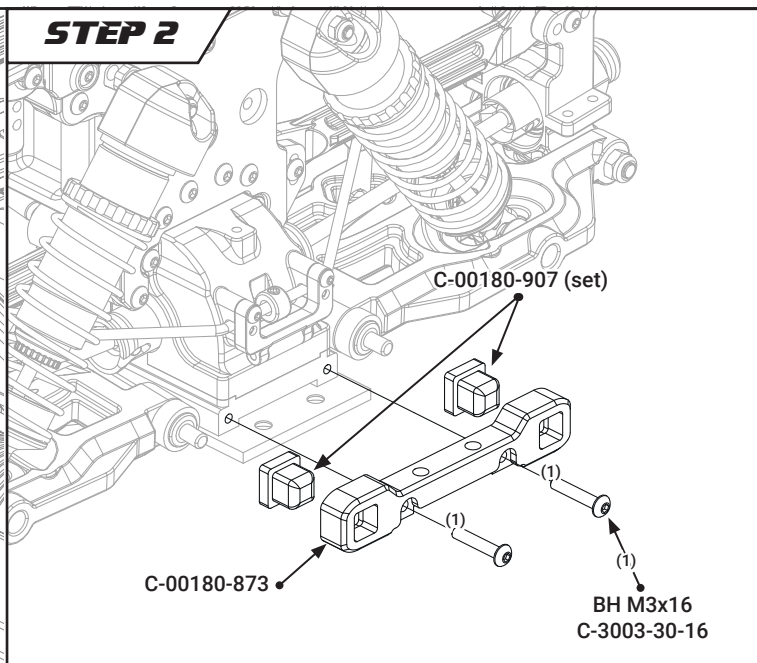

STEP 3

BH M3x10
C-3003-30-10

C-00180-1222

