
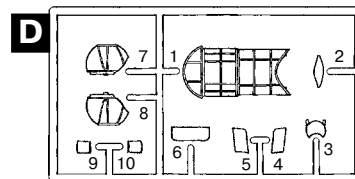
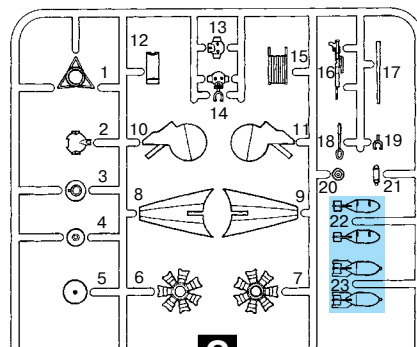
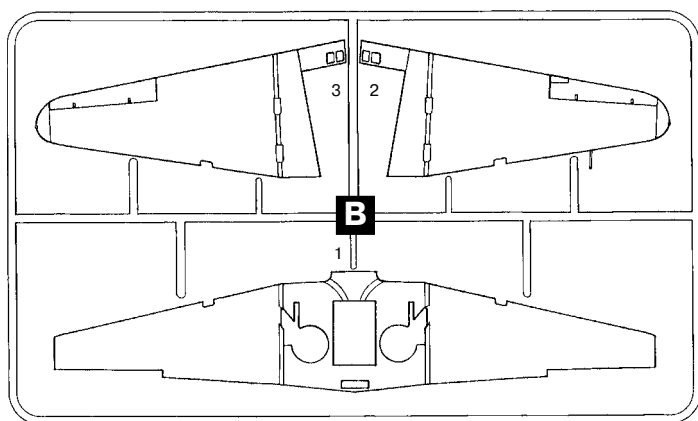


Су-2Р
Советский самолет-разведчик
II Мировой войны

№ 72082

1:72

Su-2R
WWII Soviet
Reconnaissance plane

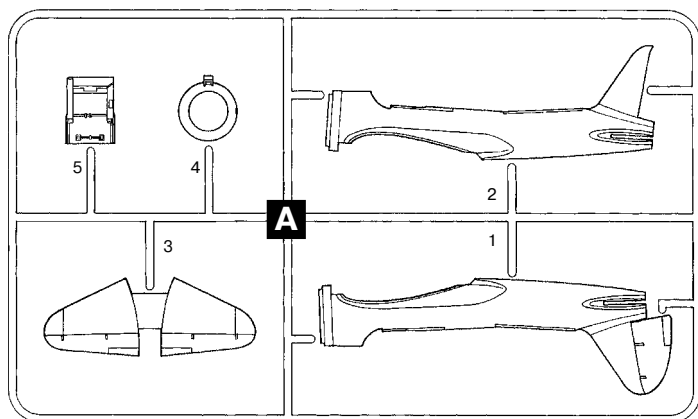

НЕ КЛЕИТЬ
DO NOT CEMENT



СДЕЛАТЬ 2 ДЕТАЛИ
MAKE 2 PCS




УДАЛИТЬ
REMOVE



ПРОИЗВОЛЬНЫЙ ВЫБОР
OPTIONAL






ПРИ СБОРКЕ НЕ
ИСПОЛЬЗУЕТСЯ
PARTS NOT FOR USE

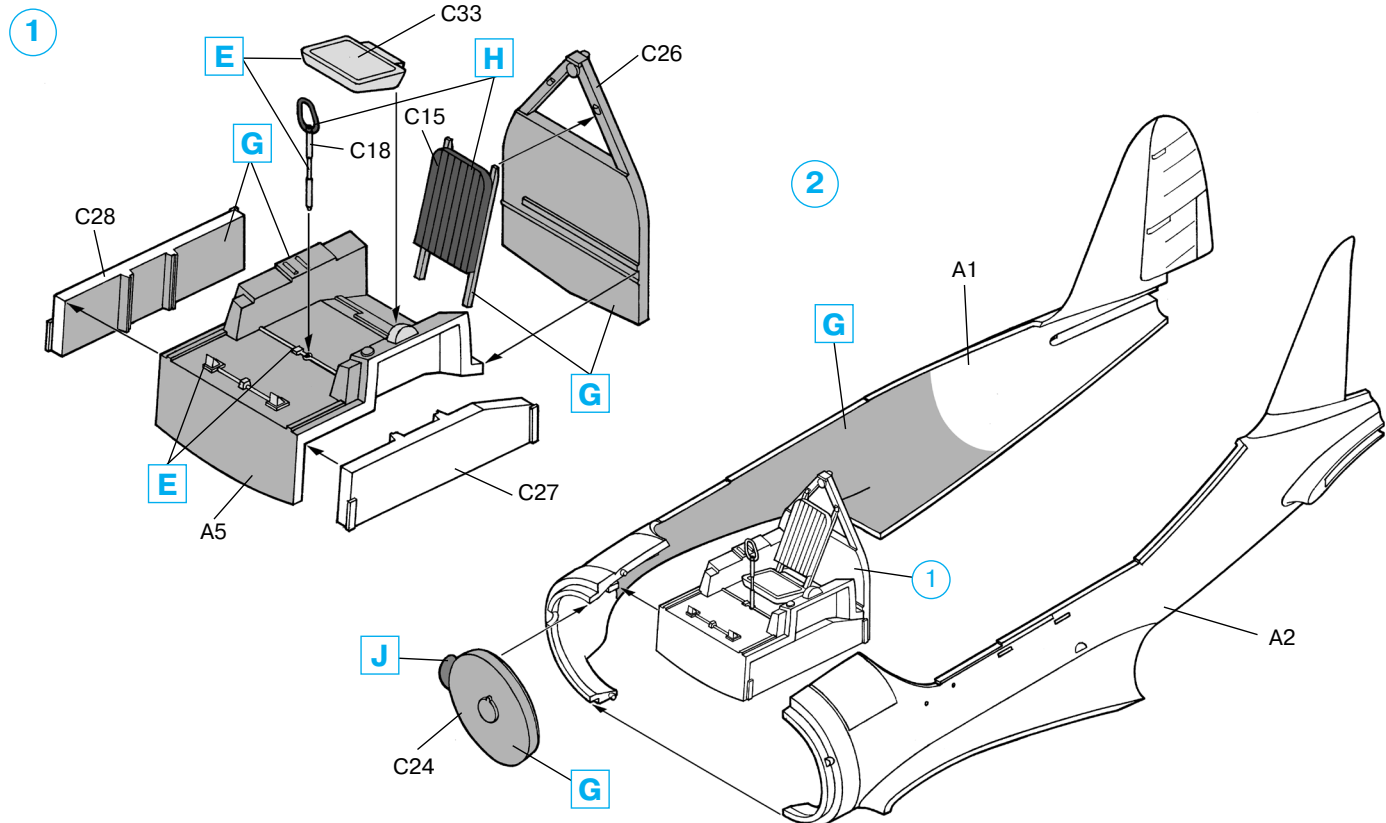

This diagram illustrates the assembly of the fuselage. Key components and their assembly order are indicated by labels and numbers:

- 2**: A blue circle with the number 2, indicating the second step in the assembly process.
- B1**: The main fuselage section.
- B2**: The tail section.
- B3**: A component at the front of the fuselage.
- C40**: A component at the rear of the fuselage.
- C41**: A component near the front of the fuselage.
- D4**, **D5**, **D6**: Components located in the middle section of the fuselage.
- G**: A blue square with the letter G, indicating a specific assembly point or step.
- C6**: A component at the very front of the fuselage.

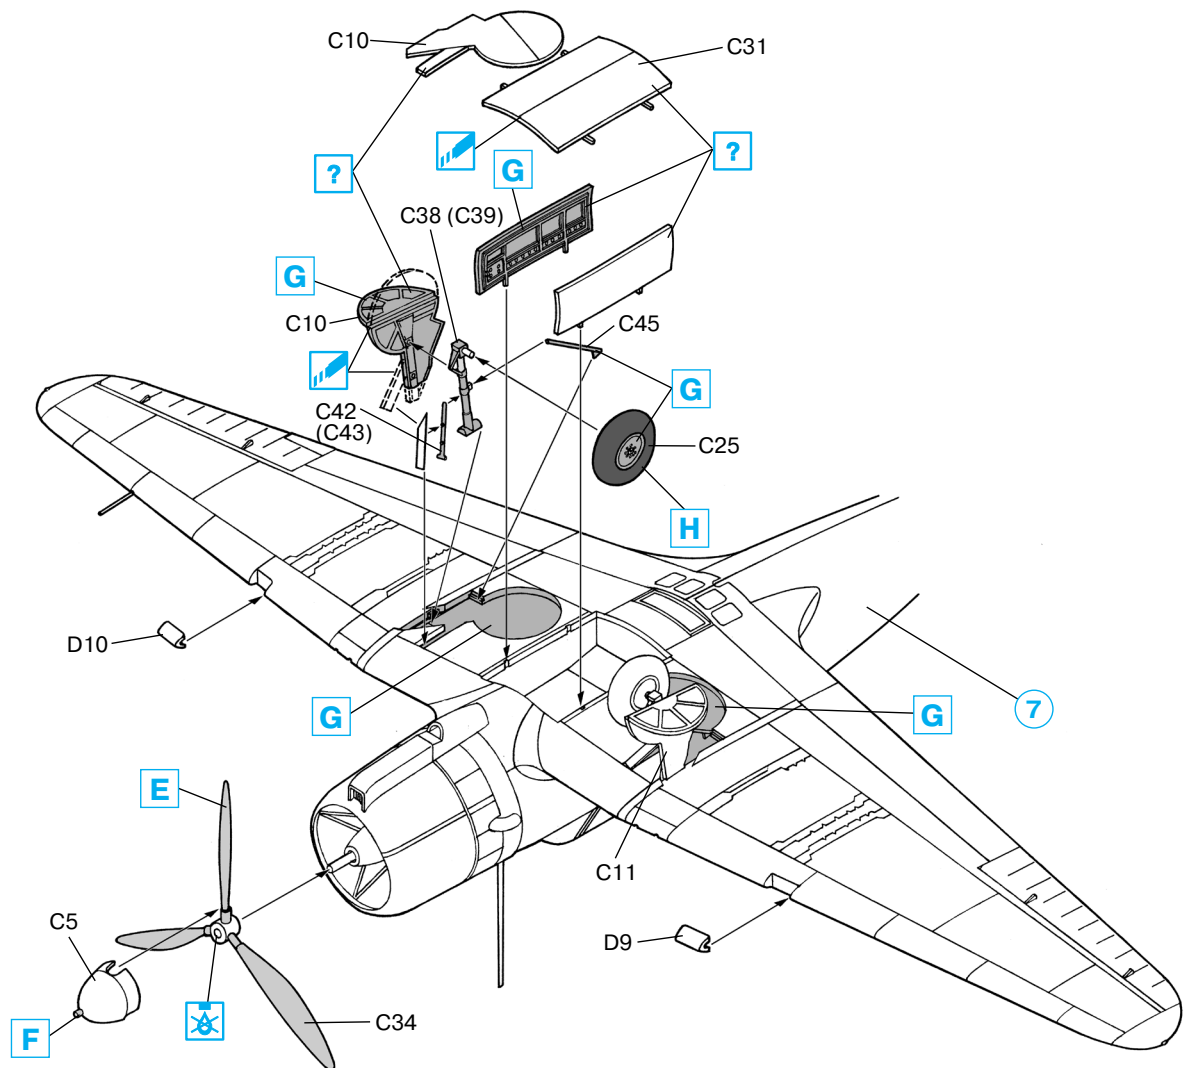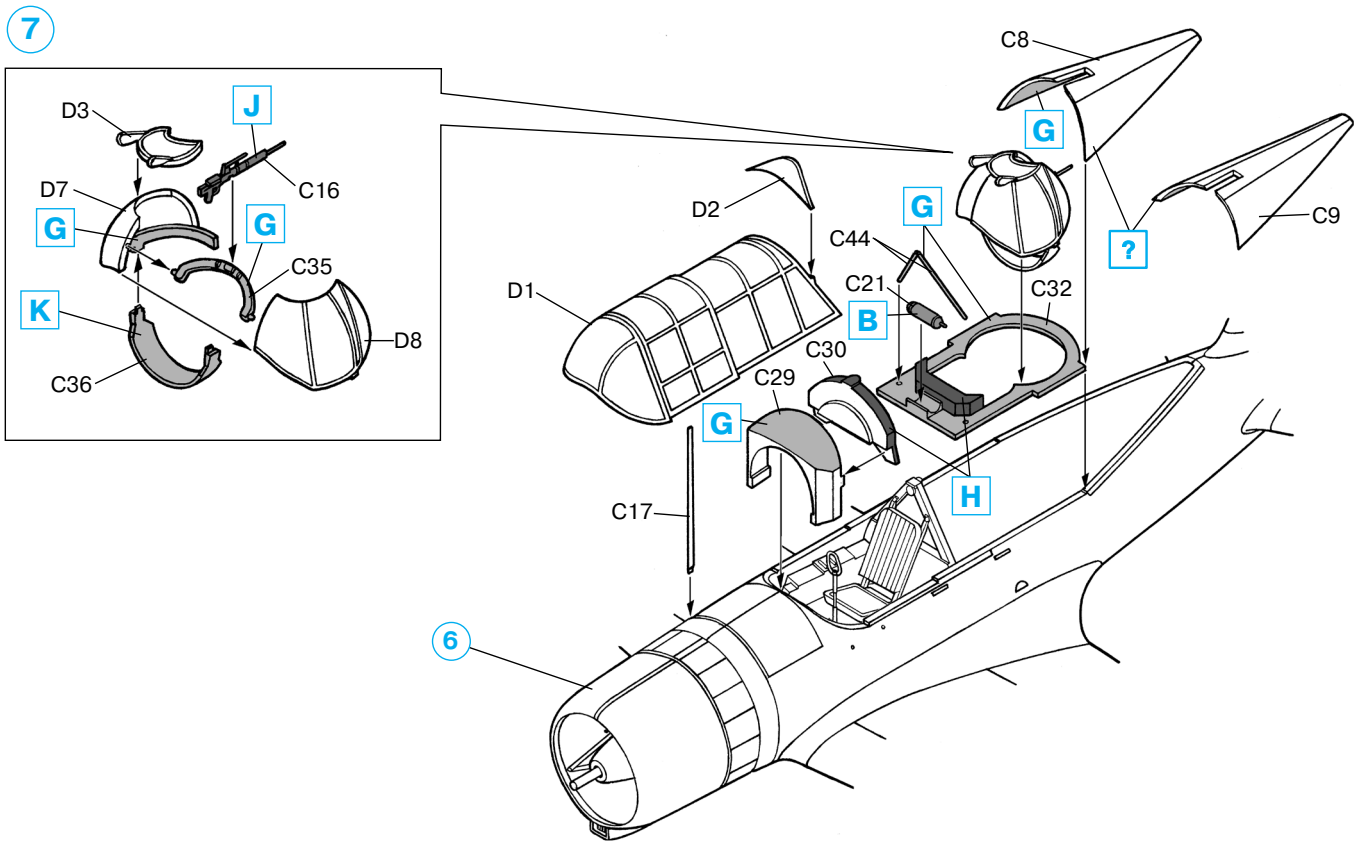

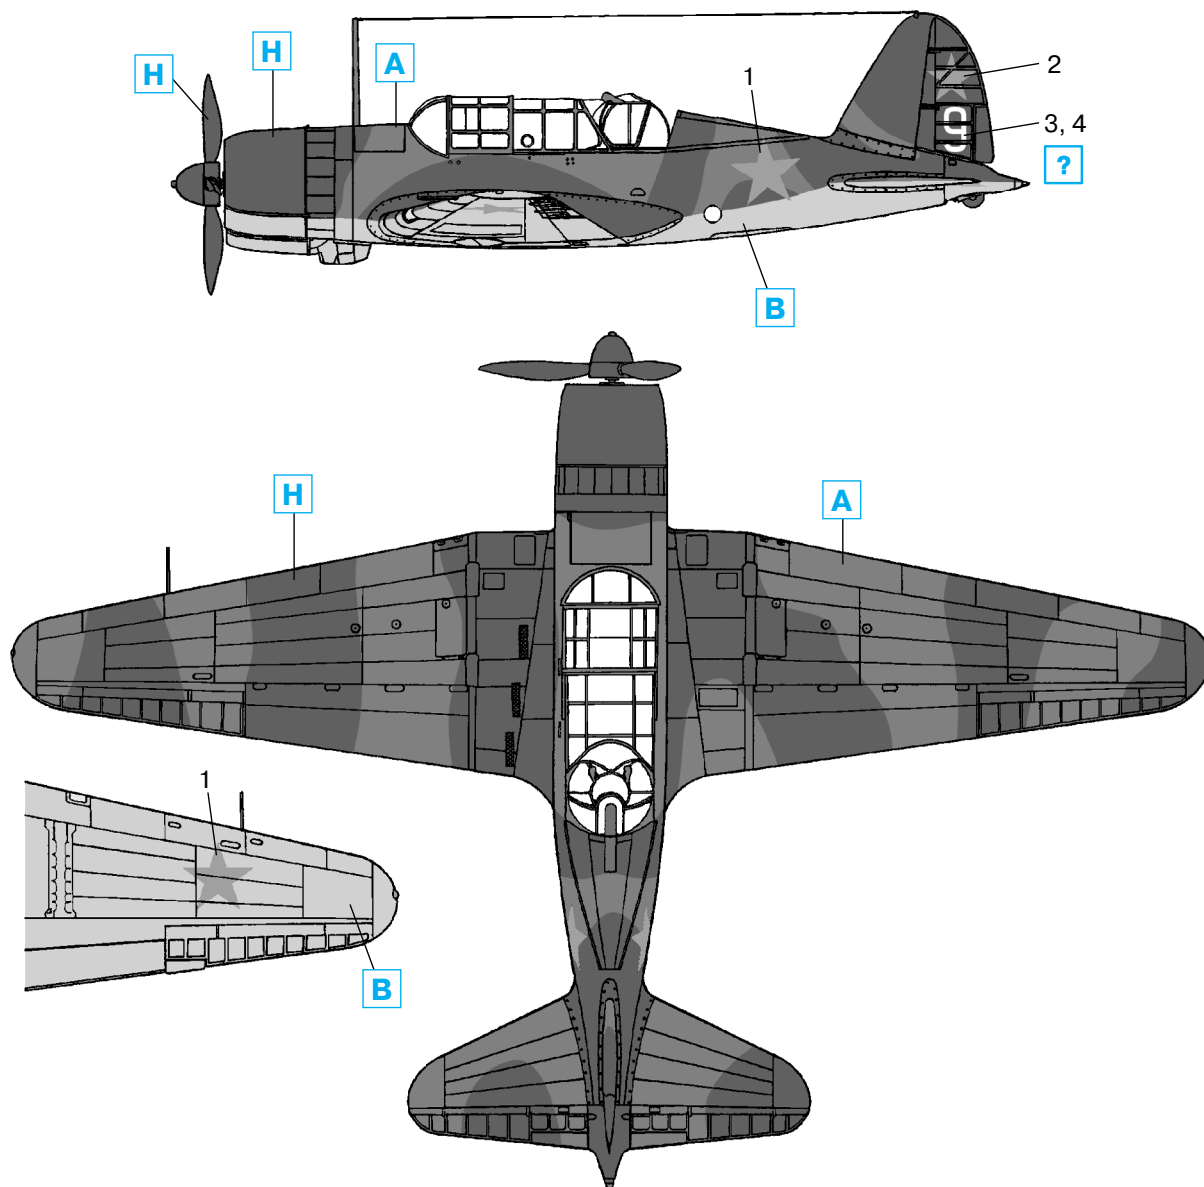

Су-2Р, 9-я ДРАЭ (дальнеразведывательная эскадрилья), октябрь 1941 г.
Su-2R, 9th DRAE (Long-Range Reconnaissance Squadron), October 1941.

	Model Master				Model Master		
A	1712	Зелёный, матовый	Field Green	G	1728	Светло-серый, матовый	Light Ghost Gray
B	1562	Голубой, матовый	Flat Light Blue	H	1749	Черный, матовый	Flat Black
C	1705	Красный, матовый	Insignia Red	J	1795	Тёмный металл	Gun Metal
D	1768	Белый, матовый	Flat White	K	1716	Серо-зелёный, матовый	Pale Green
E	1761	Алюминий	Aluminium	L	1720	Серо-голубой, матовый	Intermediate Blue
F	1780	Сталь	Steel				

ВНИМАНИЕ!

Работать с клеем и красками в проветриваемом помещении и не допускать открытого огня. Для сборки модели рекомендуется применять полистирольный клей ПС или его зарубежные аналоги. Отделяя детали от литников, используйте модельный нож для зачистки.

Метод нанесения аппликаций

Чистым ножом или ножницами аккуратно вырежьте необходимую аппликацию.

Вырезанную аппликацию погрузите в теплую воду на 20 секунд. Приложив аппликацию к необходимому месту, аккуратно удалите подложку.

Марлевым тампоном удалите пузырьки воздуха и слегка прижмите аппликацию.

После высыхания аппликаций влажным тампоном удалите остатки клея вокруг них.

CAUTION!

When you use glue or paint, do not use near open flame, and use in well ventilated room.

Glue and paint are not included.

When you take parts off from the runner frame, use a modeling scissors and trim excess plastic with a cutter or a file.

Correct Method for Applying Decals

Clean model surface with wet cloth.

Cut each design out of decal sheet and dip them in warm water for 20 seconds.

Check with finger tip if design is loose on base paper. If so, place it on proper position on model and slide off base paper leaving design on model.

Move design to exact position with wet finger tip, and push out excess water and air bubbles under decal with soft cotton cloth.

When decals get dry, wipe off with wet cloth excess glue left around decals.

ООО ICM Холдинг
ул. Бориспольская 9, строение 64,
02099, Киев, Украина
Тел./факс: +38(044) 369 54 12
E-mail: export@icm.com.ua



ICM Holding
Borispolskaya, 9, build. 64,
02099, Kiev, Ukraine
Tel./Fax: +38(044) 369 54 12
E-mail: export@icm.com.ua