


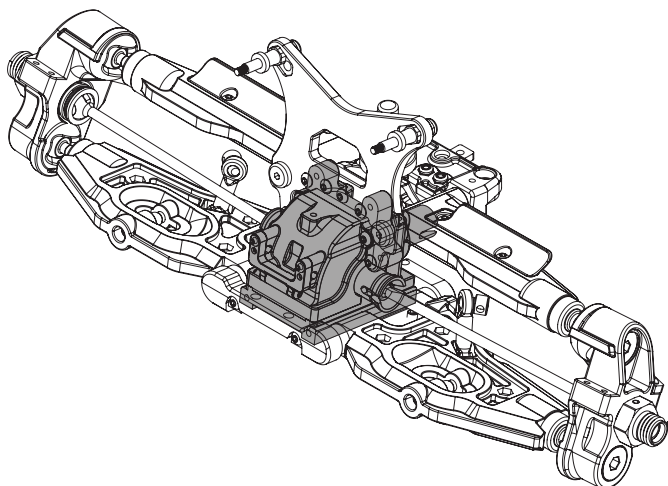

Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 
- Lithium Grease 

Finish Before:


- Front Suspension Assembly
- Front Anti-Roll Bar (Step 1 and 2)
- Front And Rear Shocks (Step 1)



VIDEO MANUAL
ON YOUTUBE

STEP 1

BH M3x12
C-3003-30-12

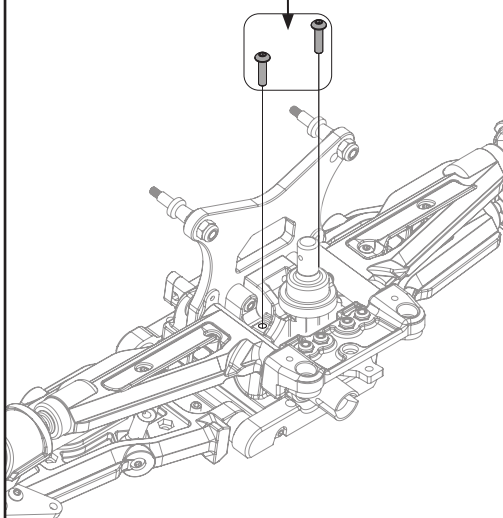


STEP 2

M3 Locknut
C-3101-30-6


BH M3x16
C-3003-30-16

BH M3x14
C-3003-30-14

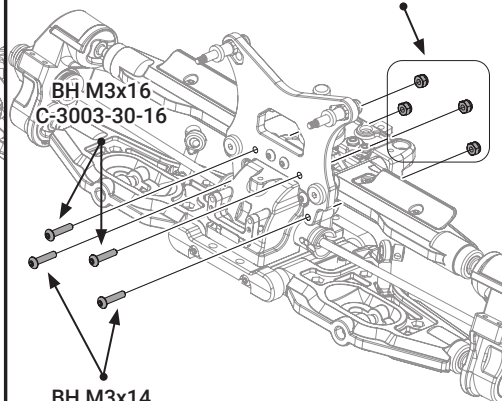

STEP 3


BH M3x16
C-3003-30-16

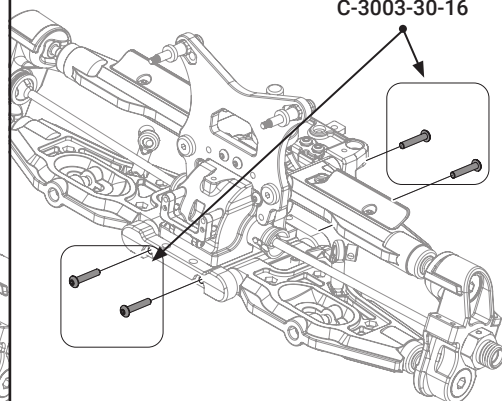

STEP 4

BH M3x10
C-3003-30-10

! Remove first

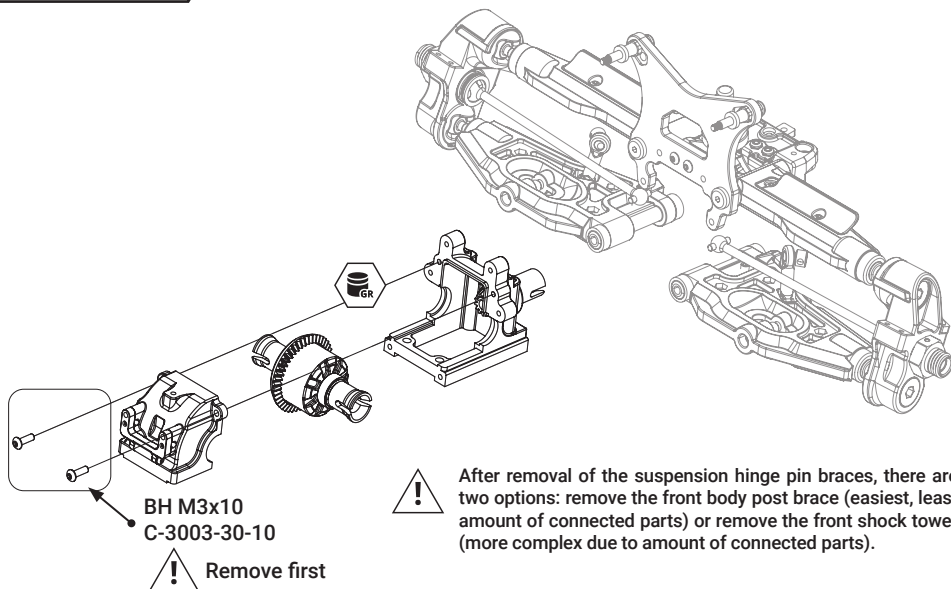

STEP 5

BB 8x16x5
C-3611-3-08-16-05

Set Screw M5x5
C-3004-50-05

C-00180-033 (set)

C-00180-155-X

C-00180-156

