


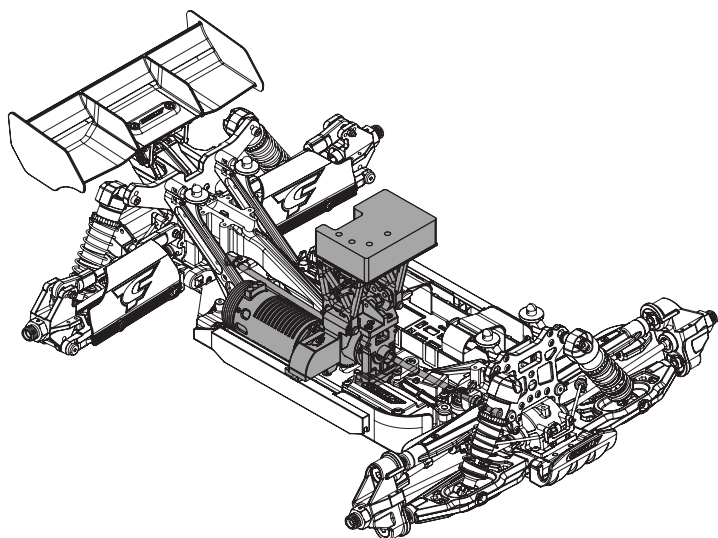

Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- 3.0 Hex Driver
- Thread-locker 


Finish Before:

- Tube Braces - Tubes (Step 1 and 2)

STEP 1

BH M3x10
C-3003-30-10

BH M3x35
C-3003-30-35

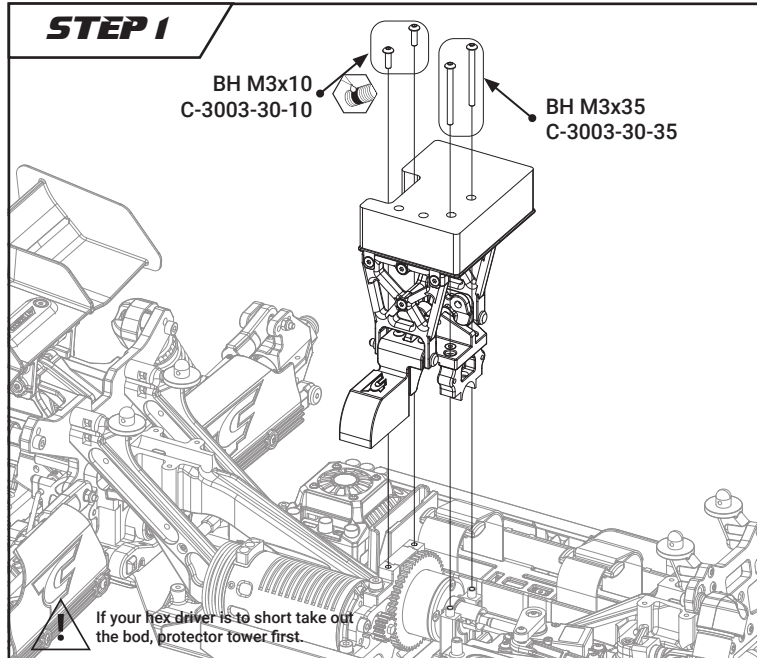


STEP 2

C-00180-954

C-00180-023

C-00180-963

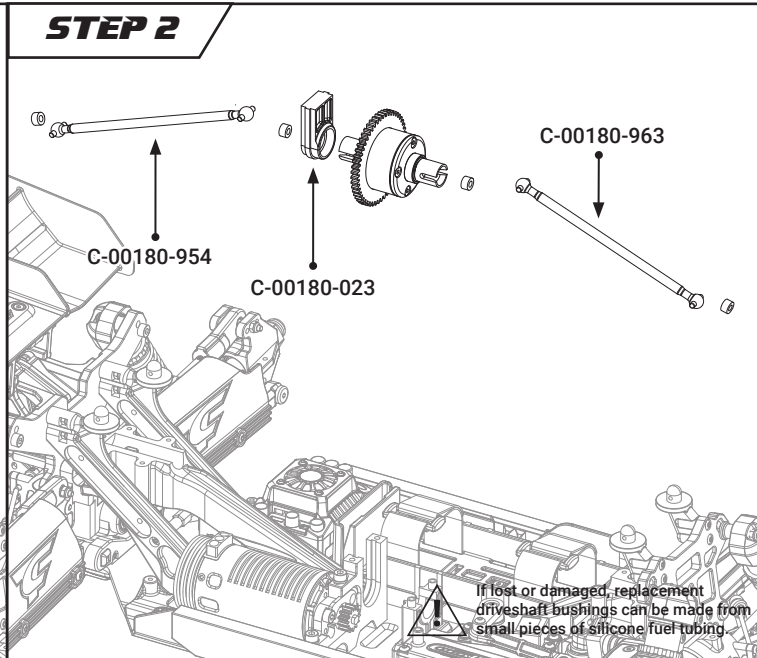

STEP 3

C-00180-305 (set)

BH M3x8
C-3003-30-08


C-00180-640

BH M3x6
C-3003-30-06

C-00180-305 (set)

C-00180-018 (set)

C-00180-722

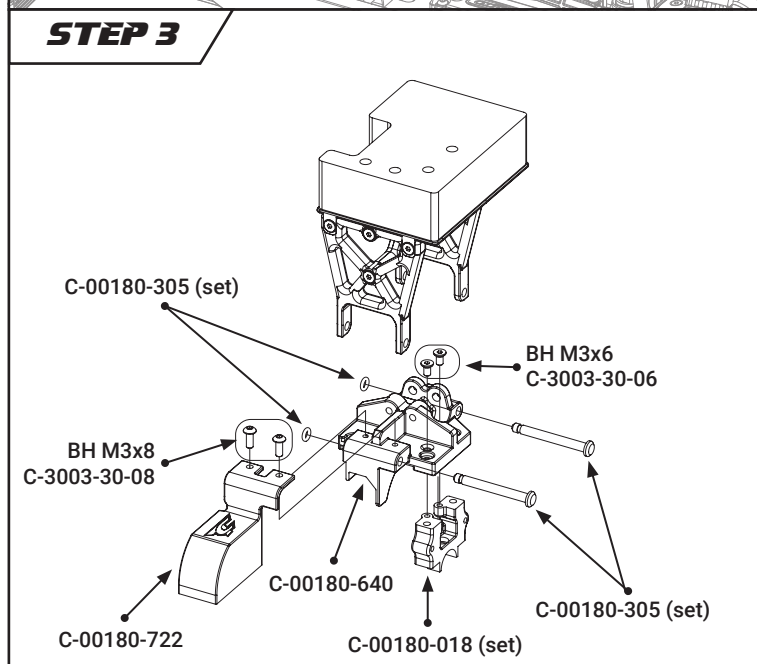

STEP 4

M4 FH Washer
C-3201-40

SH M4x14
C-3001-40-14

C-00180-605-B

C-00180-018 (set)

C-00180-562

FH M4x12
C-3002-40-12

FH M4x16
C-3002-40-16

