


Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- Theradlock 


Required Parts:

- 2X - C-00230-0053 Anti Roll Bar - Ø1,8mm
- 2X - C-00230-0055 Tie Rod - ARB - Front
- 2X - C-00230-0054 Tie Rod - ARB - Rear
- 4X - C-00180-220 Anti Roll Bar Ball Joint Ø6
- 4X - C-00180-149 Balls Joint Ø6
- 4X - C-3004-30-03 Set Screw M3x3
- 4X - C-3003-30-14 BH M3x14

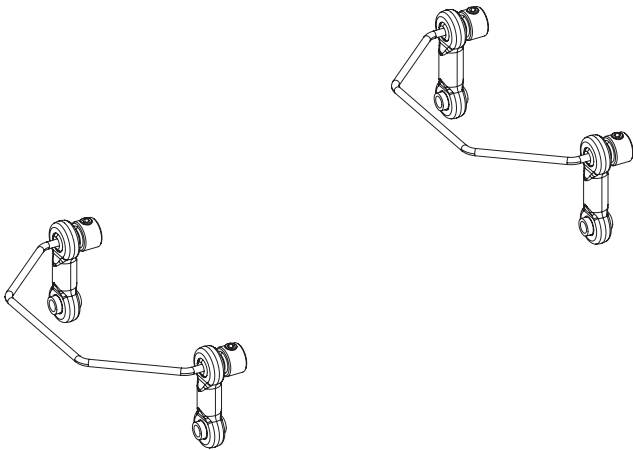


FRONT ROLL BAR


STEP 1

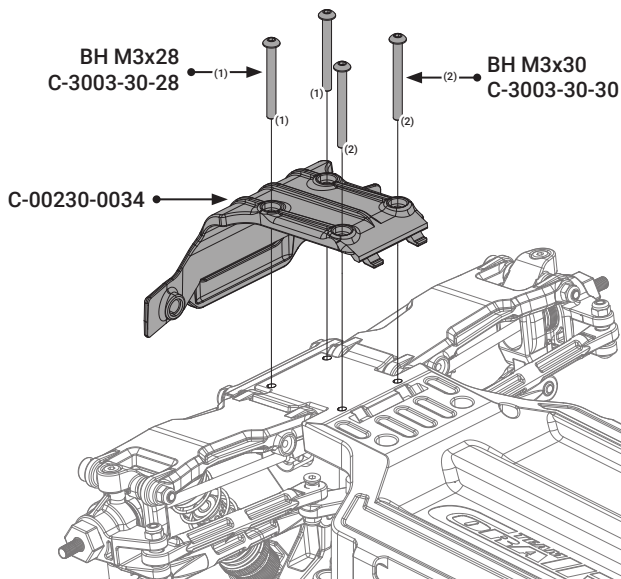


STEP 2

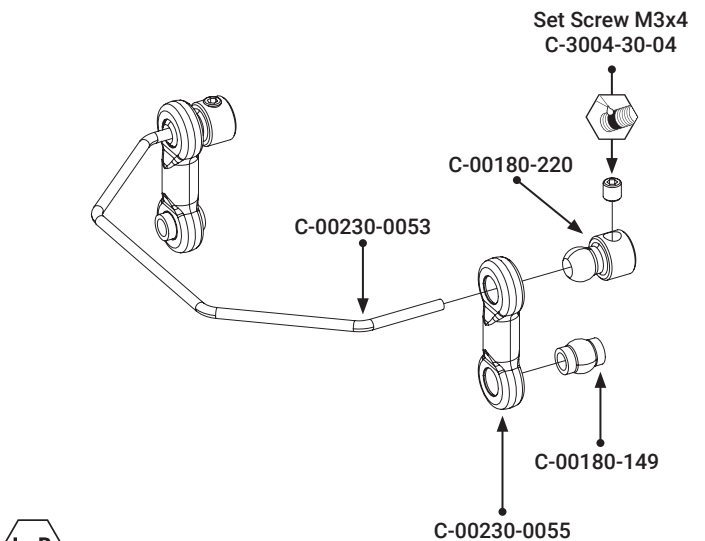

STEP 3

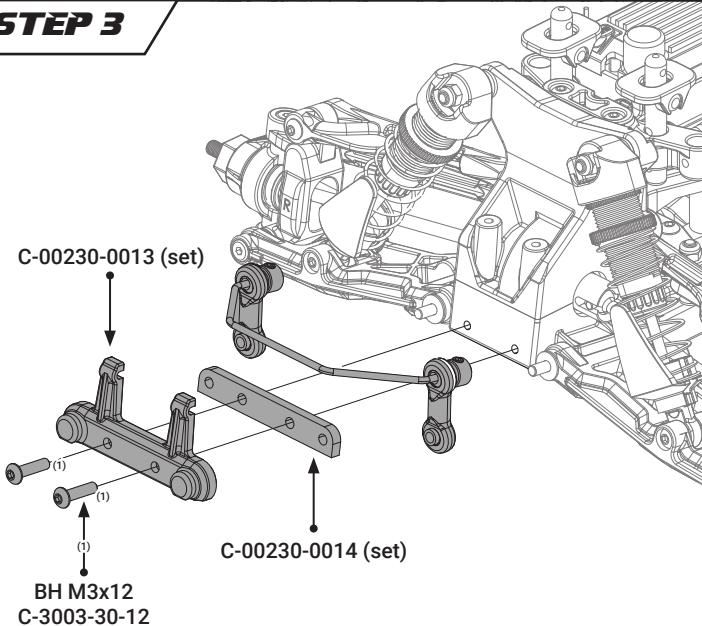


STEP 4

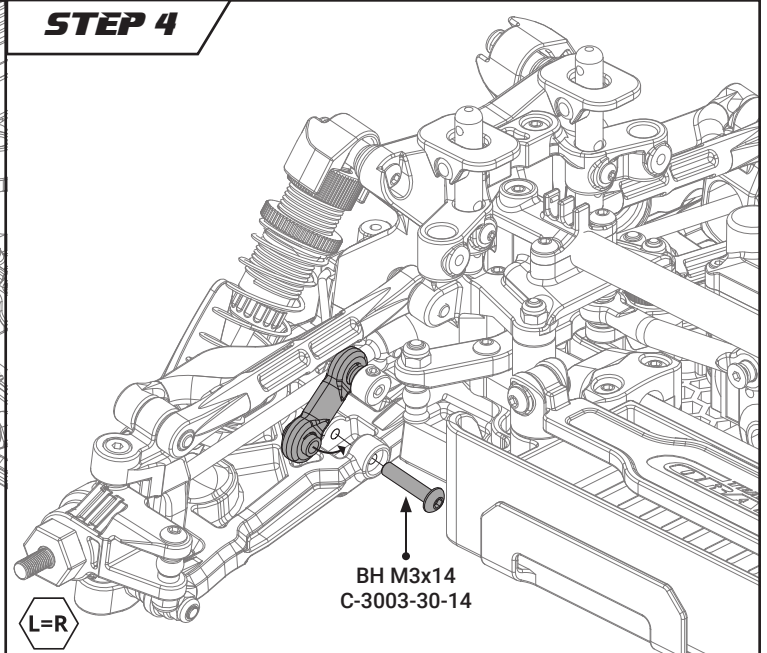


REAR ROLL BAR


STEP 1

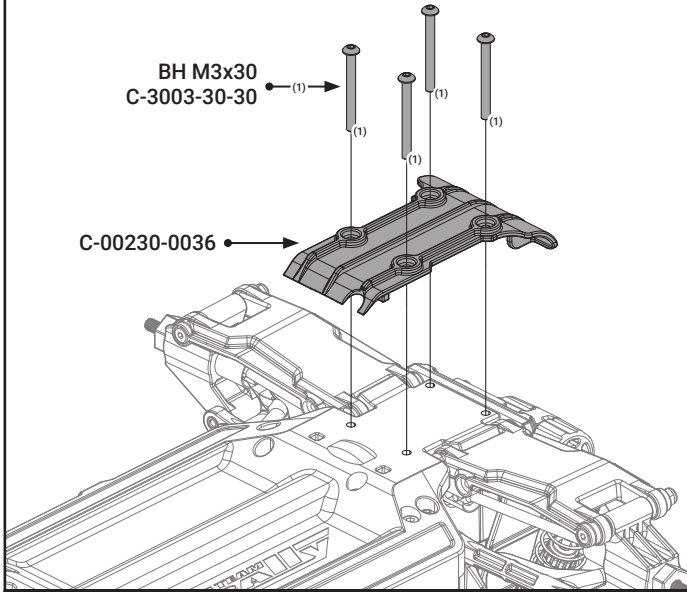

STEP 2

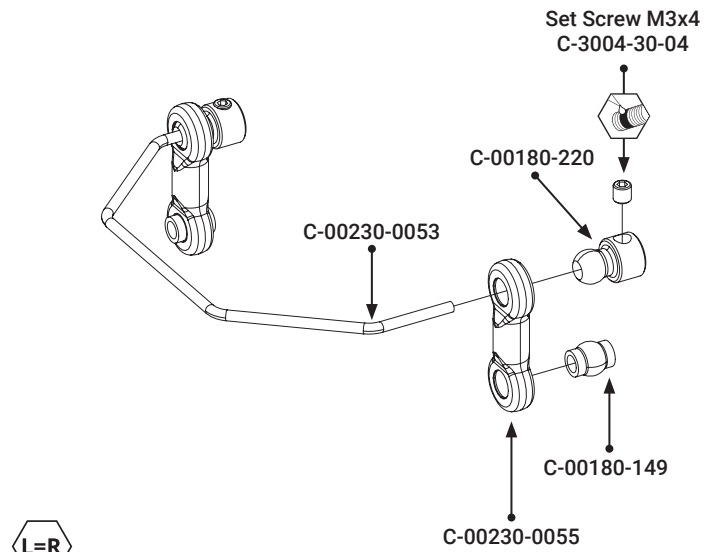

STEP 3

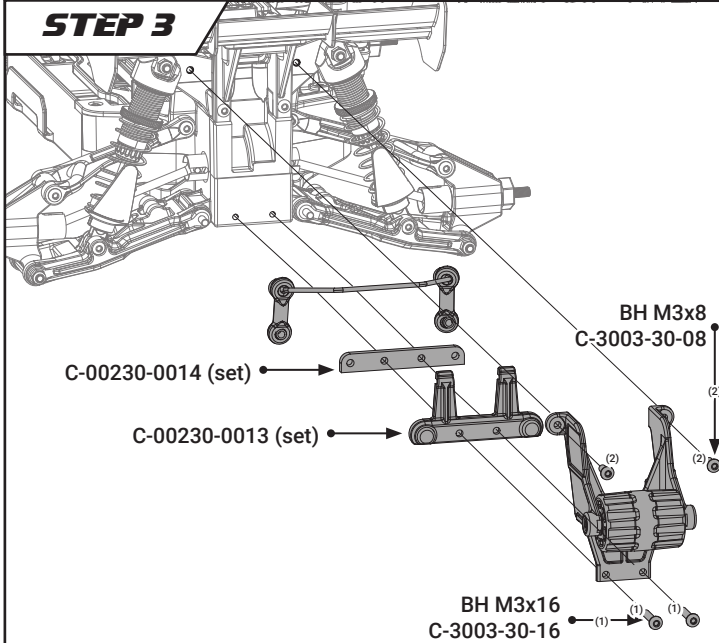

STEP 4

