



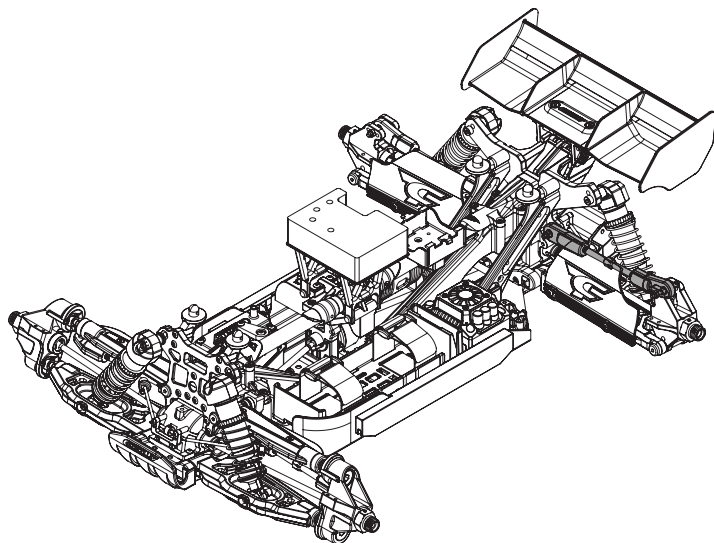


Required Tools:

- 2.0 Hex Driver
- Hex Cross Wrench and optionally 5.0 Nutdriver
- Shock Pliers
- 7 mm Flat Wrench

STEP 1

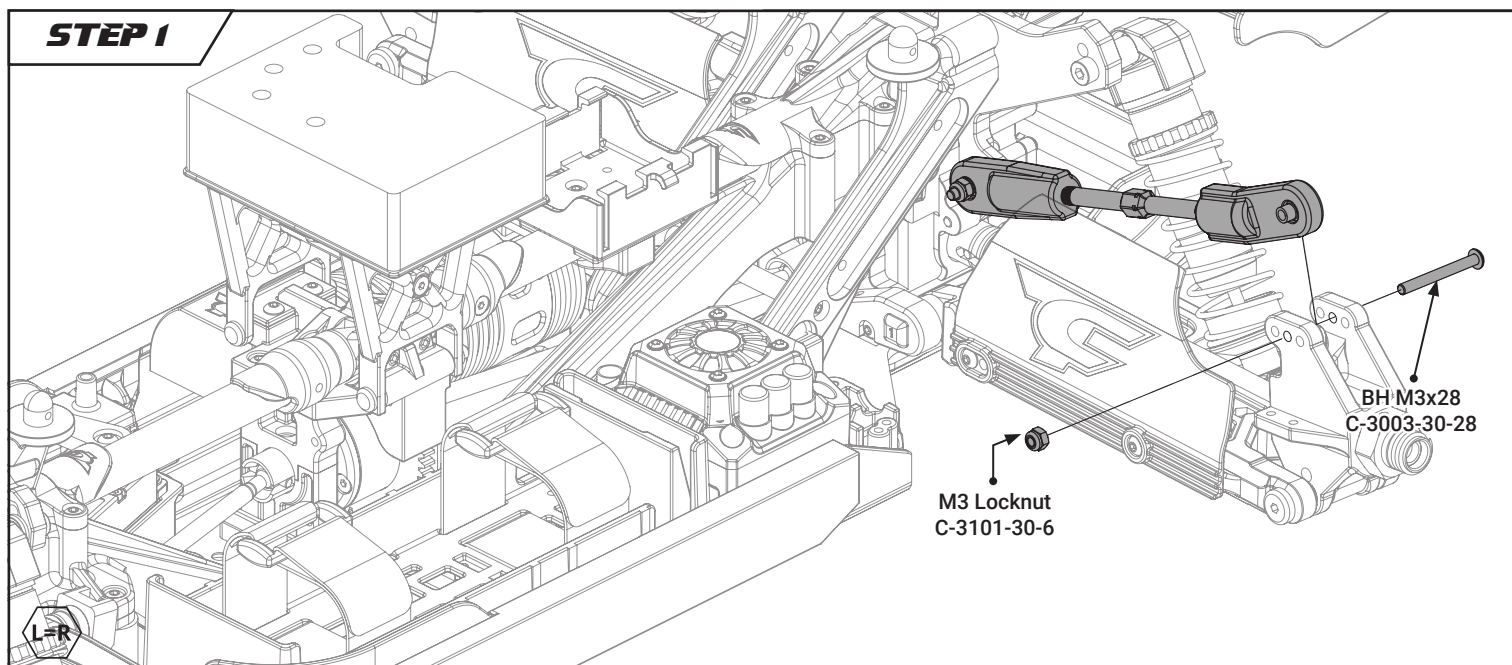

STEP 2

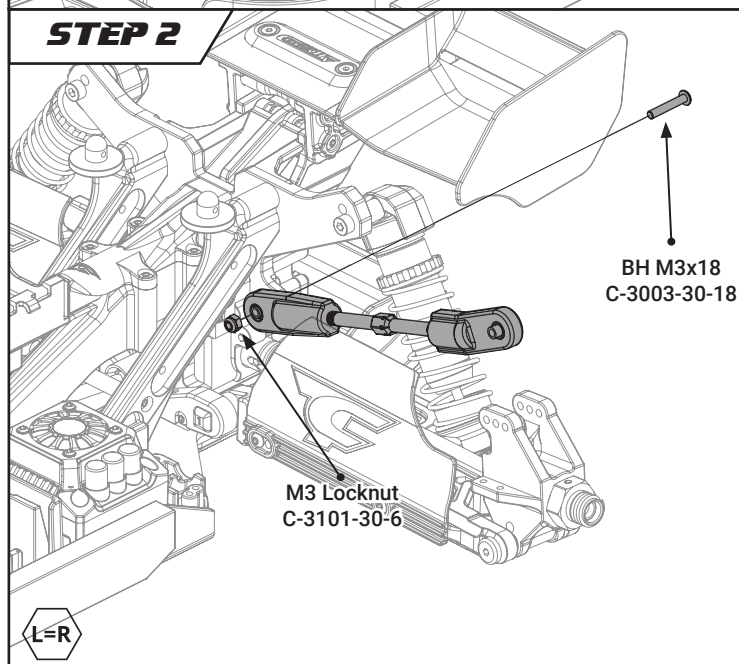

STEP 3

