


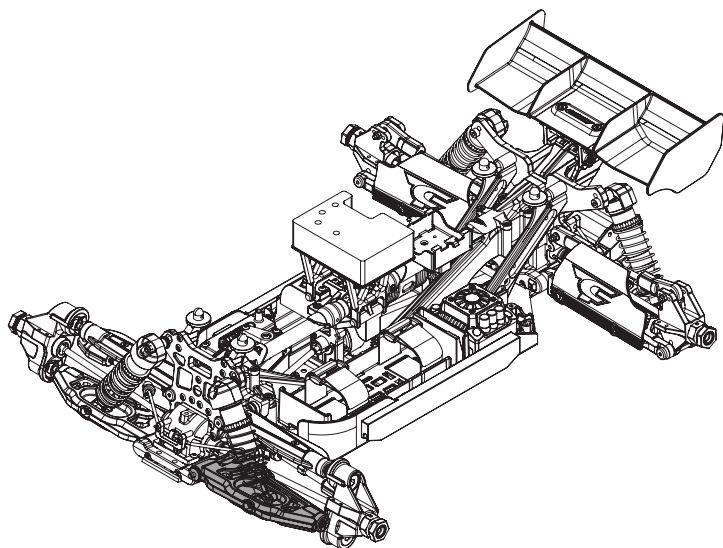

Required Tools:


- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 

Finish Before:

- Rear Skid Plate

STEP 1

BH M3x10
C-3003-30-10

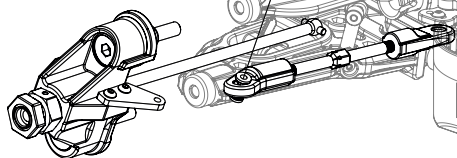

L=R

STEP 2

BH M3x16
C-3003-30-16

! Steering Link
is not shown for clarity.

Set Screw M3x3
C-3004-30-03

L=R


STEP 3

BH M3x22
C-3003-30-22

L=R

STEP 4

C-00180-874-BR

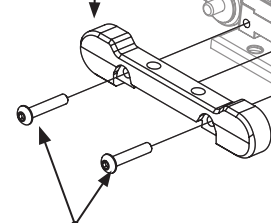

BH M3x14
C-3003-25-14

STEP 5

M4 Washer
C-3201-40

C-00180-322

L=R

STEP 6

Set Screw M4x8
C-3004-40-08

C-00180-531-BR

C-00180-527

C-00180-532-BR

L=R