


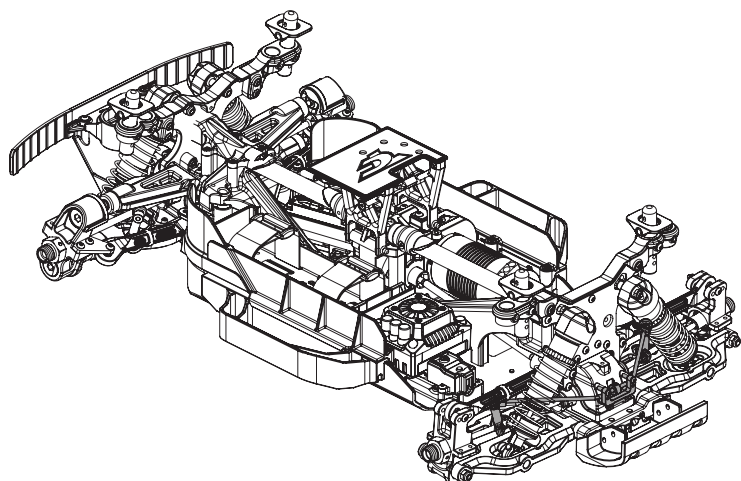

Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- Shock Pliers
- Pliers
- Thread-locker 

Finish before:

- Rear Bumper Skid Plate Step 1-3
(it's possible to disassemble the Rear Roll Bar without taking out the Rear Bumper, but, it's much more convenient to take it off.)

STEP 1

Set Screw M3x3
C-3004-30-03

L=R


! Rear Mud Guard is not shown for clarity.

STEP 2

BH M2.5x8
C-3003-25-08

STEP 3

C-00180-033 (set)

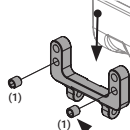

Set Screw M3x3
C-3004-30-03

BH M2.5x18
C-3003-25-18

STEP 4

BH M3x8
C-3003-30-08

L=R

STEP 5

C-00180-220

C-00180-149

L=R

C-00180-089

STEP 6

Set Screw M3x3
C-3004-30-03

C-00180-246

C-00180-231