


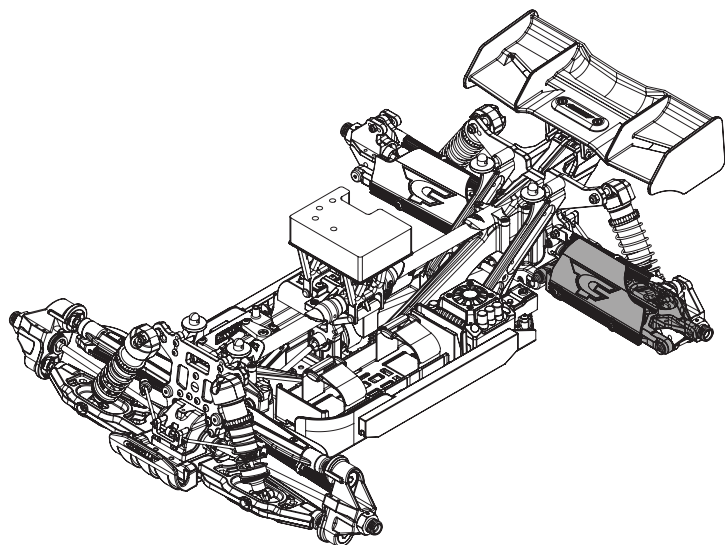

Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- 7.0 Hex Nutdriver
- Thread-locker 


Finish Before:

- Front Skid Plate


Important Notice:

Wing is not shown for clarity.


STEP 1

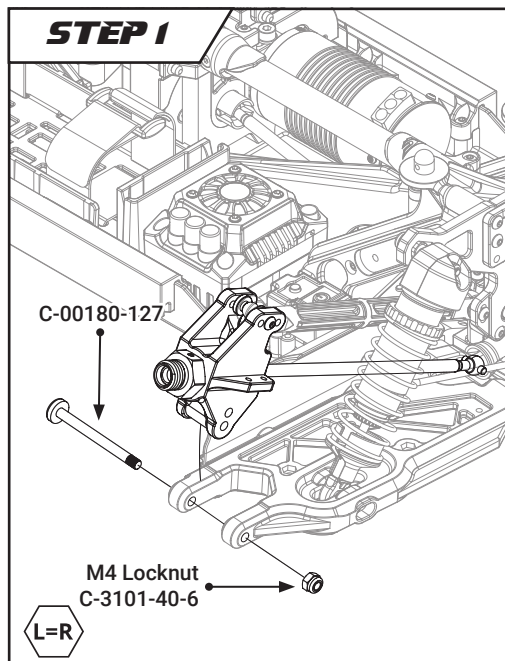


STEP 2

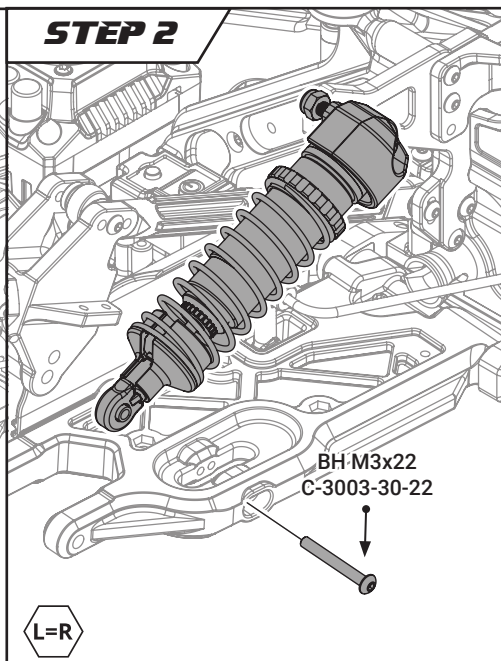


STEP 3

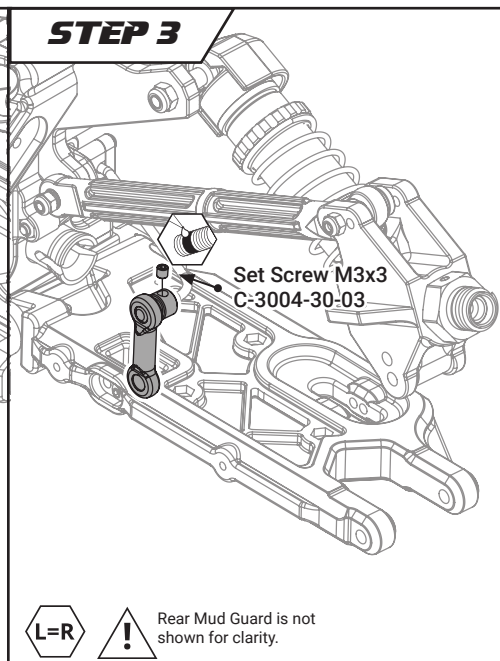

STEP 4

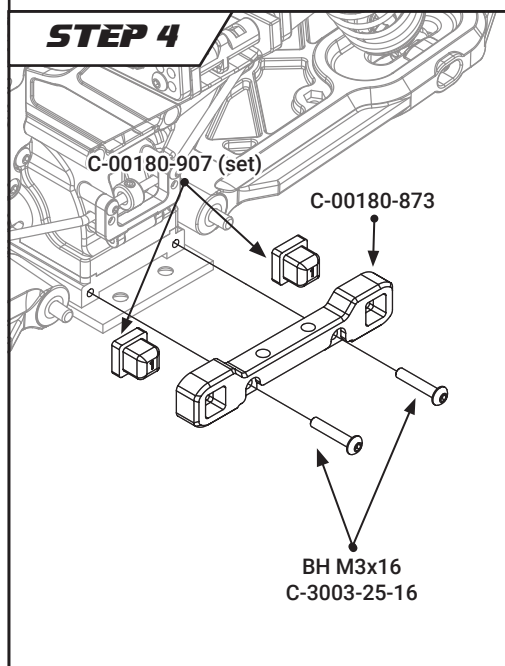

STEP 5

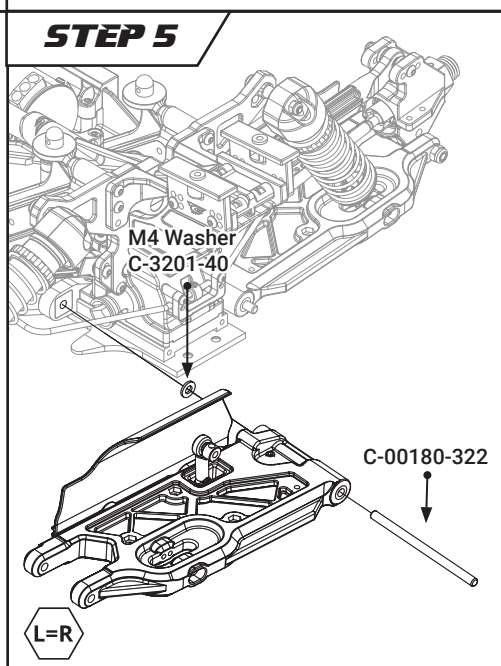

STEP 6

