


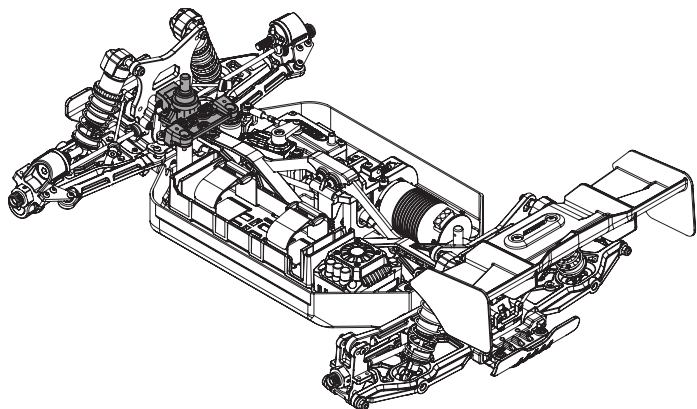

Required Tools:

- 2.0 Hex Driver
- Thread-locker 


Finish Before:

- Front Upper Suspension Arm




VIDEO MANUAL
ON YOUTUBE

STEP 1

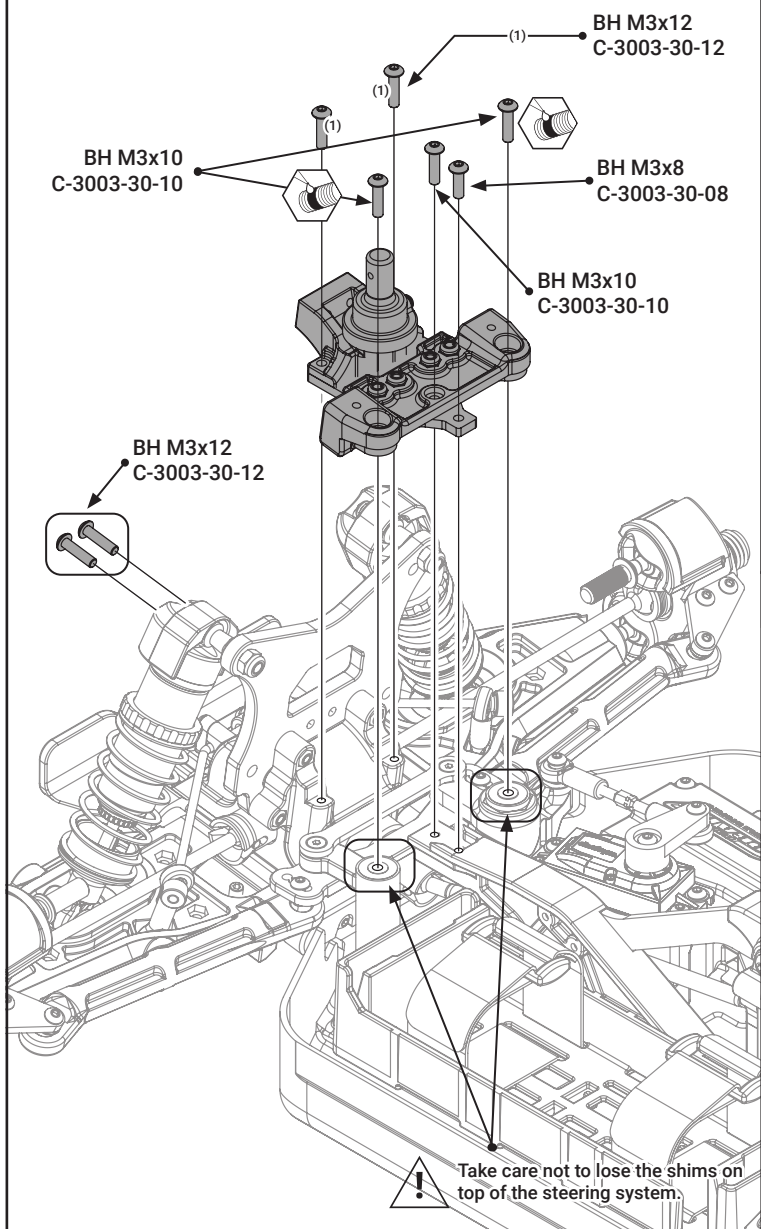

STEP 2

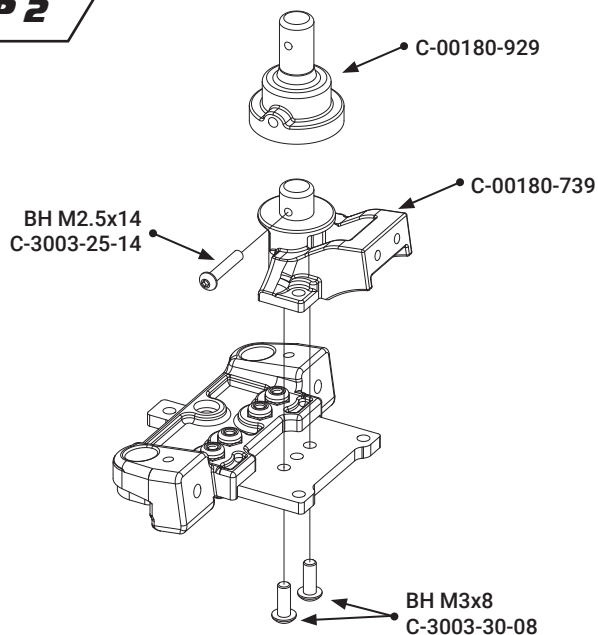

STEP 3

