


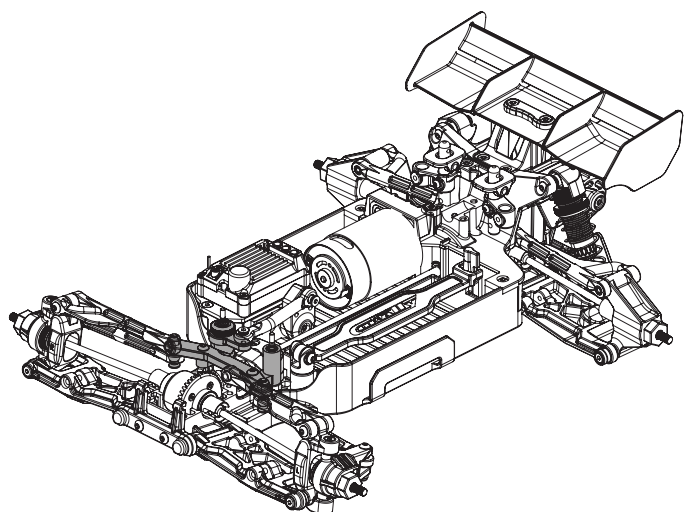

Required Tools:

- 2.0 Hex Driver
- 5.5 Nut Driver


Finish Before:

- Front Tower Diff Removal (Step 1-5)

STEP 1


Washer 3x5x0.3
C-00230-0147

FH M3x12
C-3002-30-12

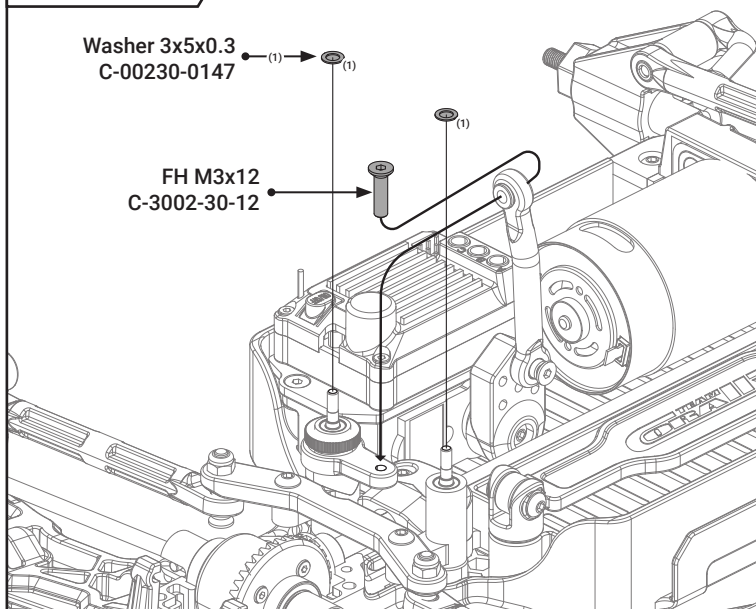

STEP 2

M3 Locknut
C-3101-30-6

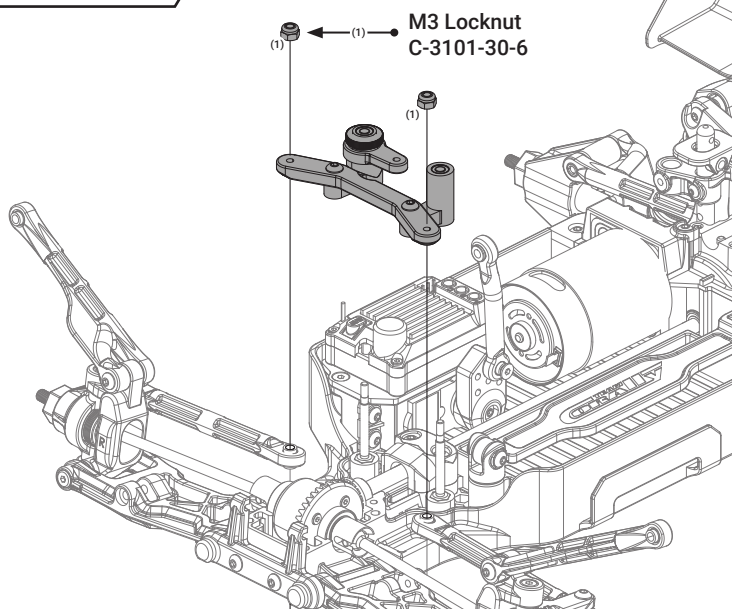


STEP 3

BH M3x10
C-3003-30-10

C-00230-0017 (set)

C-3611-3-04-07-25

C-00230-0017 (set)

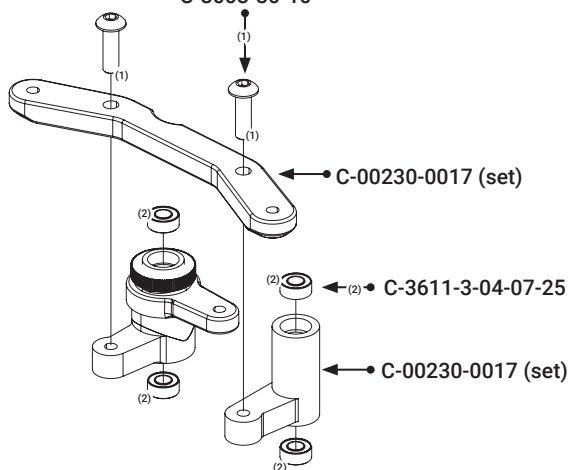

STEP 4

C-00230-0102 (set)

C-00230-0102 (set)

C-00230-0017 (set)

C-00230-0017 (set)

C-00230-0102 (set)

