
RIGHT AND LEFT CHASSIS GUARD

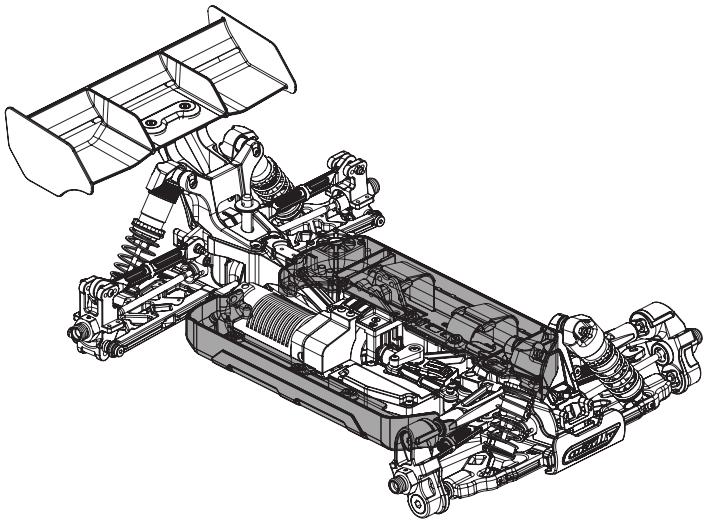


Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker


Finish Before:

- Center Braces

STEP 1

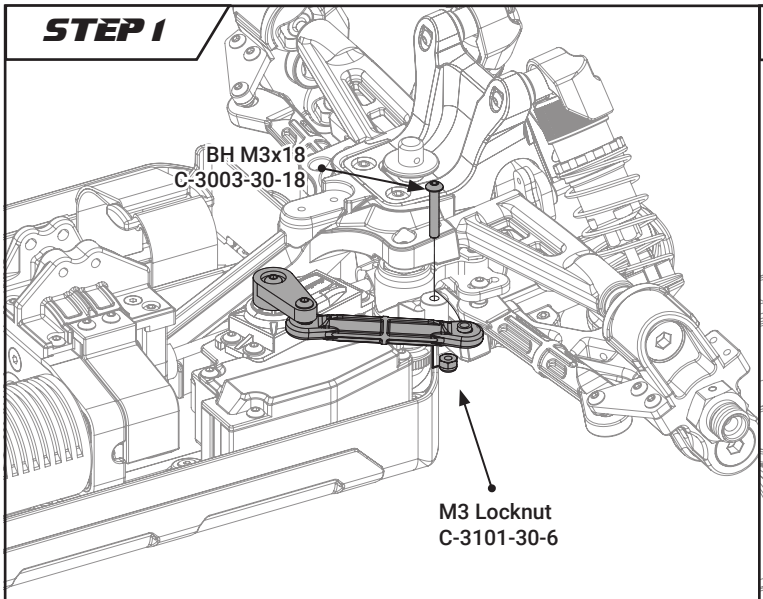


STEP 2

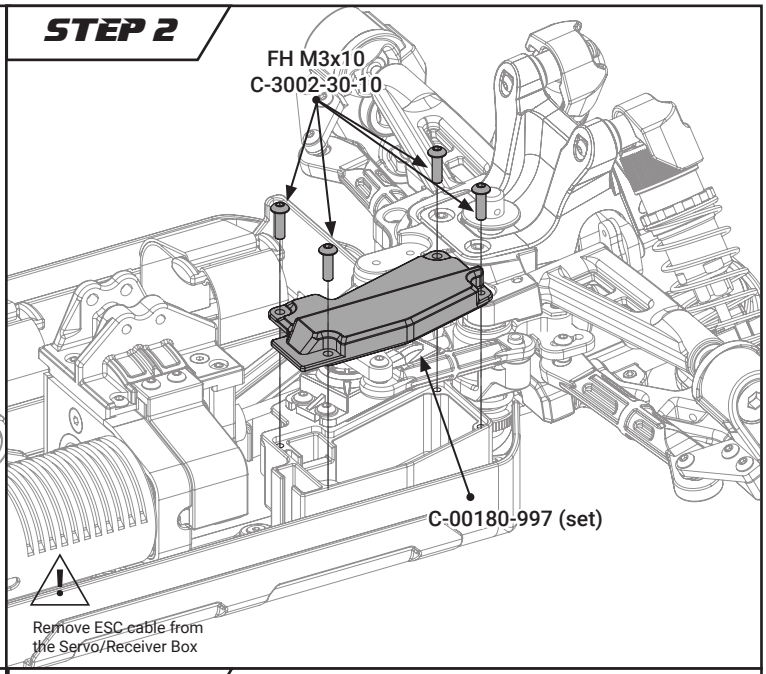

Remove ESC cable from the Servo/Receiver Box

STEP 3

(1)	FH M3x10	C-3002-30-10
(2)	FH M3x18	C-3002-30-18
(3)	FH M4x08	C-3002-40-08
(4)	FH M4x12	C-3002-40-12
(5)	FH M4x16	C-3002-40-16

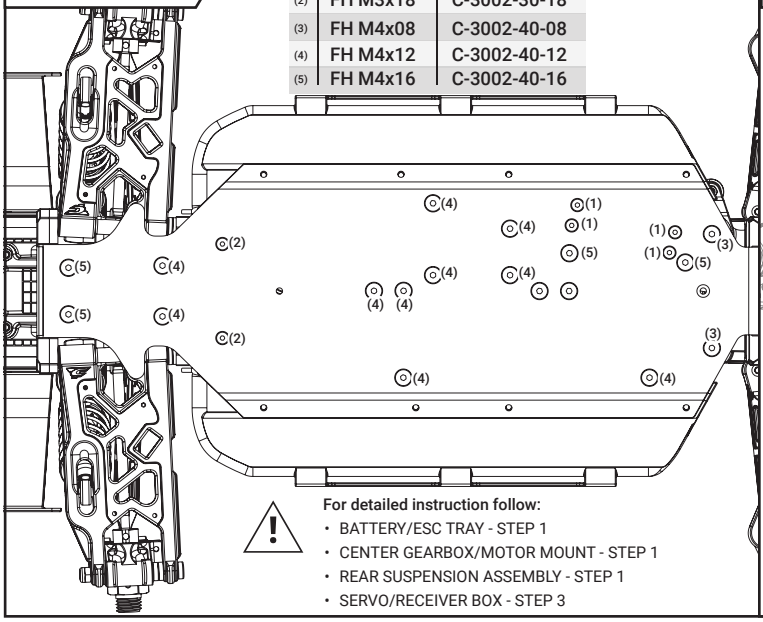

For detailed instruction follow:

- BATTERY/ESC TRAY - STEP 1
- CENTER GEARBOX/MOTOR MOUNT - STEP 1
- REAR SUSPENSION ASSEMBLY - STEP 1
- SERVO/RECEIVER BOX - STEP 3

STEP 4

(1)	FH M3x8	C-3002-30-08
(2)	M3 Wahser	C-3213-30-5
(3)	FH M3x6	C-3002-30-06

