


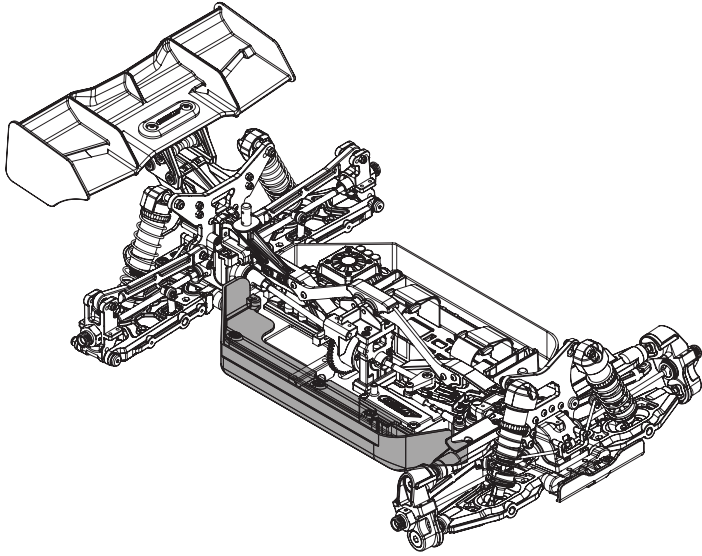

Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 


Finish Before:

- Motor Mount (Step 1 to 3)



VIDEO MANUAL
ON YOUTUBE

STEP 1

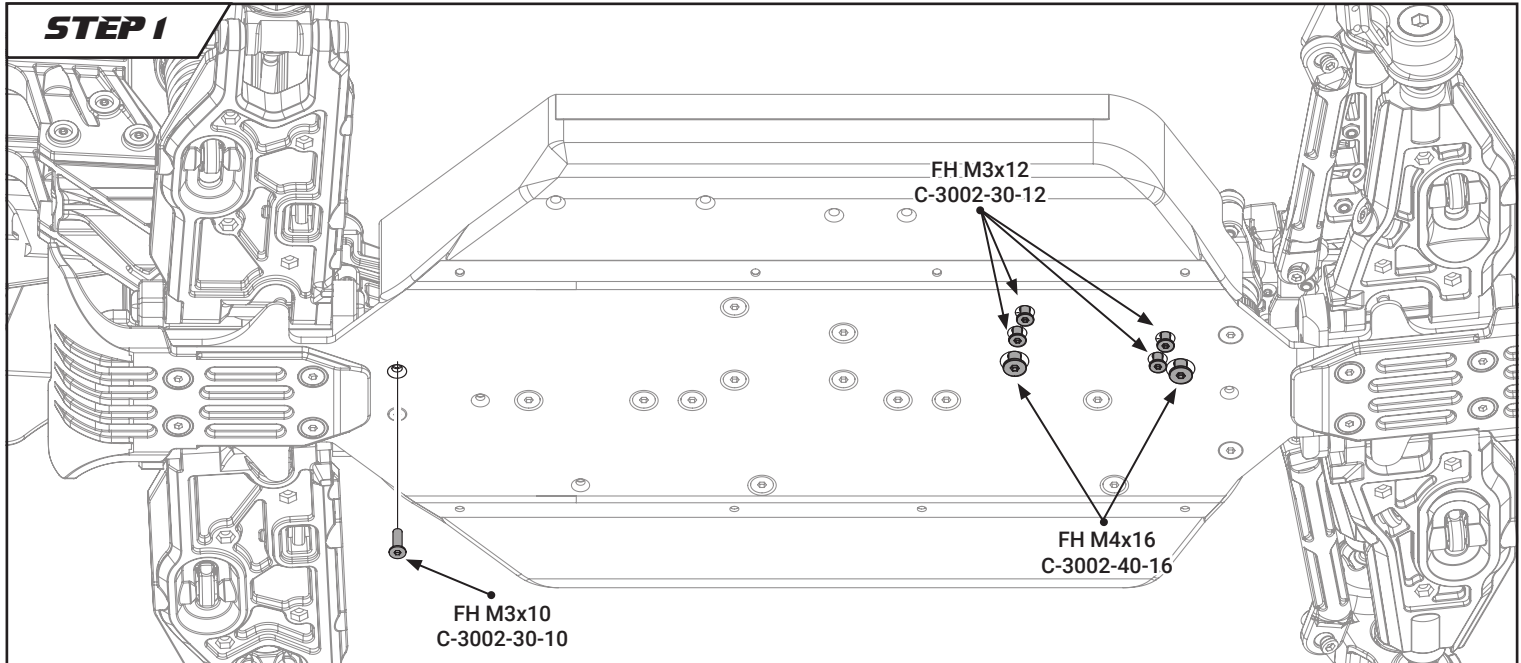

STEP 2

