

Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- 7.0 Nutdriver
- 17mm Wheel Nutdriver
- Thread-locker


Finish Before:

- Rear Upper Suspension Link (Step 1)



VIDEO MANUAL
ON YOUTUBE

STEP 1

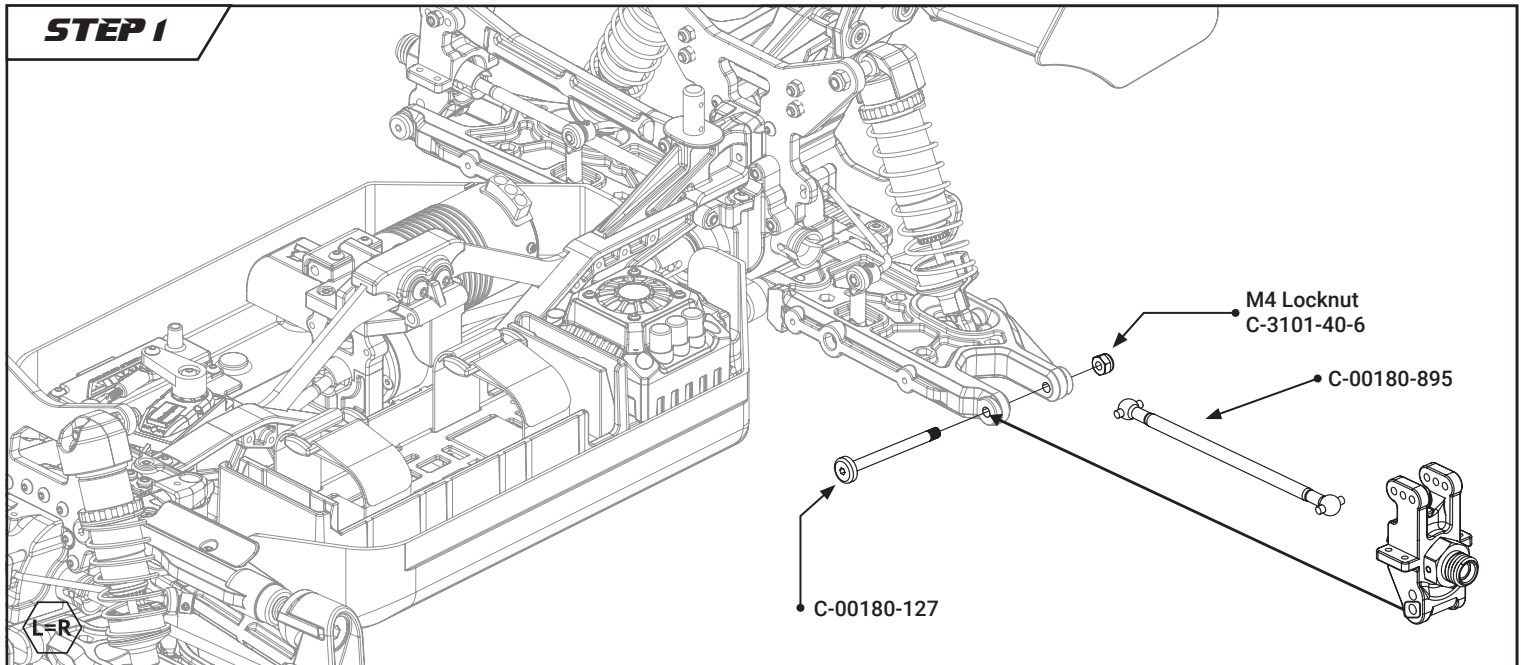

STEP 2

