


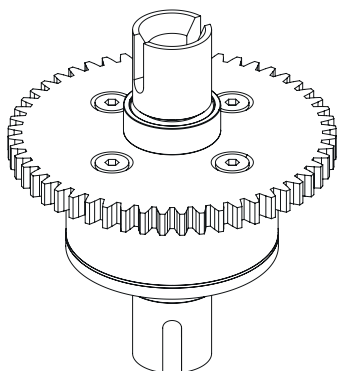

Required Tools:

- 2.0 Hex Driver
- Silicone Diff Oil 
- Thread-locker 
- Paper Towel
- Solvent/Brake Cleaner
- Hobby Knife or Other Sharp Tool
- Pliers

Finish Before:


- Center Gearbox

Important Notice:

Do NOT use solvents on rubber gaskets or O-rings to prevent damage.

	FRONT DIFF	CENTER DIFF	REAR DIFF
TRACK USE	7500cps	15.000cps	5000cps
OFF ROAD	10.000cps	30.000cps	7500cps
BASHING	20.000cps	100.000cps	10.000cps
FACTORY	20.000cps	100.000cps	10.000cps

STEP 1

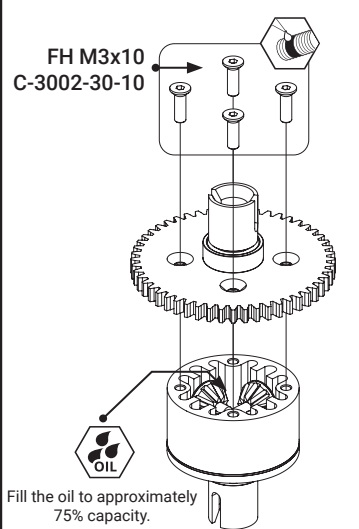


FH M3x10
C-3002-30-10

 OIL

Fill the oil to approximately 75% capacity.


STEP 2

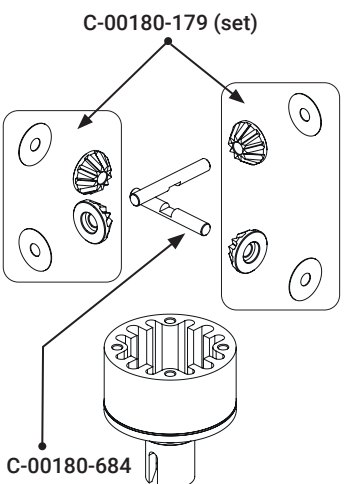

C-00180-179 (set)

C-00180-684


STEP 3

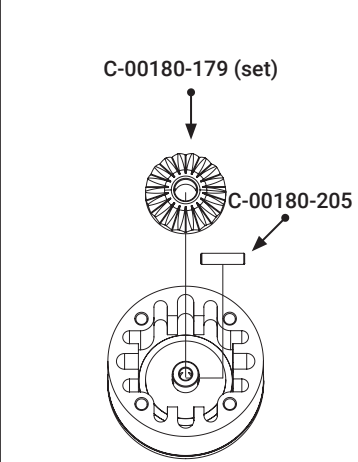

C-00180-179 (set)

C-00180-205

STEP 4

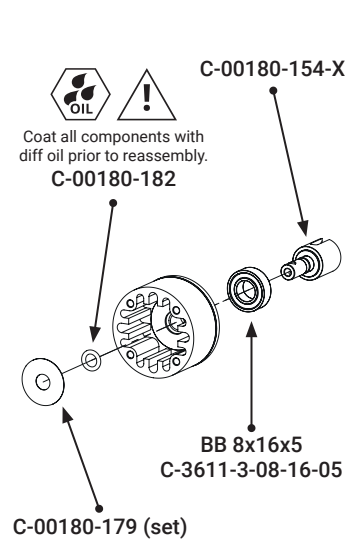

Coat all components with diff oil prior to reassembly.


C-00180-182

C-00180-154-X

BB 8x16x5
C-3611-3-08-16-05

C-00180-179 (set)

OPTIONAL

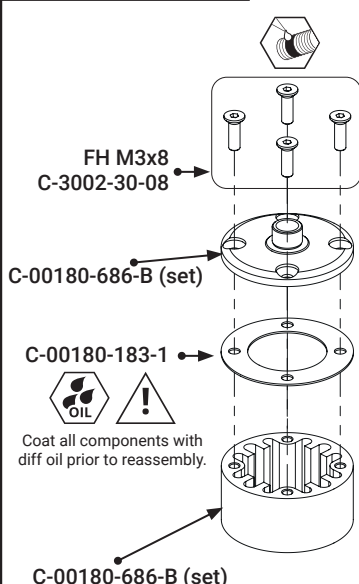

FH M3x8
C-3002-30-08

C-00180-686-B (set)


C-00180-183-1

Coat all components with diff oil prior to reassembly.

C-00180-686-B (set)


STEP 5

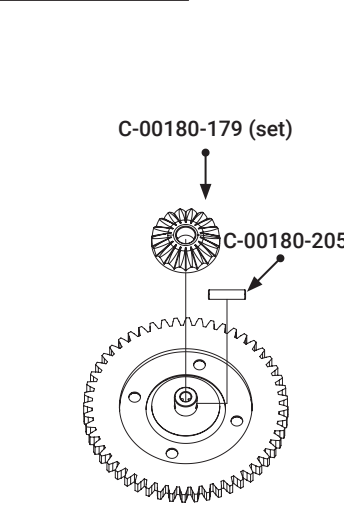

C-00180-179 (set)

C-00180-205

STEP 6

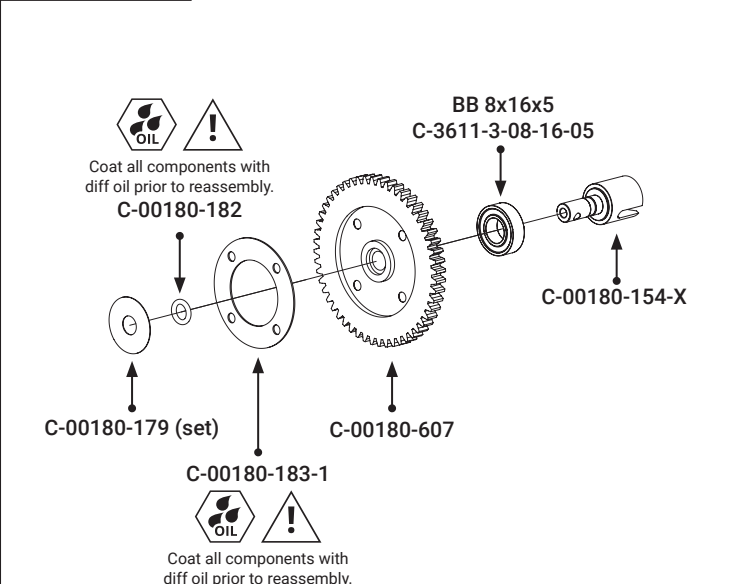

Coat all components with diff oil prior to reassembly.

C-00180-182

C-00180-179 (set)

C-00180-607

C-00180-183-1

Coat all components with diff oil prior to reassembly.

BB 8x16x5
C-3611-3-08-16-05

C-00180-154-X