

RC10 SC6.4 TEAM K I T

1:10 Scale 2WD Electric Off Road
Competition Short Course Kit



#70009 RC10SC6.4 Team Kit

1:10 Scale 2WD Electric Off Road Competition Short Course Truck Manual



CHAMPIONS by DESIGN

AssociatedElectrics.com

TEAM ASSOCIATED

:: Introduction

Thank you for purchasing this Team Associated product. This assembly manual contains instructions and tips for building and maintaining your new vehicle. Please take a moment to read through the manual and familiarize yourself with the steps. We are continually changing and improving our designs; therefore, actual parts may appear slightly different than the illustrations. New parts will be noted on supplementary sheets located in the appropriate parts bags. Check each bag for these sheets before you start to build.

:: RC10SC6.4 KIT Features

- New 13mm big bore threaded aluminum shocks and springs with machined shock pistons for improved bump / jump handling
- 13mm machined shock pistons, 2x1.6mm front and 2x1.8mm rear
- New front ballstud mount and top plate with angled steering system for improved steering consistency
- New 3.5mm heavy-duty ball cups and turnbuckles for maximum durability
- Updated rear suspension with wider C and D mounts from the RC10B6.4 series
- New longer 92.5mm CVA driveshafts for more rear grip
- 7.0mm blue aluminum rear clamping hexes with laser etching
- New chassis side rails with the RC10B6.4 fan mount system
- New short course truck length aluminum chassis with 22.5° kick-up to complement updated front-end geometry and with new shape to reduce chassis scrub with the track surface
- 20°, 22.5°, and 25° molded bulkheads included for a complete range of caster and kickup options
- B6.4 adjustable height steering bellcrank and rack system for optimized bumpsteer at all ride heights and caster angles
- B6.4 -1mm kingpin offset steering and caster block set for smoother and more predictable steering through the entire wheel throw
- Aluminum RC10B6.4 ESC mounting tray shifted forward in the chassis and with a wider footprint to fit electronics, resulting in a weight bias placed further forward
- Factory Team RC10B6.4 11g aluminum ESC tray

:: Additional

Your new SC6.4 Team Kit comes unassembled and requires the following items for completion (Refer to www.rc10.com and www.Reedypower.com for complete listings):

- RC two channel surface frequency radio system
- AA-size batteries for transmitter (#302 alkaline)
- Electronic Speed Control, ESC
- Steering servo
- 540 size electric motor
- Pinion gear (48P), size determined by type/wind of motor
- Battery charger (a peak detection charger, or LiPo compatible charger)
- 2 cell LiPo battery pack
- Polycarbonate 1/10 Short course body
- Polycarbonate specific spray paint
- Cyanoacrylate glue (CA) (#1597)
- Thread locking compound (#1596)
- Tires and Inserts, Fronts and Rears
- Wheels w/12mm Hex
Black Method Wheels #71040

:: Other Helpful Items

- Silicone Shock Fluid (Refer to www.rc10.com for complete listings):
- Body Scissors (AE Part #1737)
- FT Hex/Nut Wrenches (AE Part #1519, 1650)
- Green Slime shock lube (AE Part #1105)
- Soldering Iron
- Needle Nose Pliers
- FT Body Reamer
- FT Ballcup Wrench (#1579)
- FT Dual Turnbuckle Wrench (#1114)
- Hobby Knife
- Shock Pliers (#1681)
- FT Universal Tire Balancer (#1498)
- Calipers or a Precision Ruler
- Wire Cutters

Associated Electrics, Inc.
21062 Bake Parkway.
Lake Forest, CA 92630



Customer Service
Tel: 949.544.7500
Fax: 949.544.7501

:: Hardware - 1:1 Scale View

Button Head (bhcs)

	2x4mm (31510)
	2.5x6mm (31520)
	2.5x8mm (31521)
	2.5x10mm (31522)
	3x4mm (91158)
	3x5mm (31530)
	3x6mm (31531)
	3x8mm (31532)
	3x10mm (25211)
	3x12mm (89202)
	3x14mm (25187)
	3x16mm (89203)
	3x18mm (2308)
	3x20mm (25188)
	3x22mm (25189)
	3x24mm (89204)
	3x30mm (91478)

Flat Head (fhcs)

	2x3mm (91749)
	2.5x8mm (31448)
	3x8mm (25201)
	3x10mm (25202)
	3x12mm (25203)
	3x14mm (89208)
	3x16mm (25204)
	3x18mm (89209)

Set Screws

	3x2.5mm (31500)
	3x3mm (25225)
	3x5mm (89219)
	3x10mm (4671)
	3x20mm (91737)

Socket Head (shcs)

	1.6 x 5mm (91611)
	3 x 18mm (25191)
	3 x 6mm (41089)
	3 x 22mm (41095)

Shims and Washers

	5.5x0.5mm (31381)
	5.5x1.0mm (31382)
	5.5x2.0mm (31383)
	2.6x6mm Washer (89278)
	3x8mm Washer (89218)

Ball Bearings

	4x7x2.5mm (31732)
	5x8x2.5mm (8680)
	5x10x4mm (91560)
	5x12x4mm (91567)
	10x15x4mm (91563)

Ballstuds

	Silver 5mm long (31283)
	Silver 8mm long (31284)
	HD 6mm (91047)
	Ti HD 6mm (91751)
	HD 8mm (91048)
	Ti HD 8mm (91752)
	HD 10mm (91049)
	Ti HD 10mm (91753)

Nuts (lock/plain)

	M3 Plain Nut (91477)
	M3 Alum. Locknut, Blue (31550)
	M3 Locknut, Black (25215)
	M3 Locknut w/Flange (25612)
	FT 3mm Locknuts, Blue(25392)
	M4 Nuts:
	Serrated Steel (Silver)(91826)
	FT Alum. Locknut (Blue) (25391)
	Serrated Steel (Black) (91738)
	Serrated Steel LP (Black) (91150)

Diff Balls

	3/32 Carbide Diff Balls (6581) (kit)
	3/32 Ceramic Diff Balls (6584) (FT Option)
	Thrust Washer (91990)
	Caged Thrust Washer (91990)

Notes:

:: Table of Contents

1..... Cover	14.....Bag 7: Rear Hubs
2..... Introduction	14 - 15.....Bag 8: Turnbuckles
3.....1:1 Hardware "Fold Out"	16 - 18.....Bag 9: Shocks
4..... Table of Contents	19 - 22.....Bag 10: Battery Strap, Body, and Wheels
5.....Bag 1: Steering	23.....Notes
5 - 8.....Bag 2: Front Suspension	24 - 25.....Tuning Tips
8 - 9.....Bag 3: Caster Blocks	26.....Back Cover
9 - 10.....Bag 4: Rear Suspension	
10 - 11.....Bag 5: Ball Diff	
11 - 13.....Bag 6: Gearbox	

:: Notes



This symbol indicates a special note or instruction in the manual.



This symbol indicates a Racers Tip.



There is a 1:1 hardware foldout page in the front of the manual. To check the size of a part, line up your hardware with the correct drawing until you find the exact size. Each part in the foldout has a number assigned to it for ordering replacement parts.


**Associated Electrics, Inc.
21062 Bake Parkway.
Lake Forest, CA 92630**




**Customer Service
Tel: 949.544.7500
Fax: 949.544.7501**

<http://www.RC10.com> • http://twitter.com/Team_Associated • <http://www.instagram.com/teamassociatedrc/> • <http://www.facebook.com/TeamAssociated/>


:: Bag 1 - Step 1

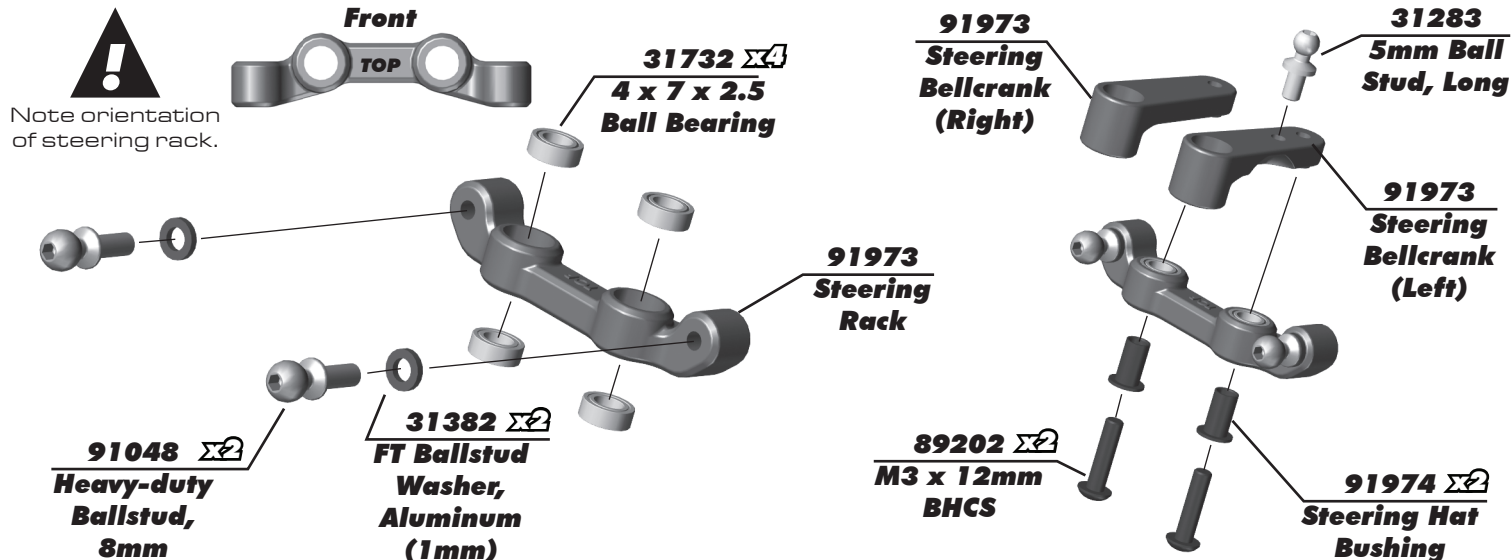

:: Bag 1 - Step 2

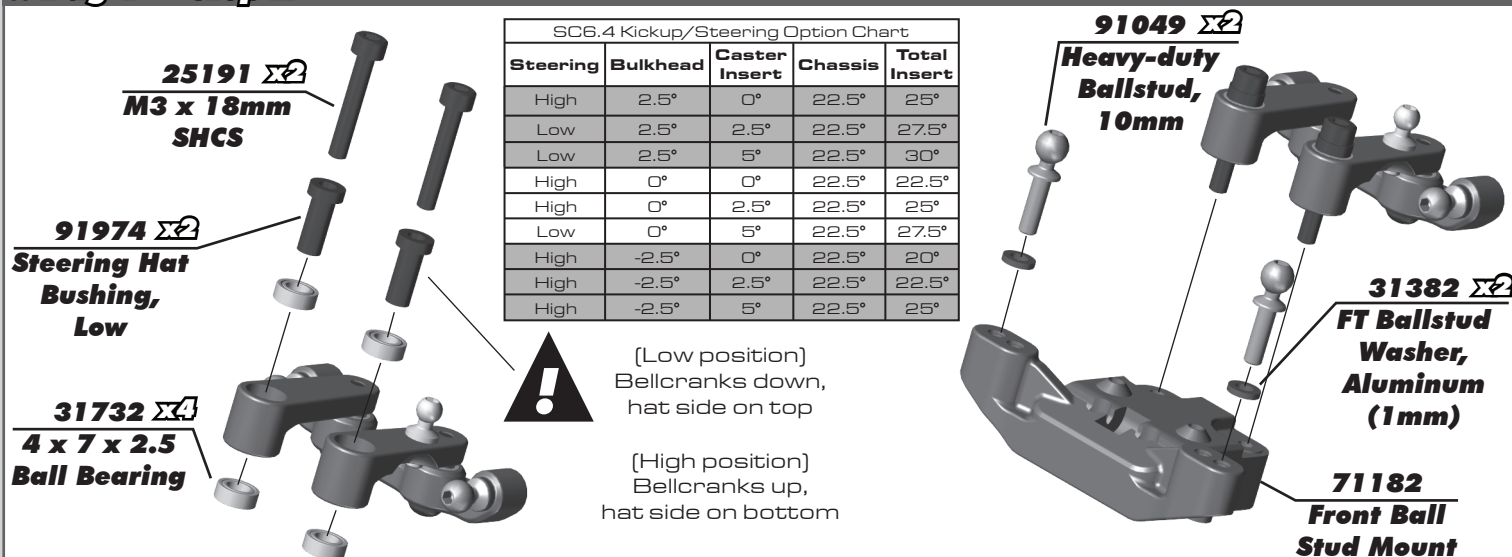

:: Bag 2 - Step 1

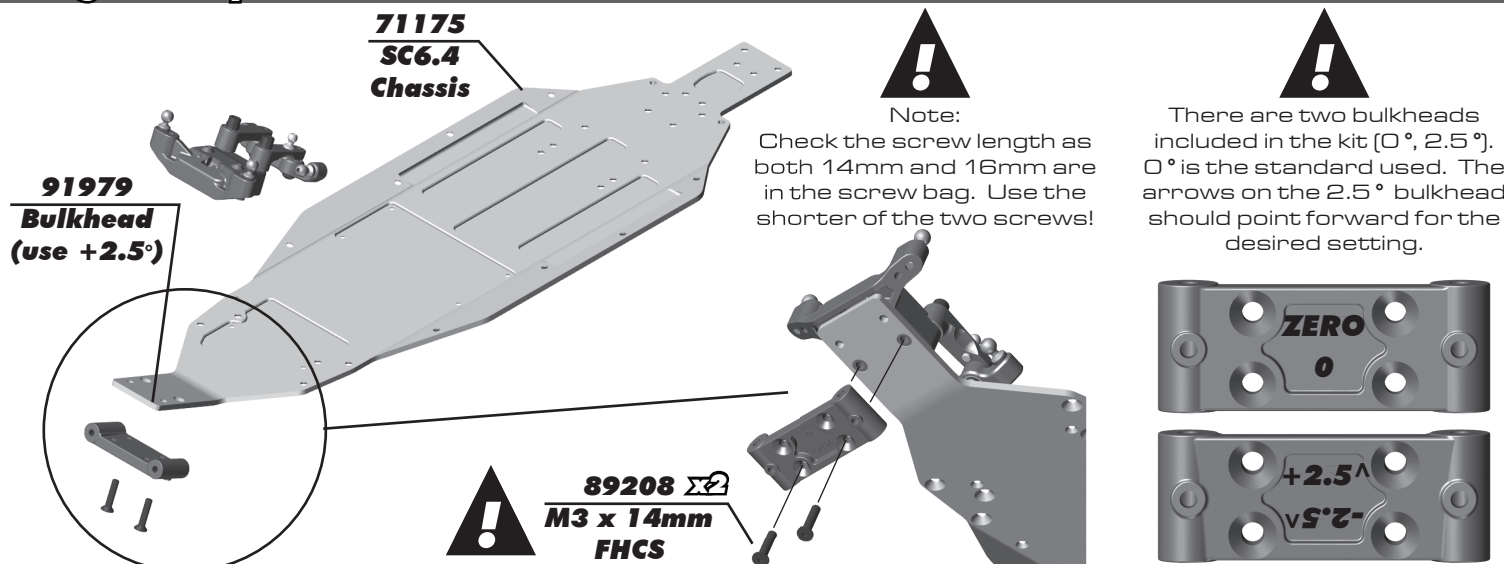

:: Bag 2 - Step 2

91976
B6.4 FT Alum.
Chassis Weight,
11g

91734
Battery
Foam, B6

91988
Battery
Foam, B6.4

71176
Side Rails
(L & R)

91749 
M2 x 3mm
FHCS

25202 
M3 x 10mm
FHCS

25201 
M3 x 8mm
FHCS

:: Bag 2 - Step 3


Do not discard these highlighted parts! You will install them in Step 6.

71128
Anti-Roll Bar,
(1.3mm)

31500
M3 x 2.5mm
Set Screw

91821
Anti-Roll
Bar Collar



Do not overtighten
#31500 - M3 x 2.5mm set screw.
You could bend the bar!

:: Bag 2 - Step 4

91997 
Steering
Link, B6.4

31382
FT Ballstud
Washer, Aluminum
(1mm)

4671
M3x10mm
Set Screw

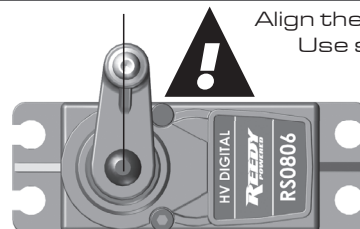

Align the servo horn 90 degrees.
Use sub trim after build to
center steering.

Servo not
included!


Tighten the
steering link ball
cups all the way
until snug.

31531
M3 x 6mm
BHCS


31284
8mm Ball
Stud, Long

91728
Servo
Horn


91728
Servo Horn
Ring

23T: Sanwa/ KO/ JR / Spektrum
24T: Hitec
25T: Reedy/ Futaba/ Savox/ ProTek / MKS


:: Bag 2 - Step 5

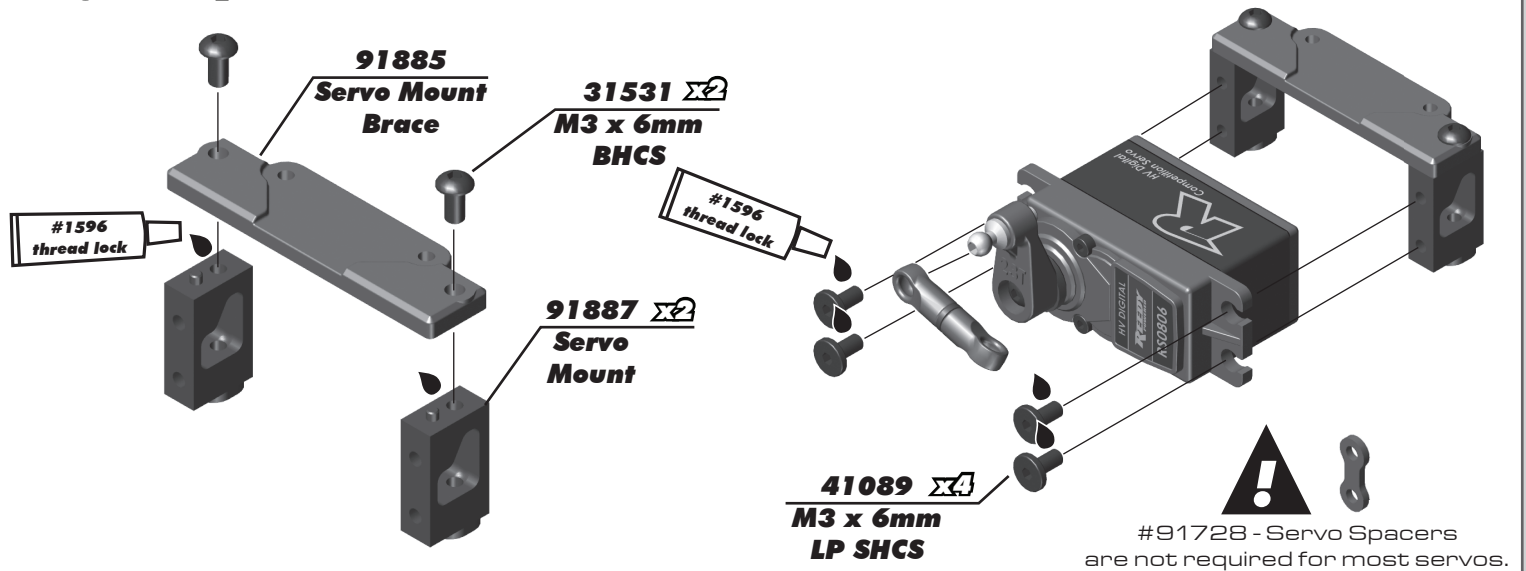


:: Bag 2 - Step 6

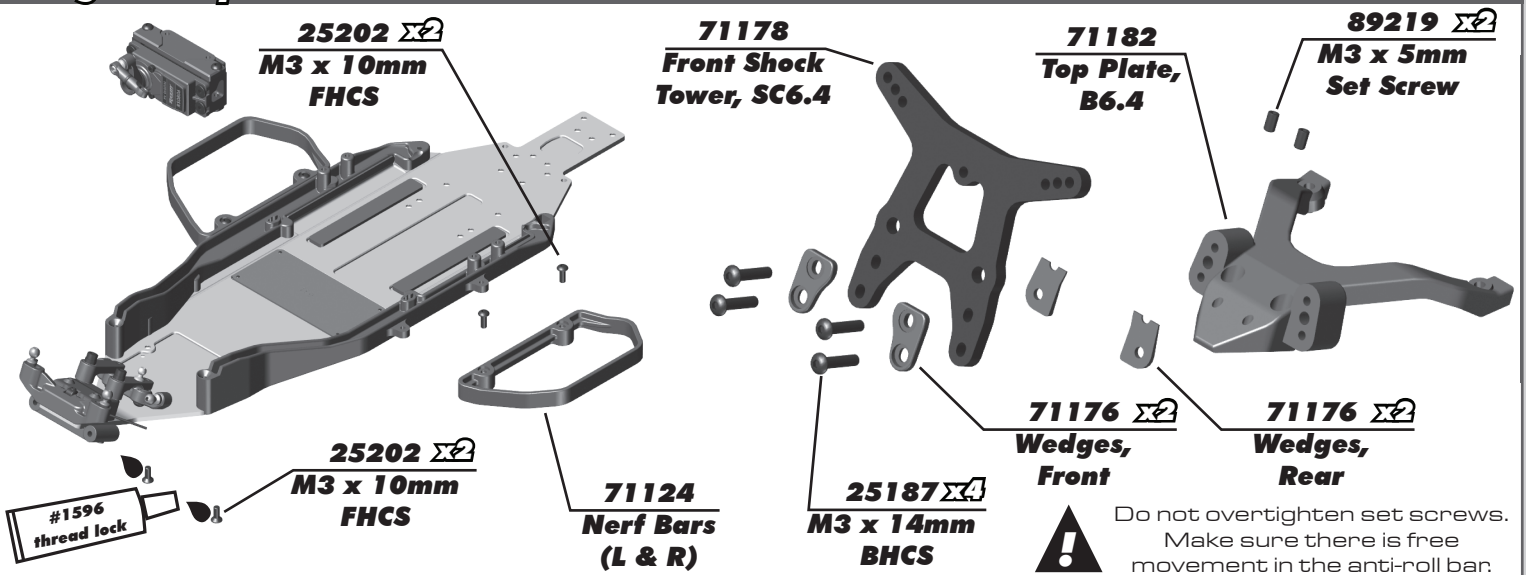


:: Bag 2 - Step 7

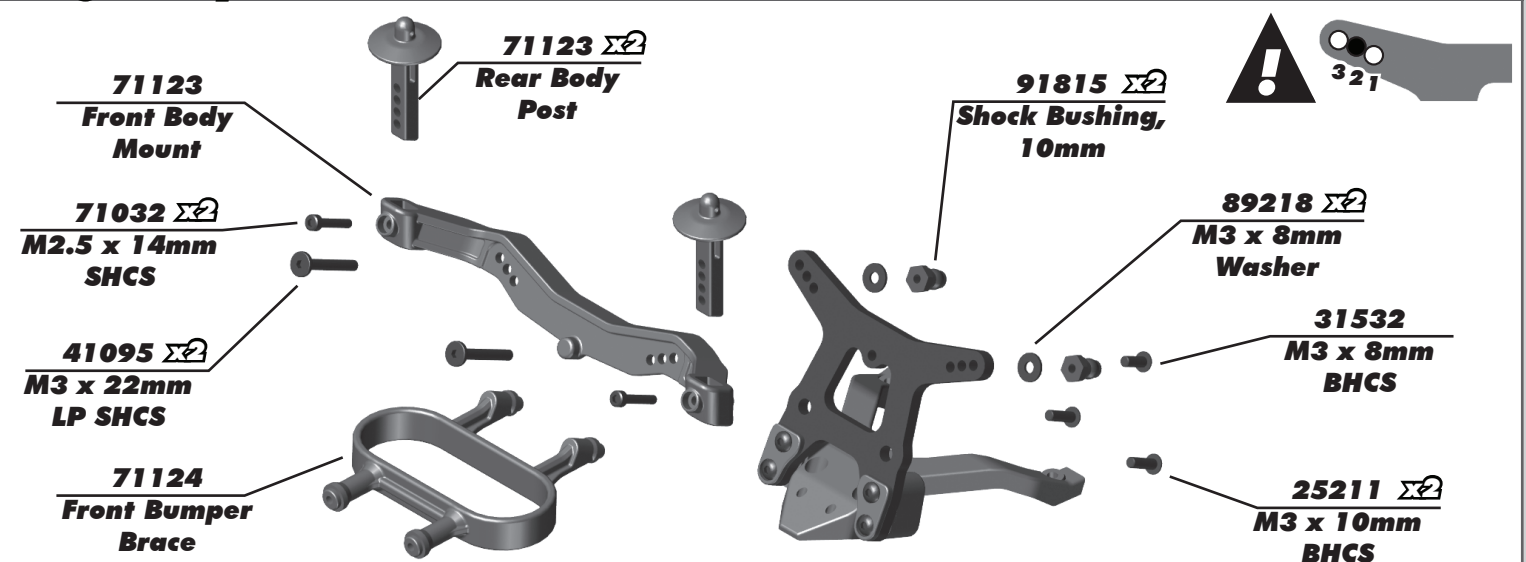


:: Bag 2 - Step 8

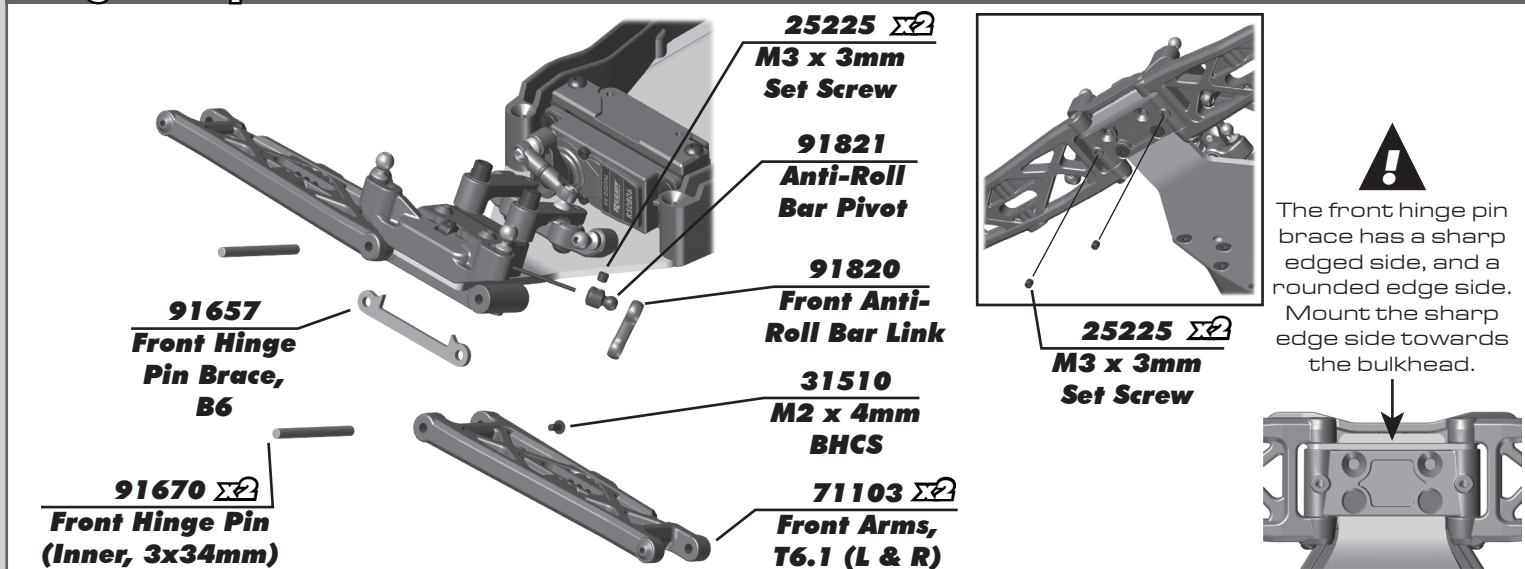


:: Bag 2 - Step 9

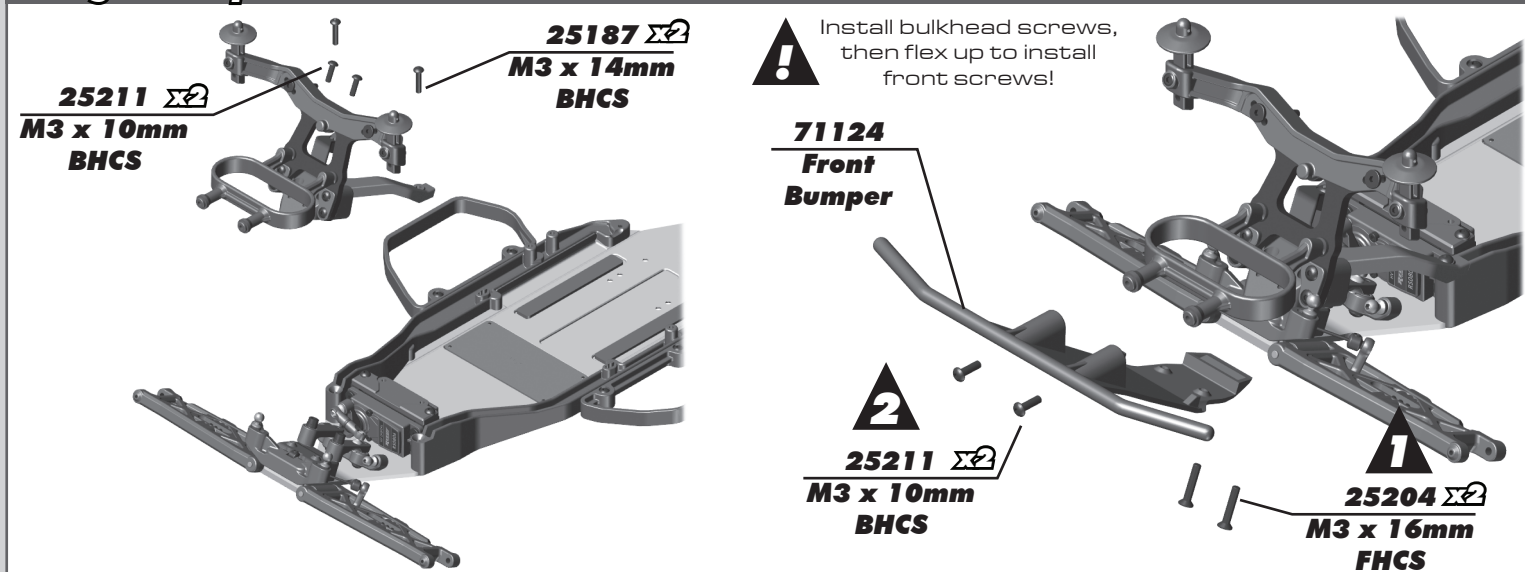


:: Bag 3 - Step 1

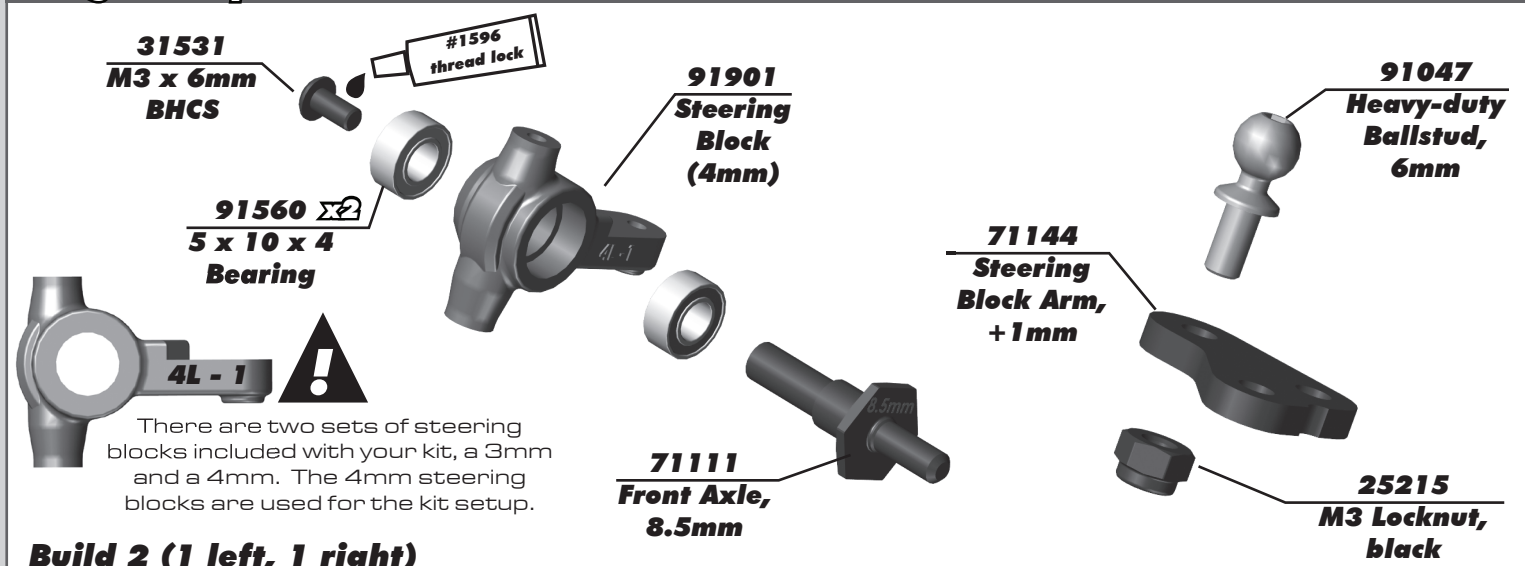


:: Bag 3 - Step 2

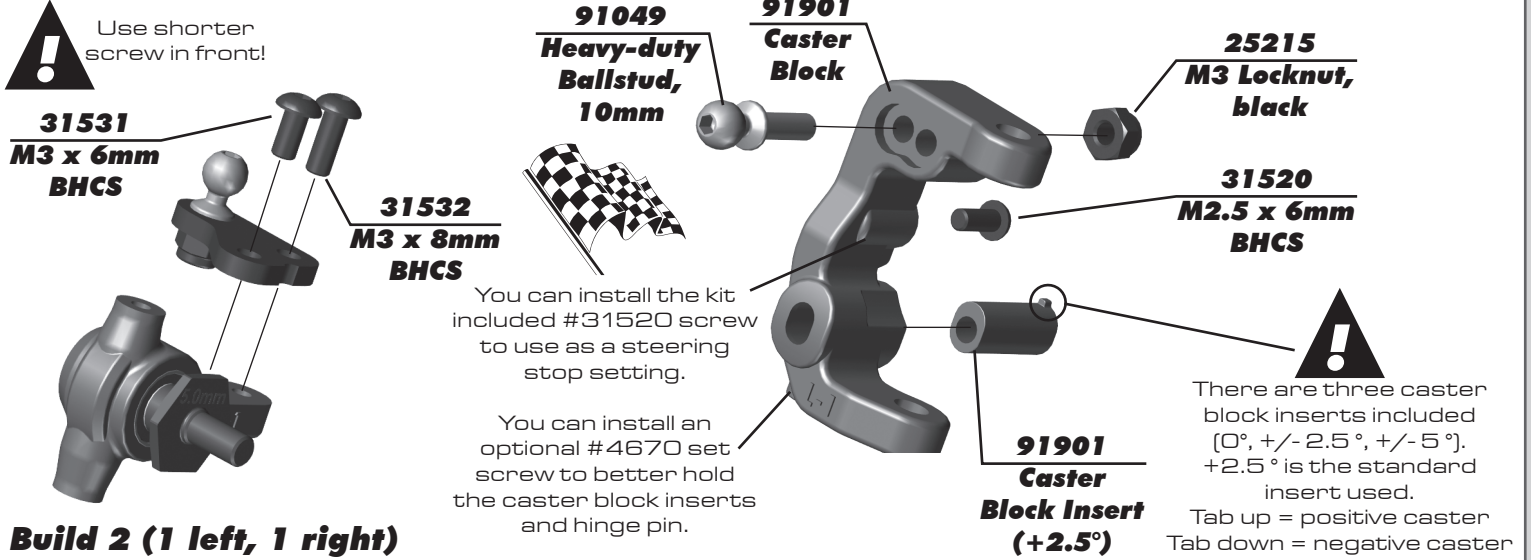

:: Bag 3 - Step 3

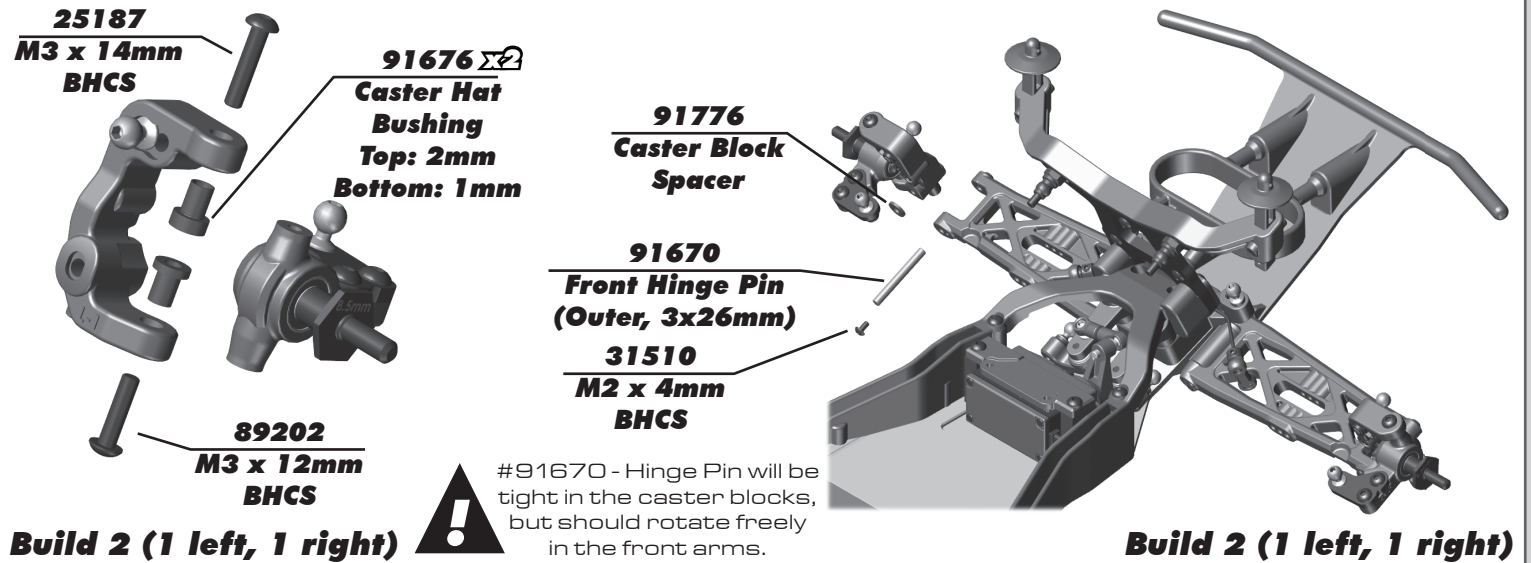

:: Bag 4 - Step 1

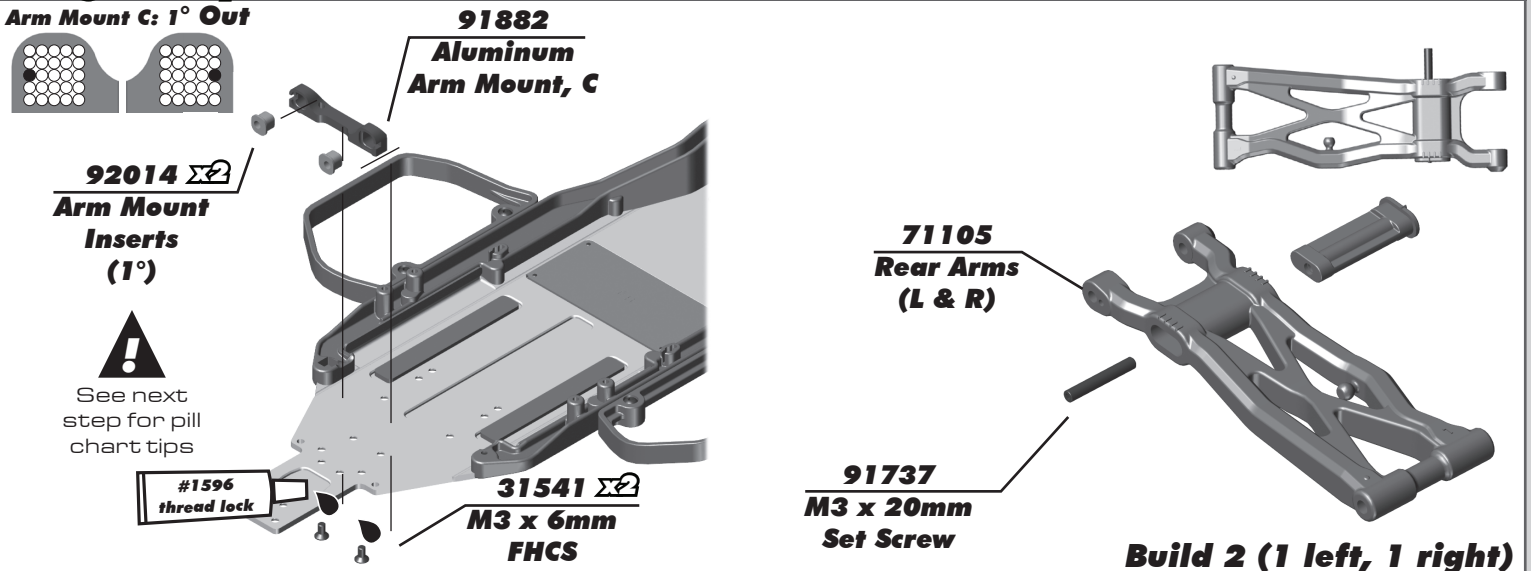

:: Bag 4 - Step 2

Arm Mount D:
1° Out



92014 
Arm Mount
Inserts (1°)

91883
Aluminum
Arm Mount, D

91670 
Rear Hinge Pin
(Inner, 3.5x48mm)



The (#91882) C and (#91883) D aluminum arm mounts allow for a large amount of setup combinations when using the (#92014) 0.5° and 1° arm mount inserts.

For a complete list of pill setup combinations, see page 24, or visit our website by using the link below.


<http://bit.ly/B6PillChart>

	Toe-In	Anti-Squat
Arm Mount C: 1° Out 		
Arm Mount D: 1° Out 	3° Kit Setup	1° Kit Setup

:: Bag 5 - Step 1

#6591
diff lube

6581 
3/32 Carbide
Diff Balls

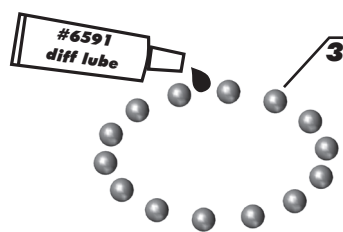

Build Tip:

The bottom side of the gear has 3 injection dots. This side faced down will keep the diff balls from falling thru the holes



91419
Diff Gear,
52T

7666
Diff Drive
Ring



#6591
diff lube



91701
Ball Diff
Outdrive

7666
Diff Drive
Ring



#6591
diff lube



91701
Ball Diff
Outdrive

:: Bag 5 - Step 2

91990 
Thrust
Washer

#6588
black grease



91990
Caged
Thrust
Bearing



6573
Diff Thrust
Bolt




8680
5 x 8 x 2.5mm,
Bearing



Build Tip:

Install the first washer (groove up), add grease #6588. Install the caged thrust washer. Add grease on top of the balls, then install the 2nd washer (grooves down).

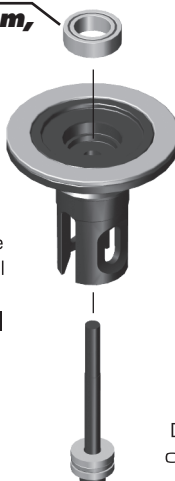


8680
5 x 8 x 2.5mm,
Bearing




Build Tip:


Do this entire step with the diff screw on the end of your wrench for better control.

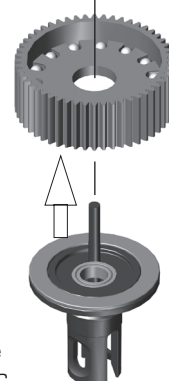

⚡ Bag 5 - Step 3

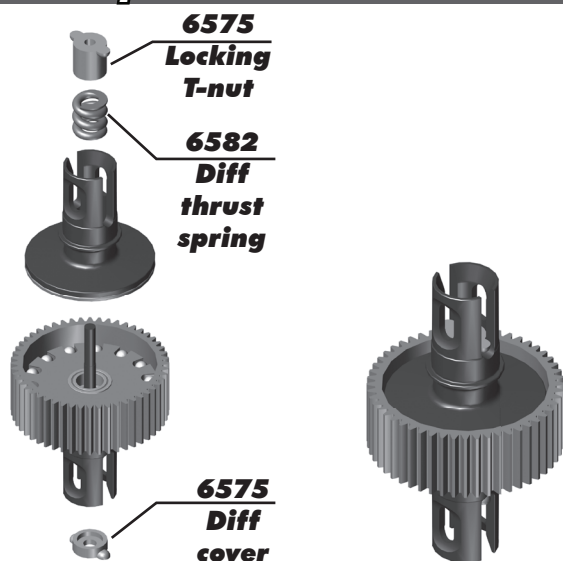

As you tighten the diff bolt, you will notice the T-nut ears moving closer to the bottom of the outdrive slot. This compresses the spring behind the T-nut. The spring should be completely compressed at the time the T-nut reaches the end of the slot. Caution! Pay close attention to the feeling when the spring is completely compressed. Do not overtighten the bolt. When you feel the spring completely compressed, loosen the diff bolt 1/8 of a turn. Your diff should now operate smoothly but with resistance as the outdrives move in opposite directions. After you have driven the car once, re-check the diff setting.

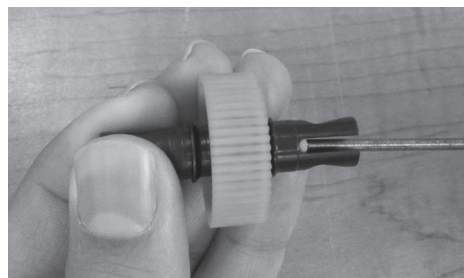


:: Optional Rear Anti-Roll Bar Build - NOT INCLUDED


NOT INCLUDED



Do not overtighten
#25225 - M3 x 3mm set
screw. You could bend the bar!

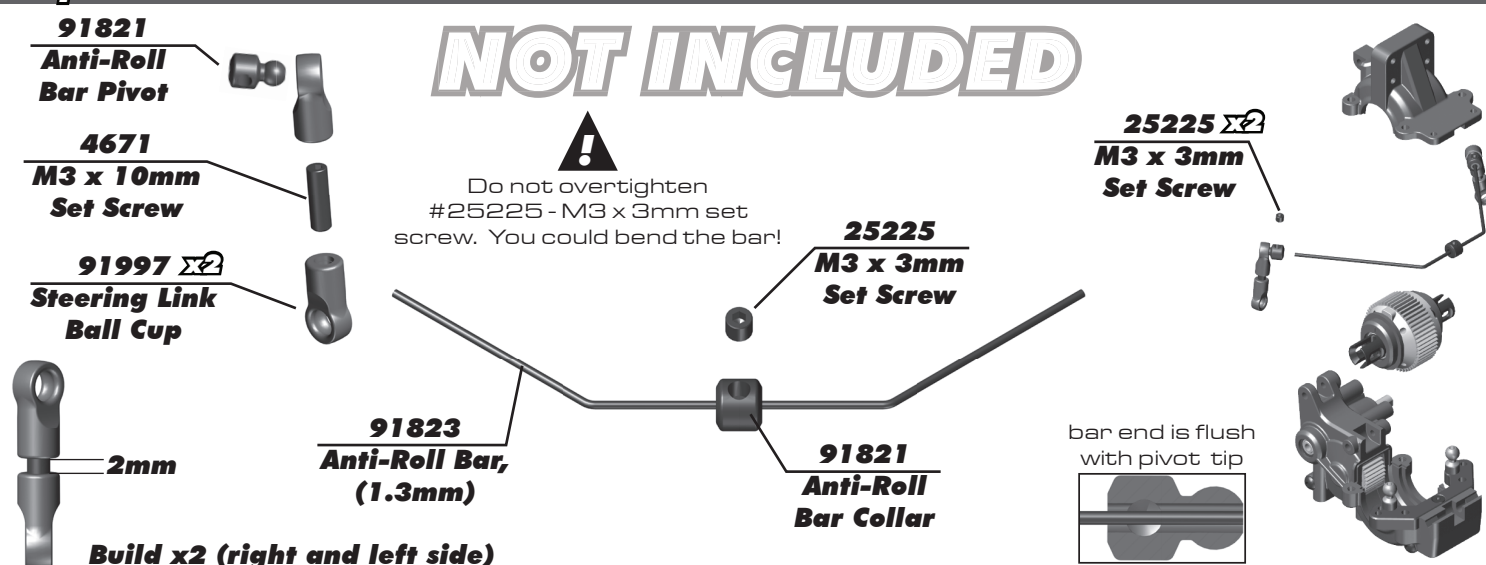

:: Bag 6 - Step 1

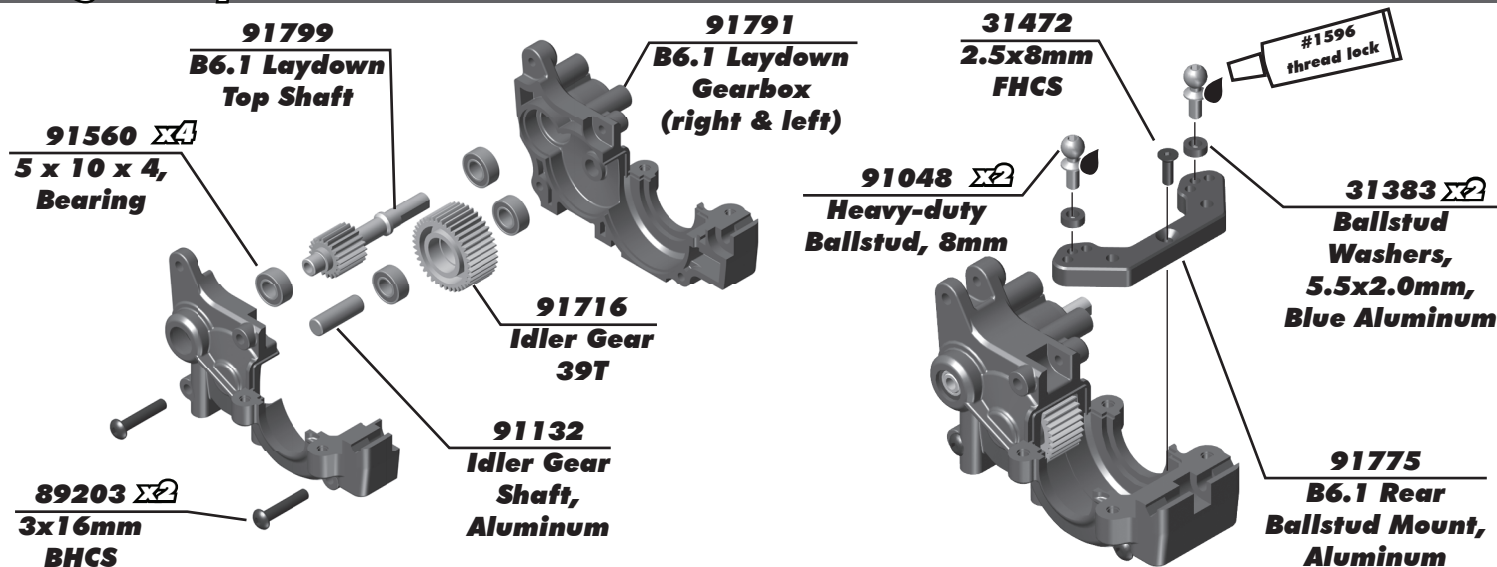

:: Bag 6 - Step 2

Diff Height	
	3 Kit Setup
	2
	1
	0

!
Add a drop of Diff Lube [#6591] to the teeth of the diff gear, idler gear, and top shaft.

91563
10x15x4 Bearing

91791
B6.1 Laydown Gearbox Top

91792
B6.1 Diff Height Insert

!
Diff Height Inserts:
The number on top is the setting. Stock diff height is 3-0, 3 on top.

:: Bag 6 - Step 3

89202
3 x 12mm BHCS


89203
3 x 16mm BHCS

91709
Laydown Chassis Brace

91819
B6.1 Shock Pivot Ball

89203
3 x 16mm BHCS

25188
3 x 20mm BHCS

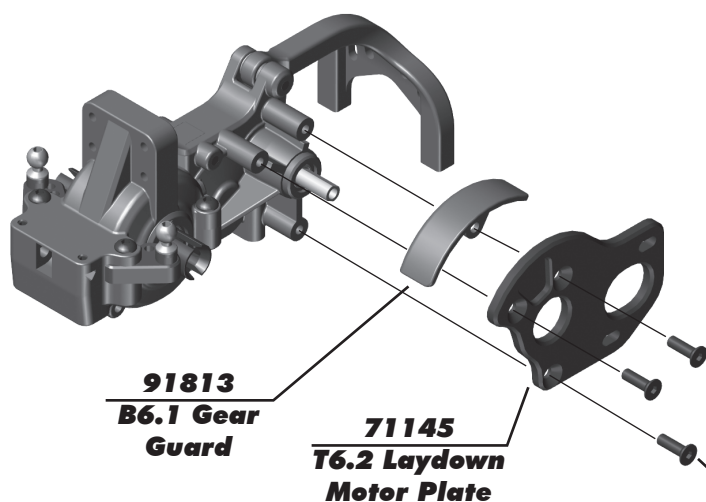:: Bag 6 - Step 4

91813
B6.1 Gear Guard

71145
T6.2 Laydown Motor Plate

!
#92295 spur gear walls should point away from gear box.

25202
3 x 10mm FHCS

91803
B6.1 Slipper Hub, Inner




92295
Octalock Spur Gear, 78T 48P


92288
Octalock Slipper Pad, 19mm

91804
B6.1 Slipper Hub, Outer



There's also a 72T, 48P spur gear [#92293] included for stock motor use!

91799
B6.1 Top Shaft Screw and Pin

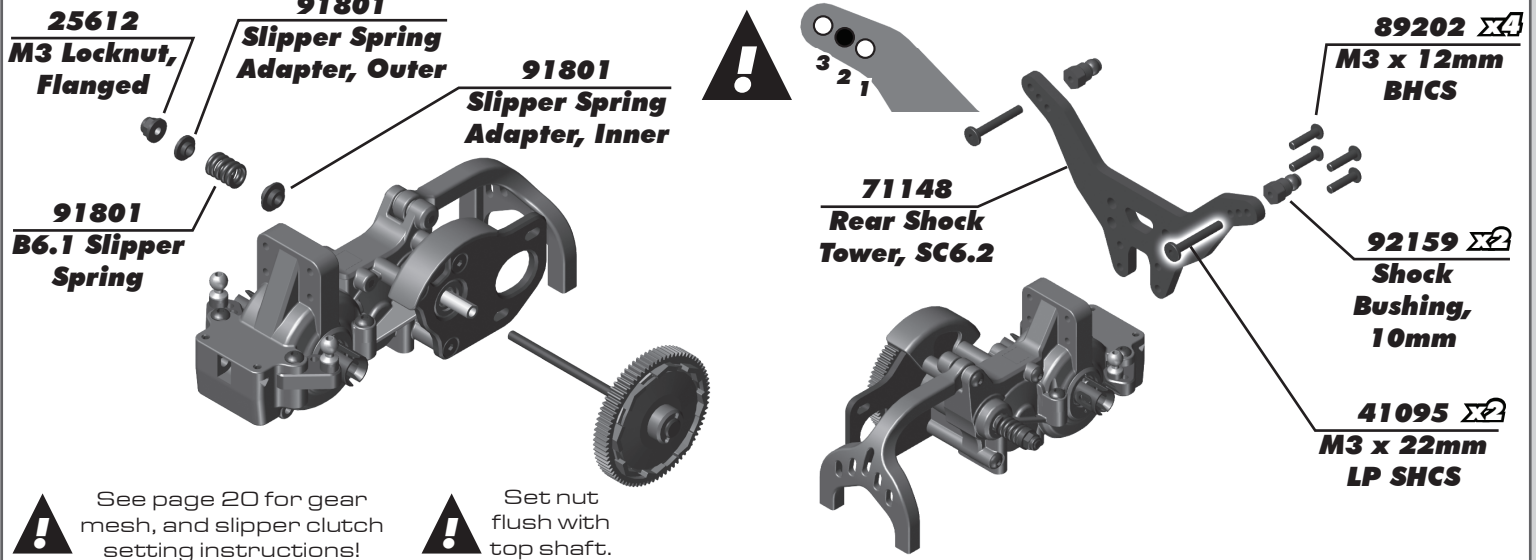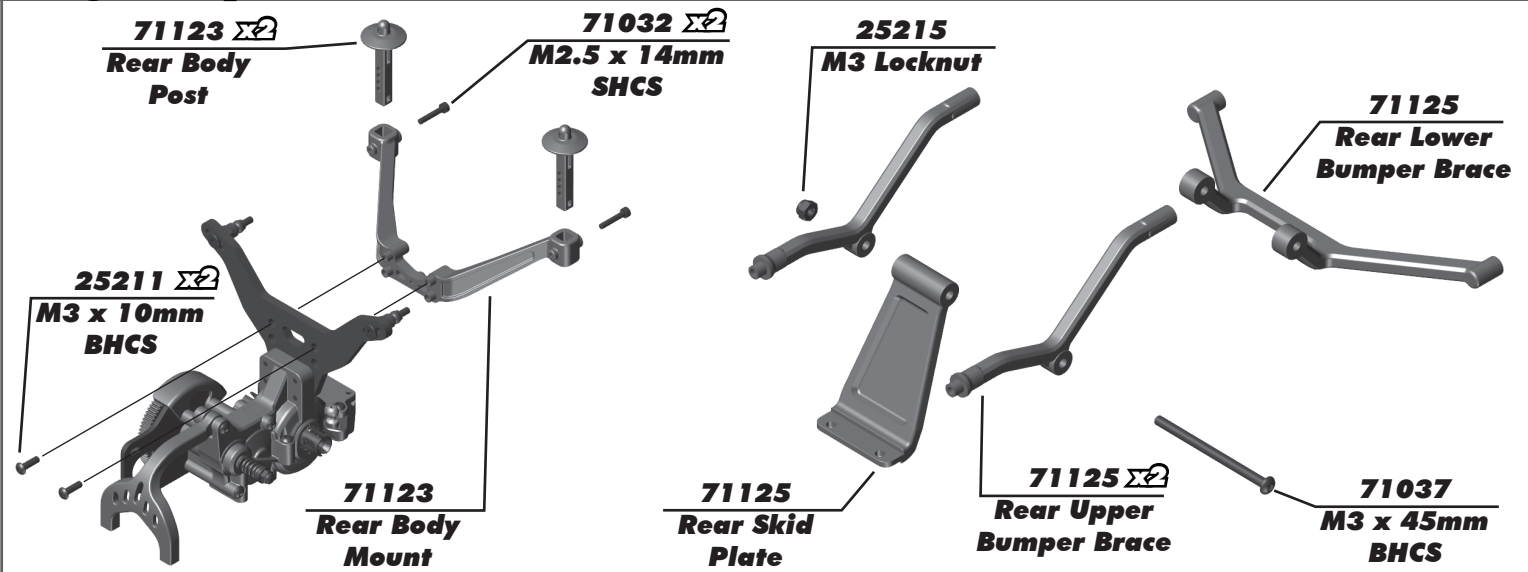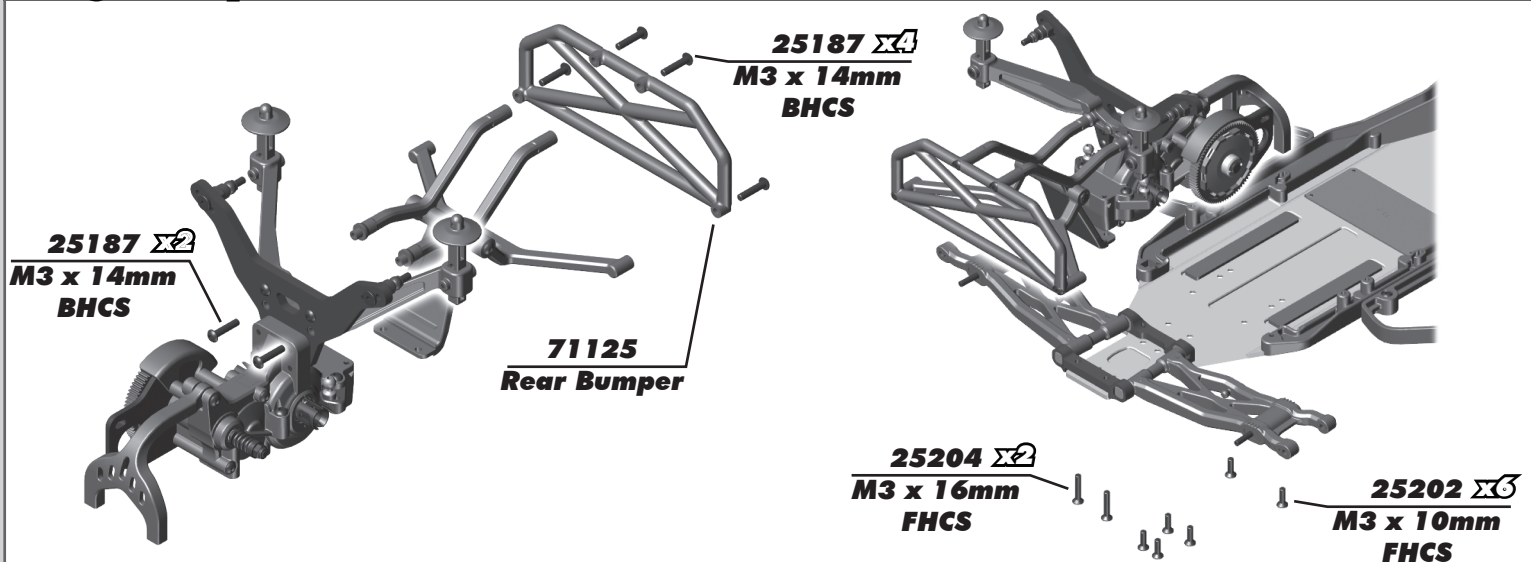
:: Bag 6 - Step 5**:: Bag 6 - Step 6****:: Bag 6 - Step 7**

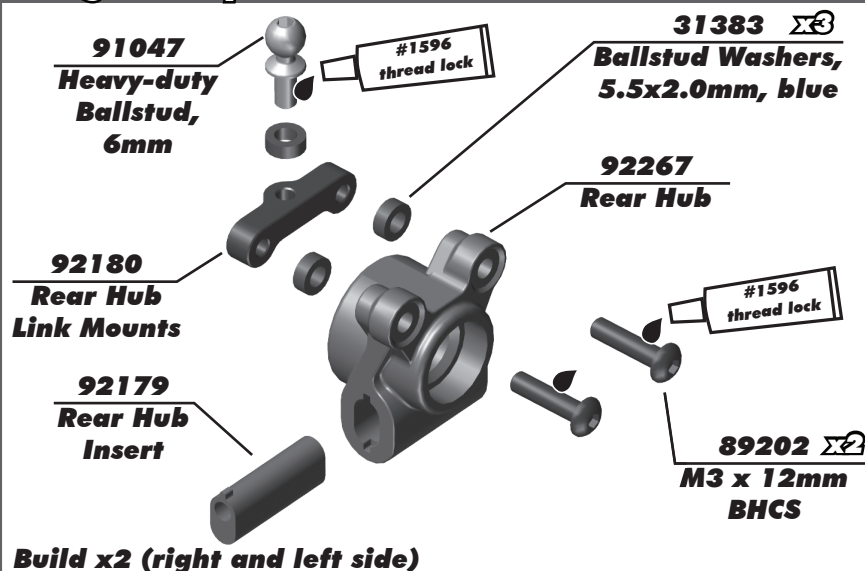
:: Bag 7 - Step 1

Rear Axle Height			
↑ 3	0 ↓	3 ↑	+3mm
↑ 2	1 ↓	2 ↑	+2mm
↓ 2	1 ↑	1 ↑	+1mm
↓ ε	0 ↑	0 ↑	+0mm Kit Setup

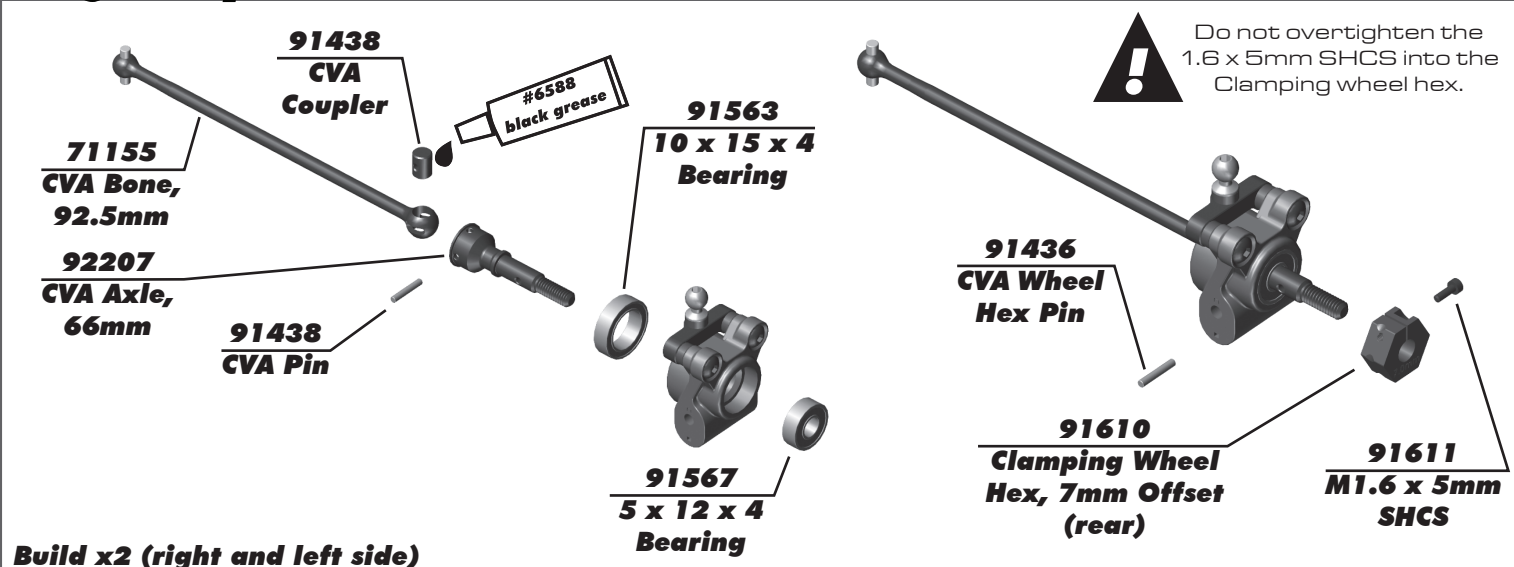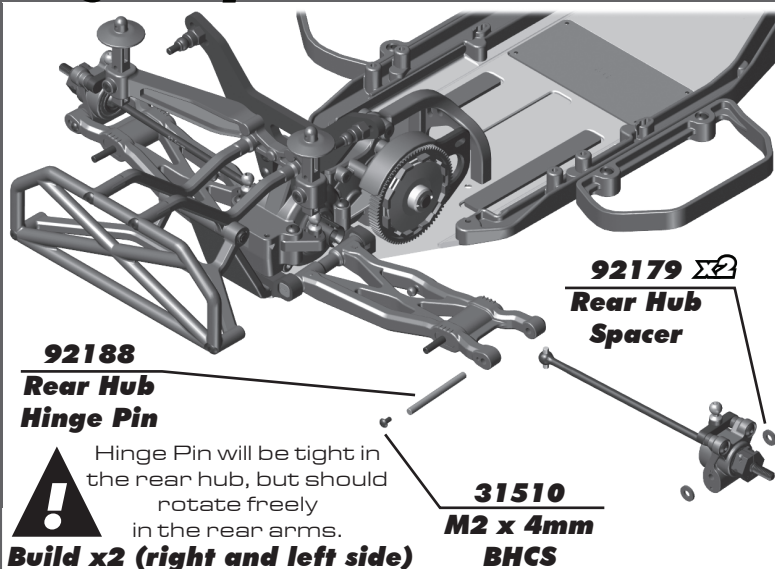:: Bag 7 - Step 2**:: Bag 7 - Step 3****:: Bag 8 - Step 1**

It is important that the turnbuckle eyelets move freely once snapped on to the ballstud. If the fit is too tight, the car handling will be inconsistent. To check, grab turnbuckle eyelet with fingers and rotate the cup. If there is resistance, lightly squeeze ball cup with needle nose pliers as shown and test again. It is important that the ball cup be snapped onto the ballstud before squeezing with needle nose pliers. Be sure to check and adjust the fit for each ball cup that is installed.

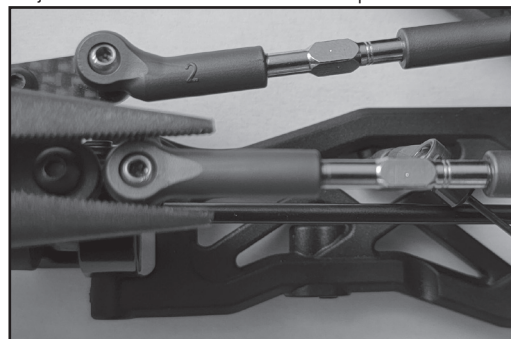

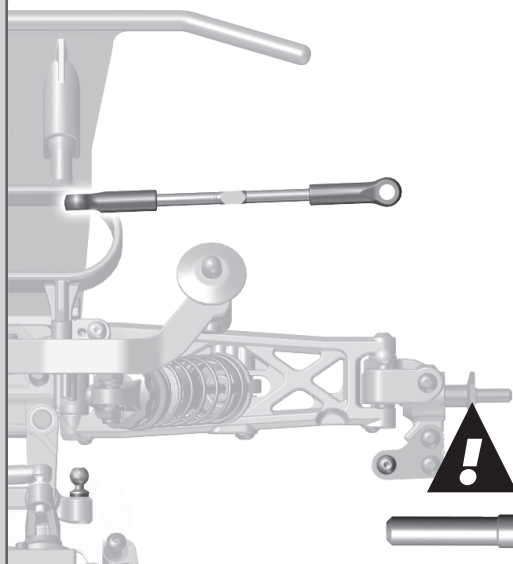:: Bag 8 - Step 2

Racers Tip:

Use black grease (#6588) on the threads of the turnbuckles for easier ball cup installation!

Orient the notch to the left throughout the car. It indicates which end has the left hand threads!



92308
Ball Cup,
3.5mm




92340
Turnbuckle
3.5x67mm

92308
Ball Cup,
3.5mm

Steering Turnbuckle
43.30mm



Build x2 (right and left side)

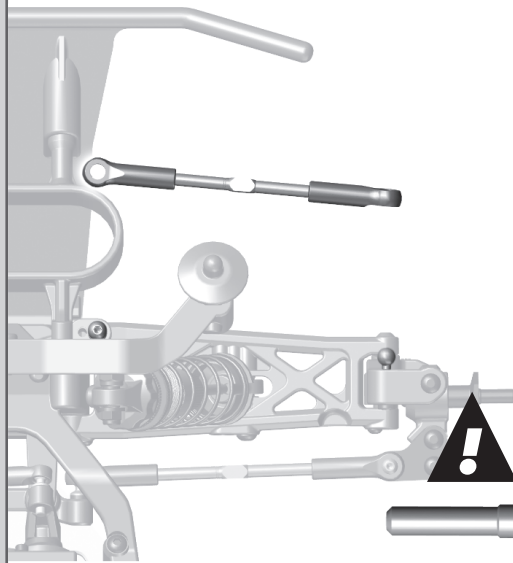:: Bag 8 - Step 3

Orient the notch to the left throughout the car. It indicates which end has the left hand threads!



92308
Ball Cup,
3.5mm




92339
Turnbuckle
3.5x58mm

92308
Ball Cup,
3.5mm

Front Camber Turnbuckle
37.70mm



Build x2 (right and left side)

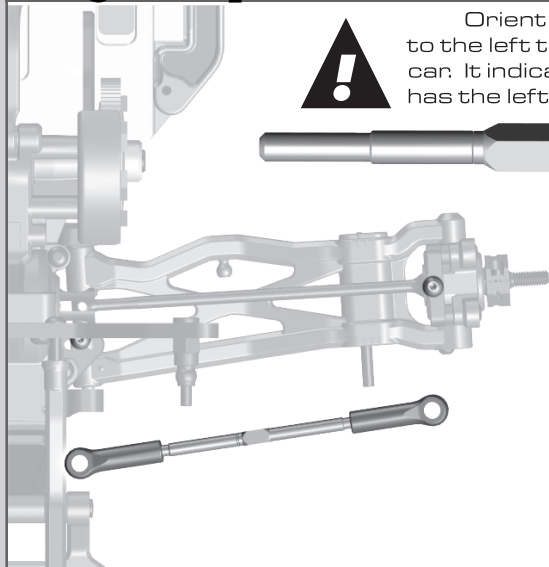:: Bag 8 - Step 4

Orient the notch to the left throughout the car. It indicates which end has the left hand threads!



92308
Ball Cup,
3.5mm




92340
Turnbuckle
3.5x67mm

92308
Ball Cup,
3.5mm

Rear Camber Turnbuckle
50.70mm



Build x2 (right and left side)

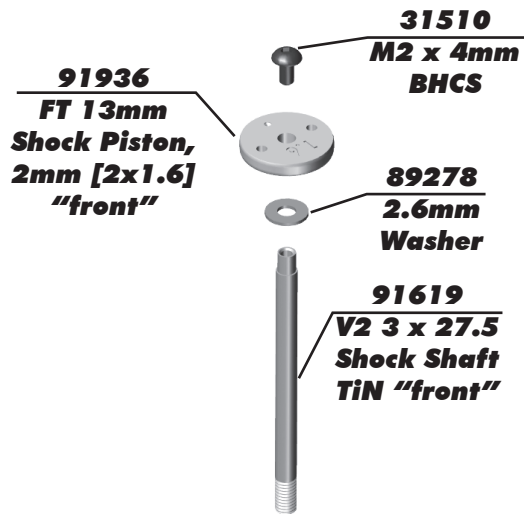
:: Bag 9 - Step 1

!
Mount the shock
pistons with the
number facing up!




Racers Tip:

Use a marker over
the numbers on the
pistons to make
them easily visible!

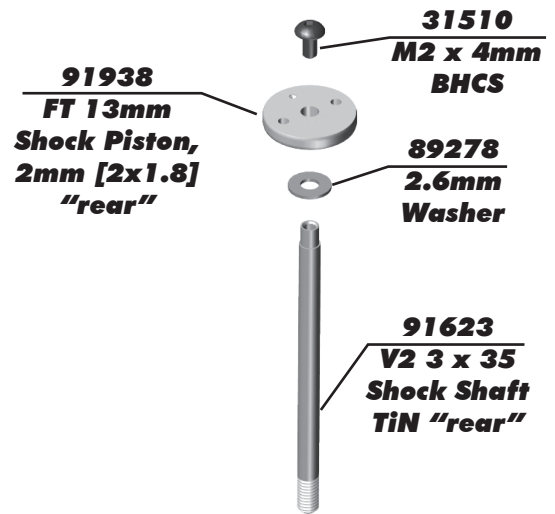

Build x2 front shocks

Build x2 rear shocks

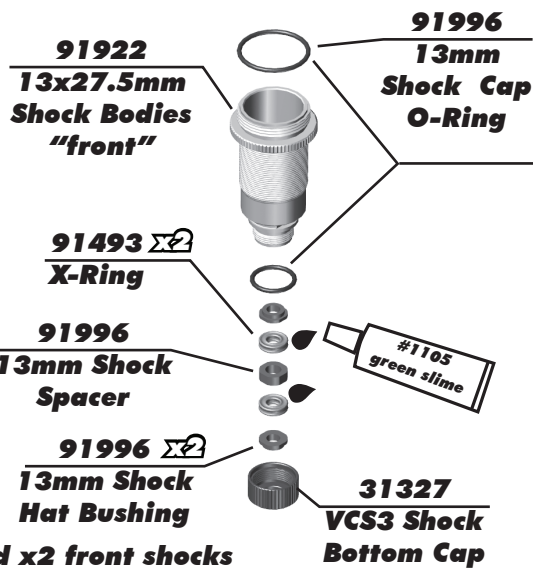
:: Bag 9 - Step 2

!
Lightly rub shock oil
on the O-ring before
installation!



Racers Tip:

Coating the O-rings
with green slime
[#1105] helps seal
& reduce O-ring
swell! **Green slime**
not included in kit!

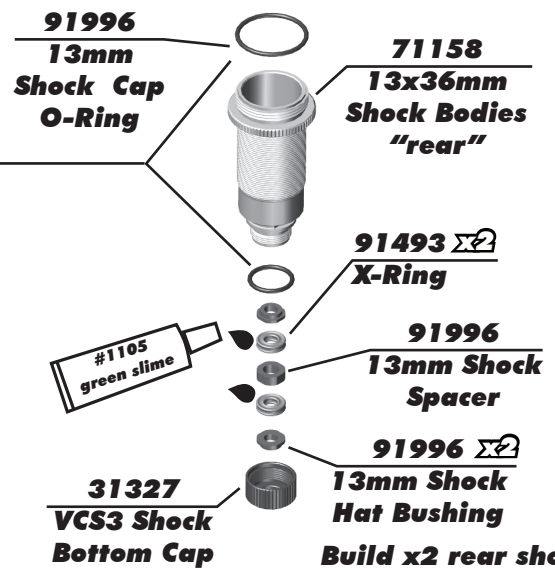

Build x2 front shocks

Build x2 rear shocks

:: Bag 9 - Step 3

!
There are 3 lengths of
shock eyelet in the kit.
Pay attention to length when
building as these affect your
droop and uptravel.



!
Lightly rub shock
fluid or green
slime on threads



Build x2 front shocks



Build x2 rear shocks

:: Bag 9 - Step 4

Front Shock: 30wt #5422
Rear Shock: 30wt #5422

Steps 2-3 **Steps 4-5** **Steps 6-7**

91926 13mm Shock Cap

Step 8

Shock Bleeding Steps:

1. Before assembly, get each bleed screw and thread it 1-2 turns into the shock cap, then remove the screw. This will make it easier when you are bleeding your shocks.
2. Pull shock shaft down.
3. Fill shock body 3/4 full with silicone shock fluid.
4. Slowly move the shock shaft up and down to remove air from under the piston.
5. Wait for bubbles to come to surface.
6. Fill shock body to top with silicone shock fluid.
7. Place a drop of oil in the cap and on cap threads.
8. Install cap (without bleed screw) and tighten completely.
9. Slowly compress shaft all the way to bleed excess silicone shock fluid out the hole in the cap (use rag around shock to catch excess fluid).
10. Install M2x4mm button head screw until snug while shaft is fully compressed.

31510 M2 x 4mm BHCS

Stroke

Stroke Front: 28.5mm Rear: 34.5mm

Steps 9-10

:: Bag 9 - Step 5

91928 X4 13mm Threaded Collar O-ring

91996 X4 13mm Threaded Collar

Build x4

71161 13mm Front Spring, Gray L54mm (4.60lb)

71163 13mm Rear Spring, Green L72mm (2.35lb)

Racers Tip:
Use your finger to rub shock fluid on the O-ring for smoother adjustment!

:: Bag 9 - Step 6

Front: 4.80mm

91966 13mm Shock Spring Cup "Front - 5mm"

Build x2 front shocks

Rear: 8.00mm


91966 13mm Shock Spring Cup "Rear - 5mm"

Build x2 rear shocks


#91926 13mm Shock Spring Cups

0mm 5mm 9mm


:: Bag 9 - Step 7

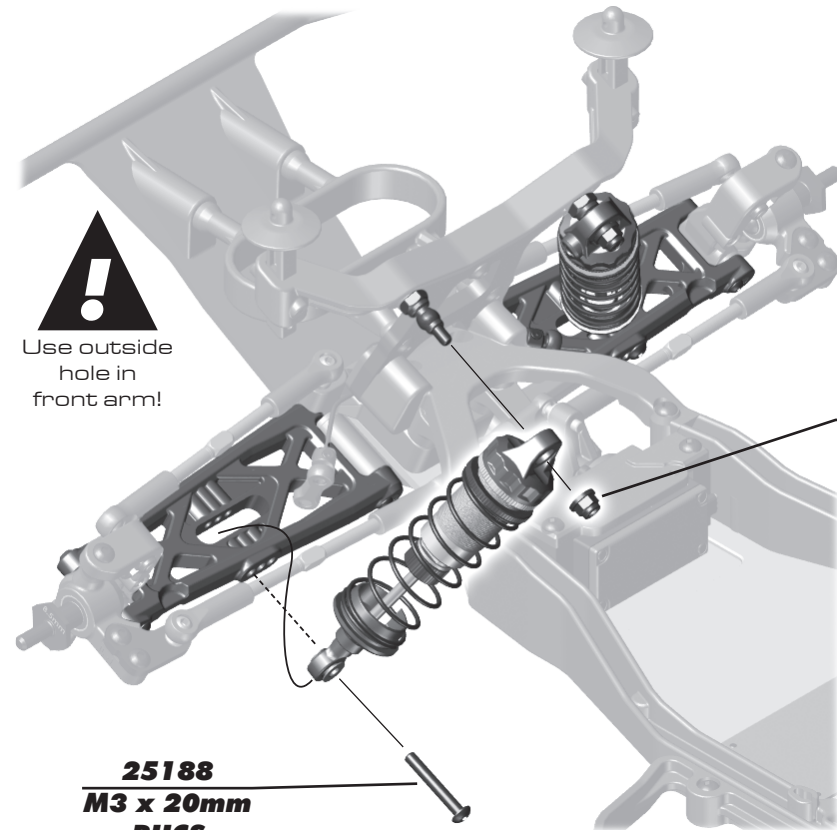


Build x2 (right and left side)

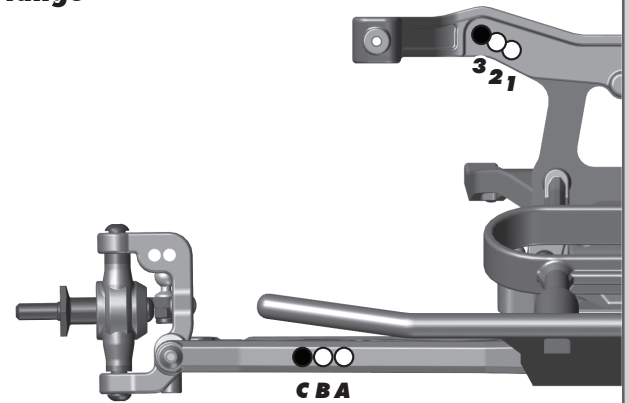

:: Bag 9 - Step 8

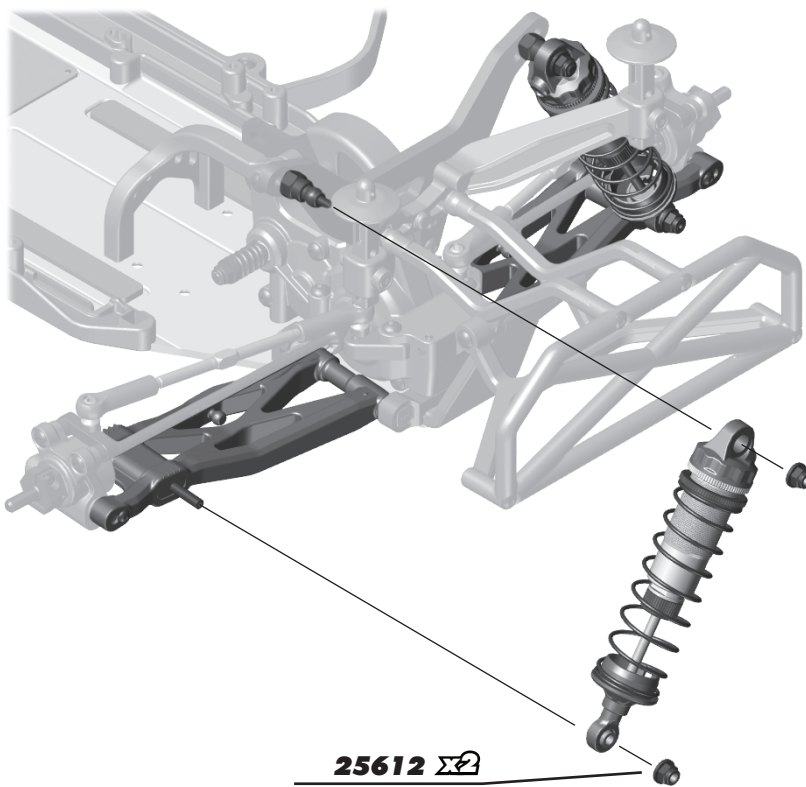

Build x2 (right and left side)

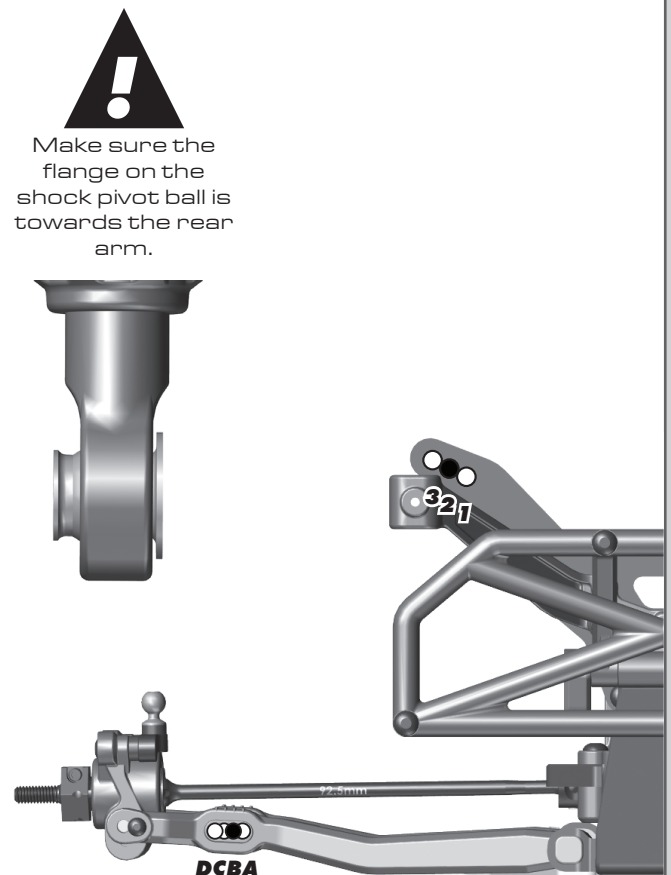

:: Bag 10 - Step 1



See page 25 for
gear mesh setting
instructions!

**Pinion & Setscrew
not included!**

Motor not included!

31532 X2
M3 x 8mm
BHCS

89218 X2
3 x 8mm
Washer

:: Bag 10 - Step 2

**ESC not
included!**

**Receiver not
included!**

6727
Servo
Tape

91158 X2
M3 x 4mm
BHCS

**Transponder
not included!**



Antenna can be mounted
on the right or left side of
the chassis.

:: Bag 10 - Step 3




Fan mount options:
 #1 - Laydown gearbox
 #2 - Layback gearbox
 #3 - Endbell location
 #4 - Plug (no fan)



91978
Fan Mount
#1

Fan not included!

89203
M3 x 16mm
BHCS

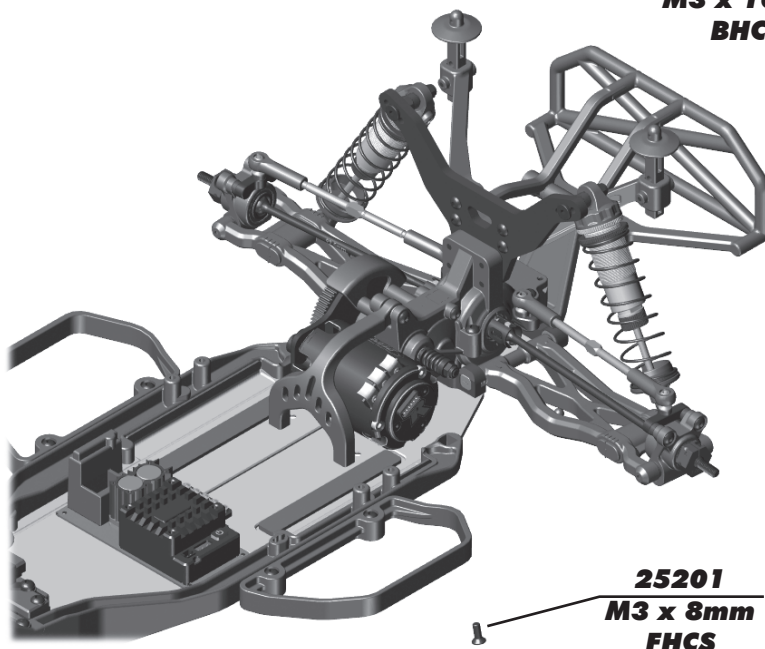


25201
M3 x 8mm
FHCS



:: Bag 10 - Step 4



Make sure the
 battery strap
 shoulder screw is
 flush with the top of
 your battery pack!

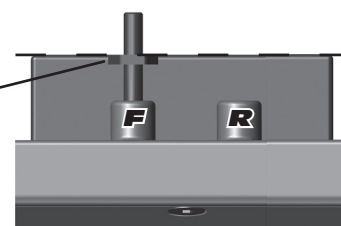

91730 $\Sigma 2$
Battery Strap
Shoulder
Screw

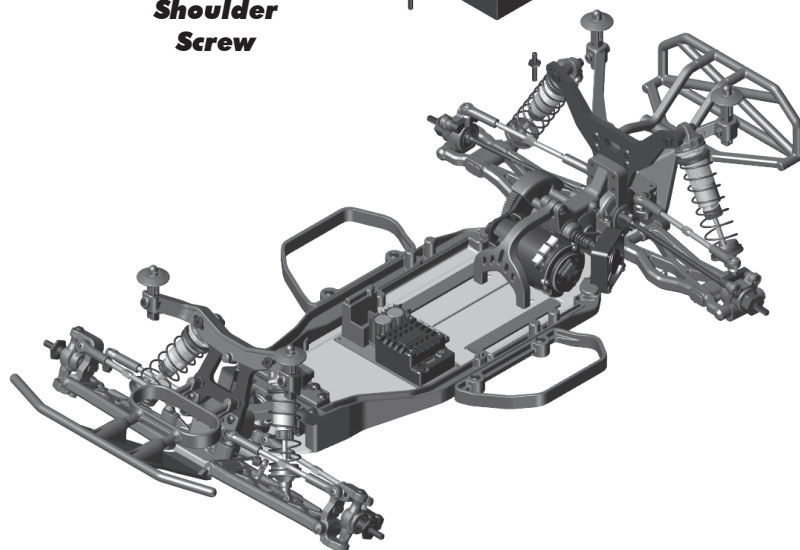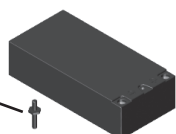


89218 $\Sigma 2$
3 x 8mm
Washer

31531 $\Sigma 2$
M3 x 6mm
BHCS


91731
Battery
Strap, B6

91731 $\Sigma 2$
B6 Battery
Strap Nut

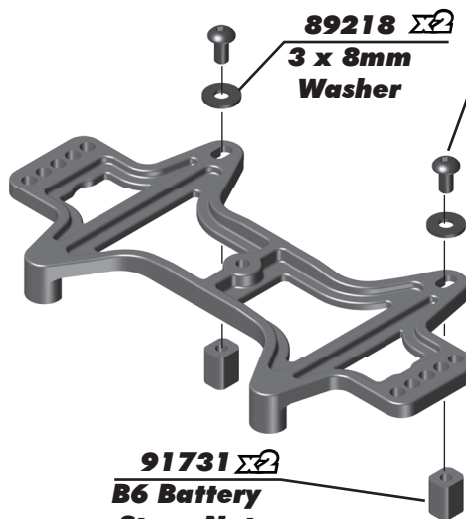


:: Bag 10 - Step 5

Front

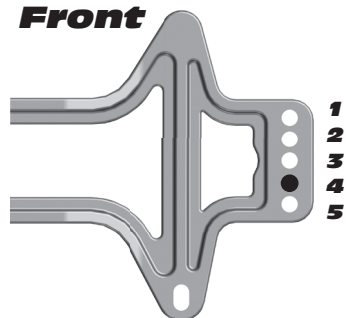

91729

**Thumb
Screw, B6**

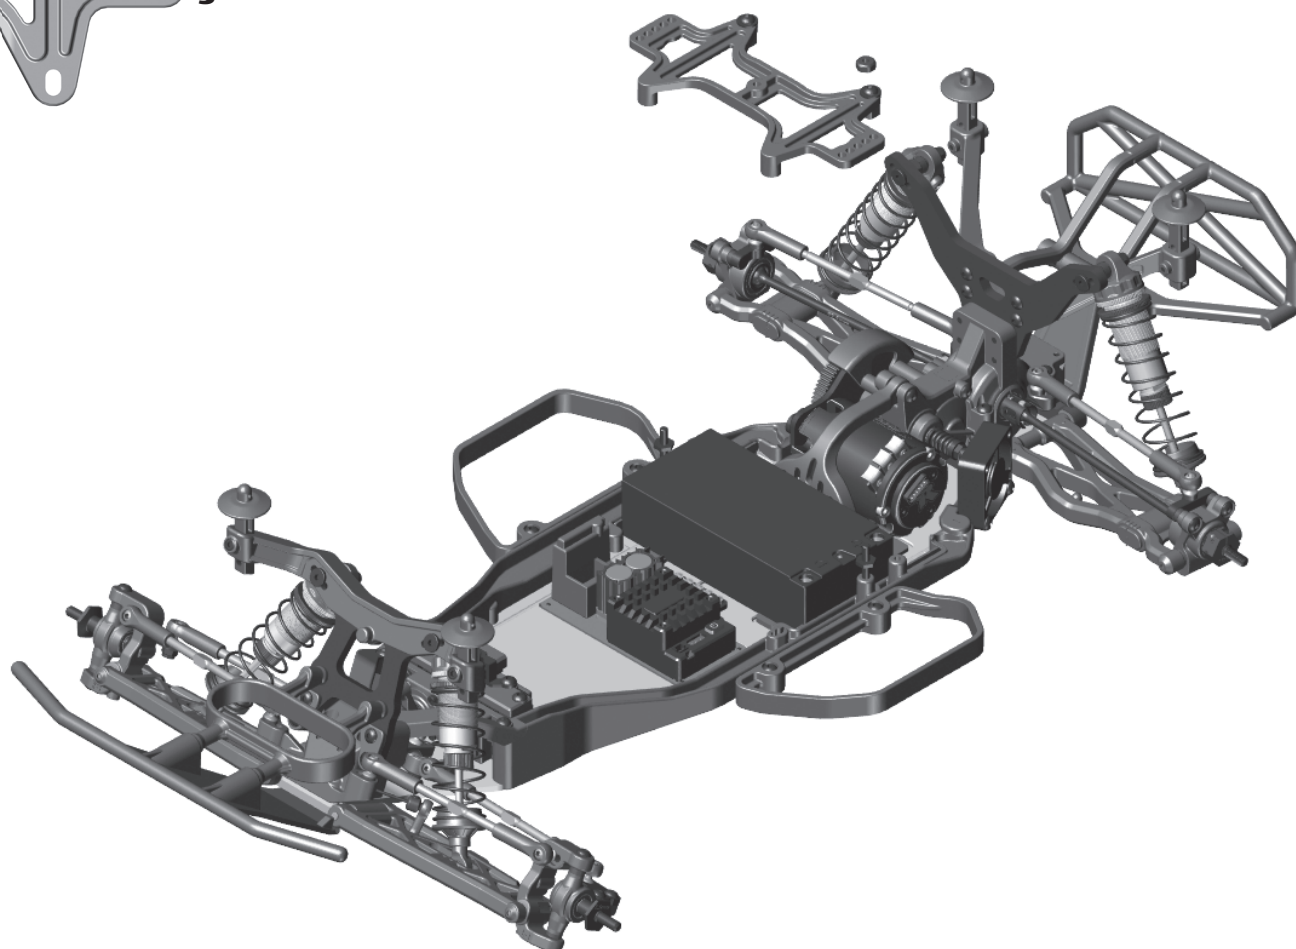

:: Bag 10 - Step 6 - Optional Chassis Brace Configuration *NOT INCLUDED

91885
Rod End




91723
Turnbuckle
3x48mm



91885
Rod End




25612
M3 LockNut
w/Flange

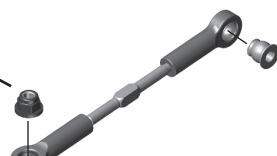

!!OPTION!!
Tune for more
chassis flex


Battery Brace Turnbuckle
Varies with battery position
3F - 29mm



Installation: Remove the
plastic chassis brace
(3 screws) and install the
battery brace turnbuckle
with M3x16mm BHCS

Pro Tip: Set the turnbuckle
length based on battery
position, adjust the length
as needed to mate with the
gearbox.


91819
Shock
Pivot Ball

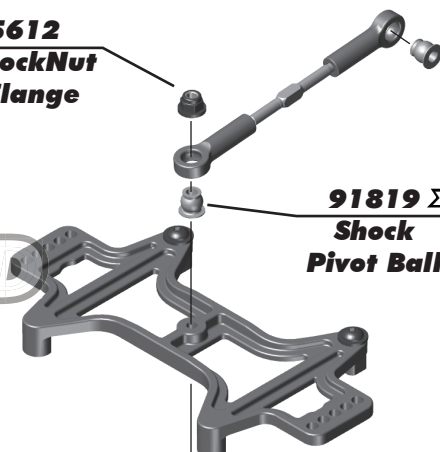

25204
3 x 16mm
FHCS



:: Bag 10 - Step 7

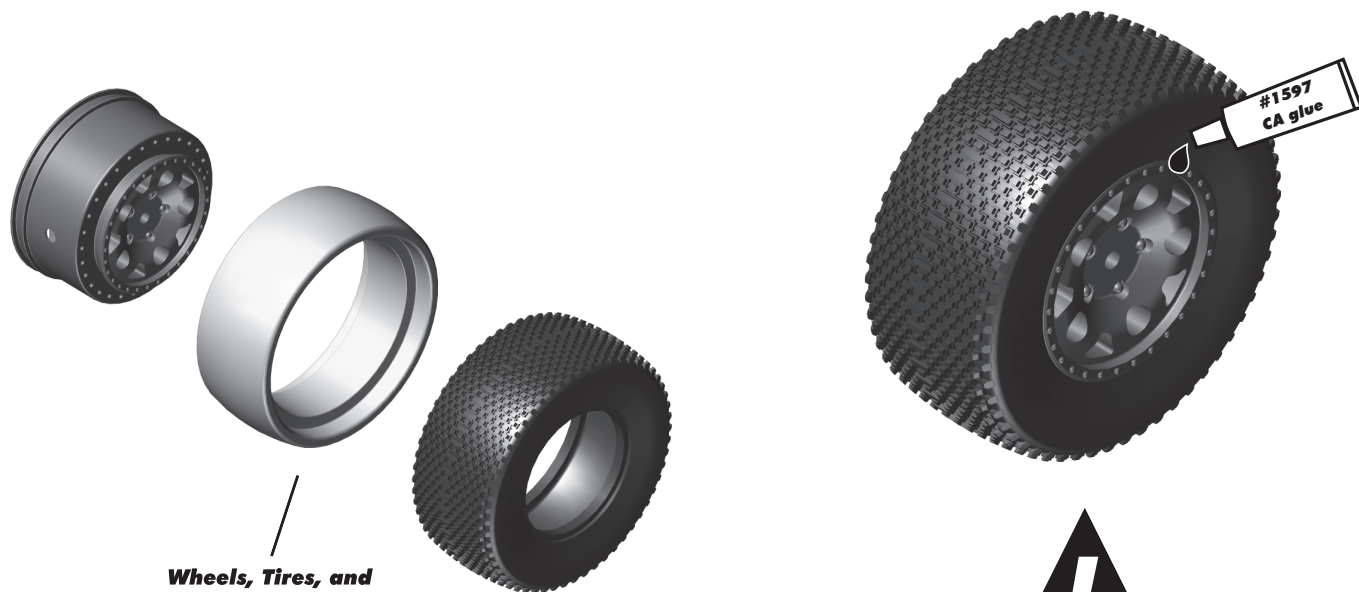

**Wheels, Tires, and
Inserts are
not included!**




Carefully apply CA glue
(tire adhesive) to the tire
bead on the side. Do one
side at a time, allowing it
to dry before gluing the
other side!

CA glue not included!

Build 4

:: Bag 10 - Step 8

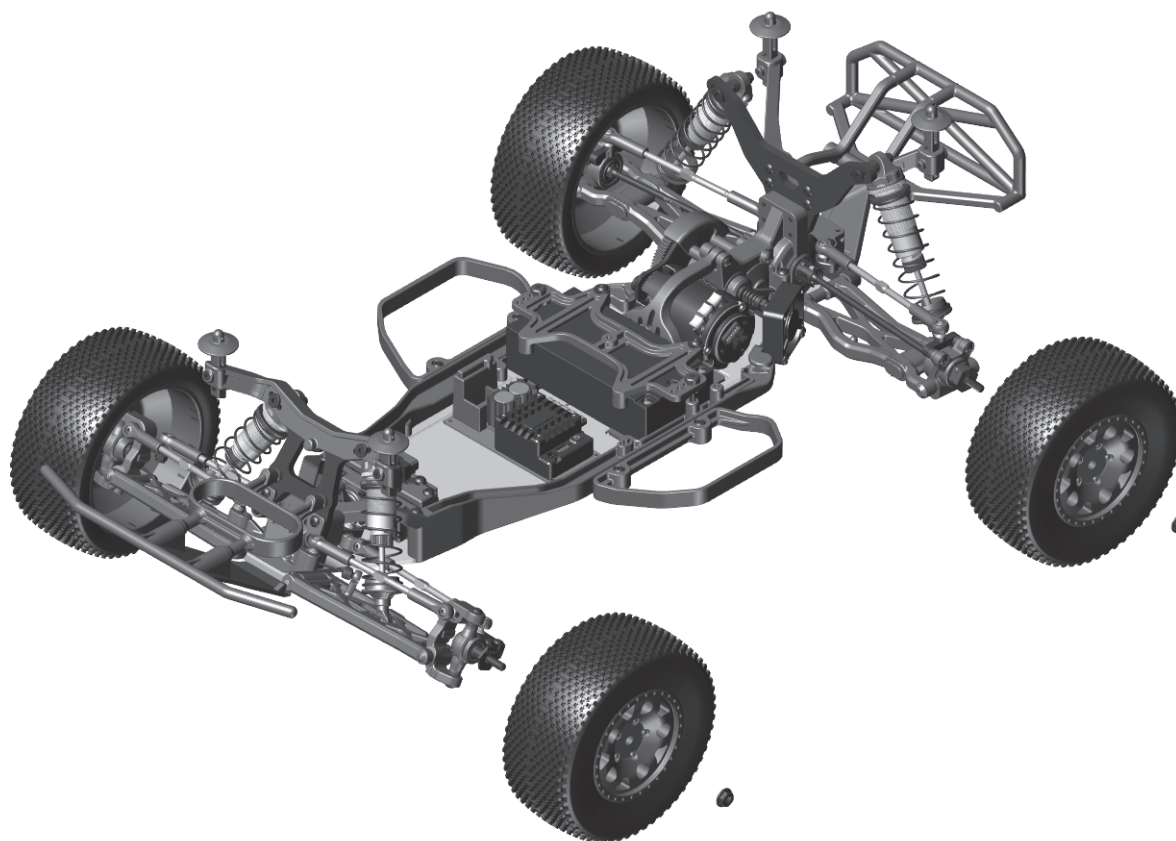

**91150
M4 Low Profile
Serrated Steel
Wheel Nuts**

:: Notes

:: Tuning Tips

Painting:

Your Kit requires a clear polycarbonate body and polycarbonate specific paint. You will need to prep the body before you can paint it. Wash the INSIDE thoroughly with warm water and liquid detergent (do not use any detergents with scents or added hand lotion ingredients!). Dry the body using a clean, soft, lint-free cloth. Use the supplied window masks to cover the windows from the INSIDE of the body (RC cars get painted on the inside). Using high quality masking tape, apply tape to the inside of the body to create a design. Spray (use either rattle can or airbrush) the paint on the inside of the body (preferably dark colors first, lighter colors last). NOTE: ONLY use paint that is recommended for polycarbonate plastics. If you do not, you can destroy the body! After the paint has completely dried (usually after 24 hours), cut the body along the trim lines. Make sure to drill or use a body reamer to make the holes for the antenna if needed! Use hook and loop tape to secure the body to the side rails of the vehicle.

Tips for Beginners:

Before making any changes to the standard setup, make sure you can get around the track without crashing. Changes to your vehicle will not be beneficial if you can't stay on the track. Your goal is consistent laps. Once you can get around the track consistently, start tuning your vehicle. Make only ONE adjustment at a time, testing it before making another change. If the result of your adjustment is a faster lap, mark the change on the included setup sheet (make additional copies of the sheet before writing on it). If your adjustment results in a slower lap, revert back to the previous setup and try another change. When you are satisfied with your vehicle, fill in the setup sheet thoroughly and file it away. Use this as a guide for future track days or conditions. Periodically check all moving suspension parts. Suspension components must be kept clean and move freely without binding to prevent poor and/or inconsistent handling.


Rear Arm Mount Pill Insert Setup:

The aluminum rear arm mounts utilize eccentric pill inserts to make fine adjustments to anti-squat, toe, pin heights, and pin width. Adjustments can be made using the supplied inserts (#92014)

Standard Position

Use this position as a reference when changing pill locations.

Toe: 3°
Anti-squat: 1°
Roll Center: +0
Pivot Width: +0

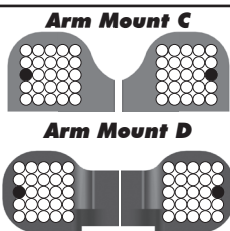

Insert Hole Locations



Number indicates degree of change:
0.5°, 1.0°, 0° (center dot)



Hole 0.5° or 0.35mm from center



Hole 1.0° or 0.7mm from center

Anti-squat Angle

More angle = More anti-squat
Less angle = Less anti-squat
Shown in 1° changes




C Mount

D Mount

		= 1°
		= 0°
		= -1°
		= 2°
		= 1°
		= 0°
		= 3°
		= 2°
		= 1°

Toe Angle

More angle = More toe in
Less angle = Less toe in
Shown in 1° changes




C Mount

D Mount


		= 3°
		= 4°
		= 5°
		= 2°
		= 3°
		= 4°
		= 1°
		= 2°
		= 3°

Possible Insert Locations

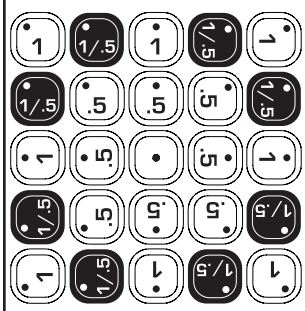

Pin Width

More distance = wider pivot
Less distance = narrow pivot
*Note: For pin width -1.4mm, use 67mm CVA driveshafts



C Mount

D Mount

		= +1.4mm
		= +0.7mm
		= 0mm
		= -0.7mm
		= -1.4mm*

Pin Height

Higher pin = Higher roll center
Lower pin = lower roll center



C Mount

D Mount

		= +0.7°mm
		= +0.35°mm
		= 0mm
		= -0.35°mm
		= -0.7°mm



For additional setup tips, please visit our website by using the link or QR code below.

<http://bit.ly/B6PillChart>



:: Tuning Tips (cont.)


Motor Gearing:

Proper motor gearing will result in maximum performance and run time while reducing the chance of overheating and premature motor failure. The gear ratio chart lists recommended **starting gear ratios** for the most widely used motor types. Gear ratios will vary depending upon motor brand, wind, and electronic speed control. Consult your motor and electronic speed control manufacturers for more information.

Team Associated is not responsible for motor damage due to improper gearing.

SC6 Gear Ratio Chart (Internal Gear Ratio 2.60:1)

Motor	Pinion	Spur	Final Drive Ratio
21.5 Reedy S-Plus Brushless	32	81	6.58:1
17.5 Reedy S-Plus Brushless	27	81	7.80:1
13.5 Reedy S-Plus Brushless	25	81	8.42:1
10.5 Reedy 540-M4 Brushless	24	81	8.78:1
9.5 Reedy 540-M4 Brushless	23	81	9.16:1
8.5 Reedy 540-M4 Brushless	22	81	9.57:1
7.5 Reedy 540-M4 Brushless	21	81	10.03:1
6.5 Reedy 540-M4 Brushless	20	81	10.53:1

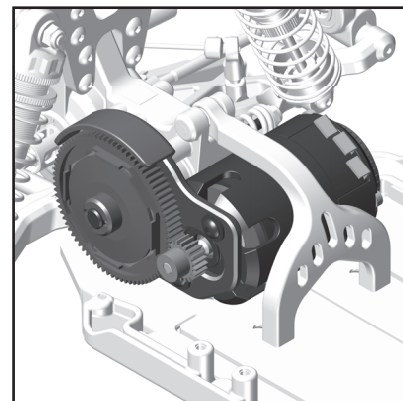

Set The Gear Mesh:

You should be able to rock the spur gear back and forth in the teeth of the pinion gear without making the pinion gear move. If the spur gear mesh is tight, then loosen the #31532 screws (p. 19) and move the motor away, then try again. A gear mesh that is too tight or too loose will reduce power and damage the gear teeth.

Diff Height Adjustment:

Diff height adjustment (p.12) .

On high grip surface when using low ride heights, a higher diff height would be a good option.

On low grip surface when using high ride heights, a lower diff height would be better.

Gear Box Type:

Selecting the correct gear box is dependent on the type of track it will be used on. The optional 4-gear standup gear box is for the lowest grip conditions. This gear box moves the weight towards the rear of the car and also uses the rotation of the motor to transfer weight to the rear while on-power. The 3-gear standup gear box also moves the weight towards the rear of the car, but in this configuration, the motor's rotation helps with on-power steering. The laydown gear box is used on high grip conditions when on-power steering and stability are most important. This gear box will change directions the quickest and generate the most steering. Layback is used for most indoor clay track conditions.

Slipper Clutch:

The assembly instructions give you a base setting for your clutch. Turn the nut on the shaft so that the end of the top shaft is even with the outside of the nut. At the track, tighten or loosen the nut in 1/8 turn increments until you hear a faint slipping sound for 1-2 feet on takeoffs. Another popular way to set the clutch is to hold both rear tires firmly in place and apply short bursts of throttle. If the clutch is properly set, the front tires should lift slightly up off the surface.


Caster:

Caster describes the angle of the caster block as it leans toward the rear of the vehicle. Positive caster means the kingpin leans rearward at the top. The kit includes three inserts to adjust caster angle at the caster block, 0°, 2.5°, and +5°. The total caster angle is the sum of the kick-up angle and the caster block angle. Standard total caster angle for the B6 is 30°, with 25° kick-up and +5° caster block angle.

For less entry steering and more exit steering, try 0° caster block angle.

Front Camber:

Camber describes the angle at which the tire and wheel rides when looked at from the front. Negative camber means that the tire leans inward at the top. A good starting camber setting is -1°. Positive camber, where the top of the tire is leaning out, is not recommended. A camber gauge can be used to more accurately set camber.

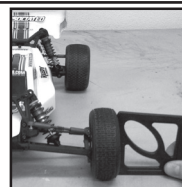

Testing camber
with camber gauge

Rear Camber:

Camber describes the angle at which the tire and wheel rides when looked at from the back. Negative camber means that the tire leans inward at the top. A good starting camber setting is -1°. Adding a small amount of positive camber, where the top of the tire is leaning out, will tend to improve straight-line acceleration on loose tracks. A camber gauge can be used to more accurately set camber.

FIND IT ON ASSOCIATEDELECTRICS.COM

CARS & TRUCKS



Vehicle Spare Parts

GO TO:

AssociatedElectrics.com →
Team Associated tab →
Cars & Trucks →
Scroll to your vehicle →
Parts & Accessories link

**SETUP SHEETS
& MANUALS**



Setups and Manuals

GO TO:

AssociatedElectrics.com →
Team Associated tab →
Manuals & Setups →
Scroll to your vehicle

A-TEAM APPS



Tuning Guides & Tips

GO TO:

AssociatedElectrics.com →
Support →
A-Team Apps



Associated Electrics, Inc.

21062 Bake Parkway Lake Forest, CA 92630 USA

call: (949) 544-7500 - fax: (949) 544-7501


***Check out the following web sites for all of our kits, current products,
new releases, setup help, tips, and racing info!***

www.AssociatedElectrics.com

FOLLOW US ON SOCIAL MEDIA



**TeamAssociated
ReedyPower
ElementRC**

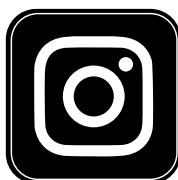

**@TeamAssociatedRC
@ReedyPower
@Element_RC**



**@Team_Associated
@ReedyPower**