



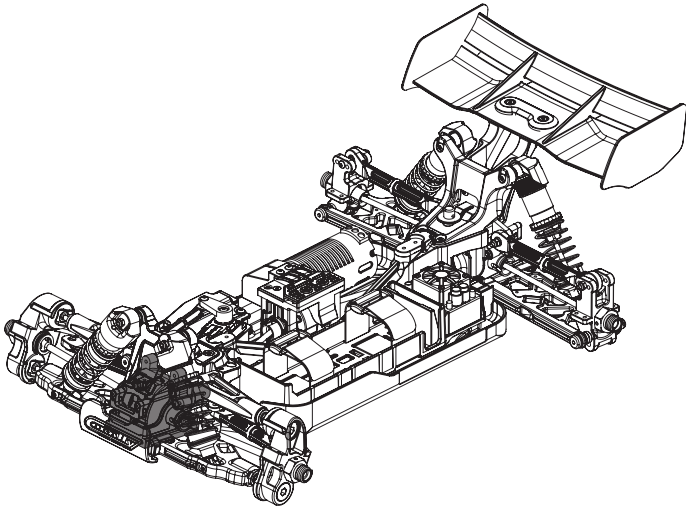


Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 
- Lithium Grease 


STEP 1

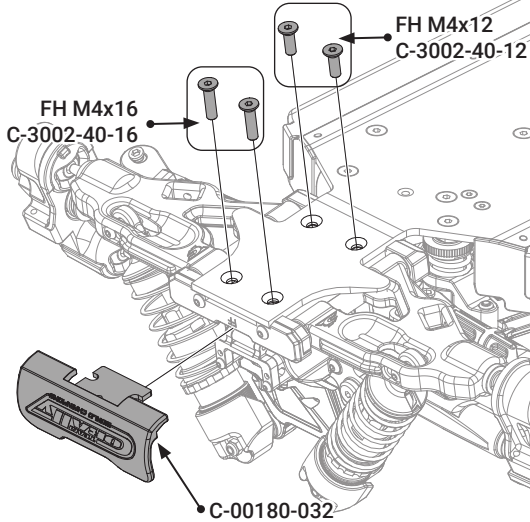

STEP 2

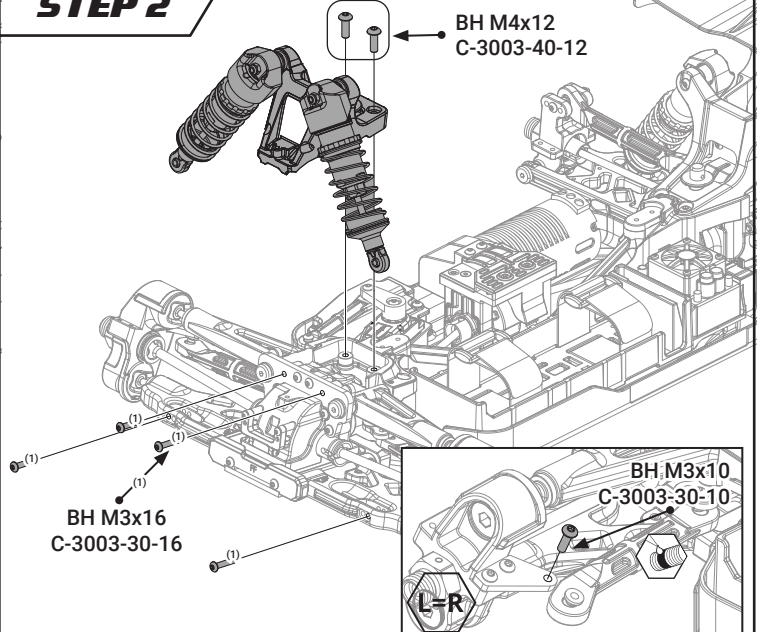


STEP 3

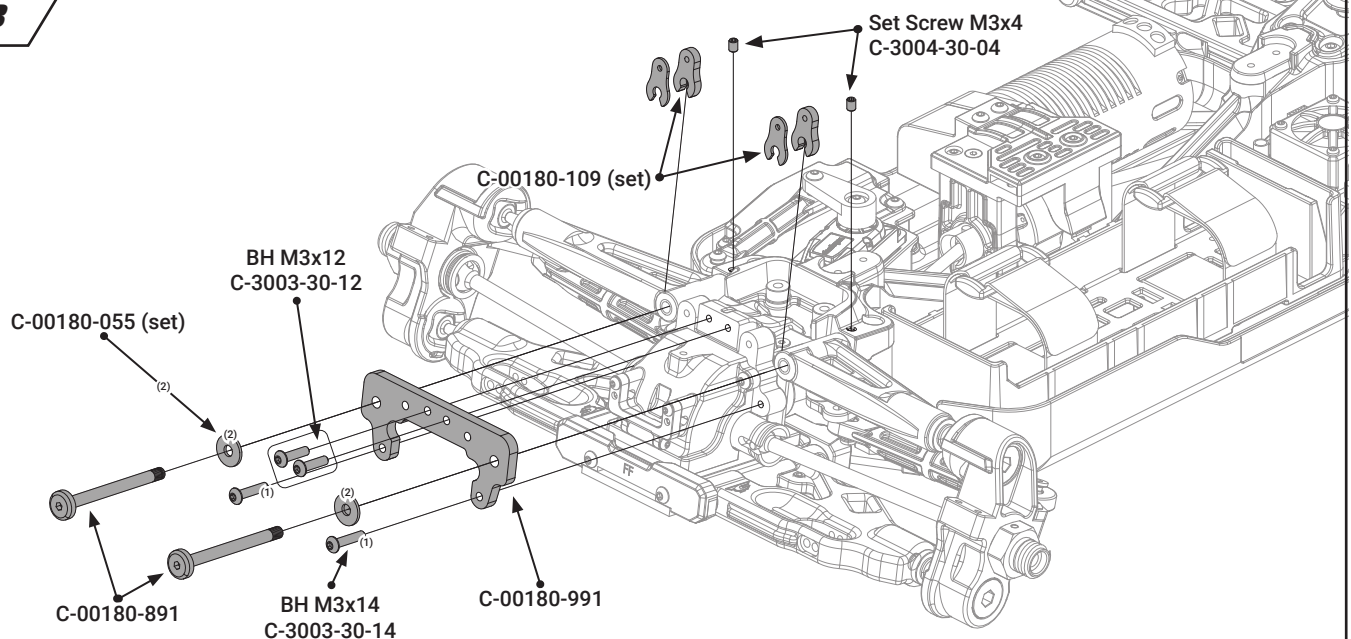

STEP 4


FH M4x12
C-3002-40-12

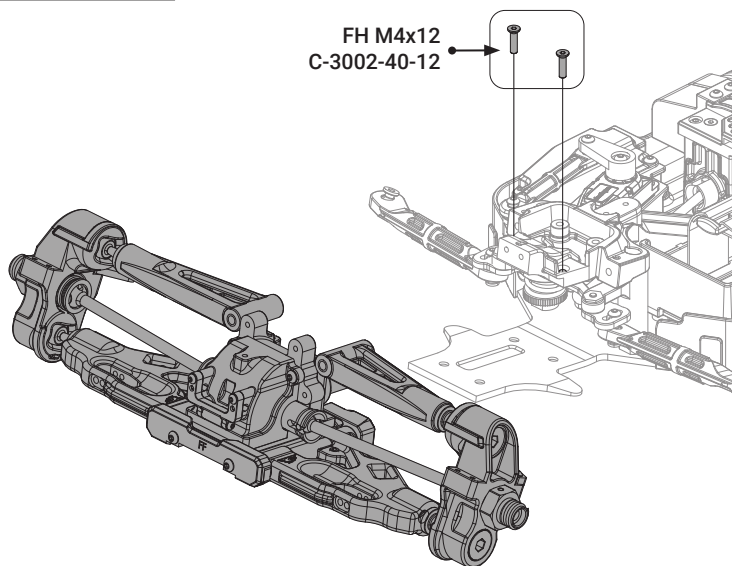

STEP 5


BH M3x16
C-3003-30-16

C-00180-1001 (set)

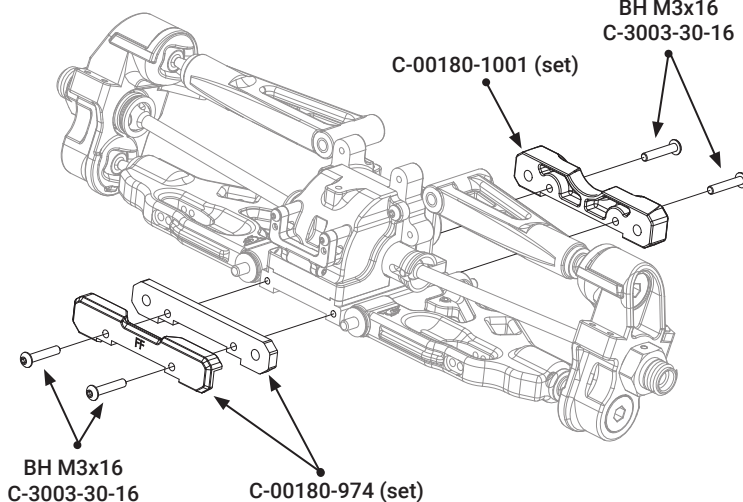

STEP 6

BH M3x10
C-3003-30-10

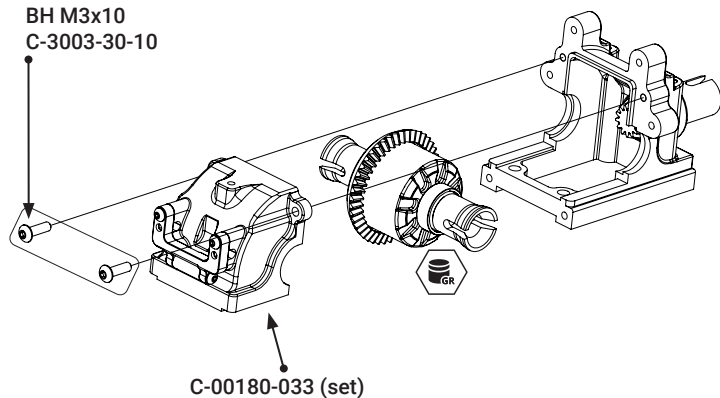

STEP 7

C-00180-033 (set)

C-00180-689

C-00180-155-3

BB 8x16x5
C-3611-3-08-16-05

Set Screw M5x5
C-3004-50-05

