



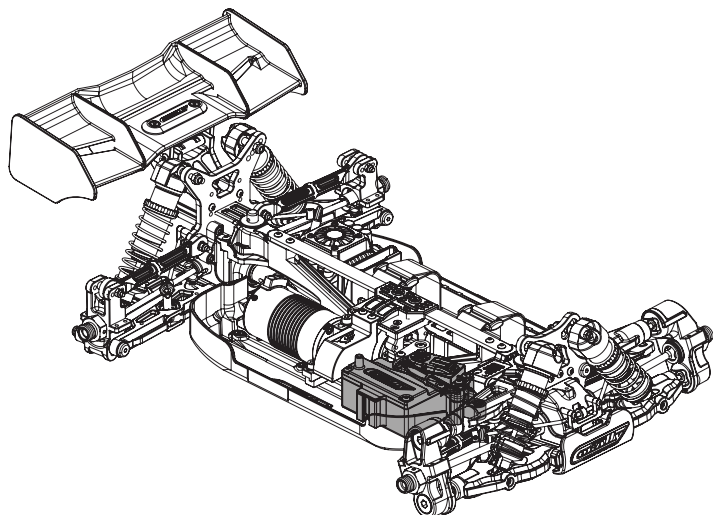


Required Tools:

- 2.0 Hex Driver
- 2.5 Nutdriver
- shock pliers


STEP 1

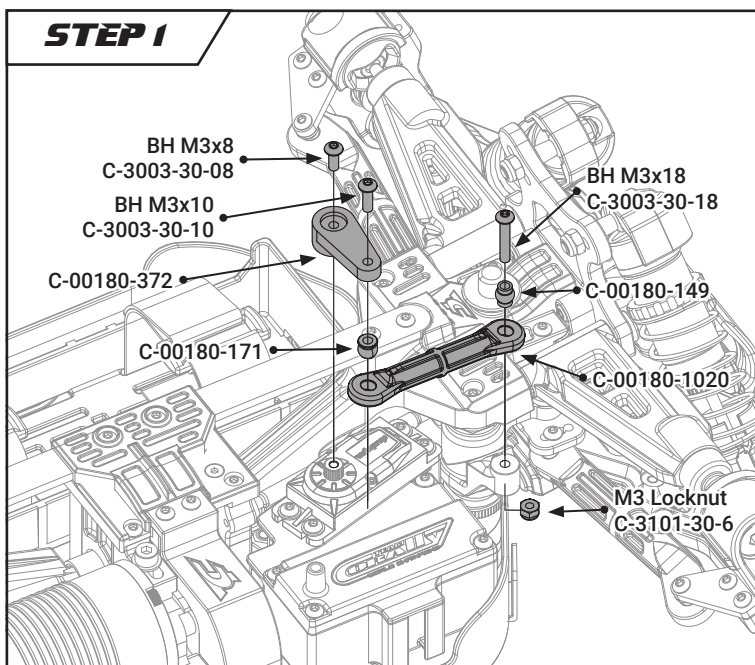

STEP 2

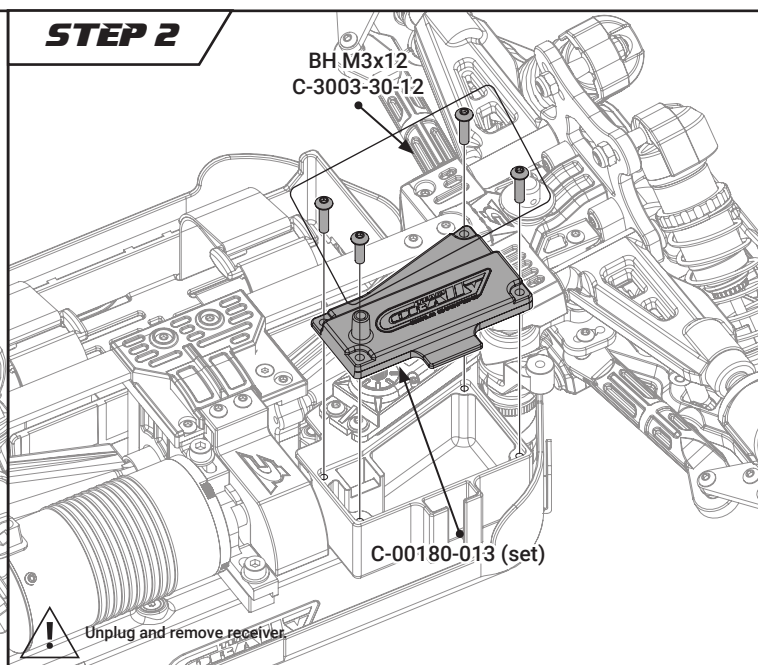

STEP 3

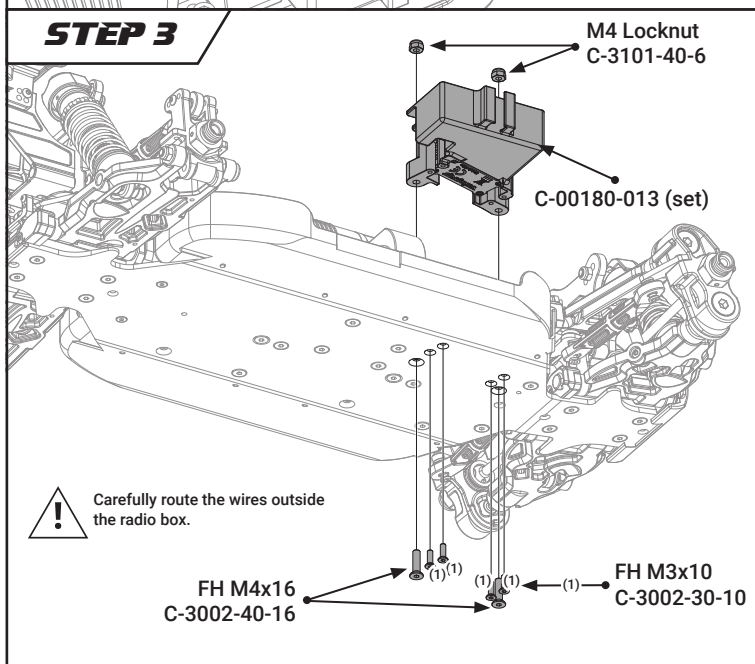

STEP 4

