


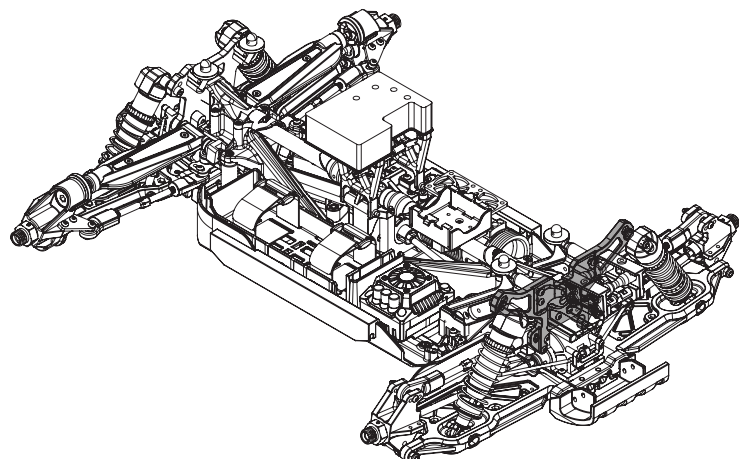


Required Tools:

- 2.0 Hex Driver
- 5.5 Hex Nutdriver
- 7.0 Hex Nutdriver
- Thread-locker 


Important Notice:

Wing is not shown for clarity.


STEP 1

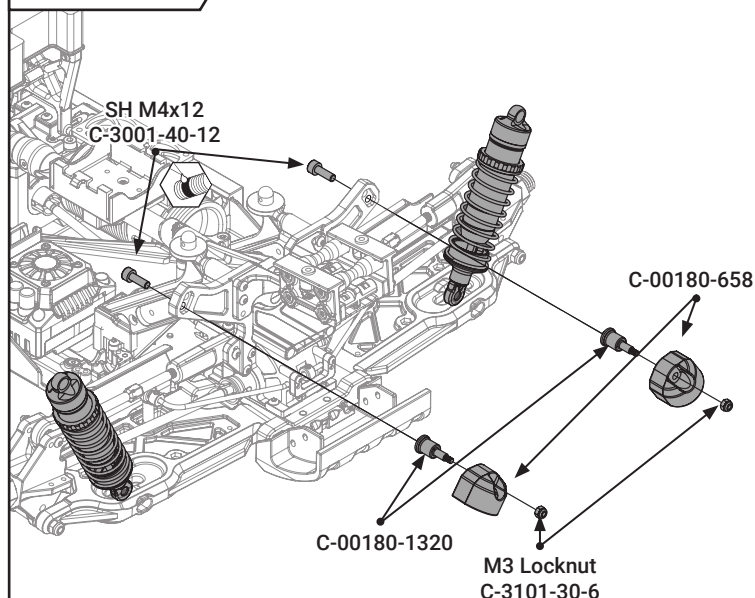


STEP 2

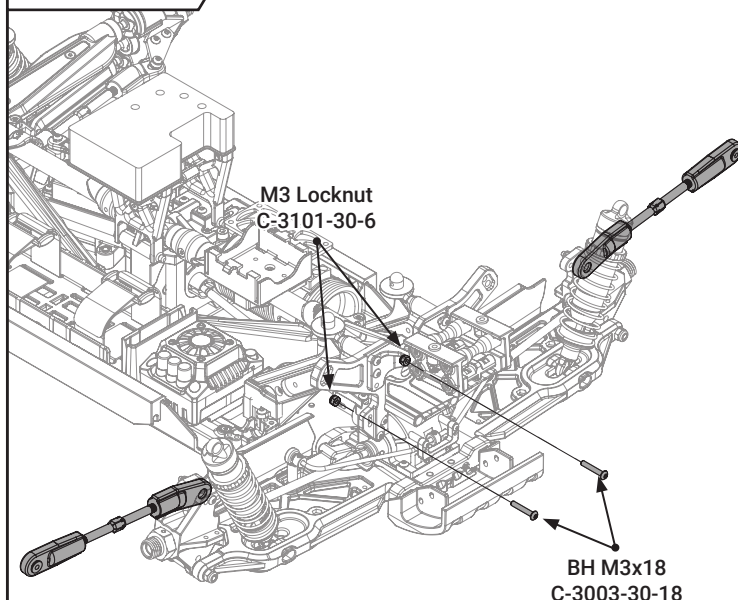

STEP 3

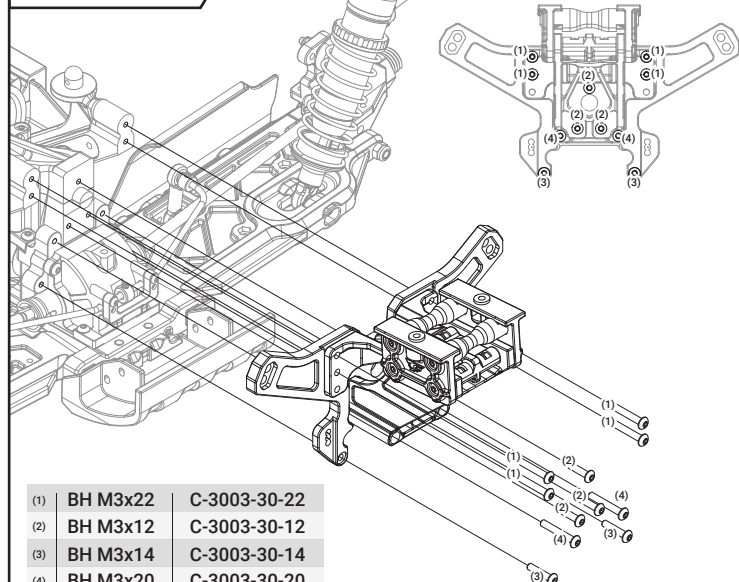

STEP 4

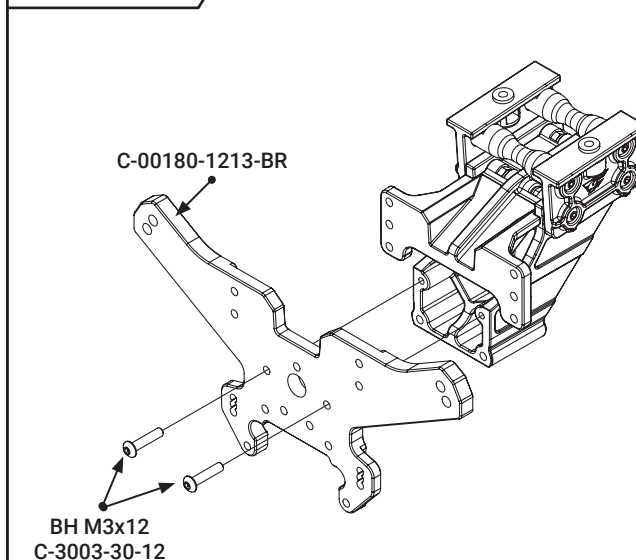

(1)	BH M3x22	C-3003-30-22
(2)	BH M3x12	C-3003-30-12
(3)	BH M3x14	C-3003-30-14
(4)	BH M3x20	C-3003-30-20