
BATTERY/ESC TRAY

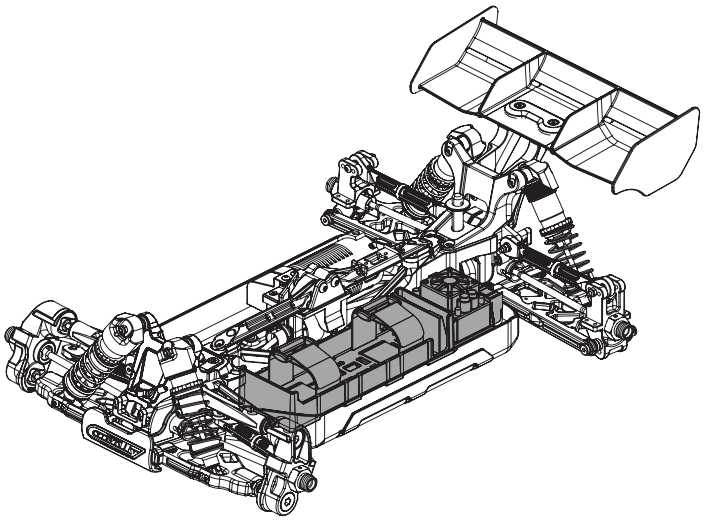


Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Double-side tape


Finish Before:

- Servo/Receiver Box

STEP 1

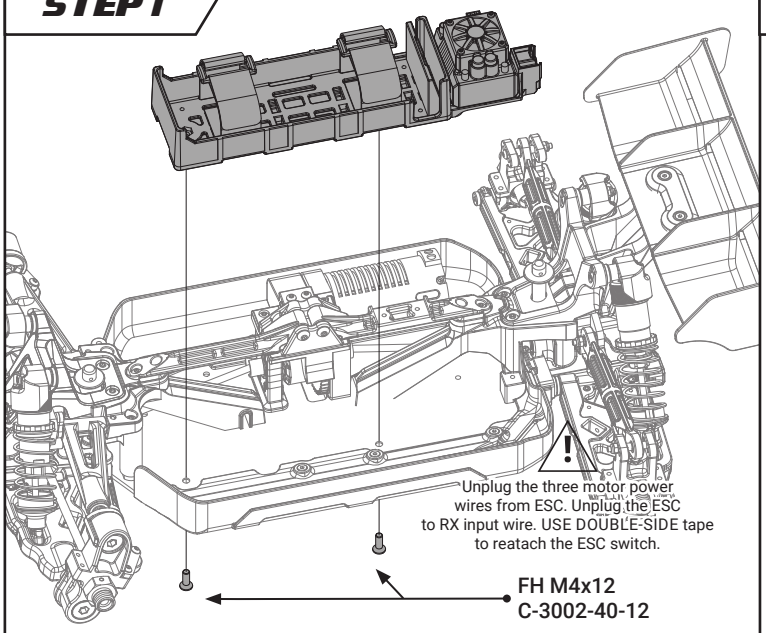

STEP 2

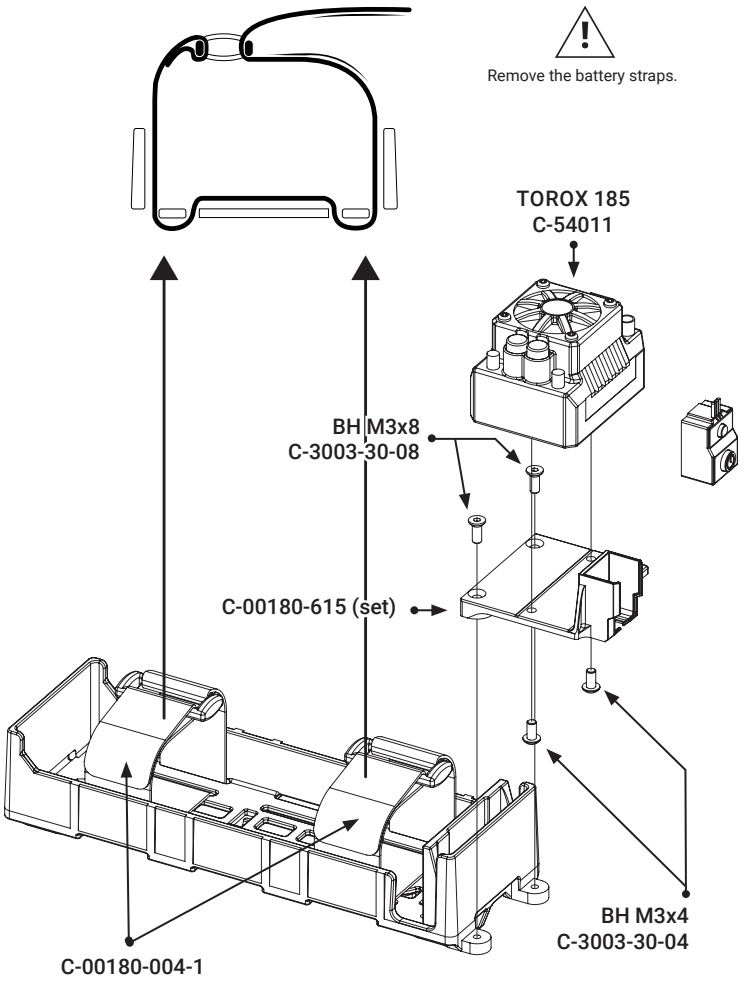

STEP 3

