



5. FINAL ASSEMBLIES

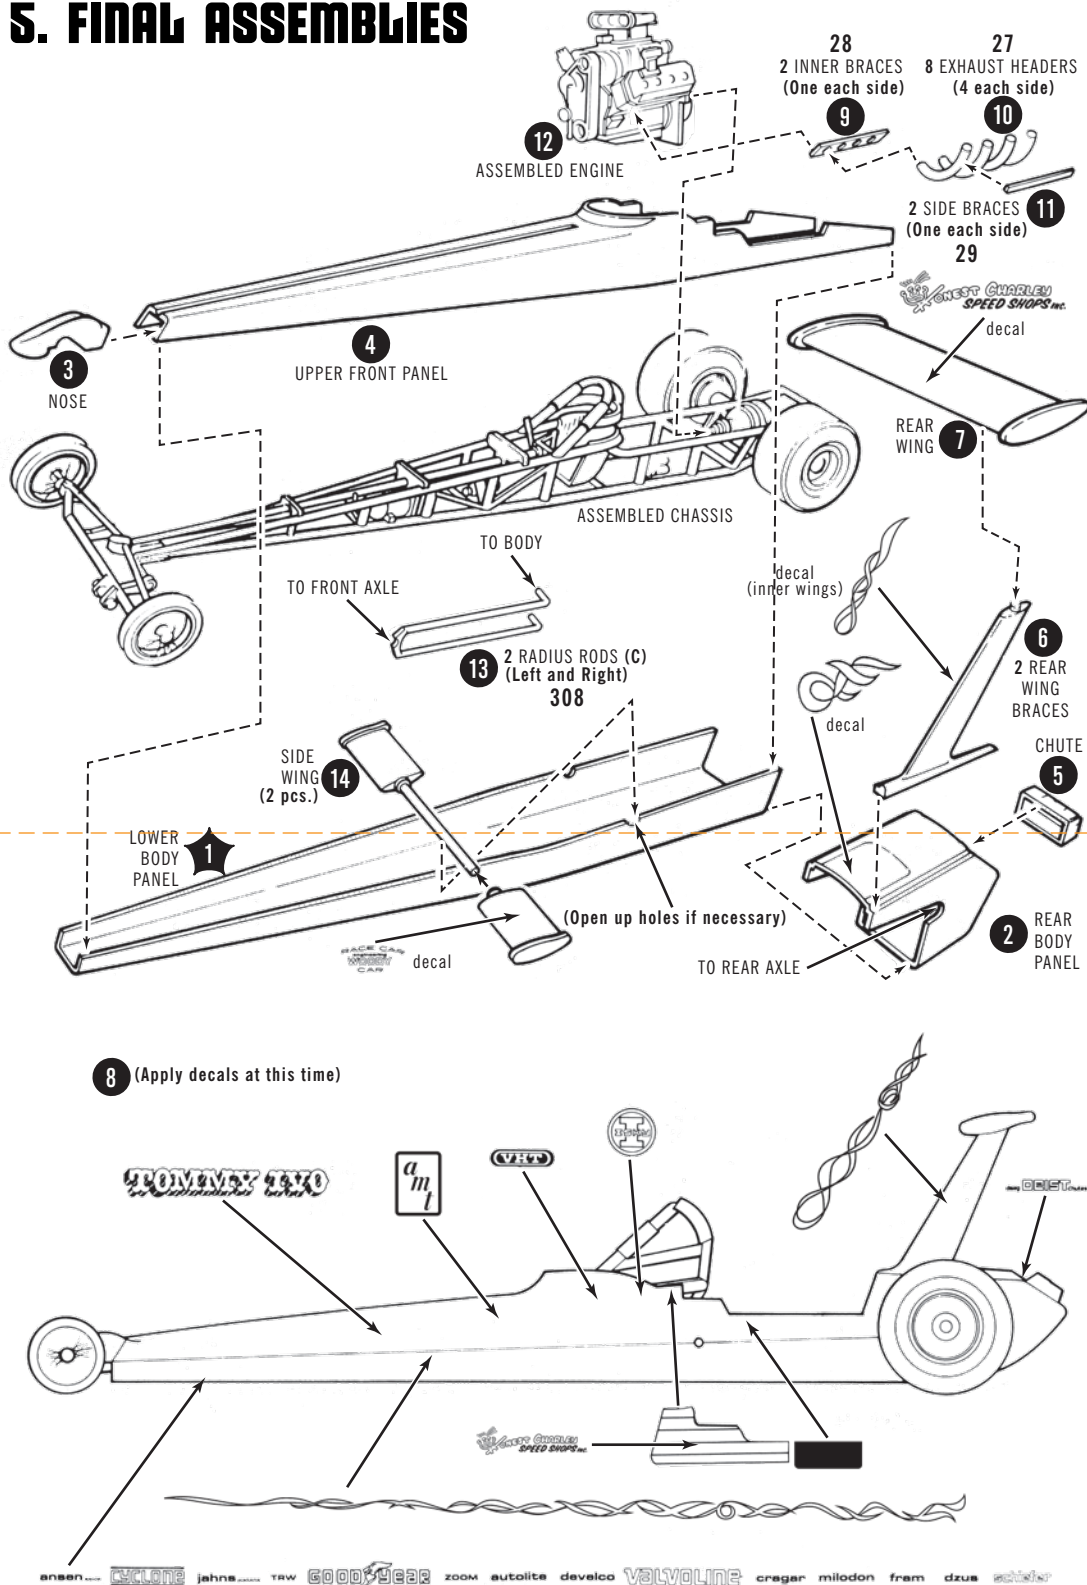


REAR ENGINE AA/FUELER

Cement all parts unless otherwise indicated.


AMT® kits are molded from the finest high-impact styrene plastic. Use only paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching "CHROME" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces.

GOODYEAR
OFFICIAL LICENSED PRODUCT


1. ENGINE

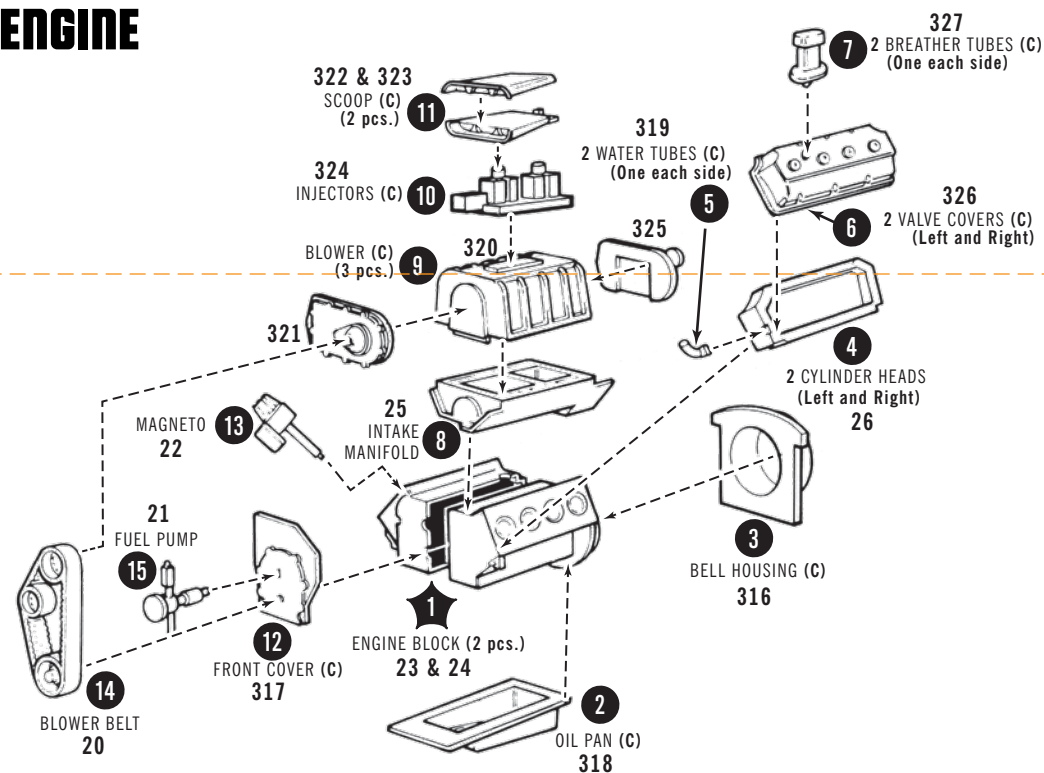

2. WHEELS

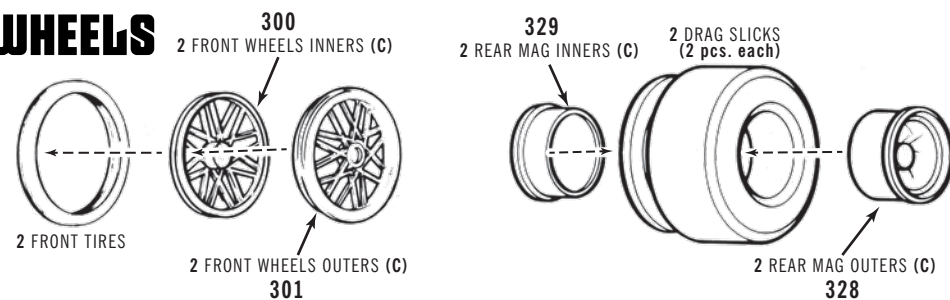

3. CHASSIS

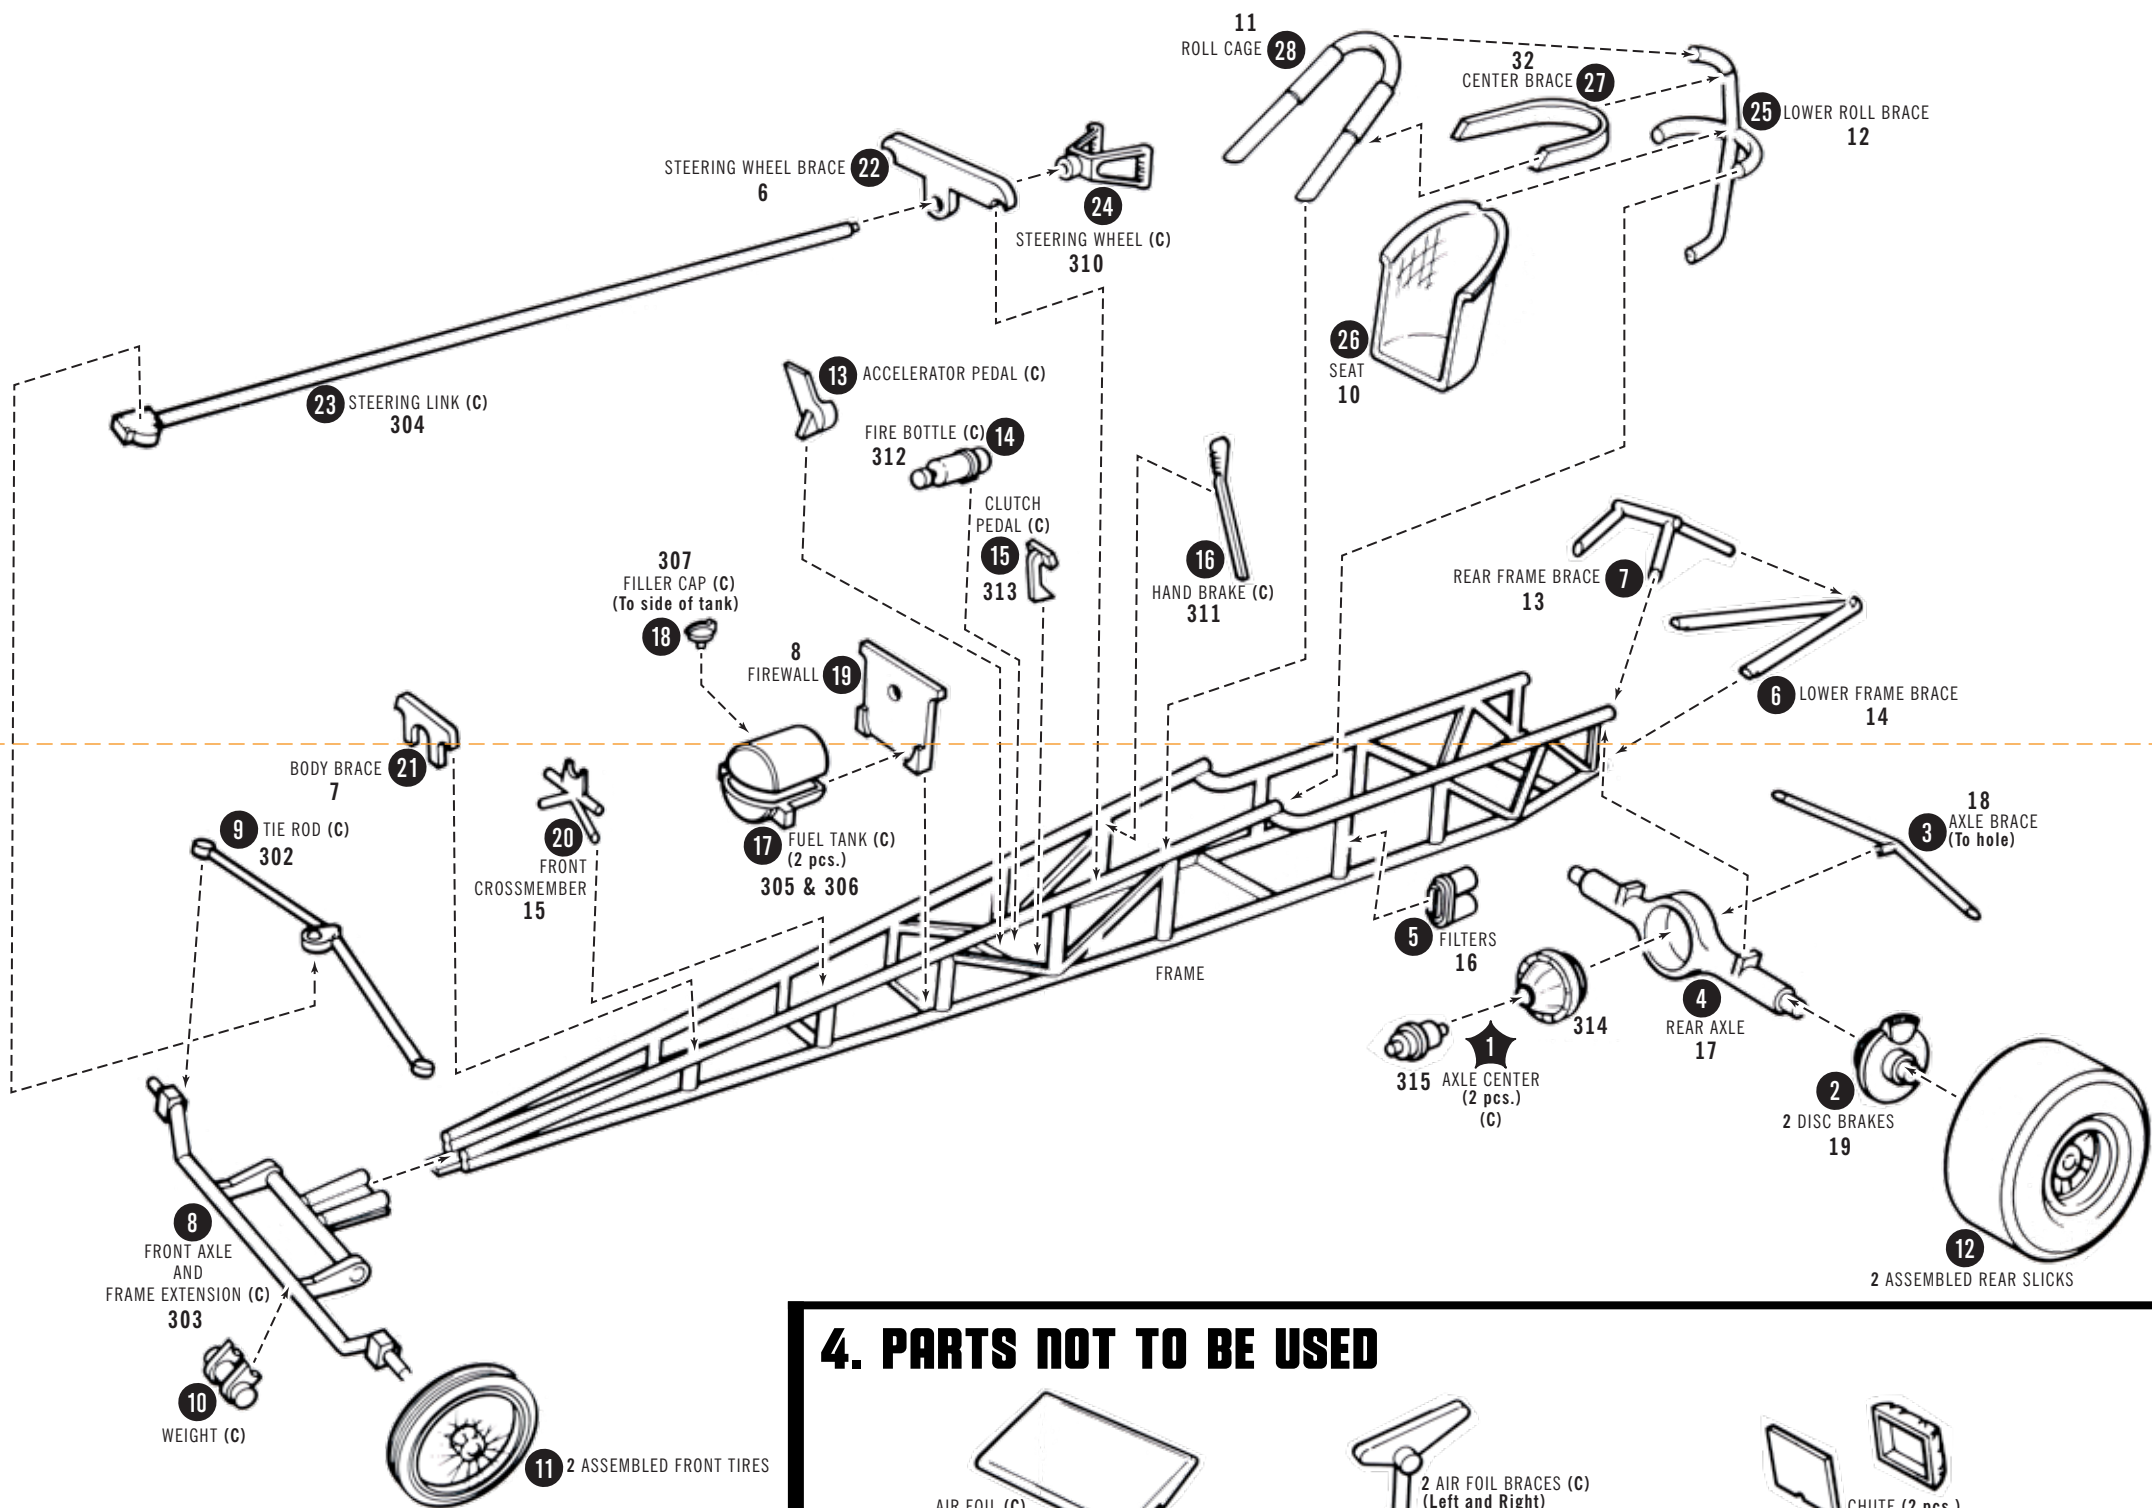

4. PARTS NOT TO BE USED

