


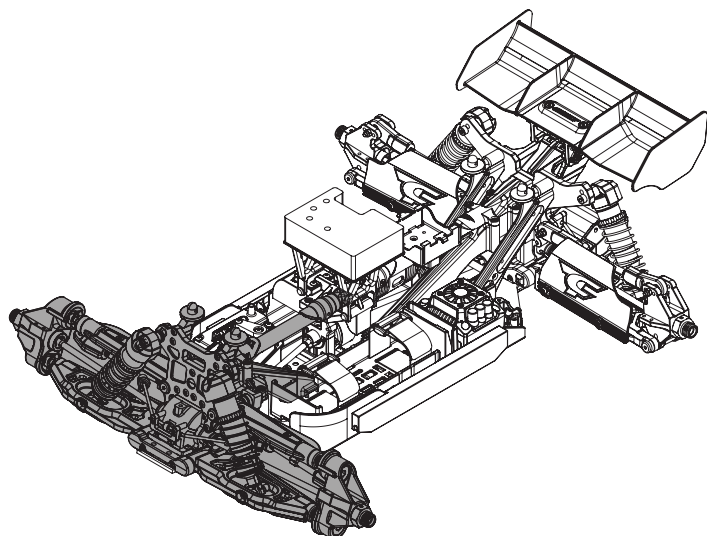

Required Tools:


- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 

Finish Before:

- Front Skid Plate

STEP 1

BH M3x10
C-3003-30-10

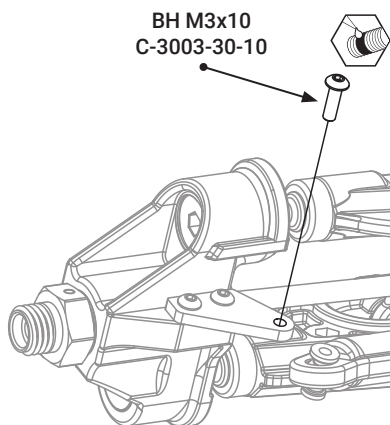


L=R

STEP 2

BH M3x10
C-3003-30-10


BH M4x25
C-3003-40-25

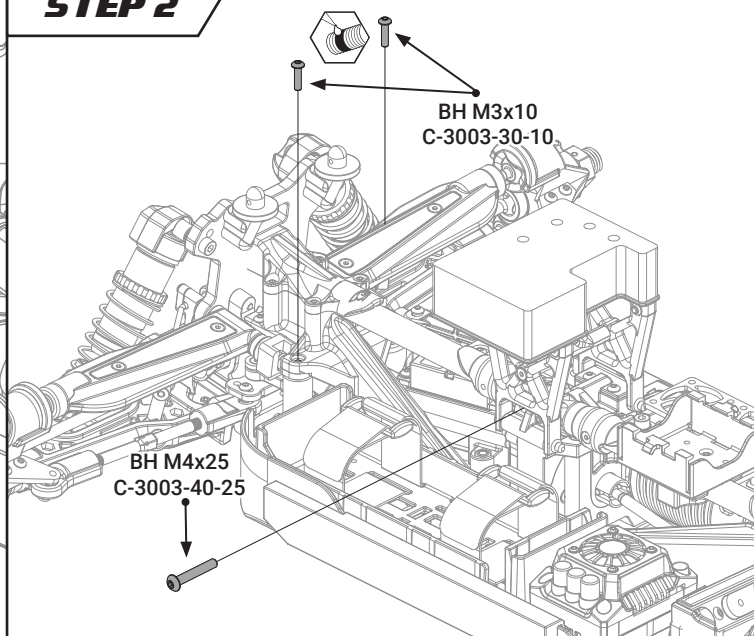

STEP 3

FH M4x12
C-3002-40-12

FH M4x12
C-3002-40-12

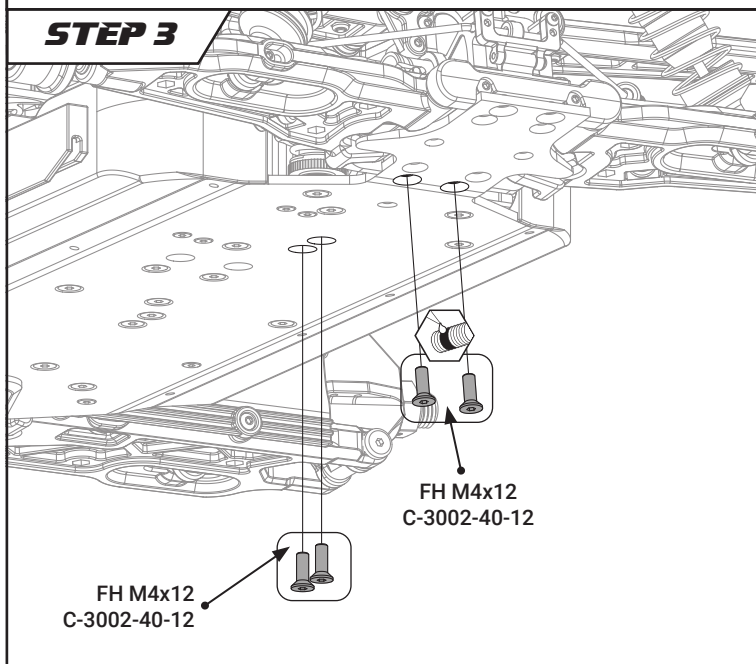

STEP 4



Don't forget to re-install the driveshafts, gearbox gasket, and the rubber bushings in the outdrives.

C-00180-889

