


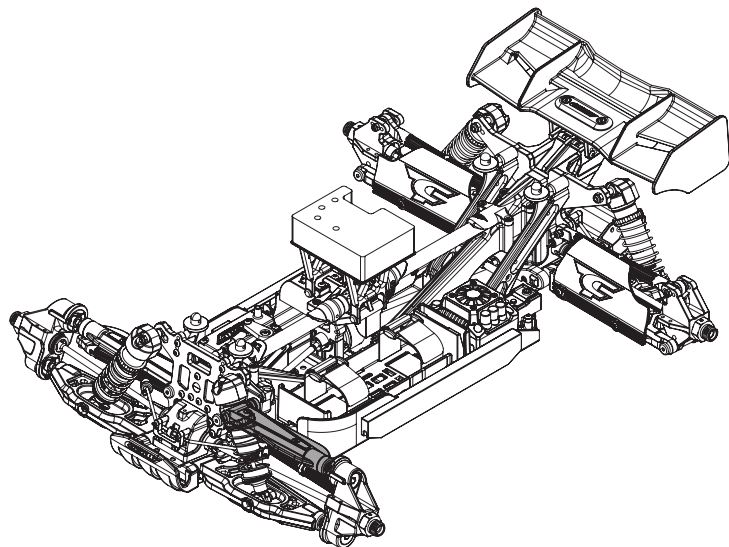

Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 

STEP 1

BH M3x10
C-3003-30-10

L=R

STEP 2

Set Screw M3x5
C-3004-30-05

C-00180-891

C-00180-1036

L=R

STEP 3

FH M3x12
C-3002-30-12

C-00180-1068 (left)
C-00180-1069 (right)

C-00180-530

C-00180-532

M3 Locknut
C-3101-30-6

L=R