

REAR UPPER SUSPENSION LINK

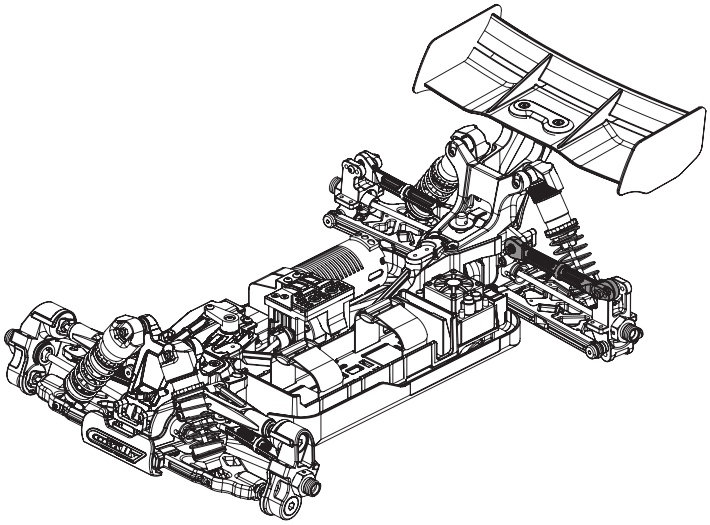


Required Tools:

- 2.0 Hex Driver
- Hex Cross Wrench and optionally 5.5 Nutdriver
- Shock Pliers

STEP 1

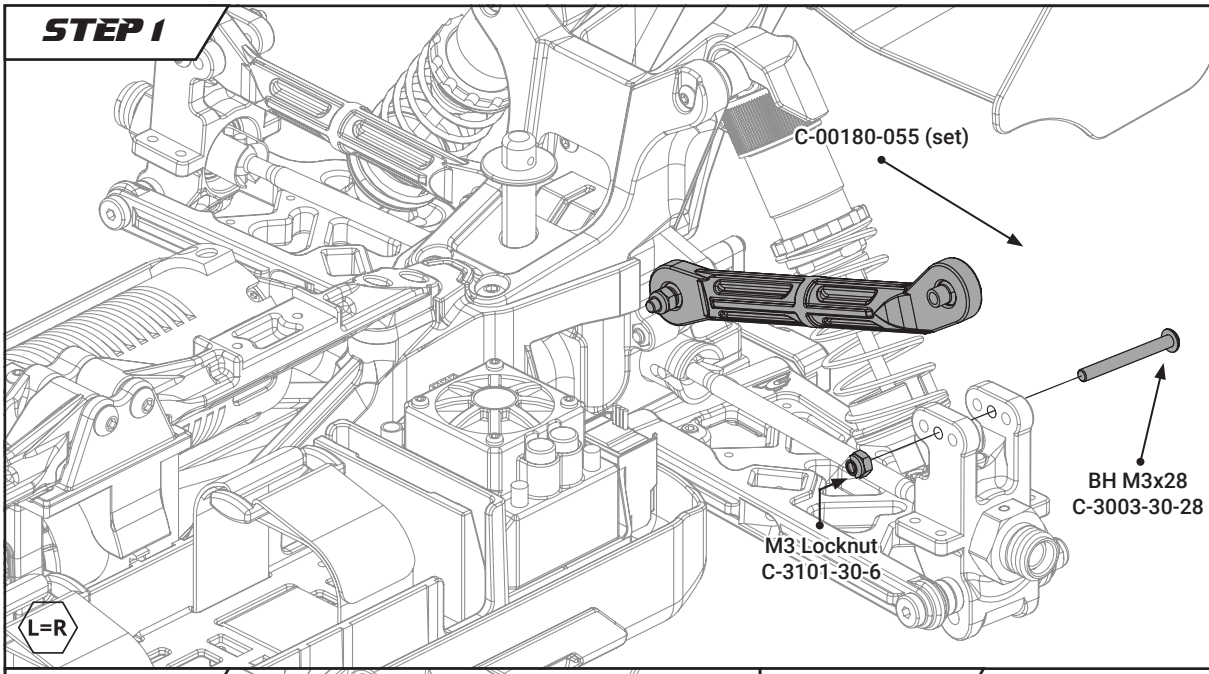

STEP 2

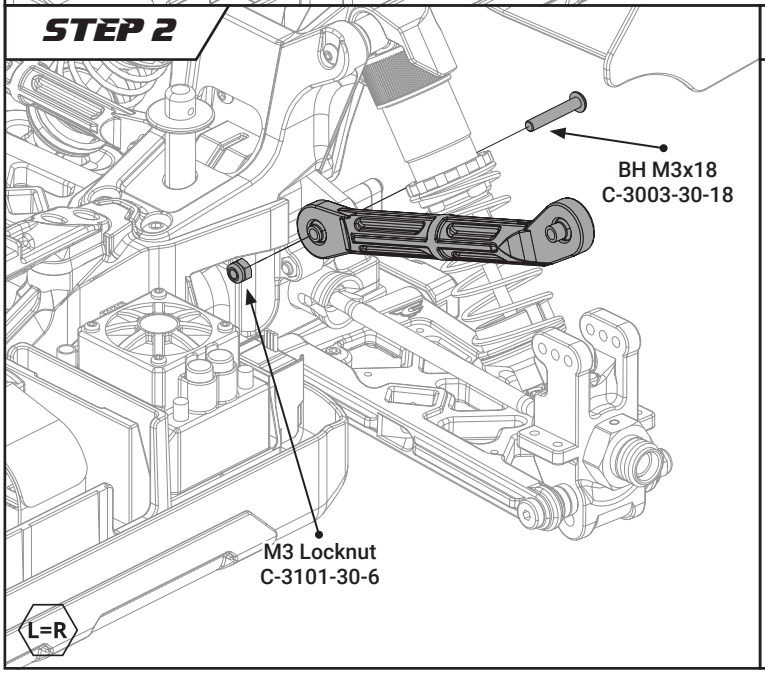

STEP 3

