


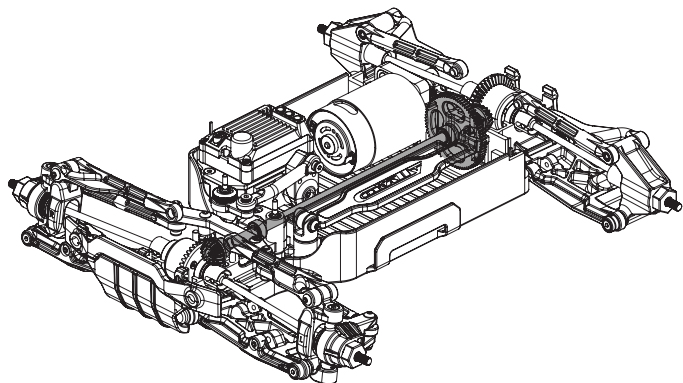


Required Tools:

- 2.0 Hex Driver
- Thread-locker
- Lithium Grease


Finish Before:

- Front Tower / Diff Removal
- Rear Tower / Diff Removal


STEP 1

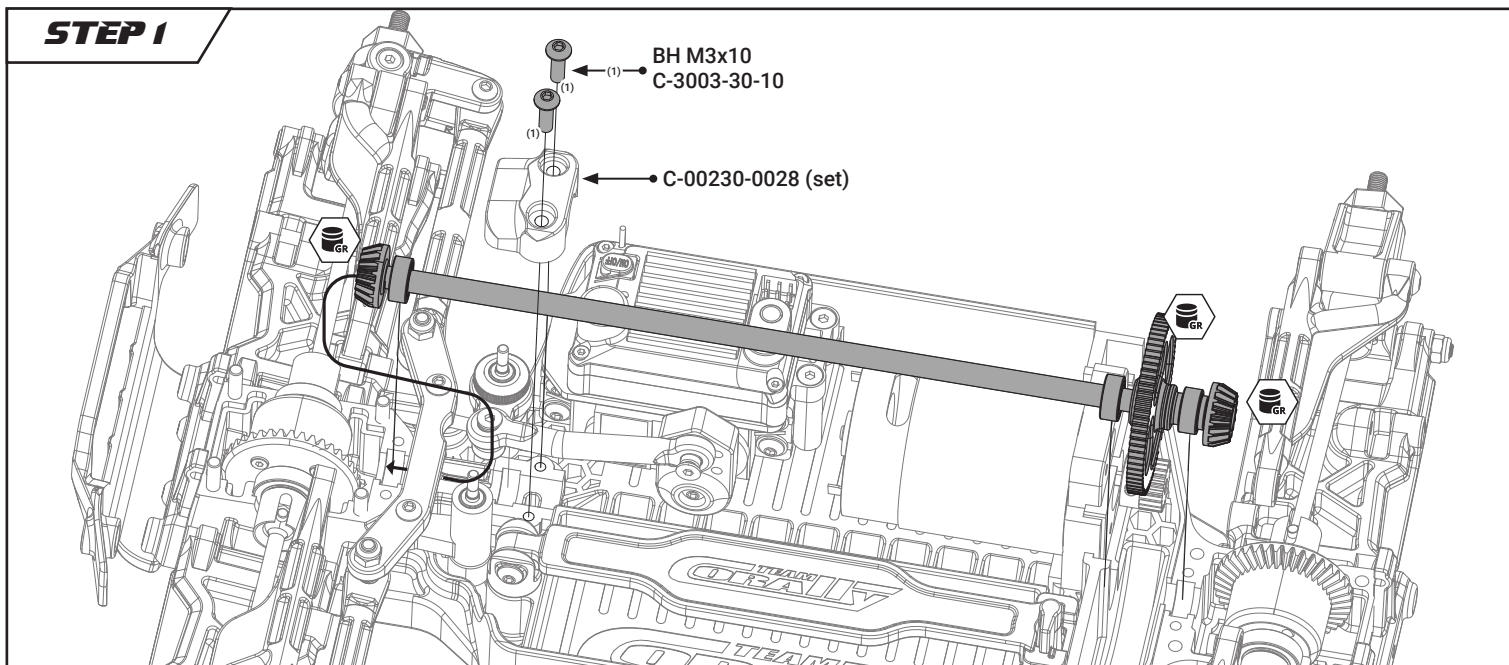


STEP 2



Note assembly order.

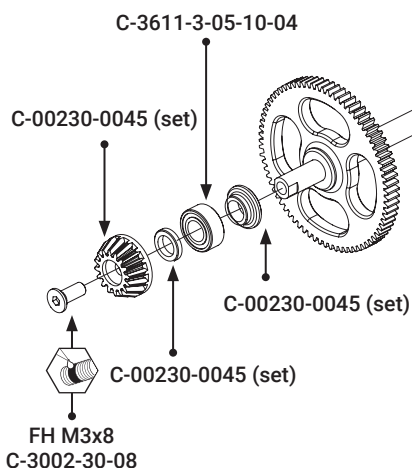

STEP 3

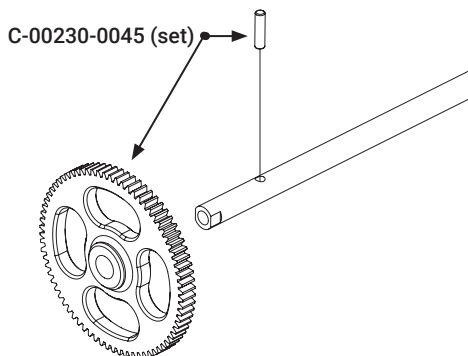

STEP 4

