



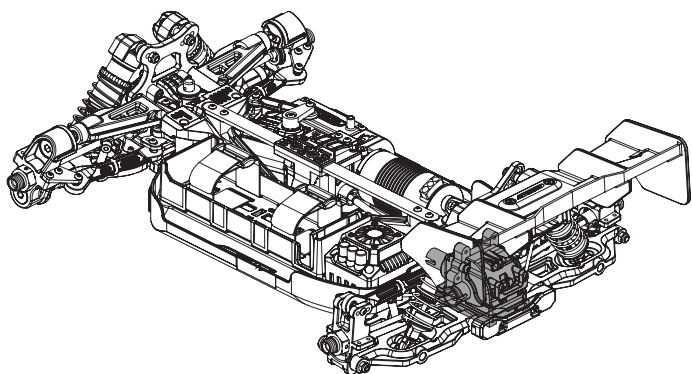

Required Tools:



- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 
- Lithium Grease 

STEP 1

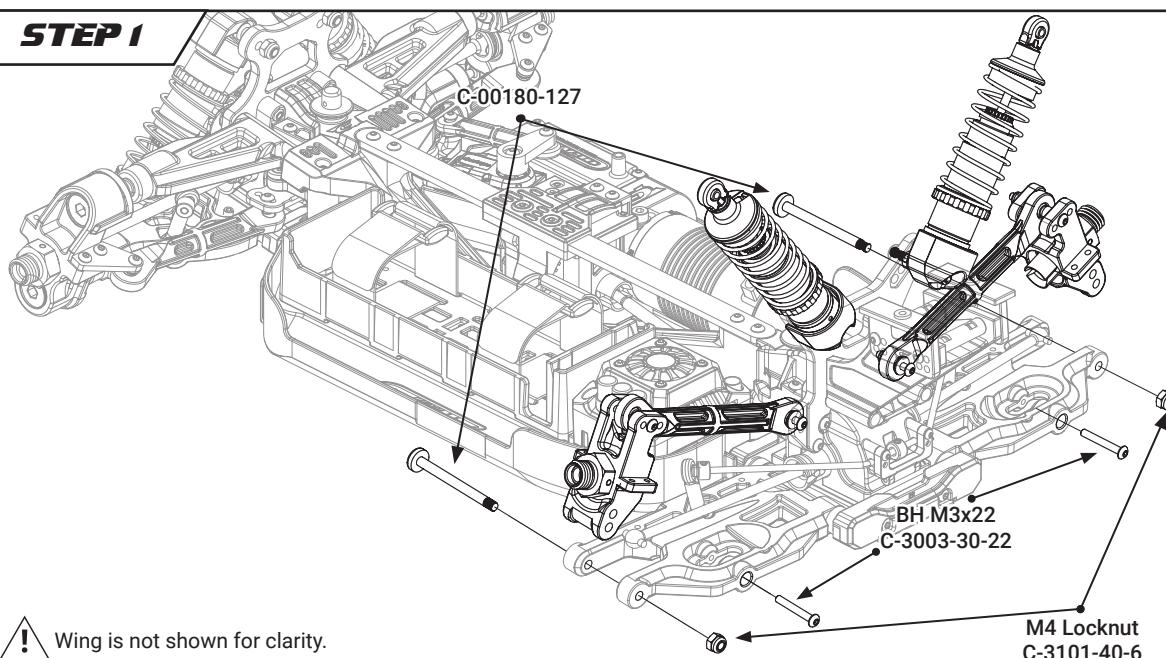




! Wing is not shown for clarity.

STEP 2

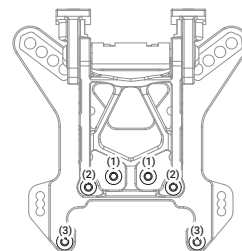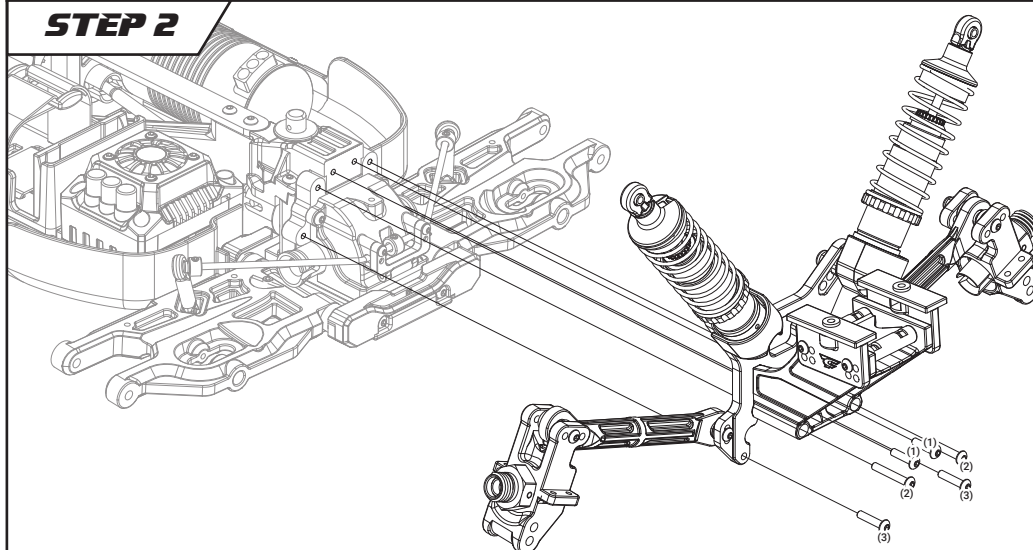

(1)	BH M3x20	C-3003-30-12
(2)	BH M3x12	C-3003-30-20
(3)	BH M3x14	C-3003-30-14

! Wing is not shown for clarity.

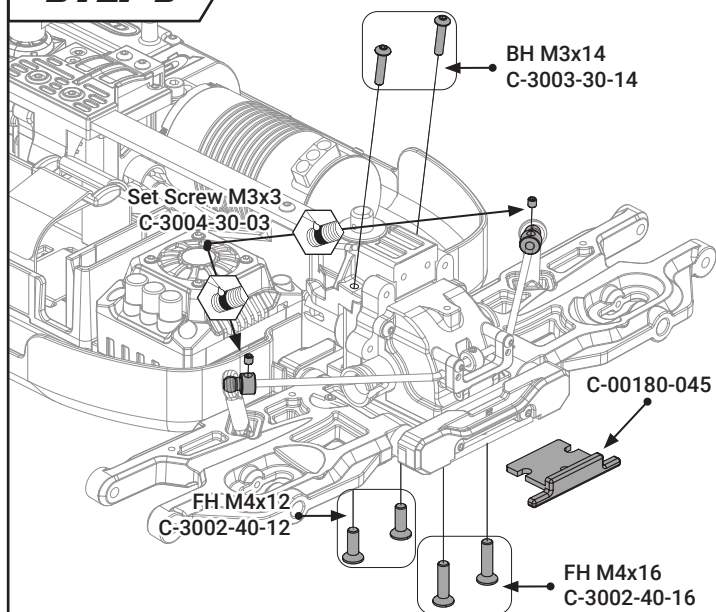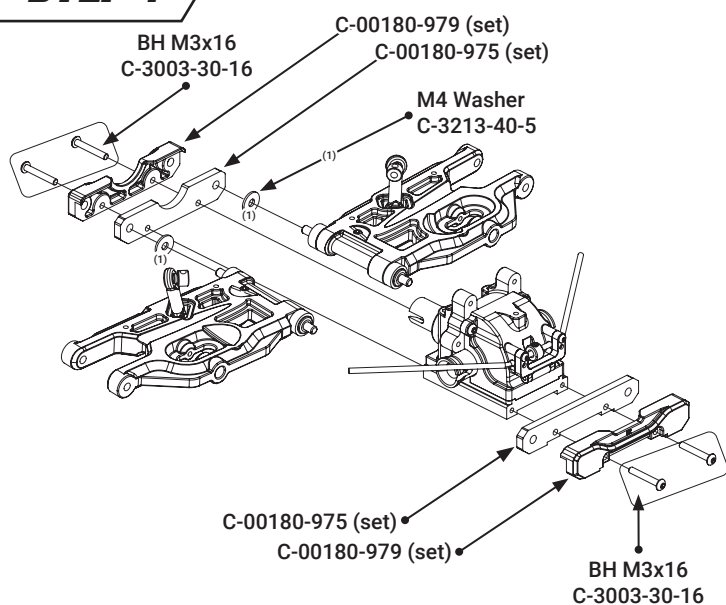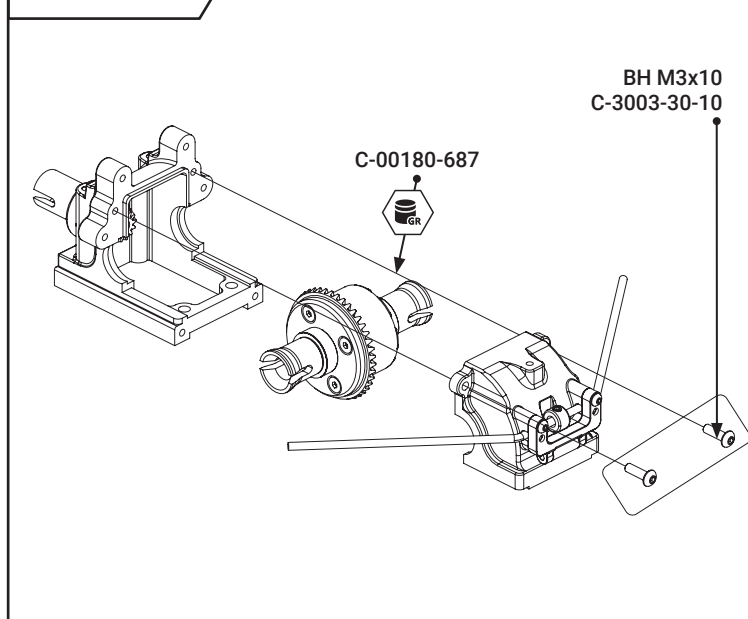STEP 3

STEP 4

STEP 5

STEP 6
