


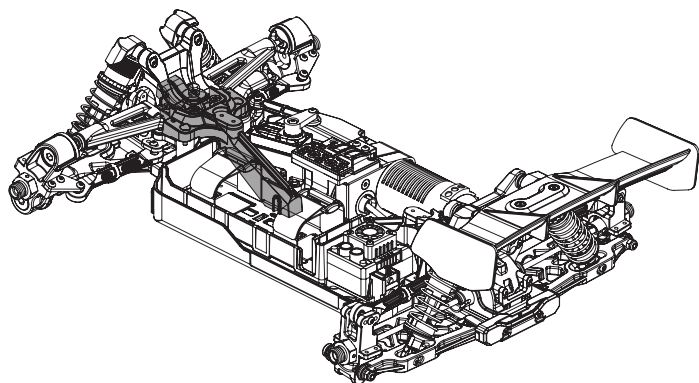


Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- 2.5 Hex Driver
- 5.5 Hex Nutdriver
- Thread-locker 

STEP 1


FH M4x12
C-3002-40-12

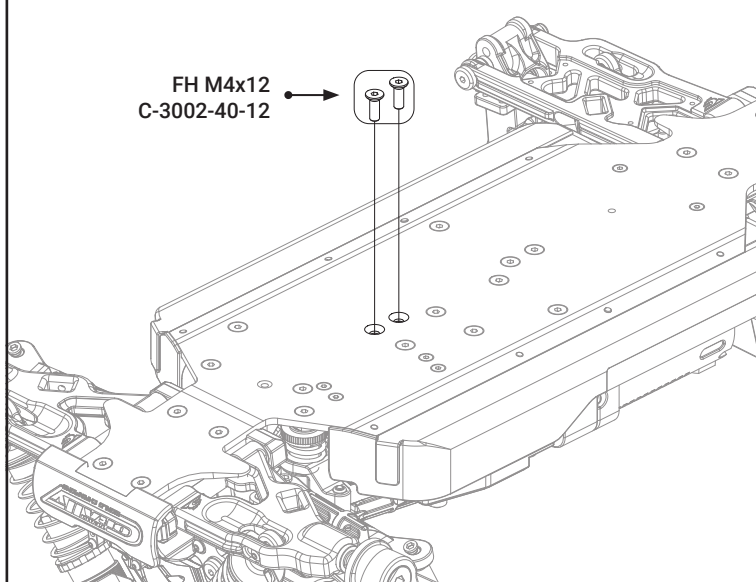

STEP 2


C-00180-1011

M3 Locknut
C-3101-30-6

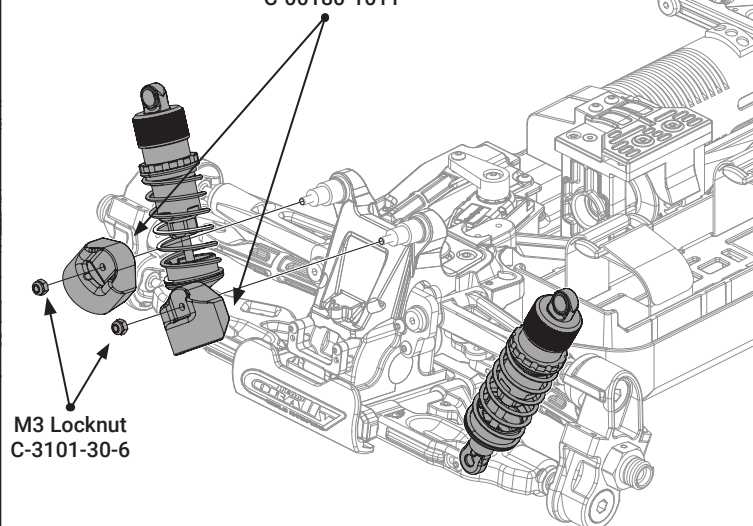

STEP 3

BH M4x12
C-3003-40-12

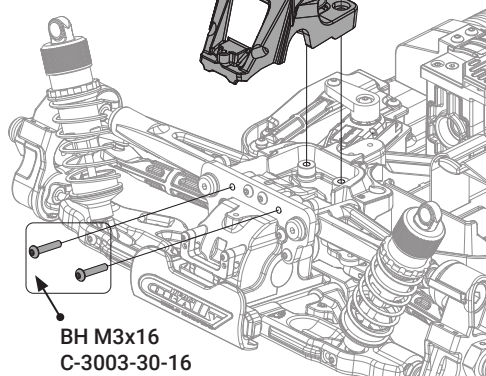

STEP 4


Set Screw M3x4
C-3004-30-04

C-00180-055 (set)

C-00180-109 (set)

C-00180-127

BH M3x12
C-3003-30-12

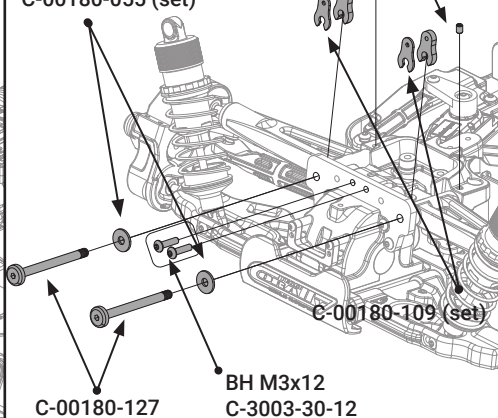

STEP 5

FH M4x12
C-3002-40-12

BH M3x10
C-3003-30-10

C-00180-989

