


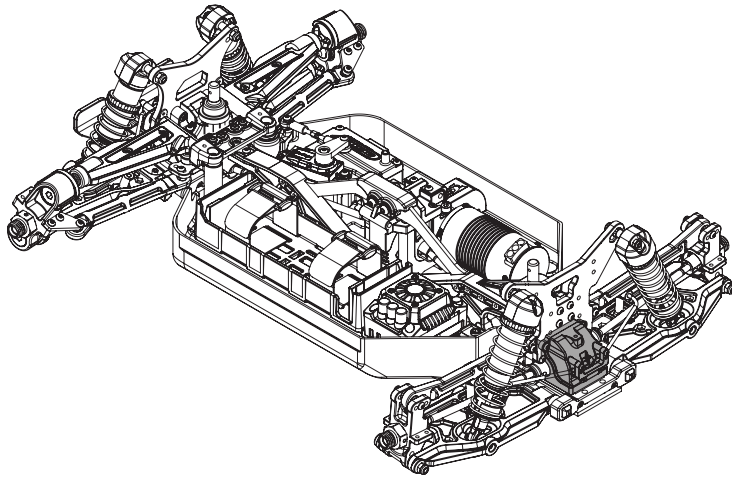

Required Tools:

- 1.5 Hex Driver
- 2.0 Hex Driver
- Lithium Grease 

Finish Before:

- Rear Skid Plate

Important Notice:

Wing is not shown for clarity.



VIDEO MANUAL
ON YOUTUBE

STEP 1

Set Screw M3x3
C-3004-30-03

L=R

STEP 2

C-00180-873

C-00180-907 (set)

BH M3x16
C-3003-30-16

STEP 3

BH M3x10
C-3003-30-10