



HMS Supply

FIRST FLEET 1787


PARTS LIST / LISTADO DE PIEZAS / LISTE DES PIÈCES

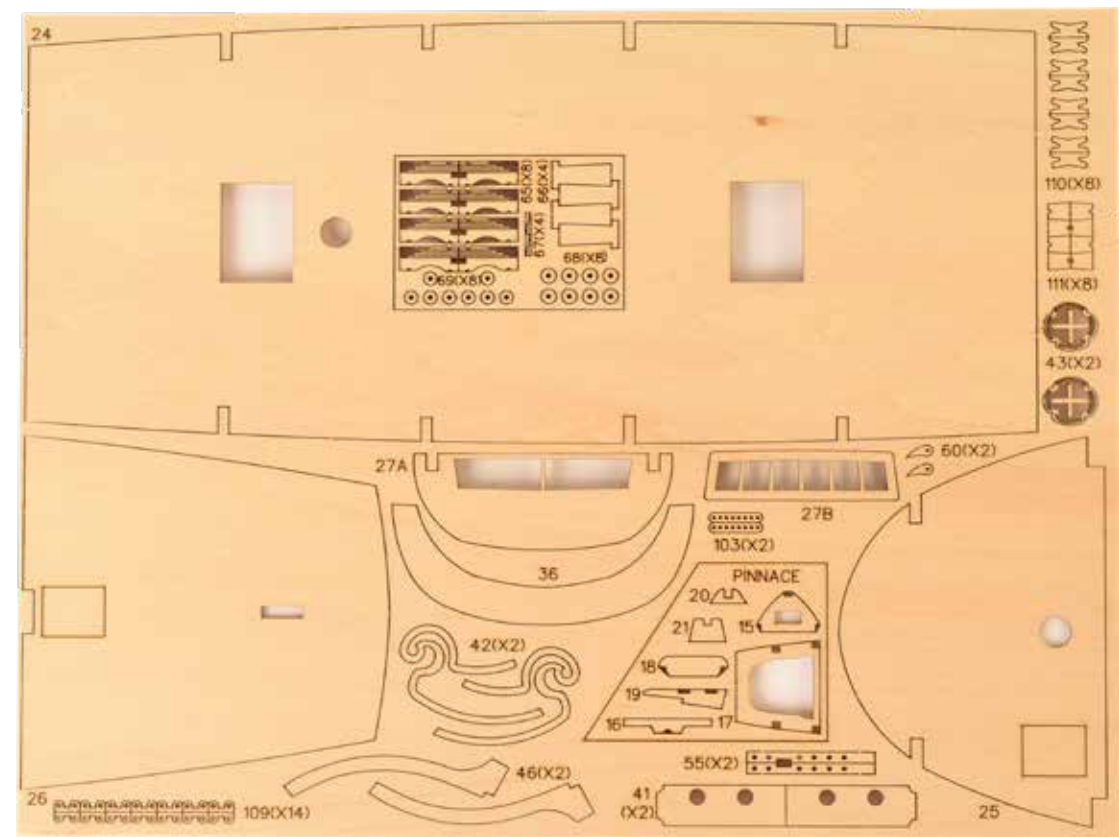


1,5mm Plywood 300x225mm

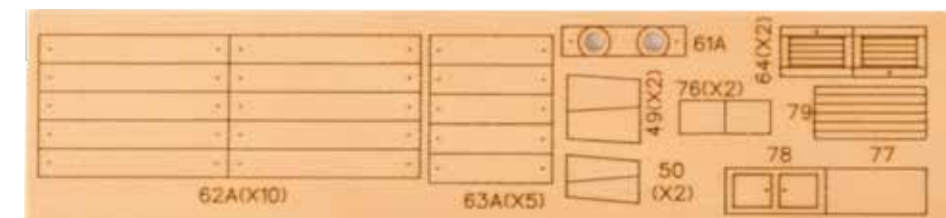


1mm Solid Wood Birch 200x45mm

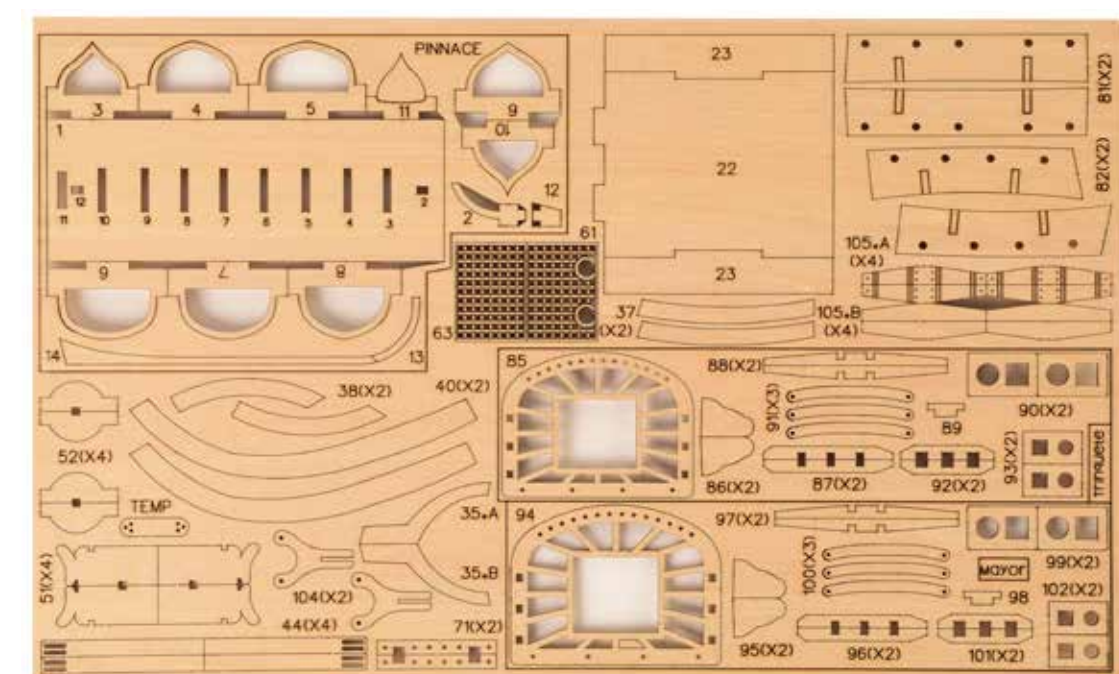


2mm Plywood 300x180mm

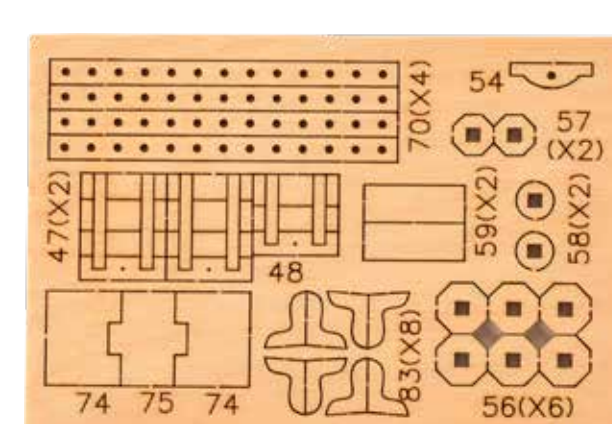


2mm Solid Wood Birch 90x60mm

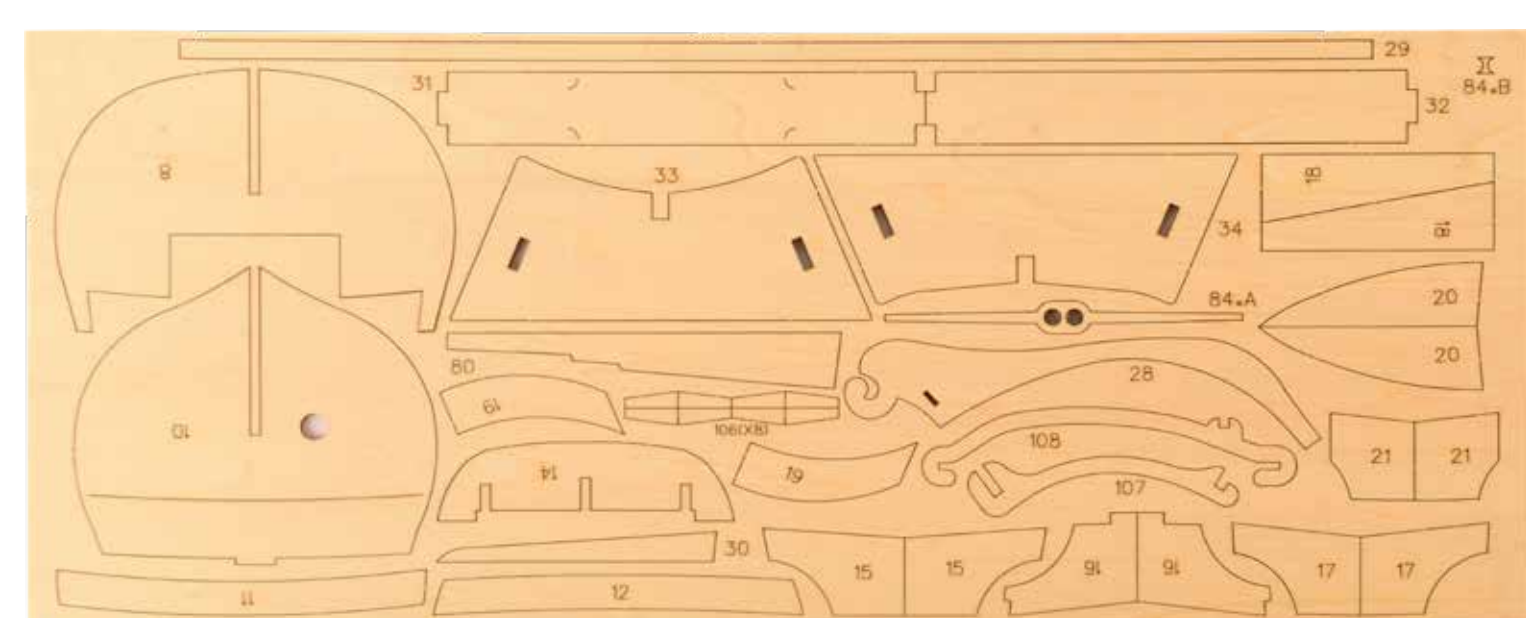

3mm Plywood 450x180mm

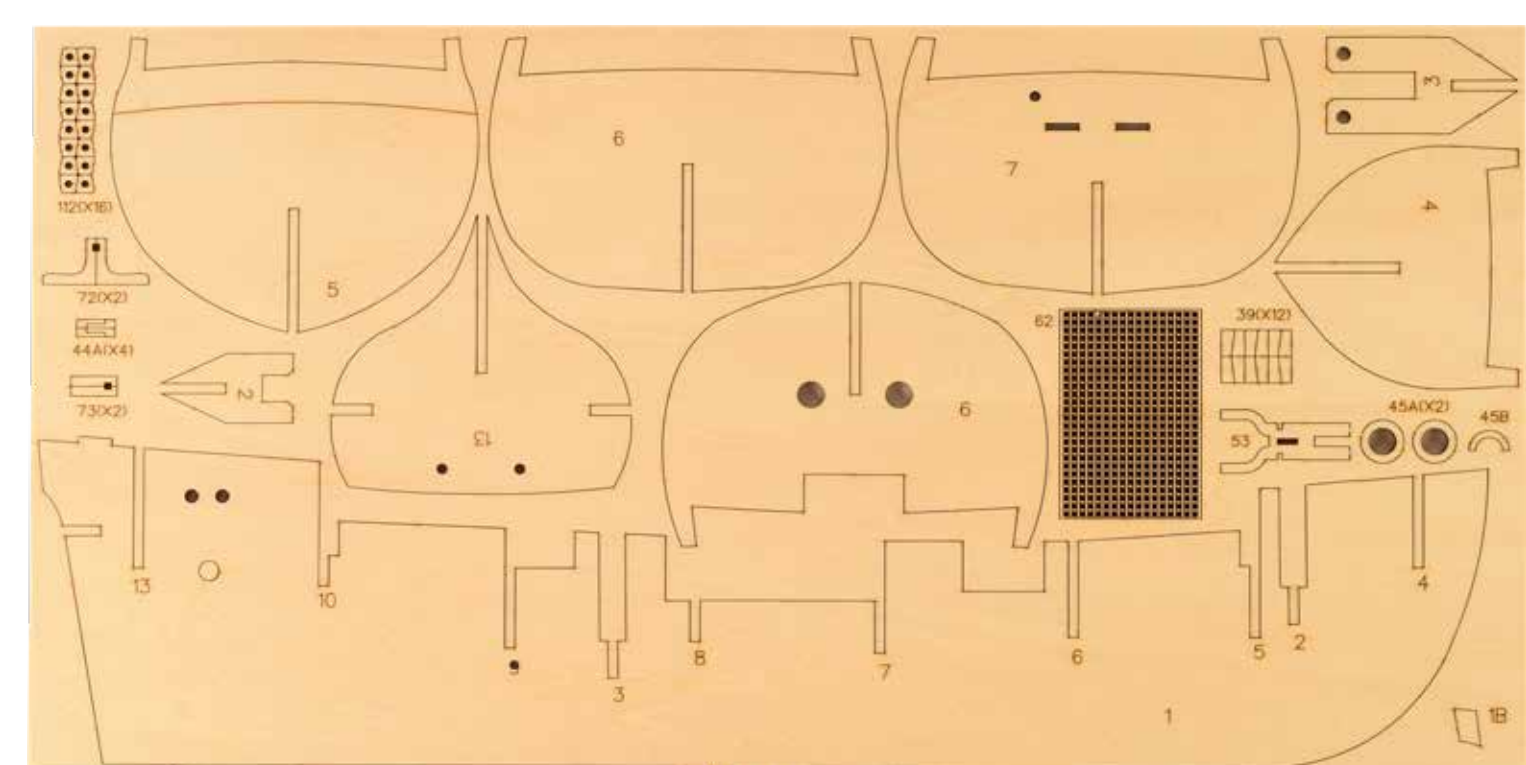







3mm Plywood 450x225mm

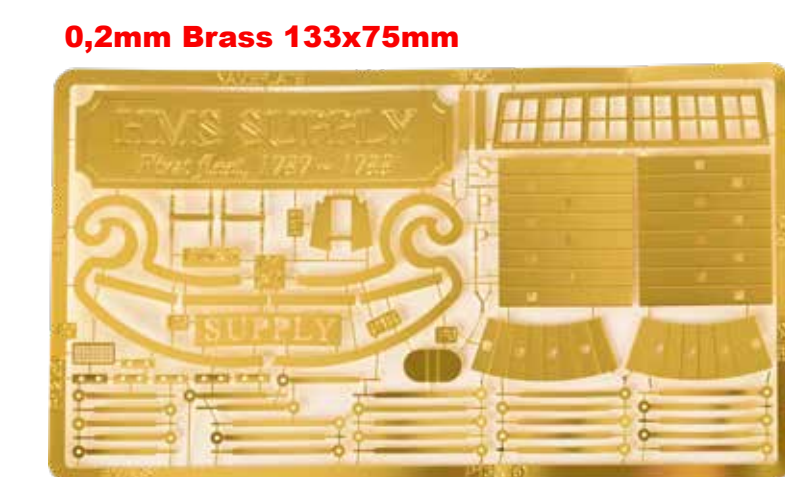

0,2mm Brass 133x75mm



0,5mm Brass 22x22mm

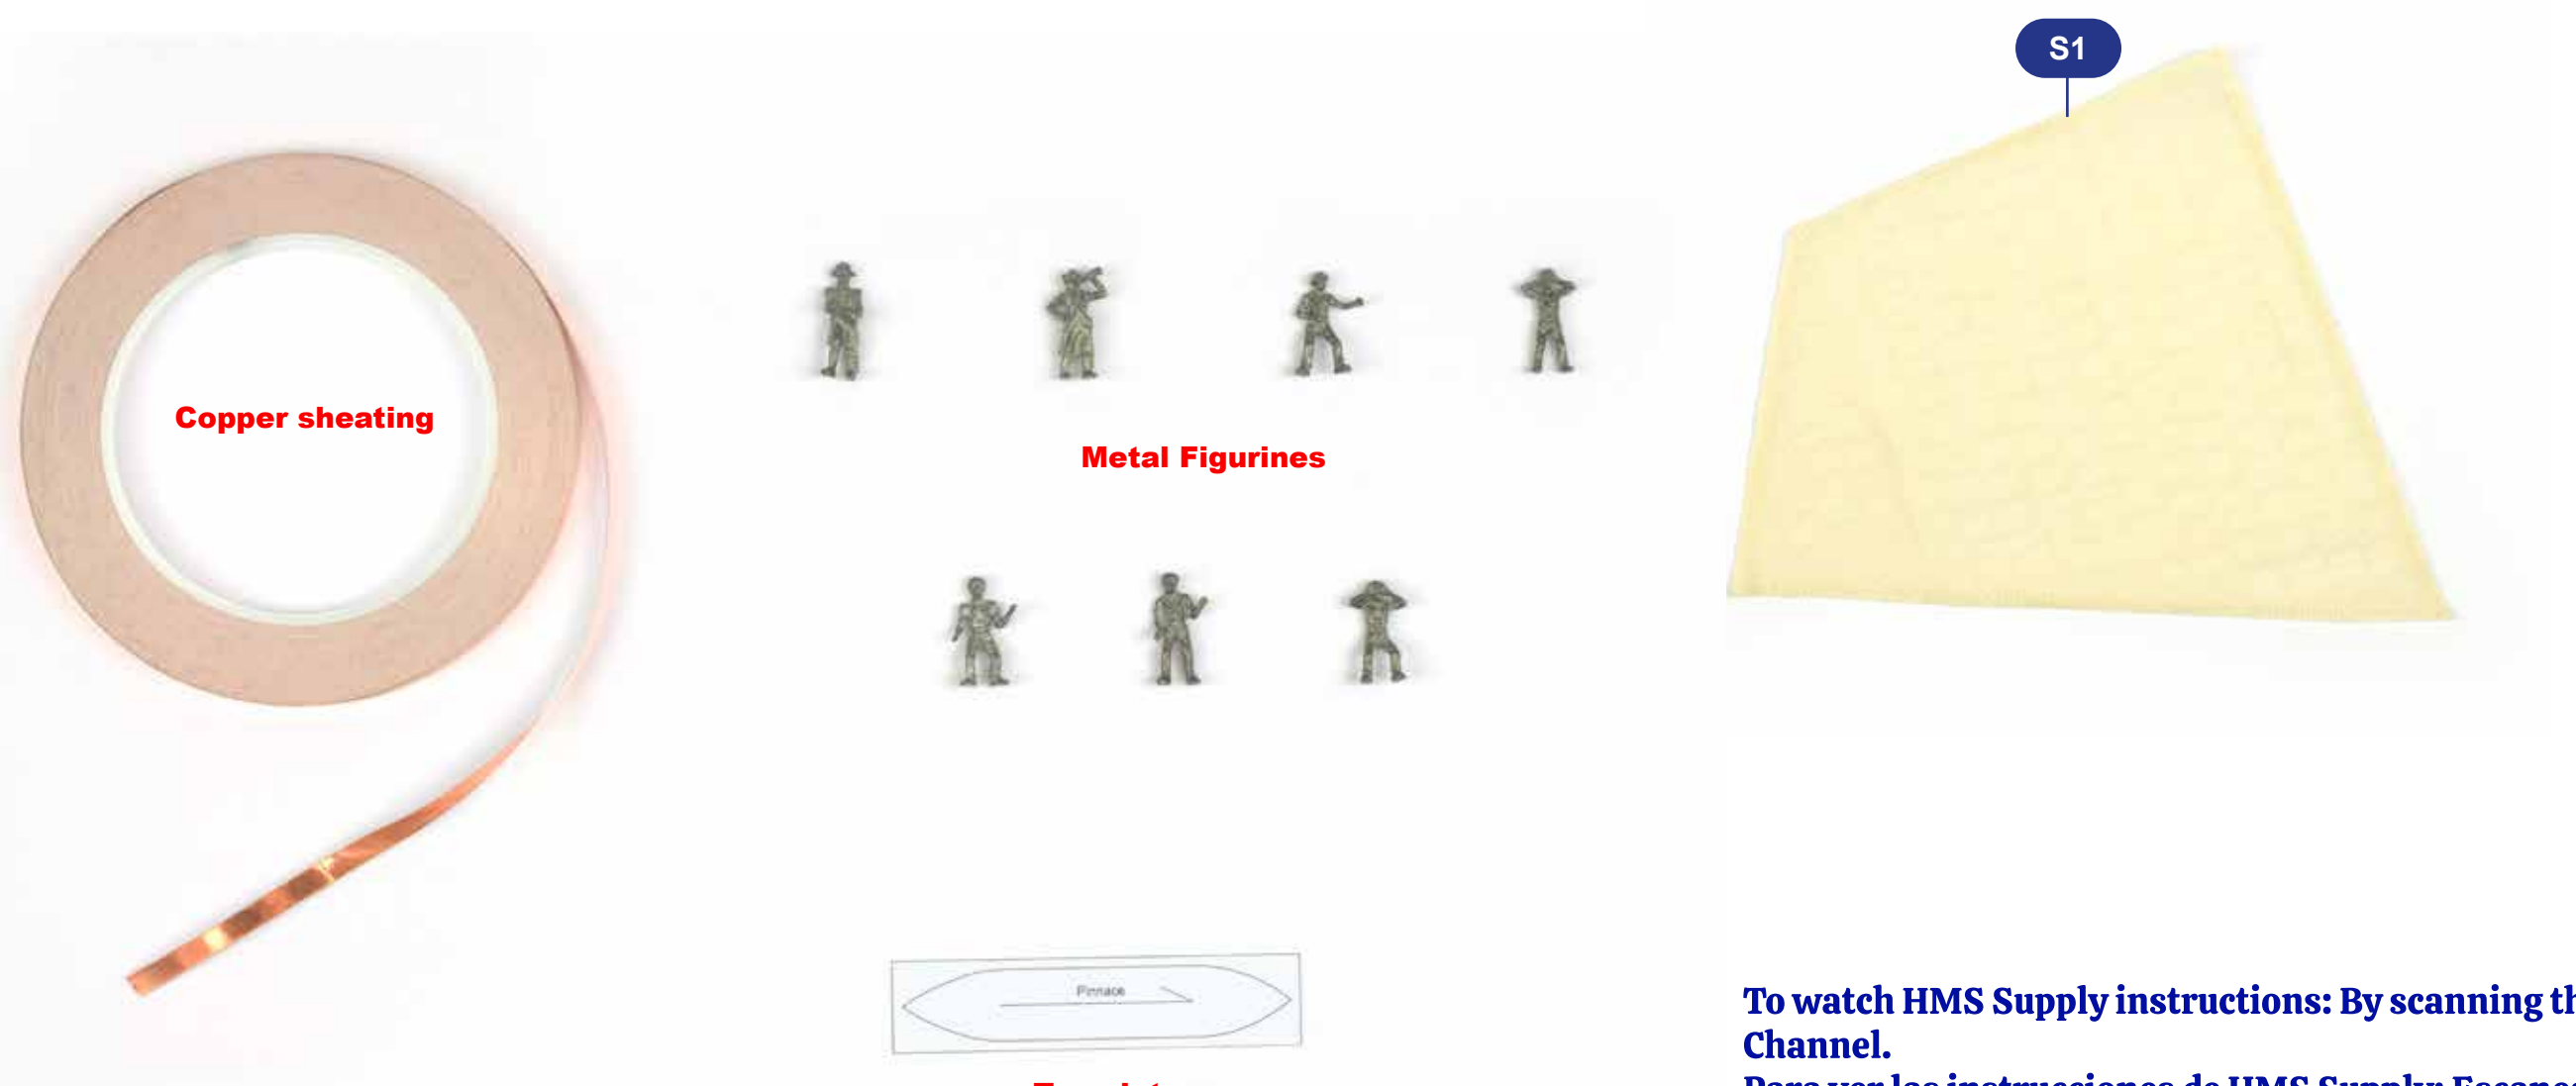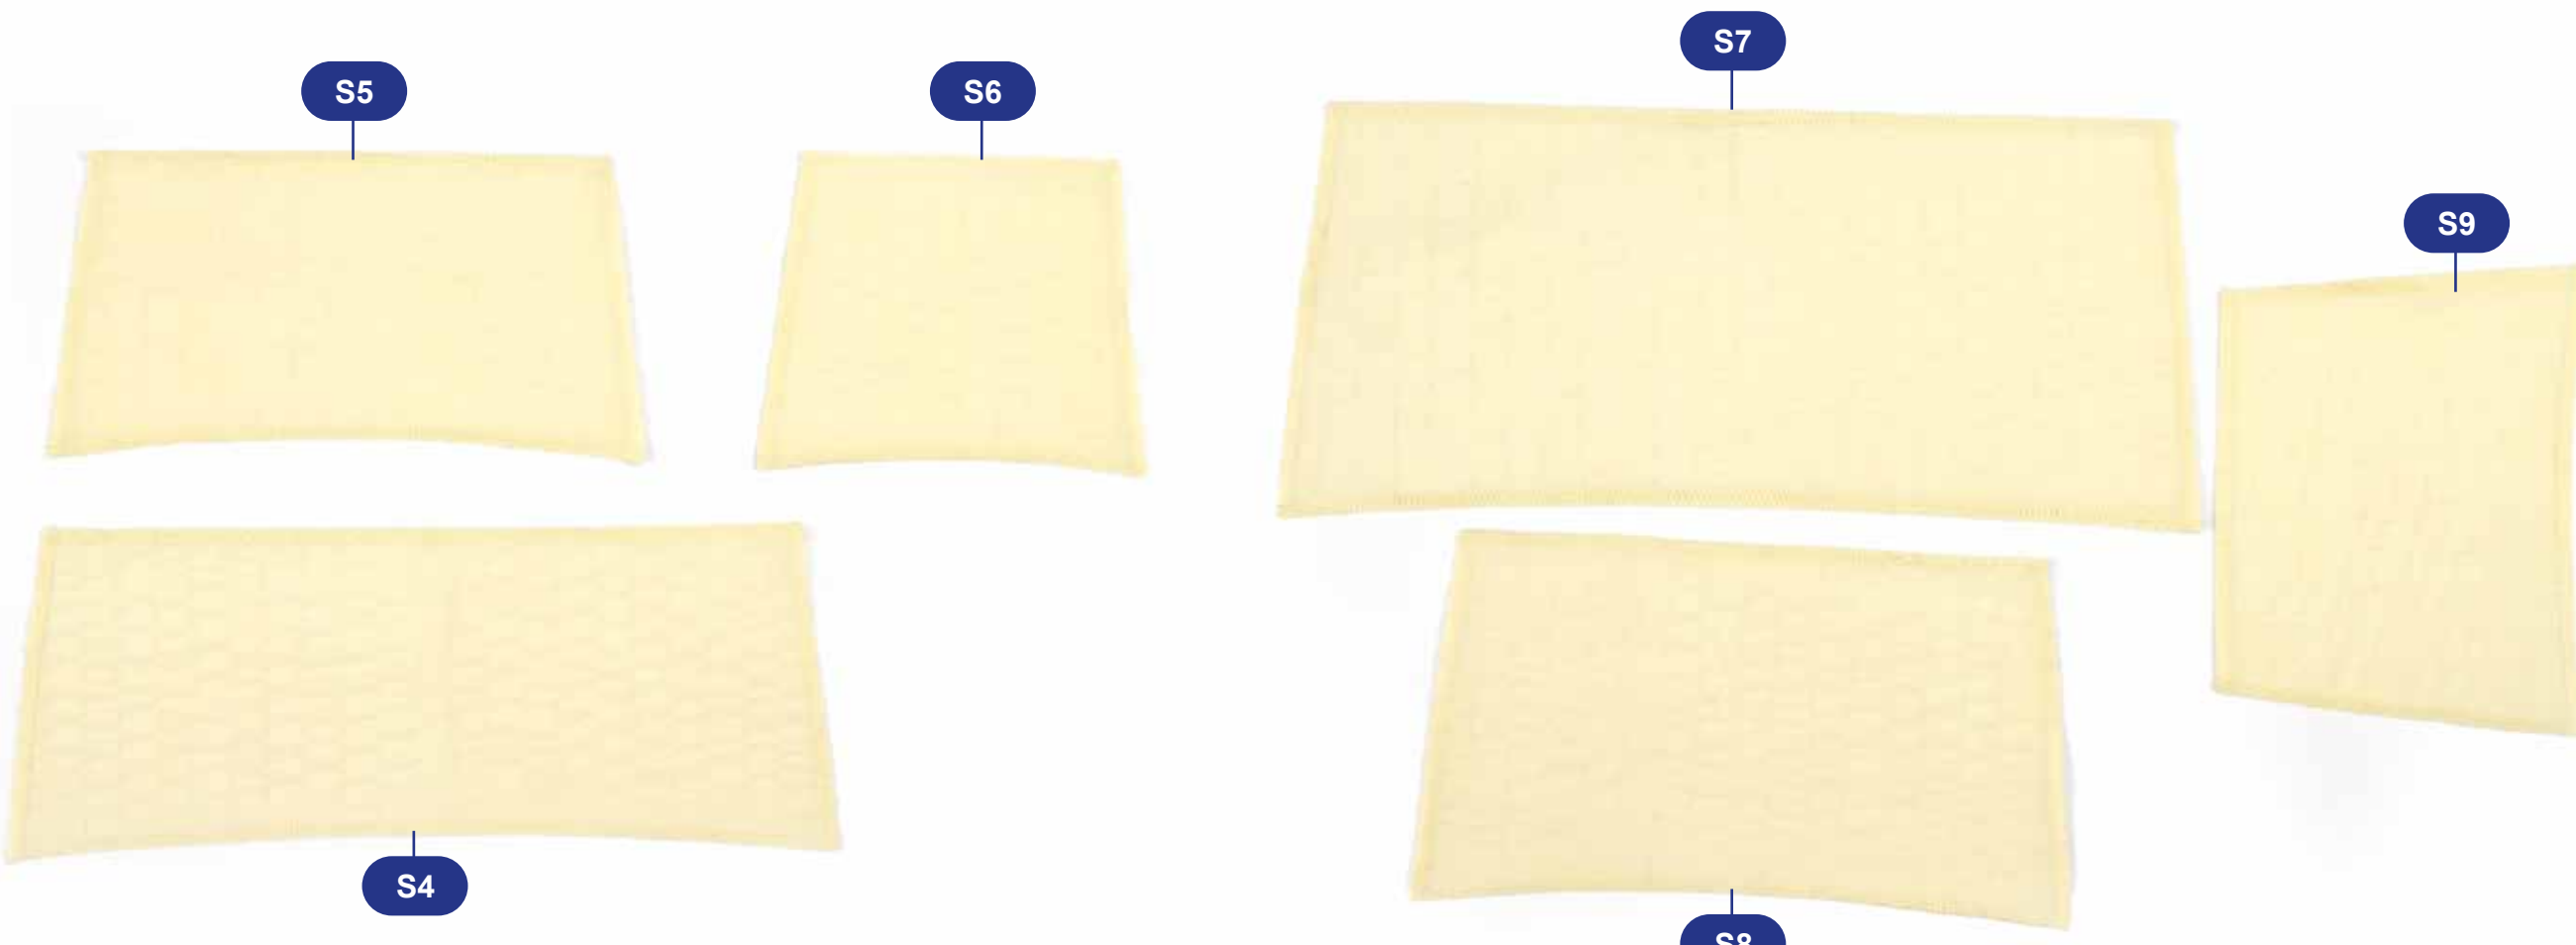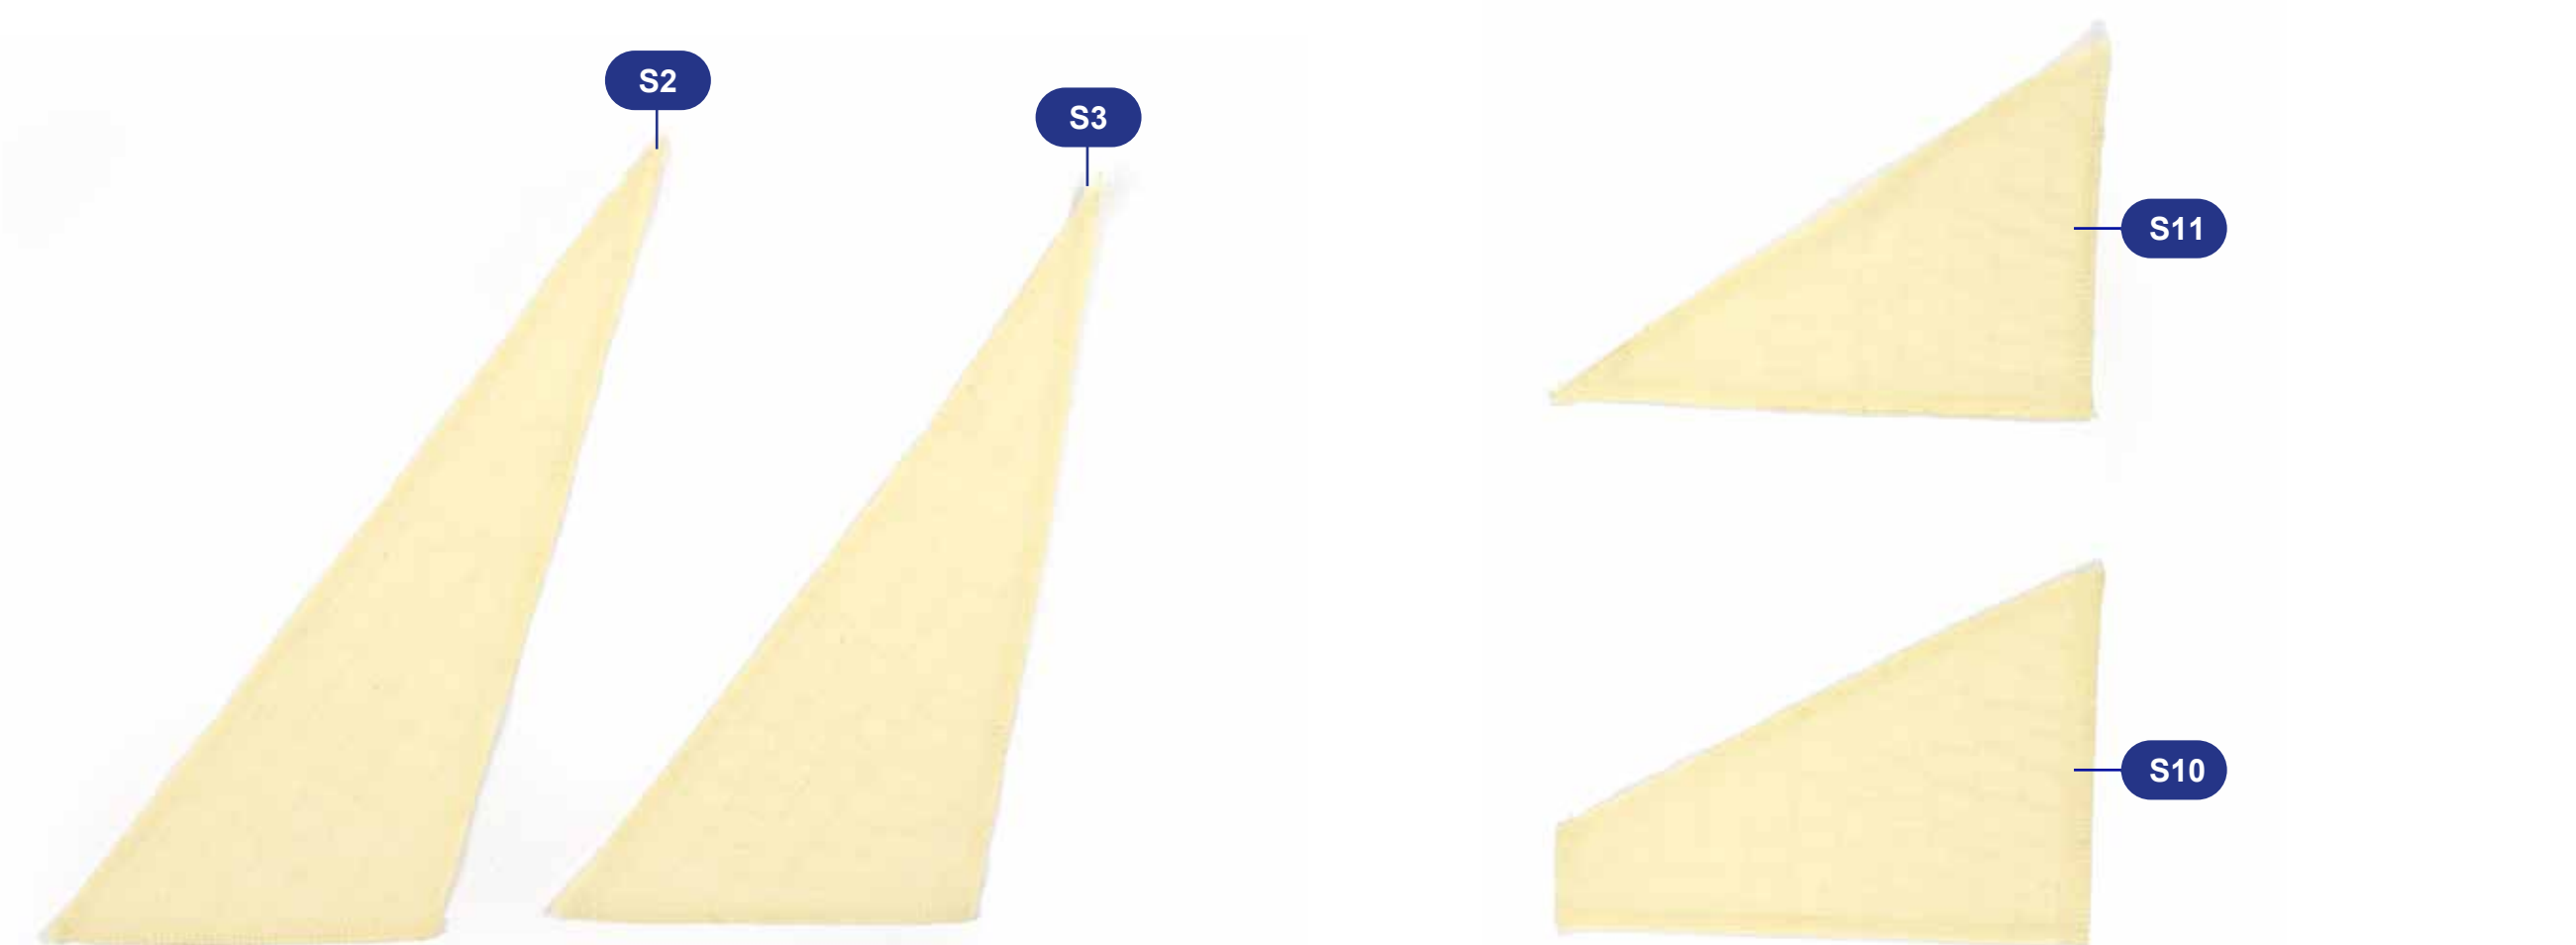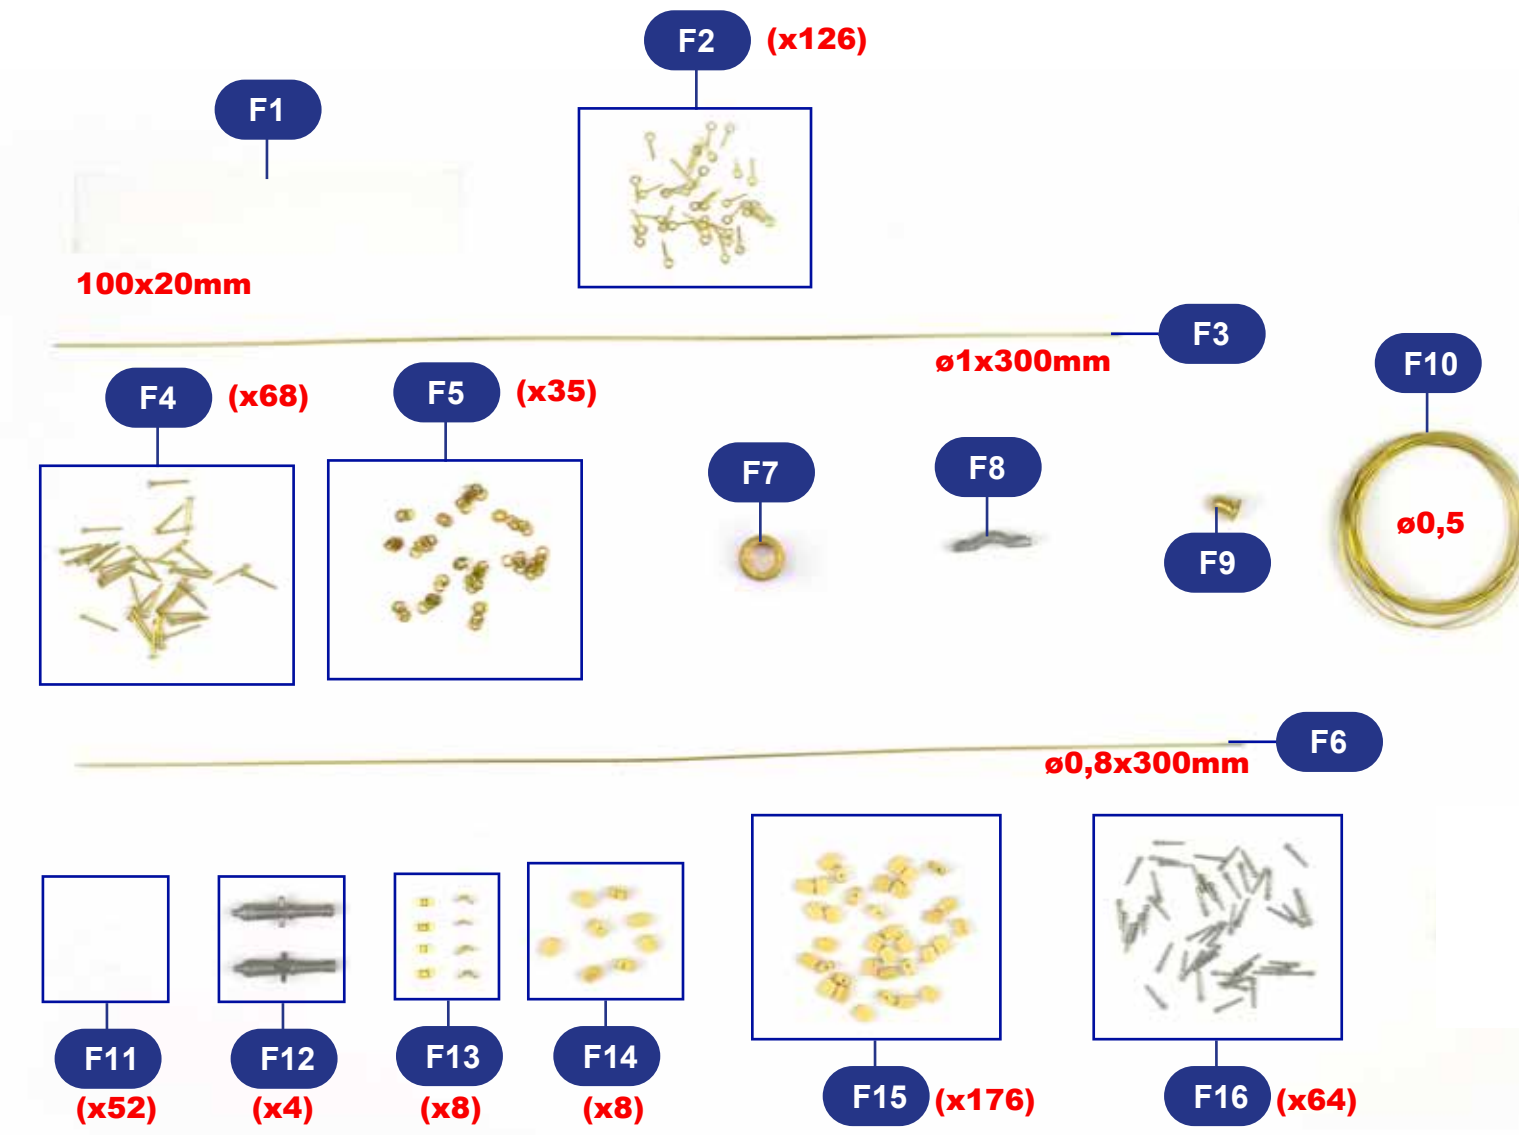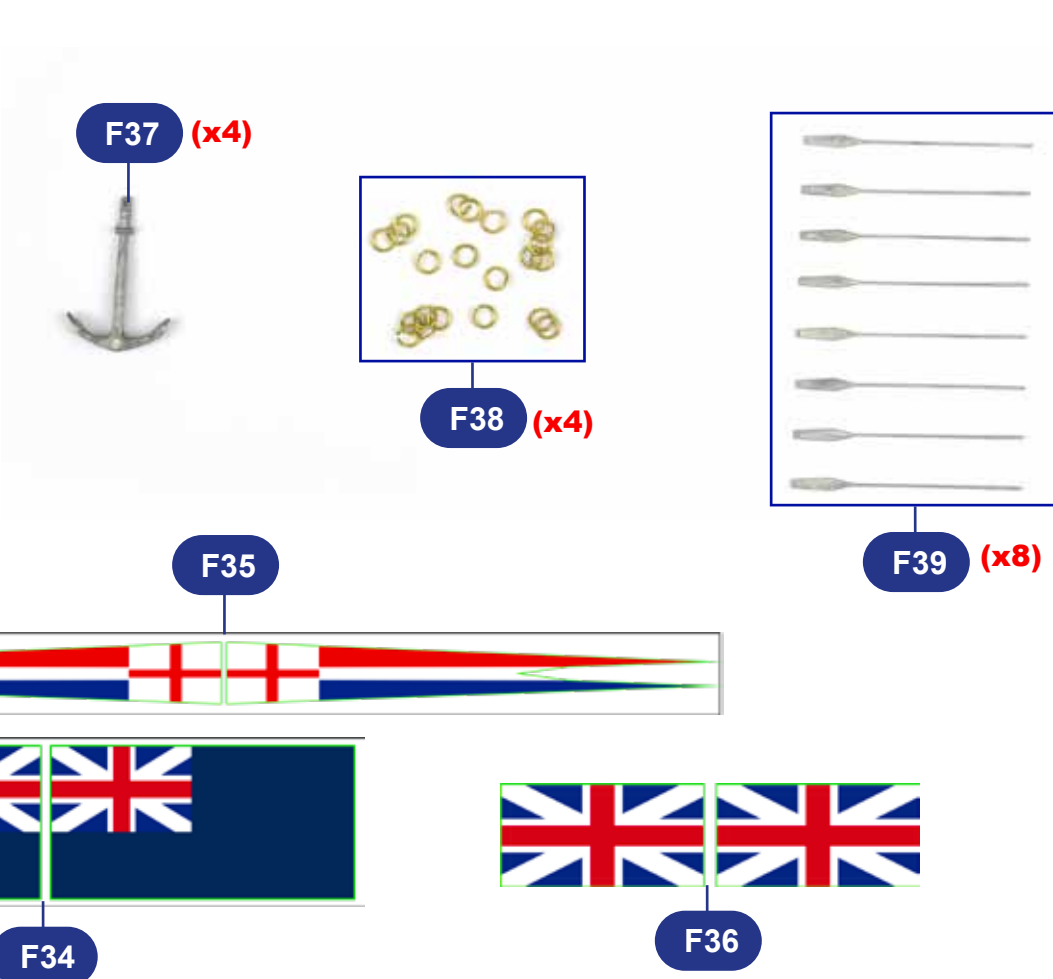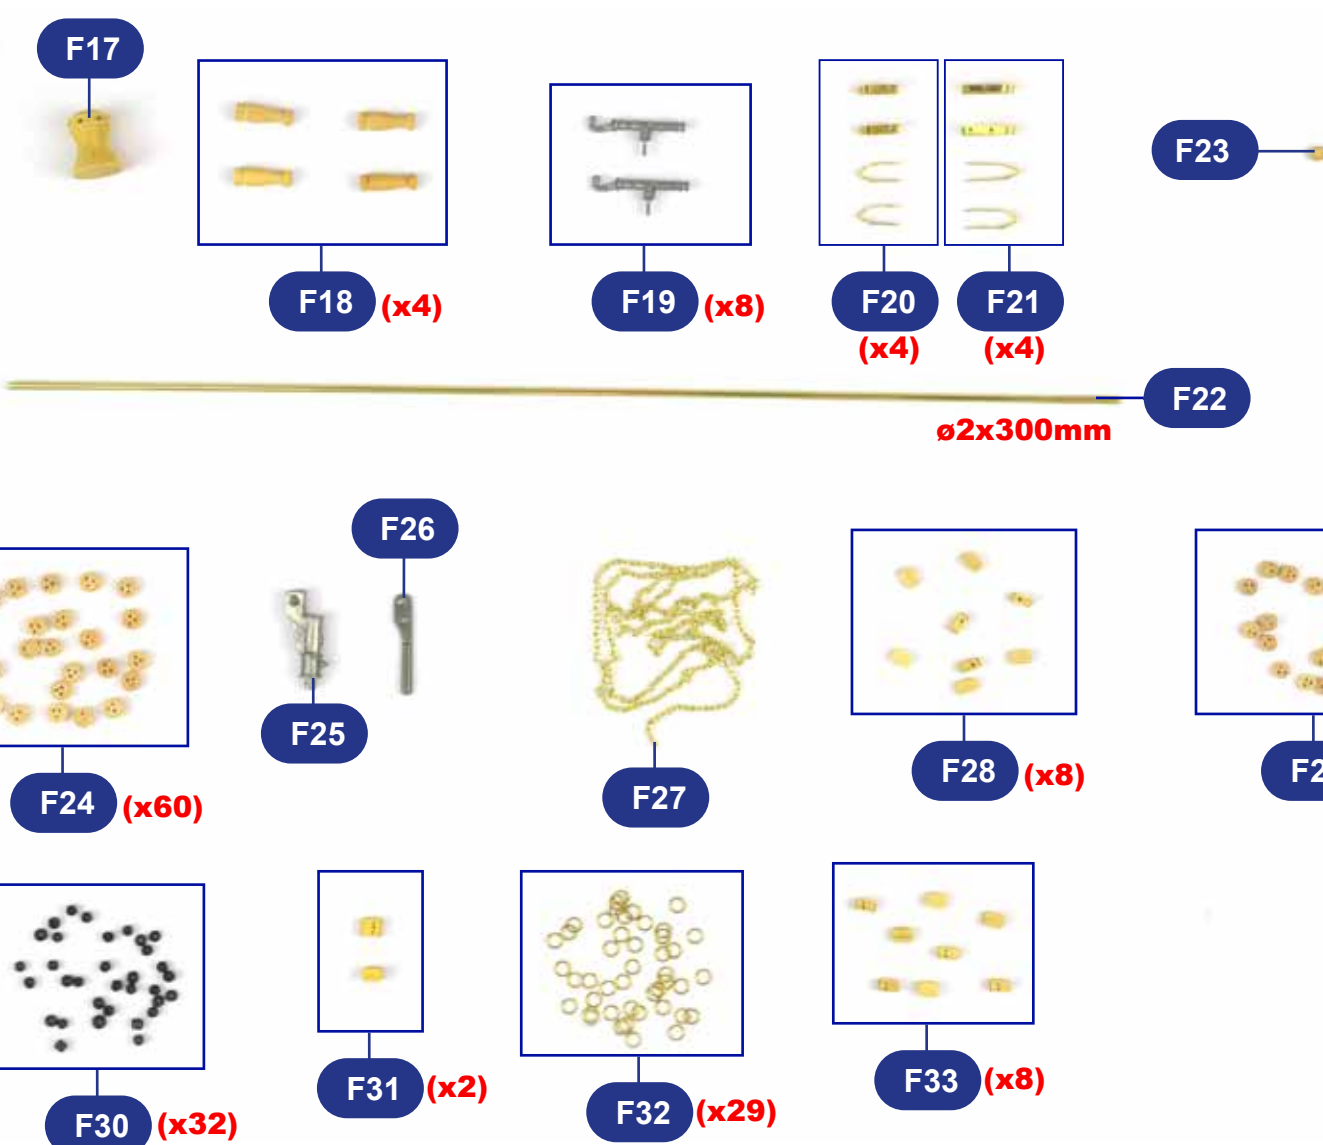

Metal Figurines

Template

	ENCAJAR FIT TOGETHER ASSEMBLER PASSEN METTERE INSIEME ПРОВЕСТИ СОПЛАВ		REPETIR REPEAT WIEDERHOLEN HERHALEN RIPIETERE ПОПОВТОРИТЬ
	CORTAR CUT COUPER SCHNITT ENUDEN TAGLIARE TOPEJ		TALADRAR DRILL PERCER BOREN BOREN TRAPANARE ДРЕЛЬ
	PEGAR GLUE COLLER KLEBEN LIJM INCOLLARE КЛЕИ		NO PEGAR DO NOT GLUE EN PAS COLLER NICHT KLEBEN NIET LIJMEN NON INCOLLARE НЕ КЛЕИ
	ENMASILLAR APPLY PUTTY GALFETTER PUTTY ANLEGEN VULMIDDEL AANBRENGEN APPLICARE LO STUCCO ЗАРБАКА		MARCAR A LÁPIZ MARK WITH A PENCIL MARQUEUR AU CRAYON MARK MIT EINEM BLEISTIFT MARKEREN MET EEN POTLOOD SEGNARE CON UNA MATITA МАРК С КАРАНДАШОМ
	ALINEAR ALIGN ALIGNER AUSRICHTEN LUTLINEN ALLINEARE ВЫПОДБИТЬ		COLOCAR EN PUNTO MEDIO PLACE IN THE CENTER PLACER AU MILIEU IN DER MITTE PLATZIEREN POSIZIONARE AL CENTRO РАСПОЛОЖИТЬ В ЦЕНТРЕ
	BARNIZAR VARNISH VERNIR LACK LAKEN VERNICIARE ЛАК		TEÑIR TURN TENDRE FÄRBER TINGERE КРАСИТЬ
	PINTAR PAINT PINDRE FARBE SCHILDEREN DIPINGERE ПОКРАСИТЬ		IMPRIMAR APPLY PRIMER APPLIQUER L'APPRÊT PRIMER AUFTRAGEN BRENG PRIMER AAN APPLICARE IL PRIMER НАНЕСИТИ ПЕРВЫЙ ПОКРЫТИЕ
	REPETIR SIMÉTRICAMENTE REPEAT SYMMETRICALLY REPETER SYMMÉTRIQUEMENT SYMMETRISCH WIEDERHOLEN HERHAAL SYMMETRIET RIPIETERE SIMMETRICAMENTE ПОВТОРИТЬ СИММЕТРИЧЕСКИ		ROTAR TURN TOURNER DREHEN DRAAIEN GIRARE ПРЕВРАТИТЬ
	LIAR SAND PONGERSAND ZAAD SCARTAVETRAIRE ЛЕСОК		DAR FORMA CÓNICA GIVE TAPER DONNER UNE FORME CONIQUE GIB TAPER GEEF HET EEN KEGELVORM DARE FORMA CÓNICA ЗАКОНЧИТЬ
	DOBLAR BEND PLIER BIEGE VOLUWEN PIEGARE СОГНУТЬ		DAR FORMA CÓNICA X2 GIVE TAPER X2 DONNER UNE FORME CONIQUE X2 GIB TAPER X2 GEEF HET EEN KEGELVORM X2 DARE FORMA CÓNICA X2 ЗАКОНЧИТЬ X2
	MEDIR MEASURE MESURER MESSEN MAATREGEN MISURARE ИЗМЕРЕНИЕ		INICIO DEL CABLE CABLE START DÉMARRAGE DU CABLE KABEL START KABEL START AVVAMENTO CON CAVO КАБЕЛЬ НАЧИНАЕТ
	TENSAR HILO LIGERAMENTE STRETCH THREAD SLIGHTLY TENDRE LÉGÈREMENT LE FIL STRETCH GEWIGDE LIGCHT DRAAD LICHT SPANNEN TENDERE IL FILLO LEGGERMENTE СТЯЖКА РАСТЯЖИТЬ НИТЬ		FIN DEL CABLE CABLE END FIN DE CABLE KABEL ENDE ENDE VAN DE KABEL FINE DEL CAVO КОНЕЦ КАБЕЛЯ
	ANUDAR KNOT FAIRE UN NOEUD KNOTEN MAAK EEN KNOOP FARE UN NODO МОРСКОЙ УЗЕЛ		VER VIDEO WATCH VIDEO FRONT VIEW SCHAU VIDEO BEKUK VIDEO GUARDA UN VIDEO СМОТРИТЬ ВИДЕО
	CLAVAR NAIL CLOUER EINSCHLAGEN SPIJKER INCHIODARE ЗАБИТЬ ГВОЗДЬ		SOLDAR WELD SOUDER SCHWEISSEN ASSISER SALDARE СВАРКА
	CRUZAR CON CINTA ADHESIVA HOLD WITH ADHESIVE TAPE FIXER A LAIDE DE RUBAN ADHESIF HET KLEBEBAND BEVESTIGEN HET FLAKBAND VASTZETZEN SUSINARE CON NASTRO ADERIVO ИСПРАВИТЬ С ПОМОЩЬЮ КЛЕЮЮЩЕЙ ЛЕНТЫ		VISTA FRONTAL FRONT VIEW VUE DE FACE VORDERANSICHT VOORAANZICHT VISTA FRONTALE ВИД СПЕРЕДИ
	DESMENZASCAR UNMASK DÉMASQUER ONTMASKEREN SMAASCHEREN PASOBLANAR		VISTA SUPERIOR TOP VIEW VUE DE DESSUS DRAUFSICHT BOVENAANZICHT VISTA DALL'ALTO ВИД СБЕПЫ
	ENMASASCAR MASK MASQUER MASKE MASCHERA MASCAR		VISTA TRASERA BACK VIEW VUE ARRIERE RÜCKANSICHT ACHTERAAANZICHT VISTA POSTERIORE ВИД СЗАДИ
	LIAR HILO ROLL YARN ROULEAU DE FIL GARN ROLLEN ROL GARN ROTOLO DI FILATO ПЫТОНКАЯ ПРЯЖКА		VISTA INFERIOR BOTTOM VIEW VUE DE DESSOUS UNTERSICHT ONDERAANZICHT VISTA DAL BASSO ВИД СНИЗУ
	NO CORTAR DO NOT CUT NE PAS COUPER NICHT SCHNEDDEN NIET SNIDEN NON TAGLIARE НЕ ПЕШАТЬ		VISTA DERECHA RIGHT VIEW VUE DE DROITE RECHTE ANSICHT JUSTE BLIK VISTA GIUSTA ВИД СПРАВА
	COSER SEW A COUDRE DI NAAIEN TE NAAIEN CUCIRE ШИТЬ		VISTA IZQUIERDA LEFT VIEW VUE DE GAUCHE LINKE ANSICHT LINKER UITZICHT VISTA A SINISTRA ВИД СПЕВА
	PRECAUCIÓN CAUTION AVERTISSEMENT WARNING WAARSCHUWING ATTENZIONE ПРЕДУПРЕЖДЕНИЕ		

