


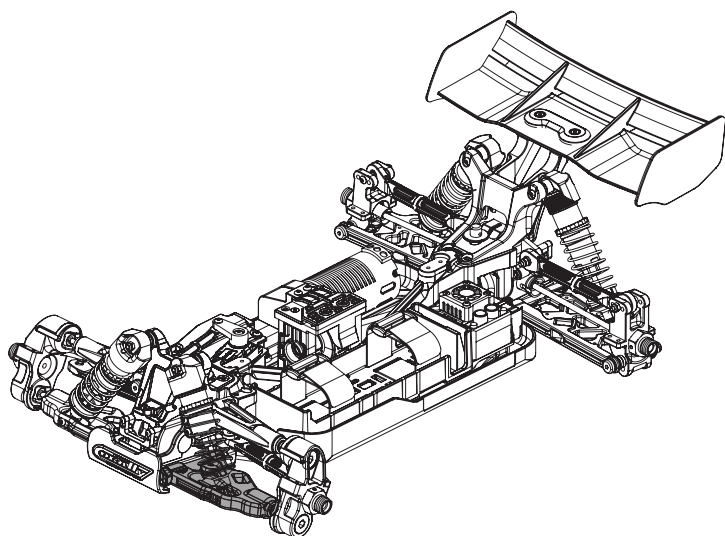


Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker 

STEP 1


BH M3x10
C-3003-30-10

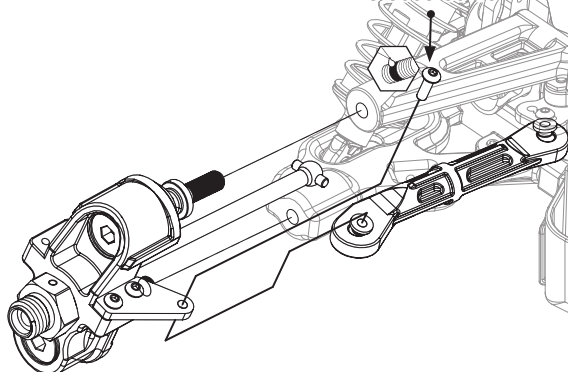

L=R

STEP 2

BH M3x16
C-3003-30-16

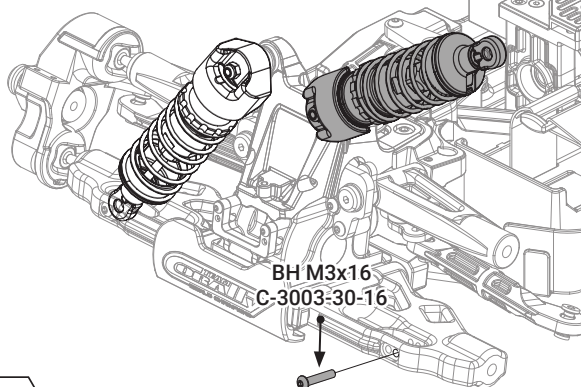

L=R


STEP 3

C-00180-974 (set)

C-00180-032

BH M3x16
C-3003-25-16

FH M4x16
C-3002-40-16

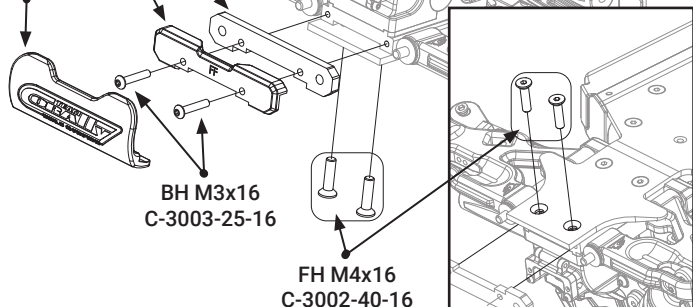

STEP 4

Set Screw M4x8
C-3004-40-08

M4 Washer
C-3201-40

C-00180-322

C-00180-012

C-00180-055 (set)

L=R

