


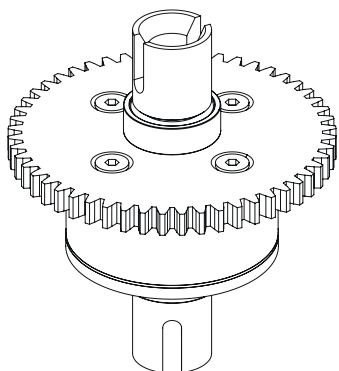

Required Tools:

- 2.0 Hex Driver
- Silicone Diff Oil 
- Thread-locker 
- Paper Towel
- Solvent/Brake Cleaner
- Hobby Knife or Other Sharp Tool
- Pliers

Finish Before:

- Center Gearbox

Important Notice:

Do NOT use solvents on rubber gaskets or O-rings to prevent damage.

	FRONT DIFF	CENTER DIFF	REAR DIFF
OFF ROAD	10.000cps	30.000cps	7500cps
BASHING	20.000cps	100.000cps	10.000cps
FACTORY	20.000cps	100.000cps	10.000cps

STEP 1

FH M3x10
C-3002-30-10

Fill the oil to approximately 75% capacity.

STEP 2

C-00180-179 (set)

C-00180-684

STEP 3

C-00180-179 (set)

C-00180-205

STEP 4

C-00180-154-X

Coat all components with diff oil prior to reassembly.

C-00180-182

BB 8x16x5
C-3611-3-08-16-05

C-00180-179 (set)

OPTIONAL

FH M3x10
C-3002-30-10

C-00180-686 (set)

C-00180-183-1

Coat all components with diff oil prior to reassembly.

C-00180-686 (set)

STEP 5

C-00180-179 (set)

C-00180-205

STEP 6

Coat all components with diff oil prior to reassembly.

C-00180-182

BB 8x16x5
C-3611-3-08-16-05

C-00180-154-X

C-00180-179 (set)

C-00180-607

C-00180-183-1

Coat all components with diff oil prior to reassembly.