

SERVO/RECEIVER BOX

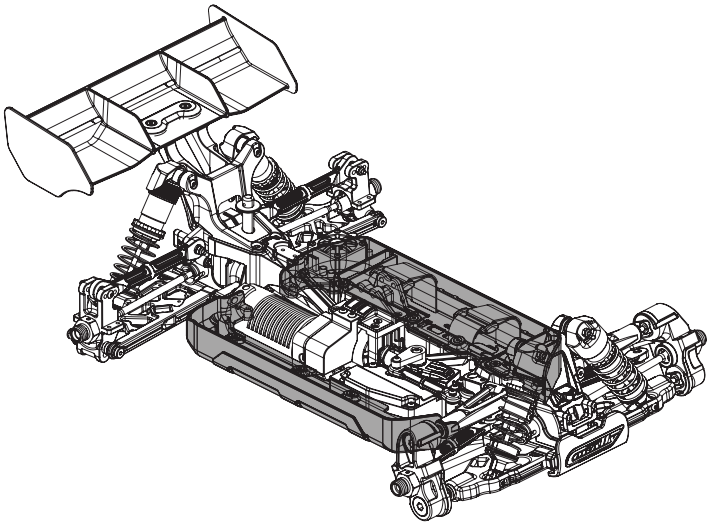


Required Tools:

- 2.0 Hex Driver
- 2.5 Nutdriver
- Shock Pliers

STEP 1

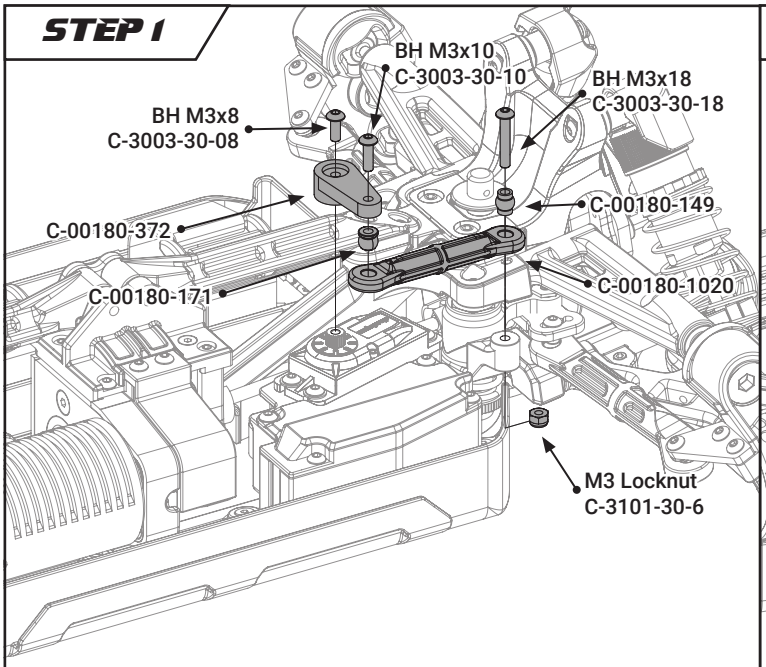


STEP 2

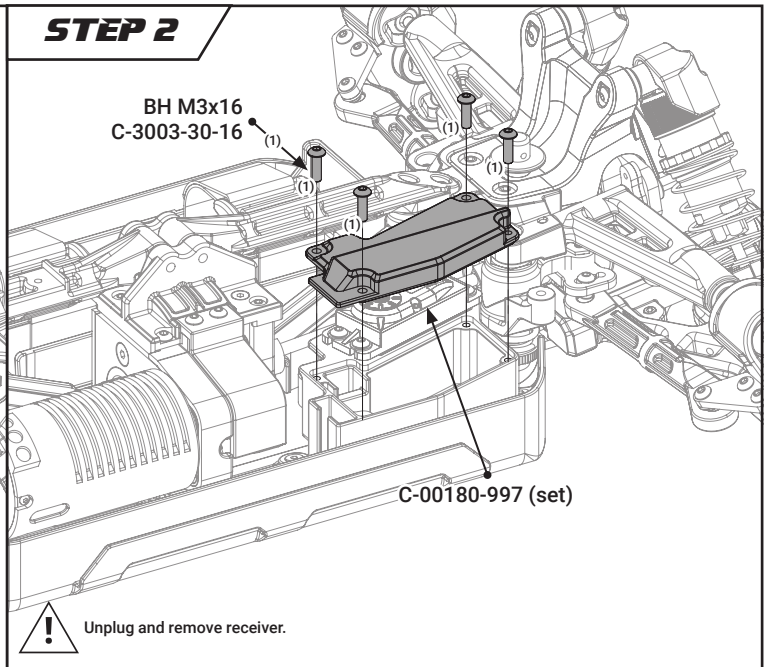


Unplug and remove receiver.

STEP 3

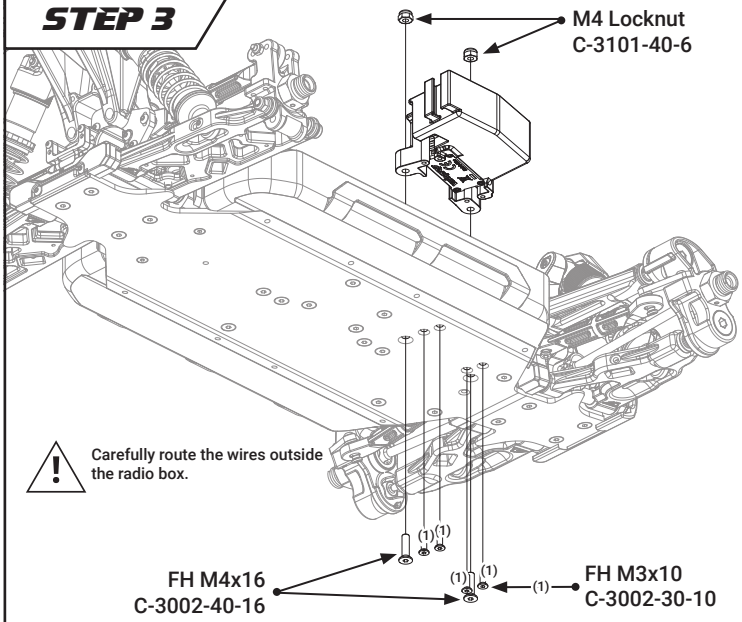

STEP 4

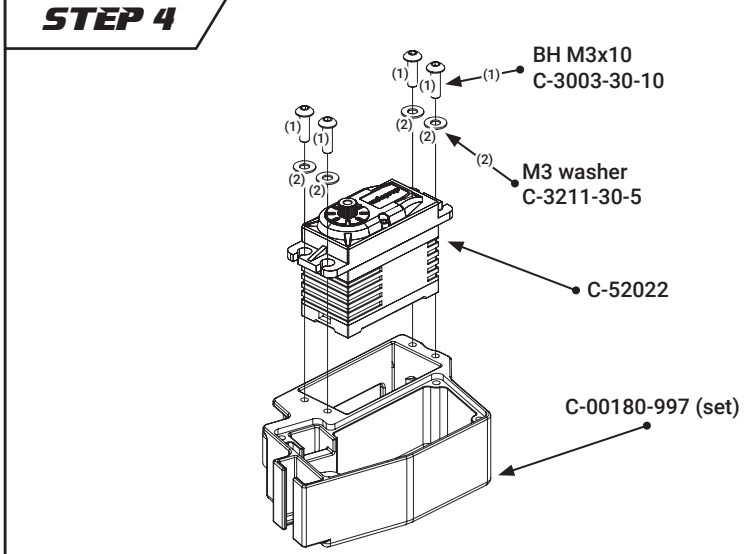

Carefully route the wires outside the radio box.