


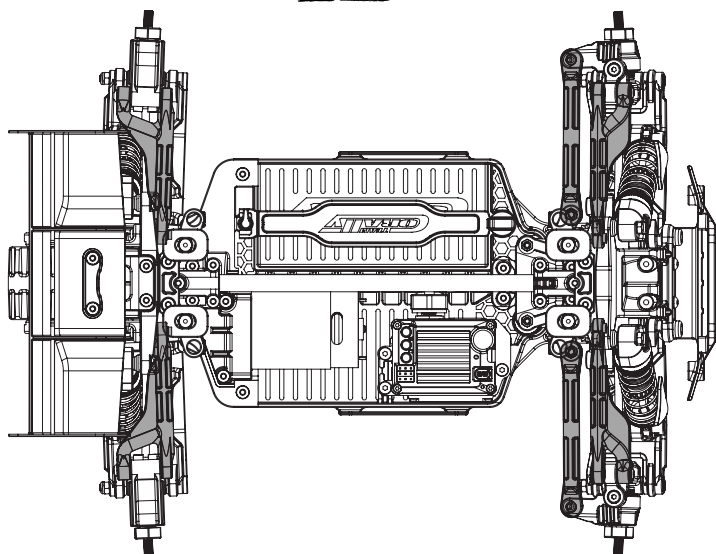


Required Tools:

- 2.0 Hex Driver
- 5.5 Nut Driver
- Shock Pliers


STEERING LINK

STEP 1

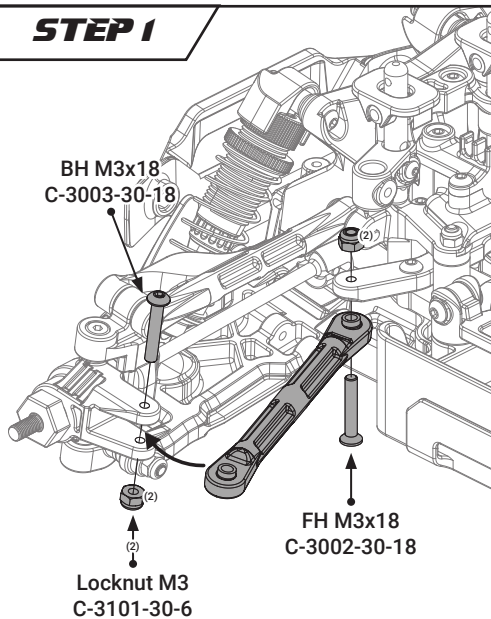


FRONT UPPER ARM

STEP 1

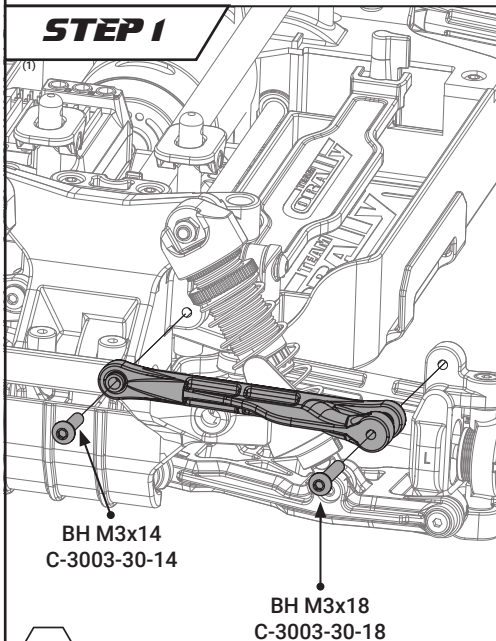


REAR UPPER ARM


STEP 1

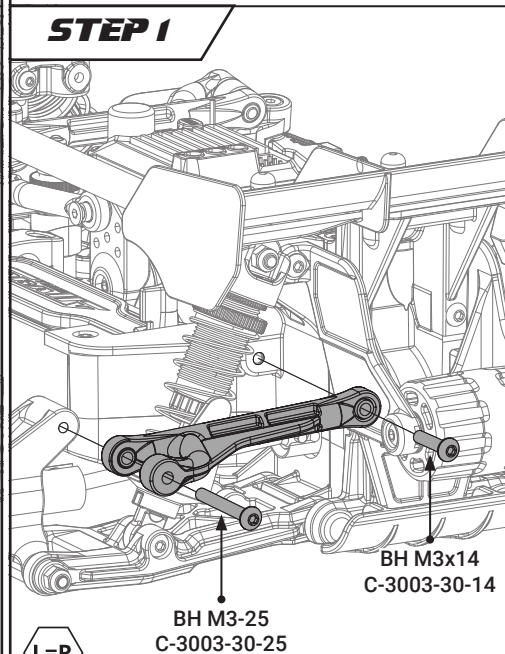

STEP 2

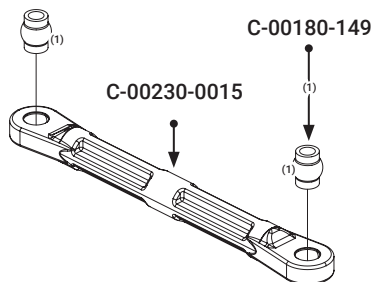

STEP 2

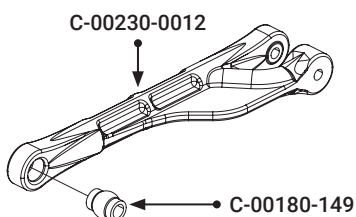

STEP 2

