


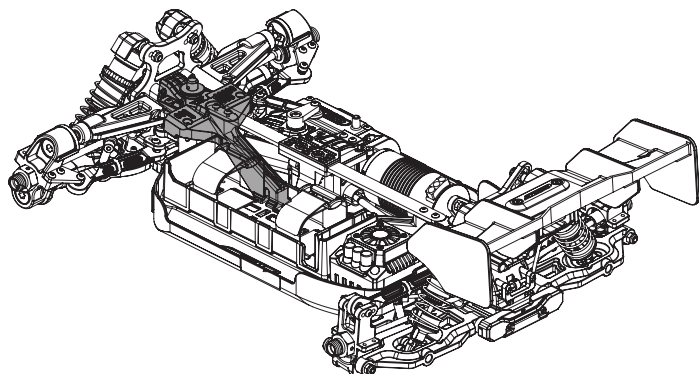


Required Tools:

- 2.0 Hex Driver
- 2.5 Hex Driver
- Thread-locker

STEP 1

FH M4x12
C-3002-40-12

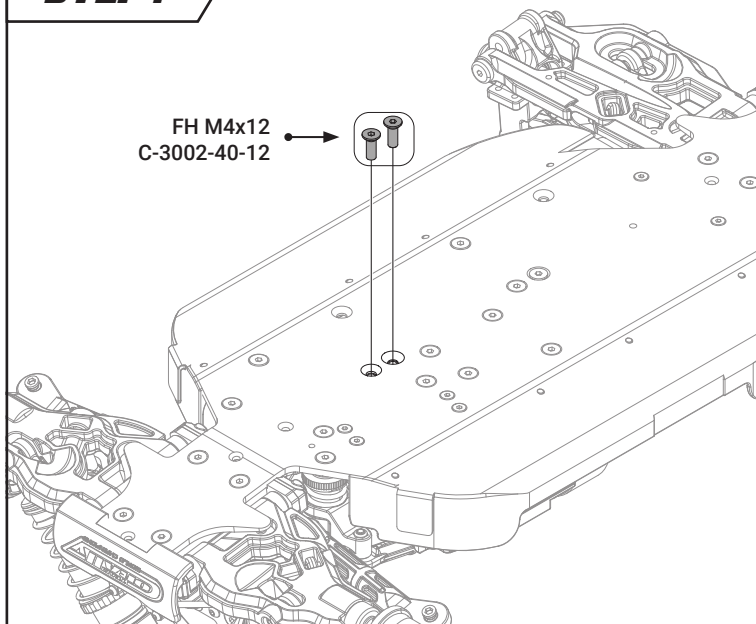


STEP 2

Set Screw M3x5
C-3004-30-05

BH M3x10
C-3003-30-10

C-00180-055 (set)

C-00180-891

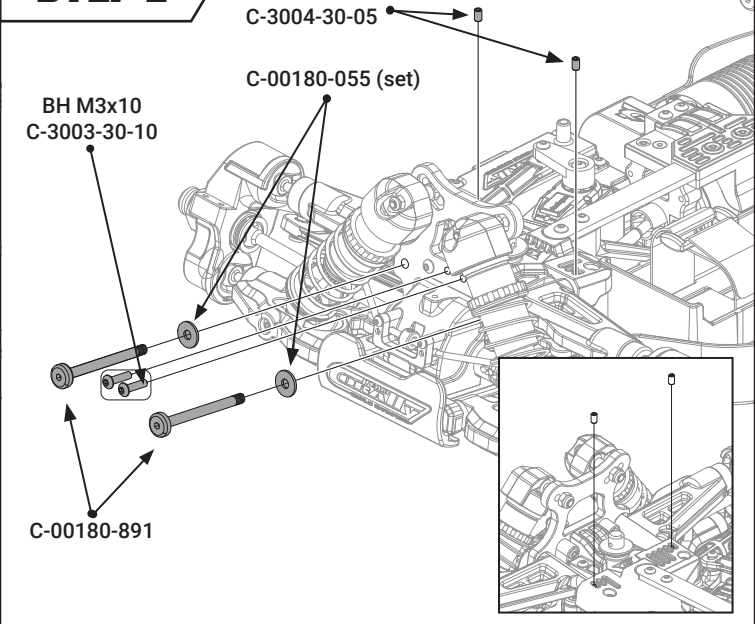

STEP 3


BH M3x10
C-3003-30-10

C-00180-969 (set)

BH M3x10
C-3003-30-10

C-00180-970


BH M3x10
C-3003-30-10

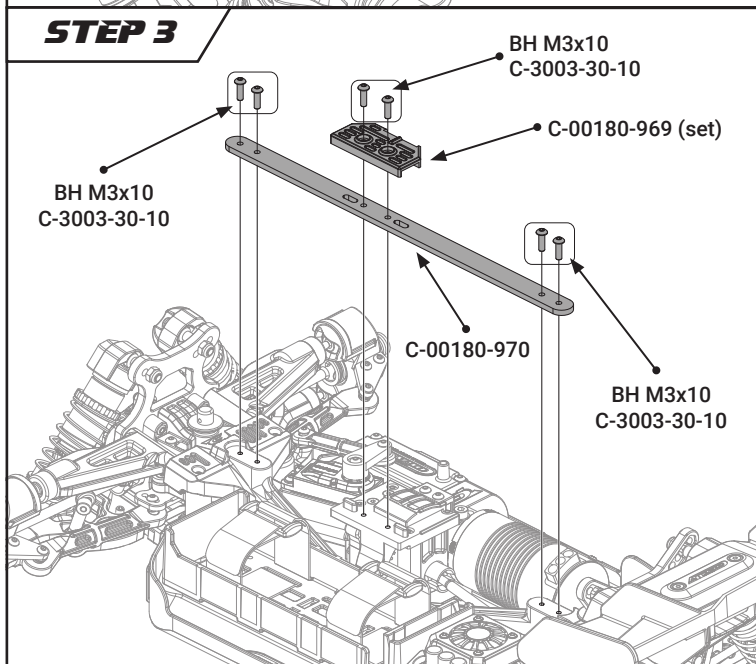

STEP 4

BH M3x14
C-3003-30-14

BH M3x12
C-3003-30-12

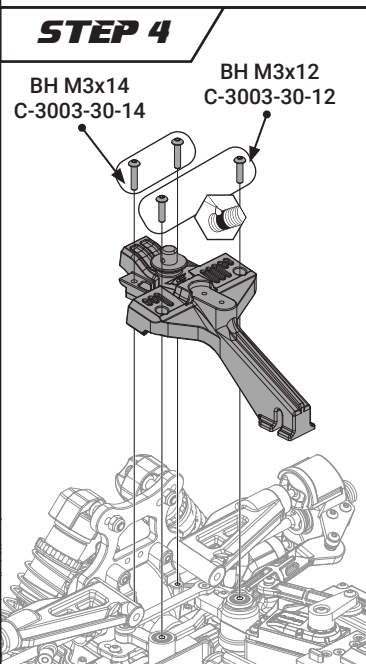

STEP 5

C-00180-967

C-00180-966 (set)

FH M3x10
C-3002-30-10

