


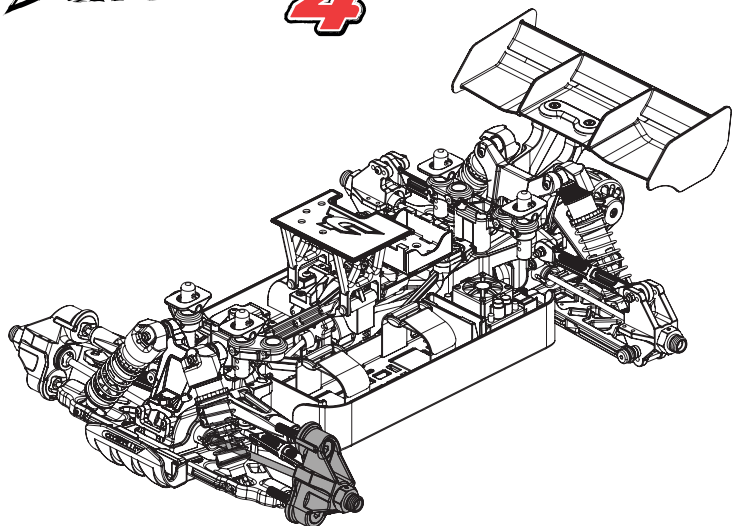

Required Tools:


- 2.0 Hex Driver
- 2.5 Hex Driver
- 17mm Wheel Nutdriver
- Hobby Knife
or Other Sharp Tool
- Thread-locker
- Lithium Grease
- Graphite Pencil

STEP 1

BH M3x10
C-3003-30-10

L=R

STEP 2

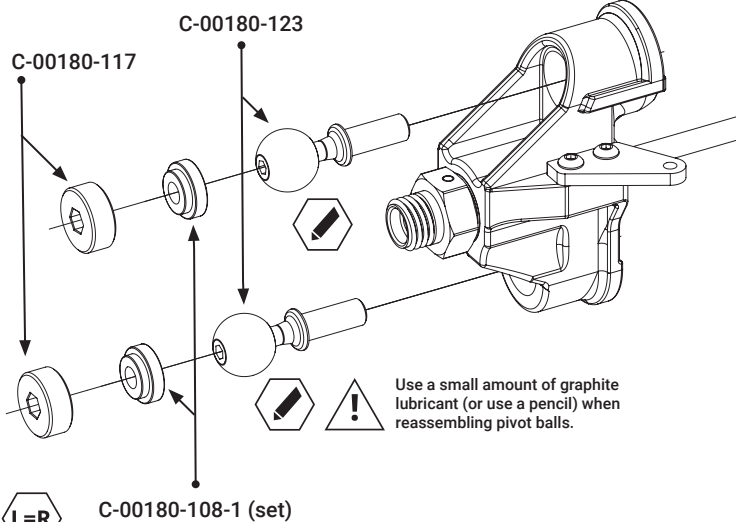

L=R

STEP 3

BH M3x12
C-3003-30-12

C-00180-207 (set)

L=R

STEP 4

C-00180-122
C-00180-329

BB 8x16x5
C-3611-3-08-16-05

Set Screw M4x4
C-3004-40-04

Shim 13x16x0.1
C-3301-13-16-01


C-00180-108-1 (set)

L=R

STEP 5



Use a small amount of lithium grease
when reassembling driveshafts.

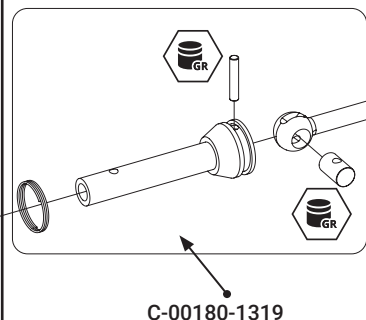

L=R