

TRAIL PROVEN OFF-ROAD PERFORMANCE

SCX10™

2012 JEEP® WRANGLER UNLIMITED
C/R EDITION
1/10th SCALE ELECTRIC 4WD RTR



 **axial**®

www.axialracing.com



CAUTIONS



To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.

INSPECT YOUR MODEL BEFORE OPERATION.

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.

AFTER OPERATION OF YOUR R/C MODEL

- Turn off receiver first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

VORSICHT!



Um Verletzungen an Personen und/oder Sachschäden zu vermeiden, sollten alle ferngesteuerten Modelle sorgfältig und verantwortungsbewusst bedient werden, wie nachfolgend beschrieben.

Wählen Sie den richtigen Platz zum Fahren

- Fahren Sie niemals auf öffentlichen Straßen. Dies könnte Verkehrsunfälle, Personen schäden oder Sachschäden verursachen.
- Fahren Sie niemals in der Nähe von anderen Personen oder Tieren.
- Fahren Sie niemals auf belebten Straßen.
- Fahren Sie nie in der Nähe von Wohnhäusern oder Krankenhäusern. Der Lärm könnte andere Personen stören.
- Fahren Sie niemals in Innenräumen. Dort könnte etwas beschädigt werden.

Überprüfen Sie Ihr Modell, bevor Sie es in Betrieb nehmen.

- Gehen Sie sicher, dass alle Schrauben und Muttern festgezogen sind. Verwenden Sie überall dort Schrauben-Sicherungslack, wo Metallschrauben in ein Metallgewinde greifen, besonders bei den Motorhaltern.
- Um Störungen zu vermeiden, benutzen Sie immer voll geladene Akkus in Ihrem Sender und Empfänger.
- Bevor Sie den Motor starten, sollten Sie immer die Funktion der Bremse und des Gashebels testen.

Nach Betrieb des RC Modells:

- Zuerst den Empfänger abdrehen, dann den Sender abdrehen um unkontrolliertes Durchgehen zu vermeiden.
- Seien Sie vorsichtig mit gebrauchten Akkus, sie können nach dem Gebrauch heiß sein.
- Ersetzen Sie Akkus/Batterien die beschädigt sind oder schadhafte Kabel aufweisen, sie können Kurzschlüsse oder Feuer verursachen.
- Halten Sie Ihr Fahrzeug sauber und entfernen Sie Schmutz und Schmierfett, damit erhöhen Sie die Lebensdauer Ihres Modells.

PRECAUTIONS



Afin d'éviter toutes blessures corporelles et/ou dommages environnants, veuillez procéder en toute responsabilité comme indiqué ci-dessous

Choisir le lieu adéquat pour faire rouler votre modèle.

- Ne jamais rouler dans les rues ou sur les routes ouvertes au public. Ceci peut provoquer de graves accidents.
- Ne jamais rouler près de personnes ou d'animaux.
- Pour éviter les blessures, ne pas rouler dans des espaces confinés.
- Ne jamais rouler où le bruit peut déranger, comme aux abords des hôpitaux ou des quartiers résidentiels.
- Ne jamais rouler à l'intérieur: les gaz d'échappement sont nocifs.



Contrôler votre modèle avant chaque utilisation.

- Vérifier que les vis et les écrous sont bien serrés. Il est très fortement conseillé d'utiliser du frein filet pour bloquer les vis qui sont en contact avec du métal et tout particulièrement les vis du moteur.
- Toujours utiliser des batteries bien chargées pour l'émission et la réception.
- Toujours vérifier les freins et la commande des gaz avant de démarrer.

Après l'Opération De Votre Modèle de R/C


- Le virage du récepteur premier, alors virage de l'émetteur, ceci empêchera des fugitifs.
- Faire attention en contrôlant des piles, ils auront chaud après avoir couru.
- Remplacer n'importe quelles piles qui ont été cabossées ou a éraillé des fils, les court-circuits peuvent causer le feu.
- Etre sûr de garder votre modèle de R/C nettoie et libère de terre et la graisse suppléments, ceci augmentera la vie.

Radio control car
Ferngesteuertes Modellauto
Voiture radio-commandée

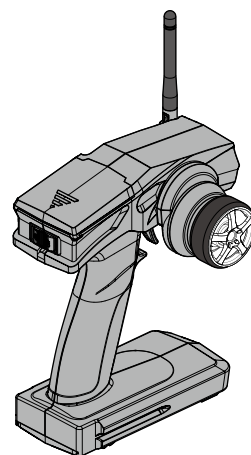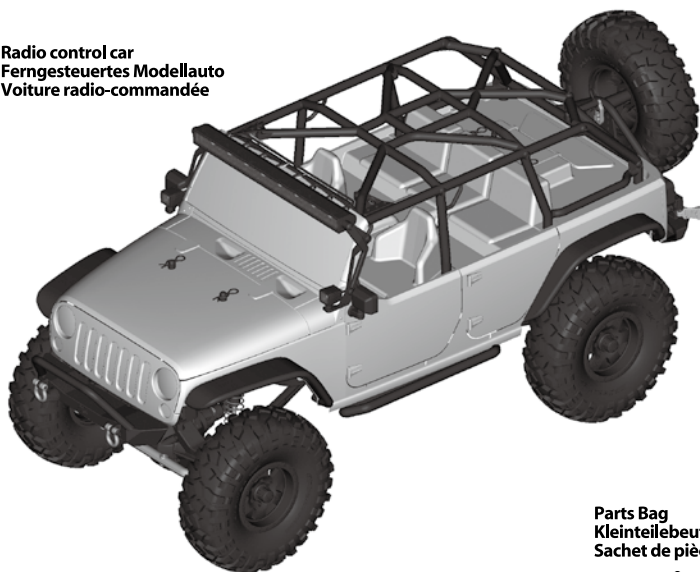


2.4GHz
Transmitter
Sender
Emetteur


Parts Bag
Kleinteilebeutel
Sachet de pièces détachées

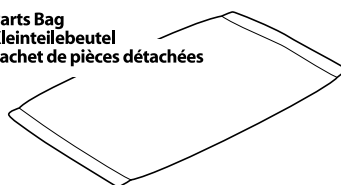

Cross wrench
Steckschlüssel
Clé à tube

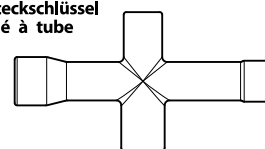


Equipment needed / Benötigtes Zubehör / Equipement nécessaire

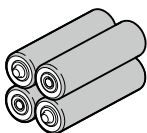


x4

4 AA Alkaline Dry Batteries.
4 St. AA Trockenbatterien.
4 piles type R6 pour votre
radio commande.


Battery
Akku-Pack
Pack de batterie

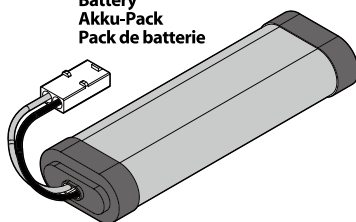




Charger
Ladegerät
Chargeur

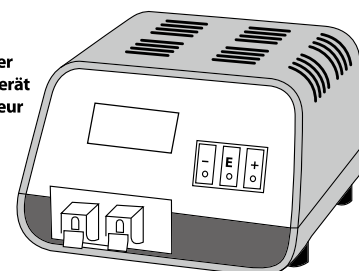


Tools Recommended / Benötigte Werkzeuge / Outillage




Hex wrench
Inbusschlüssel
Clé Allen

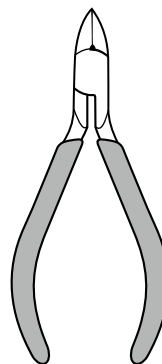

Side cutter
Seitenschneider
Pinces coupantes

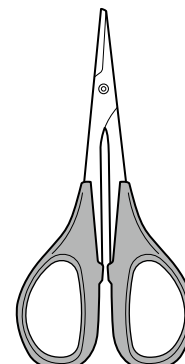


Curved scissors
Schere
Ciseaux

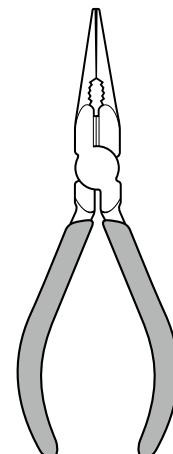


Long nose pliers
Flachzange
Pinces à becs longs

Modeling knife
Modelliermesser
Couteau de modéliste



Charge your battery / Laden des Fahrakkus / Chargement de la batterie

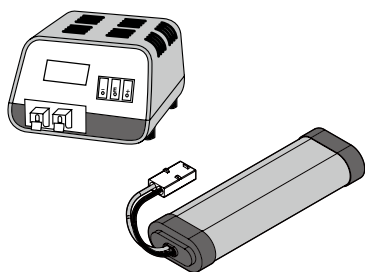

Follow the manufacturer's directions for the charger you purchased to properly charge your batteries.

Folgen Sie den Herstelleranweisungen für den Auflader Ihres gekauften ordentlich, Ihre Batterien zu laden.


Suivre les directions de fabricants pour le chargeur votre a acheté convenablement pour charger vos piles.

Do not use Nickel Cadmium battery charger for Nickel Metal Hydride batteries. If you do not use the special charger for Nickel Metal Hydride batteries, the batteries will be damaged.


Verwenden Sie kein Ladegerät, dass für Nickel Cadmium Akkus gedacht ist, um Nickel Metal Hydrid Akkus zu laden. Wenn Sie kein spezielles Ladegerät für Nickel Metal Hydrid Akkus verwenden, können diese beschädigt werden.

N'utilisez pas de chargeur pour batteries Cadmium-Nickel pour charger des batteries Nickel-Métal Hydride. Si vous n'utilisez pas un chargeur spécial pour des batteries Nickel-Métal Hydride, celles-ci seront endommagées.


- ① Removing the Body
Put the battery in the car.

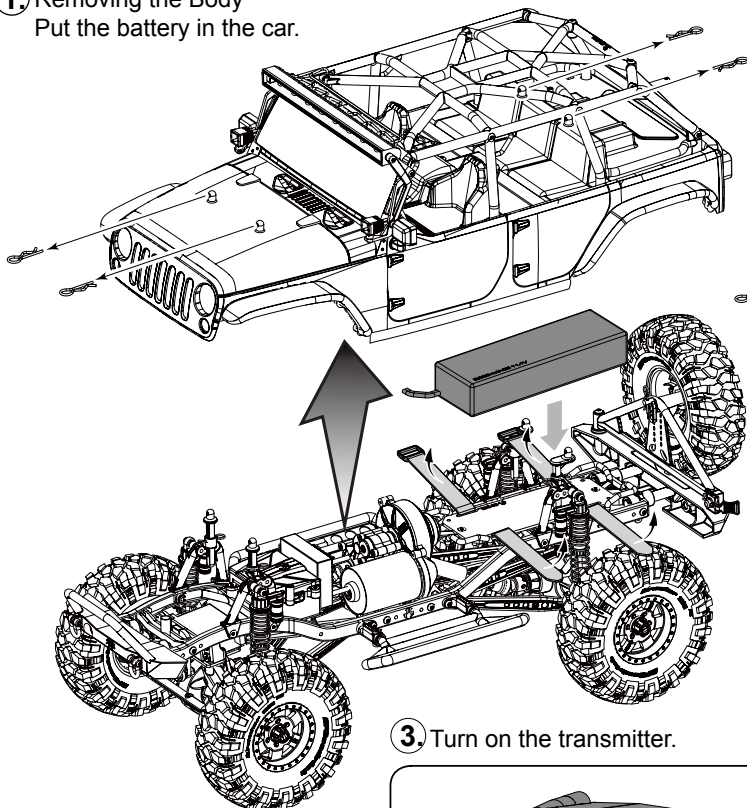



- ② Install the battery
Put back the Body.

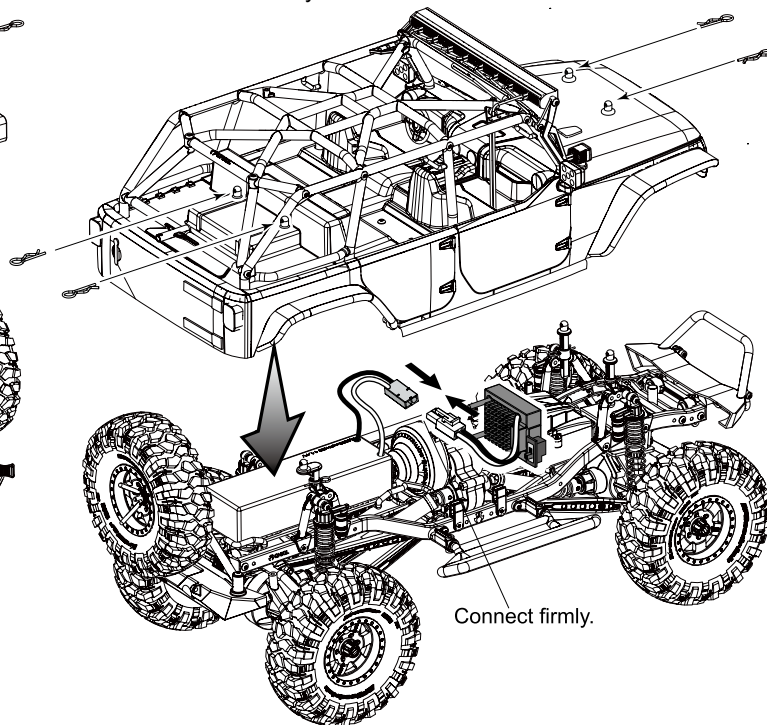


- ③ Turn on the transmitter.

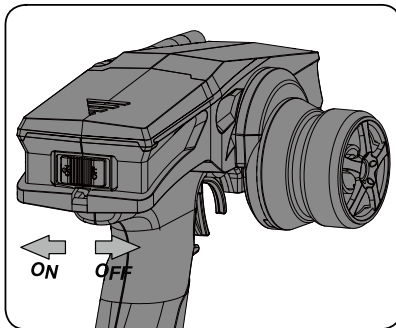

- ④ Turn on the electronic speed controller.

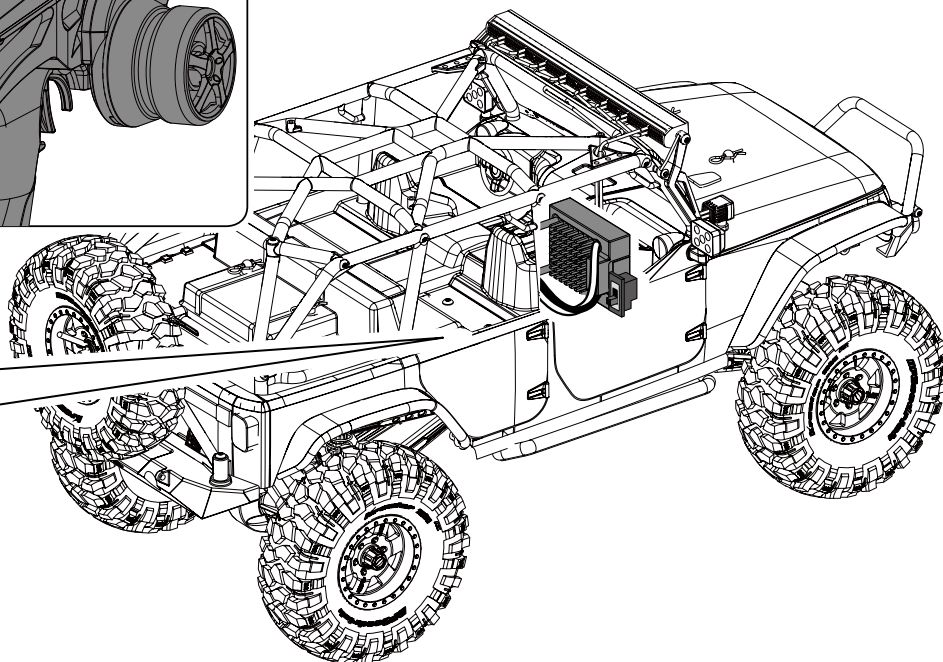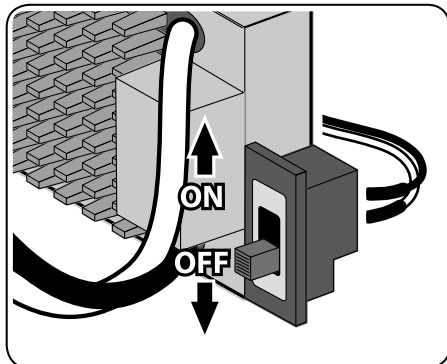


Top View Parts

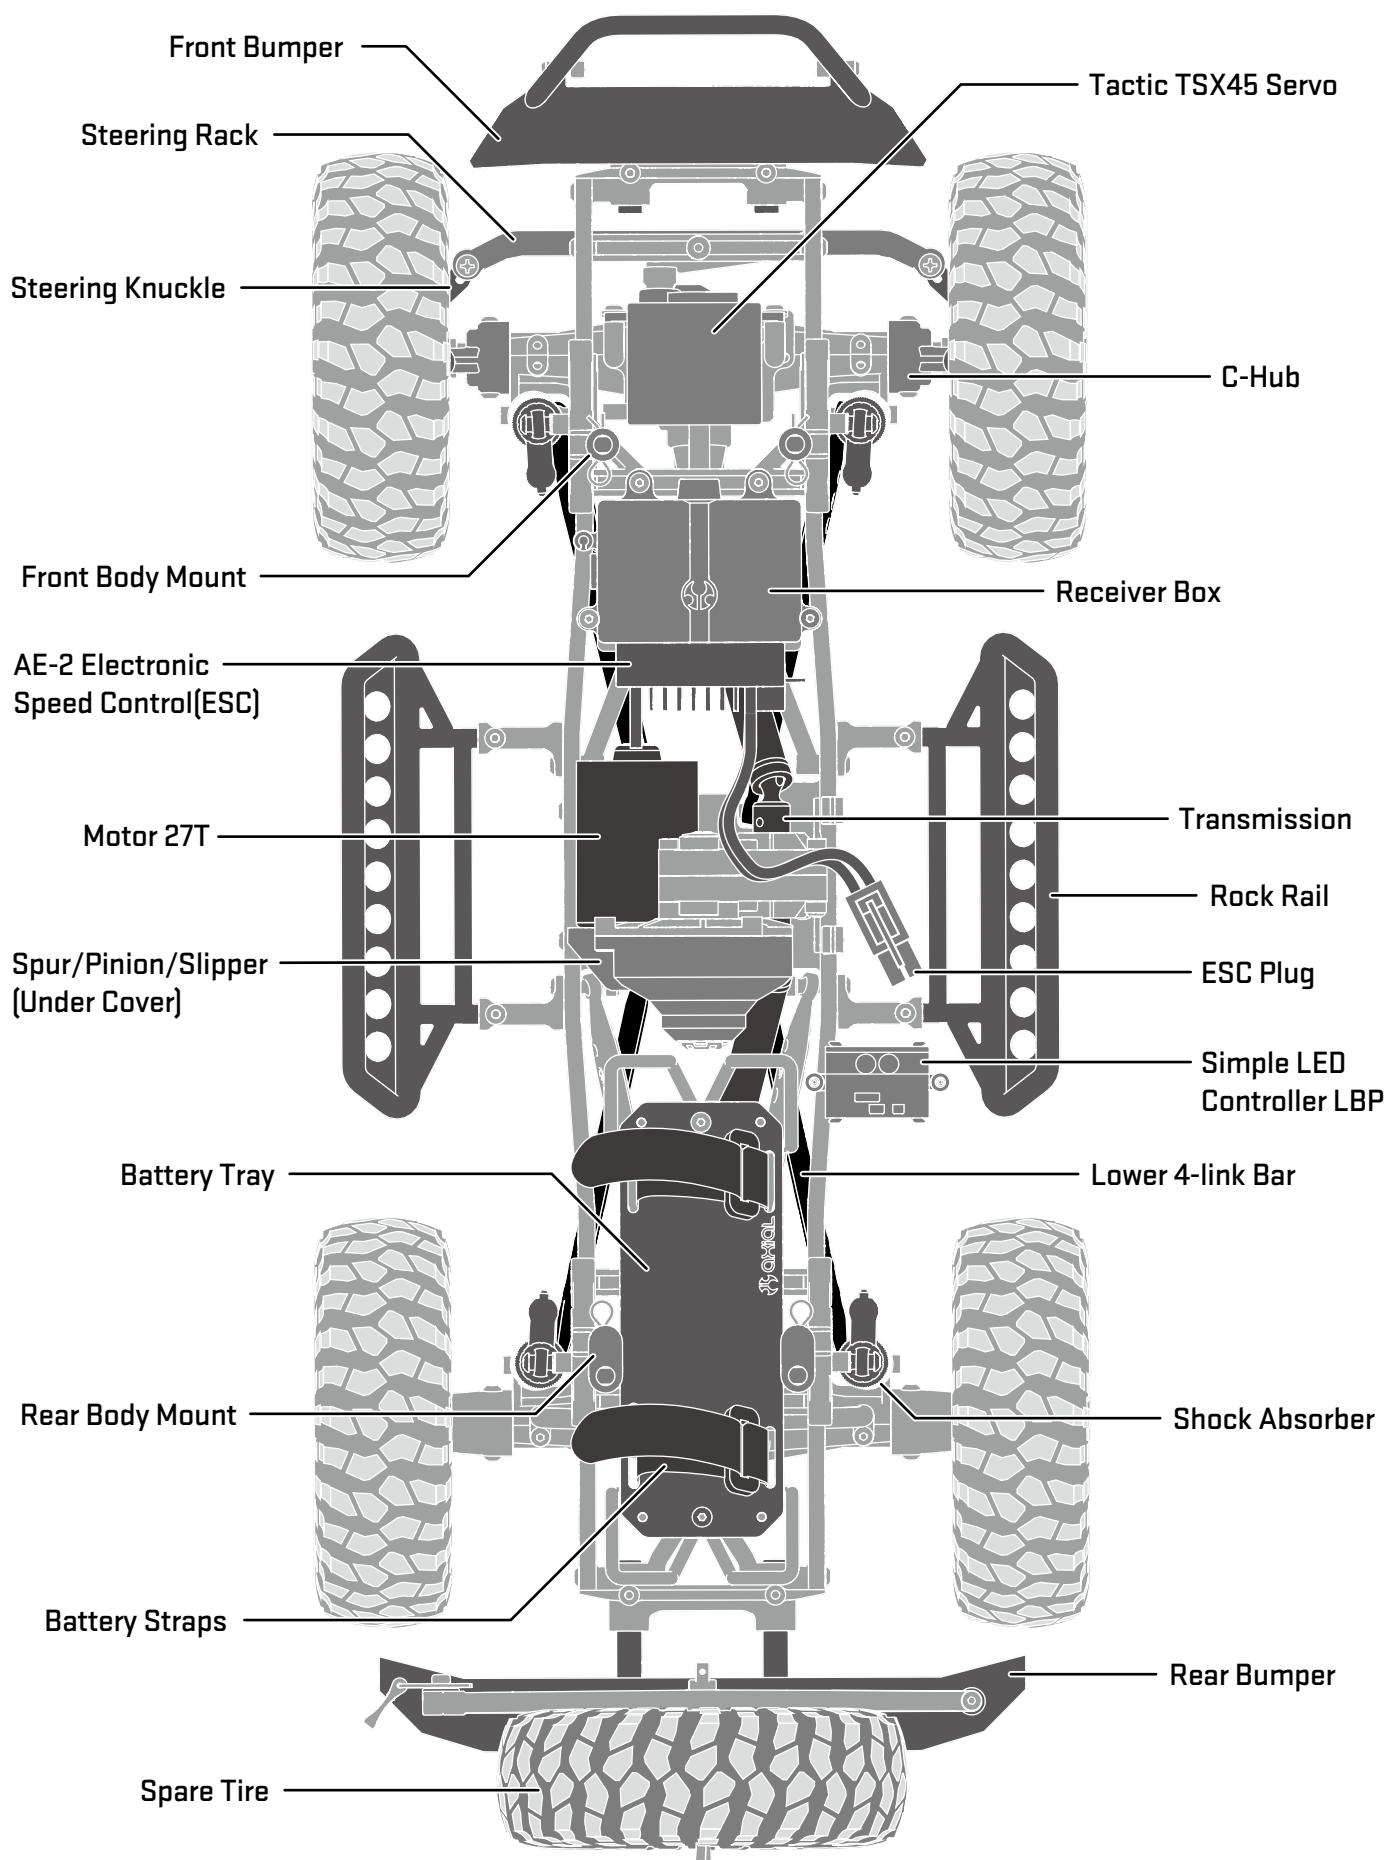


Getting-Started Checklist


The following checklist is a guide for getting you vehicle running for the first time.

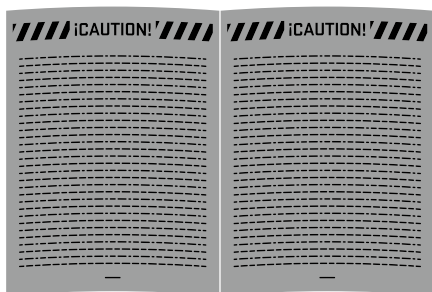


- ☐ Read 'Cautions' in Manual. (Page 2)

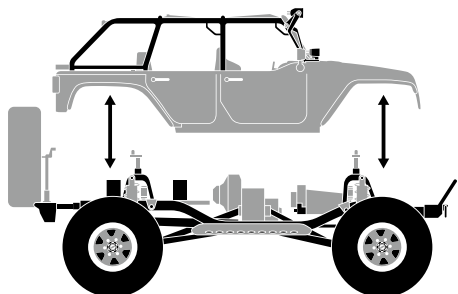


- ☐ Familiarize yourself with vehicle and its components.

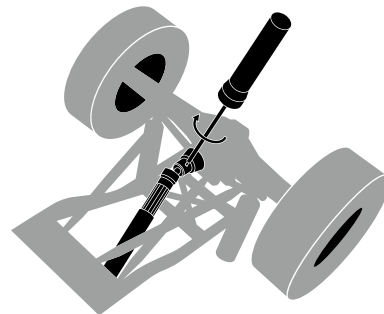


- ☐ Even though the vehicle is new check driveshaft setscrews and other screws to make sure they are tight from the factory.

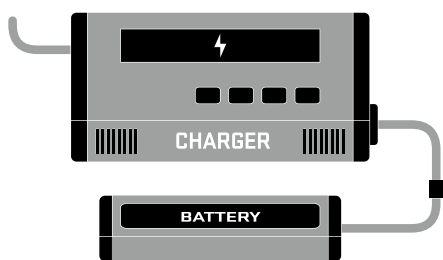


- ☐ Charge battery pack. (Page 4)

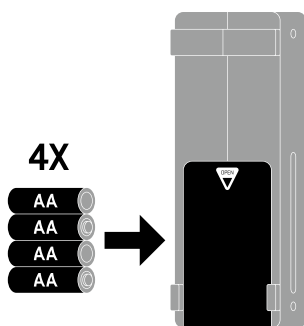


- ☐ Install 4X AA batteries into Transmitter. (Page 7)

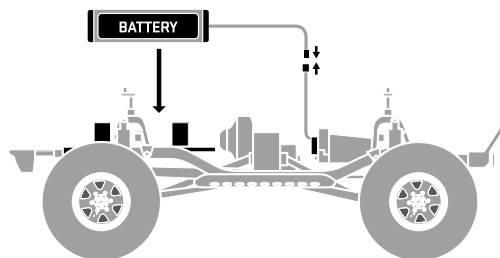

- ☐ Install battery pack in vehicle. (Page 4)

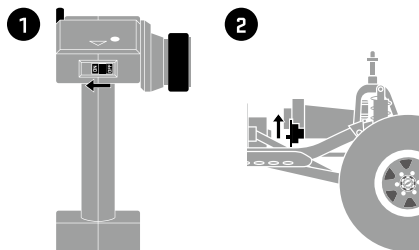


- ☐ Turn on transmitter FIRST then ESC. (Page 4)

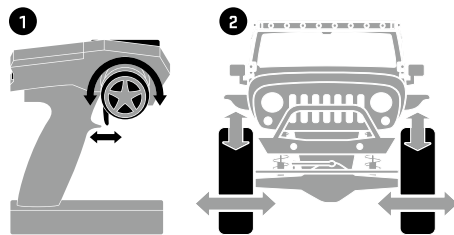


- ☐ Check to make sure steering and throttle operation work correctly. (Page 7)



- ☐ Range check radio system. (Next Page)

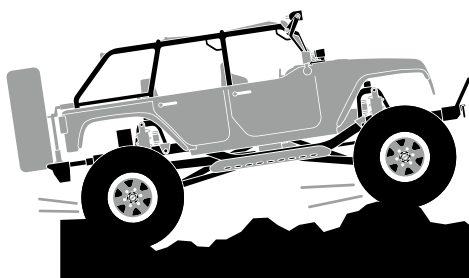

- ☐ Drive vehicle, challenge yourself and have fun!

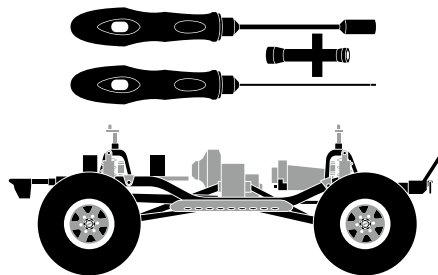

- ☐ Maintain vehicle. (Next Page)

Range-Checking Your Radio System

The radio system should be checked before operating the vehicle to ensure it's operating properly and has adequate range.















1. Turn on the transmitter first and then the vehicle.
2. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
3. Walk away until you are at the farthest distance you plan to operate the vehicle.
4. Steer the vehicle back and forth and throttle both forward and reverse making sure there is no erratic behavior.
5. If any erratic behavior is exhibited do not operate the vehicle, call customer service for further assistance.




RANGE-CHECKING FOR DISTANCE

Maintaining Your Vehicle


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak running performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

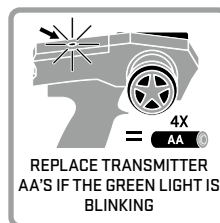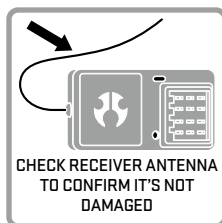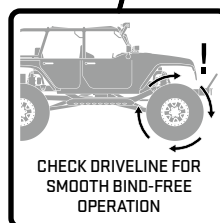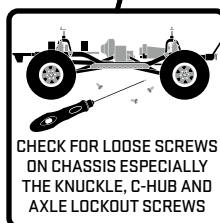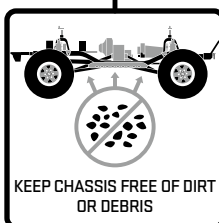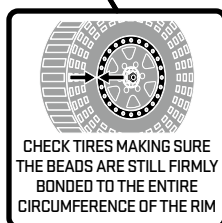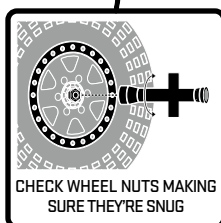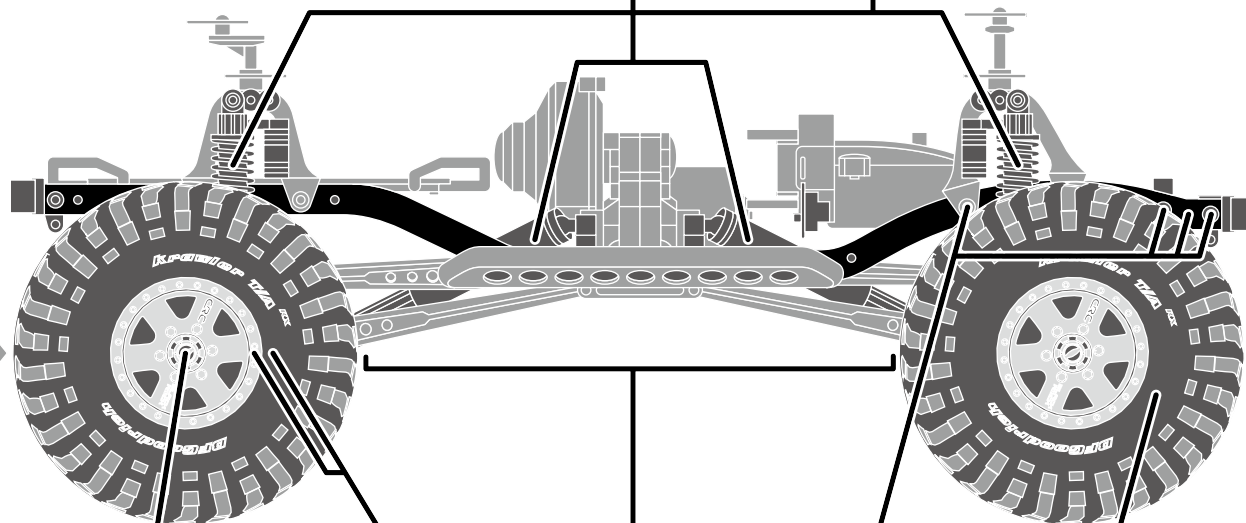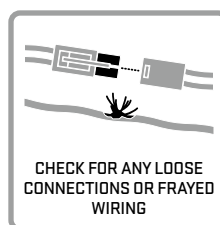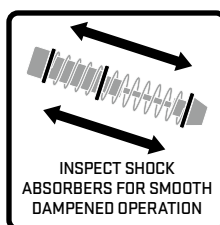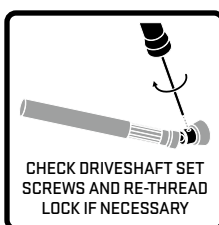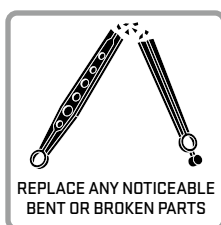


ESC Instructions

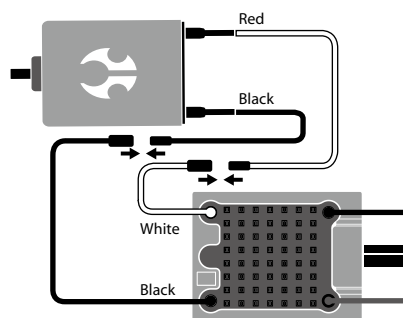


- ☐ Connect the ESC wires to the motor.

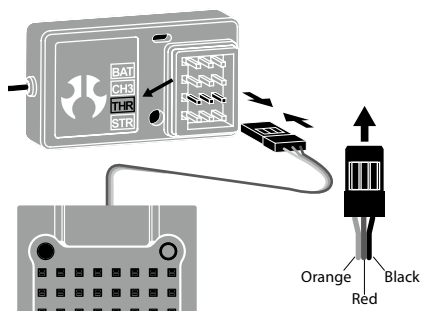

- ☐ Plug the ESC wire into the throttle channel on the receiver.

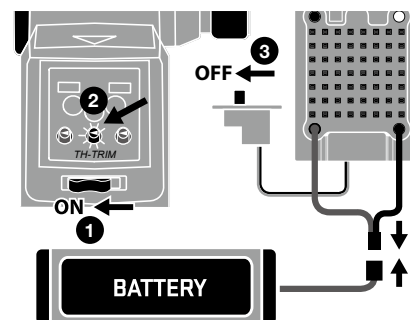


- ☐ Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set at zero, and the ESC switch in the OFF position.

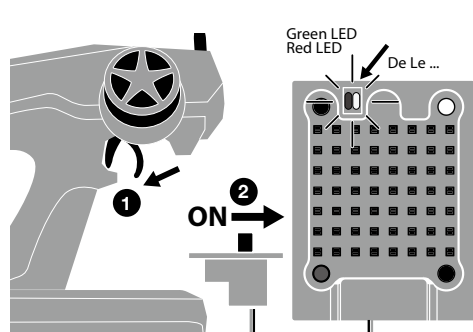


- ☐ Apply and hold full throttle on the transmitter. Turn on the ESC and it will emit a series of tones, De Le De Le De Le, the red and green LED will flash then only the green LED will remain blinking.


Continue applying full throttle

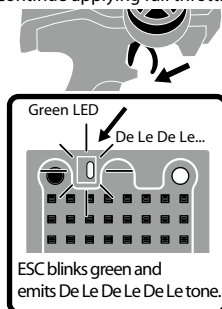


Apply full brake

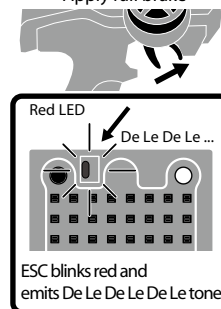


Set to neutral point

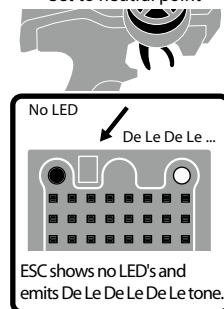


- ☐ The ESC will emit a final short series of tones, De Le De Le, confirming it has been calibrated.

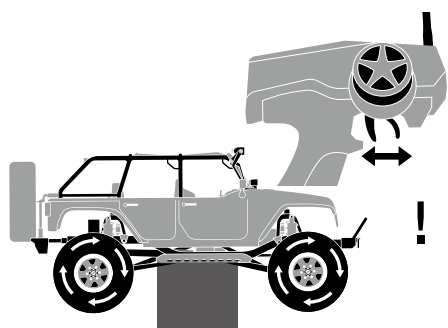

- ☐ Apply throttle to make sure the motor is going the direction you wanted.

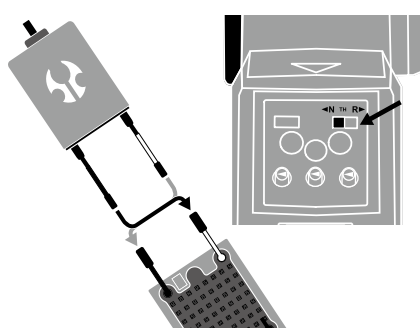

- ☐ To reverse the direction of the motor, switch the wires going to the motor. Or reverse the transmitter throttle reverse switch.

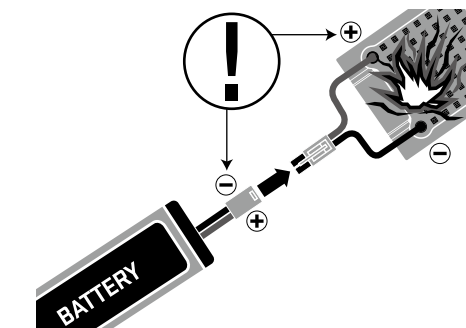

- ☐ Do NOT reverse the battery wire connections! Reversing the battery polarity will permanently damage the ESC.

Specifications:

Input voltage:	6 Cell Ni/2S LiPo
Size:	1.7 in x 1.24 in
Weight:	45 grams
Motor Limit:	19T
On-Resistance FET:	.0018
Rated/Peak Current:	106A Peak
Braking Current:	106A Peak
BEC Voltage/A:	5.0V 2.0A Peak
PWM Frequency:	6 KHZ

Notes:

- If ESC setup does not initialize when holding the full throttle, try switching the throttle reversing switch on the transmitter.
- LiPo Cut-Off is set to "ON" from the factory. If you're using NiMH or NiCd batteries turn "OFF" LiPo Cut- Off by visiting the following link for Manually Programming the AE- 2 ESC : <http://www.axialracing.com/instructions>.
- Use the Castle Link to access the advanced settings in the ESC. Visit <http://www.castlecreations.com/> for more information on the Castle Link USB Programming Kit.



CONNECT THE BATTERY PACK JUST BEFORE DRIVING AND DISCONNECT IT IMMEDIATELY AFTER. ALWAYS MAKE SURE YOU ARE CONNECTING THE ESC TO A PROPER POWER SOURCE THAT HAS THE CORRECT VOLTAGE & POLARITY. INCORRECT VOLTAGES OR REVERSED POLARITY WILL DAMAGE THE ESC. ONCE THE BATTERY PACK IS CONNECTED, HANDLE THE MODEL WITH EXTREME CARE, MAKE SURE YOU ARE CLEAR OF ALL ROTATING PARTS.


Gear Ratio / Getriebeübersetzung

Use this equation to calculate the final drive ratio.
Final Drive Gear Ratio = 1 / ((pinion/Spur) X .13)

Mit dieser Gleichung können Sie die Gesamtübersetzung berechnen.

Gesamtübersetzung = 1 / ((pinion/Spur) X .13)

Slower - More Torque
Langsamer - Mehr Kraft

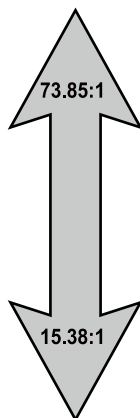

Faster - Less Torque
Schneller - Weniger Kraft

		48 Pitch									
		Spur									
		70	72	75	78	81	85	87	90	93	96
Pinion	10								69.23	71.54	73.85
	11								62.94	65.03	67.13
	12							55.77	57.69	59.62	61.54
	13							51.48	53.25	55.03	56.80
	14						46.70	47.80	49.45	51.10	52.75
	15						43.59	44.62	46.15	47.69	49.23
	16						40.87	44.62	43.27	44.71	46.15
	17						36.32	39.37	40.72	42.08	43.44
	18					34.62	34.41	37.18	38.46	39.74	41.03
	19					32.79	34.41	35.22	36.44	37.65	38.87
	20					31.15	32.69	33.46	34.62	35.77	36.92
	21				28.57	29.67	31.14	31.87	32.97	34.07	35.16
	22				27.27	28.32	29.72	30.42	31.47	32.52	33.57
	23				26.09	27.09	28.43	29.10	30.10	31.10	32.11
	24			24.04	25.00	25.96	27.24	27.88	28.85	29.81	30.77
	25			23.08	24.00	24.92	26.15	26.77	27.69	28.62	29.54
	26			22.19	23.08	23.96	25.15	25.74	26.63	27.51	28.40
	27		20.51	21.37	22.22	23.08	24.22	24.79	25.64	26.50	27.35
	28		19.78	20.60	21.43	22.25	23.35	23.90	24.73	25.55	26.37
	29	18.57	19.10	19.89	20.69	21.49	22.55	23.08	23.87	24.67	25.46
	30	17.95	18.46	19.23	20.00	20.77	21.79	22.31	23.08	23.85	24.62
	31	17.37	17.87	18.61	19.35	20.10	21.09	21.59	22.33	23.08	23.82
	32	16.83	17.31	18.03	18.75	19.47	20.43	20.91	21.63	22.36	23.08
	33	16.32	16.78	17.48	18.18	18.88	19.81	20.28	20.98	21.68	22.38
	34	15.84	16.29	16.97	17.65	18.33	19.23	19.68	20.36	21.04	21.72
	35	15.38	15.82	16.48	17.14	17.80	18.68	19.12	19.78	20.44	21.10

Warranty Info

AXIAL LIMITED WARRANTY

Your Axial product is warranted to be free of defects in materials and workmanship when new in the factory sealed box. This warranty does not cover damages due to normal wear and tear, users' failure to perform routine maintenance, error of assembly or installation, modifications or addition of aftermarket parts or option parts. This warranty lasts as long as the original purchaser owns the product and is not transferable (verified by dated itemized sales receipt accompanied with product). In the event of a defect under this warranty, Axial will, at our discretion, repair or replace the product, provided our inspection indicates that an original defect exists. Axial provides a 10-day warranty from the date of purchase on electronics (i.e. servo, esc, radio). Axial reserves the right to replace any product which is no longer available with a product of comparable value and function. If Axial determines the repair is not covered under warranty guidelines, there could be a charge applied for the repair and return shipping charges. Note: Purchasing products from unauthorized distributors may void warranty and prevent support and service.

INTERNATIONAL CUSTOMER WARRANTY

Please return product to the dealer where the purchase was made. If your Axial product purchase was made through an on-line retailer, any warranty issues must be taken care of by that retailer. Axial assumes no responsibility for Axial products sold internationally by on-line retailers.

REPAIR

For warranty repair, please contact Axial Customer Service at (877) 64-AXIAL (877-642-9425).

HOURS AVAILABLE:

8:00 am - 5:00 pm Monday through Friday, Central Time.

Problem Problem Problème

Cause Grund Cause

Remedy Lösung Remède

Does not move
Das Auto fährt nicht
Le véhicule ne bouge pas

Batteries are not installed properly in the transmitter.
Die Batterien sitzen nicht korrekt im Sender.
Les piles ne sont pas placées correctement dans l'émetteur.

Weak or no battery in model.
Leerer oder kein Akku im Auto.
Batterie faible ou non installée

Damaged motor.
Kaputter Motor.
Moteur endommagé

Frayed or broken wiring.
Beschädigte Verkabelung.
Câble dénudé ou coupe

ESC is shut down by heat protection circuit.
Notabschaltung des Reglers wegen Überhitzung.
Le système ESC est fermé par le circuit de protection thermique.

Make sure batteries are properly installed.
Legen Sie die Batterien korrekt ein.
Positionnez correctement les piles dans l'émetteur.

Install charged battery.
Einbauen eines geladenen Akkus.
Mettez en place une batterie chargée

Replace with new motor.
Austausch durch einen neuen Motor.
Remplacez par un nouveau moteur

Splice and insulate wiring completely.
Erneuern und isolieren Sie die kaputte Stelle.
Faites une épissure et isolez complètement le câble.

Stop driving immediately, do not drive the car until the Speed Controller cools down.
Fahren Sie nicht weiter. Warten Sie bis der Fahrten regler abgekühlt ist.
Arrêtez immédiatement de conduire, ne pilotez pas la voiture tant que le contrôleur de vitesse n'a pas refroidi.

No Control.
Keine Kontrolle über das Auto
Pas de contrôle

Improper antenna on transmitter or model.
Zu kurze Antenne am Sender oder Auto.
Antenne inadéquate sur l'émetteur ou le véhicule

Weak or no batteries in transmitter or model.
Leere oder keine Batterien im Sender oder Auto.
Batterie faible ou absente dans l'émetteur ou le véhicule.

Neutral position or trim is incorrect.
Neutralposition oder Trimmung sind verstellt.
La position neutre est incorrecte ou le trim n'est pas réglé.

Are the receiver and battery connections properly connected?
Sind der Empfänger und die Batterieverbindungen ordentlich verbunden?
Son conectadas apropiadamente las conexiones del receptor y la batería?

Install charged or fresh batteries.
Einbauen voller Batterien.
Mettez des batteries rechargées ou neuves.

Fully extend antenna.
Ziehen Sie die Antenne vollständig aus.
Dépliez complètement l'antenne.

Adjust the steering trim.
Stellen Sie die Lenkungstrimmung neu ein.
Réglez le trim de direction.

Check receiver and battery connections.
Prüfen Sie Empfänger und Batterieverbindungen.
Compruebe conexiones de batería y receptor.


Steering and Throttle Function Reversed.
Lenkung und Gas funktionieren genau verkehrt herum.
Direction et accélération inverses.


Servo reverse switch is in wrong position.
Servorichtungs-Schalter ist in der falschen Position.
L'interrupteur de marche arrière du servo est dans la mauvaise position

Please check that the wires from ESC to motor are connected properly.
Bitte überprüfen Sie, ob die Kabel vom Regler zum Motor richtig sitzen.
Veuillez vérifier que les fils allant de l'ESC au moteur sont correctement raccordés.


Set to correct position.
Satz, Position zu korrigieren
Vérifiez la position correcte

Check to make sure motor and ESC are properly connected.
Kontrolle sich zu vergewissern, dass Motor und ESC ordentlich verbunden sind.
Le contrôle pour assurer que le moteur et ESC est convenablement connecté.

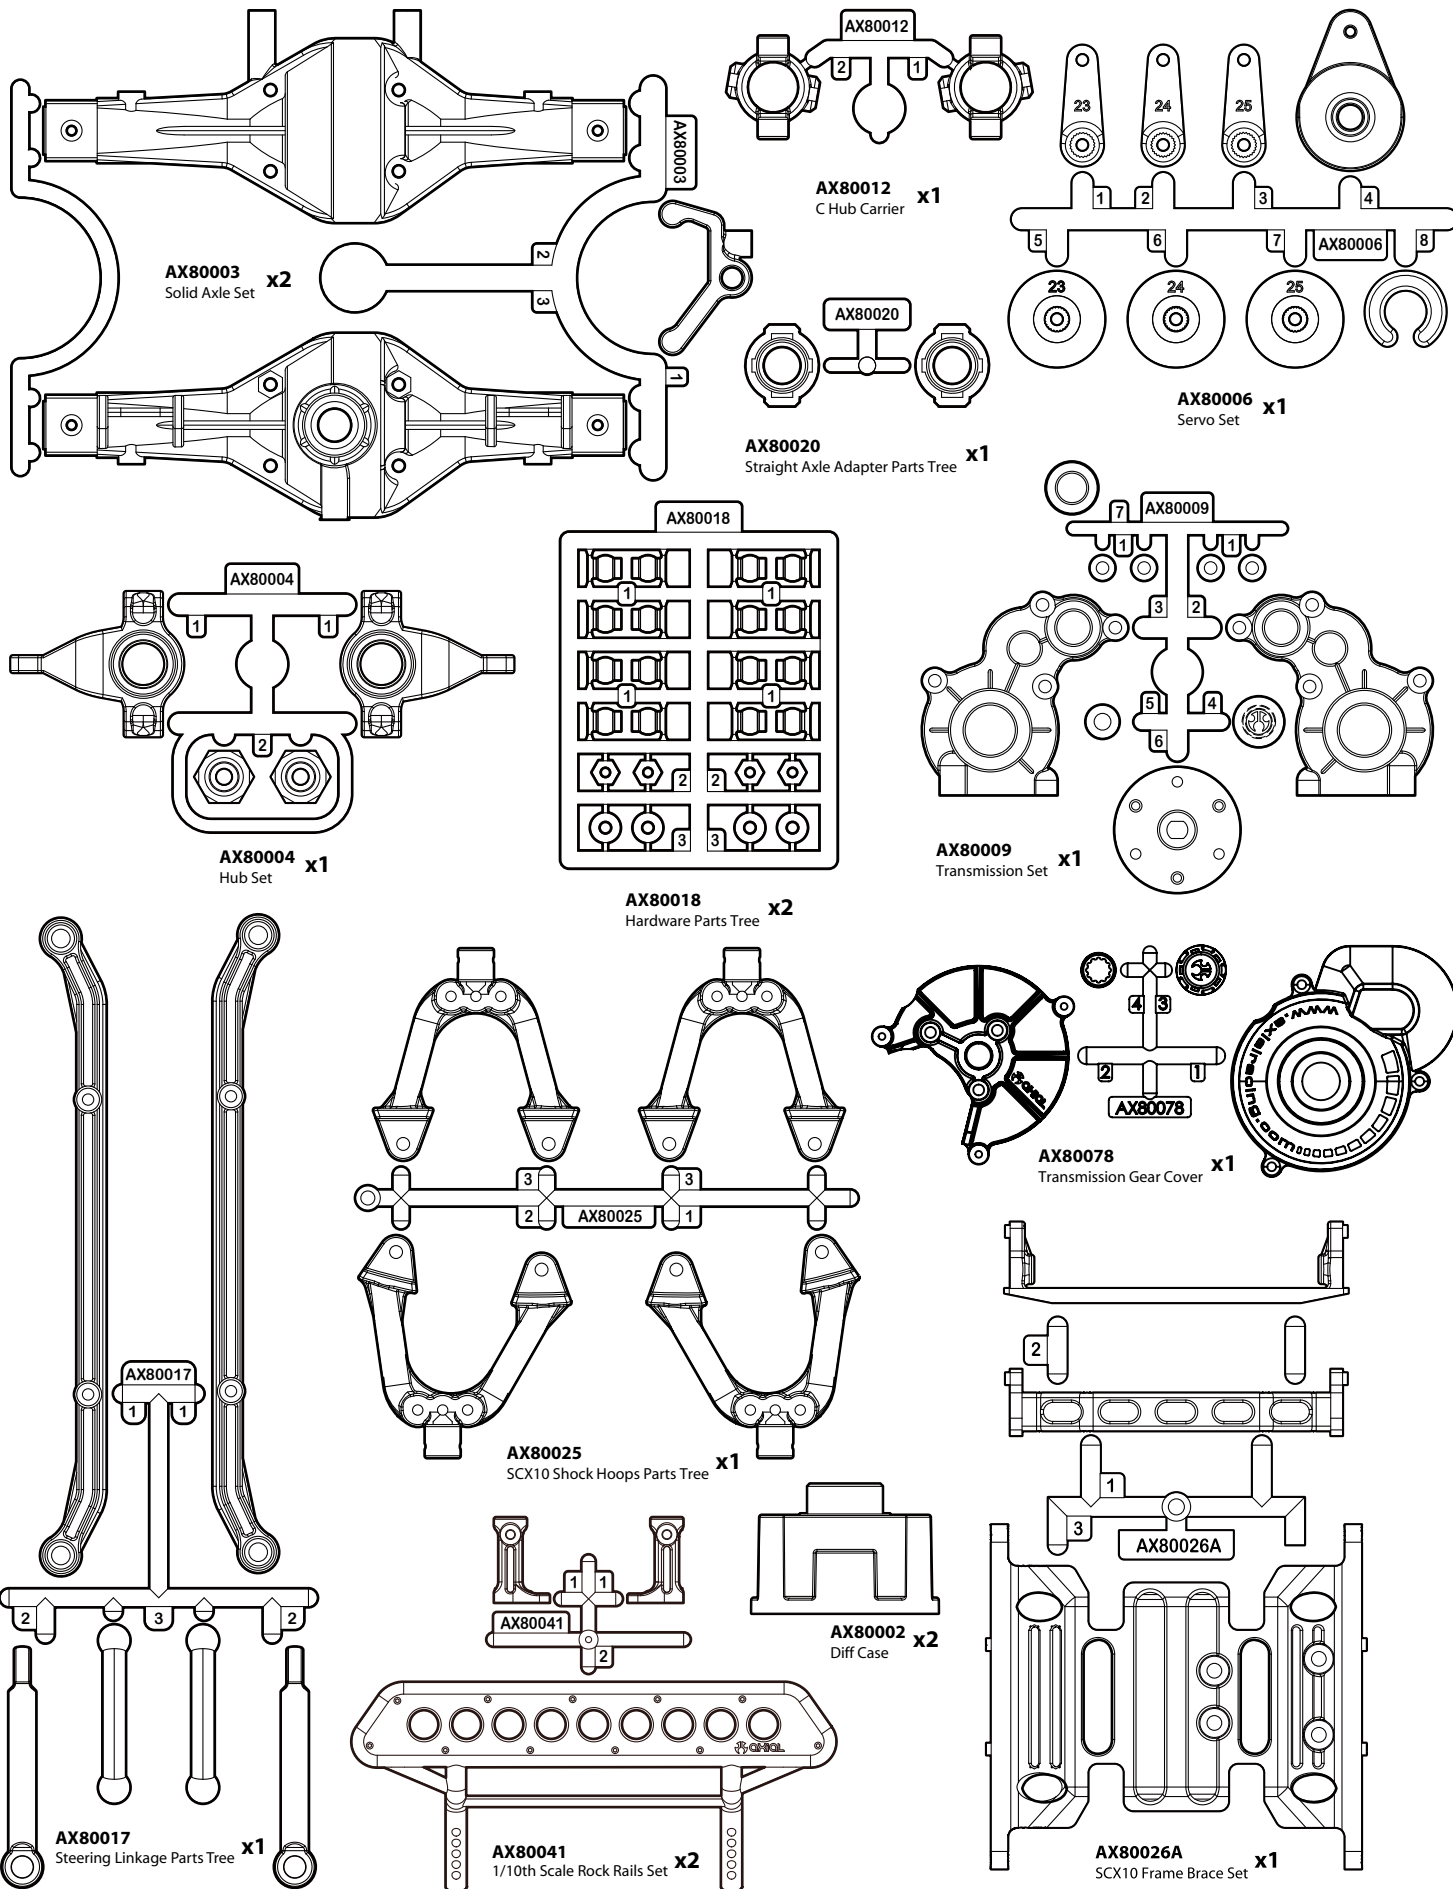


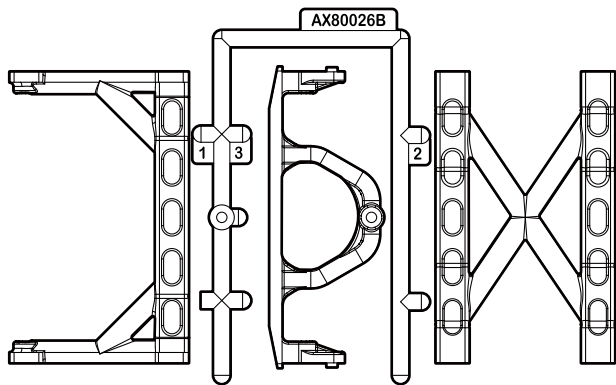


AX80026B
SCX10 Frame Brace Set **x1**

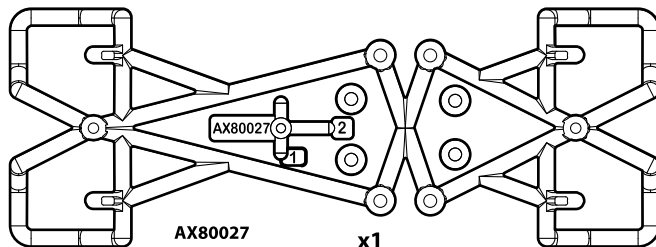


AX80027
SCX10 Battery Tray Holder **x1**

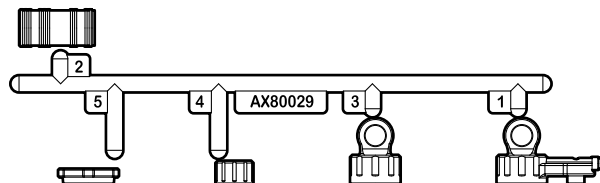


AX80029
Shock Cap Parts Tree **x4**

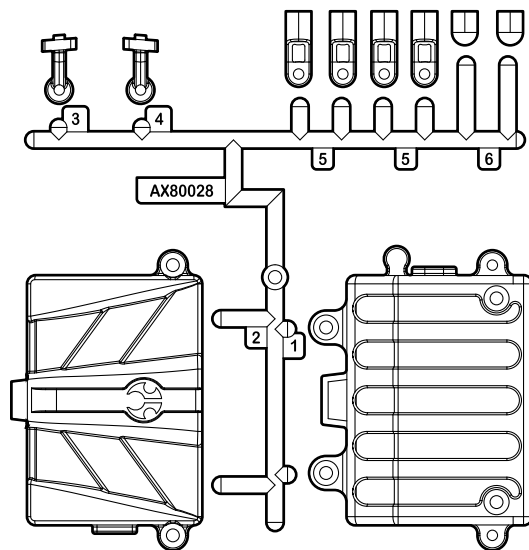


AX80028
SCX10 Radio Box Parts Tree **x1**

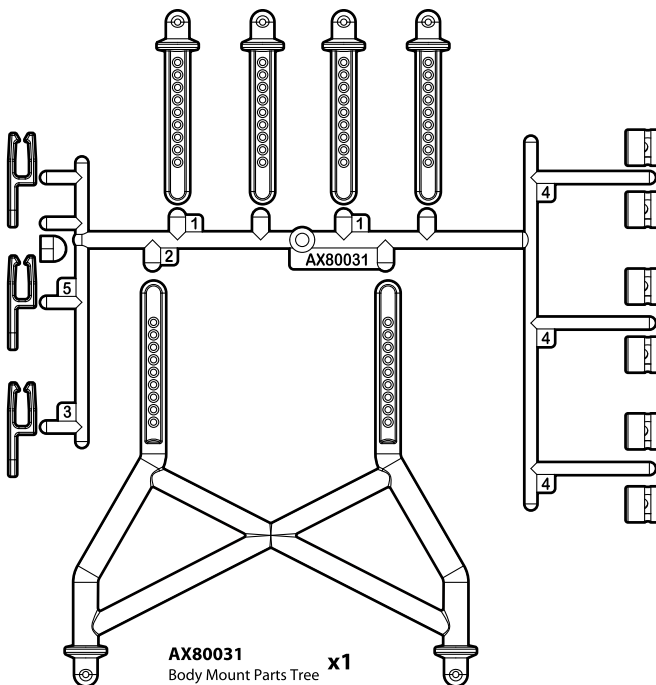


AX80031
Body Mount Parts Tree **x1**

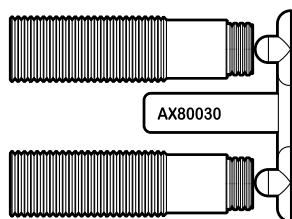


AX80030
61-90 Shock Body Set **x2**

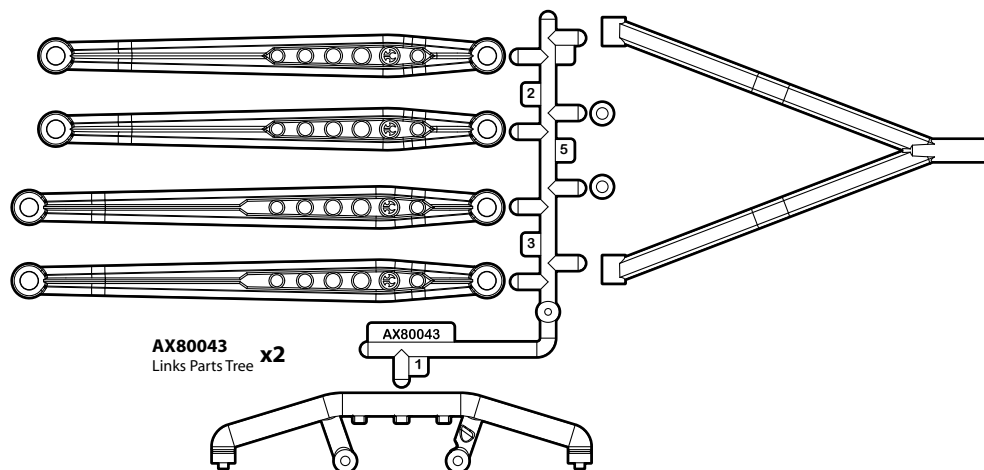


AX80043
Links Parts Tree **x2**

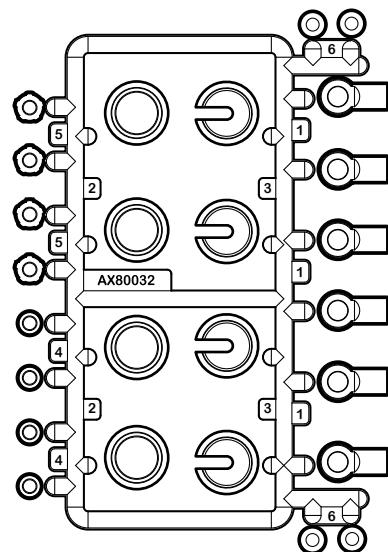

AX80032
Shock Parts **x1**

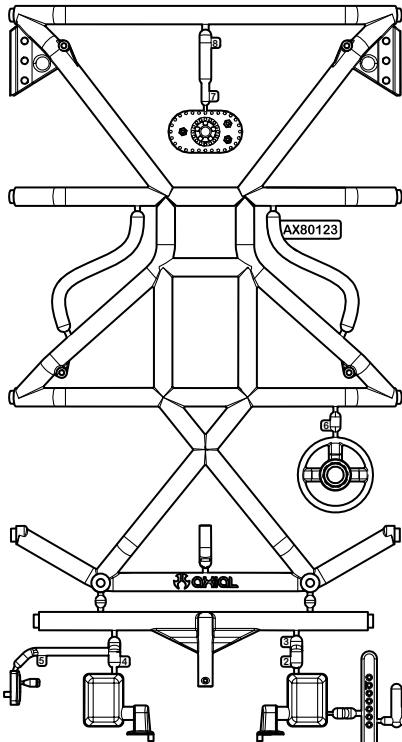


AX80123
Jeep Wrangler Cage Top and Accessories **x1**

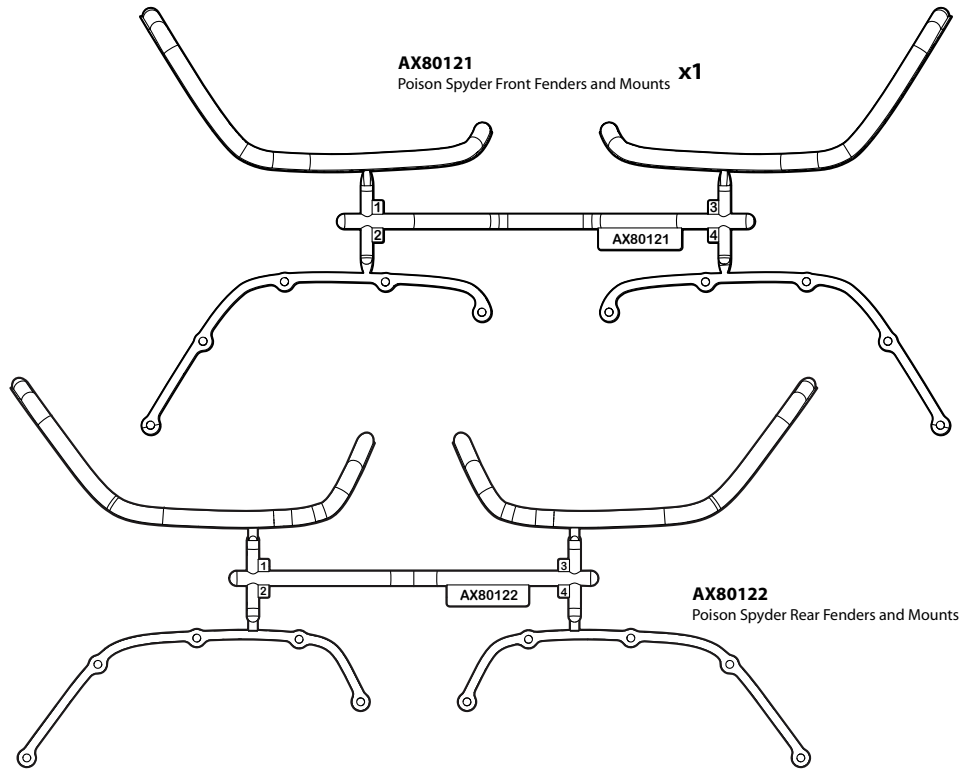


AX80121
Poison Spyder Front Fenders and Mounts **x1**


AX80122
Poison Spyder Rear Fenders and Mounts **x1**

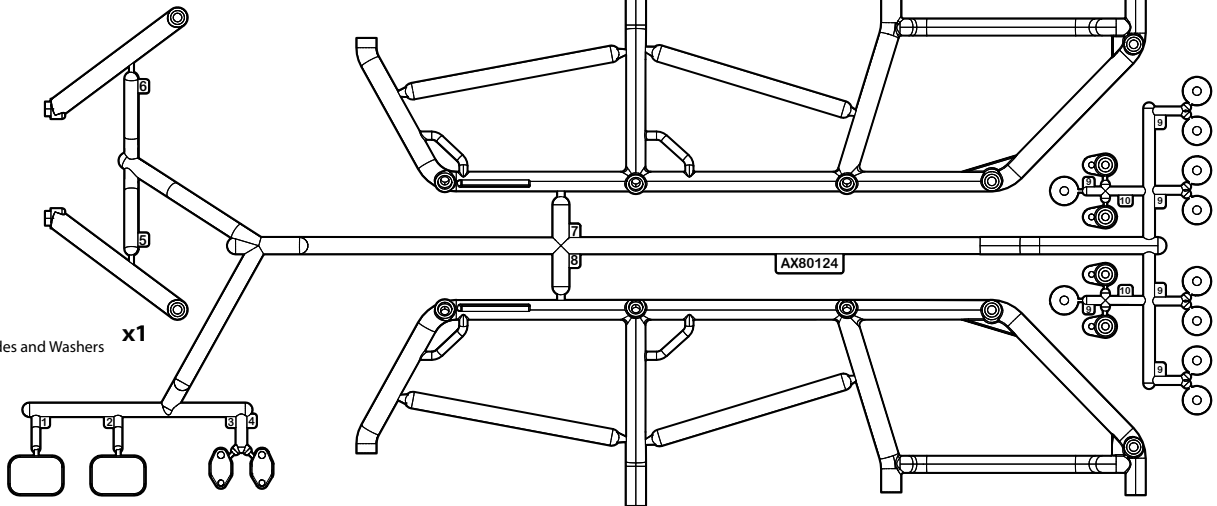


AX80124
Jeep Wrangler Cage Sides and Washers **x1**

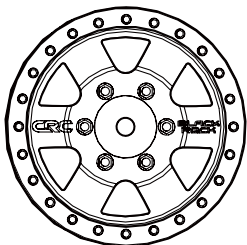


AX31094
1.9 Black Rock Currie Wheel -26mm wide **x5**

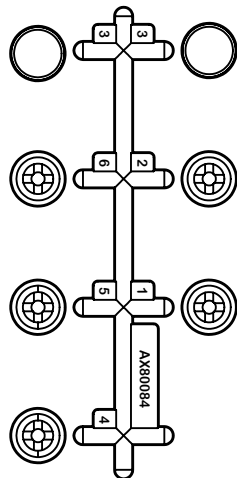


AX80084
UV Joint Driveshafts **x1**

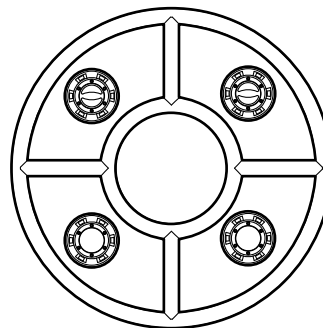


AX8087
Wheel Cap **x1**

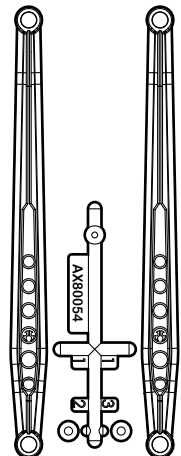


AX80054
SCX10 RTR Links Parts Tree (130mm) **x1**

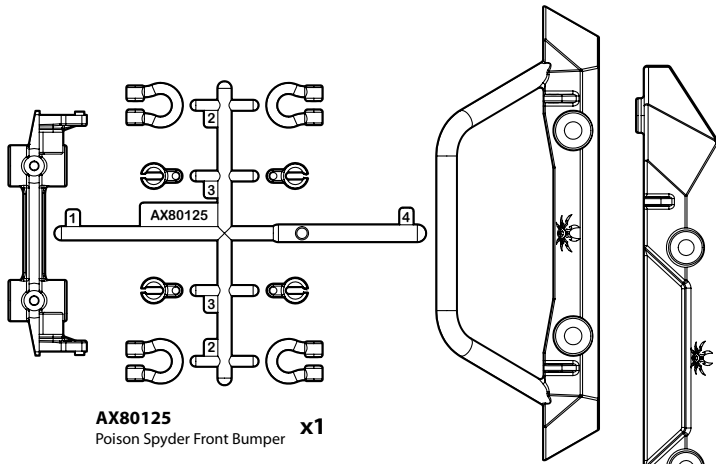


AX80125
Poison Spyder Front Bumper x1

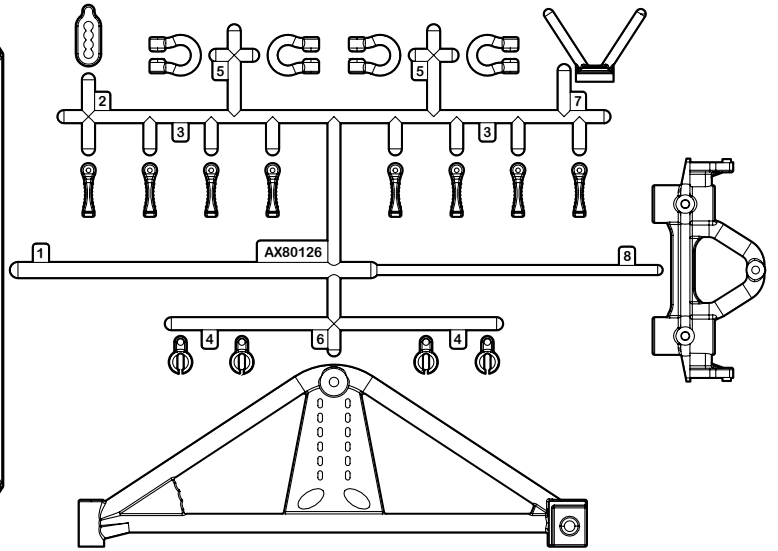


AX80126
Poison Spyder Rear Bumper and Spare Tire Carrier x1

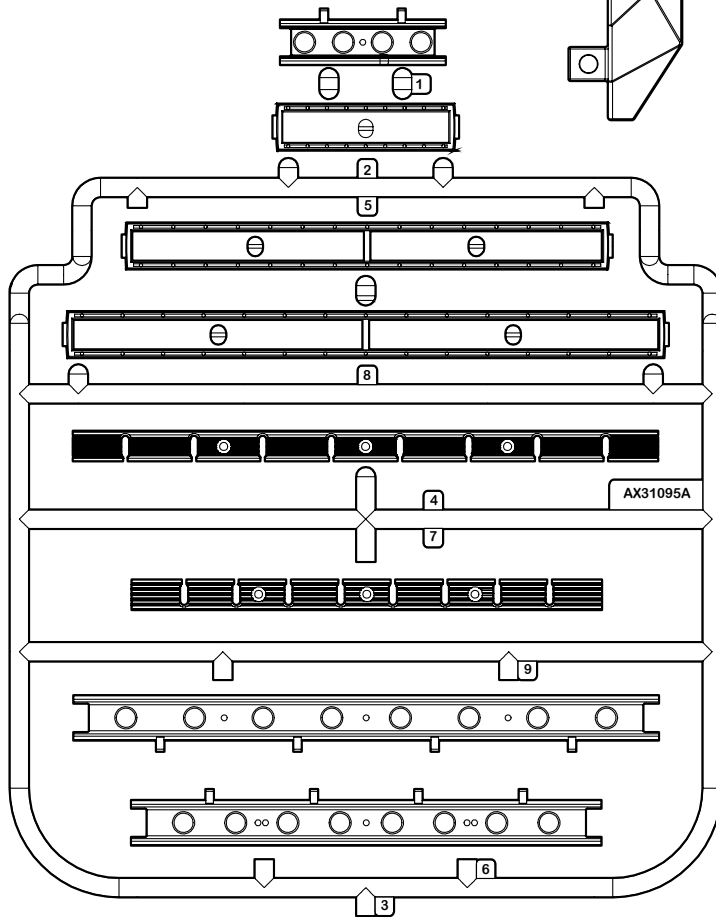


AX31152
Universal Rigid Light Bar Set x1

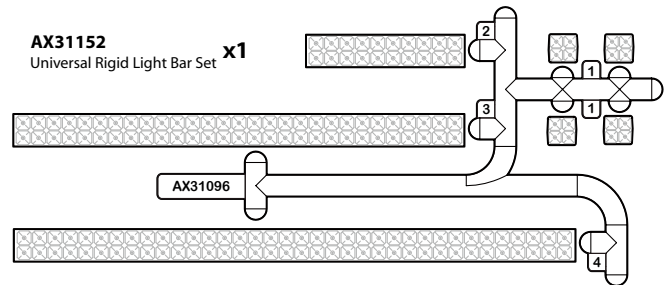

AX31152
Universal Rigid Light Bar Set x1

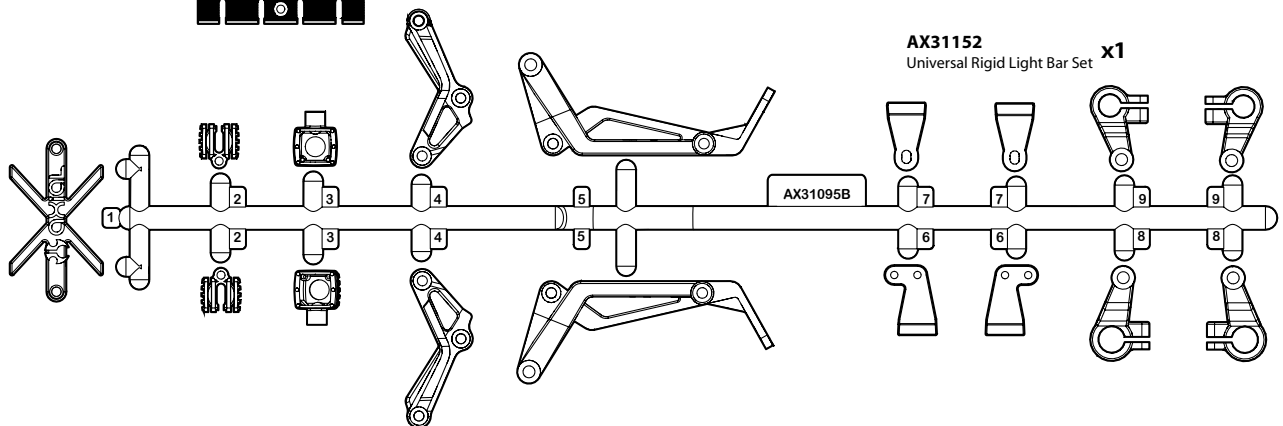

AX31152
Universal Rigid Light Bar Set x1

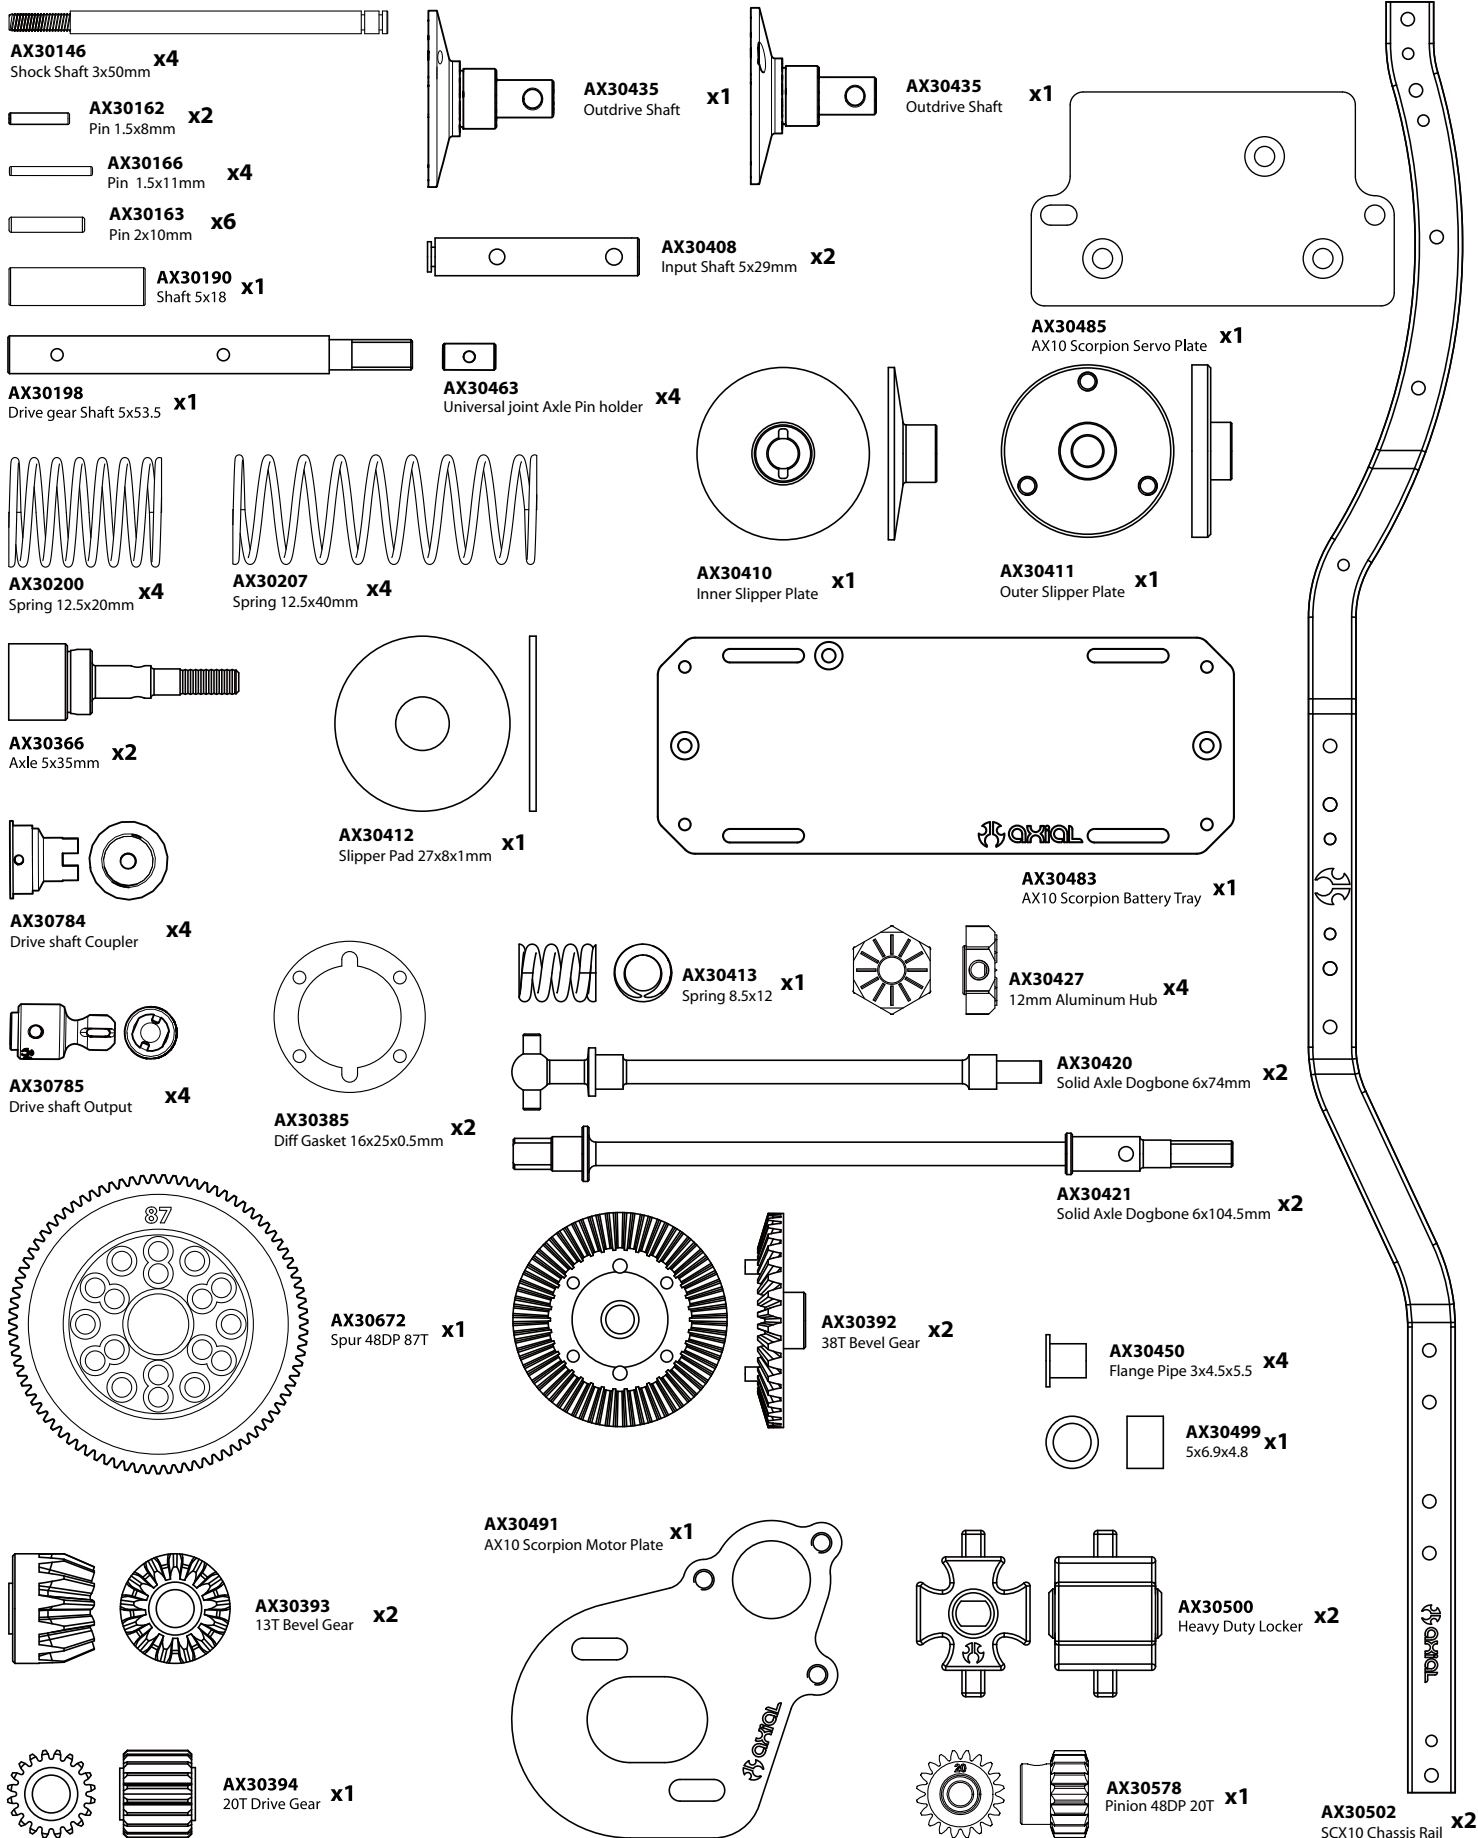

 **AXA013**
M2x6mm **x12**

 **AXA015**
M2x10mm **x8**

 **AXA083**
M3x6mm **x5**

 **AXA086**
M3x12mm **x4**

 **AXA087**
M3x16mm **x8**

 **AXA088**
M3x20mm **x1**

 **AXA089**
M3x25mm **x7**

 **AX1045**
M4 Nylon Lock Nut **x5**

 **AXA1053**
M3 Nylon Locking Hex Nut **x15**

 **AXA1059**
6mm Body Clip **x10**

 **AXA1179**
O-Ring 2.5x1.5mm **x8**

 **AXA1070**
Washer 3x6x0.5mm **x6**

 **AXA1071**
Washer 4x8x0.5mm **x1**


 **AXA1091**
Washer 5x10x0.5mm **x1**

 **AXA1163**
O-Ring 7x1mm **x4**


 **AXA1218**
Bearing 5x10x4mm **x4**

 **AXA1221**
Bearing 5x11x4mm **x10**

 **AXA1225**
Bearing 8x16x5mm **x2**

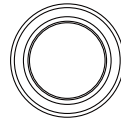 **AXA1230**
Bearing 10x15x4mm **x6**


 **AXA0109**
M3x10mm **x4**


 **AXA1290**
M3x4x14mm Step Screw **x2**

 **AXA1358**
Shock Damper 3x7x8 **x4**

 **AXA1392**
E2 e-clip **x8**

 **AXA1393**
E2.5 e-clip **x2**

 **AXA176**
M3x2.5x13mm Screw Shaft **x8**

 **AXA0175**
Screw Shaft M3x2.5x11mm **x4**

 **AXA180**
M3x3mm Set Screw **x5**

 **AXA113**
M3x6mm Hex Socket Button Head **x5**

 **AXA117**
M3x15mm Hex Socket Button Head **x1**

 **AXA119**
M3x20mm Hex Socket Button Head **x4**

 **AXA121**
M3x30mm Hex Socket Button Head **x1**

 **AXA144**
M3x8mm Hex Socket Flat Head **x4**

 **AXA0422**
M2.6x6mm Hex Socket Tapping Button Head **x5**

 **AXA0424**
M2.6x10mm Hex Socket Tapping Button Head **x24**

 **AXA0425**
M2.6x12mm Hex Socket Tapping Button Head **x2**

 **AXA433**
M3x6mm Hex Socket Tapping Button Head **x11**

 **AXA434**
M3x8mm Hex Socket Tapping Button Head **x10**

 **AXA435**
M3x10mm Hex Socket Tapping Button Head **x12**

 **AXA436**
M3x12mm Hex Socket Tapping Button Head **x1**

 **AXA0437**
M3x15mm Hex Socket Tapping Button Head **x12**

 **AXA438**
M3x18mm Hex Socket Tapping Button Head **x4**

 **AXA0439**
M3x20mm Hex Socket Tapping Button Head **x2**

 **AXA440**
M3x25mm Hex Socket Tapping Button Head **x2**

 **AXA0443**
M3x40mm Hex Socket Tapping Button Head **x1**


 **AXA0414**
M2.6x10mm Hex Socket Tapping Flat Head **x3**


 **AXA463**
M3x6mm Hex Socket Tapping Flat Head **x3**


 **AXA464**
M3x8mm Hex Socket Tapping Flat Head **x14**


 **AXA465**
M3x10mm Hex Socket Tapping Flat Head **x4**


 **AXA466**
M3x12mm Hex Socket Tapping Flat Head **x6**

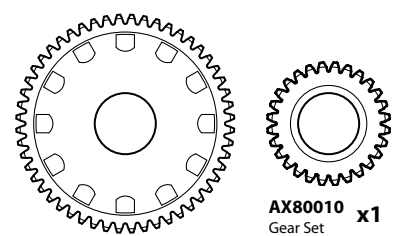 **AX80010**
Gear Set **x1**

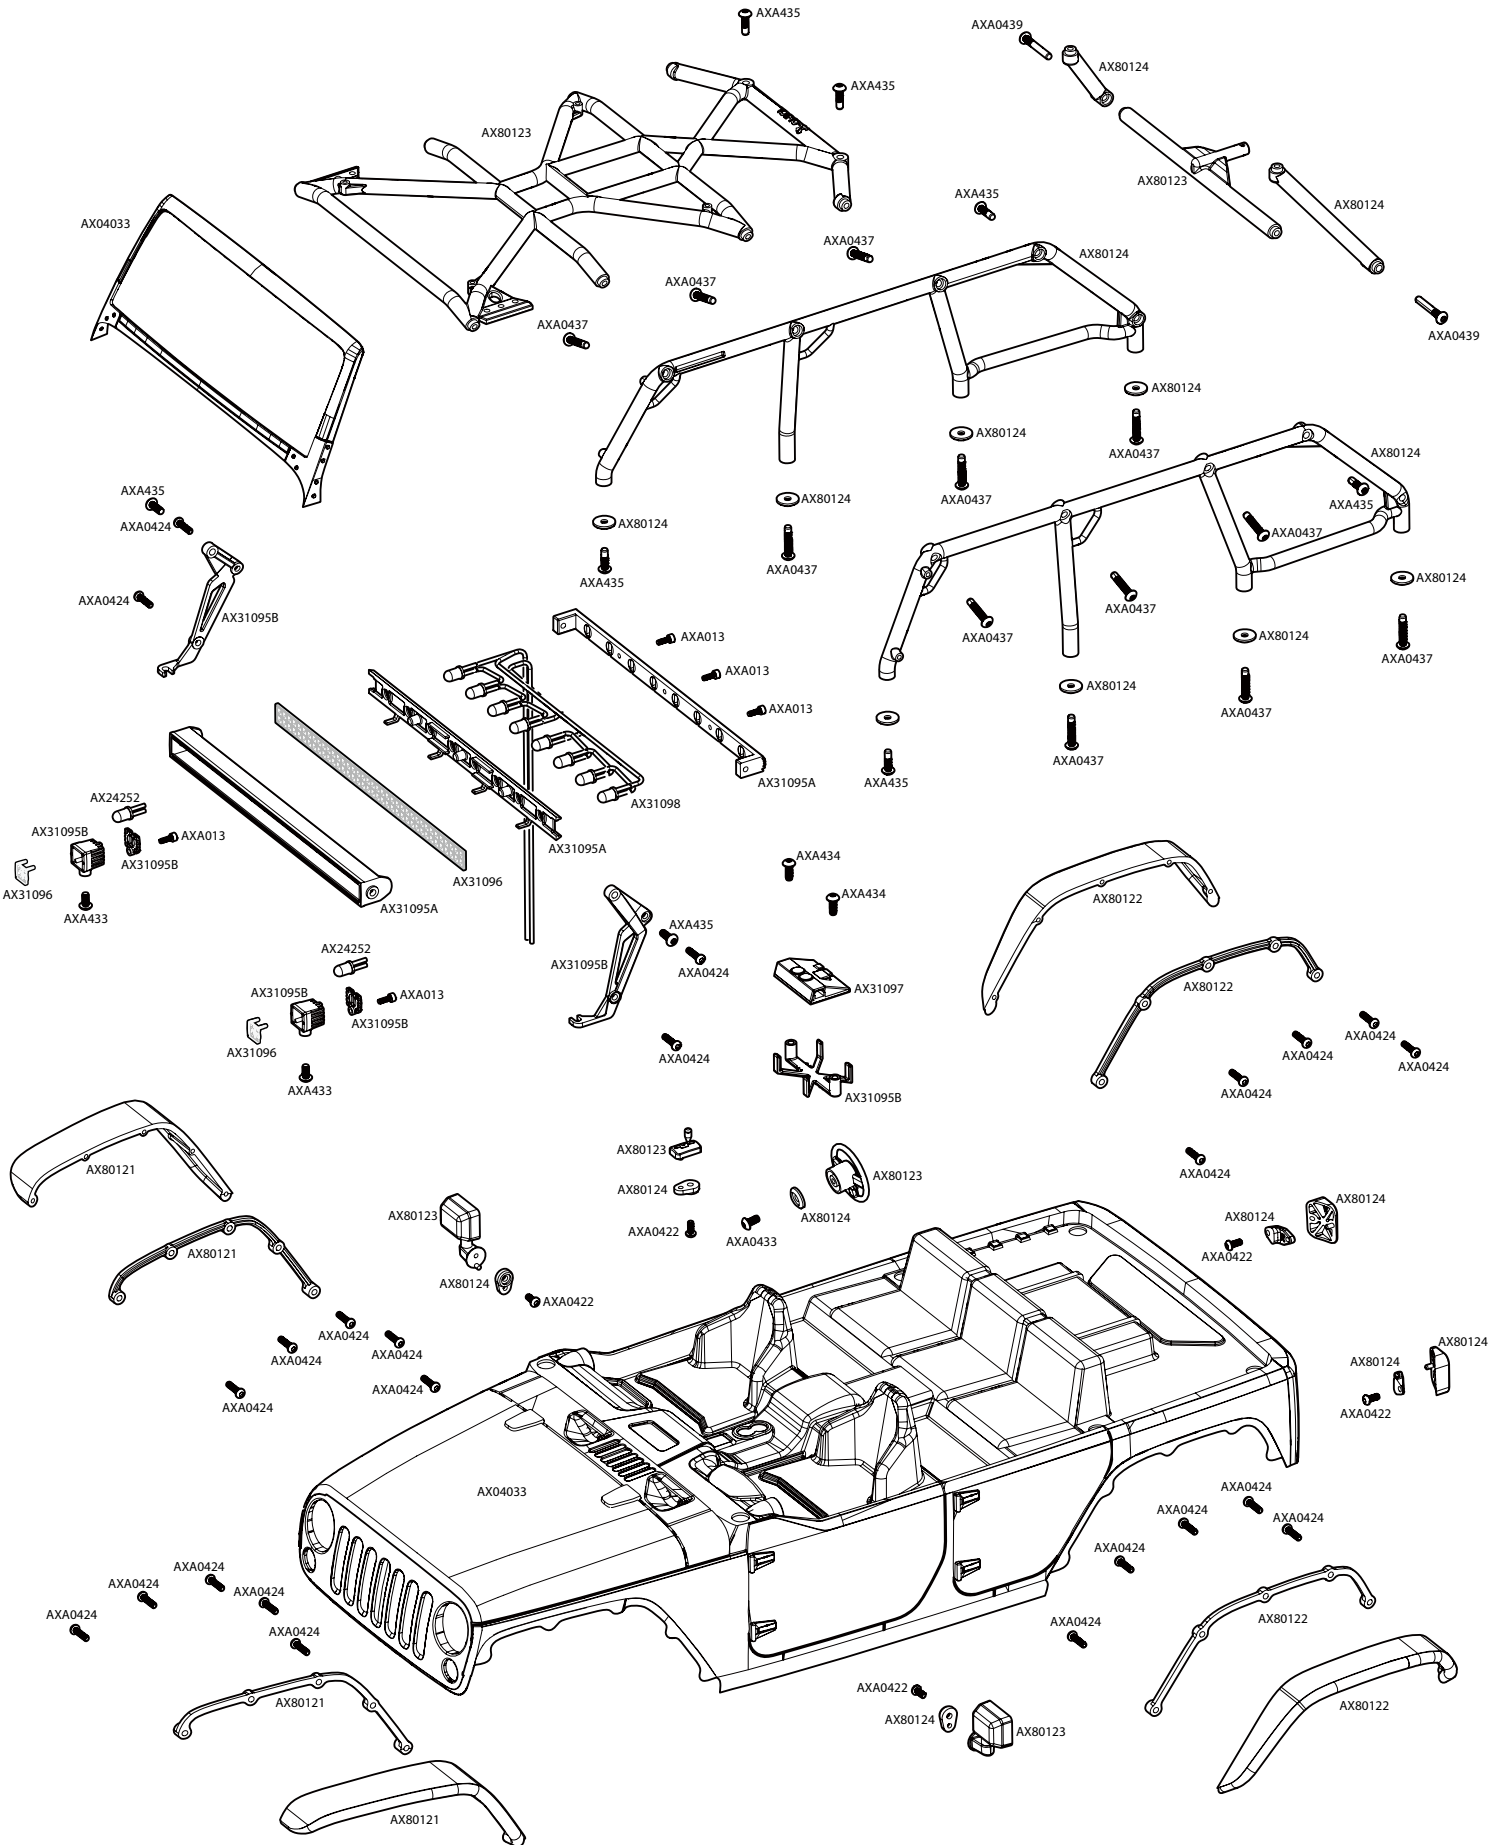

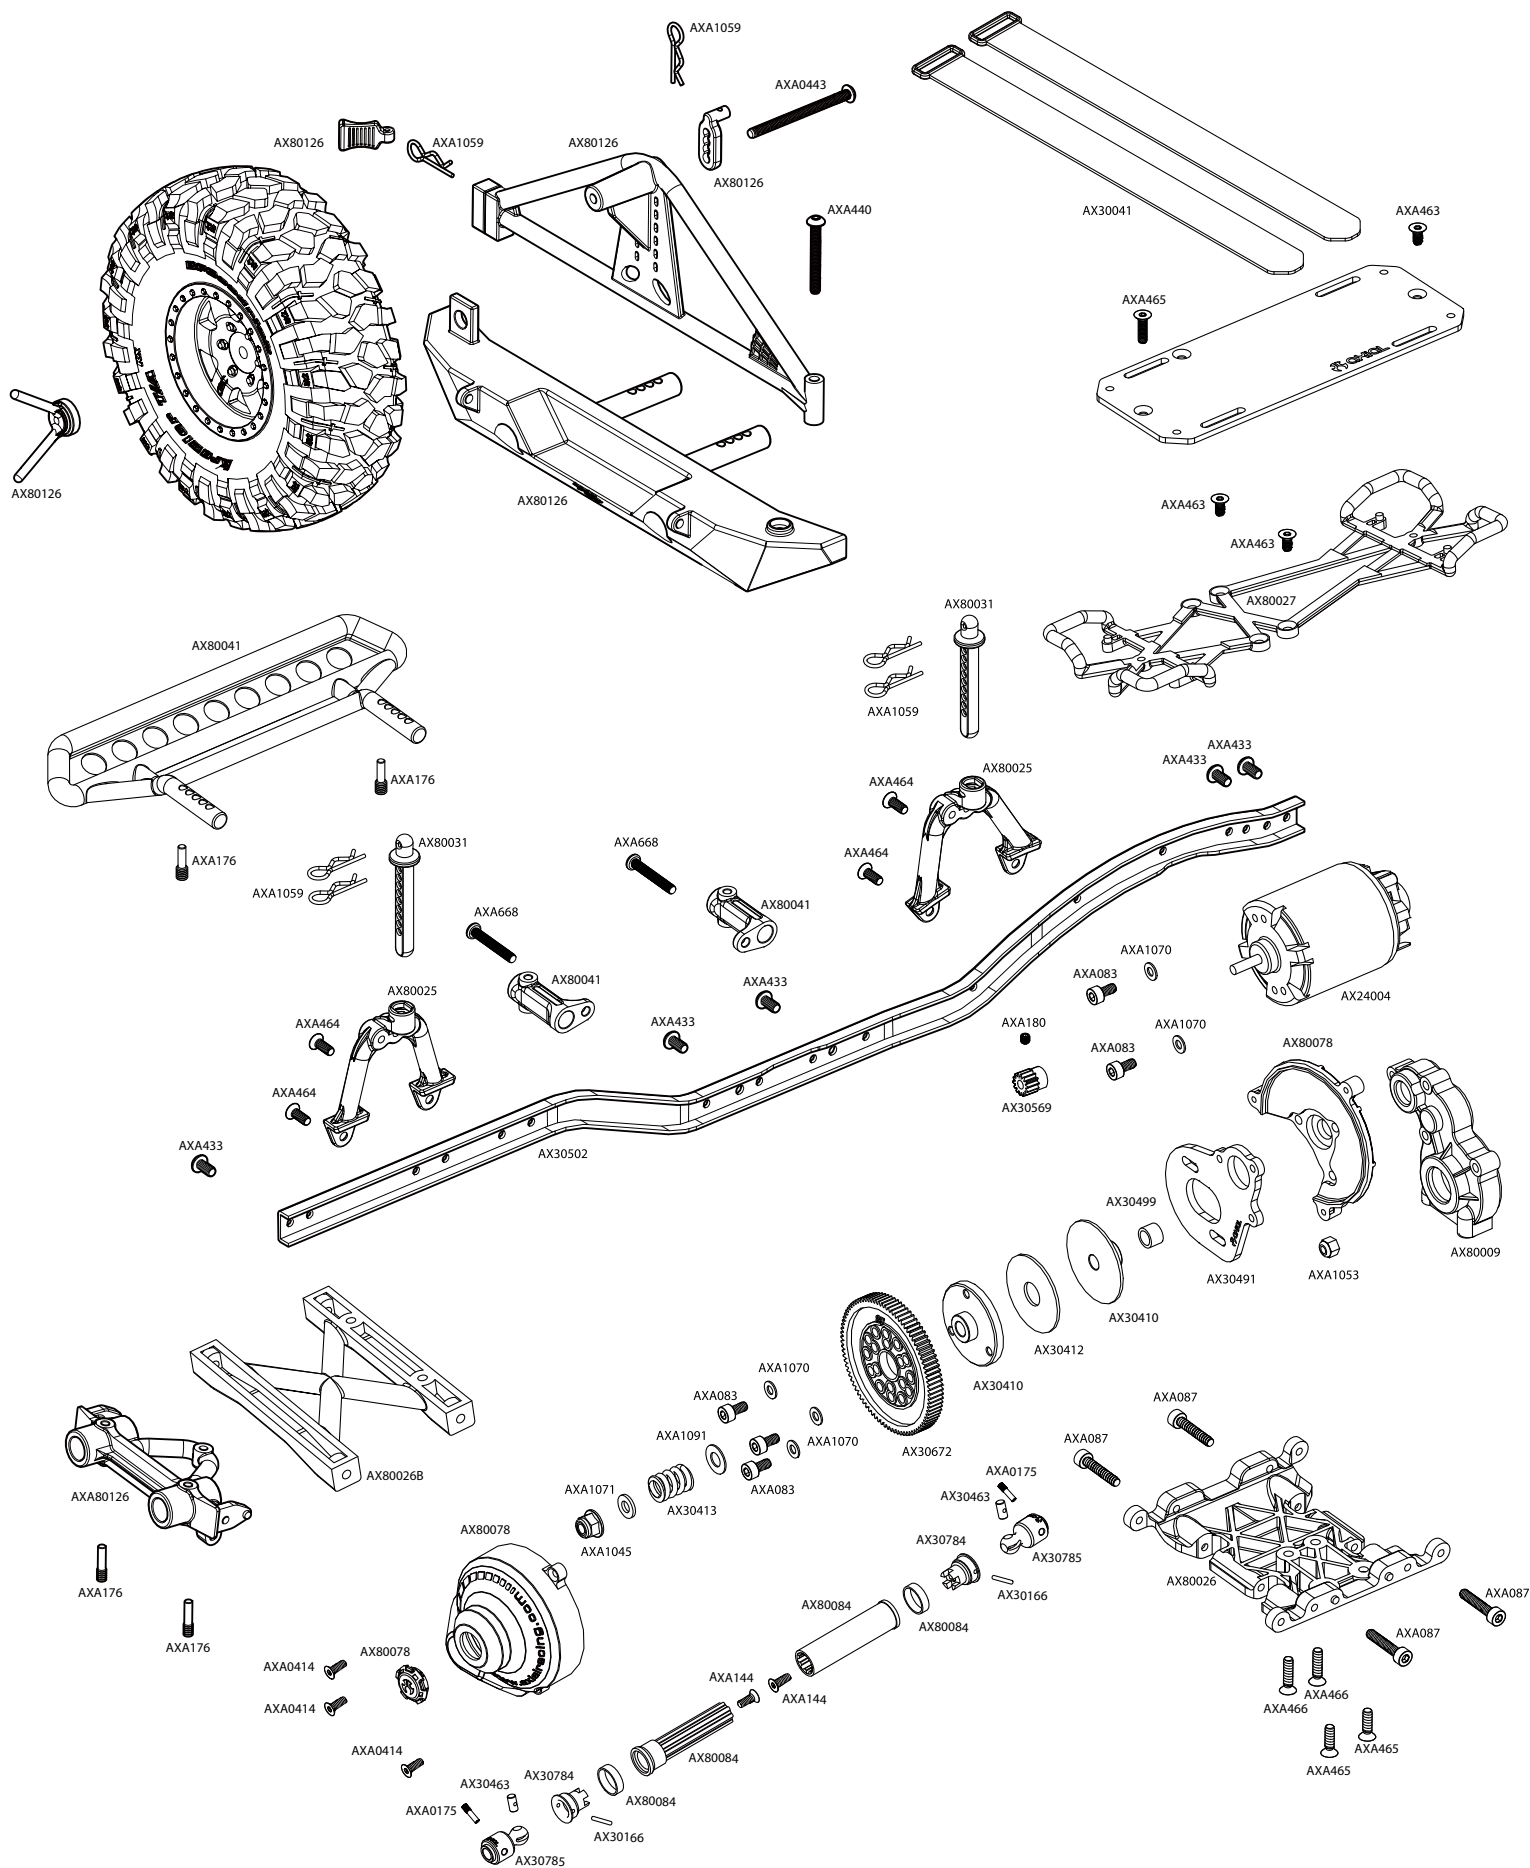

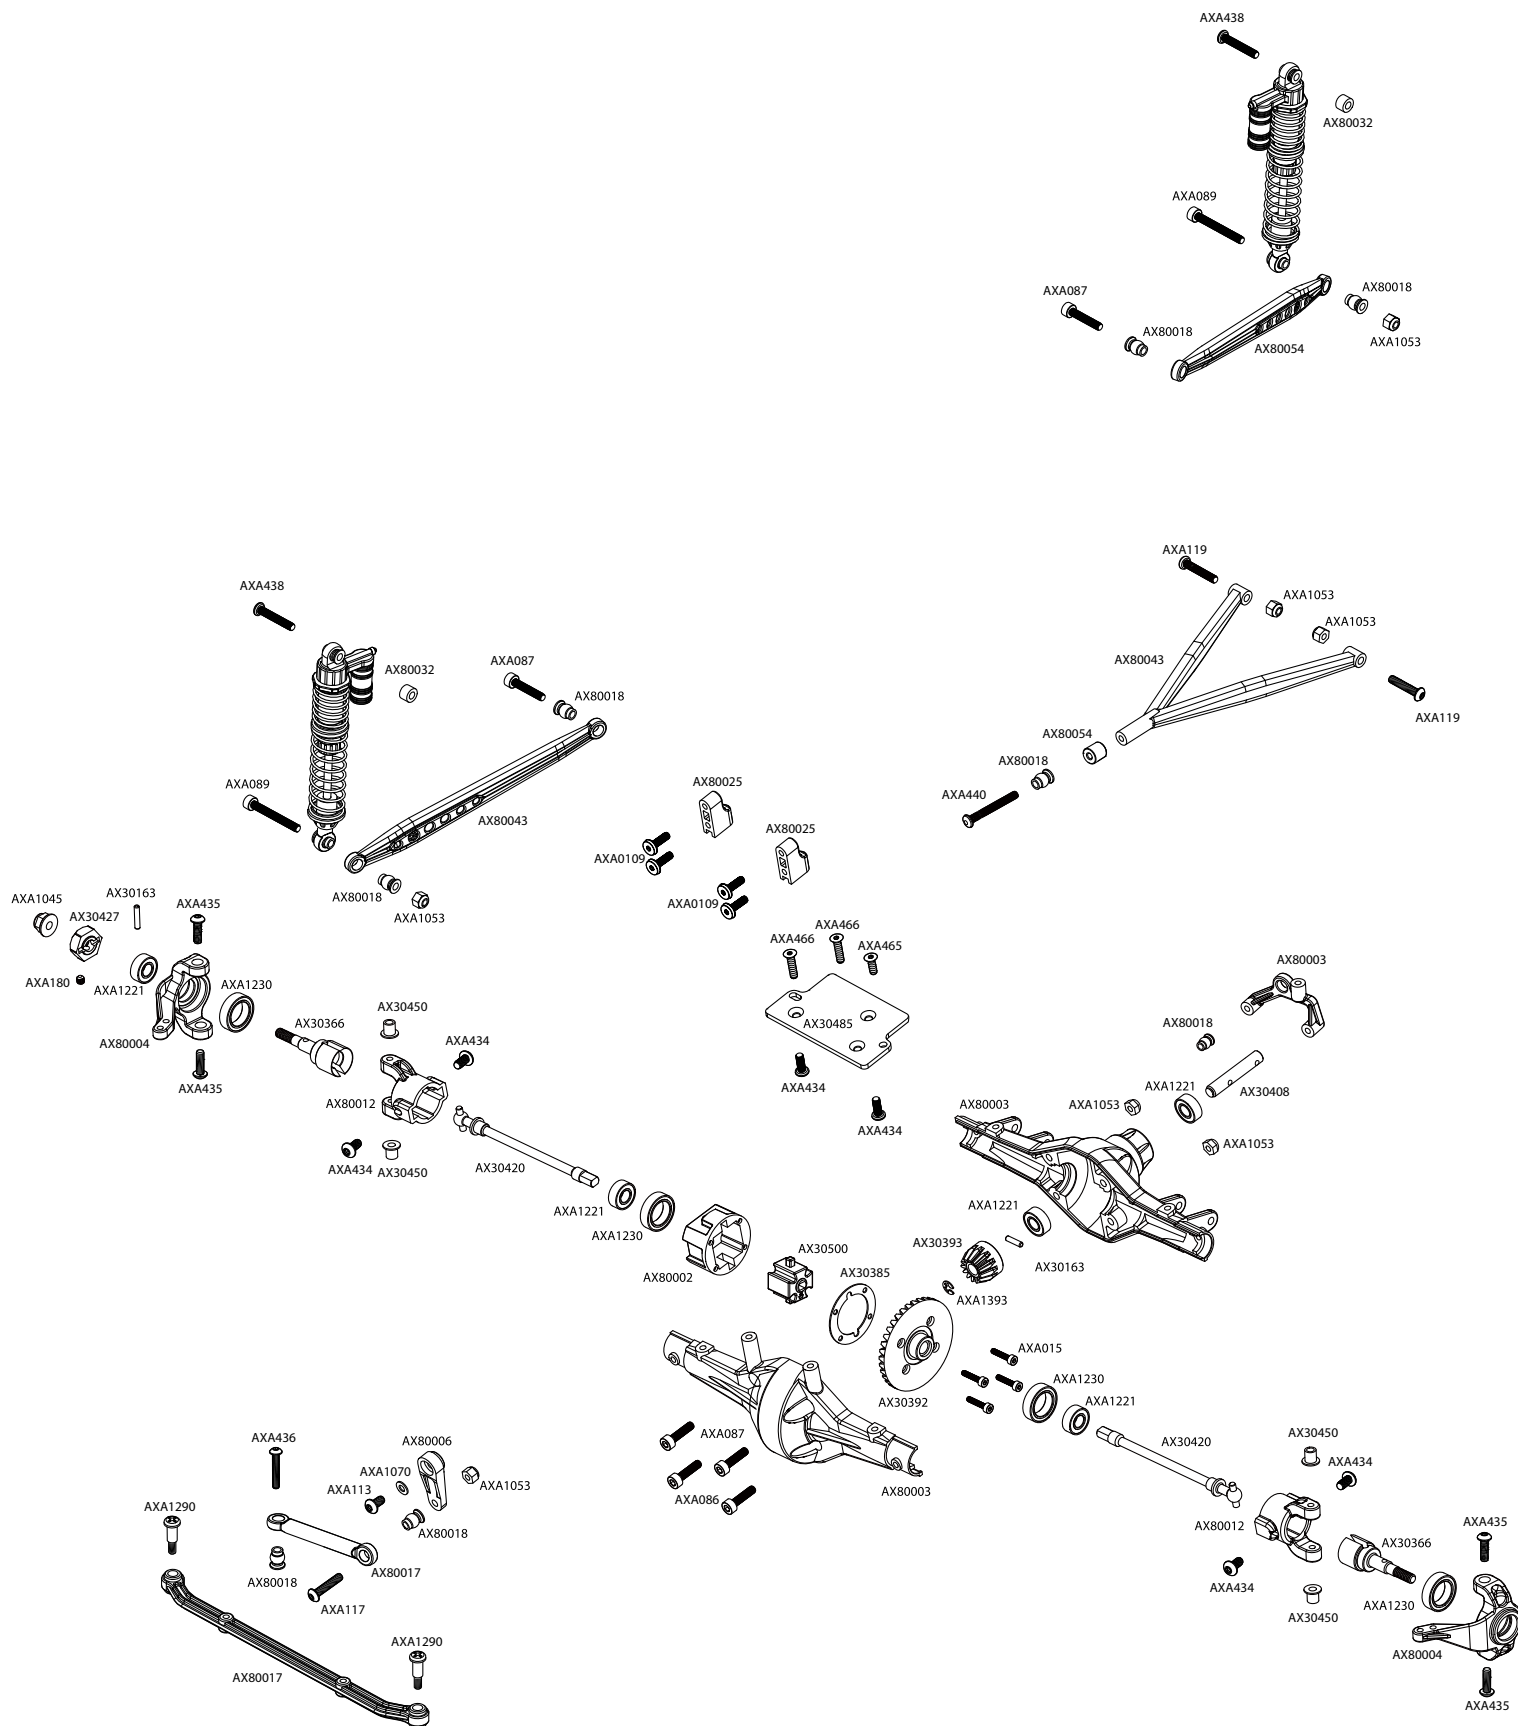

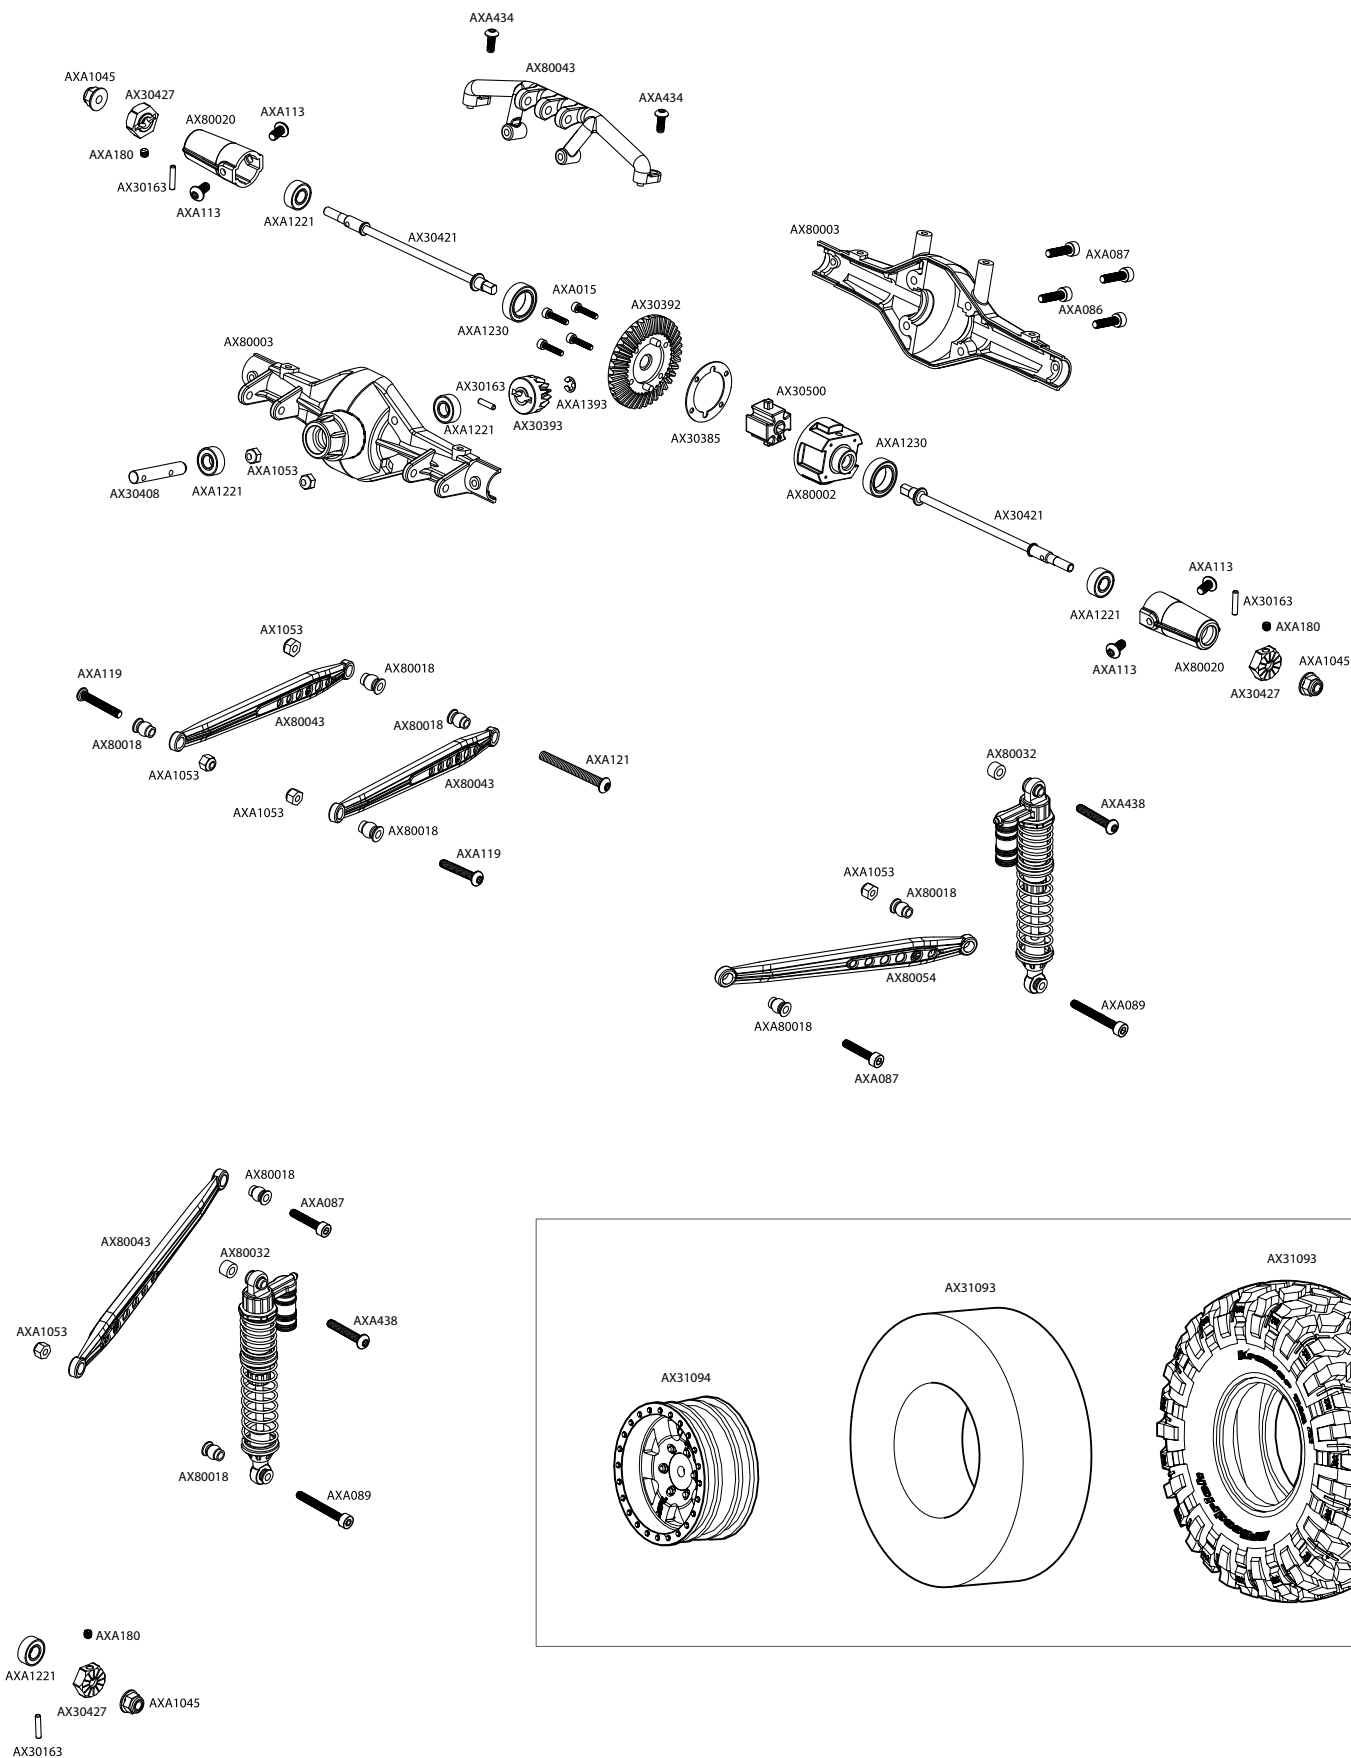

Parts List

Part #	Description	Part #	Description
AX04033	2012 Jeep Wrangler Unlimited Rubicon™ Body - .040" (Clear) - Body Only	AX8079	Axial Hub Cover Set - Black (4pcs)
AX24004	Axial 27T Electric Motor	AX90035	SCX10™ 2012 Jeep® Wrangler Unlimited C/R Edition 1/10th Scale Electric 4WD - RTR
AX24206	2.4GHz Radio System (2 Channel) (AX-3, AR-3)	AXA0109	M3x10mm Oversized Flat Hex Socket (Black) (10pcs)
AX24252	Axial Double LED Light String (White LED)	AXA0113	M3x6mm Hex Socket Button Head (Black) (10pcs)
AX24259	Axial AE-2 Forward/Reverse ESC w/ Drag Brake	AXA013	M2x6 mm Cap Head (Black) (10pcs)
AX30041	Velcro Strap 15x160mm	AXA015	M2x10mm Cap Head (Black) (10pcs)
AX30162	Pin 1.5x8mm (6pcs.)	AXA0175	Screw Shaft M3x2.5x11mm (10pcs)
AX30163	Pin 2.0x10mm (6pcs.)	AXA0414	M2.6x10mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX30166	Pin 1.5x11mm (6pcs)	AXA0422	M2.6x6mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30190	Shaft 5x18 (2pcs.)	AXA0424	M2.6x10mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30198	Slipper Drive Gear Shaft 5x53.5	AXA0425	M2.6x12mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30200	Spring 12.5x20mm 3.6 lbs/in - Super Soft (Red) - (2pcs)	AXA0437	M3x15mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30207	Spring 12.5x40mm 4.08 lbs/in - Medium (Green) - (2pcs)	AXA0439	M3x20mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30366	Axle 5x35mm (2pcs.)	AXA0443	M3x40mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30385	Diff Gasket 16x25x0.5mm (2pcs)	AXA083	M3x6mm Cap Head (Black) (10pcs)
AX30392	Bevel Gear Set (38/13)	AXA086	M3x12mm Cap Head (Black) (10 pcs)
AX30394	20T Drive Gear	AXA087	M3x16mm Cap Head (Black) (10pcs)
AX30408	Input Shaft 5x29mm (2pcs)	AXA088	M3x20mm Cap Head (Black) (10pcs)
AX30410	Inner Slipper Plate	AXA089	M3x25mm Cap Head (Black) (10pcs)
AX30411	Outer Slipper Plate	AXA1045	M4 Nylon Lock Nut (Black) (10pcs)
AX30412	Slipper pad 27x8x1mm	AXA1053	M3 Nylon Locking Hex Nut (Black) (10pcs)
AX30413	Slipper spring 8.5x12 165 lbs/in - Black (2pcs)	AXA1059	6mm Body clip (Black) (10pcs)
AX30420	Solid Axle Dogbone 6x74mm (2pcs)	AXA1070	Washer 3x6x0.5 (10pcs)
AX30421	Straight Axle 6x104.50mm (2pcs)	AXA1071	Washer 4x8x0.5mm (10pcs)
AX30427	Axial Narrow 12mm Aluminum Hub - Black (4pcs)	AXA1091	Washer 5x10x.5 (Black) (10pcs)
AX30435	Steel Outdrive Shaft Set (2pcs)	AXA1163	O-Ring 7x1mm (10pcs)
AX30450	Flange Pipe 3x4.5x5.5 (4pcs)	AXA117	M3x15mm Hex Socket Button Head (Black) (10pcs)
AX30463	WB8 Universal Joint Rebuild Kit (2pcs)	AXA1179	O-Ring 2.5x1.5mm (10pcs)
AX30483	AX10 Scorpion Radio Plate	AXA119	M3x20mm Hex Socket Button Head (Black) (10pcs)
AX30485	AX10 Scorpion Servo Plate	AXA121	M3x30mm Hex Socket Button Head (Black) (10pcs)
AX30491	AX10 RTR Motor Plate	AXA1218	Bearing 5x10x4mm (2pcs)
AX30499	Transmission Spacer 5x6.9x4.8mm - Grey (2pcs)	AXA1221	Bearing 5x11x4mm (2pcs)
AX30500	Heavy Duty Locker (2pcs)	AXA1225	Bearing 8x16x5mm (2pcs)
AX30502	SCX10 Chasis Rail Set (2pcs)	AXA1230	Bearing 10x15x4mm
AX30578	Pinion 48DP 20 T	AXA1290	Step Screw M3x4x14mm (6pcs)
AX30672	Spurs 48DP 87T	AXA1358	Shock Damper 3x7x8 (10pcs)
AX30784	WB8 Driveshaft Coupler Set	AXA1392	E2 e-clip (10pcs)
AX31093	1.9 BFGoodrich Krawler T/A - R35 Compound (2pcs)	AXA1393	E2.5 e-clip (10pcs)
AX31094	1.9 Black Rock CRC Wheels - Black (2pcs)	AXA144	M3x8mm Hex Socket Flat Head (Black) (10pcs)
AX31097	3 Port High Output LED Controller	AXA176	Screw Shaft M3x2.5x12mm (10pcs)
AX31098	8 LED Light String (White LED)	AXA180	M3x3mm Set Screw (Black) (10pcs)
AX31152	Universal Rigid Light Bar Set	AXA433	M3x6mm Hex Socket Tapping Button Head - Black (10pcs)
AX80002	Diff Case -Small	AXA434	M3x8mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80003	Solid Axle Set	AXA435	M3x10mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80004	Hub Set	AXA436	M3x12mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80006	Servo Set	AXA438	M3x18mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80009	Transmission Set	AXA440	M3x25mm Hex Socket Tapping Button Head (Black) (10pcs)
AX80010	Gear Set	AXA463	M3x6mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80012	C Hub Carrier Set	AXA464	M3x8mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80017	Steering Link Parts Tree	AXA465	M3x10mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80018	Hardware Parts Tree	AXA466	M3x12mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX80020	Plastic Rear Axle Lock-out (2pcs)		
AX80025	SCX10 Shock Hoops Parts Tree		
AX80026	SCX10 Frame Brace Set		
AX80027	SCX10 Battery Tray Holder		
AX80028	SCX10 Radio Box Parts Tree		
AX80029	Shock Cap Parts Tree		
AX80030	61-90 Schock Body Set		
AX80031	Body Mount Parts Tree		
AX80032	Shock Parts		
AX80041	1/10th Scale Rock Rails Set (2pcs)		
AX80043	SCX10 RTR Links Parts Tree		
AX80054	SCX10 130mm Lower Links Parts Tree		
AX80078	Transmission Spur Gear Cover		
AX80084	WB8 Driveshaft		
AX80121	SCX10 Poison Spyder JK Crusher Flares (Front)		
AX80122	SCX10 Poison Spyder JK Crusher Flares (Rear)		
AX80123	SCX10 Unlimited Roll Cage Top		
AX80124	SCX10 Unlimited Roll Cage Sides		
AX80125	SCX10 Poison Spyder JK Brawler Lite Front Bumper		
AX80126	SCX10 Poison Spyder JK RockBrawler Rear Bumper and Tire Carrier		

Option Parts

AX12016	1.9 Ripsaw Tires - R35 Compound (2pcs)
AX12019	1.9 Maxxis Trepador Tires - R35 Compound (2pcs)
AX24003	20T Electric Motor
AX24007	Axial 55T Electric Motor
AX24010	Brushless 2900KV Electric Motor
AX24251	Axial NVS - Night Visions System
AX24253	Axial Double LED Light String (Red LED)
AX24254	Axial Double LED Light String (Orange LED)
AX24255	Axial Single LED Light String (White LED)
AX24256	Axial 5 LED Light String (White LED)
AX24257	Simple LED Controller w/LED lights (4 white and 2 Red)
AX24258	4 LED Light String (White LED)
AX24260	AE-3 Vanguard ESC
AX30031	Antenna
AX30090	Axial 61-90mm Aluminum Shock Set - 7mm Piston (2pcs)
AX30103	Icon 61-90mm Aluminum Shock Set - 7mm piston (2pcs)
AX30114	Axial Hard Anodized Aluminum Shock Reservoir (2pcs)

Parts List

Part #	Description	Part #	Description
AX30115	Axial Hard Anodized Aluminum Pre-load collar (2pcs)	AX4025	Axial Trail Honcho Truck Body - .040" uncut (Clear) w/Molded Rear Cage
AX30117	Axial Hard Anodized Aluminum Shock Body 10x38mm (2pcs)	AX4025R	Axial Trail Honcho Truck Body - .040" uncut (Clear) - Body Only
AX30130	Icon Clear Anodized Aluminum Shock Body 10x38mm (2pcs)	AX04034	2012 Jeep Wrangler Unlimited Rubicon™ Roof - .040" (Clear)
AX30131	Icon Clear Anodized Aluminum Shock Reservoir (2pcs)	AX04035	2012 Jeep Wrangler Unlimited Rubicon™ Body - .040" (Clear) - Complete
AX30132	Machined Shock Piston 7mm - 1.5x3 (4pcs)	AX80037	Interior Details Parts Tree - Black
AX30201	Spring 12.5x20mm 4.32 lbs/in - Soft (White) - (2pcs)	AX80038	Exterior Detail Parts Tree - Black
AX30202	Spring 12.5x20mm 5.44 lbs/in - Medium (Green) - (2pcs)	AX80039A	1/10th Scale Front Plate Bumper Set
AX30203	Spring 12.5x20mm 6.53 lbs/in - Firm (Yellow) - (2pcs)	AX80039B	1/10th Scale Rear Plate Bumper Set
AX30204	Spring 12.5x20mm 7.95 lbs/in - Super Firm (Blue) - (2pcs)	AX80040	1/10th Scale Fender Flare Set (2pcs)
AX30205	Spring 12.5x40mm 2.7 lbs/in - Super Soft (Red) - (2pcs)	AX80047	Interior Details Parts Tree - Chrome
AX30206	Spring 12.5x40mm 3.6 lbs/in - Soft (White) - (2pcs)	AX80048	Exterior Detail Parts Tree - Chrome
AX30208	Spring 12.5x40mm 5.44 lbs/in - Firm (Yellow) - (2pcs)	AX80049	Axial LED Lens Set - Yellow/Clear (4pcs)
AX30209	Spring 12.5x40mm 6.81 lbs/in - Super Firm (Blue) - (2pcs)	AX80051	Dig Transmission Case
AX30395	Heavy Duty Bevel Gear Set - 38T/13T	AX80068	Dig Linkage Set
AX30401	Heavy Duty Bevel Gear Set - 36T/14T	AX80085	Universal Mount 5 Bucket Light Bar (Black)
AX30402	Heavy Duty Bevel Gear Set - 43T/13T	AX80086	Light Bar Lenses (Clear) (5pcs)
AX30414	AX10 Scorpion Slipper Clutch Set	AX80128	Wheel Hub Adapters (2pcs Narrow, 2pcs Wide)
AX30426	Steering Upgrade Kit	AX08138	1.9 Walker Evans Street Wheel - Black (2pcs)
AX30437	Dig Lockout Shaft	AX8080	Axial Hub Cover Set - Satin Chrome (4pcs)
AX30464	AX10 Scorpion Universal Set (2pcs)	AX8087	Axial 1.9 8 Hole Beadlocks - Black (2pcs)
AX30484	Transmission Spacer	AX8088	Axial 1.9 8 Hole Beadlocks - Satin Chrome (2pcs)
AX30487	AX10 Locked Transmission Set	AX8122	Axial 1.9 Beadlock Ring - Grey (2pcs)
AX30488	AX10 Locked Axle Set	AX8127	Axial 1.9 Rock Beadlock Ring - Grey (2pcs)
AX30489	Transmission Spacer 5x6.9x4.8mm	AXA1046	M4 Serrated Nylon Lock Nut (Blue) (4pcs)
AX30494	Aluminum Rear Axle Lockout (2pcs)	AXA1076	Cap Head Washer M3x10mm (4pcs)
AX30495	Aluminum C Hub Carrier - Black (2pcs)	AXA1101	Cone Washer 3x6.9x2mm (6pcs)
AX30496	Aluminum Knuckle - Black (2pcs)	AXA1104	Cone Washer 3x6.9x2mm - Orange (6pcs)
AX30498	Transmission Spacer - Grey	AXA1105	Cone Washer 3x6.9x2mm - Grey (6pcs)
AX30516	Threaded Aluminum Pipe 6x106mm - Grey (2 pcs.)	AXA1331	Flanged Ball 3x5.8x7mm (6pcs)
AX30517	Threaded Aluminum Pipe 6x33mm - Grey (2pcs.)	AXA1412	0.5x6mm Spacer - Grey (6pcs)
AX30518	Threaded Aluminum Pipe 6x98mm - Grey (2pcs.)	AXA1413	1x6mm Spacer - Grey (6pcs)
AX30547	1.9 Internal Wheel Weight Ring 43g/1.5oz (2pcs)	AXA1414	2x6mm Spacer - Grey (6pcs)
AX30548	1.9 Internal Wheel Weight Insert 9g/0.33oz (4pcs) (for use with AX30547)	AXA1415	3x6mm Spacer - Grey (6pcs)
AX30550	SCX10 TR Links Set - 12.3" (313mm) WB	AXA1416	4x6mm Spacer - Grey (6pcs)
AX30569	Pinion 48P 14T - Steel	AXA1417	5x6mm Spacer - Grey (6pcs)
AX30571	Pinion 48P 13T - Steel	AXA1418	6x6mm Spacer - Grey (6pcs)
AX30572	Pinion 48DP 14T	AXA1419	7x10mm Post - Grey (2pcs)
AX30573	Pinion 48P 15T - Steel	AXA1420	7x15mm Post - Grey (2pcs)
AX30665	Spur 48DP 80T	AXA1421	7x20mm Post - Grey (2pcs)
AX30708	AX10 Locked Transmission - Complete Metal Gear Set - Steel (3pcs)	AXA1422	7x25mm Post - Grey (2pcs)
AX30709	Universal 5 Bucket Light Bar Set	AXA1423	7x30mm Post - Grey (2pcs)
AX30786	WB8 Driveshaft Retainer Ring (Aluminum) (2pcs)	AXA1424	7x35mm Post - Grey (2pcs)
AX30793	Dig Component Set	AXA1425	7x40mm Post - Grey (2pcs)
AX30794	WB8 Driveshaft Set (2pcs)	AXA1426	7x45mm Post - Grey (2pcs)
AX30834	Aluminum Servo Horn 23T	AXA1427	7x50mm Post - Grey (2pcs)
AX30835	Aluminum Servo Horn 24T	AXA1428	7x55mm Post - Grey (2pcs)
AX30836	Aluminum Servo Horn 25T	AXA1429	7x60mm Post - Grey (2pcs)
AX30860	Machined Motor Plate (Hard Anodized)	AXA1430	7x65mm Post - Grey (2pcs)
AX4010	Axial Dingo Truck Body - .040" uncut (Clear)	AXA1431	7x70mm Post - Grey (2pcs)
AX4010R	Axial Dingo Truck Body - .040" uncut (Clear) - Body Only		

NOTES

DON'T SETTLE FOR ***NORMAL BEHAVIOR***

©2013 Axial R/C, Inc. A subsidiary of Hobbico, Inc. All Rights Reserved.



READY TO RUN

AX10™ DEADBOLT™ 1/10th SCALE
ELECTRIC 4WD #AX90033

OFFICIALLY LICENSED TECHNICAL PARTNERS:

MAXXIS

RaceLine
wheels

ICON
VEHICLE DYNAMICS

DANA
GO

 **axial**®

www.axialracing.com

SCX10

THE OFFICIAL TRUCK OF THE R.E.C.O.N. G6 CHALLENGE



AWCC 2011



SCX10™ FEATURES:

- > SCALE LOOKS WITH METAL TO MATCH!!!
- > TRUE STEEL C-CHANNEL FRAME
- > SOLID AXLE DESIGN WITH HARDENED STEEL INNER AXLES FRONT AND BACK
- > TRUE RING AND PINION MECHANICAL DIFFERENTIALS
- > COIL OVER SHOCKS
- > STRONG 4X4 TRANSMISSION / TRANSFER CASE ALL-IN-ONE
- > FULL METAL BEARINGS IN AXLES AND TRANSMISSION - RUBBER SEALED FOR MAXIMUM PROTECTION

If you are looking for adventure, the RECON G6 Challenge™ is where it's at. RECON G6 Challenge™ events deliver excitement and push boundaries; always bringing the elements of what a real adventure should deliver - the unknown!

The coolest thing about participating in the G6 Challenge™ is that it is not about the podium, it's all about the finish. It's about the massive amount of drive time and persevering to survive the unknown-uncatched; and then sharing stories at the end of the day - "How in the heck did you clear TM-24 on the 100-course?" "Did you see that Bender-6X walk-it?!" "Did you get passed by the Swanson Swagger!?"

For adventure G6'ers, the rougher and less traveled, the better! It is the adventure of a lifetime for man and scale machine against the elements. The G6 is about battling the course with your comrades, work as an individual or help your fellow G6'ers to overcome the obstacles; survival is the name of the game!

In an adventure, chasing the unknown requires confidence. Confidence = reliability = SCX10™. The Axial SCX10™ - the official truck of the RECON G6 Challenge™!

Visit our blog and start the adventure!



THE SCX10™ MODEL RANGE:



AX90021
DINGO™
KIT (UNASSEMBLED)



AX90022
TRAIL HONCHO™
RTR (READY-TO-RUN)



AX90027
JEEP WRANGLER
UNLIMITED RUBICON
KIT (UNASSEMBLED)



AX90028
JEEP WRANGLER
UNLIMITED RUBICON
RTR (READY-TO-RUN)

© 2013 Axial R/C Inc. A subsidiary of Hobbico, Inc.
Jeep and the Jeep grille are registered trademarks of Chrysler Group LLC and are used under license. ©2013 Chrysler Group LLC.



www.axialracing.com

OFFICIALLY LICENSED TECHNICAL PARTNERS:



EXPLORE

facebook.com/axialinc | twitter.com/axialrc | youtube.com/axialvideos | flickr.com/axialrc



8 GOODYEAR
SUITE 125
IRVINE, CA 92618

AX90035-1001

Jeep and related logos, vehicle model names and trade dresses are trademarks of Chrysler Group LLC and used under license by Axial R/C Inc. © Chrysler Group LLC 2014.

BFGoodrich® Tires and KRAWLER™ T/A® Trademarks are used under License from Michelin

www.axialracing.com