


SKYRC

B6neo 2
Smart Charger

v. 12

Instruction Manual

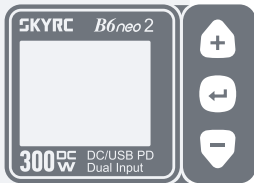

Contents

Introduction	03
Getting to know B8neo 2	04
Specifications	05
Warning	08
Standard Battery Parameters	09
Program Flow Chart	10
Power and Battery Connection	11
Battery Operations Matrix	13
Lithium Battery Program (LiPo/LiFe/Li-ion/LiHV)	14
NiMH/NiCd Battery Program	16
Pb Lead-Acid Battery Program	18
Reverse Charge	20
Voltage Calibration	21
Battery Voltage Meter	22
Battery Voltage Meter	23
Battery Resistance Meter	24
Firmware Upgrade	26
Errors Explained	27
System Settings	28
In The Box	29
Conformity Declaration	30
Warranty and Service	31

Introduction

Congratulations on choosing the SkyRC B6neo 2 Smart Charger!

B6neo 2 boasts a stylish, ultra-compact design. While it's simple to use, some basic knowledge is required to operate it effectively. These operating instructions are designed to help you quickly familiarize yourself with its features. We hope the B6neo 2 will provide you with many years of enjoyment and success.

The B6neo 2 is a DC smart charger with a maximum output of 300W, capable of charging a variety of battery types (LiPo, LiFe, Li-ion, LiHV, NiMH, NiCd, Pb) and functioning as a power supply. This makes it a valuable tool for hobbyists who need to power DC equipment. Its unique feature of measuring battery voltage without powering on the device makes voltage checks hassle-free.

Please BE SURE to read these INSTRUCTIONS, WARNINGS, and SAFETY NOTES prior to using for the first time.

Getting to know B6neo 2

1 LCD Display

2 +/Up Button

Increase the value or scroll through the menus/options.

3 Enter Button

Confirm or terminate the current program, enter Charge Settings, and perform other actions.

4 -/Down Button


Decrease the value or scroll through the menus/options.

5 Balance Port

6 Main Port (XT60 Charge/Discharge Port)

7 USB-C Port

8 XT60 DC Input

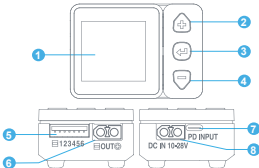

Specifications

Input Voltage	DC	10-28V
	PD3.0/QC	12-20V
Input Current	DC	16A(±2A)
	PD	5A (±1A)
Max. Output Power	DC	300W(±10%)
	PD	80W(±10%)
Working Mode	LiPo/LiFe/Li-ion/LiHV	Balance CHG, Charge, Storage, Discharge
	NiMH/NiCd	Charge, Re-Peak, C_D Cycle, D_C Cycle, Discharge
	Pb	Normal, AGM Charge, Cold Charge, Discharge
Battery Type/Cells	LiPo/LiFe/Li-ion/LiHV	1S-6S
	NiMH/NiCd	1S-15S
	Pb	3S/6S
Charge Current	LiPo/LiFe/Li-ion/LiHV	0.2A~0.5A (±0.1A)
	NiMH/NiCd	
	Pb	0.6A~15A(±10%)

Specifications

Discharge	Current	0.1A~0.5A ($\pm 0.1A$) 0.6A~2A($\pm 15\%$)
	Power	Max. 24W($\pm 10\%$)based on 6S(4.2V/cell)
DC Power Supply	Voltage	5V~27V($\pm 10\%$)
	Current	1A~15A($\pm 10\%$)
Balance Current	LiPo/LiFe/Li-ion/LiHV	Max. 550mAh
Working Environment	Temperature	0°C/32°F ~ 40°C/104°F
	Humidity	5%~75%
Storage Environment	Temperature	-10°C/14°F ~ 70°C/158°F
	Humidity	-5%~75%
Size		70*50*31mm
Weight		84g

Warning

Béneo 2 is not intended for use by individuals with reduced physical, sensory, or cognitive abilities, or by those lacking experience and knowledge with batteries, unless under the supervision or guidance of a responsible person.

Failure to use this product properly and follow the warnings below may result in malfunction, electrical issues, overheating, fire, and could lead to injury or property damage.

-  Never leave charging batteries unattended during use.
-  Never charge batteries overnight.
-  Never attempt to charge dead, damaged, or wet battery packs.
-  Never attempt to charge a battery pack containing different types of batteries.
-  Never charge batteries in extremely hot or cold places or place in direct sunlight.
-  Never charge a battery if the cable has been pinched or shorted.
-  Never connect the charger if the power cord has been pinched or shorted.
-  Never attempt to dismantle the charger or use a damaged charger.
-  Never attach your charger to both a PD and a DC power source at the same time.
-  Always use the charger with the correct charging and discharging program.
-  Always use only rechargeable batteries designed for use with this type of charger.
-  Never use the charger on car seats, carpets, or similar surfaces.
-  Always operate the charger away from flammable and explosive materials.

SkyRC Technology Co., Ltd. accepts no liability in such cases.




Standard Battery Parameters

	LiPo	Li-Ion	LiFe	LiHV	NIMH	NiCd	Pb
Nominal Voltage	3.7V/cell	3.6V/cell	3.3V/cell	3.8V/cell	1.2V/cell	1.2V/cell	2.0V/cell
Charge Voltage	4.15V~ 4.25V/cell	4.05V~ 4.25V/cell	3.58V~ 3.70V/cell	4.25V~ 4.50V/cell	N/A	N/A	2.30V~ 2.75V/cell
Storage Voltage	3.75V~ 3.90V/cell	3.70V~ 3.85V/cell	3.25V~ 3.40V/cell	3.85V~ 3.95V/cell	N/A	N/A	N/A
Allowable fast charge current	≤1C	≤1C	≤1C	≤1C	≤1C	≤1C	≤0.4C
Discharge Voltage	3.0~ 3.4V/cell	2.9~ 3.3V/cell	2.6~ 3.0V/cell	3.1~ 3.5V/cell	0.6~ 1.0V/cell	0.6~ 1.0V/cell	1.8V~ 2.0V/cell

Select the correct operating procedure based on the battery parameters.

Incorrect settings could lead to battery damage, fire, or even explosion.


Program Flow Chart

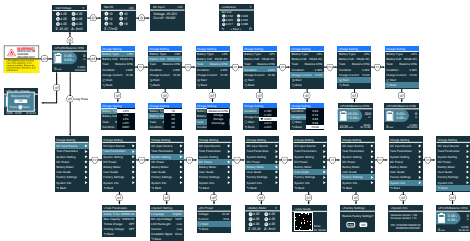

Power and Battery Connection

1. Connecting to a Power Source

The SkyRC B6neo 2 supports two DC input methods with the following input voltages:

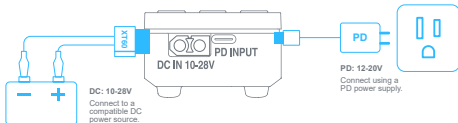

2. Connecting the Battery



WARNING!

To avoid short circuits, always power the charger first via the DC or PD port on the left, then connect the battery to the Charge Port on the right. When disconnecting, reverse the sequence.

Power and Battery Connection

Lithium Battery Connection with Balance Adapter

- For safety reasons, it is highly recommended to charge Lithium batteries (LiPo, Li-ion, LiFe, and LiHV) using **Balance CHG mode**, unless the battery lacks a balance wire.
- Ensure that the balance wire is connected to the charger, with the black wire aligned with the negative marking. **Check the polarity to ensure correct connection!**



Lithium Battery Connection with Balance Adapter





Battery Operations Matrix

Type	Working Mode	Description
LiPo	Balance CHG	To charge the lithium battery in balance mode to ensure each cell's voltage is balanced. The balance lead must be connected.
Li-ion	Charge	To charge the lithium battery without requiring a balance lead connection.
LiFe	Storage	To store the battery via charging or discharging its voltage to a specific storage value.
LiHV	Discharge	To discharge the lithium battery to a specific value, which can be set before discharging.
NiMH NiCd	Charge	To charge the NiMH/NiCd battery based on the selected charging rate.
	Re-Peak	To charge the battery twice in a row automatically, which is useful for ensuring the battery is fully charged.
	C_D Cycle	1 to 5 cyclic and continuous process of charge>discharge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	D_C Cycle	1 to 5 cyclic and continuous process of discharge>charge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	Discharge	To discharge the NiMH/NiCd battery based on the discharging rate selected.
Pb	Normal	To charge the Pb battery based on the charging rate selected.
	AGM Charge	To charge the AGM battery based on the charging rate selected.
	Cold Charge	To charge the Pb battery under a low temperature based on the charging rate selected.
	Discharge	To discharge the Pb battery based on the discharging rate selected.

Lithium Battery Program

(LiPo/LiFe/Li-ion/LiHV)




Scan or Click to Watch




Enter Charge Setting

Press to enter Charge Setting.



Select Battery Type


Press to call out the Battery Type menu, and select your preferred lithium battery type.



Set Battery Cells


Call out the Battery Cell menu, and select the battery cells correspondingly.






Select Task

Call out the Task menu, and select your desired working mode.




Select Condition

Call out the Condition menu, and adapt the cut-off voltage to the demand.




Select Charge current

Call out the Charge Current menu, and adapt the charge current to the demand.




Start

Confirm to initiate the program.



Back

Confirm to step back to the main interface.



Stop

To terminate the current program, press once.



Do not connect the battery before turning on the charger!

NiMH/NiCd Battery Program




Scan or Click to Watch




Enter Charge Setting

Press to enter Charge Setting.




Select Battery Type

Press to call out the Battery Type menu, and select NiMH or NiCd.




Set Battery Cells

Call out the Battery Cell menu, and select the battery cells correspondingly.




Select Task

Call out the Task menu, and select your desired working mode.




Select Condition

Call out the Condition menu, and adapt the cut-off voltage to the demand.




Select Charge current

Call out the Charge Current menu, and adapt the working current to the demand.




Start

Confirm to initiate the program.



Back

Confirm to step back to the main interface.



Stop


To terminate the current program, press  once.

For Re-Peak, you must set the rest times appropriately.

Pb Lead-Acid Battery Program




Scan or Click to Watch




Enter Charge Setting

Press to enter Charge Setting.



Select Battery Type


Press to call out the Battery Type menu, and select Pb.



Set Battery Cells


Call out the Battery Cell menu, and select the battery cells correspondingly.






Select Task

Scroll to Task, call out the menu and scroll to select the working mode.




Select Condition

There is no option to change it.




Select Charge current *

Call out the Charge Current menu, and adapt the working current to the demand.




Start

Confirm to initiate the program.



Back

Confirm to step back to the main interface.



Stop

to terminate the current program, press  once.

***There is no option to change it for Reverse Charge.**

DC Power

1. On the main interface, hold the  for seconds to enter the System Setting.
2. Select the option of DC Power, then adjust the output voltage and current.
3. Start to activate the power function after setting up.
4. Connect your desired DC device.



[Scan or Click to Watch](#)



Voltage Calibration

1. Connect the 6S battery to the B6neo 2, ensuring that you connect to the balance port.
2. On the main page (battery voltage detection page), briefly press the  to enter the cell voltage page.
3. Simultaneously press and hold the  and  to enter the calibration page.
4. Press the  to check the voltage of each cell one by one.
5. Press  to select the desired voltage, and this value will turn blue.
6. Adjust the value using the  or .
7. After calibration, press the  to enter the confirmation option.
8. Press and hold  to save the updated values.



[Scan or Click to Watch](#)

>Battery Meter		V
① 4.05	④ 4.05	
② 4.05	⑤ 4.05	
③ 4.05	⑥ 4.05	
Σ :25.2V		Δ: 8mV



>Calibration		V
Set Vref		
① 3.152	④ 3.328	
② 3.325	⑤ 3.330	
③ 3.317	⑥ 3.388	
↶ < Stop > ⏻		

Battery Voltage Meter

Cell Voltage		V
①	4.05	④ 4.05
②	4.05	⑤ 4.05
③	4.05	⑥ 4.05
Σ :25.2V		Δ: 8mV



Scan or Click to Watch

Method 1

During the charging process, you can press the  on the main screen to switch back and forth to view the battery voltage values.

LiPo6S/Balance CHG	
 22.96V 8.73A	200W
2235mAh	50Wh 00:15:08



>Battery Meter		V
①	4.05	④ 4.05
②	4.05	⑤ 4.05
③	4.05	⑥ 4.05
Σ :25.2V		Δ: 8mV

Battery Voltage Meter

Method 2

The charger can intuitively detect battery voltage. Simply connect lithium battery's balance connector directly to the charger's balance port, and the charger will automatically power on and display the battery voltage without needing to be manually switched on.



Method 3

1. After connecting the charger to the power supply, press and hold on the main screen to enter System Settings.
2. Use the to select Battery Meter, then connect the battery to the charger's balance port.
3. Press to detect the battery voltage. You can press the to switch between to view the voltage values of each cell.



Battery Resistance Meter

Batt IR		mΩ
1 13	4 10	
2 12	5 17	
3 15	6 16	
Σ :77mΩ		



[Scan or Click to Watch](#)

Method 1

During the charging process, you can press the  on the main screen to switch back and forth to view internal resistance values of each cell.

LiPo6S/Balance CHG	
	22.96V 8.73A
2235 mAh	200 W
50Wh	00:15:08



Batt IR		mΩ	
① 13	④ 10		
② 12	⑤ 17		
③ 15	⑥ 16		
Σ:77mΩ			

Battery Resistance Meter

Method 2

1. Connect the charger to the power supply, then press and hold  on the main screen to enter System Settings;
2. Use the   to select Battery Meter, and connect the battery to the charger, ensuring the balance port is connected.
3. Press  to measure the internal resistance of the battery.
4. Press the  to switch between and view the internal resistance values of each cell.



System Setting	
Task Parameters	>
Preference	>
Battery Meter	>
User Guide	>



Batt IR		mΩ
1	13	4 10
2	12	5 17
3	15	6 16
Σ		77mΩ

Firmware Upgrade

1. Launch the **Charger Master***, which will automatically detect the device.
2. If detected, click to check for firmware updates.
3. If a new version is available, the Update button will appear.
4. Click Update and wait for the process to complete.



[Scan or Click to Watch](#)



[Scan or Click to Download](#)



WARNING!

DO NOT power off or exit the program during the upgrade process!



Errors Explained

In case of a fault, the B6neo 2 will display an error message indicating issues like connection problems or battery mismatches. Refer to the table below for troubleshooting based on the error code.

Error Message	Explanation
DC In Too Low!	DC input voltage is lower than preset!
DC In Too High!	DC input voltage is higher than preset!
Connection Break!	The battery may be broken!
Cell Error!	The cells do not match!
Battery Type!	The battery type is wrong!
Overcharge Capacity Limit!	The charged capacity reaches the preset capacity limit!
Over Time Limit!	The program is timed out!
Int.Temp.Too High!	The internal temperature is high!
Over Load!	The charger is overloaded!
Reversed Polarity!	The battery connection is reversed!
Fully Charged!	The battery is already fully charged!
Outlet Volt. Too Low!	The DC output voltage is too low!
Outlet Overload!	The DC output is overloaded!
Balance Connection Error!	An error occurred with the balance connection!
Cell Volt Diff.!	The voltage difference between each cell is high!
Set Power Error!	There is an error in setting the DC power!

System Settings

On the main interface, hold  for seconds to enter System Settings.

Menu	Option	Definition
Task Parameters	Safety Timer	Customize a time period for program protection.
	Max. Capacity	Customize the capacity protection
	Trickle Charge	Enable or disable trickle charge.
	Holding Voltage	Enable or disable holding voltage. When enabled, if the battery voltage drops to a specified value, the charger will automatically charge with a small current.
	Back	The battery type is wrong!
Preference	Language	Select your preferred language.
	Min.Input Voltage	Set the minimum voltage for input protection.
	LCD Backlight	Adjust the screen brightness.
	Volume	Adjust the key and beep volume.
	Completion Signal	Choose the way you'd like to be reminded when the program completes.
	Back	Back to the previous interface.
Battery Meter	N/A	Measure the battery voltage and internal resistance. Press  to exit.
User Guide	N/A	Check the instruction manual.

System Settings

Menu	Option	Definition
Factory Settings	N/A	Restore to the factory settings.
System Info.	N/A	Check the current system information. Press  to exit.
Regulatory	N/A	Check the certification information.
Back	N/A	Back to the previous interface.

In The Box



1*SkyRC B6neo 2 Smart Charger



1*Instruction Manual

Conformity Declaration

SkyRC B8neo 2 complies with all relevant and mandatory CE directives and FCC Part 15 Subpart B.

Warranty and Service

Liability Exclusion

This charger is designed and approved exclusively for use with the types of battery stated in this Instruction Manual. SkyRC accepts no liability of any kind if the charger is used for any purpose other than that stated. We are unable to ensure that you follow the instructions supplied with the charger, and we have no control over the methods you employ for using, operating, and maintaining the device. For this reason, we are obliged to deny all liability for loss, damage, or costs that are incurred due to the incompetent or incorrect use and operation of our products, or which are connected with such operation in any way. Unless otherwise prescribed by law, our obligation to pay compensation, regardless of the legal argument employed, is limited to the invoice value of those SkyRC products which were immediately and directly involved in the event in which the damage occurred.

Warranty and Service

We guarantee this product to be free of manufacturing and assembly defects for a period of one year from the time of purchase. The warranty only applies to material or operational defects, which are present at the time of purchase. During that period, we will repair or replace free of service charge for products deemed defective due to those causes.

This warranty is not valid for any damage or subsequent damage arising as a result of misuse, modification, or as a result of failure to observe the procedures outlined in this manual.

Note:

1. The warranty service is valid in China only.
2. If you need warranty service overseas, please contact your dealer in the first instance, who is responsible for processing guarantee claims overseas. Due to high shipping costs, and complicated custom clearance procedures to send back to China, please understand that SkyRC can't provide warranty service to overseas end users directly.
3. If you have any questions which are not mentioned in the manual, please feel free to send an email to info@skysrc.com

The content is subject to change without notice;
please refer to our website for the latest version!



<https://www.skyrc.com>

If you have any questions about this document, please contact
SkyRC by sending a message to **support@skyrc.com**

SKYRC ® is a trademark of SkyRC Technology Co., Ltd.

© 2026 SkyRC Technology Co., Ltd.